



MaxiDas_Mazda_V9.00 Function List (Note:For reference only)

NOTES:

● This function is supported.

○ This function is not supported.

As for special function please refer to the special function table.

※ This function may be supported, which depends on the actual condition of the vehicle.

▲ This function is the new feature in this version.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005	4X4	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005	ABS	●	●	●	●	0x0008
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005	GEM	●	●	●	●	0x000A 0x000F
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005	IC	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005	PAM	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x00C5
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005	RCM	●	●	●	●	0x000C
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	4X4	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	ABS	●	●	●	●	0x0008
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	GEM	●	●	●	●	0x000A 0x000F
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	IC	●	●	●	●	0x0005
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	PAM	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x00C5
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005	RCM	●	●	●	●	0x000C 0x006D
626 / 626 WAGON / TELSTAR	1. 8L	FP	1997 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0082 0x0083
626 / 626 WAGON / TELSTAR	1. 8L	FP	1999	ABS	●	●	●	●	○
626 / 626 WAGON / TELSTAR	1. 8L	FP	2000	ABS/TCS	●	●	●	●	○
626 / 626 WAGON / TELSTAR	2. 0L	FS	1997 - 1999	ABS	●	●	●	●	○
626 / 626 WAGON / TELSTAR	2. 0L	FS	1997 - 2001	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0082 0x0082 0x0083
626 / 626 WAGON / TELSTAR	2. 0L	FS	1998 - 2001	ABS/TCS	●	●	●	●	○
626 / 626 WAGON / TELSTAR	2. 0L	RF-T	1997 - 2000	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
626 / 626 WAGON / TELSTAR	2. 0L	RF-T	1999 - 2000	ABS	●	●	●	●	○
626 / 626 WAGON / TELSTAR	2. 5L	KL	1997 - 2001	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
626 / 626 WAGON / TELSTAR	2. 5L	KL	1998 - 2001	ABS/TCS	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	ABS	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	BCM/GEM	●	●	●	●	0x0120
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	EATC	●	●	●	●	0x0020
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	EPS	●	●	●	●	0x000D
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	IC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	ICCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	LCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	MPM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	RCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	RKE	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	RVM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 0L	LF	2007	TCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	4X4	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	ABS	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	BCM/GEM	●	●	●	●	0x0120
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	EATC	●	●	●	●	0x0020
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	EPS	●	●	●	●	0x000D
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	IC	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	ICCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	LCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	MPM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	RCM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	RKE	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	RVM	●	●	●	●	○
ATENZA (JPN) / MAZDA6 (General)	2. 5L	L5	2007	TCM	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	0ther	4X4	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	0ther	ABS	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	0ther	ACU	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	0ther	AFS	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	0ther	BCM/GEM	●	●	●	●	0x0120
ATENZA / MAZDA6	1. 8L	L8	0ther	BSML	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	0ther	BSMR	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	0ther	EATC	●	●	●	●	0x0020
ATENZA / MAZDA6	1. 8L	L8	0ther	EPS	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	0ther	FFH	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	0ther	IC	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	0ther	ICCM	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	0ther	LCM	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	0ther	MPM	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	0ther	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
ATENZA / MAZDA6	1. 8L	L8	0ther	RCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
ATENZA / MAZDA6	1. 8L	L8	0ther	RKE	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	0ther	RVM	●	●	●	●	○
ATENZA / MAZDA6	1. 8L	L8	0ther	TCM	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	0ther	4X4	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	0ther	ABS	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	0ther	ACU	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	0ther	AFS	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	0ther	BCM/GEM	●	●	●	●	0x0120
ATENZA / MAZDA6	2. 0L	LF	0ther	BSML	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	0ther	BSMR	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	0ther	EATC	●	●	●	●	0x0020
ATENZA / MAZDA6	2. 0L	LF	0ther	EPS	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	0ther	FFH	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	0ther	IC	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	0ther	ICCM	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	0ther	LCM	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	0ther	MPM	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	0ther	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
ATENZA / MAZDA6	2. 0L	LF	0ther	RCM	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	0ther	RKE	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	0ther	RVM	●	●	●	●	○
ATENZA / MAZDA6	2. 0L	LF	0ther	TCM	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	0ther	4X4	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	0ther	ABS	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	0ther	ACU	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	0ther	AFS	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	0ther	BCM/GEM	●	●	●	●	0x0120
ATENZA / MAZDA6	2. 2L	R2_T	0ther	BSML	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	0ther	BSMR	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	0ther	EATC	●	●	●	●	0x0020
ATENZA / MAZDA6	2. 2L	R2_T	0ther	EPS	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	0ther	FFH	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	0ther	IC	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	0ther	ICCM	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	0ther	LCM	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	0ther	MPM	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	0ther	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
ATENZA / MAZDA6	2. 2L	R2_T	0ther	RCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
ATENZA / MAZDA6	2. 2L	R2_T	0ther	RKE	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	0ther	RVM	●	●	●	●	○
ATENZA / MAZDA6	2. 2L	R2_T	0ther	TCM	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	0ther	4X4	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	0ther	ABS	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	0ther	ACU	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	0ther	AFS	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	0ther	BCM/GEM	●	●	●	●	0x0120
ATENZA / MAZDA6	2. 5L	L5	0ther	BSML	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	0ther	BSMR	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	0ther	EATC	●	●	●	●	0x0020
ATENZA / MAZDA6	2. 5L	L5	0ther	EPS	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	0ther	FFH	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	0ther	IC	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	0ther	ICCM	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	0ther	LCM	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	0ther	MPM	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	0ther	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
ATENZA / MAZDA6	2. 5L	L5	0ther	RCM	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	0ther	RKE	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	0ther	RVM	●	●	●	●	○
ATENZA / MAZDA6	2. 5L	L5	0ther	TCM	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	0ther	4X4	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	0ther	ABS	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	0ther	ACU	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	0ther	AFS	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	0ther	BCM/GEM	●	●	●	●	0x0120
ATENZA / MAZDA6	3. 7L	CA	0ther	BSML	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	0ther	BSMR	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	0ther	EATC	●	●	●	●	0x0020
ATENZA / MAZDA6	3. 7L	CA	0ther	EPS	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	0ther	FFH	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	0ther	IC	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	0ther	ICCM	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	0ther	LCM	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	0ther	MPM	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	0ther	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
ATENZA / MAZDA6	3. 7L	CA	0ther	RCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
ATENZA / MAZDA6	3. 7L	CA	0ther	RKE	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	0ther	RVM	●	●	●	●	○
ATENZA / MAZDA6	3. 7L	CA	0ther	TCM	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 0L	LF	2002 - 2005	ABS/TCS	●	●	●	●	0x001E 0x0008
ATENZA (JPN) /MAZDA6 (General)	2. 0L	LF	2002 - 2005	IC	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 0L	LF	2002 - 2005	LHID	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 0L	LF	2002 - 2005	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x00C5 0x00C6 0x0201
ATENZA (JPN) /MAZDA6 (General)	2. 0L	LF	2002 - 2005	RCM	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 0L	LF	2002 - 2005	RHID	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 0L	LF	2005	GEM	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 0L	LF	2005	LCM	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 0L	LF	2005	RKE	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 0L	LF	2005	TCM	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3	2002 - 2005	4X4	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3	2002 - 2005	ABS/TCS	●	●	●	●	0x0008
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3	2002 - 2005	IC	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3	2002 - 2005	LHID	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3	2002 - 2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3	2002 - 2005	RCM	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3	2002 - 2005	RHID	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3	2002 - 2005	TCM	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3	2005	GEM	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3	2005	LCM	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3	2005	RKE	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3_T	2005	4X4	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3_T	2005	ABS/TCS	●	●	●	●	0x0008
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3_T	2005	GEM	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3_T	2005	IC	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3_T	2005	LCM	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3_T	2005	LHID	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3_T	2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3_T	2005	RCM	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3_T	2005	RHID	●	●	●	●	○
ATENZA (JPN) /MAZDA6 (General)	2. 3L	L3_T	2005	RKE	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	0ther	4X4	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	0ther	ABS	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	0ther	ACU	●	●	●	●	0x0017
AXELA / MAZDA3	1. 5L	ZY	0ther	AFS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
AXELA / MAZDA3	1. 5L	ZY	0ther	BCM/GEM	●	●	●	○	0x0120
AXELA / MAZDA3	1. 5L	ZY	0ther	BSML	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	0ther	BSMR	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	0ther	EATC	●	●	●	●	0x0020
AXELA / MAZDA3	1. 5L	ZY	0ther	EPS	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	0ther	IC	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	0ther	LCM	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	0ther	MID#1	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	0ther	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
AXELA / MAZDA3	1. 5L	ZY	0ther	RCM	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	0ther	RKE	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	0ther	RVM	●	●	●	●	○
AXELA / MAZDA3	1. 5L	ZY	0ther	TCM	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	0ther	4X4	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	0ther	ABS	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	0ther	ACU	●	●	●	●	0x0017
AXELA / MAZDA3	1. 6L	Y6	0ther	AFS	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	0ther	BCM/GEM	●	●	●	○	0x0120
AXELA / MAZDA3	1. 6L	Y6	0ther	BSML	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	0ther	BSMR	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	0ther	EATC	●	●	●	●	0x0020
AXELA / MAZDA3	1. 6L	Y6	0ther	EPS	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	0ther	FACM	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	0ther	IC	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	0ther	LCM	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	0ther	MID#1	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	0ther	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
AXELA / MAZDA3	1. 6L	Y6	0ther	RCM	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	0ther	RKE	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	0ther	RVM	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Y6	0ther	TCM	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	0ther	4X4	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	0ther	ABS	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	0ther	ACU	●	●	●	●	0x0017
AXELA / MAZDA3	1. 6L	Z6	0ther	AFS	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	0ther	BCM/GEM	●	●	●	○	0x0120
AXELA / MAZDA3	1. 6L	Z6	0ther	BSML	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	0ther	BSMR	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	0ther	EATC	●	●	●	●	0x0020

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
AXELA / MAZDA3	1. 6L	Z6	0ther	EPS	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	0ther	IC	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	0ther	LCM	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	0ther	MID#1	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	0ther	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
AXELA / MAZDA3	1. 6L	Z6	0ther	RCM	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	0ther	RKE	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	0ther	RVM	●	●	●	●	○
AXELA / MAZDA3	1. 6L	Z6	0ther	TCM	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	0ther	4X4	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	0ther	ABS	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	0ther	ACU	●	●	●	●	0x0017
AXELA / MAZDA3	2. 0L	LF	0ther	AFS	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	0ther	BCM/GEM	●	●	●	○	0x0120
AXELA / MAZDA3	2. 0L	LF	0ther	BSML	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	0ther	BSMR	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	0ther	EATC	●	●	●	●	0x0020
AXELA / MAZDA3	2. 0L	LF	0ther	EPS	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	0ther	IC	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	0ther	LCM	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	0ther	MID#1	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	0ther	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
AXELA / MAZDA3	2. 0L	LF	0ther	RCM	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	0ther	RKE	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	0ther	RVM	●	●	●	●	○
AXELA / MAZDA3	2. 0L	LF	0ther	TCM	●	●	●	●	○
AXELA / MAZDA3	2. 0L	PE	0ther	ABS	●	●	●	●	○
AXELA / MAZDA3	2. 0L	PE	0ther	ACU	●	●	●	●	○
AXELA / MAZDA3	2. 0L	PE	0ther	AFS	●	●	●	●	○
AXELA / MAZDA3	2. 0L	PE	0ther	BCM/GEM	●	●	●	○	○
AXELA / MAZDA3	2. 0L	PE	0ther	BSML	●	●	●	●	○
AXELA / MAZDA3	2. 0L	PE	0ther	BSMR	●	●	●	●	○
AXELA / MAZDA3	2. 0L	PE	0ther	EATC	●	●	●	●	○
AXELA / MAZDA3	2. 0L	PE	0ther	EPS	●	●	●	●	○
AXELA / MAZDA3	2. 0L	PE	0ther	IC	●	●	●	●	○
AXELA / MAZDA3	2. 0L	PE	0ther	LCM	●	●	●	●	○
AXELA / MAZDA3	2. 0L	PE	0ther	MID#1	●	●	●	●	○
AXELA / MAZDA3	2. 0L	PE	0ther	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
AXELA / MAZDA3	2. 0L	PE	0ther	RCM	●	●	●	●	○
AXELA / MAZDA3	2. 0L	PE	0ther	RKE	●	●	●	●	○
AXELA / MAZDA3	2. 0L	PE	0ther	RVM	●	●	●	●	○
AXELA / MAZDA3	2. 2L	R2_ T	0ther	4X4	●	●	●	●	○
AXELA / MAZDA3	2. 2L	R2_ T	0ther	ABS	●	●	●	●	○
AXELA / MAZDA3	2. 2L	R2_ T	0ther	ACU	●	●	●	●	0x0017
AXELA / MAZDA3	2. 2L	R2_ T	0ther	AFS	●	●	●	●	○
AXELA / MAZDA3	2. 2L	R2_ T	0ther	BCM/GEM	●	●	●	○	0x0120
AXELA / MAZDA3	2. 2L	R2_ T	0ther	BSML	●	●	●	●	○
AXELA / MAZDA3	2. 2L	R2_ T	0ther	BSMR	●	●	●	●	○
AXELA / MAZDA3	2. 2L	R2_ T	0ther	EATC	●	●	●	●	0x0020
AXELA / MAZDA3	2. 2L	R2_ T	0ther	EPS	●	●	●	●	○
AXELA / MAZDA3	2. 2L	R2_ T	0ther	FFH	●	●	●	●	○
AXELA / MAZDA3	2. 2L	R2_ T	0ther	IC	●	●	●	●	○
AXELA / MAZDA3	2. 2L	R2_ T	0ther	LCM	●	●	●	●	○
AXELA / MAZDA3	2. 2L	R2_ T	0ther	MID#1	●	●	●	●	○
AXELA / MAZDA3	2. 2L	R2_ T	0ther	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
AXELA / MAZDA3	2. 2L	R2_ T	0ther	RCM	●	●	●	●	○
AXELA / MAZDA3	2. 2L	R2_ T	0ther	RKE	●	●	●	●	○
AXELA / MAZDA3	2. 2L	R2_ T	0ther	RVM	●	●	●	●	○
AXELA / MAZDA3	2. 2L	R2_ T	0ther	TCM	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_ T	0ther	4X4	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_ T	0ther	ABS	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_ T	0ther	ACU	●	●	●	●	0x0017
AXELA / MAZDA3	2. 3L	L3_ T	0ther	AFS	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_ T	0ther	BCM/GEM	●	●	●	○	0x0120
AXELA / MAZDA3	2. 3L	L3_ T	0ther	BSML	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_ T	0ther	BSMR	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_ T	0ther	EATC	●	●	●	●	0x0020
AXELA / MAZDA3	2. 3L	L3_ T	0ther	EPS	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_ T	0ther	IC	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_ T	0ther	LCM	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_ T	0ther	MID#1	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_ T	0ther	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
AXELA / MAZDA3	2. 3L	L3_ T	0ther	RCM	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_ T	0ther	RKE	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_ T	0ther	RVM	●	●	●	●	○
AXELA / MAZDA3	2. 3L	L3_ T	0ther	TCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
AXELA / MAZDA3	2. 5L	L5	0ther	4X4	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	0ther	ABS	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	0ther	ACU	●	●	●	●	0x0017
AXELA / MAZDA3	2. 5L	L5	0ther	AFS	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	0ther	BCM/GEM	●	●	●	○	0x0120
AXELA / MAZDA3	2. 5L	L5	0ther	BSML	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	0ther	BSMR	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	0ther	EATC	●	●	●	●	0x0020
AXELA / MAZDA3	2. 5L	L5	0ther	EPS	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	0ther	IC	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	0ther	LCM	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	0ther	MID#1	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	0ther	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
AXELA / MAZDA3	2. 5L	L5	0ther	RCM	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	0ther	RKE	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	0ther	RVM	●	●	●	●	○
AXELA / MAZDA3	2. 5L	L5	0ther	TCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	ABS	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	EATC	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	EPS	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	GEM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	IC	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2003 - 2006	RCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	1. 5L	ZY	2006	RKE	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2003 - 2006	ABS	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2003 - 2006	EATC	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2003 - 2006	EPS	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2003 - 2006	GEM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2003 - 2006	IC	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2003 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2003 - 2006	RCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2006	4X4	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2006	RKE	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 0L	LF	2006	TCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3	2003 - 2006	ABS	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3	2003 - 2006	EATC	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3	2003 - 2006	EPS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3	2003 - 2006	GEM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3	2003 - 2006	IC	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3	2003 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3	2003 - 2006	RCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3	2006	RKE	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3	2006	TCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	ABS	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	EATC	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	GEM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	IC	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	RCM	●	●	●	●	○
AXELA / MAZDA3 (Japan / General Specs.)	2. 3L	L3_T	2006	RKE	●	●	●	●	○
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	F6A-T	1998 - Other	ABS	●	●	●	●	○
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	F6A-T	1998 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	F6A-T	1998 - Other	RCM	●	●	●	●	○
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A	1998 - 2005	ABS	●	●	●	●	○
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A	1998 - 2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A	1998 - 2005	RCM	●	●	●	●	○
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A_T	1998	TCM	●	●	●	●	○
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A_T	1998 - Other	ABS	●	●	●	●	○
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A_T	1998 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
AZ WAGON(MD/MJ)/SPIANO (HF)	660cc	K6A_T	1998 - Other	RCM	●	●	●	●	○
AZ-OFFROAD	660cc	K6A_T	1999 - 2004	TCM	●	●	●	●	○
AZ-OFFROAD	660cc	K6A_T	1999 - 2008	ABS	●	●	●	●	○
AZ-OFFROAD	660cc	K6A_T	1999 - 2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
AZ-OFFROAD	660cc	K6A_T	1999 - 2008	RCM	●	●	●	●	○
AZ-WAGON (MJ)	660cc	K6A	2003 - 2006	ABS	●	●	●	●	○
AZ-WAGON (MJ)	660cc	K6A	2003 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
AZ-WAGON (MJ)	660cc	K6A	2003 - 2006	RCM	●	●	●	●	○
AZ-WAGON (MJ)	660cc	K6A_T	2003 - 2005	ABS	●	●	●	●	○
AZ-WAGON (MJ)	660cc	K6A_T	2003 - 2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
AZ-WAGON (MJ)	660cc	K6A_T	2003 - 2005	RCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A	Other	ABS	●	●	●	○	○
AZ-WAGON / CAROL	660cc	K6A	Other	BCM#1	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A	Other	EATC	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A	Other	EPS	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
AZ-WAGON / CAROL	660cc	K6A	0ther	RCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A	0ther	TCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A S	0ther	ABS	●	●	●	○	○
AZ-WAGON / CAROL	660cc	K6A S	0ther	BCM#1	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A S	0ther	EATC	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A S	0ther	EPS	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A S	0ther	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
AZ-WAGON / CAROL	660cc	K6A S	0ther	RCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A S	0ther	TCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A_T	0ther	ABS	●	●	●	○	○
AZ-WAGON / CAROL	660cc	K6A_T	0ther	BCM#1	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A_T	0ther	EATC	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A_T	0ther	EPS	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A_T	0ther	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
AZ-WAGON / CAROL	660cc	K6A_T	0ther	RCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	K6A_T	0ther	TCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	R06A (A STOP)	0ther	ABS	●	●	●	○	○
AZ-WAGON / CAROL	660cc	R06A (A STOP)	0ther	BCM#1	●	●	●	●	○
AZ-WAGON / CAROL	660cc	R06A (A STOP)	0ther	EATC	●	●	●	●	○
AZ-WAGON / CAROL	660cc	R06A (A STOP)	0ther	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
AZ-WAGON / CAROL	660cc	R06A (A STOP)	0ther	RCM	●	●	●	●	○
AZ-WAGON / CAROL	660cc	R06A T (A STOP)	0ther	ABS	●	●	●	○	○
AZ-WAGON / CAROL	660cc	R06A T (A STOP)	0ther	BCM#1	●	●	●	●	○
AZ-WAGON / CAROL	660cc	R06A T (A STOP)	0ther	EATC	●	●	●	●	○
AZ-WAGON / CAROL	660cc	R06A T (A STOP)	0ther	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
AZ-WAGON / CAROL	660cc	R06A T (A STOP)	0ther	RCM	●	●	●	●	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 2L	F2	1996 - 0ther	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL	2001	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL	2001 - 2002	ABS	●	●	●	●	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL_T	2001 - 2005	ABS	●	●	●	●	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL_T	2001 - 2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 6L	G6	1996 - 1999	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 6L	G6	1999	ABS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 9L	W9	2002	ABS	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	F8	1999	ABS	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	F8	1999 – 2002	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	F8	2002	ABS/TCS	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	F8	2002	TCM	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	L8	2010	ABS	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	L8	2010	IC	●	●	●	○	○
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	L8	2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
BONGO / BONGO BRAWNY / SPECTRON	1. 8L	L8	2010	TCM	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	2. 0L	RF-T	2003 – 2007	ABS/TCS	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	2. 0L	RF-T	2003 – 2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0055 0x005C
BONGO / BONGO BRAWNY / SPECTRON	2. 0L	RF-T	2003 – 2007	TCM	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	2. 2L	R2	1999	ABS	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	2. 2L	R2	1999	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	1. 8L	F8	1999	ABS	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	1. 8L	F8	1999	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 0L	FE	1997 – 1999	ABS	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 0L	FE	1997 – 2002	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 0L	FE	2002	ABS/TCS	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 0L	FE	2002	TCM	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 2L	R2	1999	ABS	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 2L	R2	1999	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 5L	WL	1999	ABS	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 5L	WL	1999	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
BT-50 / Ranger	2. 2L	F2	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	2. 2L	F2	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
BT-50 / Ranger	2. 2L	F2	2007	RCM	●	●	●	●	○
BT-50 / Ranger	2. 5L	L5	2012	ABS	●	●	●	●	○
BT-50 / Ranger	2. 5L	L5	2012	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083
BT-50 / Ranger	2. 5L	WL	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	2. 5L	WL	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
BT-50 / Ranger	2. 5L	WL	2007	RCM	●	●	●	●	○
BT-50 / Ranger	2. 5L	WL-CD	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	2. 5L	WL-CD	2007	PCM	●	●	●	●	0x0055 0x0080 0x0081 0x0082 0x0083
BT-50 / Ranger	2. 5L	WL-CD	2007	RCM	●	●	●	●	○
BT-50 / Ranger	2. 5L	WL-CD	2007	TCM	●	●	●	●	○
BT-50 / Ranger	2. 6L	G6	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	2. 6L	G6	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
BT-50 / Ranger	2. 6L	G6	2007	RCM	●	●	●	●	○
BT-50 / Ranger	3. 0L	WE-CD	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	3. 0L	WE-CD	2007	PCM	●	●	●	●	0x0055 0x0080 0x0081 0x0082 0x0083
BT-50 / Ranger	3. 0L	WE-CD	2007	RCM	●	●	●	●	○
BT-50 / Ranger	3. 0L	WE-CD	2007	TCM	●	●	●	●	○
BT-50 / Ranger	4. 0L	V6 SOHC	2007	ABS/TCS	●	●	●	●	0x0008
BT-50 / Ranger	4. 0L	V6 SOHC	2007	ESOF	●	●	●	●	○
BT-50 / Ranger	4. 0L	V6 SOHC	2007	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083
BT-50 / Ranger	4. 0L	V6 SOHC	2007	RCM	●	●	●	●	○
Biante(Japan)	2. 0L	LF	2008	4X4	●	●	●	●	○
Biante(Japan)	2. 0L	LF	2008	ABS	●	●	●	●	○
Biante(Japan)	2. 0L	LF	2008	EATC	●	●	●	●	0x0020
Biante(Japan)	2. 0L	LF	2008	EPS	●	●	●	●	○
Biante(Japan)	2. 0L	LF	2008	GEM	●	●	●	●	○
Biante(Japan)	2. 0L	LF	2008	IC	●	●	●	●	○
Biante(Japan)	2. 0L	LF	2008	LPSDM	●	●	●	●	0x0022
Biante(Japan)	2. 0L	LF	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Biante(Japan)	2. 0L	LF	2008	RCM	●	●	●	●	○
Biante(Japan)	2. 0L	LF	2008	RKE	●	●	●	●	○
Biante(Japan)	2. 0L	LF	2008	RPSDM	●	●	●	●	○
Biante(Japan)	2. 0L	LF	2008	TCM	●	●	●	○	○
Biante(Japan)	2. 0L	PE	2012	ABS	●	●	●	●	○
Biante(Japan)	2. 0L	PE	2012	EATC	●	●	●	●	○
Biante(Japan)	2. 0L	PE	2012	EPS	●	●	●	●	○
Biante(Japan)	2. 0L	PE	2012	GEM	●	●	●	●	○
Biante(Japan)	2. 0L	PE	2012	LPSDM	●	●	●	●	○
Biante(Japan)	2. 0L	PE	2012	RCM	●	●	●	●	○
Biante(Japan)	2. 0L	PE	2012	RKE	●	●	●	●	○
Biante(Japan)	2. 0L	PE	2012	RPSDM	●	●	●	●	○
Biante(Japan)	2. 3L	L3	2008	ABS	●	●	●	●	○
Biante(Japan)	2. 3L	L3	2008	EATC	●	●	●	●	0x0020
Biante(Japan)	2. 3L	L3	2008	EPS	●	●	●	●	○
Biante(Japan)	2. 3L	L3	2008	GEM	●	●	●	●	○
Biante(Japan)	2. 3L	L3	2008	IC	●	●	●	●	○
Biante(Japan)	2. 3L	L3	2008	LPSDM	●	●	●	●	0x0022
Biante(Japan)	2. 3L	L3	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Biante(Japan)	2. 3L	L3	2008	RCM	●	●	●	●	○
Biante(Japan)	2. 3L	L3	2008	RKE	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Biante(Japan)	2. 3L	L3	2008	RPSDM	●	●	●	●	○
Biante(Japan)	2. 3L	L3	2008	TCM	●	●	●	○	○
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	1. 8L	FP	1997 - 1999	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	1. 8L	FP	1999	ABS	●	●	●	●	○
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2. 0L	FS	1997 - 1999	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2. 0L	FS	1999	ABS	●	●	●	●	○
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2. 0L	RF	1997	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2. 5L	KL	1999	ABS	●	●	●	●	○
CAROL	660cc	F6A	1998 - Other	ABS	●	●	●	●	○
CAROL	660cc	F6A	1998 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
CAROL	660cc	F6A	1998 - Other	RCM	●	●	●	●	○
CAROL	660cc	K6A	1998 - Other	ABS	●	●	●	●	○
CAROL	660cc	K6A	1998 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
CAROL	660cc	K6A	1998 - Other	RCM	●	●	●	●	○
CAROL	660cc	K6A	1998 - Other	TCM	●	●	●	●	○
CAROL (2003 / 9 -)	660cc	K6A	2003 - 2004	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
CAROL (2003 / 9 -)	660cc	K6A	2003 - Other	ABS	●	●	●	●	○
CAROL (2003 / 9 -)	660cc	K6A	2003 - Other	RCM	●	●	●	●	○
CAROL (HB24S)	660cc	K6A	2004 - 2005	ABS	●	●	●	●	○
CAROL (HB24S)	660cc	K6A	2004 - 2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
CAROL (HB24S)	660cc	K6A	2004 - 2005	RCM	●	●	●	●	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	K6A	Other	ABS	●	●	●	○	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	K6A	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	K6A	Other	RCM	●	●	●	●	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A	Other	ABS	●	●	●	○	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A	Other	EPS	●	●	●	●	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A	Other	RCM	●	●	●	●	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A (A STOP)	Other	ABS	●	●	●	○	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A (A STOP)	Other	BCM#1	●	●	●	●	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A (A STOP)	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A (A STOP)	Other	RCM	●	●	●	●	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A T (A STOP)	Other	ABS	●	●	●	○	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A T (A STOP)	Other	BCM#1	●	●	●	●	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A T (A STOP)	Other	EATC	●	●	●	●	○
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A T (A STOP)	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
CAROL/FLAIR_WAGON/SCRUM/FLAIR	660cc	R06A T (A STOP)	Other	RCM	●	●	●	●	○
CX-5	2. 0L	PE	Other	BSML	●	●	●	●	○
CX-5	2. 0L	PE	Other	BSMR	●	●	●	○	○
CX-5	2. 0L	PE	Other	RVM	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
CX-5	2. 2L	SH	0ther	BSML	●	●	●	●	○
CX-5	2. 2L	SH	0ther	BSMR	●	●	●	○	○
CX-5	2. 2L	SH	0ther	RVM	●	●	●	○	○
CX-5	2. 5L	PY	0ther	BSML	●	●	●	●	○
CX-5	2. 5L	PY	0ther	BSMR	●	●	●	○	○
CX-5	2. 5L	PY	0ther	RVM	●	●	●	○	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	4X4	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	ABS	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	ACU	●	●	●	●	0x0017 0x003E
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	AM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	EATC	●	●	●	●	0x0020
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	EPS	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	FFH	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	GEM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	IC	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	LCM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	MID#1	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	PCM	●	●	●	●	0x0055 0x005C 0x0080 0x0081 0x0082 0x0083 0x0201
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	RCM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	RKE	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	RVM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 2L	R2_T	2009	SCR CU	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	4X4	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	ABS	●	●	●	●	0x0008
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	AM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	EATC	●	●	●	●	0x0020
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	GEM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	IC	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	LCM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	RCM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	RKE	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2006 - 2009	TCM	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	ACU	●	●	●	●	0x0017 0x003E
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	MID#1	●	●	●	●	○
CX-7 (Europe / General Specs.)	2. 3L	L3_T	2009	RVM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	4X4	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	ABS	●	●	●	●	0x0008

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	AM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	EATC	●	●	●	●	0x0020
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	GEM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	IC	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	ICCM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	LCM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	RCM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	RKE	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2006 - 2009	TCM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2009	ACU	●	●	●	●	0x0017 0x003E
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2009	MID#1	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 3L	L3_T	2009	RVM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	4X4	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	ABS	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	ACU	●	●	●	●	0x0017 0x003E
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	AM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	EATC	●	●	●	●	0x0020
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	GEM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	IC	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	ICCM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	LCM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	MID#1	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	RCM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	RKE	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	RVM	●	●	●	●	○
CX-7 (Japan / General Specs.)	2. 5L	L5	2009	TCM	●	●	●	●	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 - 2010	4X4	●	●	●	●	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 - 2010	ABS	●	●	●	●	0x0008
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 - 2010	AM	●	●	●	●	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 - 2010	EATC	●	●	●	●	0x0020
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 - 2010	GEM	●	●	●	●	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 - 2010	IC	●	●	●	●	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 - 2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 - 2010	RCM	●	●	●	●	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 - 2010	RKE	●	●	●	●	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2007 - 2010	TCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	ACU	●	●	●	●	0x0017 0x003E
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	BSML	●	●	●	●	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	BSMR	●	●	●	●	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	LCM	●	●	●	●	○
CX-7 (North America / General Specs.)	2. 3L	L3_T	2010	MID#1	●	●	●	●	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	4X4	●	●	●	●	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	ABS	●	●	●	●	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	ACU	●	●	●	●	0x0017 0x003E
CX-7 (North America / General Specs.)	2. 5L	L5	2010	AM	●	●	●	●	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	BSML	●	●	●	●	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	BSMR	●	●	●	●	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	EATC	●	●	●	●	0x0020
CX-7 (North America / General Specs.)	2. 5L	L5	2010	GEM	●	●	●	●	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	IC	●	●	●	●	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	LCM	●	●	●	●	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	MID#1	●	●	●	●	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
CX-7 (North America / General Specs.)	2. 5L	L5	2010	RCM	●	●	●	●	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	RKE	●	●	●	●	○
CX-7 (North America / General Specs.)	2. 5L	L5	2010	TCM	●	●	●	●	○
CX-9 (North America / General Specs.)	3. 5L	CY	2007 - Other	4X4	●	●	●	●	○
CX-9 (North America / General Specs.)	3. 5L	CY	2007 - Other	ABS	●	●	●	●	0x0008
CX-9 (North America / General Specs.)	3. 5L	CY	2007 - Other	AM	●	●	●	●	0x0005
CX-9 (North America / General Specs.)	3. 5L	CY	2007 - Other	GEM	●	●	●	●	○
CX-9 (North America / General Specs.)	3. 5L	CY	2007 - Other	IC	●	●	●	●	0x0005 0x001A
CX-9 (North America / General Specs.)	3. 5L	CY	2007 - Other	LCM	●	●	○	○	○
CX-9 (North America / General Specs.)	3. 5L	CY	2007 - Other	LTM	●	●	●	●	○
CX-9 (North America / General Specs.)	3. 5L	CY	2007 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
CX-9 (North America / General Specs.)	3. 5L	CY	2007 - Other	RCM	●	●	●	●	0x0005
CX-9 (North America / General Specs.)	3. 5L	CY	2007 - Other	RKE	●	●	●	●	0x0005
CX-9 (North America / General Specs.)	3. 5L	CY	2007 - Other	TCM	●	●	●	●	○
CX-9 (North America / General Specs.)	3. 7L	CA	2008 - 2011	4X4	●	●	●	●	○
CX-9 (North America / General Specs.)	3. 7L	CA	2008 - 2011	ABS	●	●	●	●	0x0008
CX-9 (North America / General Specs.)	3. 7L	CA	2008 - 2011	AM	●	●	●	●	○
CX-9 (North America / General Specs.)	3. 7L	CA	2008 - 2011	BSML	●	●	●	●	○
CX-9 (North America / General Specs.)	3. 7L	CA	2008 - 2011	BSMR	●	●	●	●	○
CX-9 (North America / General Specs.)	3. 7L	CA	2008 - 2011	GEM	●	●	●	●	○
CX-9 (North America / General Specs.)	3. 7L	CA	2008 - 2011	IC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
CX-9 (North America / General Specs.)	3. 7L	CA	2008 - 2011	LCM	●	●	○	○	○
CX-9 (North America / General Specs.)	3. 7L	CA	2008 - 2011	LTM	●	●	●	●	○
CX-9 (North America / General Specs.)	3. 7L	CA	2008 - 2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
CX-9 (North America / General Specs.)	3. 7L	CA	2008 - 2011	RCM	●	●	●	●	○
CX-9 (North America / General Specs.)	3. 7L	CA	2008 - 2011	RKE	●	●	●	●	○
CX-9 (North America / General Specs.)	3. 7L	CA	2008 - 2011	TCM	●	●	●	●	○
CX-9 (North America / General Specs.)	3. 7L	CA	2010 - 2011	ACU	●	●	●	●	0x0017
CX-9 (North America / General Specs.)	3. 7L	CA	2010 - 2011	DSM	●	●	●	●	○
CX-9 (North America / General Specs.)	3. 7L	CA	2011	VSM	●	●	●	○	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	4X4	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	ABS	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	BCM/GEM	●	●	●	●	0x0120
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	EPS	●	●	●	●	0x005B
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	IC	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	RCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	RKE	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 3L	ZJ	2007	TCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	ABS	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	BCM/GEM	●	●	●	●	0x0120
DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	EPS	●	●	●	●	0x005B
DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	IC	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	RCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	RKE	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (General)	1. 5L	ZY	2007	TCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 3L	P3	0ther	4X4	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 3L	P3	0ther	ABS	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 3L	P3	0ther	BCM/GEM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 3L	P3	0ther	EATC	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 3L	P3	0ther	EPS	●	●	●	●	0x005B
DEMIO (JPN) / MAZDA2 (OTHER)	1. 3L	P3	0ther	IC	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 3L	P3	0ther	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
DEMIO (JPN) / MAZDA2 (OTHER)	1. 3L	P3	0ther	RCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 3L	P3	0ther	RKE	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 3L	P3	0ther	TCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 3L	P3	0ther	VSM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 3L	ZJ	0ther	4X4	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
DEMIO (JPN) / MAZDA2 (OTHER)	1. 3L	ZJ	Other	ABS	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 3L	ZJ	Other	BCM/GEM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 3L	ZJ	Other	EATC	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 3L	ZJ	Other	EPS	●	●	●	●	0x005B
DEMIO (JPN) / MAZDA2 (OTHER)	1. 3L	ZJ	Other	IC	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 3L	ZJ	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
DEMIO (JPN) / MAZDA2 (OTHER)	1. 3L	ZJ	Other	RCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 3L	ZJ	Other	RKE	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 3L	ZJ	Other	TCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 3L	ZJ	Other	VSM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 5L	ZY	Other	4X4	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 5L	ZY	Other	ABS	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 5L	ZY	Other	BCM/GEM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 5L	ZY	Other	EATC	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 5L	ZY	Other	EPS	●	●	●	●	0x005B
DEMIO (JPN) / MAZDA2 (OTHER)	1. 5L	ZY	Other	IC	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 5L	ZY	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
DEMIO (JPN) / MAZDA2 (OTHER)	1. 5L	ZY	Other	RCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 5L	ZY	Other	RKE	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 5L	ZY	Other	TCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 5L	ZY	Other	VSM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 6L	Y6	Other	4X4	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 6L	Y6	Other	ABS	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 6L	Y6	Other	BCM/GEM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 6L	Y6	Other	EATC	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 6L	Y6	Other	EPS	●	●	●	●	0x005B
DEMIO (JPN) / MAZDA2 (OTHER)	1. 6L	Y6	Other	IC	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 6L	Y6	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
DEMIO (JPN) / MAZDA2 (OTHER)	1. 6L	Y6	Other	RCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 6L	Y6	Other	RKE	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 6L	Y6	Other	TCM	●	●	●	●	○
DEMIO (JPN) / MAZDA2 (OTHER)	1. 6L	Y6	Other	VSM	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 3L	ZJ	2002 - 2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	2002 - Other	4X4	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	2002 - Other	ABS/TCS	●	●	●	●	0x001E
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	2002 - Other	IC	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	2002 - Other	RCM	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	2002 - Other	RKE	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	2005	EPS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 3L	ZJ	2005	LCM	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2 (General)	1. 5L	ZY	2002 - 2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2002 - Other	4X4	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2002 - Other	ABS/TCS	●	●	●	●	0x001E
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2002 - Other	IC	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2002 - Other	RCM	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2002 - Other	RKE	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2005	EPS	●	●	●	●	○
DEMIO (JPN) / VERISA (JPN) / MAZDA2	1. 5L	ZY	2005	LCM	●	●	●	●	○
DEMIO / 121 DEMIO / 121	1. 3L	B3	1996 - 2000	ABS	●	●	●	●	○
DEMIO / 121 DEMIO / 121	1. 3L	B3	1996 - 2000	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
DEMIO / 121 DEMIO / 121	1. 3L	B3	2000	ABS/TCS	●	●	●	●	○
DEMIO / 121 DEMIO / 121	1. 5L	B5	1996 - 2000	ABS	●	●	●	●	○
DEMIO / 121 DEMIO / 121	1. 5L	B5	2000	ABS/TCS	●	●	●	●	○
DEMIO / 121 DEMIO / 121	1. 5L	B5	2000	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
DEMIO / FESTIVA MINI WAGON	1. 3L	B3	1996 - 1999	ABS	●	●	●	●	○
DEMIO / FESTIVA MINI WAGON	1. 3L	B3	1996 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
DEMIO / FESTIVA MINI WAGON	1. 3L	B3	2000	ABS/TCS	●	●	●	●	○
DEMIO / FESTIVA MINI WAGON	1. 5L	B5	1996 - 1999	ABS	●	●	●	●	○
Escape / Tribute (2006/4 -)	2. 3L	L3	2006	ABS	●	●	●	●	○
Escape / Tribute (2006/4 -)	2. 3L	L3	2006	GEM	●	●	●	●	○
Escape / Tribute (2006/4 -)	2. 3L	L3	2006	IC	●	●	●	●	○
Escape / Tribute (2006/4 -)	2. 3L	L3	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Escape / Tribute (2006/4 -)	2. 3L	L3	2006	RCM	●	●	●	●	○
Escape / Tribute (2006/3)	2. 3L	L3	2003	ABS	●	●	●	●	○
Escape / Tribute (2006/3)	2. 3L	L3	2003	GEM	●	●	●	●	○
Escape / Tribute (2006/3)	2. 3L	L3	2003	IC	●	●	●	●	○
Escape / Tribute (2006/3)	2. 3L	L3	2003	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Escape / Tribute (2006/3)	2. 3L	L3	2003	RCM	●	●	●	●	○
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	4X4	●	●	●	●	○
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	ABS	●	●	●	●	0x0005 0x0008 0x0012
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	ACM	●	●	●	●	0x0016 0x0017 0x0018
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	FCIM	●	●	●	●	○
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	FDIM	●	●	●	●	○
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	HVAC	●	●	●	●	○
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	IC	●	●	●	●	0x0005 0x0009
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	OCSM	●	●	●	○	0x000C 0x006D
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	PAM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	PSCM	●	●	○	○	0x0005 0x0053
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	RCM	●	●	●	●	0x0005
Escape / Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008	SDARS	●	●	●	●	0x0019
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	4X4	●	●	●	●	○
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	ABS	●	●	●	●	0x0005 0x0012 0x0074
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	ACM	●	●	●	●	0x0005 0x0016 0x0017 0x0018
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	BCM	●	●	●	●	0x006E
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	FCIM	●	●	●	●	○
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	FDIM	●	●	●	●	0x0005
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	HVAC	●	●	●	●	○
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	IC	●	●	●	●	0x0005 0x0009
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	OCSM	●	●	●	○	0x000C
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	PAM	●	●	●	●	○
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x00C5
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	PSCM	●	●	○	○	0x0005 0x0053
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	RCM	●	●	●	●	0x0005
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	SDARS	●	●	●	●	0x0019
Escape / Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008	TCM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009	SDARS	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	4X4	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	ABS	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	ACM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	APIM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	FCIM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	FDIM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	GEM / SJB	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	HVAC	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	IC	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	OCSM	●	●	●	○	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	PAM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	PSCM	●	●	○	○	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2009 - 2012	RCM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	DURATEC-HE / I4	2010 - 2012	GPSM	●	●	●	○	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009	SDARS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	4X4	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	ABS	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	ACM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	APIM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	BCM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	FCIM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	FDIM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	GEM / SJB	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	HVAC	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	IC	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	OCSM	●	●	●	○	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	PAM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	PSCM	●	●	○	○	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	RCM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2009 - 2012	TCM	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2010 - 2012	ACCM#2	●	●	●	●	○
Escape / Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2010 - 2012	GPSM	●	●	●	○	○
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2009	SDARS	●	●	●	●	0x0019 0x0005
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	4X4	●	●	●	●	○
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	ABS	●	●	●	●	0x0005 0x0008 0x0012
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	ACM	●	●	●	●	0x0016 0x0017 0x0018
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	FCIM	●	●	●	●	○
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	FDIM	●	●	●	●	0x0005
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	HVAC	●	●	●	●	0x0005
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	IC	●	●	●	●	0x0009 0x0005
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	OCSM	●	●	●	○	0x000C 0x006D
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	PAM	●	●	●	●	○
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0009 0x0038 0x0067 0x00C5
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	PSCM	●	●	○	○	0x0005 0x0053
Escape / Tribute / Mariner	3. 0L	4V	2008 - 2012	RCM	●	●	●	●	0x0005
Escape / Tribute / Mariner	3. 0L	4V	2009 - 2012	APIM	●	●	●	●	0x001C
Escape / Tribute / Mariner	3. 0L	4V	2010 - 2012	GPSM	●	●	●	○	○
Escape / Tribute / Mariner	0ther	0ther	2012	4X4	●	●	●	●	○
Escape / Tribute / Mariner	0ther	0ther	2012	ABS	●	●	●	●	○
Escape / Tribute / Mariner	0ther	0ther	2012	ACM	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escape / Tribute / Mariner	Other	Other	2012	APIM	●	●	●	○	○
Escape / Tribute / Mariner	Other	Other	2012	FCIM	●	●	●	●	○
Escape / Tribute / Mariner	Other	Other	2012	FDIM	●	●	●	●	○
Escape / Tribute / Mariner	Other	Other	2012	GEM / SJB	●	●	●	●	0x0042
Escape / Tribute / Mariner	Other	Other	2012	GPSM	●	●	●	●	○
Escape / Tribute / Mariner	Other	Other	2012	HVAC	●	●	●	●	○
Escape / Tribute / Mariner	Other	Other	2012	IC	●	●	●	●	○
Escape / Tribute / Mariner	Other	Other	2012	OCSM	●	●	●	○	○
Escape / Tribute / Mariner	Other	Other	2012	PAM	●	●	●	○	○
Escape / Tribute / Mariner	Other	Other	2012	PSCM	●	●	○	○	○
Escape / Tribute / Mariner	Other	Other	2012	RCM	●	●	●	●	○
Escape / Tribute / Maverick	2. 0L	Zetec	2001 - 2004	ABS/TCS	●	●	●	●	0x0008
Escape / Tribute / Maverick	2. 0L	Zetec	2001 - 2004	GEM	●	●	●	●	0x000A
Escape / Tribute / Maverick	2. 0L	Zetec	2001 - 2004	IC	●	●	●	●	○
Escape / Tribute / Maverick	2. 0L	Zetec	2001 - 2004	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083
Escape / Tribute / Maverick	2. 0L	Zetec	2001 - 2004	RCM	●	●	●	●	○
Escape / Tribute / Maverick	2. 0L	Zetec	2003 - 2004	PAM	●	●	●	●	○
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 - 2007	4X4	●	●	●	●	○
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 - 2007	ABS	●	●	●	●	0x0008
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 - 2007	GEM	●	●	●	●	0x000A 0x000F
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 - 2007	IC	●	●	●	●	○
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 - 2007	PAM	●	●	●	●	○
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 - 2007	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x00C5
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 - 2007	RCM	●	●	●	●	0x000C
Escape / Tribute / Maverick	3. 0L	4V	2001 - 2004	ABS/TCS	●	●	●	●	0x0008
Escape / Tribute / Maverick	3. 0L	4V	2001 - 2007	GEM	●	●	●	●	0x000A 0x000F
Escape / Tribute / Maverick	3. 0L	4V	2001 - 2007	IC	●	●	●	●	0x0005
Escape / Tribute / Maverick	3. 0L	4V	2001 - 2007	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x00C5
Escape / Tribute / Maverick	3. 0L	4V	2001 - 2007	RCM	●	●	●	●	0x000C 0x006D
Escape / Tribute / Maverick	3. 0L	4V	2003 - 2007	PAM	●	●	●	●	○
Escape / Tribute / Maverick	3. 0L	4V	2006 - 2007	4X4	●	●	●	●	○
Escape / Tribute / Maverick	3. 0L	4V	2006 - 2007	ABS	●	●	●	●	0x0005 0x0008
Escape/Kuga	1. 6L	EcoBoost - Gas Turbocharged Direct	2013	ABS	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost - Gas Turbocharged Direct	2013	ACM	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost - Gas Turbocharged Direct	2013	BCM#1	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct	2013	DSM	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct	2013	FCDIM	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct	2013	IPC	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct	2013	IPM-B	●	●	●	○	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct	2013	OCSM	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct	2013	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct	2013	RGTM	●	●	●	○	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	APIM	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	DDM	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	DSP	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	FCIM	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	GPSM	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	HCM	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	HVAC	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	PAM	●	●	○	○	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	PDM	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	PSCM	●	●	●	○	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	RCM	●	●	●	○	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	RFA	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	SASM	●	●	●	○	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	SOD-L	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	SOD-R	●	●	●	●	○
Escape/Kuga	1. 6L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	TRM	●	●	●	●	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013	ABS	●	●	●	●	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013	ACM	●	●	●	●	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013	BCM#1	●	●	●	●	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013	DSM	●	●	●	●	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013	FCDIM	●	●	●	●	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013	IPC	●	●	●	●	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013	IPM-B	●	●	●	○	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013	OCSM	●	●	●	●	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013	RGTM	●	●	●	○	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	APIM	●	●	●	●	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	DDM	●	●	●	●	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	DSP	●	●	●	●	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	FCIM	●	●	●	●	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	GPSM	●	●	●	●	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	HCM	●	●	●	●	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	HVAC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	PAM	●	●	○	○	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	PDM	●	●	●	●	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	PSCM	●	●	●	○	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	RCM	●	●	●	○	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	RFA	●	●	●	●	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	SASM	●	●	●	○	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	SOD–L	●	●	●	●	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	SOD–R	●	●	●	●	○
Escape/Kuga	2. 0L	EcoBoost – Gas Turbocharged Direct	2013 – 2014	TRM	●	●	●	●	○
Escape/Kuga	2. 5L	IVCT	2013	ABS	●	●	●	●	○
Escape/Kuga	2. 5L	IVCT	2013	ACM	●	●	●	●	○
Escape/Kuga	2. 5L	IVCT	2013	BCM#1	●	●	●	●	○
Escape/Kuga	2. 5L	IVCT	2013	DSM	●	●	●	●	○
Escape/Kuga	2. 5L	IVCT	2013	FCDIM	●	●	●	●	○
Escape/Kuga	2. 5L	IVCT	2013	IPC	●	●	●	●	○
Escape/Kuga	2. 5L	IVCT	2013	IPM–B	●	●	●	○	○
Escape/Kuga	2. 5L	IVCT	2013	OCSM	●	●	●	●	○
Escape/Kuga	2. 5L	IVCT	2013	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Escape/Kuga	2. 5L	IVCT	2013	RGTM	●	●	●	○	○
Escape/Kuga	2. 5L	IVCT	2013 – 2014	APIM	●	●	●	●	○
Escape/Kuga	2. 5L	IVCT	2013 – 2014	DDM	●	●	●	●	○
Escape/Kuga	2. 5L	IVCT	2013 – 2014	DSP	●	●	●	●	○
Escape/Kuga	2. 5L	IVCT	2013 – 2014	FCIM	●	●	●	●	○
Escape/Kuga	2. 5L	IVCT	2013 – 2014	GPSM	●	●	●	●	○
Escape/Kuga	2. 5L	IVCT	2013 – 2014	HCM	●	●	●	●	○
Escape/Kuga	2. 5L	IVCT	2013 – 2014	HVAC	●	●	●	●	○
Escape/Kuga	2. 5L	IVCT	2013 – 2014	PAM	●	●	○	○	○
Escape/Kuga	2. 5L	IVCT	2013 – 2014	PDM	●	●	●	●	○
Escape/Kuga	2. 5L	IVCT	2013 – 2014	PSCM	●	●	●	○	○
Escape/Kuga	2. 5L	IVCT	2013 – 2014	RCM	●	●	●	○	○
Escape/Kuga	2. 5L	IVCT	2013 – 2014	RFA	●	●	●	●	○
Escape/Kuga	2. 5L	IVCT	2013 – 2014	SASM	●	●	●	○	○
Escape/Kuga	2. 5L	IVCT	2013 – 2014	SOD–L	●	●	●	●	○
Escape/Kuga	2. 5L	IVCT	2013 – 2014	SOD–R	●	●	●	●	○
Escape/Kuga	2. 5L	IVCT	2013 – 2014	TRM	●	●	●	●	○
FAMILIA / LASER	1. 3L	B3	1998	ABS	●	●	●	●	○
FAMILIA / LASER	1. 3L	B3	1998	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
FAMILIA / LASER	1. 5L	ZL	1998 – 2000	ABS	●	●	●	●	○
FAMILIA / LASER	1. 5L	ZL	1998 – 2002	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
FAMILIA / LASER	1. 5L	ZL	2000 – 2002	ABS/TCS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
FAMILIA / LASER	1. 8L	FP	1998	ABS	●	●	●	●	○
FAMILIA / LASER	1. 8L	FP	1998	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
FAMILIA / LASER	2. 0L	FS	1999 - 2000	ABS	●	●	●	●	○
FAMILIA / LASER	2. 0L	FS	1999 - 2002	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
FAMILIA / LASER	2. 0L	FS	2002	ABS/TCS	●	●	●	●	○
FAMILIA / LASER	2. 0L	RF	1998	ABS	●	●	●	●	○
FAMILIA / LASER	2. 0L	RF	1998	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	ABS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	EPS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	GEM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	IC	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	IPDM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
FAMILIA VAN (BV*Y12)	1. 2L	CR12	2007	RCM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	ABS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	EPS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	GEM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	IC	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	IPDM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
FAMILIA VAN (BV*Y12)	1. 5L	HR15	2007	RCM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	ABS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	EPS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	GEM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	IC	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	IPDM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
FAMILIA VAN (BV*Y12)	1. 6L	HR16	2007	RCM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	ABS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	EPS	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	GEM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	IC	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	IPDM	●	●	●	●	○
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
FAMILIA VAN (BV*Y12)	1. 8L	MR18	2007	RCM	●	●	●	●	○
FAMILIA WAGON/VAN (B*Y11-500000-)	1. 3L	QG13	1999 - 2002	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
FAMILIA WAGON/VAN (B*Y11-500000-)	1. 3L	QG13	2002	ABS	●	●	●	●	○
FAMILIA WAGON/VAN (B*Y11-500000-)	1. 5L	QG15	1999 - 2002	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
FAMILIA WAGON/VAN (B*Y11-500000-)	1. 5L	QG15	2002	ABS	●	●	●	●	○
FAMILIA WAGON/VAN (B*Y11-500000-)	1. 8L	QG18	1999 - 2002	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
FRIENDEE / FREDa / BONGO FRIENDEE	2. 0L	FE	1997 - 2002	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
FRIENDEE / FREDa / BONGO FRIENDEE	2. 0L	FE	2002	TCM	●	●	●	●	○
FRIENDEE / FREDa / BONGO FRIENDEE	2. 5L	WL_T	1999	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1. 0L	HCS	1996 - 1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 0L	HCS	1996 - 1999	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 0L	HCS	1996 - 1999	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 0L	HCS	1996 - 1999	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x0023
Fiesta / Mazda 121 / Bantam	1. 0L	HCS	1999	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 0L	Zetec Rocam	1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 0L	Zetec Rocam	1999	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 0L	Zetec Rocam	1999	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 0L	Zetec Rocam	1999	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 0L	Zetec Rocam	1999	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 0L	Zetec Rocam	1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1. 25L	Zetec-SE	1996 - 2000	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 25L	Zetec-SE	1996 - 2000	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 25L	Zetec-SE	1996 - 2000	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 25L	Zetec-SE	1996 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1. 25L	Zetec-SE	1999 - 2000	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 25L	Zetec-SE	1999 - 2000	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 25L	Zetec-SE	2000	PATS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 3L	Endura-E	1996 - 1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 3L	Endura-E	1996 - 1999	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 3L	Endura-E	1996 - 1999	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 3L	Endura-E	1996 - 1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009
Fiesta / Mazda 121 / Bantam	1. 3L	Endura-E	1999	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 3L	Endura-E	1999	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	1. 4 PT-E SFI	1994 - 1996	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	1. 4 PT-E SFI	1994 - 1996	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	1. 4 PT-E SFI	1994 - 1996	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	PT-E	2000	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	PT-E	2000	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	PT-E	2000	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	PT-E	2000	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	PT-E	2000	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1. 4L	Zetec-SE	1996 - 1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	Zetec-SE	1996 - 1999	CSM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta / Mazda 121 / Bantam	1. 4L	Zetec-SE	1996 - 1999	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	Zetec-SE	1996 - 1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009
Fiesta / Mazda 121 / Bantam	1. 4L	Zetec-SE	1999	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	Zetec-SE	1999	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Other	2001	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Other	2001	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Other	2001	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Other	2001	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Other	2001	PATS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Other	2001	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec Rocam	1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec Rocam	1999	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec Rocam	1999	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec Rocam	1999	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec Rocam	1999	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec Rocam	1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec-SE	2000	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec-SE	2000	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec-SE	2000	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec-SE	2000	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec-SE	2000	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec-SE	2000	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	FIP	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	PATS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1. 8L	Endura-DE	1996 - Other	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura-DE	1996 - Other	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura-DE	1996 - Other	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura-DE	1996 - Other	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura-DE	1996 - Other	PATS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura-DE	1996 - Other	PCM	○	○	●	○	0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1. 8L	Zetec	1992 - 1994	ABS/TCS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta / Mazda 121 / Bantam	1. 8L	Zetec	1992 - 1994	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Zetec	1992 - 1994	HEC	●	●	●	●	○
LAPUTA	660cc	F6A-T	1998	TCM	●	●	●	●	○
LAPUTA	660cc	F6A-T	1998 - Other	ABS	●	●	●	●	○
LAPUTA	660cc	F6A-T	1998 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
LAPUTA	660cc	F6A-T	1998 - Other	RCM	●	●	●	●	○
LAPUTA	660cc	K6A	2000 - Other	ABS	●	●	●	●	○
LAPUTA	660cc	K6A	2000 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
LAPUTA	660cc	K6A	2000 - Other	RCM	●	●	●	●	○
LAPUTA	660cc	K6A_T	1999 - Other	ABS	●	●	●	●	○
LAPUTA	660cc	K6A_T	1999 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
LAPUTA	660cc	K6A_T	1999 - Other	RCM	●	●	●	●	○
LASER / 323 / TIERRA	1. 3L	B3	1996 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1. 3L	B3	1996 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
LASER / 323 / TIERRA	1. 3L	B3	2000	ABS/TCS	●	●	●	●	○
LASER / 323 / TIERRA	1. 3L	Other	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
LASER / 323 / TIERRA	1. 5L	Other	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
LASER / 323 / TIERRA	1. 5L	Z5	1996 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1. 5L	Z5	1996 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
LASER / 323 / TIERRA	1. 5L	ZL	1998 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1. 5L	ZL	1998 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
LASER / 323 / TIERRA	1. 6L	B6	1996 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1. 6L	B6	1996 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
LASER / 323 / TIERRA	1. 6L	Other	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
LASER / 323 / TIERRA	1. 6L	ZM	1998 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1. 6L	ZM	1998 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
LASER / 323 / TIERRA	1. 6L	ZM	2000	ABS/TCS	●	●	●	●	○
LASER / 323 / TIERRA	1. 8L	BP	1996 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1. 8L	BP	1996 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
LASER / 323 / TIERRA	1. 8L	FP	1998 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1. 8L	FP	1998 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
LASER / 323 / TIERRA	1. 8L	Other	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
LASER / 323 / TIERRA	2. 0L	FS	2000	ABS/TCS	●	●	●	●	○
LASER / 323 / TIERRA	2. 0L	FS	2000 - 2001	ABS	●	●	●	●	○
LASER / 323 / TIERRA	2. 0L	FS	2000 - 2001	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
LASER / 323 / TIERRA	2. 0L	RF	1998	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
LASER / 323 / TIERRA	2. 0L	RF	1998 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	2. 0L	RF-T	1998 - 2000	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
LASER / 323 / TIERRA	2. 0L	RF-T	2000	ABS	●	●	●	●	○
MARVIE	2. 5L	G5	1996	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA 929	3. 0L	JE	1997	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MAZDA2 (China)	1. 3L	ZJ	2007	ABS	●	●	●	●	○
MAZDA2 (China)	1. 3L	ZJ	2007	BCM/GEM	●	●	●	●	0x0120
MAZDA2 (China)	1. 3L	ZJ	2007	EPS	●	●	●	●	0x005B
MAZDA2 (China)	1. 3L	ZJ	2007	IC	●	●	●	●	○
MAZDA2 (China)	1. 3L	ZJ	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA2 (China)	1. 3L	ZJ	2007	RCM	●	●	●	●	○
MAZDA2 (China)	1. 3L	ZJ	2007	RKE	●	●	●	●	○
MAZDA2 (China)	1. 5L	ZY	2007	ABS	●	●	●	●	○
MAZDA2 (China)	1. 5L	ZY	2007	BCM/GEM	●	●	●	●	0x0120
MAZDA2 (China)	1. 5L	ZY	2007	EPS	●	●	●	●	0x005B
MAZDA2 (China)	1. 5L	ZY	2007	IC	●	●	●	●	○
MAZDA2 (China)	1. 5L	ZY	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA2 (China)	1. 5L	ZY	2007	RCM	●	●	●	●	○
MAZDA2 (China)	1. 5L	ZY	2007	RKE	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1. 25L	MZI	2002 - 2006	ABS/TCS	●	●	●	●	0x0008
MAZDA2 (EURO STG3/4 Specs)	1. 25L	MZI	2002 - 2006	IC	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1. 25L	MZI	2002 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MAZDA2 (EURO STG3/4 Specs)	1. 25L	MZI	2002 - 2006	RCM	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1. 4L	MZI	2002 - 2006	ABS/TCS	●	●	●	●	0x0008
MAZDA2 (EURO STG3/4 Specs)	1. 4L	MZI	2002 - 2006	IC	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1. 4L	MZI	2002 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MAZDA2 (EURO STG3/4 Specs)	1. 4L	MZI	2002 - 2006	RCM	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1. 4L	MZI	2002 - 2006	TCM	●	●	●	●	0x003F
MAZDA2 (EURO STG3/4 Specs)	1. 4L	MZ_CD_DI	2002 - 2006	ABS/TCS	●	●	●	●	0x0008
MAZDA2 (EURO STG3/4 Specs)	1. 4L	MZ_CD_DI	2002 - 2006	IC	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1. 4L	MZ_CD_DI	2002 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MAZDA2 (EURO STG3/4 Specs)	1. 4L	MZ_CD_DI	2002 - 2006	RCM	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1. 4L	MZ_CD_DI	2002 - 2006	TCM	●	●	●	●	0x003F
MAZDA2 (EURO STG3/4 Specs)	1. 6L	MZI	2002	TCM	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1. 6L	MZI	2002 - 2006	ABS/TCS	●	●	●	●	0x0008
MAZDA2 (EURO STG3/4 Specs)	1. 6L	MZI	2002 - 2006	IC	●	●	●	●	○
MAZDA2 (EURO STG3/4 Specs)	1. 6L	MZI	2002 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MAZDA2 (EURO STG3/4 Specs)	1. 6L	MZI	2002 - 2006	RCM	●	●	●	●	○
MAZDA2 (Europe)	1. 3L	ZJ	2007	ABS	●	●	●	●	○
MAZDA2 (Europe)	1. 3L	ZJ	2007	BCM/GEM	●	●	●	●	0x0120
MAZDA2 (Europe)	1. 3L	ZJ	2007	EPS	●	●	●	●	0x005B
MAZDA2 (Europe)	1. 3L	ZJ	2007	IC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA2 (Europe)	1. 3L	ZJ	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA2 (Europe)	1. 3L	ZJ	2007	RCM	●	●	●	●	○
MAZDA2 (Europe)	1. 3L	ZJ	2007	RKE	●	●	●	●	○
MAZDA2 (Europe)	1. 3L	ZJ	2007	VSM	●	●	●	●	○
MAZDA2 (Europe)	1. 4L	Y4	2007	ABS	●	●	●	●	○
MAZDA2 (Europe)	1. 4L	Y4	2007	BCM/GEM	●	●	●	●	0x0120
MAZDA2 (Europe)	1. 4L	Y4	2007	EPS	●	●	●	●	0x005B
MAZDA2 (Europe)	1. 4L	Y4	2007	IC	●	●	●	●	○
MAZDA2 (Europe)	1. 4L	Y4	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MAZDA2 (Europe)	1. 4L	Y4	2007	RCM	●	●	●	●	○
MAZDA2 (Europe)	1. 4L	Y4	2007	RKE	●	●	●	●	○
MAZDA2 (Europe)	1. 4L	Y4	2007	VSM	●	●	●	●	○
MAZDA2 (Europe)	1. 5L	ZY	2007	ABS	●	●	●	●	○
MAZDA2 (Europe)	1. 5L	ZY	2007	BCM/GEM	●	●	●	●	0x0120
MAZDA2 (Europe)	1. 5L	ZY	2007	EPS	●	●	●	●	0x005B
MAZDA2 (Europe)	1. 5L	ZY	2007	IC	●	●	●	●	○
MAZDA2 (Europe)	1. 5L	ZY	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA2 (Europe)	1. 5L	ZY	2007	RCM	●	●	●	●	○
MAZDA2 (Europe)	1. 5L	ZY	2007	RKE	●	●	●	●	○
MAZDA2 (Europe)	1. 5L	ZY	2007	VSM	●	●	●	●	○
MAZDA2 (Europe)	1. 6L	Y6	2008	ABS	●	●	●	●	○
MAZDA2 (Europe)	1. 6L	Y6	2008	BCM/GEM	●	●	●	●	0x0120
MAZDA2 (Europe)	1. 6L	Y6	2008	EPS	●	●	●	●	0x005B
MAZDA2 (Europe)	1. 6L	Y6	2008	IC	●	●	●	●	○
MAZDA2 (Europe)	1. 6L	Y6	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MAZDA2 (Europe)	1. 6L	Y6	2008	RCM	●	●	●	●	○
MAZDA2 (Europe)	1. 6L	Y6	2008	RKE	●	●	●	●	○
MAZDA2 (Europe)	1. 6L	Y6	2008	VSM	●	●	●	●	○
MAZDA3 (China / General)	1. 6L	Z6	2007	ABS	●	●	●	●	○
MAZDA3 (China / General)	1. 6L	Z6	2007	EATC	●	●	●	●	○
MAZDA3 (China / General)	1. 6L	Z6	2007	GEM	●	●	●	●	○
MAZDA3 (China / General)	1. 6L	Z6	2007	IC	●	●	●	●	○
MAZDA3 (China / General)	1. 6L	Z6	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA3 (China / General)	1. 6L	Z6	2007	RCM	●	●	●	●	○
MAZDA3 (China / General)	1. 6L	Z6	2007	RKE	●	●	●	●	○
MAZDA3 (China / General)	2. 0L	LF	2007	ABS	●	●	●	●	○
MAZDA3 (China / General)	2. 0L	LF	2007	EATC	●	●	●	●	○
MAZDA3 (China / General)	2. 0L	LF	2007	EPS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA3 (China / General)	2. 0L	LF	2007	GEM	●	●	●	●	○
MAZDA3 (China / General)	2. 0L	LF	2007	IC	●	●	●	●	○
MAZDA3 (China / General)	2. 0L	LF	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA3 (China / General)	2. 0L	LF	2007	RCM	●	●	●	●	○
MAZDA3 (China / General)	2. 0L	LF	2007	RKE	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 3L	ZJ	2003 - 2006	ABS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 3L	ZJ	2003 - 2006	EATC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 3L	ZJ	2003 - 2006	GEM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 3L	ZJ	2003 - 2006	IC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 3L	ZJ	2003 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 3L	ZJ	2003 - 2006	RCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 3L	ZJ	2006	RKE	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 - 2006	ABS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 - 2006	EATC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 - 2006	EPS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 - 2006	FACM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 - 2006	GEM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 - 2006	IC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2003 - 2006	RCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Y6	2006	RKE	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Z6	2003 - 2006	ABS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Z6	2003 - 2006	EATC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Z6	2003 - 2006	GEM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Z6	2003 - 2006	IC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Z6	2003 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Z6	2003 - 2006	RCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	1. 6L	Z6	2006	RKE	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2003 - 2006	ABS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2003 - 2006	EATC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2003 - 2006	EPS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2003 - 2006	GEM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2003 - 2006	IC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2003 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2003 - 2006	RCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	LF	2006	RKE	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2. 0L	RF-T	2006	ABS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF-T	2006	EATC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF-T	2006	FFH	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF-T	2006	GEM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF-T	2006	IC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF-T	2006	PCM	●	●	●	●	0x0055 0x005C 0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF-T	2006	RCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.0L	RF-T	2006	RKE	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003 – 2006	ABS	●	●	●	●	0x001E
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003 – 2006	EATC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003 – 2006	EPS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003 – 2006	GEM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003 – 2006	IC	●	●	●	●	0x012D
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003 – 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201 0x0009
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2003 – 2006	RCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3	2006	RKE	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	ABS	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	EATC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	GEM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	IC	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	RCM	●	●	●	●	○
MAZDA3 (EURO STG3/4/5 and General Specs.)	2.3L	L3_T	2006	RKE	●	●	●	●	○
MAZDA3 (North America / General)	1.6L	Z6	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA3 (North America / General)	1.6L	Z6	2006	RKE	●	●	●	●	○
MAZDA3 (North America / General)	1.6L	Z6	2006	TPM	●	●	●	●	○
MAZDA3 (North America / General)	1.6L	Z6	2006 – 2012	ABS	●	●	●	●	○
MAZDA3 (North America / General)	1.6L	Z6	2006 – 2012	GEM	●	●	●	●	○
MAZDA3 (North America / General)	1.6L	Z6	2006 – 2012	IC	●	●	●	●	0x012D
MAZDA3 (North America / General)	1.6L	Z6	2006 – 2012	RCM	●	●	●	●	0x006D
MAZDA3 (North America / General)	2.0L	LF	2004 – 2009	ABS	●	●	●	●	○
MAZDA3 (North America / General)	2.0L	LF	2004 – 2009	EPS	●	●	●	●	○
MAZDA3 (North America / General)	2.0L	LF	2004 – 2009	GEM	●	●	●	●	○
MAZDA3 (North America / General)	2.0L	LF	2004 – 2009	IC	●	●	●	●	○
MAZDA3 (North America / General)	2.0L	LF	2004 – 2009	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA3 (North America / General)	2.0L	LF	2004 – 2009	RCM	●	●	●	●	○
MAZDA3 (North America / General)	2.0L	LF	2004 – 2009	TPM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA3 (North America / General)	2.0L	LF	2006	EATC	●	●	●	●	○
MAZDA3 (North America / General)	2.0L	LF	2006	RKE	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	ABS	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	EATC	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	EPS	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	GEM	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	IC	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	RCM	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2004 - 2009	TPM	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2006	RKE	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3	2006 - 2009	TCM	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3_T	2007 - 2009	ABS	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3_T	2007 - 2009	EATC	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3_T	2007 - 2009	GEM	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3_T	2007 - 2009	IC	●	●	●	○	○
MAZDA3 (North America / General)	2.3L	L3_T	2007 - 2009	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA3 (North America / General)	2.3L	L3_T	2007 - 2009	RCM	●	●	●	●	○
MAZDA3 (North America / General)	2.3L	L3_T	2007 - 2009	TPM	●	●	●	●	○
MAZDA3 / AXELA	1.5L	P5	0ther	BSML	●	●	●	●	○
MAZDA3 / AXELA	1.5L	P5	0ther	BSMR	●	●	●	○	○
MAZDA3 / AXELA	1.5L	P5	0ther	RVM	●	●	●	○	○
MAZDA3 / AXELA	1.6L	Z6	0ther	BSML	●	●	●	●	○
MAZDA3 / AXELA	1.6L	Z6	0ther	BSMR	●	●	●	○	○
MAZDA3 / AXELA	1.6L	Z6	0ther	RVM	●	●	●	○	○
MAZDA3 / AXELA	2.0L	PE	0ther	BSML	●	●	●	●	○
MAZDA3 / AXELA	2.0L	PE	0ther	BSMR	●	●	●	○	○
MAZDA3 / AXELA	2.0L	PE	0ther	RVM	●	●	●	○	○
MAZDA3 / AXELA	2.2L	SH	0ther	BSML	●	●	●	●	○
MAZDA3 / AXELA	2.2L	SH	0ther	BSMR	●	●	●	○	○
MAZDA3 / AXELA	2.2L	SH	0ther	RVM	●	●	●	○	○
MAZDA3 / AXELA	2.5L	PY	0ther	BSML	●	●	●	●	○
MAZDA3 / AXELA	2.5L	PY	0ther	BSMR	●	●	●	○	○
MAZDA3 / AXELA	2.5L	PY	0ther	RVM	●	●	●	○	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	1.8L	L8	2005	GEM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	1.8L	L8	2005 - 2007	ABS	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	1.8L	L8	2005 - 2007	EATC	●	●	●	●	0x0020
MAZDA5 (EURO STG3/4/5 and General Specs.) /	1.8L	L8	2005 - 2007	EPS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA5 (EURO STG3/4/5 and General Specs.) /	1. 8L	L8	2005 - 2007	IC	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	1. 8L	L8	2005 - 2007	LPSDM	●	●	●	●	0x0022
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1. 8L	L8	2005 - 2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA5 (EURO STG3/4/5 and General Specs.) /	1. 8L	L8	2005 - 2007	RCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	1. 8L	L8	2005 - 2007	RKE	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	1. 8L	L8	2005 - 2007	RPSDM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	1. 8L	L8	2007	TCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	LF	2005 - 2007	ABS	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	LF	2005 - 2007	EATC	●	●	●	●	0x0020
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	LF	2005 - 2007	EPS	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	LF	2005 - 2007	GEM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	LF	2005 - 2007	IC	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2. 0L	LF	2005 - 2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	LF	2005 - 2007	RCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	LF	2005 - 2007	RKE	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	LF	2007	LPSDM	●	●	●	●	0x0022
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	LF	2007	RPSDM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	LF	2007	TCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	RF-T	2005 - 2007	ABS	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	RF-T	2005 - 2007	EATC	●	●	●	●	0x0020
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	RF-T	2005 - 2007	FFH	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	RF-T	2005 - 2007	GEM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	RF-T	2005 - 2007	IC	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2. 0L	RF-T	2005 - 2007	PCM	●	●	●	●	0x0055 0x005C 0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	RF-T	2005 - 2007	RCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	RF-T	2005 - 2007	RKE	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	RF-T	2007	LPSDM	●	●	●	●	0x0022
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	RF-T	2007	RPSDM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) /	2. 0L	RF-T	2007	TCM	●	●	●	●	○
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	ABS	●	●	●	●	○
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	EATC	●	●	●	●	0x0020
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	EPS	●	●	●	●	○
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	GEM	●	●	●	●	○
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	IC	●	●	●	●	○
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	RCM	●	●	●	●	○
MAZDA5 (North America Specs.)	2. 3L	L3	2006 - 2010	TPM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA5 (North America Specs.)	2. 3L	L3	2008 – 2010	TCM	●	●	●	●	○
MAZDA6 (China)	2. 0L	LF	2007	ABS	●	●	●	●	○
MAZDA6 (China)	2. 0L	LF	2007	BCM/GEM	●	●	●	●	0x0120
MAZDA6 (China)	2. 0L	LF	2007	EATC	●	●	●	●	0x0020
MAZDA6 (China)	2. 0L	LF	2007	EPS	●	●	●	●	0x000D
MAZDA6 (China)	2. 0L	LF	2007	IC	●	●	●	●	○
MAZDA6 (China)	2. 0L	LF	2007	LCM	●	●	●	●	○
MAZDA6 (China)	2. 0L	LF	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (China)	2. 0L	LF	2007	RCM	●	●	●	●	○
MAZDA6 (China)	2. 0L	LF	2007	RKE	●	●	●	●	○
MAZDA6 (China)	2. 0L	LF	2007	TCM	●	●	●	●	○
MAZDA6 (China)	2. 5L	L5	2007	ABS	●	●	●	●	○
MAZDA6 (China)	2. 5L	L5	2007	BCM/GEM	●	●	●	●	0x0120
MAZDA6 (China)	2. 5L	L5	2007	EATC	●	●	●	●	0x0020
MAZDA6 (China)	2. 5L	L5	2007	EPS	●	●	●	●	0x000D
MAZDA6 (China)	2. 5L	L5	2007	IC	●	●	●	●	○
MAZDA6 (China)	2. 5L	L5	2007	LCM	●	●	●	●	○
MAZDA6 (China)	2. 5L	L5	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (China)	2. 5L	L5	2007	RCM	●	●	●	●	○
MAZDA6 (China)	2. 5L	L5	2007	RKE	●	●	●	●	○
MAZDA6 (China)	2. 5L	L5	2007	TCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2002 – 2005	ABS/TCS	●	●	●	●	0x001E 0x0008
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2002 – 2005	IC	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2002 – 2005	LHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2002 – 2005	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2002 – 2005	RCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2002 – 2005	RHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2005	GEM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2005	LCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	1. 8L	L8	2005	RKE	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002 – 2005	ABS/TCS	●	●	●	●	0x0008
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002 – 2005	IC	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002 – 2005	LHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002 – 2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002 – 2005	RCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2002 – 2005	RHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2. 0L	LF	2005	GEM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005	LCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005	RKE	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	LF	2005	TCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2002 - 2005	ABS/TCS	●	●	●	●	0x0008
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2002 - 2005	FFH	●	●	●	●	0x0131
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2002 - 2005	IC	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2002 - 2005	LHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2002 - 2005	PCM	●	●	●	●	0x0055 0x0080 0x0081 0x0082 0x0083 0x005C 0x0201
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2002 - 2005	RCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2002 - 2005	RHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2005	GEM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2005	LCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.0L	RF-T	2005	RKE	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002	4X4	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 - 2005	ABS/TCS	●	●	●	●	0x0008 0x001E
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 - 2005	IC	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 - 2005	LHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 - 2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201 0x0009
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 - 2005	RCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 - 2005	RHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2002 - 2005	TCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005	GEM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005	LCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3	2005	RKE	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	4X4	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	ABS/TCS	●	●	●	●	0x0008
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	GEM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	IC	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	LCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	LHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	RCM	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	RHID	●	●	●	●	○
MAZDA6 (EURO STG3/4 and General)	2.3L	L3_T	2005	RKE	●	●	●	●	○
MAZDA6 (Europe and General)	1.8L	L8	2007	ABS	●	●	●	●	○
MAZDA6 (Europe and General)	1.8L	L8	2007	BCM/GEM	●	●	●	●	0x0120
MAZDA6 (Europe and General)	1.8L	L8	2007	EATC	●	●	●	●	0x0020
MAZDA6 (Europe and General)	1.8L	L8	2007	EPS	●	●	●	●	0x000D

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA6 (Europe and General)	1. 8L	L8	2007	IC	●	●	●	●	○
MAZDA6 (Europe and General)	1. 8L	L8	2007	LCM	●	●	●	●	○
MAZDA6 (Europe and General)	1. 8L	L8	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (Europe and General)	1. 8L	L8	2007	RCM	●	●	●	●	○
MAZDA6 (Europe and General)	1. 8L	L8	2007	RKE	●	●	●	●	○
MAZDA6 (Europe and General)	1. 8L	L8	2007	RVM	●	●	●	●	○
MAZDA6 (Europe and General)	1. 8L	L8	2007	TCM	●	●	●	●	○
MAZDA6 (Europe and General)	2. 0L	LF	2007	ABS	●	●	●	●	○
MAZDA6 (Europe and General)	2. 0L	LF	2007	BCM/GEM	●	●	●	●	0x0120
MAZDA6 (Europe and General)	2. 0L	LF	2007	EATC	●	●	●	●	0x0020
MAZDA6 (Europe and General)	2. 0L	LF	2007	EPS	●	●	●	●	0x000D
MAZDA6 (Europe and General)	2. 0L	LF	2007	IC	●	●	●	●	○
MAZDA6 (Europe and General)	2. 0L	LF	2007	LCM	●	●	●	●	○
MAZDA6 (Europe and General)	2. 0L	LF	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (Europe and General)	2. 0L	LF	2007	RCM	●	●	●	●	○
MAZDA6 (Europe and General)	2. 0L	LF	2007	RKE	●	●	●	●	○
MAZDA6 (Europe and General)	2. 0L	LF	2007	RVM	●	●	●	●	○
MAZDA6 (Europe and General)	2. 0L	LF	2007	TCM	●	●	●	●	○
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	ABS	●	●	●	●	○
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	BCM/GEM	●	●	●	●	0x0120
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	EATC	●	●	●	●	0x0020
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	EPS	●	●	●	●	0x000D
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	FFH	●	●	●	●	○
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	IC	●	●	●	●	○
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	LCM	●	●	●	●	○
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	PCM	●	●	●	●	0x0055 0x005C 0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	RCM	●	●	●	●	○
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	RKE	●	●	●	●	○
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	RVM	●	●	●	●	○
MAZDA6 (Europe and General)	2. 0L	RF-T	2007	TCM	●	●	●	●	○
MAZDA6 (Europe and General)	2. 2L	R2_T	2007 - 2008	ABS	●	●	●	●	○
MAZDA6 (Europe and General)	2. 2L	R2_T	2007 - 2008	BCM/GEM	●	●	●	●	0x0120
MAZDA6 (Europe and General)	2. 2L	R2_T	2007 - 2008	EATC	●	●	●	●	0x0020
MAZDA6 (Europe and General)	2. 2L	R2_T	2007 - 2008	EPS	●	●	●	●	0x000D
MAZDA6 (Europe and General)	2. 2L	R2_T	2007 - 2008	FFH	●	●	●	●	○
MAZDA6 (Europe and General)	2. 2L	R2_T	2007 - 2008	IC	●	●	●	●	○
MAZDA6 (Europe and General)	2. 2L	R2_T	2007 - 2008	LCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA6 (Europe and General)	2. 2L	R2_T	2007 - 2008	PCM	●	●	●	●	0x0055 0x005C 0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (Europe and General)	2. 2L	R2_T	2007 - 2008	RCM	●	●	●	●	○
MAZDA6 (Europe and General)	2. 2L	R2_T	2007 - 2008	RKE	●	●	●	●	○
MAZDA6 (Europe and General)	2. 2L	R2_T	2007 - 2008	RVM	●	●	●	●	○
MAZDA6 (Europe and General)	2. 2L	R2_T	2007 - 2008	TCM	●	●	●	●	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	ABS	●	●	●	●	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	BCM/GEM	●	●	●	●	0x0120
MAZDA6 (Europe and General)	2. 5L	L5	2007	EATC	●	●	●	●	0x0020
MAZDA6 (Europe and General)	2. 5L	L5	2007	EPS	●	●	●	●	0x000D
MAZDA6 (Europe and General)	2. 5L	L5	2007	IC	●	●	●	●	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	LCM	●	●	●	●	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (Europe and General)	2. 5L	L5	2007	RCM	●	●	●	●	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	RKE	●	●	●	●	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	RVM	●	●	●	●	○
MAZDA6 (Europe and General)	2. 5L	L5	2007	TCM	●	●	●	●	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 - 2010	ABS	●	●	●	●	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 - 2010	BCM/GEM	●	●	●	●	0x0120
MAZDA6 (Middle East / General)	2. 5L	L5	2009 - 2010	BSML	●	●	●	●	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 - 2010	BSMR	●	●	●	●	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 - 2010	EATC	●	●	●	●	0x0020
MAZDA6 (Middle East / General)	2. 5L	L5	2009 - 2010	IC	●	●	●	●	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 - 2010	LCM	●	●	●	●	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 - 2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (Middle East / General)	2. 5L	L5	2009 - 2010	RCM	●	●	●	●	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 - 2010	RKE	●	●	●	●	○
MAZDA6 (Middle East / General)	2. 5L	L5	2009 - 2010	TCM	●	●	●	●	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 - 2010	ABS	●	●	●	●	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 - 2010	BCM/GEM	●	●	●	●	0x0120
MAZDA6 (Middle East / General)	3. 7L	CA	2009 - 2010	BSML	●	●	●	●	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 - 2010	BSMR	●	●	●	●	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 - 2010	EATC	●	●	●	●	0x0020
MAZDA6 (Middle East / General)	3. 7L	CA	2009 - 2010	IC	●	●	●	●	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 - 2010	LCM	●	●	●	●	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 - 2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (Middle East / General)	3. 7L	CA	2009 - 2010	RCM	●	●	●	●	○
MAZDA6 (Middle East / General)	3. 7L	CA	2009 - 2010	RKE	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA6 (Middle East / General)	3. 7L	CA	2009 - 2010	TCM	●	●	●	●	○
MAZDA6 (North America / General)	2. 5L	L5	2009 - 2010	ABS	●	●	●	●	○
MAZDA6 (North America / General)	2. 5L	L5	2009 - 2010	BCM/GEM	●	●	●	●	0x0120
MAZDA6 (North America / General)	2. 5L	L5	2009 - 2010	BSML	●	●	●	●	○
MAZDA6 (North America / General)	2. 5L	L5	2009 - 2010	BSMR	●	●	●	●	○
MAZDA6 (North America / General)	2. 5L	L5	2009 - 2010	EATC	●	●	●	●	0x0020
MAZDA6 (North America / General)	2. 5L	L5	2009 - 2010	IC	●	●	●	●	○
MAZDA6 (North America / General)	2. 5L	L5	2009 - 2010	LCM	●	●	●	●	○
MAZDA6 (North America / General)	2. 5L	L5	2009 - 2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (North America / General)	2. 5L	L5	2009 - 2010	RCM	●	●	●	●	○
MAZDA6 (North America / General)	2. 5L	L5	2009 - 2010	RKE	●	●	●	●	○
MAZDA6 (North America / General)	2. 5L	L5	2009 - 2010	TCM	●	●	●	●	○
MAZDA6 (North America / General)	3. 7L	CA	2009 - 2010	ABS	●	●	●	●	○
MAZDA6 (North America / General)	3. 7L	CA	2009 - 2010	BCM/GEM	●	●	●	●	0x0120
MAZDA6 (North America / General)	3. 7L	CA	2009 - 2010	BSML	●	●	●	●	○
MAZDA6 (North America / General)	3. 7L	CA	2009 - 2010	BSMR	●	●	●	●	○
MAZDA6 (North America / General)	3. 7L	CA	2009 - 2010	EATC	●	●	●	●	0x0020
MAZDA6 (North America / General)	3. 7L	CA	2009 - 2010	IC	●	●	●	●	○
MAZDA6 (North America / General)	3. 7L	CA	2009 - 2010	LCM	●	●	●	●	○
MAZDA6 (North America / General)	3. 7L	CA	2009 - 2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6 (North America / General)	3. 7L	CA	2009 - 2010	RCM	●	●	●	●	○
MAZDA6 (North America / General)	3. 7L	CA	2009 - 2010	RKE	●	●	●	●	○
MAZDA6 (North America / General)	3. 7L	CA	2009 - 2010	TCM	●	●	●	●	○
MAZDA6 / ATENZA	2. 0L	PE	0ther	BSML	●	●	●	●	○
MAZDA6 / ATENZA	2. 0L	PE	0ther	BSMR	●	●	●	○	○
MAZDA6 / ATENZA	2. 0L	PE	0ther	RVM	●	●	●	○	○
MAZDA6 / ATENZA	2. 2L	SH	0ther	BSML	●	●	●	●	○
MAZDA6 / ATENZA	2. 2L	SH	0ther	BSMR	●	●	●	○	○
MAZDA6 / ATENZA	2. 2L	SH	0ther	RVM	●	●	●	○	○
MAZDA6 / ATENZA	2. 5L	PY	0ther	BSML	●	●	●	●	○
MAZDA6 / ATENZA	2. 5L	PY	0ther	BSMR	●	●	●	○	○
MAZDA6 / ATENZA	2. 5L	PY	0ther	RVM	●	●	●	○	○
MAZDA6(North America/General)	2. 3L	L3	2003 - 2008	ABS/TCS	●	●	●	●	0x0008
MAZDA6(North America/General)	2. 3L	L3	2003 - 2008	IC	●	●	●	●	0x0009
MAZDA6(North America/General)	2. 3L	L3	2003 - 2008	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6(North America/General)	2. 3L	L3	2003 - 2008	RCM	●	●	●	●	0x006D
MAZDA6(North America/General)	2. 3L	L3	2003 - 2008	TCM	●	●	●	●	○
MAZDA6(North America/General)	2. 3L	L3	2006 - 2008	GEM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MAZDA6(North America/General)	2. 3L	L3	2008	TPM	●	●	●	○	○
MAZDA6(North America/General)	2. 3L	L3_T	2006 - 2007	4X4	●	●	●	●	○
MAZDA6(North America/General)	2. 3L	L3_T	2006 - 2007	ABS/TCS	●	●	●	●	0x0008
MAZDA6(North America/General)	2. 3L	L3_T	2006 - 2007	GEM	●	●	●	●	○
MAZDA6(North America/General)	2. 3L	L3_T	2006 - 2007	IC	●	●	●	●	○
MAZDA6(North America/General)	2. 3L	L3_T	2006 - 2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6(North America/General)	2. 3L	L3_T	2006 - 2007	RCM	●	●	●	●	○
MAZDA6(North America/General)	2. 3L	L3_T	2006 - 2007	RKE	●	●	●	●	○
MAZDA6(North America/General)	3. 0L	AJ	2003 - 2008	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA6(North America/General)	3. 0L	AJ	2003 - 2008	TCM	●	●	●	●	○
MAZDA6(North America/General)	3. 0L	AJ	2003 - Other	ABS/TCS	●	●	●	●	0x0008
MAZDA6(North America/General)	3. 0L	AJ	2003 - Other	IC	●	●	●	●	○
MAZDA6(North America/General)	3. 0L	AJ	2003 - Other	RCM	●	●	●	●	○
MAZDA6(North America/General)	3. 0L	AJ	2006 - 2008	GEM	●	●	●	●	○
MAZDA6(North America/General)	3. 0L	AJ	2008	TPM	●	●	●	○	○
MILLENNIA / EUNOS 800	2. 0L	KF	1998 - 2000	ABS	●	●	●	●	○
MILLENNIA / EUNOS 800	2. 3L	KJ	1998 - 2000	ABS	●	●	●	●	○
MILLENNIA / EUNOS 800	2. 5L	KL	1998 - 2000	ABS	●	●	●	●	○
MILLENNIA / EUNOS 800	2. 5L	KL	2002	ABS/TCS	●	●	●	●	○
MILLENNIA / EUNOS 800	2. 5L	KL	2002	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MPV (Europe/General)	2. 0L	FS	1999	ABS	●	●	●	●	○
MPV (Europe/General)	2. 0L	FS	1999 - 2000	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MPV (Europe/General)	2. 0L	FS	2000	ABS/TCS	●	●	●	●	○
MPV (Europe/General)	2. 0L	RF-T	2002 - 2004	ABS/TCS	●	●	●	●	○
MPV (Europe/General)	2. 0L	RF-T	2002 - 2004	FFH	●	●	●	●	0x0131
MPV (Europe/General)	2. 0L	RF-T	2002 - 2004	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MPV (Europe/General)	2. 3L	L3	2002	ABS/TCS	●	●	●	●	○
MPV (Europe/General)	2. 3L	L3	2002	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MPV (Europe/General)	2. 5L	GY	1999 - 2000	ABS	●	●	●	●	○
MPV (Europe/General)	2. 5L	GY	1999 - 2000	ABS/TCS	●	●	●	●	○
MPV (Europe/General)	2. 5L	GY	1999 - 2000	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x00C5 0x00C6
MPV (Europe/General)	3. 0L	AJ	2002	ABS/TCS	●	●	●	●	○
MPV (Europe/General)	3. 0L	AJ	2002	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MPV (Europe/General)	3. 0L	AJ	2002	TCM	●	●	●	●	○
MPV (JPN/General)	2. 0L	FS	1999	ABS	●	●	●	●	○
MPV (JPN/General)	2. 0L	FS	1999	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MPV (JPN/General)	2. 3L	L3	2002 - 2004	ABS/TCS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MPV (JPN/General)	2. 3L	L3	2002 - 2004	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x00C5 0x00C6
MPV (JPN/General)	2. 5L	GY	1999	ABS	●	●	●	●	○
MPV (JPN/General)	2. 5L	GY	1999	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x00C5 0x00C6
MPV (JPN/General)	3. 0L	AJ	2002 - 2004	ABS/TCS	●	●	●	●	○
MPV (JPN/General)	3. 0L	AJ	2002 - 2004	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MPV (JPN/General)	3. 0L	AJ	2002 - 2004	TCM	●	●	●	●	○
MPV (North America / General)	2. 5L	GY	2000 - 2001	ABS/TCS	●	●	●	●	○
MPV (North America / General)	2. 5L	GY	2000 - 2001	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x00C5 0x00C6
MPV (North America / General)	3. 0L	AJ	2002 - 2006	ABS/TCS	●	●	●	●	○
MPV (North America / General)	3. 0L	AJ	2002 - 2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x00C6
MPV (North America / General)	3. 0L	AJ	2002 - 2006	TCM	●	●	●	●	0x00C5
MPV (North America / General)	3. 0L	AJ	2004 - 2006	RCM	●	●	●	●	0x006D
MPV (North America / General)	3. 0L	JE	1997 - 1999	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MPV / Mazda8 (JPN/General)	2. 3L	L3	2006	IC	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 3L	L3	2006 - 2013	4X4	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 3L	L3	2006 - 2013	ABS	●	●	●	●	0x0008
MPV / Mazda8 (JPN/General)	2. 3L	L3	2006 - 2013	AM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 3L	L3	2006 - 2013	GEM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 3L	L3	2006 - 2013	HCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 3L	L3	2006 - 2013	ICCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 3L	L3	2006 - 2013	LCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 3L	L3	2006 - 2013	LPSDM	●	●	●	●	0x0022
MPV / Mazda8 (JPN/General)	2. 3L	L3	2006 - 2013	LTM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 3L	L3	2006 - 2013	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MPV / Mazda8 (JPN/General)	2. 3L	L3	2006 - 2013	RCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 3L	L3	2006 - 2013	RKE	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 3L	L3	2006 - 2013	RPSDM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 3L	L3	2006 - 2013	TCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	4X4	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	ABS	●	●	●	●	0x0008
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	AM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	GEM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	HCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	IC	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	ICCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	LCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	LPSDM	●	●	●	●	0x0022
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	LTM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	RCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	RKE	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	RPSDM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 3L	L3_T	2006	TCM	●	●	●	○	○
MPV / Mazda8 (JPN/General)	2. 5L	L5	2012	ABS	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 5L	L5	2012	AM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 5L	L5	2012	GEM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 5L	L5	2012	HCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 5L	L5	2012	ICCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 5L	L5	2012	LCM	●	●	●	●	0x0021
MPV / Mazda8 (JPN/General)	2. 5L	L5	2012	LPSDM	●	●	●	●	0x0022
MPV / Mazda8 (JPN/General)	2. 5L	L5	2012	LTM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 5L	L5	2012	RCM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 5L	L5	2012	RKE	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 5L	L5	2012	RPSDM	●	●	●	●	○
MPV / Mazda8 (JPN/General)	2. 5L	L5	2012	TCM	●	●	●	●	○
MX-5	1. 6L	B6	2000	ABS/TCS	●	●	●	●	○
MX-5	1. 6L	B6	2000	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MX-5	1. 8L	BP	2000	ABS/TCS	●	●	●	●	○
MX-5	1. 8L	BP	2000	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MX-5 (Europe / General Specs.)	1. 8L	L8	2005	TCM	●	●	●	●	○
MX-5 (Europe / General Specs.)	1. 8L	L8	2005 - 2008	ABS	●	●	●	●	○
MX-5 (Europe / General Specs.)	1. 8L	L8	2005 - 2008	IC	●	●	●	●	○
MX-5 (Europe / General Specs.)	1. 8L	L8	2005 - 2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MX-5 (Europe / General Specs.)	1. 8L	L8	2005 - 2008	RCM	●	●	●	●	○
MX-5 (Europe / General Specs.)	1. 8L	L8	2005 - 2008	RHT	●	●	●	●	○
MX-5 (Europe / General Specs.)	1. 8L	L8	2005 - 2008	RKE	●	●	●	●	○
MX-5 (Europe / General Specs.)	2. 0L	LF	2005 - 2008	ABS	●	●	●	●	○
MX-5 (Europe / General Specs.)	2. 0L	LF	2005 - 2008	IC	●	●	●	●	○
MX-5 (Europe / General Specs.)	2. 0L	LF	2005 - 2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MX-5 (Europe / General Specs.)	2. 0L	LF	2005 - 2008	RCM	●	●	●	●	○
MX-5 (Europe / General Specs.)	2. 0L	LF	2005 - 2008	RHT	●	●	●	●	○
MX-5 (Europe / General Specs.)	2. 0L	LF	2005 - 2008	RKE	●	●	●	●	○
MX-5 (Europe / General Specs.)	2. 0L	LF	2005 - 2008	TCM	●	●	●	●	○
MX-5 (North America / General Specs.)	2. 0L	LF	2006 - Other	ABS	●	●	●	●	0x0005

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MX-5 (North America / General Specs.)	2.0L	LF	2006 - Other	IC	●	●	●	●	0x0005
MX-5 (North America / General Specs.)	2.0L	LF	2006 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MX-5 (North America / General Specs.)	2.0L	LF	2006 - Other	RCM	●	●	●	●	0x0005
MX-5 (North America / General Specs.)	2.0L	LF	2006 - Other	RKE	●	●	●	●	0x0005
MX-5 (North America / General Specs.)	2.0L	LF	2006 - Other	TCM	●	●	●	●	○
MX-5 (North America / General Specs.)	2.0L	LF	2007 - 2010	RHT	●	●	●	●	○
MX-5 MIATA	1.8L	BP	1997 - 2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MX-5 MIATA	1.8L	BP	2001 - 2005	ABS/TCS	●	●	●	●	○
MX-5 MIATA	1.8L	BP Turbo	2004	ABS/TCS	●	●	●	●	○
MX-5 MIATA	1.8L	BP Turbo	2004	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Millenia	2.3L	KJ	1997 - 2001	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Millenia	2.3L	KJ	2000 - 2001	ABS/TCS	●	●	●	●	○
Millenia	2.5L	KL	1997 - 2001	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Millenia	2.5L	KL	2000 - 2001	ABS/TCS	●	●	●	●	○
PREMACY	1.8L	FP	1999	ABS	●	●	●	●	○
PREMACY	1.8L	FP	2000	ABS/TCS	●	●	●	●	○
PREMACY	1.8L	FP	2000	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
PREMACY	2.0L	FS	2001	ABS	●	●	●	●	○
PREMACY	2.0L	FS	2001	ABS/TCS	●	●	●	●	○
PREMACY	2.0L	FS	2001	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
PREMACY	2.0L	RF-T	1999 - 2000	ABS	●	●	●	●	○
PREMACY	2.0L	RF-T	1999 - 2003	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
PREMACY	2.0L	RF-T	2000 - 2003	ABS/TCS	●	●	●	●	○
PREMACY / IXION	1.8L	FP	1999	ABS	●	●	●	●	○
PREMACY / IXION	1.8L	FP	1999 - 2002	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
PREMACY / IXION	1.8L	FP	2002	ABS/TCS	●	●	●	●	○
PREMACY / IXION	1.8L	FP_DE	1999	ABS	●	●	●	●	○
PREMACY / IXION	1.8L	FP_DE	1999	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
PREMACY / IXION	2.0L	FS	2001	ABS/TCS	●	●	●	●	○
PREMACY / IXION	2.0L	FS	2001	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
PREMACY / IXION	2.0L	RF-T	1999	ABS	●	●	●	●	○
PREMACY / IXION	2.0L	RF-T	1999	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
PREMACY / MAZDA5	1.6L	Y6	0ther	4X4	●	●	●	●	○
PREMACY / MAZDA5	1.6L	Y6	0ther	ABS	●	●	●	●	○
PREMACY / MAZDA5	1.6L	Y6	0ther	ACU	●	●	●	●	○
PREMACY / MAZDA5	1.6L	Y6	0ther	BCM/GEM	●	●	●	●	0x0120
PREMACY / MAZDA5	1.6L	Y6	0ther	EATC	●	●	●	●	0x0020
PREMACY / MAZDA5	1.6L	Y6	0ther	EPS	●	●	●	●	○
PREMACY / MAZDA5	1.6L	Y6	0ther	IC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
PREMACY / MAZDA5	1. 6L	Y6	0ther	LPSDM	●	●	●	●	0x0022
PREMACY / MAZDA5	1. 6L	Y6	0ther	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
PREMACY / MAZDA5	1. 6L	Y6	0ther	RCM	●	●	●	●	○
PREMACY / MAZDA5	1. 6L	Y6	0ther	RKE	●	●	●	●	○
PREMACY / MAZDA5	1. 6L	Y6	0ther	RPSDM	●	●	●	●	○
PREMACY / MAZDA5	1. 6L	Y6	0ther	TCM	●	●	●	●	○
PREMACY / MAZDA5	1. 8L	L8	0ther	ABS	●	●	●	●	○
PREMACY / MAZDA5	1. 8L	L8	0ther	ACU	●	●	●	●	○
PREMACY / MAZDA5	1. 8L	L8	0ther	BCM/GEM	●	●	●	●	○
PREMACY / MAZDA5	1. 8L	L8	0ther	EATC	●	●	●	●	○
PREMACY / MAZDA5	1. 8L	L8	0ther	EPS	●	●	●	●	○
PREMACY / MAZDA5	1. 8L	L8	0ther	IC	●	●	●	●	○
PREMACY / MAZDA5	1. 8L	L8	0ther	LPSDM	●	●	●	●	○
PREMACY / MAZDA5	1. 8L	L8	0ther	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
PREMACY / MAZDA5	1. 8L	L8	0ther	RCM	●	●	●	●	○
PREMACY / MAZDA5	1. 8L	L8	0ther	RKE	●	●	●	●	○
PREMACY / MAZDA5	1. 8L	L8	0ther	RPSDM	●	●	●	●	○
PREMACY / MAZDA5	2. 0L	LF	0ther	4X4	●	●	●	●	○
PREMACY / MAZDA5	2. 0L	LF	0ther	ABS	●	●	●	●	○
PREMACY / MAZDA5	2. 0L	LF	0ther	ACU	●	●	●	●	○
PREMACY / MAZDA5	2. 0L	LF	0ther	BCM/GEM	●	●	●	●	0x0120
PREMACY / MAZDA5	2. 0L	LF	0ther	EATC	●	●	●	●	0x0020
PREMACY / MAZDA5	2. 0L	LF	0ther	EPS	●	●	●	●	○
PREMACY / MAZDA5	2. 0L	LF	0ther	IC	●	●	●	●	○
PREMACY / MAZDA5	2. 0L	LF	0ther	LPSDM	●	●	●	●	0x0022
PREMACY / MAZDA5	2. 0L	LF	0ther	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
PREMACY / MAZDA5	2. 0L	LF	0ther	RCM	●	●	●	●	○
PREMACY / MAZDA5	2. 0L	LF	0ther	RKE	●	●	●	●	○
PREMACY / MAZDA5	2. 0L	LF	0ther	RPSDM	●	●	●	●	○
PREMACY / MAZDA5	2. 0L	LF	0ther	TCM	●	●	●	●	○
PREMACY / MAZDA5	2. 0L	PE	0ther	ABS	●	●	●	●	○
PREMACY / MAZDA5	2. 0L	PE	0ther	ACU	●	●	●	●	○
PREMACY / MAZDA5	2. 0L	PE	0ther	BCM/GEM	●	●	●	●	○
PREMACY / MAZDA5	2. 0L	PE	0ther	EATC	●	●	●	●	○
PREMACY / MAZDA5	2. 0L	PE	0ther	EPS	●	●	●	●	○
PREMACY / MAZDA5	2. 0L	PE	0ther	IC	●	●	●	●	○
PREMACY / MAZDA5	2. 0L	PE	0ther	LPSDM	●	●	●	●	○
PREMACY / MAZDA5	2. 0L	PE	0ther	RCM	●	●	●	●	○
PREMACY / MAZDA5	2. 0L	PE	0ther	RKE	●	●	●	●	○
PREMACY / MAZDA5	2. 0L	PE	0ther	RPSDM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
PREMACY / MAZDA5	2. 5L	L5	0ther	ABS	●	●	●	●	0x001E
PREMACY / MAZDA5	2. 5L	L5	0ther	ACU	●	●	●	●	○
PREMACY / MAZDA5	2. 5L	L5	0ther	BCM/GEM	●	●	●	●	0x0120
PREMACY / MAZDA5	2. 5L	L5	0ther	EATC	●	●	●	●	0x0020
PREMACY / MAZDA5	2. 5L	L5	0ther	EPS	●	●	●	●	○
PREMACY / MAZDA5	2. 5L	L5	0ther	IC	●	●	●	●	0x001A
PREMACY / MAZDA5	2. 5L	L5	0ther	LPSDM	●	●	●	●	0x0022
PREMACY / MAZDA5	2. 5L	L5	0ther	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0201
PREMACY / MAZDA5	2. 5L	L5	0ther	RCM	●	●	●	●	0x006D
PREMACY / MAZDA5	2. 5L	L5	0ther	RKE	●	●	●	●	○
PREMACY / MAZDA5	2. 5L	L5	0ther	RPSDM	●	●	●	●	○
PREMACY / MAZDA5	2. 5L	L5	0ther	TCM	●	●	●	○	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2005 - 2007	4X4	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2005 - 2007	ABS	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2005 - 2007	EATC	●	●	●	●	0x0020
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2005 - 2007	EPS	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2005 - 2007	GEM	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2005 - 2007	IC	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2005 - 2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2005 - 2007	RCM	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2005 - 2007	RKE	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2006 - 2007	LPSDM	●	●	●	●	0x0022
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2006 - 2007	RPSDM	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 0L	LF	2006 - 2007	TCM	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 3L	L3	2005 - 2007	ABS	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 3L	L3	2005 - 2007	EATC	●	●	●	●	0x0020
PREMACY / MAZDA5 (Japan / General Specs.)	2. 3L	L3	2005 - 2007	EPS	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 3L	L3	2005 - 2007	GEM	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 3L	L3	2005 - 2007	IC	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 3L	L3	2005 - 2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
PREMACY / MAZDA5 (Japan / General Specs.)	2. 3L	L3	2005 - 2007	RCM	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 3L	L3	2005 - 2007	RKE	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 3L	L3	2007	LPSDM	●	●	●	●	0x0022
PREMACY / MAZDA5 (Japan / General Specs.)	2. 3L	L3	2007	RPSDM	●	●	●	●	○
PREMACY / MAZDA5 (Japan / General Specs.)	2. 3L	L3	2007	TCM	●	●	●	●	○
PROBE / MX-6	2. 0L	0ther	1996 - 1997	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
PROBE / MX-6	2. 5L	KL	1996 - 1997	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
PROCEED	2. 5L	G5	1996	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
PROCEED	2. 6L	G6	1996	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
PROTEGE	1. 5L	Z5	1997 - 1998	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
PROTEGE	1. 6L	ZM	1999 - 2001	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
PROTEGE	1. 6L	ZM	2000 - 2001	ABS/TCS	●	●	●	●	○
PROTEGE	1. 8L	BP	1997 - 1998	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
PROTEGE	1. 8L	FP	1999 - 2000	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
PROTEGE	1. 8L	FP	2000	ABS/TCS	●	●	●	●	○
PROTEGE	2. 0L	FS	2001 - 2003	ABS/TCS	●	●	●	●	○
PROTEGE	2. 0L	FS	2001 - 2003	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
PROTEGE	2. 0L	FS_T	2003	ABS/TCS	●	●	●	●	○
PROTEGE	2. 0L	FS_T	2003	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x00C6
ROADSTER / MX-5	1. 6L	B6	2000	ABS	●	●	●	●	○
ROADSTER / MX-5	1. 6L	B6	2002	ABS/TCS	●	●	●	●	○
ROADSTER / MX-5	1. 6L	B6	2002	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
ROADSTER / MX-5	1. 8L	BP	2000	ABS	●	●	●	●	○
ROADSTER / MX-5	1. 8L	BP	2002	ABS/TCS	●	●	●	●	○
ROADSTER / MX-5	1. 8L	BP	2002	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
ROADSTER / MX-5	1. 8L	BP Turbo	2003	ABS/TCS	●	●	●	●	○
ROADSTER / MX-5	1. 8L	BP Turbo	2003	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
ROADSTER / MX-5	2. 0L	LF	2005 - 2008	ABS	●	●	●	●	○
ROADSTER / MX-5	2. 0L	LF	2005 - 2008	IC	●	●	●	●	○
ROADSTER / MX-5	2. 0L	LF	2005 - 2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
ROADSTER / MX-5	2. 0L	LF	2005 - 2008	RCM	●	●	●	●	○
ROADSTER / MX-5	2. 0L	LF	2005 - 2008	RHT	●	●	●	●	○
ROADSTER / MX-5	2. 0L	LF	2005 - 2008	RKE	●	●	●	●	○
ROADSTER / MX-5	2. 0L	LF	2005 - 2008	TCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	ABS	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	ABS/TCS	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	EPS	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	IC	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	LCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	RCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	RKE	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	SASM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B	2008	TCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	ABS/TCS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	EPS	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	IC	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	RCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	RKE	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	SASM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP High-Power	2003	TCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	ABS/TCS	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	EPS	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	IC	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	RCM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	RKE	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	SASM	●	●	●	●	○
RX-8 (Europe / General / Japan Specs.)	654x2cc	13B-MSP Standard Power	2003	TCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	ABS	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	ABS/TCS	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	EPS	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	IC	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	LCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	RCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	RKE	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	SASM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	TCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B	2009 - 2010	TPM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	ABS/TCS	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	EPS	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	IC	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	RCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	RKE	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	SASM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2004 - 2008	TPM	●	●	●	○	○
RX-8 (North America Specs)	654x2cc	13B-MSP High-Power	2006 - 2008	TCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	ABS/TCS	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	EPS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	IC	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	RCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	RKE	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	SASM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	TCM	●	●	●	●	○
RX-8 (North America Specs)	654x2cc	13B-MSP Standard Power	2004 - 2005	TPM	●	●	●	○	○
Ranger / Courier / Mazda B Series /Bravo	4.0L	V6 SOHC	2003	ABS/TCS	●	●	●	●	0x0008
Ranger / Courier / Mazda B Series /Bravo	4.0L	V6 SOHC	2003	ESOF	●	●	●	●	○
Ranger / Courier / Mazda B Series /Bravo	4.0L	V6 SOHC	2003	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ABS	●	●	●	●	0x00CA
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ACM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	FCDIM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PAM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x00B0 0x00B3 0x00B9 0x00C1 0x00E7
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	RCM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	SRM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TBM	●	●	●	○	0x00D1 0x00D2 0x00D3
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE / I4	2004 - 2007	GEM	●	●	●	●	0x000A 0x0203
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE / I4	2004 - 2009	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE / I4	2004 - 2011	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE / I4	2004 - 2011	IC	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE / I4	2004 - 2011	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE / I4	2004 - 2011	RCM	●	●	●	●	0x000C
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE / I4	2005	TPM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE / I4	2007 - 2011	OCSM	●	●	●	○	0x000C
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE / I4	2007 - 2011	SDARS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE / I4	2008 - 2011	GEM / SJB	●	●	●	●	0x000A 0x0042

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2010 - 2011	ABS	●	●	●	●	0x0008 0x0012
Ranger / Mazda B-Series / Courier	2. 3L	OHC	1995 - 1997	ABS/TCS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	OHC	1995 - 1997	GEM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	OHC	1995 - 1997	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Ranger / Mazda B-Series / Courier	2. 3L	OHC	1995 - 1997	RAP	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	OHC	1996 - 1997	IAB	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	Other	1996 - 2003	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	2. 3L	Other	1996 - 2003	GEM	●	●	●	●	0x0203
Ranger / Mazda B-Series / Courier	2. 3L	Other	1996 - 2003	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0010 0x0028 0x0031 0x0033
Ranger / Mazda B-Series / Courier	2. 3L	Other	2001	PATS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	Other	2001 - 2003	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	Other	2001 - 2003	RAP	●	●	●	●	0x000A 0x000F
Ranger / Mazda B-Series / Courier	2. 3L	Other	2001 - 2003	RCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	ABS	●	●	●	●	0x00CA
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	ACM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	BCMii	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	DDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	FCDIM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	HVAC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	IPC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	PAM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	PDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	RCM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	SRM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	TBM	●	●	●	○	0x00D1 0x00D2 0x00D3
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	TCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	TRM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 5L	Other	1998	IAB	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 5L	Other	1998 - 2001	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	2. 5L	Other	1998 - 2001	GEM	●	●	●	●	0x0203
Ranger / Mazda B-Series / Courier	2. 5L	Other	1998 - 2001	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033
Ranger / Mazda B-Series / Courier	2. 5L	Other	1998 - 2001	RAP	●	●	●	●	0x000A
Ranger / Mazda B-Series / Courier	2. 5L	Other	1999 - 2001	PATS	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	2. 5L	Other	1999 - 2001	RCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Ranger / Mazda B-Series / Courier	2. 5L	Other	2001	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 8L	Other	2001	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 8L	Other	2001	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	2. 8L	Other	2001	GEM	●	●	●	●	0x0203
Ranger / Mazda B-Series / Courier	2. 8L	Other	2001	PATS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 8L	Other	2001	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Ranger / Mazda B-Series / Courier	2. 8L	Other	2001	RAP	●	●	●	●	0x000A
Ranger / Mazda B-Series / Courier	2. 8L	Other	2001	RCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3. 0L	FFV	1999 - 2000	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	3. 0L	FFV	1999 - 2000	GEM	●	●	●	●	0x0203
Ranger / Mazda B-Series / Courier	3. 0L	FFV	1999 - 2000	PATS	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	3. 0L	FFV	1999 - 2000	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083
Ranger / Mazda B-Series / Courier	3. 0L	FFV	1999 - 2000	RAP	●	●	●	●	0x000A
Ranger / Mazda B-Series / Courier	3. 0L	FFV	1999 - 2000	RCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3. 0L	Other	1995 - 2003	RAP	●	●	●	●	0x000A
Ranger / Mazda B-Series / Courier	3. 0L	Other	1995 - 2007	GEM	●	●	●	●	0x0203 0x000A
Ranger / Mazda B-Series / Courier	3. 0L	Other	1995 - 2008	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	3. 0L	Other	1995 - 2008	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0009
Ranger / Mazda B-Series / Courier	3. 0L	Other	1996 - 1998	IAB	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3. 0L	Other	1999 - 2008	RCM	●	●	●	●	0x000C
Ranger / Mazda B-Series / Courier	3. 0L	Other	2000 - 2001	PATS	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	3. 0L	Other	2001 - 2008	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3. 0L	Other	2004 - 2008	IC	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	3. 0L	Other	2005	TPM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3. 0L	Other	2007 - 2008	OCSM	●	●	●	○	0x000C
Ranger / Mazda B-Series / Courier	3. 0L	Other	2007 - 2008	SDARS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3. 0L	Other	2008	GEM / SJB	●	●	●	●	0x000A 0x0042
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	ABS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	ACM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	FCDIM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	PAM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	RCM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	SRM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	TBM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	TCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4. 0L	Other	1995 - 2002	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	4. 0L	Other	1995 - 2002	GEM	●	●	●	●	0x0203
Ranger / Mazda B-Series / Courier	4. 0L	Other	1995 - 2002	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0009
Ranger / Mazda B-Series / Courier	4. 0L	Other	1995 - 2002	RAP	●	●	●	●	0x000A
Ranger / Mazda B-Series / Courier	4. 0L	Other	1996 - 1998	IAB	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4. 0L	Other	1999 - 2001	PATS	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	4. 0L	Other	1999 - 2002	RCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4. 0L	Other	2001 - 2002	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4. 0L	V6 SOHC	2003	RAP	●	●	●	●	0x000A 0x000F
Ranger / Mazda B-Series / Courier	4. 0L	V6 SOHC	2003 - 2007	GEM	●	●	●	●	0x0203 0x000A
Ranger / Mazda B-Series / Courier	4. 0L	V6 SOHC	2003 - 2009	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	4. 0L	V6 SOHC	2003 - 2011	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4. 0L	V6 SOHC	2003 - 2011	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083
Ranger / Mazda B-Series / Courier	4. 0L	V6 SOHC	2003 - 2011	RCM	●	●	●	●	0x000C
Ranger / Mazda B-Series / Courier	4. 0L	V6 SOHC	2004 - 2011	IC	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	4. 0L	V6 SOHC	2005	TPM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4. 0L	V6 SOHC	2007 - 2011	OCSM	●	●	●	○	0x000C
Ranger / Mazda B-Series / Courier	4. 0L	V6 SOHC	2007 - 2011	SDARS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4. 0L	V6 SOHC	2008 - 2011	GEM / SJB	●	●	●	●	0x000A 0x0042
Ranger / Mazda B-Series / Courier	4. 0L	V6 SOHC	2010 - 2011	ABS	●	●	●	●	0x0008 0x0012
Ranger / Mazda B-Series / Courier	Other	Other	2004	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2004	ABS/TCS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2004	GEM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2004	IC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2004	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Ranger / Mazda B-Series / Courier	Other	Other	2004 - 2011	RCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	ABS	●	●	●	●	0x00CA
Ranger / Mazda B-Series / Courier	Other	Other	2011	ACM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	BCMii	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	DDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	FCDIM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Ranger / Mazda B-Series / Courier	Other	Other	2011	HVAC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	IPC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	PAM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	PDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	SRM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	TBM	●	●	●	○	0x00D1 0x00D2 0x00D3
Ranger / Mazda B-Series / Courier	Other	Other	2011	TCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	TRM	●	●	●	●	○
SCRUM	660cc	F6A	1999 - Other	ABS	●	●	●	●	○
SCRUM	660cc	F6A	1999 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
SCRUM	660cc	F6A	1999 - Other	RCM	●	●	●	●	○
SCRUM	660cc	F6A-T	1999 - Other	ABS	●	●	●	●	○
SCRUM	660cc	F6A-T	1999 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
SCRUM	660cc	F6A-T	1999 - Other	RCM	●	●	●	●	○
SCRUM	660cc	F6A-T	1999 - Other	TCM	●	●	●	●	○
SCRUM	660cc	K6A	2001 - Other	ABS	●	●	●	●	○
SCRUM	660cc	K6A	2001 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
SCRUM	660cc	K6A	2001 - Other	RCM	●	●	●	●	○
SCRUM	660cc	K6A_T	2001 - Other	ABS	●	●	●	●	○
SCRUM	660cc	K6A_T	2001 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
SCRUM	660cc	K6A_T	2001 - Other	RCM	●	●	●	●	○
SCRUM	660cc	K6A_T	2001 - Other	TCM	●	●	●	●	○
SCRUM (2003 / 9 -)	660cc	K6A	2003 - Other	ABS	●	●	●	●	○
SCRUM (2003 / 9 -)	660cc	K6A	2003 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
SCRUM (2003 / 9 -)	660cc	K6A	2003 - Other	RCM	●	●	●	●	○
SCRUM (2003 / 9 -)	660cc	K6A_T	2003 - Other	ABS	●	●	●	●	○
SCRUM (2003 / 9 -)	660cc	K6A_T	2003 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
SCRUM (2003 / 9 -)	660cc	K6A_T	2003 - Other	RCM	●	●	●	●	○
SCRUM (2003 / 9 -)	660cc	K6A_T	2003 - Other	TCM	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A	2005	ABS	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A	2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A	2005	RCM	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A_T	2005	ABS	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A_T	2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A_T	2005	RCM	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A_T	2005	TCM	●	●	●	●	○
SENTIA	3. 0L	JE	1997	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
SENTIA	3. 0L	JE_HO	1997	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
TITAN DASH	2. 0L	FE	2000 - 2002	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
TITAN DASH	2. 0L	FE	2002	TCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
TITAN DASH	2. 0L	FE LPG	2002	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
TITAN DASH	2. 0L	FE LPG	2002	TCM	●	●	●	●	○
TITAN DASH	2. 0L	RF-T	2004	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
TITAN DASH	2. 0L	RF-T	2004	TCM	●	●	●	●	○
VX-1	1. 4L	K14B	0ther	ABS	●	●	●	○	○
VX-1	1. 4L	K14B	0ther	BCM#1	●	●	●	●	○
XEDOS9	2. 0L	KF	1996	ABS	●	●	●	●	○
XEDOS9	2. 3L	KJ	1996 - 1998	ABS	●	●	●	●	○
XEDOS9	2. 5L	KL	1996 - 2000	ABS	●	●	●	●	○
XEDOS9	2. 5L	KL	2000	ABS/TCS	●	●	●	●	○
XEDOS9	2. 5L	KL	2000	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083

Special Function

Index	Specil Function Name	Index	Specil Function Name
0005	Programmable Module Installation	0006	Module Reprogramming
0007	Programmable Parameters	0008	ABS Service Bleed
0009	PATS Functions	000A	Remote Keyless Entry
000B	G Sensor Calibration	000C	Passenger System Reset
000D	Neutral Position Setting	000E	Ride Height Calibration
000F	Factory Keyless Entry Code	0010	Stop Use of Transmission Adaptive
0011	Power Seat Calibration	0012	IVD Initialization Sequence
0013	Pneumatic Test	0014	Accurate Trim Test
0015	Passenger Zero Seat Weight Test	0016	Microphone Test
0017	Audio Speaker Walkaround Test	0018	Infotainment Display Test
0019	Tones Test	001A	TPMS Functions
001B	Zero Speed Test	001C	Rear Tones Test
001D	Monotones Test	001E	Sensor Initialization
001F	EPB calibration.	0020	EATC Operation Check
0021	Rain Sensor Reset	0022	LPSDM and RPSDM Service Function
0023	Power Balance	0024	EVAP Test
0025	Reset PCM KAM	0026	OBDII Modes
0027	Clear Transmission Adaptive Learning	0028	Clear Transmission Adaptive Tables
0029	Configure All Three Sensors Together.	002A	Configure Both the Yaw Rate Sensor and the Lateral Acceleration Sensors.
002B	Configure the lateral acceleration sensor.	002C	Configure the pressure sensor.
002D	FFH SelfTest and Prefill Utility	002E	FFH Start Heater Utility
002F	FFH Unlock Utility	0030	Auxiliary vehicle ID reset
0031	Halt Transmission Adaptive Learning	0032	Headlamp Alignment
0033	Resume Transmission Adaptive Learning	0034	Resume Transmission Adaptive Tables
0035	Keyfob Training	0036	Transmission
0037	Transmission Learning	0038	Transmission Solenoid Body IDN
0039	VSM Service Functions	003A	A/C Test
003B	ACM	003C	ACM Security Bypass Test
003D	Air/Fuel Learning	003E	AM Antenna Reception Sensitivity Test
003F	ASM Service Functions	0040	audio configuration
0041	Auto Leveling Sensor Re-zero Procedure	0042	Tire Pressure Monitoring System
0043	BSM Radar Test	0044	Button Test
0045	CAN Bus Fault Test	0046	CCM Calibration
0047	Clear EGR Adaptive Tables	0048	Clear Fuel Injector&HP Pump Adaptive Table
0050	Clearing of Learning Value	0051	Component/Parameter Reset
0053	Configure the steering angle sensor	0054	Configure the yaw rate sensor
0055	DATA Reset	0056	DPF
0057	DPF Component Parameter	0058	DPF Manual Regeneration
0059	DPF Parameter Reset	005A	Electronic Throttle Control
005B	EPS Steering Angle Calibration	005C	ETB/EGR Initialization
005D	FACM	005E	FFH Operation Check
005F	Gauge Test	0060	ICCM Aiming Adjustment
0061	Illumination Test	0062	Input and Data Test
0063	Interior Scan Test	0064	Keyless Entry Keypad Code Reset
0065	Learning	0066	Misfire Check
0067	Misfire Monitor Neutral Profile Correction	0068	Module Identification
0069	Multifunction Output Test	006A	Network Test
006B	New FACM	006C	Parking Aid Switch Test
006D	Passenger Seat Weight Sensor ReZero	006E	Rebalance
006F	Reset the Knock Sensor Learned Values	0070	Reset Transmission Tables
0071	Resetting adaptive values	0072	RVM Aiming
0074	Service Routine	0075	Specil Ignition ON
0076	Steering angle sensor calibration	0077	Supplemental Heater test

Index	Specil Function Name	Index	Specil Function Name
0080	Mode 1 Powertrain Data	0081	Mode 6 On-Board Test Results
0082	Mode 8 - On-Board device control	0083	Mode 9 - Vehicle Information
0084	OBD Drive Cycle	0090	Diesel Particulate Filter Static Regeneration
0091	DPF Regeneration Suspension	0092	Fuel Injector Correction Factors
0093	IQA	0094	Refill the FAT.
0095	Relearn Vehicle Data	0096	Reset Charge Air Cooler Bypass Valve Position Offset.
0097	Reset the Cooling Fan Motor Learned Values	0098	Reset the Diesel Particulate Filter Learned Values
0099	Reset the Exhaust Gas Recirculation Valve Learned Values	009A	Reset the Intake Air Throttle Valve Learned Values
009B	Reset / Clear Specified Function	009C	SCR Dosing Measurement Test
009D	SCR Parameter Reset	009E	SCR System Emptying
009F	SCR System Refill Activation	00A0	SCR Visual Leak Check
00A1	System Prime	00A2	WIF Reset
00A3	DPF Reset	00A4	Enter the Fuel Injector Default Count Value
00A5	Clutch Switch Learn	00A6	Engine Oil Quality History
00A7	Fuel Injection Pump Learn	00A8	Fuel Injector Pilot Correction Learn
00A9	Fuel System Leak Test	00AA	Initialize the Exhaust Gas Related Component.
00AB	Reset Differential Pressure Sensor Learned	00AC	Reset KAM
00AD	Reset MAF Sensor Drift.	00AE	Reset MAF Sensor Offset.
00AF	Reset the air conditioning compressor learned values.	00B0	Reset the Diesel Particulate Filter Differential Pressure Sensor Learned Values
00B1	Reset the Exhaust Gas Temperature Value	00B2	Reset the Fuel Injection Pump Learned Values
00B3	Reset the Fuel Injector Learned Values	00B4	Reset the Fuel Metering Valve Learned Values
00B5	Reset the Fuel Pressure Relief Valve Open Count Learned Value	00B6	Reset the Fuel Pressure Relief Valve Open Duration Learned Value
00B7	Reset the Fuel Rail Pressure Sensor Learned	00B8	Reset the Heated Exhaust Gas Oxygen Sensor Learned
00B9	Reset the Mass Air Flow Sensor Learned Values	00BA	Reset the Neutral Gear Position Learned Value
00BB	Reset the oil change indicator.	00BC	Reset the Powertrain Control Module Learned Values
00BD	Reset the Turbocharger Learned Values.	00BE	Reset the Turbocharger Variable Vane Actuator Learned
00BF	Reset the Turbocharger Variable Vane Position Sensor Learned Values	00C0	Reset the Vehicle Speed Limit
00C1	Reset the water in fuel Warning Indicator.	00C2	rpm Controller
00C3	Stop-Start Activation	00C4	Speed Limiting
00C5	TR sensor	00C6	Transmission Fluid Level Test
00C7	Automatic Transmission PRNDL Display Test	00C8	BSI Solenoid Test
00C9	Automatic Transmission Park Switch Test	00CA	ABS reset and configuration.
00CB	PDC Reset	00CC	Steering Wheel Position Sensor Calibration
00CD	Preliminary Checks	00CE	Reset TCM KAM
00CF	Fuel System Prime	00D0	Remote Start
00D1	TBM SIM RAV_ID	00D2	Reset TBM Password
00D3	TBM Transit Mode	00D4	CEI Lock Configuration
00D5	BMS Reset	00D6	Navigation
00D7	Calibrate Steering Angle Sensor	00D8	Configure the steering column assembly.
00D9	Configure the longitudinal acceleration sensor.	00DA	Configure the intermediate shaft.
00DB	Module Initialization	00DC	Pull Drift Compensation
00DD	Calibrate Longitudinal Acceleration Sensor	00DE	Inhibit longitudinal accelerometer monitoring
00DF	Pull Drift Compensation enable/disable	00E0	Straight Ahead Adaption Angle Reset
00E1	Steering Rack Limiter Configuration	00E2	Pressure Sensor Calibration
00E3	Reset Pressure Sensor Offset	00E4	Enable/Disable hill launch assist .
00E5	Camera Alignment	00E6	Shift fork system learn.
00E7	Reset the High Pressure Fuel System Learned	00E8	BleedMASTER
00E9	FCDIM Keycode Reset	00EA	Beltminder Enable/Disable
00EB	TPMS reset.	00EC	TPMS reset after ABS module replacement
00ED	Show GEM configuration	00EE	EPB
00EF	Clear crash data memory.	00F0	Passenger Airbag Deactivation Switch
00F1	Component checks	00F2	Driver's Seat Module
00F3	Assembly Check	00F4	Inclination Sensor Calibration
00F5	Maintenance mode	00F6	Static Apply

Index	Specil Function Name	Index	Specil Function Name
00F7	Clear stored clutch engagement point	00F8	Module Configuration
00F9	CCMii Sensor Alignment	00FA	Track Key Configuration
00FB	Driver Window Motor Test.	00FC	Passenger Window Motor Test
00FD	Clear Self-learning Data	00FE	RVC Configuration
0100	Disable GDM VIN	0101	WMM Calibration
0102	RCM	0103	Cooling Fan Test
0104	IAC System Test	0105	VCT System Test
0107	MAF Sensor / TP Sensor Dynamic Test	0108	ATC Barcode Entry
0109	ISM Configuration	010A	Valve Calibration
010B	TP Sweep Test	010C	ICP Sensor Test
010D	Oil Aeration Test	010E	Exhaust System Test
010F	MAF Sensor Contamination Test	0110	EGR System Flow Test
0111	Neutral Tow Function	0112	LIN New Module Initialization
0113	Tachometer	0114	Camshaft Position Reference Adaption Learn
0115	Powertrain Control Module Central Car Configuration Update	0116	Powertrain Control Module (PCM) One Touch Start Configuration
0117	TCM Adaptive Learning	0118	On-demand lock test routine
0119	Rear Brake Adjustment	011A	ACM Configuration
011B	BCMii	011C	Car Mod
011D	SPRM Configuration	011E	EPAS Configuration
011F	Learn the vehicle variant and VIN data	0120	Burglar Service Functions
0121	The removal and installation of the selector lever or the selector lever cable.	0122	Transmission fluid drain and refill.
0123	The installation of a new TCM.	0124	The installation of a new automatic transmission with a new TCM.
0125	The installation of a new automatic transmission with the original TCM.	0126	Reset the Transmission Control Module Learned Values
0127	Reset the Transmission Oil learned Values	0128	Transmission Range Sensor Learn
0129	Read the ECU serial number.	012A	RCM Calibration
012B	Reset maintenance lamp	012C	Special Ignition ON
012D	IC Service Functions	012E	A/F (Fuel Ratio)
012F	Reset Expansion ID	0130	Reset security ID
0131	Lockout Mode Reset	0132	Sensor Learn Routine
0133	Ambient Air Temp Sensor Configuration	0134	Touchscreen
0135	Variant and VIN Data Learning Procedure	0136	Neutral Position Learning
0137	Clear Grade Sensor Learning Value	0138	Clear Oil Pressure Sensor Learning Value
0139	Grade Sensor Learning	013A	Oil Pressure Sensor Learning
013B	Fuel System Vaporizer Prime	0201	Mazda Vehicle Check-up
0202	Spark Duration PIDs	0203	Windshield Wiper Test
0204	Rear Window Wiper Test	0205	Cooling System Degas
F001	Audio	F002	Battery saver
F003	Body Type	F004	Courtesy Lamp
F005	Door Trigger Disable Mode	F006	Body and Fuel Type
F007	Hazard Warning	F008	Horn Warning
F009	Master Door Trigger Disable Mode	F00A	Panic Alarm
F00B	Police Mode	F00C	Traction control system
F00D	Autolamp Off Setting	F00E	Autolamp On Setting
F00F	Police Speedometer Offset	F010	Cabin Temperature Sensor Calibration Factor
F011	Taxi Mode	F012	Low Coolant Warning
F013	Parking Brake Warning	F014	Headlamp Delay Door Open
F015	Headlamp Delay Ignition Off	F016	Headlamp Delay Remote Lock Pressed
F017	Dynamic Stability Control	F018	Hill Descent Control LED
F019	Brake System Configuration	F01A	BPM fitted
F01B	Camera fitted	F01C	Audio Interface Module
F01D	Sonar fitted	F01E	Navigation System
F01F	Parking Aid Module	F020	Odometer Write
F021	Subwoofer	F022	Driver Beltminder Status
F023	Alarm	F024	Audio Configure

Index	Specil Function Name	Index	Specil Function Name
F025	Autolocking While The Vehicle Is Moving	F026	Module Reset
F027	BeltMinder	F028	Electrical Auxiliary Heater Chimes
F029	Power Steering Status	F02A	Repeat flasher
F02B	Autolock/Relock Configuration Status	F02C	Autolocking Customer setting
F02D	Double Locking With REMOTE	F02E	Power Lock Configuration
F02F	Single Door Unlocking Using The REMOTE	F030	Tailgate Release REMOTE Button
F031	PAD Switch	F032	Speed Control
F033	Ambient Temperature Sensor Conformation	F034	Heated Screen(s) active during warm up
F035	Power Sunroof Or Taxi Meter Fitted	F036	Deflation Detection System
F037	Baseplate	F038	Select seat trim type.
F039	Select Vehicle Type	F03A	Repeat flasher
F03B	Internal Remote Receiver	F03C	Lock confirmation flash
F03D	Alarm system	F03E	Wash Fluid Sensor
F03F	Select Engine Type	F040	Reverse Warning Chime
F041	Easy Entry / Exit	F042	Daytime Running Lamps
F043	Turn Signal Warning Chime	F044	Autolock
F045	Horn Chirp	F046	Tire Size (rev / mile)
F047	TBM Transit Mode	F048	Perimeter Lighting
F049	Stop and taillamp outage configuration	F04A	Overspeed Warning Indicator
F04B	Autolock Configuration Status	F04C	Auto unlock
F04D	Language	F04E	Headlight Battery Saver Timeout
F04F	Heated Backlight	F050	Front Foglamps
F051	Headlamp Type	F052	Button Press Chime
F053	Not in Park Chime	F054	Oil Life
F055	Parking Brake Chime	F056	Central Unlock via Key Cylinder
F057	Two Stage Unlocking	F058	Power Door Lock Inhibit
F059	Perimeter Alarm	F05A	Satellite Digital Audio Receiver System
F05B	Autolamp	F05C	Fog Lamp
F05D	Passenger Beltminder Status	F05E	Keypad Configure
F05F	Remote Panic	F060	Remote Keyless Entry
F061	Remote open/close signal	F062	Cellular Phone Module
F063	Radio Clock	F064	Divider Bar\$I
F065	Welcome illumination	F066	Battery saver function
F067	Speedometer Accuracy Bias	F068	Dark car
F069	Horn Chirp Configuration Status	F06A	Smart Unlock
F06B	Fuel Economy Display Mode	F06C	Power Adjustable Pedals
F06D	Power Seat Recline	F06E	Fuel Gallon Configuration
F06F	Power Mirrors	F070	High cool blower voltage
F071	Outside Air Temperature	F072	Oil Life Status and Warning
F073	Telephone	F074	Driver Seat Recline Memory Function
F075	Pedal Memory Function	F076	Screen Display-Brand
F077	Flex Fuel	F078	APIM
F079	Steering wheel control	F07A	Auxiliary Jack
F07B	SWC POD type	F07C	Two-way front speakers
F07D	Two-way rear speakers	F07E	Trailer Brake Control Module
F07F	Family Entertainment System	F080	Mirror Turn Signals
F081	Vehicle Door Configuration	F082	Fuel Tank Configuration
F083	Fuel Tank Size	F084	Rear Tire Size (Rev/Mile)
F085	Trim Switch Inhibit	F086	Fob panic activation
F087	Tilt-Telescope Steering Wheel	F088	Autolamp Delay Time
F089	Global Close	F08A	Global Open
F08B	Auto Lock	F08C	Security Horn Alarm
F08D	Illuminated Exit	F08E	ABS Tire Warning
F08F	Sliding Door Caution	F090	Smart Lock
F091	Horn	F092	Outside Air Temperature Display
F093	Answer Back Buzzer	F094	Automatic Locks
F095	Card Key Battery Low Warning	F096	Two(2) stage door unlocking by request switch.

Index	Specil Function Name	Index	Specil Function Name
F097	Two(2) stage door unlocking by transmitter.	F098	Auto relock timer (with AKE)
F099	(PCM) Oil Life Used	F09A	GCC vehicle
F09B	Accessory Protocol Interface Module	F09C	Tuner setting
F09D	Smart Rear Wipe	F09E	Drip Wipe
F09F	Safety Belt Warning	F0A0	Hazzard Warning Switch
F0A1	Global Closing With REMOTE	F0A2	Tailgate release available when ignition on
F0A3	Select the type of liftgate striker plate fitted	F0A4	Reset Alarm System Via Key
F0A5	One-touch-up window function fitted	F0A6	Auto high beam sensitivity
F0A7	Unlock sequence	F0A8	Daytime dimming rate setting
F0A9	Fuel logic	F0AA	Fuel Meter Response Setting
F0AB	Voice Recognition Module	F0AC	Door ajar
F0AD	Cargo Unlock Setting	F0AE	General Unlock Setting
F0AF	Rear Door Reverse Cycling	F0B0	Mirror Puddle Lamps
F0B1	RHT Buzzer		