

How to read this list:	
Mark	Description
X	Function is supported.
*	Function is added or developed newly

Function List													
Automaker:				OPEL									
Software Version:				V7.21									
Automaker	Region	Year	Model	Vehicle Type	ECU Type	System	ECU Supplier	Sys. Info.	Read Code	Clear Code	Data Stream	Actuations	Special Functions
OPEL	EUROPE	2012	Astra-J		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2012	Astra-J		Engine Control Module	A13DTE		X	X	X	X	X	APP Learn Clutch Pedal Position Learn DPF Pressure Sensor Learn Exhaust Gas Temperature Sensor Learn H02S Learn MAF Sensor Learn EGR Valve Learn Fuel Rail Pressure Sensor or Fuel Rail Learn Crankshaft Position Reluctor Wheel Learn Turbocharger Learn Flywheel Learn DPF Reset Catalyst Reset Engine Oil Life Reset Glow Plug Control Module Reset Regeneration Diesel Particulate Filter
OPEL	EUROPE	2012	Astra-J		Engine Control Module	A14XER		*	*	*	*	*	*Crankshaft Position Variation Learn *H02S Heater Learn *Idle Learn *Engine Oil Lift Reset *Fuel Trim Reset

OPEL	EUROPE	2012	Astra-J		Engine Control Module	A20DTH		X	X	X	X	X	Engine Oil Life Reset DPF Reset Catalyst Reset Glow Plug Control Module Reset HO2S Learn MAF Sensor Learn APP Learn Clutch Pedal Position Learn Crankshaft Position Reluctor Wheel Learn DPF Pressure Sensor Learn EGR Valve Learn Exhaust Gas Temperature Sensor Learn Flywheel Learn Fuel Rail Pressure Sensor or Fuel Rail Learn Regeneration Diesel Particulate Filter
OPEL	EUROPE	2012	Astra-J		Engine Control Module	A17DTJ		X	X	X	X	X	Engine Oil Life Reset DPF Reset Catalyst Reset HO2S Learn MAF Sensor Learn APP Learn Clutch Pedal Position Learn DPF Pressure Sensor Learn EGR Valve Learn
OPEL	EUROPE	2012	Astra-J		Engine Control Module	A17DTR		X	X	X	X	X	Engine Oil Life Reset DPF Reset Catalyst Reset HO2S Learn MAF Sensor Learn APP Learn Clutch Pedal Position Learn DPF Pressure Sensor Learn EGR Valve Learn
OPEL	EUROPE	2012	Astra-J		Engine Control Module	A17DTS		X	X	X	X	X	
OPEL	EUROPE	2012	Astra-J		Transmission Control Module	TCM		X	X	X	X	X	Gear Selector N Position Learn Learned Values Reset
OPEL	EUROPE	2012	Astra-J		Fuel Pump Control Module	FPCM		X	X	X	X	X	Fuel Trim Reset
OPEL	EUROPE	2012	Astra-J		Electric Power Steering Control Module	EPSCM		X	X	X			Power Steering Softstops Reset Power Steering Softstops Learn
OPEL	EUROPE	2012	Astra-J		Electronic Brake Control Module	EBCM		X	X	X	X	X	Brake Pressure Sensor Calibration Yaw Rate Sensor Learn Steering Wheel Angle Sensor Learns

OPEL	EUROPE	2012	Astra-J		Parking Brake Control Module	PBCM		X	X	X	X	X	Park Brake Calibration
OPEL	EUROPE	2012	Astra-J		Body Control Module	BCM		X	X	X	X	X	Brake Pedal Position Sensor Learn Clear Driver Window Learn Values Clear Left Rear Window Learn Values Clear Passenger Window Learn Values Clear Right Rear Window Learn Values
OPEL	EUROPE	2012	Astra-J		Instrument Cluster	IC		X	X	X	X	X	CAN Bus Configuration Learn
OPEL	EUROPE	2012	Astra-J		Inflatable Restraint Sensing and Diagnostic Module			X	X	X	X	X	
OPEL	EUROPE	2012	Astra-J		Radio			X	X	X	X	X	
OPEL	EUROPE	2012	Astra-J		Remote Heater and Air Conditioning Control Module	RHACCM		X	X	X	X	X	HVAC Actuators Learn CAN Bus Configuration Learn
OPEL	EUROPE	2011	Astra-J		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2011	Astra-J		Engine Control Module	A13DTE		X	X	X	X	X	APP Learn Clutch Pedal Position Learn DPF Pressure Sensor Learn Exhaust Gas Temperature Sensor Learn H02S Learn MAF Sensor Learn EGR Valve Learn Fuel Rail Pressure Sensor or Fuel Rail Learn Crankshaft Position Reluctor Wheel Learn Turbocharger Learn Flywheel Learn DPF Reset Catalyst Reset Engine Oil Life Reset Glow Plug Control Module Reset Regeneration Diesel Particulate Filter
OPEL	EUROPE	2011	Astra-J		Engine Control Module	A14XER		*	*	*	*	*	*Crankshaft Position Variation Learn *H02S Heater Learn *Idle Learn *Engine Oil Lift Reset *Fuel Trim Reset

OPEL	EUROPE	2011	Astra-J		Engine Control Module	A20DTH		X	X	X	X	X	Engine Oil Life Reset DPF Reset Catalyst Reset Glow Plug Control Module Reset H02S Learn MAF Sensor Learn APP Learn Clutch Pedal Position Learn Crankshaft Position Reluctor Wheel Learn DPF Pressure Sensor Learn EGR Valve Learn Exhaust Gas Temperature Sensor Learn Flywheel Learn Fuel Rail Pressure Sensor or Fuel Rail Learn Regeneration Diesel Particulate Filter
OPEL	EUROPE	2011	Astra-J		Engine Control Module	A 17 DTJ		X	X	X	X	X	Engine Oil Life Reset DPF Reset Catalyst Reset Glow Plug Control Module Reset H02S Learn MAF Sensor Learn APP Learn Clutch Pedal Position Learn Crankshaft Position Reluctor Wheel Learn DPF Pressure Sensor Learn EGR Valve Learn Exhaust Gas Temperature Sensor Learn Flywheel Learn Fuel Rail Pressure Sensor or Fuel Rail Learn Regeneration Diesel Particulate Filter
OPEL	EUROPE	2011	Astra-J		Engine Control Module	A 17 DTR		X	X	X	X	X	Engine Oil Life Reset DPF Reset Catalyst Reset Glow Plug Control Module Reset H02S Learn MAF Sensor Learn APP Learn Clutch Pedal Position Learn Crankshaft Position Reluctor Wheel Learn DPF Pressure Sensor Learn EGR Valve Learn Exhaust Gas Temperature Sensor Learn Flywheel Learn Fuel Rail Pressure Sensor or Fuel Rail Learn Regeneration Diesel Particulate Filter

OPEL	EUROPE	2011	Astra-J		Engine Control Module	A16XER		X	X	X	X	X	Clutch Pedal Position Learn Crankshaft Position Variation Learn HO2S Heater Learn Idle Learn Engine Oil Life Reset Fuel Trim Reset
OPEL	EUROPE	2011	Astra-J		Engine Control Module	A18XER		X	X	X	X	X	Clutch Pedal Position Learn Crankshaft Position Variation Learn HO2S Heater Learn Idle Learn Engine Oil Life Reset Fuel Trim Reset
OPEL	EUROPE	2011	Astra-J		Transmission Control Module	TCM		X	X	X	X	X	Gear Selector N Position Learn Learned Values Reset
OPEL	EUROPE	2011	Astra-J		Fuel Pump Control Module	FPCM		X	X	X	X	X	Fuel Trim Reset
OPEL	EUROPE	2011	Astra-J		Electric Power Steering Control Module	EPSCM		X	X	X			Power Steering Softstops Reset Power Steering Softstops Learn
OPEL	EUROPE	2011	Astra-J		Electronic Brake Control Module	EBCM		X	X	X	X	X	Brake Pressure Sensor Calibration Yaw Rate Sensor Learn Steering Wheel Angle Sensor Learns
OPEL	EUROPE	2011	Astra-J		Parking Brake Control Module	PBCM		X	X	X	X	X	Park Brake Calibration
OPEL	EUROPE	2011	Astra-J		Body Control Module	BCM		X	X	X	X	X	Brake Pedal Position Sensor Learn Clear Driver Window Learn Values Clear Left Rear Window Learn Values Clear Passenger Window Learn Values Clear Right Rear Window Learn Values
OPEL	EUROPE	2011	Astra-J		Instrument Cluster	IC		X	X	X	X	X	CAN Bus Configuration Learn
OPEL	EUROPE	2011	Astra-J		Inflatable Restraint Sensing and Diagnostic Module			X	X	X	X	X	
OPEL	EUROPE	2011	Astra-J		Radio			X	X	X	X	X	
OPEL	EUROPE	2011	Astra-J		Remote Heater and Air Conditioning Control Module	RHACCM		X	X	X	X	X	HVAC Actuators Learn CAN Bus Configuration Learn
OPEL	EUROPE	2010	Astra-J		Vehicle	Vehicle DTC Information			X	X			

OPEL	EUROPE	2010	Astra-J		Engine Control Module	A13DTE		X	X	X	X	X	APP Learn Clutch Pedal Position Learn DPF Pressure Sensor Learn Exhaust Gas Temperature Sensor Learn H02S Learn MAF Sensor Learn EGR Valve Learn Fuel Rail Pressure Sensor or Fuel Rail Learn Crankshaft Position Reluctor Wheel Learn Turbocharger Learn Flywheel Learn DPF Reset Catalyst Reset Engine Oil Life Reset Glow Plug Control Module Reset Regeneration Diesel Particulate Filter
OPEL	EUROPE	2010	Astra-J		Engine Control Module	A14XER		*	*	*	*	*	*Crankshaft Position Variation Learn *H02S Heater Learn *Idle Learn *Engine Oil Lift Reset *Fuel Trim Reset
OPEL	EUROPE	2010	Astra-J		Engine Control Module	A20DTH		X	X	X	X	X	Engine Oil Life Reset DPF Reset Catalyst Reset Glow Plug Control Module Reset H02S Learn MAF Sensor Learn APP Learn Clutch Pedal Position Learn Crankshaft Position Reluctor Wheel Learn DPF Pressure Sensor Learn EGR Valve Learn Exhaust Gas Temperature Sensor Learn Flywheel Learn Fuel Rail Pressure Sensor or Fuel Rail Learn Regeneration Diesel Particulate Filter
OPEL	EUROPE	2010	Astra-J		Engine Control Module	A16XER		X	X	X	X	X	Clutch Pedal Position Learn Crankshaft Position Variation Learn H02S Heater Learn Idle Learn Engine Oil Life Reset Fuel Trim Reset

OPEL	EUROPE	2010	Astra-J		Engine Control Module	A18XER		X	X	X	X	X	Clutch Pedal Position Learn Crankshaft Position Variation Learn HO2S Heater Learn Idle Learn Engine Oil Life Reset Fuel Trim Reset
OPEL	EUROPE	2010	Astra-J		Transmission Control Module	TCM		X	X	X	X	X	Gear Selector N Position Learn Learned Values Reset
OPEL	EUROPE	2010	Astra-J		Fuel Pump Control Module	FPCM		X	X	X	X	X	Fuel Trim Reset
OPEL	EUROPE	2010	Astra-J		Electric Power Steering Control Module	EPSCM		X	X	X			Power Steering Softstops Reset Power Steering Softstops Learn
OPEL	EUROPE	2010	Astra-J		Electronic Brake Control Module	EBCM		X	X	X	X	X	Brake Pressure Sensor Calibration Yaw Rate Sensor Learn Steering Wheel Angle Sensor Learns
OPEL	EUROPE	2010	Astra-J		Parking Brake Control Module	PBCM		X	X	X	X	X	Park Brake Calibration
OPEL	EUROPE	2010	Astra-J		Body Control Module	BCM		X	X	X	X	X	Brake Pedal Position Sensor Learn Clear Driver Window Learn Values Clear Left Rear Window Learn Values Clear Passenger Window Learn Values Clear Right Rear Window Learn Values
OPEL	EUROPE	2010	Astra-J		Instrument Cluster	IC		X	X	X	X	X	CAN Bus Configuration Learn
OPEL	EUROPE	2010	Astra-J		Inflatable Restraint Sensing and Diagnostic Module			X	X	X	X	X	
OPEL	EUROPE	2010	Astra-J		Radio			X	X	X	X	X	
OPEL	EUROPE	2010	Astra-J		Remote Heater and Air Conditioning Control Module	RHACCM		X	X	X	X	X	HVAC Actuators Learn CAN Bus Configuration Learn
OPEL	EUROPE	2012	Insignia		Vehicle	Vehicle DTC Information			X	X			

OPEL	EUROPE	2012	Insignia		Engine Control Module	A20DTH		X	X	X	X	X	*1.Engine Oil Life Reset *2.DPF Reset *3.Catalyst Reset *4.Glow Plug Control Module Reset *5.H02S Learn *6.MAF Sensor Learn *7.APP Learn *8.Clutch Pedal Position Learn *9.Crankshaft Position Reluctor Wheel Learn *10.DPF Pressure Sensor Learn *11.EGR Valve Learn *12.Exhaust Gas Temperature Sensor Learn *13.Flywheel Learn *14.Fuel Rail Pressure Sensor or Fuel Rail Learn
OPEL	EUROPE	2012	Insignia		Engine Control Module	A20DTJ		X	X	X	X	X	*1.Engine Oil Life Reset *2.DPF Reset *3.Catalyst Reset *4.Glow Plug Control Module Reset *5.H02S Learn *6.MAF Sensor Learn *7.APP Learn *8.Clutch Pedal Position Learn *9.Crankshaft Position Reluctor Wheel Learn *10.DPF Pressure Sensor Learn *11.EGR Valve Learn *12.Exhaust Gas Temperature Sensor Learn *13.Flywheel Learn *14.Fuel Rail Pressure Sensor or Fuel Rail Learn
OPEL	EUROPE	2012	Insignia		Transmission Control Module	TCM		X	X	X	X	X	*Gear Selector N Position Learn *Learned Values Reset
OPEL	EUROPE	2012	Insignia		Fuel Pump Control Module	FPCM		X	X	X	X	X	*Fuel Trim Reset
OPEL	EUROPE	2012	Insignia		Electric Power Steering Control Module	EPSCM		X	X	X			*Power Steering Softstops Reset *Power Steering Softstops Learn
OPEL	EUROPE	2012	Insignia		Electronic Brake Control Module	EBCM		X	X	X	X	X	*Brake Pedal Position Sensor Calibration *Yaw Rate Sensor Learn *Steering Wheel Angle Sensor Learn
OPEL	EUROPE	2012	Insignia		Parking Brake Control Module	PBCM		X	X	X	X	X	*Park Brake Calibration

OPEL	EUROPE	2012	Insignia		Body Control Module	BCM		X	X	X	X	X	*Brake Pedal Position Sensor Learn *Clear Driver Window Learn Values *Clear Left Rear Window Learn Values *Clear Passenger Window Learn Values *Clear Right Rear Window Learn Values
OPEL	EUROPE	2012	Insignia		Instrument Cluster	IC		X	X	X	X	X	*CAN Bus Configuration Learn
OPEL	EUROPE	2012	Insignia		Inflatable Restraint Sensing and Diagnostic Module			X	X	X	X	X	
OPEL	EUROPE	2012	Insignia		Radio			X	X	X	X	X	
OPEL	EUROPE	2012	Insignia		Remote Heater and Air Conditioning Control Module	RHACCM		X	X	X	X	X	*HVAC Actuators Learn *CAN Bus Configuration Learn
OPEL	EUROPE	2011	Insignia		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2011	Insignia		Engine Control Module	A20DTH		X	X	X	X	X	1.Engine Oil Life Reset 2. DPF Reset 3. Catalyst Reset 4. Glow Plug Control Module Reset 5. H02S Learn 6. MAF Sensor Learn 7. APP Learn 8. Clutch Pedal Position Learn 9. Crankshaft Position Reluctor Wheel Learn 10. DPF Pressure Sensor Learn 11. EGR Valve Learn 12. Exhaust Gas Temperature Sensor Learn 13. Flywheel Learn 14. Fuel Rail Pressure Sensor or Fuel Rail Learn 15. Regeneration DPF

OPEL	EUROPE	2011	Insignia		Engine Control Module	A20DTJ		X	X	X	X	X	1.Engine Oil Life Reset 2. DPF Reset 3. Catalyst Reset 4. Glow Plug Control Module Reset 5. HO2S Learn 6. MAF Sensor Learn 7. APP Learn 8. Clutch Pedal Position Learn 9. Crankshaft Position Reluctor Wheel Learn 10. DPF Pressure Sensor Learn 11. EGR Valve Learn 12. Exhaust Gas Temperature Sensor Learn 13. Flywheel Learn 14. Fuel Rail Pressure Sensor or Fuel Rail Learn 15. Regeneration DPF
OPEL	EUROPE	2011	Insignia		Engine Control Module	A18XER		X	X	X	X	X	Clutch Pedal Position Learn Crankshaft Position Variation Learn HO2S Heater Learn Idle Learn Engine Oil Life Reset Fuel Trim Reset
OPEL	EUROPE	2011	Insignia		Transmission Control Module	TCM		X	X	X	X	X	Gear Selector N Position Learn Learned Values Reset
OPEL	EUROPE	2011	Insignia		Fuel Pump Control Module	FPCM		X	X	X	X	X	Fuel Trim Reset
OPEL	EUROPE	2011	Insignia		Electric Power Steering Control Module	EPSCM		X	X	X			Power Steering Softstops Reset Power Steering Softstops Learn
OPEL	EUROPE	2011	Insignia		Electronic Brake Control Module	EBCM		X	X	X	X	X	Brake Pedal Position Sensor Calibration Yaw Rate Sensor Learn Steering Wheel Angle Sensor Learn
OPEL	EUROPE	2011	Insignia		Parking Brake Control Module	PBCM		X	X	X	X	X	Park Brake Calibration
OPEL	EUROPE	2011	Insignia		Body Control Module	BCM		X	X	X	X	X	Brake Pedal Position Sensor Learn Clear Driver Window Learn Values Clear Left Rear Window Learn Values Clear Passenger Window Learn Values Clear Right Rear Window Learn Values
OPEL	EUROPE	2011	Insignia		Instrument Cluster	IC		X	X	X	X	X	CAN Bus Configuration Learn

OPEL	EUROPE	2011	Insignia		Inflatable Restraint Sensing and Diagnostic Module			X	X	X	X	X	
OPEL	EUROPE	2011	Insignia		Radio			X	X	X	X	X	
OPEL	EUROPE	2011	Insignia		Remote Heater and Air Conditioning Control Module	RHACCM		X	X	X	X	X	HVAC Actuators Learn CAN Bus Configuration Learn
OPEL	EUROPE	2010	Insignia		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2010	Insignia		Engine Control Module	A20DTH		X	X	X	X	X	1.Engine Oil Life Reset 2. DPF Reset 3. Catalyst Reset 4. Glow Plug Control Module Reset 5. H02S Learn 6. MAF Sensor Learn 7. APP Learn 8. Clutch Pedal Position Learn 9. Crankshaft Position Reluctor Wheel Learn 10. DPF Pressure Sensor Learn 11. EGR Valve Learn 12. Exhaust Gas Temperature Sensor Learn 13. Flywheel Learn 14. Fuel Rail Pressure Sensor or Fuel Rail Learn 15. Regeneration DPF
OPEL	EUROPE	2010	Insignia		Engine Control Module	A20DTJ		X	X	X	X	X	1.Engine Oil Life Reset 2. DPF Reset 3. Catalyst Reset 4. Glow Plug Control Module Reset 5. H02S Learn 6. MAF Sensor Learn 7. APP Learn 8. Clutch Pedal Position Learn 9. Crankshaft Position Reluctor Wheel Learn 10. DPF Pressure Sensor Learn 11. EGR Valve Learn 12. Exhaust Gas Temperature Sensor Learn 13. Flywheel Learn 14. Fuel Rail Pressure Sensor or Fuel Rail Learn 15. Regeneration DPF

OPEL	EUROPE	2010	Insignia		Engine Control Module	A18XER		X	X	X	X	X	Clutch Pedal Position Learn Crankshaft Position Variation Learn HO2S Heater Learn Idle Learn Engine Oil Life Reset Fuel Trim Reset
OPEL	EUROPE	2010	Insignia		Transmission Control Module	TCM		X	X	X	X	X	Gear Selector N Position Learn Learned Values Reset
OPEL	EUROPE	2010	Insignia		Fuel Pump Control Module	FPCM		X	X	X	X	X	Fuel Trim Reset
OPEL	EUROPE	2010	Insignia		Electric Power Steering Control Module	EPSCM		X	X	X			Power Steering Softstops Reset Power Steering Softstops Learn
OPEL	EUROPE	2010	Insignia		Electronic Brake Control Module	EBCM		X	X	X	X	X	Brake Pedal Position Sensor Calibration Yaw Rate Sensor Learn Steering Wheel Angle Sensor Learn
OPEL	EUROPE	2010	Insignia		Parking Brake Control Module	PBCM		X	X	X	X	X	Park Brake Calibration
OPEL	EUROPE	2010	Insignia		Body Control Module	BCM		X	X	X	X	X	Brake Pedal Position Sensor Learn Clear Driver Window Learn Values Clear Left Rear Window Learn Values Clear Passenger Window Learn Values Clear Right Rear Window Learn Values
OPEL	EUROPE	2010	Insignia		Instrument Cluster	IC		X	X	X	X	X	CAN Bus Configuration Learn
OPEL	EUROPE	2010	Insignia		Inflatable Restraint Sensing and Diagnostic Module			X	X	X	X	X	
OPEL	EUROPE	2010	Insignia		Radio			X	X	X	X	X	
OPEL	EUROPE	2010	Insignia		Remote Heater and Air Conditioning Control Module	RHACCM		X	X	X	X	X	HVAC Actuators Learn CAN Bus Configuration Learn
OPEL	EUROPE	2009	Insignia		Vehicle	Vehicle DTC Information			X	X			

OPEL	EUROPE	2009	Insignia		Engine Control Module	A20DTH		X	X	X	X	X	1.Engine Oil Life Reset 2. DPF Reset 3. Catalyst Reset 4. Glow Plug Control Module Reset 5. HO2S Learn 6. MAF Sensor Learn 7. APP Learn 8. Clutch Pedal Position Learn 9. Crankshaft Position Reluctor Wheel Learn 10. DPF Pressure Sensor Learn 11. EGR Valve Learn 12. Exhaust Gas Temperature Sensor Learn 13. Flywheel Learn 14. Fuel Rail Pressure Sensor or Fuel Rail Learn 15. Regeneration DPF
OPEL	EUROPE	2009	Insignia		Engine Control Module	A20DTJ		X	X	X	X	X	1.Engine Oil Life Reset 2. DPF Reset 3. Catalyst Reset 4. Glow Plug Control Module Reset 5. HO2S Learn 6. MAF Sensor Learn 7. APP Learn 8. Clutch Pedal Position Learn 9. Crankshaft Position Reluctor Wheel Learn 10. DPF Pressure Sensor Learn 11. EGR Valve Learn 12. Exhaust Gas Temperature Sensor Learn 13. Flywheel Learn 14. Fuel Rail Pressure Sensor or Fuel Rail Learn 15. Regeneration DPF
OPEL	EUROPE	2009	Insignia		Engine Control Module	A18XER		X	X	X	X	X	Clutch Pedal Position Learn Crankshaft Position Variation Learn HO2S Heater Learn Idle Learn Engine Oil Life Reset Fuel Trim Reset
OPEL	EUROPE	2009	Insignia		Transmission Control Module	TCM		X	X	X	X	X	Gear Selector N Position Learn Learned Values Reset
OPEL	EUROPE	2009	Insignia		Fuel Pump Control Module	FPCM		X	X	X	X	X	Fuel Trim Reset
OPEL	EUROPE	2009	Insignia		Electric Power Steering Control Module	EPSCM		X	X	X			Power Steering Softstops Reset Power Steering Softstops Learn

OPEL	EUROPE	2009	Insignia		Electronic Brake Control Module	EBCM		X	X	X	X	X	Brake Pedal Position Sensor Calibration Yaw Rate Sensor Learn Steering Wheel Angle Sensor Learn
OPEL	EUROPE	2009	Insignia		Parking Brake Control Module	PBCM		X	X	X	X	X	Park Brake Calibration
OPEL	EUROPE	2009	Insignia		Body Control Module	BCM		X	X	X	X	X	Brake Pedal Position Sensor Learn Clear Driver Window Learn Values Clear Left Rear Window Learn Values Clear Passenger Window Learn Values Clear Right Rear Window Learn Values
OPEL	EUROPE	2009	Insignia		Instrument Cluster	IC		X	X	X	X	X	CAN Bus Configuration Learn
OPEL	EUROPE	2009	Insignia		Inflatable Restraint Sensing and Diagnostic Module			X	X	X	X	X	
OPEL	EUROPE	2009	Insignia		Radio			X	X	X	X	X	
OPEL	EUROPE	2009	Insignia		Remote Heater and Air Conditioning Control Module	RHACCM		X	X	X	X	X	HVAC Actuators Learn CAN Bus Configuration Learn
OPEL	EUROPE	2007	Agila		Engine	Z 10 XEP		X	X	X	X		
OPEL	EUROPE	2007	Agila		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2007	Agila		Engine	Z 12 XEP		X	X	X	X		
OPEL	EUROPE	2007	Agila		Engine	Z 13 DT		X	X	X	X	X	1. Inject Cutoff Test; 2. RPM Control; 3. Program Idle Speed.
OPEL	EUROPE	2007	Agila		Chassis	ABS		X	X	X	X		
OPEL	EUROPE	2007	Agila		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2007	Agila		Body	Immobiliser		X	X	X	X		1. Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2007	Agila		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2007	Agila		Body	Instrument		X	X	X	X		
OPEL	EUROPE	2006	Agila		Engine	Z 10 XEP		X	X	X	X		
OPEL	EUROPE	2006	Agila		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2006	Agila		Engine	Z 12 XEP		X	X	X	X		
OPEL	EUROPE	2006	Agila		Engine	Z 13 DT		X	X	X	X	X	1. Inject Cutoff Test; 2. RPM Control; 3. Program Idle Speed.
OPEL	EUROPE	2006	Agila		Chassis	ABS		X	X	X	X		
OPEL	EUROPE	2006	Agila		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2006	Agila		Body	Immobiliser		X	X	X	X		1. Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2006	Agila		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2006	Agila		Body	Instrument		X	X	X	X		

OPEL	EUROPE	2005	Agila		Engine	Z 10 XEP		X	X	X	X		
OPEL	EUROPE	2005	Agila		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2005	Agila		Engine	Z 12 XEP		X	X	X	X		
OPEL	EUROPE	2005	Agila		Engine	Z 13 DT		X	X	X	X	X	1. Inject Cutoff Test; 2. RPM Control; 3. Program Idle Speed.
OPEL	EUROPE	2005	Agila		Chassis	ABS		X	X	X	X		
OPEL	EUROPE	2005	Agila		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2005	Agila		Body	Immobiliser		X	X	X	X		1. Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2005	Agila		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2005	Agila		Body	Instrument		X	X	X	X		
OPEL	EUROPE	2004	Agila		Engine	Z 10 XEP		X	X	X	X		
OPEL	EUROPE	2004	Agila		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2004	Agila		Engine	Z 13 DT		X	X	X	X	X	1. Inject Cutoff Test; 2. RPM Control; 3. Program Idle Speed.
OPEL	EUROPE	2004	Agila		Chassis	ABS		X	X	X	X		
OPEL	EUROPE	2004	Agila		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2004	Agila		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2004	Agila		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2004	Agila		Body	Instrument		X	X	X	X		
OPEL	EUROPE	2003	Agila		Engine	Z 10 XE		X	X	X	X		
OPEL	EUROPE	2003	Agila		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2003	Agila		Chassis	ABS		X	X	X	X		
OPEL	EUROPE	2003	Agila		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2003	Agila		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2003	Agila		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2003	Agila		Body	Instrument		X	X	X	X		
OPEL	EUROPE	2002	Agila		Engine	Z 10 XE		X	X	X	X		
OPEL	EUROPE	2002	Agila		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2002	Agila		Chassis	ABS		X	X	X	X		
OPEL	EUROPE	2002	Agila		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2002	Agila		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2002	Agila		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2002	Agila		Body	Instrument		X	X	X	X		
OPEL	EUROPE	2001	Agila		Engine	Z 10 XE		X	X	X	X		
OPEL	EUROPE	2001	Agila		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2001	Agila		Chassis	ABS		X	X	X	X		
OPEL	EUROPE	2001	Agila		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2001	Agila		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2001	Agila		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2001	Agila		Body	Instrument		X	X	X	X		
OPEL	EUROPE	2000	Agila		Engine	Z 10 XE		X	X	X	X		

OPEL	EUROPE	2000	Agila	Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2000	Agila	Chassis	ABS		X	X	X	X		
OPEL	EUROPE	2000	Agila	Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2000	Agila	Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2000	Agila	Body	Airbag		X	X	X	X		
OPEL	EUROPE	2000	Agila	Body	Instrument		X	X	X	X		
OPEL	EUROPE	2002	Astra-F	Engine	X 16 SZR		X	X	X	X	X	
OPEL	EUROPE	2002	Astra-F	Engine	X 16 XEL		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2002	Astra-F	Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2002	Astra-F	Body	Airbag-S		X	X	X	X		
OPEL	EUROPE	2002	Astra-F	Body	Anti Theft Warning		X	X	X	X		
OPEL	EUROPE	2001	Astra-F	Engine	X 16 SZR		X	X	X	X	X	
OPEL	EUROPE	2001	Astra-F	Engine	X 16 XEL		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2001	Astra-F	Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2001	Astra-F	Body	Airbag-S		X	X	X	X		
OPEL	EUROPE	2000	Astra-F	Engine	16 NZR		X	X	X	X		
OPEL	EUROPE	2000	Astra-F	Engine	X 16 SZR		X	X	X	X	X	
OPEL	EUROPE	2000	Astra-F	Engine	X 16 XEL		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2000	Astra-F	Transmission	AF 131I/20/22/30		X	X	X	X		
OPEL	EUROPE	2000	Astra-F	Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2000	Astra-F	Body	Airbag-S		X	X	X	X		
OPEL	EUROPE	1999	Astra-F	Engine	16 NZR		X	X	X	X		
OPEL	EUROPE	1999	Astra-F	Engine	X 16 SZR		X	X	X	X	X	
OPEL	EUROPE	1999	Astra-F	Engine	X 16 XEL		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	1999	Astra-F	Engine	18 SE		X	X	X	X		
OPEL	EUROPE	1999	Astra-F	Engine	C 18 SEL		X	X	X	X		
OPEL	EUROPE	1999	Astra-F	Transmission	AF 131I/20/22/30		X	X	X	X		
OPEL	EUROPE	1999	Astra-F	Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	1999	Astra-F	Body	Airbag-S		X	X	X	X		
OPEL	EUROPE	1998	Astra-F	Engine	X 14 XE		X	X	X	X		
OPEL	EUROPE	1998	Astra-F	Engine	16 NZR		X	X	X	X		
OPEL	EUROPE	1998	Astra-F	Engine	X 16 SZR		X	X	X	X	X	
OPEL	EUROPE	1998	Astra-F	Engine	X 16 XEL		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	1998	Astra-F	Engine	18 SE		X	X	X	X		
OPEL	EUROPE	1998	Astra-F	Engine	C 18 SEL		X	X	X	X		
OPEL	EUROPE	1998	Astra-F	Engine	X 18 XE		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	1998	Astra-F	Engine	X 20 XEV		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	1998	Astra-F	Transmission	AF 131I/20/22/30		X	X	X	X		
OPEL	EUROPE	1998	Astra-F	Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	1998	Astra-F	Body	Airbag-S		X	X	X	X		
OPEL	EUROPE	1997	Astra-F	Engine	C 14 NZ		X	X	X	X		
OPEL	EUROPE	1997	Astra-F	Engine	X 14 XE		X	X	X	X		
OPEL	EUROPE	1997	Astra-F	Engine	16 NZR		X	X	X	X		
OPEL	EUROPE	1997	Astra-F	Engine	X 16 SZR		X	X	X	X	X	
OPEL	EUROPE	1997	Astra-F	Engine	X 16 XEL		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	1997	Astra-F	Engine	18 SE		X	X	X	X		

OPEL	EUROPE	1997	Astra-F	Engine	C 18 SEL		X	X	X	X		
OPEL	EUROPE	1997	Astra-F	Engine	X 18 XE		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	1997	Astra-F	Engine	X 20 XEV		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	1997	Astra-F	Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	EUROPE	1997	Astra-F	Chassis	Traction Control (TC)		X	X	X	X		
OPEL	EUROPE	1997	Astra-F	Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	1997	Astra-F	Body	Airbag-S		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-G	Engine	Z 14 XE		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Engine	Z 14 XEP		X	X	X	X	X	1. Reset Learn Values 2. Reset O2-Loop Block Lean Map 3. ECU Control-Electronic throttle control 4. Idle speed program. 5. ECU Reset
OPEL	EUROPE	2011	Astra-G	Engine	C 16 SEL		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-G	Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-G	Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Engine	Z 16 YNG		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-G	Engine	Z 17 DTL		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Engine	Z 18 XE		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-G	Engine	Z 18 XEL		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Engine	Y 20 DTH		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2011	Astra-G	Engine	Z 20 LET		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Engine	Y 22 DTR		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	2011	Astra-G	Engine	Z 22 SE		X	X	X	X	X	Programming ECU Control
OPEL	EUROPE	2011	Astra-G	Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-G	Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-G	Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-G	Chassis	ESP		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Chassis	Electronic Power Steering		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-G	Body	Immobiliser		X	X	X	X		Erase Key Set Program Transponder-Keys
OPEL	EUROPE	2011	Astra-G	Body	Instrument		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-G	Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-G	Body	Anti Theft Warning		X	X	X	X		Erase Key Set Program Transponder-Keys
OPEL	EUROPE	2011	Astra-G	Body	Central Door Lock		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Body	Engine Cooling Module		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Body	Electronic Climate Control		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration

OPEL	EUROPE	2010	Astra-G		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-G		Engine	Z 14 XE		X	X	X	X		
OPEL	EUROPE	2010	Astra-G		Engine	Z 14 XEP		X	X	X	X	X	1. Reset Learn Values 2. Reset O2-Loop Block Lean Map 3. ECU Control-Electronic throttle control 4. Idle speed program. 5. ECU Reset
OPEL	EUROPE	2010	Astra-G		Engine	C 16 SEL		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-G		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2010	Astra-G		Engine	Z 16 YNG		X	X	X	X		
OPEL	EUROPE	2010	Astra-G		Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-G		Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2010	Astra-G		Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-G		Engine	Z 17 DTL		X	X	X	X		
OPEL	EUROPE	2010	Astra-G		Engine	Z 18 XE		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-G		Engine	Z 18 XEL		X	X	X	X		
OPEL	EUROPE	2010	Astra-G		Engine	Y 20 DTH		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2010	Astra-G		Engine	Z 20 LET		X	X	X	X		
OPEL	EUROPE	2010	Astra-G		Engine	Y 22 DTR		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	2010	Astra-G		Engine	Z 22 SE		X	X	X	X	X	Programming ECU Control
OPEL	EUROPE	2010	Astra-G		Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-G		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-G		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-G		Chassis	ESP		X	X	X	X		
OPEL	EUROPE	2010	Astra-G		Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	2010	Astra-G		Chassis	Electronic Power Steering		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-G		Body	Immobiliser		X	X	X	X		Erase Key Set Program Transponder-Keys
OPEL	EUROPE	2010	Astra-G		Body	Instrument		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-G		Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-G		Body	Anti Theft Warning		X	X	X	X		Erase Key Set Program Transponder-Keys
OPEL	EUROPE	2010	Astra-G		Body	Central Door Lock		X	X	X	X		
OPEL	EUROPE	2010	Astra-G		Body	Engine Cooling Module		X	X	X	X		
OPEL	EUROPE	2010	Astra-G		Body	Electronic Climate Control		X	X	X	X		
OPEL	EUROPE	2010	Astra-G		Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration
OPEL	EUROPE	2009	Astra-G		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2009	Astra-G		Engine	Z 14 XE		X	X	X	X		
OPEL	EUROPE	2009	Astra-G		Engine	Z 14 XEP		X	X	X	X	X	1. Reset Learn Values 2. Reset O2-Loop Block Lean Map 3. ECU Control-Electronic throttle control 4. Idle speed program. 5. ECU Reset

OPEL	EUROPE	2009	Astra-G		Engine	C 16 SEL		X	X	X	X	X	
OPEL	EUROPE	2009	Astra-G		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2009	Astra-G		Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2009	Astra-G		Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2009	Astra-G		Engine	Z 16 YNG		X	X	X	X		
OPEL	EUROPE	2009	Astra-G		Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2009	Astra-G		Engine	Z 17 DTL		X	X	X	X		
OPEL	EUROPE	2009	Astra-G		Engine	Z 18 XE		X	X	X	X	X	
OPEL	EUROPE	2009	Astra-G		Engine	Z 18 XEL		X	X	X	X		
OPEL	EUROPE	2009	Astra-G		Engine	Y 20 DTH		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2009	Astra-G		Engine	Z 20 LET		X	X	X	X		
OPEL	EUROPE	2009	Astra-G		Engine	Y 22 DTR		X	X	X	X		
OPEL	EUROPE	2009	Astra-G		Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2009	Astra-G		Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	EUROPE	2009	Astra-G		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2009	Astra-G		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2009	Astra-G		Chassis	ESP		X	X	X	X		
OPEL	EUROPE	2009	Astra-G		Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	2009	Astra-G		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2009	Astra-G		Body	Immobiliser		X	X	X	X		1.Erase Key Set; 2.Program Transponder-Keys
OPEL	EUROPE	2009	Astra-G		Body	Instrument		X	X	X	X		
OPEL	EUROPE	2009	Astra-G		Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2009	Astra-G		Body	Anti Theft Warning		X	X	X	X		
OPEL	EUROPE	2009	Astra-G		Body	Central Door Lock		X	X	X	X		
OPEL	EUROPE	2009	Astra-G		Body	Engine Cooling Module		X	X	X	X		
OPEL	EUROPE	2009	Astra-G		Body	Electronic Climate Control		X	X	X	X		
OPEL	EUROPE	2009	Astra-G		Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration
OPEL	EUROPE	2010	Antara, Cap tiva (short body)		Engine	Z 24XE		X	X	X	X		
OPEL	EUROPE	2010	Antara, Cap tiva (short body)		Engine	2.0L		X	X	X	X	X	1.Program High Cambus Configuration 2.Replace Rail Pressure Sensor 3.Replace Diff.-Press. Sensor 4.Regeneration DPF
OPEL	EUROPE	2010	Antara, Cap tiva (short body)		Transmission	TCCM(Transfer Case Control Module)		X	X	X	X		*1.Clutch Calibration Value
OPEL	EUROPE	2010	Antara, Cap tiva (short body)		Transmission	Automatic Transmission		X	X	X	X	X	*1.Reset Learned Values *2.Line Pressure Solenoid Test *3.TCC Solenoid Test *4.Shift Pressure Solenoid Test
OPEL	EUROPE	2010	Antara, Cap tiva (short body)		Body	SDM (Airbag)		X	X	X	X		

OPEL	EUROPE	2010	Antara, Cap tiva (short body)		Body	IPC (Instrument)		X	X	X	X		
OPEL	EUROPE	2010	Antara, Cap tiva (short body)		Body	Immobiliser		X	X	X			
OPEL	EUROPE	2010	Antara, Cap tiva (short body)		Body	Body Control Module		X	X	X	X		
OPEL	EUROPE	2010	Antara, Cap tiva (short body)		Body	Electronic Climate Control		X	X		X		
OPEL	EUROPE	2010	Antara, Cap tiva (short body)		Body	RFA (Multipurpose Receiver Module)		X	X	X			
OPEL	EUROPE	2010	Antara, Cap tiva (short body)		Body	CDL		X	X	X	X		
OPEL	EUROPE	2010	Antara, Cap tiva (short body)		Chassis	ABS		X	X	X	X	X	
OPEL	EUROPE	2009	Antara, Cap tiva (short body)		Engine	Z 24XE		X	X	X	X		
OPEL	EUROPE	2009	Antara, Cap tiva (short body)		Engine	2. 0L		X	X	X	X	X	1. Program High CanBus Configuration 2. Replace Rail Pressure Sensor 3. Replace Diff. -Press. Sensor 4. Regeneration DPF
OPEL	EUROPE	2009	Antara, Cap tiva (short body)		Transmission	TCCM (Transfer Case Control Module)		X	X	X	X		*1. Clutch Calibration Value
OPEL	EUROPE	2009	Antara, Cap tiva (short body)		Transmission	Automatic Transmission		X	X	X	X	X	*1. Reset Learned Values *2. Line Pressure Solenoid Test *3. TCC Solenoid Test *4. Shift Pressure Solenoid Test
OPEL	EUROPE	2009	Antara, Cap tiva (short body)		Body	SDM (Airbag)		X	X	X	X		
OPEL	EUROPE	2009	Antara, Cap tiva (short body)		Body	IPC (Instrument)		X	X	X	X		
OPEL	EUROPE	2009	Antara, Cap tiva (short body)		Body	Immobiliser		X	X	X			

OPEL	EUROPE	2009	Antara, Cap tiva (short body)		Body	Body Control Module		X	X	X	X		
OPEL	EUROPE	2009	Antara, Cap tiva (short body)		Body	Electronic Climate Control		X	X		X		
OPEL	EUROPE	2009	Antara, Cap tiva (short body)		Body	RFA (Multipurpose Receiver Module)		X	X	X			
OPEL	EUROPE	2010	Antara, Cap tiva (short body)		Body	CDL		X	X	X	X		
OPEL	EUROPE	2009	Antara, Cap tiva (short body)		Chassis	ABS		X	X	X	X	X	
OPEL	EUROPE	2008	Antara, Cap tiva (short body)		Engine	Z 24XE		X	X	X	X		
OPEL	EUROPE	2008	Antara, Cap tiva (short body)		Engine	2. 0L		X	X	X	X	X	1. Program High CanBus Configuration 2. Replace Rail Pressure Sensor 3. Replace Diff. -Press. Sensor 4. Regeneration DPF
OPEL	EUROPE	2008	Antara, Cap tiva (short body)		Transmission	TCCM(Transfer Case Control Module)		X	X	X	X		*1.Clutch Calibration Value
OPEL	EUROPE	2008	Antara, Cap tiva (short body)		Transmission	Automatic Transmission		X	X	X	X	X	*1.Reset Learned Values *2.Line Pressure Solenoid Test *3.TCC Solenoid Test *4.Shift Pressure Solenoid Test
OPEL	EUROPE	2008	Antara, Cap tiva (short body)		Body	SDM(Airbag)		X	X	X	X		
OPEL	EUROPE	2008	Antara, Cap tiva (short body)		Body	IPC(Instrument)		X	X	X	X		
OPEL	EUROPE	2008	Antara, Cap tiva (short body)		Body	Immobiliser		X	X	X			
OPEL	EUROPE	2008	Antara, Cap tiva (short body)		Body	Body Control Module		X	X	X	X		
OPEL	EUROPE	2008	Antara, Cap tiva (short body)		Body	Electronic Climate Control		X	X		X		

OPEL	EUROPE	2008	Antara, Cap tiva (short body)		Body	RFA (Multipurpose Receiver Module)		X	X	X			
OPEL	EUROPE	2010	Antara, Cap tiva (short body)		Body	CDL		X	X	X	X		
OPEL	EUROPE	2008	Antara, Cap tiva (short body)		Chassis	ABS		X	X	X	X	X	
OPEL	EUROPE	2008	Astra-G		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2008	Astra-G		Engine	Z 14 XE		X	X	X	X		
OPEL	EUROPE	2008	Astra-G		Engine	Z 14 XEP		X	X	X	X	X	1.Reset Learn Values 2.Reset 02-Loop Block Lean Map 3.ECU Control-Electronic throttle control 4.Idle speed program. 5.ECU Reset
OPEL	EUROPE	2008	Astra-G		Engine	C 16 SEL		X	X	X	X	X	
OPEL	EUROPE	2008	Astra-G		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2008	Astra-G		Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2008	Astra-G		Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2008	Astra-G		Engine	Z 16 YNG		X	X	X	X		
OPEL	EUROPE	2008	Astra-G		Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2008	Astra-G		Engine	Z 17 DTL		X	X	X	X		
OPEL	EUROPE	2008	Astra-G		Engine	Z 18 XE		X	X	X	X	X	
OPEL	EUROPE	2008	Astra-G		Engine	Z 18 XEL		X	X	X	X		
OPEL	EUROPE	2008	Astra-G		Engine	Y 20 DTH		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2008	Astra-G		Engine	Z 20 LET		X	X	X	X		
OPEL	EUROPE	2008	Astra-G		Engine	Y 22 DTR		X	X	X	X		
OPEL	EUROPE	2008	Astra-G		Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2008	Astra-G		Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	EUROPE	2008	Astra-G		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2008	Astra-G		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2008	Astra-G		Chassis	ESP		X	X	X	X		
OPEL	EUROPE	2008	Astra-G		Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	2008	Astra-G		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2008	Astra-G		Body	Immobiliser		X	X	X	X		1.Erase Key Set; 2.Program Transponder-Keys
OPEL	EUROPE	2008	Astra-G		Body	Instrument		X	X	X	X		
OPEL	EUROPE	2008	Astra-G		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2008	Astra-G		Body	Anti Theft Warning		X	X	X	X		
OPEL	EUROPE	2008	Astra-G		Body	Central Door Lock		X	X	X	X		
OPEL	EUROPE	2008	Astra-G		Body	Engine Cooling Module		X	X	X	X		
OPEL	EUROPE	2008	Astra-G		Body	Electronic Climate Control		X	X	X	X		
OPEL	EUROPE	2008	Astra-G		Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration

OPEL	EUROPE	2007	Astra-G		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2007	Astra-G		Engine	Z 14 XE		X	X	X	X		
OPEL	EUROPE	2007	Astra-G		Engine	Z 14 XEP		X	X	X	X	X	1.Reset Learn Values 2.Reset 02-Loop Block Lean Map 3.ECU Control-Electronic throttle control 4.Idle speed program. 5.ECU Reset
OPEL	EUROPE	2007	Astra-G		Engine	C 16 SEL		X	X	X	X	X	
OPEL	EUROPE	2007	Astra-G		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2007	Astra-G		Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2007	Astra-G		Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2007	Astra-G		Engine	Z 16 YNG		X	X	X	X		
OPEL	EUROPE	2007	Astra-G		Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2007	Astra-G		Engine	Z 17 DTL		X	X	X	X		
OPEL	EUROPE	2007	Astra-G		Engine	Z 18 XE		X	X	X	X	X	
OPEL	EUROPE	2007	Astra-G		Engine	Z 18 XEL		X	X	X	X		
OPEL	EUROPE	2007	Astra-G		Engine	Y 20 DTH		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2007	Astra-G		Engine	Z 20 LET		X	X	X	X		
OPEL	EUROPE	2007	Astra-G		Engine	Y 22 DTR		X	X	X	X		
OPEL	EUROPE	2007	Astra-G		Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2007	Astra-G		Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	EUROPE	2007	Astra-G		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2007	Astra-G		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2007	Astra-G		Chassis	ESP		X	X	X	X		
OPEL	EUROPE	2007	Astra-G		Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	2007	Astra-G		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2007	Astra-G		Body	Immobiliser		X	X	X	X		1.Erase Key Set; 2.Program Transponder-Keys
OPEL	EUROPE	2007	Astra-G		Body	Instrument		X	X	X	X		
OPEL	EUROPE	2007	Astra-G		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2007	Astra-G		Body	Anti Theft Warning		X	X	X	X		
OPEL	EUROPE	2007	Astra-G		Body	Central Door Lock		X	X	X	X		
OPEL	EUROPE	2007	Astra-G		Body	Engine Cooling Module		X	X	X	X		
OPEL	EUROPE	2007	Astra-G		Body	Electronic Climate Control		X	X	X	X		
OPEL	EUROPE	2007	Astra-G		Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration
OPEL	EUROPE	2006	Astra-G		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2006	Astra-G		Engine	Z 14 XE		X	X	X	X		
OPEL	EUROPE	2006	Astra-G		Engine	Z 14 XEP		X	X	X	X	X	1.Reset Learn Values 2.Reset 02-Loop Block Lean Map 3.ECU Control-Electronic throttle control 4.Idle speed program. 5.ECU Reset
OPEL	EUROPE	2006	Astra-G		Engine	C 16 SEL		X	X	X	X	X	
OPEL	EUROPE	2006	Astra-G		Engine	Z 16 SE		X	X	X	X		

OPEL	EUROPE	2006	Astra-G	Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2006	Astra-G	Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2006	Astra-G	Engine	Z 16 YNG		X	X	X	X		
OPEL	EUROPE	2006	Astra-G	Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2006	Astra-G	Engine	Z 17 DTL		X	X	X	X		
OPEL	EUROPE	2006	Astra-G	Engine	Z 18 XE		X	X	X	X	X	
OPEL	EUROPE	2006	Astra-G	Engine	Z 18 XEL		X	X	X	X		
OPEL	EUROPE	2006	Astra-G	Engine	Y 20 DTH		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2006	Astra-G	Engine	Z 20 LET		X	X	X	X		
OPEL	EUROPE	2006	Astra-G	Engine	Y 22 DTR		X	X	X	X		
OPEL	EUROPE	2006	Astra-G	Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2006	Astra-G	Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	EUROPE	2006	Astra-G	Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2006	Astra-G	Chassis	ABS-5. 3/5. 4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2006	Astra-G	Chassis	ESP		X	X	X	X		
OPEL	EUROPE	2006	Astra-G	Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	2006	Astra-G	Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2006	Astra-G	Body	Immobiliser		X	X	X	X		1. Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2006	Astra-G	Body	Instrument		X	X	X	X		
OPEL	EUROPE	2006	Astra-G	Body	Airbag		X	X	X	X		
OPEL	EUROPE	2006	Astra-G	Body	Anti Theft Warning		X	X	X	X		
OPEL	EUROPE	2006	Astra-G	Body	Central Door Lock		X	X	X	X		
OPEL	EUROPE	2006	Astra-G	Body	Engine Cooling Module		X	X	X	X		
OPEL	EUROPE	2006	Astra-G	Body	Electronic Climate Control		X	X	X	X		
OPEL	EUROPE	2006	Astra-G	Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration
OPEL	EUROPE	2005	Astra-G	Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2005	Astra-G	Engine	Z 14 XE		X	X	X	X		
OPEL	EUROPE	2005	Astra-G	Engine	Z 14 XEP		X	X	X	X	X	1. Reset Learn Values 2. Reset O2-Loop Block Lean Map 3. ECU Control-Electronic throttle control 4. Idle speed program. 5. ECU Reset
OPEL	EUROPE	2005	Astra-G	Engine	C 16 SEL		X	X	X	X	X	
OPEL	EUROPE	2005	Astra-G	Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2005	Astra-G	Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2005	Astra-G	Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2005	Astra-G	Engine	Z 16 YNG		X	X	X	X		
OPEL	EUROPE	2005	Astra-G	Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2005	Astra-G	Engine	Z 17 DTL		X	X	X	X		
OPEL	EUROPE	2005	Astra-G	Engine	Z 18 XE		X	X	X	X	X	
OPEL	EUROPE	2005	Astra-G	Engine	Z 18 XEL		X	X	X	X		
OPEL	EUROPE	2005	Astra-G	Engine	Y 20 DTH		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2005	Astra-G	Engine	Z 20 LET		X	X	X	X		

OPEL	EUROPE	2005	Astra-G	Engine	Y 22 DTR	X	X	X	X		
OPEL	EUROPE	2005	Astra-G	Engine	Z 22 SE	X	X	X	X		
OPEL	EUROPE	2005	Astra-G	Transmission	AF 13-II/17/20/22	X	X	X	X	X	
OPEL	EUROPE	2005	Astra-G	Transmission	AF 13-II/17/20/22 CAN	X	X	X	X	X	
OPEL	EUROPE	2005	Astra-G	Chassis	ABS-5.3/5.4 (+TC)	X	X	X	X	X	
OPEL	EUROPE	2005	Astra-G	Chassis	ESP	X	X	X	X		
OPEL	EUROPE	2005	Astra-G	Chassis	Cruise Control	X	X	X	X		
OPEL	EUROPE	2005	Astra-G	Chassis	Electronic Power Steering	X	X	X	X		
OPEL	EUROPE	2005	Astra-G	Body	Immobiliser	X	X	X	X		1.Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2005	Astra-G	Body	Instrument	X	X	X	X		
OPEL	EUROPE	2005	Astra-G	Body	Airbag	X	X	X	X		
OPEL	EUROPE	2005	Astra-G	Body	Anti Theft Warning	X	X	X	X		
OPEL	EUROPE	2005	Astra-G	Body	Central Door Lock	X	X	X	X		
OPEL	EUROPE	2005	Astra-G	Body	Engine Cooling Module	X	X	X	X		
OPEL	EUROPE	2005	Astra-G	Body	Electronic Climate Control	X	X	X	X		
OPEL	EUROPE	2005	Astra-G	Body	HeadLamp Levelling Device	X	X	X	X	X	Calibration
OPEL	EUROPE	2004	Astra-G	Engine	Z 12 XE	X	X	X	X	X	
OPEL	EUROPE	2004	Astra-G	Engine	Z 14 XE	X	X	X	X		
OPEL	EUROPE	2004	Astra-G	Engine	C 16 SEL	X	X	X	X	X	
OPEL	EUROPE	2004	Astra-G	Engine	Z 16 SE	X	X	X	X		
OPEL	EUROPE	2004	Astra-G	Engine	Z 16 XE	X	X	X	X	X	
OPEL	EUROPE	2004	Astra-G	Engine	Z 16 XEP	X	X	X	X		
OPEL	EUROPE	2004	Astra-G	Engine	Z 16 YNG	X	X	X	X		
OPEL	EUROPE	2004	Astra-G	Engine	Y 17 DT	X	X	X	X	X	
OPEL	EUROPE	2004	Astra-G	Engine	Z 17 DTL	X	X	X	X		
OPEL	EUROPE	2004	Astra-G	Engine	Z 18 XE	X	X	X	X	X	
OPEL	EUROPE	2004	Astra-G	Engine	Z 18 XEL	X	X	X	X		
OPEL	EUROPE	2004	Astra-G	Engine	Y 20 DTH	X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2004	Astra-G	Engine	Z 20 LET	X	X	X	X		
OPEL	EUROPE	2004	Astra-G	Engine	Y 22 DTR	X	X	X	X		
OPEL	EUROPE	2004	Astra-G	Engine	Z 22 SE	X	X	X	X		
OPEL	EUROPE	2004	Astra-G	Transmission	AF 13-II/17/20/22	X	X	X	X	X	
OPEL	EUROPE	2004	Astra-G	Transmission	AF 13-II/17/20/22 CAN	X	X	X	X	X	
OPEL	EUROPE	2004	Astra-G	Chassis	ABS-5.3/5.4 (+TC)	X	X	X	X	X	
OPEL	EUROPE	2004	Astra-G	Chassis	ESP	X	X	X	X		
OPEL	EUROPE	2004	Astra-G	Chassis	Cruise Control	X	X	X	X		
OPEL	EUROPE	2004	Astra-G	Chassis	Electronic Power Steering	X	X	X	X		
OPEL	EUROPE	2004	Astra-G	Body	Immobiliser	X	X	X	X		1.Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2004	Astra-G	Body	Instrument	X	X	X	X		
OPEL	EUROPE	2004	Astra-G	Body	Airbag	X	X	X	X		
OPEL	EUROPE	2004	Astra-G	Body	Anti Theft Warning	X	X	X	X		
OPEL	EUROPE	2004	Astra-G	Body	Central Door Lock	X	X	X	X		

OPEL	EUROPE	2004	Astra-G		Body	Engine Cooling Module		X	X	X	X		
OPEL	EUROPE	2004	Astra-G		Body	Electronic Climate Control		X	X	X	X		
OPEL	EUROPE	2004	Astra-G		Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration
OPEL	EUROPE	2003	Astra-G		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2003	Astra-G		Engine	Z 14 XE		X	X	X	X		
OPEL	EUROPE	2003	Astra-G		Engine	C 16 SEL		X	X	X	X	X	
OPEL	EUROPE	2003	Astra-G		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2003	Astra-G		Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2003	Astra-G		Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2003	Astra-G		Engine	Z 16 YNG		X	X	X	X		
OPEL	EUROPE	2003	Astra-G		Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2003	Astra-G		Engine	Z 17 DTL		X	X	X	X		
OPEL	EUROPE	2003	Astra-G		Engine	Z 18 XE		X	X	X	X	X	
OPEL	EUROPE	2003	Astra-G		Engine	Z 18 XEL		X	X	X	X		
OPEL	EUROPE	2003	Astra-G		Engine	Y 20 DTH		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2003	Astra-G		Engine	Z 20 LET		X	X	X	X		
OPEL	EUROPE	2003	Astra-G		Engine	Y 22 DTR		X	X	X	X		
OPEL	EUROPE	2003	Astra-G		Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2003	Astra-G		Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	EUROPE	2003	Astra-G		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2003	Astra-G		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2003	Astra-G		Chassis	ESP		X	X	X	X		
OPEL	EUROPE	2003	Astra-G		Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	2003	Astra-G		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2003	Astra-G		Body	Immobiliser		X	X	X	X		1.Erase Key Set; 2.Program Transponder-Keys
OPEL	EUROPE	2003	Astra-G		Body	Instrument		X	X	X	X		
OPEL	EUROPE	2003	Astra-G		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2003	Astra-G		Body	Anti Theft Warning		X	X	X	X		
OPEL	EUROPE	2003	Astra-G		Body	Central Door Lock		X	X	X	X		
OPEL	EUROPE	2003	Astra-G		Body	Engine Cooling Module		X	X	X	X		
OPEL	EUROPE	2003	Astra-G		Body	Electronic Climate Control		X	X	X	X		
OPEL	EUROPE	2003	Astra-G		Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration
OPEL	EUROPE	2002	Astra-G		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2002	Astra-G		Engine	Z 14 XE		X	X	X	X		
OPEL	EUROPE	2002	Astra-G		Engine	C 16 SEL		X	X	X	X	X	
OPEL	EUROPE	2002	Astra-G		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2002	Astra-G		Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2002	Astra-G		Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2002	Astra-G		Engine	Z 18 XE		X	X	X	X	X	
OPEL	EUROPE	2002	Astra-G		Engine	Z 18 XEL		X	X	X	X		
OPEL	EUROPE	2002	Astra-G		Engine	Y 20 DTL		X	X	X	X		
OPEL	EUROPE	2002	Astra-G		Engine	Y 20 DTH		X	X	X	X	X	Adjust Idle Speed

OPEL	EUROPE	2002	Astra-G	Engine	Z 20 LET		X	X	X	X		
OPEL	EUROPE	2002	Astra-G	Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2002	Astra-G	Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	EUROPE	2002	Astra-G	Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2002	Astra-G	Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2002	Astra-G	Chassis	ESP		X	X	X	X		
OPEL	EUROPE	2002	Astra-G	Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	2002	Astra-G	Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2002	Astra-G	Body	Immobiliser		X	X	X	X		1.Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2002	Astra-G	Body	Instrument		X	X	X	X		
OPEL	EUROPE	2002	Astra-G	Body	Airbag		X	X	X	X		
OPEL	EUROPE	2002	Astra-G	Body	Anti Theft Warning		X	X	X	X		
OPEL	EUROPE	2002	Astra-G	Body	Central Door Lock		X	X	X	X		
OPEL	EUROPE	2002	Astra-G	Body	Engine Cooling Module		X	X	X	X		
OPEL	EUROPE	2002	Astra-G	Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration
OPEL	EUROPE	2001	Astra-G	Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2001	Astra-G	Engine	Z 14 XE		X	X	X	X		
OPEL	EUROPE	2001	Astra-G	Engine	C 16 SEL		X	X	X	X	X	
OPEL	EUROPE	2001	Astra-G	Engine	X 16 SZR		X	X	X	X		
OPEL	EUROPE	2001	Astra-G	Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2001	Astra-G	Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2001	Astra-G	Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2001	Astra-G	Engine	X 18 XE1		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2001	Astra-G	Engine	Z 18 XE		X	X	X	X	X	
OPEL	EUROPE	2001	Astra-G	Engine	Z 18 XEL		X	X	X	X		
OPEL	EUROPE	2001	Astra-G	Engine	Y 20 DTL		X	X	X	X		
OPEL	EUROPE	2001	Astra-G	Engine	Y 20 DTH		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2001	Astra-G	Engine	Z 20 LET		X	X	X	X		
OPEL	EUROPE	2001	Astra-G	Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2001	Astra-G	Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	EUROPE	2001	Astra-G	Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2001	Astra-G	Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2001	Astra-G	Chassis	ESP		X	X	X	X		
OPEL	EUROPE	2001	Astra-G	Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	2001	Astra-G	Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2001	Astra-G	Body	Immobiliser		X	X	X	X		1.Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2001	Astra-G	Body	Instrument		X	X	X	X		
OPEL	EUROPE	2001	Astra-G	Body	Airbag		X	X	X	X		
OPEL	EUROPE	2001	Astra-G	Body	Anti Theft Warning		X	X	X	X		
OPEL	EUROPE	2001	Astra-G	Body	Central Door Lock		X	X	X	X		
OPEL	EUROPE	2001	Astra-G	Body	Engine Cooling Module		X	X	X	X		
OPEL	EUROPE	2000	Astra-G	Engine	X 12 XE		X	X	X	X		
OPEL	EUROPE	2000	Astra-G	Engine	X 14 XE		X	X	X	X		

OPEL	EUROPE	2000	Astra-G	Engine	C 16 SEL	X	X	X	X	X	
OPEL	EUROPE	2000	Astra-G	Engine	X 16 SZR	X	X	X	X		
OPEL	EUROPE	2000	Astra-G	Engine	X 16 XEL	X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	2000	Astra-G	Engine	X 17 DTL	X	X	X	X		
OPEL	EUROPE	2000	Astra-G	Engine	Y 17 DT	X	X	X	X	X	
OPEL	EUROPE	2000	Astra-G	Engine	X 18 XE1	X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2000	Astra-G	Engine	X 20 DTL	X	X	X	X		
OPEL	EUROPE	2000	Astra-G	Engine	X 20 XEV	X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	2000	Astra-G	Engine	X 20 XER	X	X	X	X		
OPEL	EUROPE	2000	Astra-G	Engine	Y 20 DTH	X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2000	Astra-G	Engine	Z 22 SE	X	X	X	X		
OPEL	EUROPE	2000	Astra-G	Transmission	AF 13-II/17/20/22	X	X	X	X	X	
OPEL	EUROPE	2000	Astra-G	Chassis	ABS-5.3/5.4 (+TC)	X	X	X	X	X	
OPEL	EUROPE	2000	Astra-G	Chassis	ESP	X	X	X	X		
OPEL	EUROPE	2000	Astra-G	Chassis	Cruise Control	X	X	X	X		
OPEL	EUROPE	2000	Astra-G	Chassis	Electronic Power Steering	X	X	X	X		
OPEL	EUROPE	2000	Astra-G	Body	Immobiliser	X	X	X	X		1.Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2000	Astra-G	Body	Instrument	X	X	X	X		
OPEL	EUROPE	2000	Astra-G	Body	Airbag	X	X	X	X		
OPEL	EUROPE	2000	Astra-G	Body	Airbag SAB6	X	X	X	X		
OPEL	EUROPE	2000	Astra-G	Body	Anti Theft Warning	X	X	X	X		
OPEL	EUROPE	2000	Astra-G	Body	Central Door Lock	X	X	X	X		
OPEL	EUROPE	2000	Astra-G	Body	Engine Cooling Module	X	X	X	X		
OPEL	EUROPE	1999	Astra-G	Engine	X 12 XE	X	X	X	X		
OPEL	EUROPE	1999	Astra-G	Engine	X 14 XE	X	X	X	X		
OPEL	EUROPE	1999	Astra-G	Engine	C 16 SEL	X	X	X	X	X	
OPEL	EUROPE	1999	Astra-G	Engine	X 16 SZR	X	X	X	X		
OPEL	EUROPE	1999	Astra-G	Engine	X 16 XEL	X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	1999	Astra-G	Engine	X 17 DTL	X	X	X	X		
OPEL	EUROPE	1999	Astra-G	Engine	X 18 XE1	X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	1999	Astra-G	Engine	X 20 DTL	X	X	X	X		
OPEL	EUROPE	1999	Astra-G	Engine	X 20 XEV	X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	1999	Astra-G	Transmission	AF 13-II/17/20/22	X	X	X	X	X	
OPEL	EUROPE	1999	Astra-G	Chassis	ABS-5.3/5.4 (+TC)	X	X	X	X	X	
OPEL	EUROPE	1999	Astra-G	Chassis	Cruise Control	X	X	X	X		
OPEL	EUROPE	1999	Astra-G	Body	Immobiliser	X	X	X	X		1.Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	1999	Astra-G	Body	Instrument	X	X	X	X		
OPEL	EUROPE	1999	Astra-G	Body	Airbag SAB6	X	X	X	X		
OPEL	EUROPE	1999	Astra-G	Body	Anti Theft Warning	X	X	X	X		
OPEL	EUROPE	1999	Astra-G	Body	Central Door Lock	X	X	X	X		
OPEL	EUROPE	1999	Astra-G	Body	Engine Cooling Module	X	X	X	X		
OPEL	EUROPE	1998	Astra-G	Engine	X 12 XE	X	X	X	X		
OPEL	EUROPE	1998	Astra-G	Engine	X 14 XE	X	X	X	X		
OPEL	EUROPE	1998	Astra-G	Engine	X 16 SZR	X	X	X	X		

OPEL	EUROPE	1998	Astra-G	Engine	X 16 XEL		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	1998	Astra-G	Engine	X 17 DTL		X	X	X	X		
OPEL	EUROPE	1998	Astra-G	Engine	X 18 XE1		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	1998	Astra-G	Engine	X 20 DTL		X	X	X	X		
OPEL	EUROPE	1998	Astra-G	Engine	X 20 XEV		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	1998	Astra-G	Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	EUROPE	1998	Astra-G	Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	1998	Astra-G	Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	1998	Astra-G	Body	Immobiliser		X	X	X	X		1.Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	1998	Astra-G	Body	Instrument		X	X	X	X		
OPEL	EUROPE	1998	Astra-G	Body	Airbag SAB6		X	X	X	X		
OPEL	EUROPE	1998	Astra-G	Body	Anti Theft Warning		X	X	X	X		
OPEL	EUROPE	1998	Astra-G	Body	Central Door Lock		X	X	X	X		
OPEL	EUROPE	1998	Astra-G	Body	Engine Cooling Module		X	X	X	X		
OPEL	EUROPE	2011	Astra-H	Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2011	Astra-H	Engine	Z 12 XEP		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-H	Engine	Z13DTH		X	X	X	X	X	ECU Control Program High Speed CAN-Bus Configuration Reset ECU Program Injector
OPEL	EUROPE	2011	Astra-H	Engine	Y 13 DTH		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-H	Engine	Z14XEL		X	X	X	X	X	ECU Control Program Idle Speed Reset 02-Loop Block Learn Map Program High Speed CAN-Bus Configuration Reset ECU
OPEL	EUROPE	2011	Astra-H	Engine	Z14XEP		X	X	X	X	X	ECU Control Program Idle Speed Reset 02-Loop Block Learn Map Program High Speed CAN-Bus Configuration Reset ECU
OPEL	EUROPE	2011	Astra-H	Engine	Z16XEP		X	X	X	X	X	ECU Control Program Idle Speed Reset 02-Loop Block Learn Map Program High Speed CAN-Bus Configuration Reset ECU
OPEL	EUROPE	2011	Astra-H	Engine	Z16XER		X	X	X	X	X	ECU Control Program Idle Speed Reset Learned Values Program High Speed CAN-Bus Configuration Reset ECU
OPEL	EUROPE	2011	Astra-H	Engine	Z 16 LET		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-H	Engine	Z 16 XE1		X	X	X	X	X	

OPEL	EUROPE	2011	Astra-H		Engine	Z 17DTH		X	X	X	X	X	1.Program High Speed CAN-Bus Configuration 2.Reset ECU 3.Replace Injector 4.Replace Rail Pressure Sensor 7.Program Idle Speed
OPEL	EUROPE	2011	Astra-H		Engine	Z 17 DTR		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Pressure sensor 5.Regeneration Diesel Particulate Filter 6.Program High Speed CAN-Bus Configuration 7.Reset ECU 8.Program Idle Speed
OPEL	EUROPE	2011	Astra-H		Engine	Z 17 DTJ		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Pressure sensor 5.Regeneration Diesel Particulate Filter 6.Replace Fuel Pump 7.Program High Speed CAN-Bus Configuration 8.Reset ECU 9.Program Idle Speed
OPEL	EUROPE	2011	Astra-H		Engine	Z 17 DTL		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-H		Engine	Z18XE		X	X	X	X	X	ECU Control Program High Speed CAN-Bus Configuration Reset ECU
OPEL	EUROPE	2011	Astra-H		Engine	Z18XER		X	X	X	X	X	Program Idle Speed Reset Learned Values Program High Speed CAN-Bus Configuration Reset ECU
OPEL	EUROPE	2011	Astra-H		Engine	Z19DT		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Progressure sensor 5.Reset Engine Oil Life 6.Regeneration Diesel Particulate Filter 7.Replace Injector *8.Program Injector 9.Program High Speed CAN-Bus Configuration 10.Reset ECU 11.Replace O2 Sensor 12.Program Idle Speed

OPEL	EUROPE	2011	Astra-H		Engine	Z19DTH		X	X	X	X	X	1.Replace Mass air flow sensor 2.Replace Precatalyst 3.Replace Rail Progressure sensor 4.Regeneration Diesel Particulate Filter 5.Replace Disel Particulate Filter 6.Replace Injector *7.Program Injector 8. Program High Speed CAN-Bus Configuration 9. Reset ECU 10. Replace O2 Sensor 11. Program Idle Speed
OPEL	EUROPE	2011	Astra-H		Engine	Z 20 LEH		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-H		Engine	Z 20 LEL		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-H		Engine	Z 20 LER		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-H		Engine	Z 22 YH		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-H		Transmission	AF 17-4		X	X	X	X		*1.Program High Speed CAN-Bus Configuration *2.Reset ECU *3.Reset Learned Values *4.Pressure Regulator
OPEL	EUROPE	2011	Astra-H		Transmission	AF 22-4		X	X	X	X	X	*1.Reset ECU *2. Program High Speed CAN-Bus Config. *3. Reset Learned Values *4.Pressure Regulator Sol.Valve Test
OPEL	EUROPE	2011	Astra-H		Transmission	MTA (Easytronic)		X	X	X	X	X	*1.Clutch Control Test *2.Bleed Clutch Hydraulic *3. Learn Gearbox Parameters *4.Touch Point adaption
OPEL	EUROPE	2011	Astra-H		Transmission	MTA (Easytronic Magneti Marelli)		X	X	X	X	X	*1.Pump Relay Test *2.Clutch Control Test *3.Gear Selection Solenoid Valve Test *4.Shift Solenoid Valve Test *5.Program Vehicle Identification NO. *6.Bleed Clutch Hydraulic
OPEL	EUROPE	2011	Astra-H		Chassis	ABS/TC/ESP ECU (Electronic Control Unit)		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-H		Chassis	EHPS (Electro Hydraulic Power Steering)		X	X	X	X		
OPEL	EUROPE	2011	Astra-H		Chassis	CDC (Continuous Damping Control)		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-H		Body	SDM (Airbag)		X	X	X	X		
OPEL	EUROPE	2011	Astra-H		Body	CIM (Steering Column Module)		X	X	X	X	X	Erase Transponder-Keys And Remote Program Transponder-Keys And Remote
OPEL	EUROPE	2011	Astra-H		Body	IPC ECU (Instrument Control unit)		X	X	X	X		
OPEL	EUROPE	2011	Astra-H		Body	REC (Rear Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2011	Astra-H		Body	UEC (Underhood Electrical Centre)		X	X	X	X		

OPEL	EUROPE	2011	Astra-H		Body	PAS(Park Pilot)		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-H		Body	PEPS(Open and Start)		X	X	X	X		
OPEL	EUROPE	2011	Astra-H		Body	SLM(Shift Lever Module)		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-H		Body	Electrohydraulic Hardtop		X	X	X	X		Selftest Program Low Speed CAN-Bus Config. Program Vehicle Identification No.
OPEL	EUROPE	2010	Astra-H		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2010	Astra-H		Engine	Z 12 XEP		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-H		Engine	Z13DTH		X	X	X	X	X	ECU Control Program High Speed CAN-Bus Configuration Reset ECU Program Injector
OPEL	EUROPE	2010	Astra-H		Engine	Y 13 DTH		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-H		Engine	Z14XEL		X	X	X	X	X	ECU Control Program Idle Speed Reset 02-Loop Block Learn Map Program High Speed CAN-Bus Configuration Reset ECU
OPEL	EUROPE	2010	Astra-H		Engine	Z14XEP		X	X	X	X	X	ECU Control Program Idle Speed Reset 02-Loop Block Learn Map Program High Speed CAN-Bus Configuration Reset ECU
OPEL	EUROPE	2010	Astra-H		Engine	Z16XEP		X	X	X	X	X	ECU Control Program Idle Speed Reset 02-Loop Block Learn Map Program High Speed CAN-Bus Configuration Reset ECU
OPEL	EUROPE	2010	Astra-H		Engine	Z16XER		X	X	X	X	X	ECU Control Program Idle Speed Reset Learned Values Program High Speed CAN-Bus Configuration Reset ECU
OPEL	EUROPE	2010	Astra-H		Engine	Z 16 LET		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-H		Engine	Z 16 XE1		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-H		Engine	Z17DTH		X	X	X	X	X	1. Program High Speed CAN-Bus Configuration 2. Reset ECU 3. Replace Injector 4. Replace Rail Pressure Sensor 7. Program Idle Speed

OPEL	EUROPE	2010	Astra-H		Engine	Z 17 DTR		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Pressure sensor 5.Regeneration Diesel Particulate Filter 6.Program High Speed CAN-Bus Configuration 7.Reset ECU 8.Program Idle Speed
OPEL	EUROPE	2010	Astra-H		Engine	Z 17 DTJ		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Pressure sensor 5.Regeneration Diesel Particulate Filter 6.Replace Fuel Pump 7.Program High Speed CAN-Bus Configuration 8.Reset ECU 9.Program Idle Speed
OPEL	EUROPE	2010	Astra-H		Engine	Z 17 DTL		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-H		Engine	Z18XE		X	X	X	X	X	ECU Control Program High Speed CAN-Bus Configuration Reset ECU
OPEL	EUROPE	2010	Astra-H		Engine	Z18XER		X	X	X	X	X	Program Idle Speed Reset Learned Values Program High Speed CAN-Bus Configuration Reset ECU
OPEL	EUROPE	2010	Astra-H		Engine	Z19DT		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Progressure sensor 5.Reset Engine Oil Life 6.Regeneration Diesel Particulate Filter 7.Replace Injector *8.Program Injector 9.Program High Speed CAN-Bus Configuration 10.Reset ECU 11.Replace O2 Sensor 12.Program Idle Speed

OPEL	EUROPE	2010	Astra-H		Engine	Z19DTH		X	X	X	X	X	1.Replace Mass air flow sensor 2.Replace Precatalyst 3.Replace Rail Progressure sensor 4.Regeneration Diesel Particulate Filter 5.Replace Disel Particulate Filter 6.Replace Injector *7.Program Injector 8. Program High Speed CAN-Bus Configuration 9. Reset ECU 10. Replace O2 Sensor 11. Program Idle Speed
OPEL	EUROPE	2010	Astra-H		Engine	Z 20 LEH		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-H		Engine	Z 20 LEL		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-H		Engine	Z 20 LER		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-H		Engine	Z 22 YH		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-H		Transmission	AF 17-4		X	X	X	X		*1. Program High Speed CAN-Bus Configuration *2. Reset ECU *3. Reset Learned Values *4. Pressure Regulator
OPEL	EUROPE	2010	Astra-H		Transmission	AF 22-4		X	X	X	X	X	*1. Reset ECU *2. Program High Speed CAN-Bus Config. *3. Reset Learned Values *4. Pressure Regulator Sol.Valve Test
OPEL	EUROPE	2010	Astra-H		Transmission	MTA (Easytronic)		X	X	X	X	X	*1.Clutch Control Test *2.Bleed Clutch Hydraulic *3. Learn Gearbox Parameters *4.Touch Point adaption
OPEL	EUROPE	2010	Astra-H		Transmission	MTA (Easytronic Magneti Marelli)		X	X	X	X	X	*1.Pump Relay Test *2.Clutch Control Test *3.Gear Selection Solenoid Valve Test *4.Shift Solenoid Valve Test *5.Program Vehicle Identification NO. *6.Bleed Clutch Hydraulic
OPEL	EUROPE	2010	Astra-H		Chassis	ABS/TC/ESP ECU (Electronic Control Unit)		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-H		Chassis	EHPS (Electro Hydraulic Power Steering)		X	X	X	X		
OPEL	EUROPE	2010	Astra-H		Chassis	CDC (Continuous Damping Control)		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-H		Body	SDM (Airbag)		X	X	X	X		
OPEL	EUROPE	2010	Astra-H		Body	CIM (Steering Column Module)		X	X	X	X	X	Erase Transponder-Keys And Remote Program Transponder-Keys And Remote
OPEL	EUROPE	2010	Astra-H		Body	IPC ECU (Instrument Control unit)		X	X	X	X		
OPEL	EUROPE	2010	Astra-H		Body	REC (Rear Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2010	Astra-H		Body	UEC (Underhood Electrical Centre)		X	X	X	X		

OPEL	EUROPE	2010	Astra-H		Body	PAS(Park Pilot)		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-H		Body	PEPS(Open and Start)		X	X	X	X		
OPEL	EUROPE	2010	Astra-H		Body	SLM(Shift Lever Module)		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-H		Body	Electrohydraulic Hardtop		X	X	X	X		Selftest Program Low Speed CAN-Bus Config. Program Vehicle Identification No.
OPEL	EUROPE	2009	Astra-H		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2009	Astra-H		Engine	Z 12 XEP		X	X	X	X	X	
OPEL	EUROPE	2009	Astra-H		Engine	Y 13 DTH		X	X	X	X	X	
OPEL	EUROPE	2009	Astra-H		Engine	Z 13 DTH		X	X	X	X	X	ECU Control(Injector cutoff test) Program High CanBus Configuration ECU Reset Program Injector
OPEL	EUROPE	2009	Astra-H		Engine	Z 14 XEL		X	X	X	X		
OPEL	EUROPE	2009	Astra-H		Engine	Z 14 XEP		X	X	X	X		
OPEL	EUROPE	2009	Astra-H		Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2009	Astra-H		Engine	Z 16 XER		X	X	X	X		Injector Cutoff Test
OPEL	EUROPE	2009	Astra-H		Engine	Z 16 LET		X	X	X	X	X	
OPEL	EUROPE	2009	Astra-H		Engine	Z 16 XE1		X	X	X	X	X	
OPEL	EUROPE	2009	Astra-H		Engine	Z 17 DTH		X	X	X	X	X	1. Program High Speed CAN-Bus Configuration 2. Reset ECU 3. Replace Injector 4. Replace Rail Pressure Sensor 7. Program Idle Speed
OPEL	EUROPE	2009	Astra-H		Engine	Z 17 DTR		X	X	X	X	X	1. Replace Diesel Particulate Filter 2. Replace Mass air flow sensor 3. Replace Precatalyst 4. Replace Rail Pressure sensor 5. Regeneration Diesel Particulate Filter 6. Program High Speed CAN-Bus Configuration 7. Reset ECU 8. Program Idle Speed
OPEL	EUROPE	2009	Astra-H		Engine	Z 17 DTJ		X	X	X	X	X	1. Replace Diesel Particulate Filter 2. Replace Mass air flow sensor 3. Replace Precatalyst 4. Replace Rail Pressure sensor 5. Regeneration Diesel Particulate Filter 6. Replace Fuel Pump 7. Program High Speed CAN-Bus Configuration 8. Reset ECU 9. Program Idle Speed
OPEL	EUROPE	2009	Astra-H		Engine	Z 17 DTL		X	X	X	X	X	
OPEL	EUROPE	2009	Astra-H		Engine	Z 18 XE		X	X	X	X		Injector Cutoff Test
OPEL	EUROPE	2009	Astra-H		Engine	Z 18 XER		X	X	X	X	X	Injector Cutoff Test

OPEL	EUROPE	2009	Astra-H		Engine	Z 19 DT		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Progressure sensor 5.Reset Engine Oil Life 6.Regeneration Diesel Particulate Filter 7.Replace Injector *8.Program Injector 9.Program High Speed CAN-Bus Configuration 10.Reset ECU 11.Replace O2 Sensor 12.Program Idle Speed
OPEL	EUROPE	2009	Astra-H		Engine	Z 19 DTH		X	X	X	X	X	1.Replace Mass air flow sensor 2.Replace Precatalyst 3.Replace Rail Progressure sensor 4.Regeneration D. Particulate Filter 5.Replace DPF 6.Replace Injector *7.Program Injector 8.Program High Speed CAN-Bus Configuration 9.Reset ECU 10.Replace O2 Sensor 12.Program Idle Speed
OPEL	EUROPE	2009	Astra-H		Engine	Z 20 LEH		X	X	X	X	X	
OPEL	EUROPE	2009	Astra-H		Engine	Z 20 LEL		X	X	X	X	X	
OPEL	EUROPE	2009	Astra-H		Engine	Z 20 LER		X	X	X	X	X	
OPEL	EUROPE	2009	Astra-H		Engine	Z 22 YH		X	X	X	X	X	
OPEL	EUROPE	2009	Astra-H		Transmission	MTA(Easytronic)		X	X	X	X	X	*1.Clutch Control Test *2.Bleed Clutch Hydraulic *3.Learn Gearbox Parameters *4.Touch Point adaption
OPEL	EUROPE	2009	Astra-H		Transmission	MTA(Easytronic Magneti Marelli)		X	X	X	X	X	*1.Pump Relay Test *2.Clutch Control Test *3.Gear Selection Solenoid Valve Test *4.Shift Solenoid Valve Test *5.Program Vehicle Identification NO. *6.Bleed Clutch Hydraulic
OPEL	EUROPE	2009	Astra-H		Transmission	AF 22-4		X	X	X	X	X	*1.Program High Speed CAN-Bus Configuration *2.Reset ECU *3.Reset Learned Values *4.Pressure Regulator
OPEL	EUROPE	2009	Astra-H		Transmission	AF 17-4		X	X	X	X		*1.Reset ECU *2.Program High Speed CAN-Bus Config. *3.Reset Learned Values *4.Pressure Regulator Sol.Valve Test
OPEL	EUROPE	2009	Astra-H		Chassis	ABS/TC/ESP ECU (Electronic Control unit)		X	X	X	X	X	

OPEL	EUROPE	2009	Astra-H		Chassis	EHPS (Electrohydraulic Power Steering)		X	X	X	X		
OPEL	EUROPE	2009	Astra-H		Chassis	CDC(Continuous Damping Control)		X	X	X	X	X	
OPEL	EUROPE	2009	Astra-H		Body	PEPS(Open&Start)		X	X	X	X		
OPEL	EUROPE	2009	Astra-H		Body	PAS(Park Pilot)		X	X	X	X	X	
OPEL	EUROPE	2009	Astra-H		Body	SLM(Shift Lever Module)		X	X	X	X	X	
OPEL	EUROPE	2009	Astra-H		Body	SDM (Airbag)		X	X	X	X		
OPEL	EUROPE	2009	Astra-H		Body	CIM (Steering Column Module)		X	X	X	X		
OPEL	EUROPE	2009	Astra-H		Body	IPC ECU (Instrument Control unit)		X	X	X	X		
OPEL	EUROPE	2009	Astra-H		Body	REC (Rear Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2009	Astra-H		Body	UEC (Underhood Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2009	Astra-H		Body	Electrohydraulic Hardtop		X	X	X	X		Selftest Program Low Speed CAN-Bus Config. Program Vehicle Identification No.
OPEL	EUROPE	2008	Astra-H		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2008	Astra-H		Engine	Z 12 XEP		X	X	X	X	X	
OPEL	EUROPE	2008	Astra-H		Engine	Y 13 DTH		X	X	X	X	X	
OPEL	EUROPE	2008	Astra-H		Engine	Z 13 DTH		X	X	X	X	X	ECU Control(Injector cutoff test) Program High CanBus Configuration ECU Reset Program Injector
OPEL	EUROPE	2008	Astra-H		Engine	Z 14 XEL		X	X	X	X		
OPEL	EUROPE	2008	Astra-H		Engine	Z 14 XEP		X	X	X	X		
OPEL	EUROPE	2008	Astra-H		Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2008	Astra-H		Engine	Z 16 LET		X	X	X	X	X	
OPEL	EUROPE	2008	Astra-H		Engine	Z 16 XE1		X	X	X	X	X	
OPEL	EUROPE	2008	Astra-H		Engine	Z 16 XER		X	X	X	X		Injector Cutoff Test
OPEL	EUROPE	2008	Astra-H		Engine	Z 17 DTH		X	X	X	X	X	1.Program High Speed CAN-Bus Configuration 2.Reset ECU 3.Replace Injector 4.Replace Rail Pressure Sensor 7.Program Idle Speed
OPEL	EUROPE	2008	Astra-H		Engine	Z 17 DTR		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Pressure sensor 5.Regeneration Diesel Particulate Filter 6.Program High Speed CAN-Bus Configuration 7.Reset ECU 8.Program Idle Speed

OPEL	EUROPE	2008	Astra-H		Engine	Z 17 DTJ		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Pressure sensor 5.Regeneration Diesel Particulate Filter 6.Replace Fuel Pump 7.Program High Speed CAN-Bus Configuration 8.Reset ECU 9.Program Idle Speed
OPEL	EUROPE	2008	Astra-H		Engine	Z 18 XE		X	X	X	X		Injector Cutoff Test
OPEL	EUROPE	2008	Astra-H		Engine	Z 18 XER		X	X	X	X	X	Injector Cutoff Test
OPEL	EUROPE	2008	Astra-H		Engine	Z 19 DT		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Progressure sensor 5.Reset Engine Oil Life 6.Regeneration Diesel Particulate Filter 7.Replace Injector *8.Program Injector 9.Program High Speed CAN-Bus Configuration 10.Reset ECU 11.Replace O2 Sensor 12.Program Idle Speed
OPEL	EUROPE	2008	Astra-H		Engine	Z 19 DTH		X	X	X	X	X	1.Replace Mass air flow sensor 2.Replace Precatalyst 3.Replace Rail Progressure sensor 4.Regeneration D. Particulate Filter 5.Replace DPF 6.Replace Injector *7.Program Injector 8.Program High Speed CAN-Bus Configuration 9.Reset ECU 10.Replace O2 Sensor 12.Program Idle Speed
OPEL	EUROPE	2008	Astra-H		Engine	Z 20 LEH		X	X	X	X	X	
OPEL	EUROPE	2008	Astra-H		Engine	Z 17 DTL		X	X	X	X	X	
OPEL	EUROPE	2008	Astra-H		Engine	Z 20 LEL		X	X	X	X	X	
OPEL	EUROPE	2008	Astra-H		Engine	Z 20 LER		X	X	X	X	X	
OPEL	EUROPE	2008	Astra-H		Engine	Z 22 YH		X	X	X	X	X	
OPEL	EUROPE	2008	Astra-H		Transmission	MTA(Easytronic)		X	X	X	X	X	*1.Clutch Control Test *2.Bleed Clutch Hydraulic *3.Learn Gearbox Parameters *4.Touch Point adaption

OPEL	EUROPE	2008	Astra-H		Transmission	MTA (Easytronic Magneti Marelli)		X	X	X	X	X	*1.Pump Relay Test *2.Clutch Control Test *3.Gear Selection Solenoid Valve Test *4.Shift Solenoid Valve Test *5.Program Vehicle Identification NO. *6.Bleed Clutch Hydraulic
OPEL	EUROPE	2008	Astra-H		Transmission	AF 22-4		X	X	X	X	X	*1.Program High Speed CAN-Bus Configuration *2.Reset ECU *3.Reset Learned Values *4.Pressure Regulator
OPEL	EUROPE	2008	Astra-H		Transmission	AF 17-4		X	X	X	X		*1.Reset ECU *2.Program High Speed CAN-Bus Config. *3.Reset Learned Values *4.Pressure Regulator Sol.Valve Test
OPEL	EUROPE	2008	Astra-H		Chassis	ABS/TC/ESP ECU (Electronic Control unit)		X	X	X	X	X	
OPEL	EUROPE	2008	Astra-H		Chassis	EHPS (Electrohydraulic Power Steering)		X	X	X	X		
OPEL	EUROPE	2008	Astra-H		Chassis	CDC (Continuous Damping Control)		X	X	X	X	X	
OPEL	EUROPE	2008	Astra-H		Body	PEPS (Open&Start)		X	X	X	X		
OPEL	EUROPE	2008	Astra-H		Body	PAS (Park Pilot)		X	X	X	X	X	
OPEL	EUROPE	2008	Astra-H		Body	SLM (Shift Lever Module)		X	X	X	X	X	
OPEL	EUROPE	2008	Astra-H		Body	SDM (Airbag)		X	X	X	X		
OPEL	EUROPE	2008	Astra-H		Body	CIM (Steering Column Module)		X	X	X	X		
OPEL	EUROPE	2008	Astra-H		Body	IPC ECU (Instrument Control unit)		X	X	X	X		
OPEL	EUROPE	2008	Astra-H		Body	REC (Rear Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2008	Astra-H		Body	UEC (Underhood Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2008	Astra-H		Body	Electrohydraulic Hardtop		X	X	X	X		Selftest Program Low Speed CAN-Bus Config. Program Vehicle Identification No.
OPEL	EUROPE	2007	Astra-H		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2007	Astra-H		Engine	Z 12 XEP		X	X	X	X	X	
OPEL	EUROPE	2007	Astra-H		Engine	Y 13 DTH		X	X	X	X	X	
OPEL	EUROPE	2007	Astra-H		Engine	Z 13 DTH		X	X	X	X	X	ECU Control (Injector cutoff test) Program High CanBus Configuration ECU Reset Program Injector
OPEL	EUROPE	2007	Astra-H		Engine	Z 14 XEL		X	X	X	X		
OPEL	EUROPE	2007	Astra-H		Engine	Z 14 XEP		X	X	X	X		
OPEL	EUROPE	2007	Astra-H		Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2007	Astra-H		Engine	Z 16 XER		X	X	X	X		Injector Cutoff Test
OPEL	EUROPE	2007	Astra-H		Engine	Z 16 LET		X	X	X	X	X	
OPEL	EUROPE	2007	Astra-H		Engine	Z 16 XE1		X	X	X	X	X	

OPEL	EUROPE	2007	Astra-H		Engine	Z 17 DTH		X	X	X	X	X	1.Program High Speed CAN-Bus Configuration 2.Reset ECU 3.Replace Injector 4.Replace Rail Pressure Sensor 7.Program Idle Speed
OPEL	EUROPE	2007	Astra-H		Engine	Z 17 DTR		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Pressure sensor 5.Regeneration Diesel Particulate Filter 6.Program High Speed CAN-Bus Configuration 7.Reset ECU 8.Program Idle Speed
OPEL	EUROPE	2007	Astra-H		Engine	Z 17 DTJ		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Pressure sensor 5.Regeneration Diesel Particulate Filter 6.Replace Fuel Pump 7.Program High Speed CAN-Bus Configuration 8.Reset ECU 9.Program Idle Speed
OPEL	EUROPE	2007	Astra-H		Engine	Z 18 XE		X	X	X	X		Injector Cutoff Test
OPEL	EUROPE	2007	Astra-H		Engine	Z 18 XER		X	X	X	X	X	Injector Cutoff Test
OPEL	EUROPE	2007	Astra-H		Engine	Z 19 DT		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Progressure sensor 5.Reset Engine Oil Life 6.Regeneration Diesel Particulate Filter 7.Replace Injector *8.Program Injector 9.Program High Speed CAN-Bus Configuration 10.Reset ECU 11.Replace O2 Sensor 12.Program Idle Speed

OPEL	EUROPE	2007	Astra-H		Engine	Z 19 DTH		X	X	X	X	X	1.Replace Mass air flow sensor 2.Replace Precatalyst 3.Replace Rail Progressure sensor 4.Regeneration D. Particulate Filter 5.Replace DPF 6.Replace Injector *7.Program Injector 8.Program High Speed CAN-Bus Configuration 9.Reset ECU 10.Replace O2 Sensor 12.Program Idle Speed
OPEL	EUROPE	2007	Astra-H		Engine	Z 20 LEH		X	X	X	X	X	
OPEL	EUROPE	2007	Astra-H		Engine	Z 17 DTL		X	X	X	X	X	
OPEL	EUROPE	2007	Astra-H		Engine	Z 20 LEL		X	X	X	X	X	
OPEL	EUROPE	2007	Astra-H		Engine	Z 20 LER		X	X	X	X	X	
OPEL	EUROPE	2007	Astra-H		Engine	Z 22 YH		X	X	X	X	X	
OPEL	EUROPE	2007	Astra-H		Transmission	MTA (Easytronic)		X	X	X	X	X	*1.Clutch Control Test *2.Bleed Clutch Hydraulic *3.Learn Gearbox Parameters *4.Touch Point adaption
OPEL	EUROPE	2007	Astra-H		Transmission	MTA (Easytronic Magneti Marelli)		X	X	X	X	X	*1.Pump Relay Test *2.Clutch Control Test *3.Gear Selection Solenoid Valve Test *4.Shift Solenoid Valve Test *5.Program Vehicle Identification NO. *6.Bleed Clutch Hydraulic
OPEL	EUROPE	2007	Astra-H		Transmission	AF 22-4		X	X	X	X	X	*1.Program High Speed CAN-Bus Configuration *2.Reset ECU *3.Reset Learned Values *4.Pressure Regulator
OPEL	EUROPE	2007	Astra-H		Transmission	AF 17-4		X	X	X	X		*1.Reset ECU *2.Program High Speed CAN-Bus Config. *3.Reset Learned Values *4.Pressure Regulator Sol.Valve Test
OPEL	EUROPE	2007	Astra-H		Chassis	ABS/TC/ESP ECU (Electronic Control unit)		X	X	X	X	X	
OPEL	EUROPE	2007	Astra-H		Chassis	EHPS (Electrohydraulic Power Steering)		X	X	X	X		
OPEL	EUROPE	2007	Astra-H		Chassis	CDC (Continuous Damping Control)		X	X	X	X	X	
OPEL	EUROPE	2007	Astra-H		Body	PEPS (Open&Start)		X	X	X	X		
OPEL	EUROPE	2007	Astra-H		Body	PAS (Park Pilot)		X	X	X	X	X	
OPEL	EUROPE	2007	Astra-H		Body	SLM (Shift Lever Module)		X	X	X	X	X	
OPEL	EUROPE	2007	Astra-H		Body	SDM (Airbag)		X	X	X	X		
OPEL	EUROPE	2007	Astra-H		Body	CIM (Steering Column Module)		X	X	X	X		
OPEL	EUROPE	2007	Astra-H		Body	IPC ECU (Instrument Control unit)		X	X	X	X		

OPEL	EUROPE	2007	Astra-H		Body	REC (Rear Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2007	Astra-H		Body	UEC (Underhood Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2007	Astra-H		Body	Electrohydraulic Hardtop		X	X	X	X		Selftest Program Low Speed CAN-Bus Config. Program Vehicle Identification No.
OPEL	EUROPE	2006	Astra-H		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2006	Astra-H		Engine	Z 12 XEP		X	X	X	X	X	
OPEL	EUROPE	2006	Astra-H		Engine	Y 13 DTH		X	X	X	X	X	
OPEL	EUROPE	2006	Astra-H		Engine	Z 13 DTH		X	X	X	X	X	ECU Control(Injector cutoff test) Program High CanBus Configuration ECU Reset Program Injector
OPEL	EUROPE	2006	Astra-H		Engine	Z 14 XEL		X	X	X	X		
OPEL	EUROPE	2006	Astra-H		Engine	Z 14 XEP		X	X	X	X		
OPEL	EUROPE	2006	Astra-H		Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2006	Astra-H		Engine	Z 17 DTH		X	X	X	X	X	1. Program High Speed CAN-Bus Configuration 2. Reset ECU 3. Replace Injector 4. Replace Rail Pressure Sensor 7. Program Idle Speed
OPEL	EUROPE	2006	Astra-H		Engine	Z 18 XE		X	X	X	X		Injector Cutoff Test
OPEL	EUROPE	2006	Astra-H		Engine	Z 18 XER		X	X	X	X	X	Injector Cutoff Test
OPEL	EUROPE	2006	Astra-H		Engine	Z 19 DT		X	X	X	X	X	1. Replace Diesel Particulate Filter 2. Replace Mass air flow sensor 3. Replace Precatalyst 4. Replace Rail Progressure sensor 5. Reset Engine Oil Life 6. Regeneration Diesel Particulate Filter 7. Replace Injector *8. Program Injector 9. Program High Speed CAN-Bus Configuration 10. Reset ECU 11. Replace O2 Sensor 12. Program Idle Speed
OPEL	EUROPE	2006	Astra-H		Engine	Z 19 DTH		X	X	X	X	X	1. Replace Mass air flow sensor 2. Replace Precatalyst 3. Replace Rail Progressure sensor 4. Regeneration D. Particulate Filter 5. Replace DPF 6. Replace Injector *7. Program Injector 8. Program High Speed CAN-Bus Configuration 9. Reset ECU 10. Replace O2 Sensor 12. Program Idle Speed

OPEL	EUROPE	2006	Astra-H		Engine	Z 20 LEH		X	X	X	X	X	
OPEL	EUROPE	2006	Astra-H		Engine	Z 17 DTL		X	X	X	X	X	
OPEL	EUROPE	2006	Astra-H		Engine	Z 20 LEL		X	X	X	X	X	
OPEL	EUROPE	2006	Astra-H		Engine	Z 20 LER		X	X	X	X	X	
OPEL	EUROPE	2006	Astra-H		Engine	Z 22 YH		X	X	X	X	X	
OPEL	EUROPE	2006	Astra-H		Transmission	MTA(Easytronic)		X	X	X	X	X	*1.Clutch Control Test *2.Bleed Clutch Hydraulic *3.Learn Gearbox Parameters *4.Touch Point adaption
OPEL	EUROPE	2006	Astra-H		Transmission	MTA(Easytronic Magneti Marelli)		X	X	X	X	X	*1.Pump Relay Test *2.Clutch Control Test *3.Gear Selection Solenoid Valve Test *4.Shift Solenoid Valve Test *5.Program Vehicle Identification NO. *6.Bleed Clutch Hydraulic
OPEL	EUROPE	2006	Astra-H		Transmission	AF 22-4		X	X	X	X	X	*1.Program High Speed CAN-Bus Configuration *2.Reset ECU *3.Reset Learned Values *4.Pressure Regulator
OPEL	EUROPE	2006	Astra-H		Transmission	AF 17-4		X	X	X	X		*1.Reset ECU *2.Program High Speed CAN-Bus Config. *3.Reset Learned Values *4.Pressure Regulator Sol.Valve Test
OPEL	EUROPE	2006	Astra-H		Chassis	ABS/TC/ESP ECU (Electronic Control unit)		X	X	X	X	X	
OPEL	EUROPE	2006	Astra-H		Chassis	EHPS (Electrohydraulic Power Steering)		X	X	X	X		
OPEL	EUROPE	2006	Astra-H		Chassis	CDC(Continuous Damping Control)		X	X	X	X	X	
OPEL	EUROPE	2006	Astra-H		Body	PEPS (Open&Start)		X	X	X	X		
OPEL	EUROPE	2006	Astra-H		Body	PAS(Park Pilot)		X	X	X	X	X	
OPEL	EUROPE	2006	Astra-H		Body	SLM(Shift Lever Module)		X	X	X	X	X	
OPEL	EUROPE	2006	Astra-H		Body	SDM (Airbag)		X	X	X	X		
OPEL	EUROPE	2006	Astra-H		Body	CIM (Steering Column Module)		X	X	X	X		
OPEL	EUROPE	2006	Astra-H		Body	IPC ECU (Instrument Control unit)		X	X	X	X		
OPEL	EUROPE	2006	Astra-H		Body	REC (Rear Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2006	Astra-H		Body	UEC (Underhood Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2006	Astra-H		Body	Electrohydraulic Hardtop		X	X	X	X		Selftest Program Low Speed CAN-Bus Config. Program Vehicle Identification No.
OPEL	EUROPE	2005	Astra-H		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2005	Astra-H		Engine	Z 13 DTH		X	X	X	X	X	ECU Control(Injector cutoff test) Program High CanBus Configuration ECU Reset Program Injector
OPEL	EUROPE	2005	Astra-H		Engine	Z 14 XEP		X	X	X	X		

OPEL	EUROPE	2005	Astra-H		Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2005	Astra-H		Engine	Z 17 DTH		X	X	X	X	X	1. Program High Speed CAN-Bus Configuration 2. Reset ECU 3. Replace Injector 4. Replace Rail Pressure Sensor 7. Program Idle Speed
OPEL	EUROPE	2005	Astra-H		Engine	Z 18 XE		X	X	X	X		Injector Cutoff Test
OPEL	EUROPE	2005	Astra-H		Engine	Z 19 DTH		X	X	X	X	X	1. Replace Mass air flow sensor 2. Replace Precatalyst 3. Replace Rail Progressure sensor 4. Regeneration D. Particulate Filter 5. Replace DPF 6. Replace Injector *7. Program Injector 8. Program High Speed CAN-Bus Configuration 9. Reset ECU 10. Replace O2 Sensor 12. Program Idle Speed
OPEL	EUROPE	2005	Astra-H		Engine	Z 20 LEH		X	X	X	X	X	
OPEL	EUROPE	2005	Astra-H		Transmission	AF 17-4		X	X	X	X		*1. Reset ECU *2. Program High Speed CAN-Bus Config. *3. Reset Learned Values *4. Pressure Regulator Sol. Valve Test
OPEL	EUROPE	2005	Astra-H		Chassis	ABS/TC/ESP ECU (Electronic Control unit)		X	X	X	X	X	
OPEL	EUROPE	2005	Astra-H		Chassis	EHPS (Electrohydraulic Power Steering)		X	X	X	X		
OPEL	EUROPE	2005	Astra-H		Body	SDM (Airbag)		X	X	X	X		
OPEL	EUROPE	2005	Astra-H		Body	CIM (Steering Column Module)		X	X	X	X		
OPEL	EUROPE	2005	Astra-H		Body	IPC ECU (Instrument Control unit)		X	X	X	X		
OPEL	EUROPE	2005	Astra-H		Body	REC (Rear Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2005	Astra-H		Body	UEC (Underhood Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2004	Astra-H		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2004	Astra-H		Engine	Z 14 XEP		X	X	X	X		
OPEL	EUROPE	2004	Astra-H		Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2004	Astra-H		Engine	Z 17 DTH		X	X	X	X	X	1. Program High Speed CAN-Bus Configuration 2. Reset ECU 3. Replace Injector 4. Replace Rail Pressure Sensor 7. Program Idle Speed
OPEL	EUROPE	2004	Astra-H		Engine	Z 18 XE		X	X	X	X		Injector Cutoff Test

OPEL	EUROPE	2004	Astra-H		Transmission	AF 17-4		X	X	X	X		*1.Reset ECU *2.Program High Speed CAN-Bus Config. *3.Reset Learned Values *4.Pressure Regulator Sol.Valve Test
OPEL	EUROPE	2004	Astra-H		Chassis	ABS/TC/ESP ECU (Electronic Control unit)		X	X	X	X	X	
OPEL	EUROPE	2004	Astra-H		Chassis	EHPS (Electrohydraulic Power Steering)		X	X	X	X		
OPEL	EUROPE	2004	Astra-H		Body	SDM (Airbag)		X	X	X	X		
OPEL	EUROPE	2004	Astra-H		Body	CIM (Steering Column Module)		X	X	X	X		
OPEL	EUROPE	2004	Astra-H		Body	IPC ECU (Instrument Control unit)		X	X	X	X		
OPEL	EUROPE	2004	Astra-H		Body	REC (Rear Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2004	Astra-H		Body	UEC (Underhood Electrical Centre)		X	X	X	X		
OPEL	EUROPE	1997	Calibra		Engine	X 20 XEV		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	1997	Calibra		Engine	X 25 XE		X	X	X	X		
OPEL	EUROPE	1997	Calibra		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	EUROPE	1997	Calibra		Chassis	Traction Control (TC)		X	X	X	X		
OPEL	EUROPE	1997	Calibra		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	1997	Calibra		Body	Airbag-S		X	X	X	X		
OPEL	EUROPE	2003	Corsa-B		Engine	X 14 SZ		X	X	X	X		
OPEL	EUROPE	2003	Corsa-B		Chassis	ABS-5.3		X	X	X	X	X	
OPEL	EUROPE	2003	Corsa-B		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2003	Corsa-B		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2003	Corsa-B		Body	Instrument		X	X	X	X	X	1.Service Light Reset 2.Service Due In
OPEL	EUROPE	2003	Corsa-B		Body	Airbag-S		X	X	X	X		
OPEL	EUROPE	2003	Corsa-B		Body	Airbag SAB6		X	X	X	X		
OPEL	EUROPE	2002	Corsa-B		Engine	X 14 SZ		X	X	X	X		
OPEL	EUROPE	2002	Corsa-B		Chassis	ABS-5.3		X	X	X	X	X	
OPEL	EUROPE	2002	Corsa-B		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2002	Corsa-B		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2002	Corsa-B		Body	Airbag-S		X	X	X	X		
OPEL	EUROPE	2002	Corsa-B		Body	Airbag SAB6		X	X	X	X		
OPEL	EUROPE	2001	Corsa-B		Engine	X 14 SZ		X	X	X	X		
OPEL	EUROPE	2001	Corsa-B		Chassis	ABS-5.3		X	X	X	X	X	
OPEL	EUROPE	2001	Corsa-B		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2001	Corsa-B		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2001	Corsa-B		Body	Airbag-S		X	X	X	X		
OPEL	EUROPE	2001	Corsa-B		Body	Airbag SAB6		X	X	X	X		
OPEL	EUROPE	2000	Corsa-B		Engine	X 10 XE		X	X	X	X		
OPEL	EUROPE	2000	Corsa-B		Engine	X 12 XE		X	X	X	X		
OPEL	EUROPE	2000	Corsa-B		Engine	C 14 SEL		X	X	X	X		

OPEL	EUROPE	2000	Corsa-B		Engine	X 14 SZ		X	X	X	X		
OPEL	EUROPE	2000	Corsa-B		Engine	X 14 XE		X	X	X	X		
OPEL	EUROPE	2000	Corsa-B		Engine	C 16 SEL		X	X	X	X		
OPEL	EUROPE	2000	Corsa-B		Engine	X 16 XE		X	X	X	X		
OPEL	EUROPE	2000	Corsa-B		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	EUROPE	2000	Corsa-B		Chassis	ABS-5.3		X	X	X	X	X	
OPEL	EUROPE	2000	Corsa-B		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2000	Corsa-B		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2000	Corsa-B		Body	Airbag-S		X	X	X	X		
OPEL	EUROPE	2000	Corsa-B		Body	Airbag-SAB6		X	X	X	X		
OPEL	EUROPE	1999	Corsa-B		Engine	X 10 XE		X	X	X	X		
OPEL	EUROPE	1999	Corsa-B		Engine	X 12 XE		X	X	X	X		
OPEL	EUROPE	1999	Corsa-B		Engine	C 14 SEL		X	X	X	X		
OPEL	EUROPE	1999	Corsa-B		Engine	X 14 SZ		X	X	X	X		
OPEL	EUROPE	1999	Corsa-B		Engine	X 14 XE		X	X	X	X		
OPEL	EUROPE	1999	Corsa-B		Engine	C 16 SEL		X	X	X	X		
OPEL	EUROPE	1999	Corsa-B		Engine	X 16 XE		X	X	X	X		
OPEL	EUROPE	1999	Corsa-B		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	EUROPE	1999	Corsa-B		Chassis	ABS-5.3		X	X	X	X	X	
OPEL	EUROPE	1999	Corsa-B		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	1999	Corsa-B		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	1999	Corsa-B		Body	Airbag-S		X	X	X	X		
OPEL	EUROPE	1999	Corsa-B		Body	Airbag-SAB6		X	X	X	X		
OPEL	EUROPE	1998	Corsa-B		Engine	X 10 XE		X	X	X	X		
OPEL	EUROPE	1998	Corsa-B		Engine	X 12 XE		X	X	X	X		
OPEL	EUROPE	1998	Corsa-B		Engine	C 14 NZ		X	X	X	X		
OPEL	EUROPE	1998	Corsa-B		Engine	C 14 SEL		X	X	X	X		
OPEL	EUROPE	1998	Corsa-B		Engine	X 14 SZ		X	X	X	X		
OPEL	EUROPE	1998	Corsa-B		Engine	X 14 XE		X	X	X	X		
OPEL	EUROPE	1998	Corsa-B		Engine	C 16 SEL		X	X	X	X		
OPEL	EUROPE	1998	Corsa-B		Engine	X 16 XE		X	X	X	X		
OPEL	EUROPE	1998	Corsa-B		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	EUROPE	1998	Corsa-B		Chassis	ABS-5.3		X	X	X	X	X	
OPEL	EUROPE	1998	Corsa-B		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	1998	Corsa-B		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	1998	Corsa-B		Body	Airbag-S		X	X	X	X		
OPEL	EUROPE	1997	Corsa-B		Engine	X 10 XE		X	X	X	X		
OPEL	EUROPE	1997	Corsa-B		Engine	C 14 NZ		X	X	X	X		
OPEL	EUROPE	1997	Corsa-B		Engine	X 14 SZ		X	X	X	X		
OPEL	EUROPE	1997	Corsa-B		Engine	X 14 XE		X	X	X	X		
OPEL	EUROPE	1997	Corsa-B		Engine	X 16 XE		X	X	X	X		
OPEL	EUROPE	1997	Corsa-B		Chassis	ABS-5.3		X	X	X	X	X	
OPEL	EUROPE	1997	Corsa-B		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	1997	Corsa-B		Body	Immobiliser		X	X	X	X		

OPEL	EUROPE	1997	Corsa-B		Body	Airbag-S		X	X	X	X		
OPEL	EUROPE	2011	Corsa-C		Engine	Z 10 XEP		X	X	X	X		
OPEL	EUROPE	2011	Corsa-C		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2011	Corsa-C		Engine	Z 12 XEP		X	X	X	X		
OPEL	EUROPE	2011	Corsa-C		Engine	Y 13 DT		X	X	X	X		
OPEL	EUROPE	2011	Corsa-C		Engine	Z 13 DT		X	X	X	X	X	1. Injector Cutoff Test; 2. RPM Control; 3. Program Idle Speed.
OPEL	EUROPE	2011	Corsa-C		Engine	Z 14 XE		X	X	X	X		
OPEL	EUROPE	2011	Corsa-C		Engine	Z 14 XEP		X	X	X	X	X	1. Reset Learn Values 2. Reset 02-Loop Block Lean Map 3. ECU Control-Electronic throttle control 4. Idle speed program. 5. ECU Reset
OPEL	EUROPE	2011	Corsa-C		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2011	Corsa-C		Engine	Z 16 YNG		X	X	X	X		
OPEL	EUROPE	2011	Corsa-C		Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2011	Corsa-C		Engine	Y 17 DTL		X	X	X	X		
OPEL	EUROPE	2011	Corsa-C		Engine	Z 17 DTH		X	X	X	X	X	1. Injector Cutoff Test; 2. EGR Control; 3. Replace Fuel Pump.
OPEL	EUROPE	2011	Corsa-C		Engine	Z 18 XE		X	X	X	X		
OPEL	EUROPE	2011	Corsa-C		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2011	Corsa-C		Transmission	MTA (Easytronic)		X	X	X	X	X	*Bleed Clutch Hydraulic *Learn Gearbox Parameters *Read CAN Configuration *Program CAN Configuration *Clutch Control Test
OPEL	EUROPE	2011	Corsa-C		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2011	Corsa-C		Chassis	ABS8/ESP8		X	X	X	X	X	Steering Angle Sensor Calibration
OPEL	EUROPE	2011	Corsa-C		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2011	Corsa-C		Body	Body Control Module		X	X	X	X	X	ECU Control Erase Remote Keys Program Remote Key
OPEL	EUROPE	2011	Corsa-C		Body	Immobiliser		X	X	X	X		1. Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2011	Corsa-C		Body	Airbag		X	X	X	X		Clear Deployment Record
OPEL	EUROPE	2011	Corsa-C		Body	Instrument		X	X	X	X	X	
OPEL	EUROPE	2010	Corsa-C		Engine	Z 10 XEP		X	X	X	X		
OPEL	EUROPE	2010	Corsa-C		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2010	Corsa-C		Engine	Z 12 XEP		X	X	X	X		
OPEL	EUROPE	2010	Corsa-C		Engine	Y 13 DT		X	X	X	X		
OPEL	EUROPE	2010	Corsa-C		Engine	Z 13 DT		X	X	X	X	X	1. Injector Cutoff Test; 2. RPM Control; 3. Program Idle Speed.
OPEL	EUROPE	2010	Corsa-C		Engine	Z 14 XE		X	X	X	X		

OPEL	EUROPE	2010	Corsa-C		Engine	Z 14 XEP		X	X	X	X	X	1.Reset Learn Values 2.Reset 02-Loop Block Lean Map 3. ECU Control-Electronic throttle control 4. Idle speed program. 5.ECU Reset
OPEL	EUROPE	2010	Corsa-C		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2010	Corsa-C		Engine	Z 16 YNG		X	X	X	X		
OPEL	EUROPE	2010	Corsa-C		Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2010	Corsa-C		Engine	Y 17 DTL		X	X	X	X		
OPEL	EUROPE	2010	Corsa-C		Engine	Z 17 DTH		X	X	X	X	X	1. Injector Cutoff Test; 2. EGR Control; 3.Replace Fuel Pump.
OPEL	EUROPE	2010	Corsa-C		Engine	Z 18 XE		X	X	X	X		
OPEL	EUROPE	2010	Corsa-C		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2010	Corsa-C		Transmission	MTA (Easytronic)		X	X	X	X	X	*Bleed Clutch Hydraulic *Learn Gearbox Parameters *Read CAN Configuration *Program CAN Configuration *Clutch Control Test
OPEL	EUROPE	2010	Corsa-C		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2010	Corsa-C		Chassis	ABS8/ESP8		X	X	X	X	X	Steering Angle Sensor Calibration
OPEL	EUROPE	2010	Corsa-C		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2010	Corsa-C		Body	Body Control Module		X	X	X	X	X	ECU Control Erase Remote Keys Program Remote Key
OPEL	EUROPE	2010	Corsa-C		Body	Immobiliser		X	X	X	X		1.Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2010	Corsa-C		Body	Airbag		X	X	X	X		Clear Deployment Record
OPEL	EUROPE	2010	Corsa-C		Body	Instrument		X	X	X	X	X	
OPEL	EUROPE	2009	Corsa-C		Engine	Z 10 XEP		X	X	X	X		
OPEL	EUROPE	2009	Corsa-C		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2009	Corsa-C		Engine	Z 12 XEP		X	X	X	X		
OPEL	EUROPE	2009	Corsa-C		Engine	Y 13 DT		X	X	X	X		
OPEL	EUROPE	2009	Corsa-C		Engine	Z 13 DT		X	X	X	X	X	1. Inject Cutoff Test; 2. RPM Control; 3. Program Idle Speed.
OPEL	EUROPE	2009	Corsa-C		Engine	Z 14 XE		X	X	X	X		
OPEL	EUROPE	2009	Corsa-C		Engine	Z 14 XEP		X	X	X	X	X	1.Reset Learn Values 2.Reset 02-Loop Block Lean Map 3. ECU Control-Electronic throttle control 4. Idle speed program. 5. ECU Reset
OPEL	EUROPE	2009	Corsa-C		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2009	Corsa-C		Engine	Z 16 YNG		X	X	X	X		
OPEL	EUROPE	2009	Corsa-C		Engine	Y 17 DTL		X	X	X	X		
OPEL	EUROPE	2009	Corsa-C		Engine	Y 17 DT		X	X	X	X	X	

OPEL	EUROPE	2009	Corsa-C		Engine	Z 17 DTH		X	X	X	X	X	1.Inject Cutoff Test; 2. RPM Control; 3.Replace Fuel Pump.
OPEL	EUROPE	2009	Corsa-C		Engine	Z 18 XE		X	X	X	X		
OPEL	EUROPE	2009	Corsa-C		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2009	Corsa-C		Transmission	MTA (Easytronic)		X	X	X	X	X	*Bleed Clutch Hydraulic *Learn Gearbox Parameters *Read CAN Configuration *Program CAN Configuration *Clutch Control Test
OPEL	EUROPE	2009	Corsa-C		Chassis	ABS8/ESP8		X	X	X	X	X	
OPEL	EUROPE	2009	Corsa-C		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2009	Corsa-C		Chassis	Electronic Power Steering		X	X	X	X	X	
OPEL	EUROPE	2009	Corsa-C		Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2009	Corsa-C		Body	Immobiliser		X	X	X	X		1.Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2009	Corsa-C		Body	Instrument		X	X	X	X	X	1. Service Light Reset 2. Service Due In
OPEL	EUROPE	2009	Corsa-C		Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2008	Corsa-C		Engine	Z 10 XEP		X	X	X	X		
OPEL	EUROPE	2008	Corsa-C		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2008	Corsa-C		Engine	Z 12 XEP		X	X	X	X		
OPEL	EUROPE	2008	Corsa-C		Engine	Y 13 DT		X	X	X	X		
OPEL	EUROPE	2008	Corsa-C		Engine	Z 13 DT		X	X	X	X	X	1. Inject Cutoff Test; 2. RPM Control; 3. Program Idle Speed.
OPEL	EUROPE	2008	Corsa-C		Engine	Z 14 XE		X	X	X	X		
OPEL	EUROPE	2008	Corsa-C		Engine	Z 14 XEP		X	X	X	X	X	1.Reset Learn Values 2. Reset 02-Loop Block Lean Map 3.ECU Control-Electronic throttle control 4. Idle speed program. 5. ECU Reset
OPEL	EUROPE	2008	Corsa-C		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2008	Corsa-C		Engine	Z 16 YNG		X	X	X	X		
OPEL	EUROPE	2008	Corsa-C		Engine	Y 17 DTL		X	X	X	X		
OPEL	EUROPE	2008	Corsa-C		Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2008	Corsa-C		Engine	Z 17 DTH		X	X	X	X	X	1. Inject Cutoff Test; 2. RPM Control; 3.Replace Fuel Pump.
OPEL	EUROPE	2008	Corsa-C		Engine	Z 18 XE		X	X	X	X		
OPEL	EUROPE	2008	Corsa-C		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2008	Corsa-C		Transmission	MTA (Easytronic)		X	X	X	X	X	*Bleed Clutch Hydraulic *Learn Gearbox Parameters *Read CAN Configuration *Program CAN Configuration *Clutch Control Test
OPEL	EUROPE	2008	Corsa-C		Chassis	ABS8/ESP8		X	X	X	X	X	
OPEL	EUROPE	2008	Corsa-C		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	

OPEL	EUROPE	2008	Corsa-C		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2008	Corsa-C		Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2008	Corsa-C		Body	Immobiliser		X	X	X	X		1.Erase Key Set; 2.Program Transponder-Keys
OPEL	EUROPE	2008	Corsa-C		Body	Instrument		X	X	X	X	X	1.Service Light Reset 2.Service Due In
OPEL	EUROPE	2008	Corsa-C		Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2007	Corsa-C		Engine	Z 10 XEP		X	X	X	X		
OPEL	EUROPE	2007	Corsa-C		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2007	Corsa-C		Engine	Z 12 XEP		X	X	X	X		
OPEL	EUROPE	2007	Corsa-C		Engine	Y 13 DT		X	X	X	X		
OPEL	EUROPE	2007	Corsa-C		Engine	Z 13 DT		X	X	X	X	X	1. Inject Cutoff Test; 2. RPM Control; 3. Program Idle Speed.
OPEL	EUROPE	2007	Corsa-C		Engine	Z 14 XE		X	X	X	X		
OPEL	EUROPE	2007	Corsa-C		Engine	Z 14 XEP		X	X	X	X	X	1. Reset Learn Values 2. Reset O2-Loop Block Lean Map 3. ECU Control-Electronic throttle control 4. Idle speed program. 5. ECU Reset
OPEL	EUROPE	2007	Corsa-C		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2007	Corsa-C		Engine	Z 16 YNG		X	X	X	X		
OPEL	EUROPE	2007	Corsa-C		Engine	Y 17 DTL		X	X	X	X		
OPEL	EUROPE	2007	Corsa-C		Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2007	Corsa-C		Engine	Z 17 DTH		X	X	X	X	X	1. Inject Cutoff Test; 2. RPM Control; 3. Replace Fuel Pump.
OPEL	EUROPE	2007	Corsa-C		Engine	Z 18 XE		X	X	X	X		
OPEL	EUROPE	2007	Corsa-C		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2007	Corsa-C		Transmission	MTA (Easytronic)		X	X	X	X	X	*Bleed Clutch Hydraulic *Learn Gearbox Parameters *Read CAN Configuration *Program CAN Configuration *Clutch Control Test
OPEL	EUROPE	2007	Corsa-C		Chassis	ABS8/ESP8		X	X	X	X	X	
OPEL	EUROPE	2007	Corsa-C		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2007	Corsa-C		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2007	Corsa-C		Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2007	Corsa-C		Body	Immobiliser		X	X	X	X		1.Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2007	Corsa-C		Body	Instrument		X	X	X	X	X	1.Service Light Reset 2.Service Due In
OPEL	EUROPE	2007	Corsa-C		Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2006	Corsa-C		Engine	Z 10 XEP		X	X	X	X		
OPEL	EUROPE	2006	Corsa-C		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2006	Corsa-C		Engine	Z 12 XEP		X	X	X	X		
OPEL	EUROPE	2006	Corsa-C		Engine	Y 13 DT		X	X	X	X		

OPEL	EUROPE	2006	Corsa-C		Engine	Z 13 DT		X	X	X	X	X	1. Inject Cutoff Test; 2. RPM Control; 3. Program Idle Speed.
OPEL	EUROPE	2006	Corsa-C		Engine	Z 14 XE		X	X	X	X		
OPEL	EUROPE	2006	Corsa-C		Engine	Z 14 XEP		X	X	X	X	X	1. Reset Learn Values 2. Reset O2-Loop Block Lean Map 3. ECU Control-Electronic throttle control 4. Idle speed program. 5. ECU Reset
OPEL	EUROPE	2006	Corsa-C		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2006	Corsa-C		Engine	Z 16 YNG		X	X	X	X		
OPEL	EUROPE	2006	Corsa-C		Engine	Y 17 DTL		X	X	X	X		
OPEL	EUROPE	2006	Corsa-C		Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2006	Corsa-C		Engine	Z 17 DTH		X	X	X	X	X	1. Inject Cutoff Test; 2. RPM Control; 3. Replace Fuel Pump.
OPEL	EUROPE	2006	Corsa-C		Engine	Z 18 XE		X	X	X	X		
OPEL	EUROPE	2006	Corsa-C		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2006	Corsa-C		Transmission	MTA (Easytronic)		X	X	X	X	X	*Bleed Clutch Hydraulic *Learn Gearbox Parameters *Read CAN Configuration *Program CAN Configuration *Clutch Control Test
OPEL	EUROPE	2006	Corsa-C		Chassis	ABS8/ESP8		X	X	X	X	X	
OPEL	EUROPE	2006	Corsa-C		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2006	Corsa-C		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2006	Corsa-C		Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2006	Corsa-C		Body	Immobiliser		X	X	X	X		1. Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2006	Corsa-C		Body	Instrument		X	X	X	X	X	1. Service Light Reset 2. Service Due In
OPEL	EUROPE	2006	Corsa-C		Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2005	Corsa-C		Engine	Z 10 XEP		X	X	X	X		
OPEL	EUROPE	2005	Corsa-C		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2005	Corsa-C		Engine	Z 12 XEP		X	X	X	X		
OPEL	EUROPE	2005	Corsa-C		Engine	Y 13 DT		X	X	X	X		
OPEL	EUROPE	2005	Corsa-C		Engine	Z 13 DT		X	X	X	X	X	1. Inject Cutoff Test; 2. RPM Control; 3. Program Idle Speed.
OPEL	EUROPE	2005	Corsa-C		Engine	Z 14 XE		X	X	X	X		
OPEL	EUROPE	2005	Corsa-C		Engine	Z 14 XEP		X	X	X	X	X	1. Reset Learn Values 2. Reset O2-Loop Block Lean Map 3. ECU Control-Electronic throttle control 4. Idle speed program. 5. ECU Reset
OPEL	EUROPE	2005	Corsa-C		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2005	Corsa-C		Engine	Z 16 YNG		X	X	X	X		

OPEL	EUROPE	2005	Corsa-C		Engine	Y 17 DTL		X	X	X	X		
OPEL	EUROPE	2005	Corsa-C		Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2005	Corsa-C		Engine	Z 17 DTH		X	X	X	X	X	1. Inject Cutoff Test; 2. RPM Control; 3. Replace Fuel Pump.
OPEL	EUROPE	2005	Corsa-C		Engine	Z 18 XE		X	X	X	X		
OPEL	EUROPE	2005	Corsa-C		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2005	Corsa-C		Transmission	MTA (Easytronic)		X	X	X	X	X	*Bleed Clutch Hydraulic *Learn Gearbox Parameters *Read CAN Configuration *Program CAN Configuration *Clutch Control Test
OPEL	EUROPE	2005	Corsa-C		Chassis	ABS8/ESP8		X	X	X	X	X	
OPEL	EUROPE	2005	Corsa-C		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2005	Corsa-C		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2005	Corsa-C		Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2005	Corsa-C		Body	Immobiliser		X	X	X	X		1. Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2005	Corsa-C		Body	Instrument		X	X	X	X	X	1. Service Light Reset 2. Service Due In
OPEL	EUROPE	2005	Corsa-C		Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2004	Corsa-C		Engine	Z 10 XEP		X	X	X	X		
OPEL	EUROPE	2004	Corsa-C		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2004	Corsa-C		Engine	Z 13 DT		X	X	X	X	X	1. Inject Cutoff Test; 2. RPM Control; 3. Program Idle Speed.
OPEL	EUROPE	2004	Corsa-C		Engine	Z 14 XE		X	X	X	X		
OPEL	EUROPE	2004	Corsa-C		Engine	Z 14 XEP		X	X	X	X	X	1. Reset Learn Values 2. Reset 02-Loop Block Lean Map 3. ECU Control-Electronic throttle control 4. Idle speed program. 5. ECU Reset
OPEL	EUROPE	2004	Corsa-C		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2004	Corsa-C		Engine	Y 17 DTL		X	X	X	X		
OPEL	EUROPE	2004	Corsa-C		Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2004	Corsa-C		Engine	Z 17 DTH		X	X	X	X	X	1. Inject Cutoff Test; 2. RPM Control; 3. Replace Fuel Pump.
OPEL	EUROPE	2004	Corsa-C		Engine	Z 18 XE		X	X	X	X		
OPEL	EUROPE	2004	Corsa-C		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X		
OPEL	EUROPE	2004	Corsa-C		Transmission	MTA (Easytronic)		X	X	X	X	X	*Bleed Clutch Hydraulic *Learn Gearbox Parameters *Read CAN Configuration *Program CAN Configuration *Clutch Control Test
OPEL	EUROPE	2004	Corsa-C		Chassis	ABS8/ESP8		X	X	X	X	X	
OPEL	EUROPE	2004	Corsa-C		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2004	Corsa-C		Chassis	Electronic Power Steering		X	X	X	X		

OPEL	EUROPE	2004	Corsa-C		Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2004	Corsa-C		Body	Immobiliser		X	X	X	X		1. Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2004	Corsa-C		Body	Instrument		X	X	X	X	X	1. Service Light Reset 2. Service Due In
OPEL	EUROPE	2004	Corsa-C		Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2003	Corsa-C		Engine	Z 10 XE		X	X	X	X		
OPEL	EUROPE	2003	Corsa-C		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2003	Corsa-C		Engine	Z 14 XE		X	X	X	X		
OPEL	EUROPE	2003	Corsa-C		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2003	Corsa-C		Engine	Y 17 DTL		X	X	X	X		
OPEL	EUROPE	2003	Corsa-C		Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2003	Corsa-C		Engine	Z 18 XE		X	X	X	X		
OPEL	EUROPE	2003	Corsa-C		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2003	Corsa-C		Transmission	MTA (Easytronic)		X	X	X	X	X	*Bleed Clutch Hydraulic *Learn Gearbox Parameters *Read CAN Configuration *Program CAN Configuration *Clutch Control Test
OPEL	EUROPE	2003	Corsa-C		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2003	Corsa-C		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2003	Corsa-C		Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2003	Corsa-C		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2003	Corsa-C		Body	Instrument		X	X	X	X	X	1. Service Light Reset 2. Service Due In
OPEL	EUROPE	2003	Corsa-C		Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2002	Corsa-C		Engine	Z 10 XE		X	X	X	X		
OPEL	EUROPE	2002	Corsa-C		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2002	Corsa-C		Engine	Z 14 XE		X	X	X	X		
OPEL	EUROPE	2002	Corsa-C		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2002	Corsa-C		Engine	Y 17 DTL		X	X	X	X		
OPEL	EUROPE	2002	Corsa-C		Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2002	Corsa-C		Engine	Z 18 XE		X	X	X	X		
OPEL	EUROPE	2002	Corsa-C		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2002	Corsa-C		Transmission	MTA (Easytronic)		X	X	X	X	X	*Bleed Clutch Hydraulic *Learn Gearbox Parameters *Read CAN Configuration *Program CAN Configuration *Clutch Control Test
OPEL	EUROPE	2002	Corsa-C		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2002	Corsa-C		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2002	Corsa-C		Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2002	Corsa-C		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2002	Corsa-C		Body	Instrument		X	X	X	X	X	1. Service Light Reset 2. Service Due In
OPEL	EUROPE	2002	Corsa-C		Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2001	Corsa-C		Engine	Z 10 XE		X	X	X	X		

OPEL	EUROPE	2001	Corsa-C		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2001	Corsa-C		Engine	Z 14 XE		X	X	X	X		
OPEL	EUROPE	2001	Corsa-C		Engine	Y 17 DTL		X	X	X	X		
OPEL	EUROPE	2001	Corsa-C		Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2001	Corsa-C		Engine	Z 18 XE		X	X	X	X		
OPEL	EUROPE	2001	Corsa-C		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2001	Corsa-C		Transmission	MTA (Easytronic)		X	X	X	X	X	*Bleed Clutch Hydraulic *Learn Gearbox Parameters *Read CAN Configuration *Program CAN Configuration *Clutch Control Test
OPEL	EUROPE	2001	Corsa-C		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2001	Corsa-C		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2001	Corsa-C		Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2001	Corsa-C		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2001	Corsa-C		Body	Instrument		X	X	X	X	X	1.Service Light Reset 2.Service Due In
OPEL	EUROPE	2001	Corsa-C		Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2011	Corsa-D		Engine	A 10 XEP		X	X	X	X	X	
OPEL	EUROPE	2011	Corsa-D		Engine	Z 10 XEP		X	X	X	X	X	
OPEL	EUROPE	2011	Corsa-D		Engine	Z 12 XEP		X	X	X	X	X	
OPEL	EUROPE	2011	Corsa-D		Engine	Z 13 DTJ		X	X	X	X	X	1.ECU Control (Injector cutoff test) 2.Program High CanBus Configration 3.ECU Reset 4.Program Injector
OPEL	EUROPE	2011	Corsa-D		Engine	Z 13 DTH		X	X	X	X	X	1.ECU Control (Injector cutoff test) 2.Program High CanBus Configration 3.ECU Reset 4.Program Injector
OPEL	EUROPE	2011	Corsa-D		Engine	Z 14 XEP		X	X	X	X	X	
OPEL	EUROPE	2011	Corsa-D		Engine	Z 17 DTR		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Pressure sensor 5.Regeneration Diesel Particulate Filter 6.Program High Speed CAN-Bus Configuration 7.Reset ECU 8.Program Idle Speed
OPEL	EUROPE	2011	Corsa-D		Transmission	MTA		X	X	X	X	X	
OPEL	EUROPE	2011	Corsa-D		Chassis	ABS/ESP		X	X	X	X	X	
OPEL	EUROPE	2011	Corsa-D		Chassis	Electronic Power Steering		X	X	X	X		Steering angle calibration
OPEL	EUROPE	2011	Corsa-D		Body	SDM (Airbag)		X	X	X	X		
OPEL	EUROPE	2011	Corsa-D		Body	IPC (Instrument)		X	X	X	X	X	
OPEL	EUROPE	2011	Corsa-D		Body	Central Door Lock		X	X	X	X	X	
OPEL	EUROPE	2011	Corsa-D		Body	TIM(Tralier Interface Module)		X	X	X	X	X	

OPEL	EUROPE	2011	Corsa-D		Body	BCM(Body Control Module)		X	X	X	X	X	Erase Key And Remote Program Key And Remote
OPEL	EUROPE	2011	Corsa-D		Body	EHS(Electrical Heater System)		X	X	X	X	X	Reset ECU
OPEL	EUROPE	2010	Corsa-D		Engine	Z 10 XEP		X	X	X	X	X	
OPEL	EUROPE	2010	Corsa-D		Engine	Z 12 XEP		X	X	X	X	X	
OPEL	EUROPE	2010	Corsa-D		Engine	Z 13 DTJ		X	X	X	X	X	1. ECU Control (Injector cutoff test) 2. Program High CanBus Configuration 3. ECU Reset 4. Program Injector
OPEL	EUROPE	2010	Corsa-D		Engine	Z 13 DTH		X	X	X	X	X	1. ECU Control (Injector cutoff test) 2. Program High CanBus Configuration 3. ECU Reset 4. Program Injector
OPEL	EUROPE	2010	Corsa-D		Engine	Z 14 XEP		X	X	X	X	X	
OPEL	EUROPE	2010	Corsa-D		Engine	Z 17 DTR		X	X	X	X	X	1. Replace Diesel Particulate Filter 2. Replace Mass air flow sensor 3. Replace Precatalyst 4. Replace Rail Pressure sensor 5. Regeneration Diesel Particulate Filter 6. Program High Speed CAN-Bus Configuration 7. Reset ECU 8. Program Idle Speed
OPEL	EUROPE	2010	Corsa-D		Transmission	MTA		X	X	X	X	X	
OPEL	EUROPE	2010	Corsa-D		Chassis	ABS/ESP		X	X	X	X	X	
OPEL	EUROPE	2010	Corsa-D		Chassis	Electronic Power Steering		X	X	X	X		Steering angle calibration
OPEL	EUROPE	2010	Corsa-D		Body	SDM (Airbag)		X	X	X	X		
OPEL	EUROPE	2010	Corsa-D		Body	IPC (Instrument)		X	X	X	X	X	
OPEL	EUROPE	2010	Corsa-D		Body	Central Door Lock		X	X	X	X	X	
OPEL	EUROPE	2010	Corsa-D		Body	TIM (Trailer Interface Module)		X	X	X	X	X	
OPEL	EUROPE	2010	Corsa-D		Body	EHS (Electrical Heater System)		X	X	X	X	X	Reset ECU
OPEL	EUROPE	2010	Corsa-D		Body	BCM (Body Control Module)		X	X	X	X	X	Erase Key And Remote Program Key And Remote
OPEL	EUROPE	2009	Corsa-D		Engine	Z 12 XEP		X	X	X	X	X	
OPEL	EUROPE	2009	Corsa-D		Engine	Z 13 DTJ		X	X	X	X	X	1. ECU Control (Injector cutoff test) 2. Program High CanBus Configuration 3. ECU Reset 4. Program Injector
OPEL	EUROPE	2009	Corsa-D		Engine	Z 13 DTH		X	X	X	X	X	1. ECU Control (Injector cutoff test) 2. Program High CanBus Configuration 3. ECU Reset 4. Program Injector
OPEL	EUROPE	2009	Corsa-D		Engine	Z 14 XEP		X	X	X	X	X	

OPEL	EUROPE	2009	Corsa-D		Engine	Z 17 DTR		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Pressure sensor 5.Regeneration Diesel Particulate Filter 6.Program High Speed CAN-Bus Configuration 7.Reset ECU 8.Program Idle Speed
OPEL	EUROPE	2009	Corsa-D		Transmission	MTA		X	X	X	X	X	
OPEL	EUROPE	2009	Corsa-D		Chassis	ABS/ESP		X	X	X	X	X	
OPEL	EUROPE	2009	Corsa-D		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2009	Corsa-D		Body	TIM		X	X	X	X	X	
OPEL	EUROPE	2009	Corsa-D		Body	EHS		X	X	X	X	X	Reset ECU
OPEL	EUROPE	2009	Corsa-D		Body	SDM (Airbag)		X	X	X	X		
OPEL	EUROPE	2009	Corsa-D		Body	IPC (Instrument)		X	X	X	X		
OPEL	EUROPE	2009	Corsa-D		Body	Central Door Lock		X	X	X	X	X	
OPEL	EUROPE	2009	Corsa-D		Body	BCM(Body Control Module)		X	X	X	X	X	Erase Key And Remote Program Key And Remote
OPEL	EUROPE	2008	Corsa-D		Engine	Z 10 XEP		X	X	X	X	X	
OPEL	EUROPE	2008	Corsa-D		Engine	Z 12 XEP		X	X	X	X	X	
OPEL	EUROPE	2008	Corsa-D		Engine	Z 13 DTJ		X	X	X	X	X	1.ECU Control(Injector cutoff test) 2. Program High CanBus Configuration 3.ECU Reset 4. Program Injector
OPEL	EUROPE	2008	Corsa-D		Engine	Z 13 DTH		X	X	X	X	X	1.ECU Control(Injector cutoff test) 2. Program High CanBus Configuration 3.ECU Reset 4. Program Injector
OPEL	EUROPE	2008	Corsa-D		Engine	Z 14 XEP		X	X	X	X	X	
OPEL	EUROPE	2008	Corsa-D		Engine	Z 17 DTR		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Pressure sensor 5.Regeneration Diesel Particulate Filter 6.Program High Speed CAN-Bus Configuration 7.Reset ECU 8.Program Idle Speed
OPEL	EUROPE	2008	Corsa-D		Transmission	MTA		X	X	X	X	X	
OPEL	EUROPE	2008	Corsa-D		Chassis	ABS/ESP		X	X	X	X	X	
OPEL	EUROPE	2008	Corsa-D		Chassis	Electronic Power Steering		X	X	X	X		Steering angle calibration
OPEL	EUROPE	2008	Corsa-D		Body	BCM		X	X	X	X	X	Erase Key And Remote Program Key And Remote
OPEL	EUROPE	2008	Corsa-D		Body	TIM		X	X	X	X	X	
OPEL	EUROPE	2008	Corsa-D		Body	EHS		X	X	X	X	X	Reset ECU
OPEL	EUROPE	2008	Corsa-D		Body	SDM (Airbag)		X	X	X	X		

OPEL	EUROPE	2008	Corsa-D		Body	IPC (Instrument)		X	X	X	X	X	
OPEL	EUROPE	2008	Corsa-D		Body	Central Door Lock		X	X	X	X	X	
OPEL	EUROPE	2008	Corsa-D		Body	BCM(Body Control Module)		X	X	X	X	X	Erase Key And Remote Program Key And Remote
OPEL	EUROPE	2007	Corsa-D		Engine	Z 12 XEP		X	X	X	X	X	
OPEL	EUROPE	2007	Corsa-D		Engine	Z 13 DTJ		X	X	X	X	X	1. ECU Control (Injector cutoff test) 2. Program High CanBus Configuration 3. ECU Reset 4. Program Injector
OPEL	EUROPE	2007	Corsa-D		Engine	Z 13 DTH		X	X	X	X	X	1. ECU Control (Injector cutoff test) 2. Program High CanBus Configuration 3. ECU Reset 4. Program Injector
OPEL	EUROPE	2007	Corsa-D		Engine	Z 14 XEP		X	X	X	X	X	
OPEL	EUROPE	2007	Corsa-D		Engine	Z 17 DTR		X	X	X	X	X	1. Replace Diesel Particulate Filter 2. Replace Mass air flow sensor 3. Replace Precatalyst 4. Replace Rail Pressure sensor 5. Regeneration Diesel Particulate Filter 6. Program High Speed CAN-Bus Configuration 7. Reset ECU 8. Program Idle Speed
OPEL	EUROPE	2007	Corsa-D		Transmission	MTA		X	X	X	X	X	
OPEL	EUROPE	2007	Corsa-D		Chassis	ABS/ESP		X	X	X	X	X	
OPEL	EUROPE	2007	Corsa-D		Chassis	Electronic Power Steering		X	X	X	X		Steering angle calibration
OPEL	EUROPE	2007	Corsa-D		Body	TIM		X	X	X	X	X	
OPEL	EUROPE	2007	Corsa-D		Body	EHS		X	X	X	X	X	Reset ECU
OPEL	EUROPE	2007	Corsa-D		Body	SDM (Airbag)		X	X	X	X		
OPEL	EUROPE	2007	Corsa-D		Body	IPC (Instrument)		X	X	X	X	X	
OPEL	EUROPE	2007	Corsa-D		Body	Central Door Lock		X	X	X	X	X	
OPEL	EUROPE	2007	Corsa-D		Body	BCM(Body Control Module)		X	X	X	X	X	Erase Key And Remote Program Key And Remote
OPEL	EUROPE	1998	Frontera		Engine	25 TDS		X	X	X	X		
OPEL	EUROPE	1998	Frontera		Chassis	ABS 415		X	X	X	X		
OPEL	EUROPE	1998	Frontera		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	1997	Frontera		Engine	25 TDS		X	X	X	X		
OPEL	EUROPE	1997	Frontera		Chassis	ABS 415		X	X	X	X		
OPEL	EUROPE	1997	Frontera		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2003	Frontera-B		Engine	Y 22 DTH		X	X	X	X		
OPEL	EUROPE	2003	Frontera-B		Transmission	AR 25/35		X	X	X	X		
OPEL	EUROPE	2002	Frontera-B		Engine	Y 22 DTH		X	X	X	X		
OPEL	EUROPE	2002	Frontera-B		Transmission	AR 25/35		X	X	X	X		
OPEL	EUROPE	2001	Frontera-B		Engine	Y 22 DTH		X	X	X	X		

OPEL	EUROPE	2001	Frontera-B		Transmission	AR 25/35		X	X	X	X		
OPEL	EUROPE	2000	Frontera-B		Engine	X 22 DTH		X	X	X	X		
OPEL	EUROPE	2000	Frontera-B		Transmission	AR 25/35		X	X	X	X		
OPEL	EUROPE	1999	Frontera-B		Engine	X 22 DTH		X	X	X	X		
OPEL	EUROPE	1999	Frontera-B		Transmission	AR 25/35		X	X	X	X		
OPEL	EUROPE	2010	Meriva		Engine	Y 13 DT		X	X	X	X		
OPEL	EUROPE	2010	Meriva		Engine	Z13DTJ		X	X	X	X	X	Injector CutOff Test RPM Control Program Idle Speed
OPEL	EUROPE	2010	Meriva		Engine	Z 14 XEP		X	X	X	X	X	1.Reset Learn Values 2.Reset 02-Loop Block Lean Map 3.ECU Control-Electronic throttle control 4. Idle speed program. 5. ECU Reset
OPEL	EUROPE	2010	Meriva		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2010	Meriva		Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2010	Meriva		Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2010	Meriva		Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2010	Meriva		Engine	Z 17 DTH		X	X	X	X	X	1. Injector Cutoff Test; 2. EGR Control; 3. Replace Fuel Pump.
OPEL	EUROPE	2010	Meriva		Engine	Z 18 XE		X	X	X	X		
OPEL	EUROPE	2010	Meriva		Transmission	MTA (Easytronic)		X	X	X	X	X	
OPEL	EUROPE	2010	Meriva		Chassis	ABS8/ESP8		X	X	X	X	X	Steering Angle Sensor Calibration
OPEL	EUROPE	2010	Meriva		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2010	Meriva		Body	Body Control Module		X	X	X	X	X	ECU Control Erase Remote Keys Program Remote Key
OPEL	EUROPE	2010	Meriva		Body	Immobiliser		X	X	X	X		1.Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2010	Meriva		Body	Airbag		X	X	X	X		Clear Deployment Record
OPEL	EUROPE	2010	Meriva		Body	Instrument		X	X	X	X	X	
OPEL	EUROPE	2010	Meriva		Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration
OPEL	EUROPE	2010	Meriva		Body	Electronic Climate Control		X	X	X	X	X	
OPEL	EUROPE	2009	Meriva		Engine	Z13DTJ		X	X	X	X	X	Injector Cut Off Test RPM Control Program Idle Speed
OPEL	EUROPE	2009	Meriva		Engine	Y 13 DT		X	X	X	X		
OPEL	EUROPE	2009	Meriva		Engine	Z 14 XEP		X	X	X	X	X	1.Reset Learned Values; 2.Reset 02-Loop Block Learn Map. 3.ECU Control-Electronic throttle control 4. Idle speed program

OPEL	EUROPE	2009	Meriva		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2009	Meriva		Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2009	Meriva		Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2009	Meriva		Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2009	Meriva		Engine	Z 17 DTH		X	X	X	X	X	1. Inject Cutoff Test; 2. RPM Control; 3. Replace Fuel Pump.
OPEL	EUROPE	2009	Meriva		Engine	Z 18 XE		X	X	X	X		
OPEL	EUROPE	2009	Meriva		Transmission	MTA (Easytronic)		X	X	X	X	X	
OPEL	EUROPE	2009	Meriva		Chassis	ABS8/ESP8		X	X	X	X	X	
OPEL	EUROPE	2009	Meriva		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2009	Meriva		Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2009	Meriva		Body	Immobiliser		X	X	X	X		1. Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2009	Meriva		Body	Instrument		X	X	X	X	X	1. Service Light Reset 2. Service Due In
OPEL	EUROPE	2009	Meriva		Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2009	Meriva		Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration
OPEL	EUROPE	2009	Meriva		Body	Electronic Climate Control		X	X	X	X	X	
OPEL	EUROPE	2008	Meriva		Engine	Z13DTJ		X	X	X	X	X	Injector Cut Off Test RPM Control Program Idle Speed
OPEL	EUROPE	2008	Meriva		Engine	Y 13 DT		X	X	X	X		
OPEL	EUROPE	2008	Meriva		Engine	Z 14 XEP		X	X	X	X	X	1. Reset Learn Values 2. Reset O2-Loop Block Lean Map 3. ECU Control-Electronic throttle control 4. Idle speed program. 5. ECU Reset
OPEL	EUROPE	2008	Meriva		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2008	Meriva		Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2008	Meriva		Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2008	Meriva		Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2008	Meriva		Engine	Z 17 DTH		X	X	X	X	X	1. Inject Cutoff Test; 2. RPM Control; 3. Replace Fuel Pump.
OPEL	EUROPE	2008	Meriva		Engine	Z 18 XE		X	X	X	X		
OPEL	EUROPE	2008	Meriva		Transmission	MTA (Easytronic)		X	X	X	X	X	
OPEL	EUROPE	2008	Meriva		Chassis	ABS8/ESP8		X	X	X	X	X	
OPEL	EUROPE	2008	Meriva		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2008	Meriva		Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2008	Meriva		Body	Immobiliser		X	X	X	X		1. Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2008	Meriva		Body	Instrument		X	X	X	X	X	1. Service Light Reset 2. Service Due In
OPEL	EUROPE	2008	Meriva		Body	Airbag		X	X	X	X	X	

OPEL	EUROPE	2008	Meriva		Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration
OPEL	EUROPE	2008	Meriva		Body	Electronic Climate Control		X	X	X	X	X	
OPEL	EUROPE	2007	Meriva		Engine	Y 13 DT		X	X	X	X		
OPEL	EUROPE	2007	Meriva		Engine	Z13DTJ		X	X	X	X	X	Injector Cut Off Test RPM Control Program Idle Speed
OPEL	EUROPE	2007	Meriva		Engine	Z 14 XEP		X	X	X	X	X	1.Reset Learn Values 2.Reset O2-Loop Block Lean Map 3. ECU Control-Electronic throttle control 4. Idle speed program. 5. ECU Reset
OPEL	EUROPE	2007	Meriva		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2007	Meriva		Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2007	Meriva		Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2007	Meriva		Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2007	Meriva		Engine	Z 17 DTH		X	X	X	X	X	1. Inject Cutoff Test; 2. RPM Control; 3. Replace Fuel Pump.
OPEL	EUROPE	2007	Meriva		Engine	Z 18 XE		X	X	X	X		
OPEL	EUROPE	2007	Meriva		Transmission	MTA (Easytronic)		X	X	X	X	X	
OPEL	EUROPE	2007	Meriva		Chassis	ABS/ESP8		X	X	X	X	X	
OPEL	EUROPE	2007	Meriva		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2007	Meriva		Body	AFL (Adaptive Forward Lighting)		X	X	X	X		
OPEL	EUROPE	2007	Meriva		Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2007	Meriva		Body	Immobiliser		X	X	X	X		1.Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2007	Meriva		Body	Instrument		X	X	X	X	X	1.Service Light Reset 2.Service Due In
OPEL	EUROPE	2007	Meriva		Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2007	Meriva		Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration
OPEL	EUROPE	2007	Meriva		Body	Electronic Climate Control		X	X	X	X	X	
OPEL	EUROPE	2006	Meriva		Engine	Y 13 DT		X	X	X	X		
OPEL	EUROPE	2006	Meriva		Engine	Z13DTJ		X	X	X	X	X	Injector Cut Off Test RPM Control Program Idle Speed
OPEL	EUROPE	2006	Meriva		Engine	Z 14 XEP		X	X	X	X	X	1.Reset Learn Values 2.Reset O2-Loop Block Lean Map 3. ECU Control-Electronic throttle control 4. Idle speed program. 5. ECU Reset
OPEL	EUROPE	2006	Meriva		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2006	Meriva		Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2006	Meriva		Engine	Z 16 XEP		X	X	X	X		

OPEL	EUROPE	2006	Meriva		Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2006	Meriva		Engine	Z 17 DTH		X	X	X	X	X	1. Inject Cutoff Test; 2. RPM Control; 3. Replace Fuel Pump.
OPEL	EUROPE	2006	Meriva		Engine	Z 18 XE		X	X	X	X		
OPEL	EUROPE	2006	Meriva		Transmission	MTA (Easytronic)		X	X	X	X	X	
OPEL	EUROPE	2006	Meriva		Chassis	ABS8/ESP8		X	X	X	X	X	
OPEL	EUROPE	2006	Meriva		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2006	Meriva		Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2006	Meriva		Body	Immobiliser		X	X	X	X		1. Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2006	Meriva		Body	Instrument		X	X	X	X	X	1. Service Light Reset 2. Service Due In
OPEL	EUROPE	2006	Meriva		Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2006	Meriva		Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration
OPEL	EUROPE	2006	Meriva		Body	Electronic Climate Control		X	X	X	X	X	
OPEL	EUROPE	2005	Meriva		Engine	Y 13 DT		X	X	X	X		
OPEL	EUROPE	2005	Meriva		Engine	Z 14 XEP		X	X	X	X	X	1. Reset Learn Values 2. Reset O2-Loop Block Lean Map 3. ECU Control-Electronic throttle control 4. Idle speed program. 5. ECU Reset
OPEL	EUROPE	2005	Meriva		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2005	Meriva		Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2005	Meriva		Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2005	Meriva		Engine	Z 17 DTH		X	X	X	X	X	1. Inject Cutoff Test; 2. RPM Control; 3. Replace Fuel Pump.
OPEL	EUROPE	2005	Meriva		Engine	Z 18 XE		X	X	X	X		
OPEL	EUROPE	2005	Meriva		Transmission	MTA (Easytronic)		X	X	X	X	X	
OPEL	EUROPE	2005	Meriva		Chassis	ABS8/ESP8		X	X	X	X	X	
OPEL	EUROPE	2005	Meriva		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2005	Meriva		Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2005	Meriva		Body	Immobiliser		X	X	X	X		1. Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2005	Meriva		Body	Instrument		X	X	X	X	X	1. Service Light Reset 2. Service Due In
OPEL	EUROPE	2005	Meriva		Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2005	Meriva		Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration
OPEL	EUROPE	2005	Meriva		Body	Electronic Climate Control		X	X	X	X	X	
OPEL	EUROPE	2004	Meriva		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2004	Meriva		Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2004	Meriva		Engine	Y 17 DT		X	X	X	X	X	

OPEL	EUROPE	2004	Meriva		Engine	Z 17 DTH		X	X	X	X	X	1.Inject Cutoff Test; 2. RPM Control; 3.Replace Fuel Pump.
OPEL	EUROPE	2004	Meriva		Engine	Z 18 XE		X	X	X	X		
OPEL	EUROPE	2004	Meriva		Transmission	MTA (Easytronic)		X	X	X	X	X	
OPEL	EUROPE	2004	Meriva		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2004	Meriva		Chassis	ESP		X	X	X	X		
OPEL	EUROPE	2004	Meriva		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2004	Meriva		Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2004	Meriva		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2004	Meriva		Body	Instrument		X	X	X	X	X	1.Service Light Reset 2. Service Due In
OPEL	EUROPE	2004	Meriva		Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2004	Meriva		Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration
OPEL	EUROPE	2004	Meriva		Body	Electronic Climate Control		X	X	X	X	X	
OPEL	EUROPE	2003	Meriva		Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2003	Meriva		Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2003	Meriva		Engine	Z 18 XE		X	X	X	X		
OPEL	EUROPE	2003	Meriva		Transmission	MTA (Easytronic)		X	X	X	X	X	
OPEL	EUROPE	2003	Meriva		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2003	Meriva		Chassis	ESP		X	X	X	X		
OPEL	EUROPE	2003	Meriva		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2003	Meriva		Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2003	Meriva		Body	Immobiliser		X	X	X	X		1.Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2003	Meriva		Body	Instrument		X	X	X	X	X	1.Service Light Reset 2. Service Due In
OPEL	EUROPE	2003	Meriva		Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2003	Meriva		Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration
OPEL	EUROPE	2003	Meriva		Body	Electronic Climate Control		X	X	X	X	X	
OPEL	EUROPE	1999	Monterey		Chassis	ABS 5		X	X	X	X		
OPEL	EUROPE	1998	Monterey		Chassis	ABS 5		X	X	X	X		
OPEL	EUROPE	1997	Monterey		Chassis	ABS 5		X	X	X	X		
OPEL	EUROPE	2003	Omega-B		Engine	Y 22 DTH		X	X	X	X		
OPEL	EUROPE	2003	Omega-B		Engine	Z 22 XE		X	X	X	X	X	1.EGR Control 2. Fuel Tank Ventilation Control 3. Electronic Throttle Control 4. RPM Control 5. Injector Cutoff Test
OPEL	EUROPE	2003	Omega-B		Engine	Y 25 DT		X	X	X	X		
OPEL	EUROPE	2003	Omega-B		Engine	Y 26 SE		X	X	X	X		
OPEL	EUROPE	2003	Omega-B		Engine	X 30 XE		X	X	X	X		
OPEL	EUROPE	2003	Omega-B		Engine	Y 32 SE		X	X	X	X		
OPEL	EUROPE	2003	Omega-B		Transmission	AR 25/35		X	X	X	X		

OPEL	EUROPE	2003	Omega-B		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2003	Omega-B		Chassis	ESP		X	X	X	X		
OPEL	EUROPE	2003	Omega-B		Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	2003	Omega-B		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2003	Omega-B		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2003	Omega-B		Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration
OPEL	EUROPE	2002	Omega-B		Engine	Y 22 DTH		X	X	X	X		
OPEL	EUROPE	2002	Omega-B		Engine	Z 22 XE		X	X	X	X	X	1. EGR Control 2. Fuel Tank Ventilation Control 3. Electronic Throttle Control 4. RPM Control 5. Injector Cutoff Test
OPEL	EUROPE	2002	Omega-B		Engine	Y 25 DT		X	X	X	X		
OPEL	EUROPE	2002	Omega-B		Engine	Y 26 SE		X	X	X	X		
OPEL	EUROPE	2002	Omega-B		Engine	X 30 XE		X	X	X	X		
OPEL	EUROPE	2002	Omega-B		Engine	Y 32 SE		X	X	X	X		
OPEL	EUROPE	2002	Omega-B		Transmission	AR 25/35		X	X	X	X		
OPEL	EUROPE	2002	Omega-B		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2002	Omega-B		Chassis	ESP		X	X	X	X		
OPEL	EUROPE	2002	Omega-B		Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	2002	Omega-B		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2002	Omega-B		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2002	Omega-B		Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration
OPEL	EUROPE	2001	Omega-B		Engine	X 20 XEV		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	2001	Omega-B		Engine	Y 22 DTH		X	X	X	X		
OPEL	EUROPE	2001	Omega-B		Engine	Z 22 XE		X	X	X	X	X	1. EGR Control 2. Fuel Tank Ventilation Control 3. Electronic Throttle Control 4. RPM Control 5. Injector Cutoff Test
OPEL	EUROPE	2001	Omega-B		Engine	Y 26 SE		X	X	X	X		
OPEL	EUROPE	2001	Omega-B		Engine	X 30 XE		X	X	X	X		
OPEL	EUROPE	2001	Omega-B		Engine	Y 32 SE		X	X	X	X		
OPEL	EUROPE	2001	Omega-B		Transmission	AR 25/35		X	X	X	X		
OPEL	EUROPE	2001	Omega-B		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2001	Omega-B		Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	2001	Omega-B		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2001	Omega-B		Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration
OPEL	EUROPE	2000	Omega-B		Engine	X 20 DTH		X	X	X	X		
OPEL	EUROPE	2000	Omega-B		Engine	X 20 XEV		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	2000	Omega-B		Engine	Y 22 XE		X	X	X	X		
OPEL	EUROPE	2000	Omega-B		Engine	X 25 XE		X	X	X	X		
OPEL	EUROPE	2000	Omega-B		Engine	X 30 XE		X	X	X	X		
OPEL	EUROPE	2000	Omega-B		Transmission	AR 25/35		X	X	X	X		
OPEL	EUROPE	2000	Omega-B		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2000	Omega-B		Chassis	Cruise Control		X	X	X	X		

OPEL	EUROPE	2000	Omega-B		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2000	Omega-B		Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration
OPEL	EUROPE	1999	Omega-B		Engine	X 20 DTH		X	X	X	X		
OPEL	EUROPE	1999	Omega-B		Engine	X 20 XEV		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	1999	Omega-B		Engine	X 25 XE		X	X	X	X		
OPEL	EUROPE	1999	Omega-B		Engine	X 30 XE		X	X	X	X		
OPEL	EUROPE	1999	Omega-B		Transmission	AR 25/35		X	X	X	X		
OPEL	EUROPE	1999	Omega-B		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	1999	Omega-B		Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	1999	Omega-B		Body	Airbag SAB6		X	X	X	X		
OPEL	EUROPE	1999	Omega-B		Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration
OPEL	EUROPE	1998	Omega-B		Engine	X 20 DTH		X	X	X	X		
OPEL	EUROPE	1998	Omega-B		Engine	X 20 XEV		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	1998	Omega-B		Engine	X 25 XE		X	X	X	X		
OPEL	EUROPE	1998	Omega-B		Engine	X 30 XE		X	X	X	X		
OPEL	EUROPE	1998	Omega-B		Transmission	AR 25/35		X	X	X	X		
OPEL	EUROPE	1998	Omega-B		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	1998	Omega-B		Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	1998	Omega-B		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	1998	Omega-B		Body	Airbag SAB6		X	X	X	X		
OPEL	EUROPE	1998	Omega-B		Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration
OPEL	EUROPE	1997	Omega-B		Engine	X 20 XEV		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	1997	Omega-B		Engine	X 25 XE		X	X	X	X		
OPEL	EUROPE	1997	Omega-B		Engine	X 30 XE		X	X	X	X		
OPEL	EUROPE	1997	Omega-B		Chassis	ABS-2SE (+TC)		X	X	X	X		
OPEL	EUROPE	1997	Omega-B		Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	1997	Omega-B		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	1997	Omega-B		Body	Airbag-S		X	X	X	X		
OPEL	EUROPE	1997	Omega-B		Body	Airbag SAB6		X	X	X	X		
OPEL	EUROPE	1999	Sintra		Engine	X 22 DTH		X	X	X	X		
OPEL	EUROPE	1999	Sintra		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	EUROPE	1999	Sintra		Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	1998	Sintra		Engine	X 22 DTH		X	X	X	X		
OPEL	EUROPE	1998	Sintra		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	EUROPE	1998	Sintra		Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	1997	Sintra		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	EUROPE	1997	Sintra		Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	2007	Speedster/ VX220		Engine	Z 20 LET		X	X	X	X		
OPEL	EUROPE	2007	Speedster/ VX220		Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2007	Speedster/ VX220		Chassis	ABS 430		X	X	X	X	X	
OPEL	EUROPE	2007	Speedster/ VX220		Body	Immobiliser		X	X	X	X		1.Erase Key Set; 2.Program Transponder-Keys

OPEL	EUROPE	2007	Speedster/ VX220		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2006	Speedster/ VX220		Engine	Z 20 LET		X	X	X	X		
OPEL	EUROPE	2006	Speedster/ VX220		Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2006	Speedster/ VX220		Chassis	ABS 430		X	X	X	X	X	
OPEL	EUROPE	2006	Speedster/ VX220		Body	Immobiliser		X	X	X	X		1.Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2006	Speedster/ VX220		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2005	Speedster/ VX220		Engine	Z 20 LET		X	X	X	X		
OPEL	EUROPE	2005	Speedster/ VX220		Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2005	Speedster/ VX220		Chassis	ABS 430		X	X	X	X	X	
OPEL	EUROPE	2005	Speedster/ VX220		Body	Immobiliser		X	X	X	X		1.Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2005	Speedster/ VX220		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2004	Speedster/ VX220		Engine	Z 20 LET		X	X	X	X		
OPEL	EUROPE	2004	Speedster/ VX220		Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2004	Speedster/ VX220		Chassis	ABS 430		X	X	X	X	X	
OPEL	EUROPE	2004	Speedster/ VX220		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2004	Speedster/ VX220		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2003	Speedster/ VX220		Engine	Z 20 LET		X	X	X	X		
OPEL	EUROPE	2003	Speedster/ VX220		Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2003	Speedster/ VX220		Chassis	ABS 430		X	X	X	X	X	
OPEL	EUROPE	2003	Speedster/ VX220		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2003	Speedster/ VX220		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2002	Speedster/ VX220		Engine	Z 20 LET		X	X	X	X		
OPEL	EUROPE	2002	Speedster/ VX220		Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2002	Speedster/ VX220		Chassis	ABS 430		X	X	X	X	X	
OPEL	EUROPE	2002	Speedster/ VX220		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2002	Speedster/ VX220		Body	Airbag		X	X	X	X		

OPEL	EUROPE	2001	Speedster/ VX220		Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2001	Speedster/ VX220		Chassis	ABS 430		X	X	X	X	X	
OPEL	EUROPE	2001	Speedster/ VX220		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2001	Speedster/ VX220		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2000	Tigra		Engine	C 14 SEL		X	X	X	X		
OPEL	EUROPE	2000	Tigra		Engine	X 14 XE		X	X	X	X		
OPEL	EUROPE	2000	Tigra		Engine	C 16 SEL		X	X	X	X		
OPEL	EUROPE	2000	Tigra		Engine	X 16 XE		X	X	X	X		
OPEL	EUROPE	2000	Tigra		Chassis	ABS-5.3		X	X	X	X	X	
OPEL	EUROPE	2000	Tigra		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2000	Tigra		Body	Airbag-S		X	X	X	X		
OPEL	EUROPE	2000	Tigra		Body	Airbag-SAB6		X	X	X	X		
OPEL	EUROPE	1999	Tigra		Engine	C 14 SEL		X	X	X	X		
OPEL	EUROPE	1999	Tigra		Engine	X 14 XE		X	X	X	X		
OPEL	EUROPE	1999	Tigra		Engine	C 16 SEL		X	X	X	X		
OPEL	EUROPE	1999	Tigra		Engine	X 16 XE		X	X	X	X		
OPEL	EUROPE	1999	Tigra		Chassis	ABS-5.3		X	X	X	X	X	
OPEL	EUROPE	1999	Tigra		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	1999	Tigra		Body	Airbag-S		X	X	X	X		
OPEL	EUROPE	1999	Tigra		Body	Airbag-SAB6		X	X	X	X		
OPEL	EUROPE	1998	Tigra		Engine	C 14 SEL		X	X	X	X		
OPEL	EUROPE	1998	Tigra		Engine	X 14 XE		X	X	X	X		
OPEL	EUROPE	1998	Tigra		Engine	C 16 SEL		X	X	X	X		
OPEL	EUROPE	1998	Tigra		Engine	X 16 XE		X	X	X	X		
OPEL	EUROPE	1998	Tigra		Chassis	ABS-5.3		X	X	X	X	X	
OPEL	EUROPE	1998	Tigra		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	1998	Tigra		Body	Airbag-S		X	X	X	X		
OPEL	EUROPE	1997	Tigra		Engine	X 14 XE		X	X	X	X		
OPEL	EUROPE	1997	Tigra		Engine	X 16 XE		X	X	X	X		
OPEL	EUROPE	1997	Tigra		Chassis	ABS-5.3		X	X	X	X	X	
OPEL	EUROPE	1997	Tigra		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	1997	Tigra		Body	Airbag-S		X	X	X	X		
OPEL	EUROPE	2009	Tigra-B		Engine	Z 13 DT		X	X	X	X	X	1. Inject Cutoff Test; 2. RPM Control; 3. Program Idle Speed.
OPEL	EUROPE	2009	Tigra-B		Engine	Z 14 XEP		X	X	X	X	X	1. Reset Learn Values 2. Reset O2-Loop Block Lean Map 3. ECU Control-Electronic throttle control 4. Idle speed program. 5. ECU Reset
OPEL	EUROPE	2009	Tigra-B		Engine	Z 18 XE		X	X	X	X		
OPEL	EUROPE	2009	Tigra-B		Transmission	MTA (Easytronic)		X	X	X	X	X	
OPEL	EUROPE	2009	Tigra-B		Chassis	ABS8/ESP8		X	X	X	X	X	

OPEL	EUROPE	2009	Tigra-B		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2009	Tigra-B		Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2009	Tigra-B		Body	Immobiliser		X	X	X	X		1.Erase Key Set; 2.Program Transponder-Keys
OPEL	EUROPE	2009	Tigra-B		Body	Instrument		X	X	X	X	X	1.Service Light Reset 2.Service Due In
OPEL	EUROPE	2009	Tigra-B		Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2008	Tigra-B		Engine	Z 13 DT		X	X	X	X	X	1.Inject Cutoff Test; 2.RPM Control; 3.Program Idle Speed.
OPEL	EUROPE	2008	Tigra-B		Engine	Z 14 XEP		X	X	X	X	X	1.Reset Learn Values 2.Reset O2-Loop Block Lean Map 3.ECU Control-Electronic throttle control 4.Idle speed program. 5.ECU Reset
OPEL	EUROPE	2008	Tigra-B		Engine	Z 18 XE		X	X	X	X		
OPEL	EUROPE	2008	Tigra-B		Transmission	MTA (Easytronic)		X	X	X	X	X	
OPEL	EUROPE	2008	Tigra-B		Chassis	ABS8/ESP8		X	X	X	X	X	
OPEL	EUROPE	2008	Tigra-B		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2008	Tigra-B		Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2008	Tigra-B		Body	Immobiliser		X	X	X	X		1.Erase Key Set; 2.Program Transponder-Keys
OPEL	EUROPE	2008	Tigra-B		Body	Instrument		X	X	X	X	X	1.Service Light Reset 2.Service Due In
OPEL	EUROPE	2008	Tigra-B		Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2007	Tigra-B		Engine	Z 13 DT		X	X	X	X	X	1.Inject Cutoff Test; 2.RPM Control; 3.Program Idle Speed.
OPEL	EUROPE	2007	Tigra-B		Engine	Z 14 XEP		X	X	X	X	X	1.Reset Learn Values 2.Reset O2-Loop Block Lean Map 3.ECU Control-Electronic throttle control 4.Idle speed program. 5.ECU Reset
OPEL	EUROPE	2007	Tigra-B		Engine	Z 18 XE		X	X	X	X	X	
OPEL	EUROPE	2007	Tigra-B		Transmission	MTA (Easytronic)		X	X	X	X	X	
OPEL	EUROPE	2007	Tigra-B		Chassis	ABS8/ESP8		X	X	X	X	X	
OPEL	EUROPE	2007	Tigra-B		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2007	Tigra-B		Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2007	Tigra-B		Body	Immobiliser		X	X	X	X		1.Erase Key Set; 2.Program Transponder-Keys
OPEL	EUROPE	2007	Tigra-B		Body	Instrument		X	X	X	X	X	1.Service Light Reset 2.Service Due In
OPEL	EUROPE	2007	Tigra-B		Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2006	Tigra-B		Engine	Z 13 DT		X	X	X	X	X	1.Inject Cutoff Test; 2.RPM Control; 3.Program Idle Speed.

OPEL	EUROPE	2006	Tigra-B		Engine	Z 14 XEP		X	X	X	X	X	1.Reset Learn Values 2.Reset 02-Loop Block Lean Map 3.ECU Control-Electronic throttle control 4.Idle speed program. 5.ECU Reset
OPEL	EUROPE	2006	Tigra-B		Engine	Z 18 XE		X	X	X	X	X	
OPEL	EUROPE	2006	Tigra-B		Transmission	MTA (Easytronic)		X	X	X	X	X	
OPEL	EUROPE	2006	Tigra-B		Chassis	ABS8/ESP8		X	X	X	X	X	
OPEL	EUROPE	2006	Tigra-B		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2006	Tigra-B		Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2006	Tigra-B		Body	Immobiliser		X	X	X	X		1.Erase Key Set; 2.Program Transponder-Keys
OPEL	EUROPE	2006	Tigra-B		Body	Instrument		X	X	X	X	X	1.Service Light Reset 2.Service Due In
OPEL	EUROPE	2006	Tigra-B		Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2005	Tigra-B		Engine	Z 13 DT		X	X	X	X	X	1.Inject Cutoff Test; 2.RPM Control; 3.Program Idle Speed.
OPEL	EUROPE	2005	Tigra-B		Engine	Z 14 XEP		X	X	X	X	X	1.Reset Learn Values 2.Reset 02-Loop Block Lean Map 3.ECU Control-Electronic throttle control 4.Idle speed program. 5.ECU Reset
OPEL	EUROPE	2005	Tigra-B		Engine	Z 18 XE		X	X	X	X		
OPEL	EUROPE	2005	Tigra-B		Transmission	MTA (Easytronic)		X	X	X	X	X	
OPEL	EUROPE	2005	Tigra-B		Chassis	ABS8/ESP8		X	X	X	X	X	
OPEL	EUROPE	2005	Tigra-B		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2005	Tigra-B		Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2005	Tigra-B		Body	Immobiliser		X	X	X	X		1.Erase Key Set; 2.Program Transponder-Keys
OPEL	EUROPE	2005	Tigra-B		Body	Instrument		X	X	X	X	X	1.Service Light Reset 2.Service Due In
OPEL	EUROPE	2005	Tigra-B		Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2001	Vectra-B		Engine	X 16 XEL		X	X	X	X	X	
OPEL	EUROPE	2001	Vectra-B		Engine	Y 16 XE		X	X	X	X		
OPEL	EUROPE	2001	Vectra-B		Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2001	Vectra-B		Engine	X 18 XE		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	2001	Vectra-B		Engine	Z 18 XE		X	X	X	X	X	
OPEL	EUROPE	2001	Vectra-B		Engine	Z 18 XEL		X	X	X	X		
OPEL	EUROPE	2001	Vectra-B		Engine	C 20 SEL		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2001	Vectra-B		Engine	X 20 XEV		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	2001	Vectra-B		Engine	Y 20 DTH		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2001	Vectra-B		Engine	C 22 SEL		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	2001	Vectra-B		Engine	Y 22 DTR		X	X	X	X		
OPEL	EUROPE	2001	Vectra-B		Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2001	Vectra-B		Engine	Y 26 SE		X	X	X	X		

OPEL	EUROPE	2001	Vectra-B		Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	EUROPE	2001	Vectra-B		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2001	Vectra-B		Chassis	ABS 430		X	X	X	X	X	
OPEL	EUROPE	2001	Vectra-B		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2001	Vectra-B		Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	2001	Vectra-B		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2001	Vectra-B		Body	Airbag SAB6		X	X	X	X		
OPEL	EUROPE	2001	Vectra-B		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2001	Vectra-B		Body	Instrument		X	X	X	X		
OPEL	EUROPE	2000	Vectra-B		Engine	X 16 SZR		X	X	X	X		
OPEL	EUROPE	2000	Vectra-B		Engine	X 16 XEL		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2000	Vectra-B		Engine	Y 16 XE		X	X	X	X		
OPEL	EUROPE	2000	Vectra-B		Engine	X 18 XE1		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2000	Vectra-B		Engine	20 NEJ		X	X	X	X		
OPEL	EUROPE	2000	Vectra-B		Engine	C 20 SEL		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2000	Vectra-B		Engine	X 20 DTL		X	X	X	X		
OPEL	EUROPE	2000	Vectra-B		Engine	X 20 DTH		X	X	X	X		
OPEL	EUROPE	2000	Vectra-B		Engine	X 20 XEV		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	2000	Vectra-B		Engine	C 22 SEL		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	2000	Vectra-B		Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	EUROPE	2000	Vectra-B		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2000	Vectra-B		Chassis	ABS 430		X	X	X	X	X	
OPEL	EUROPE	2000	Vectra-B		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2000	Vectra-B		Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	2000	Vectra-B		Body	Airbag SAB6		X	X	X	X		
OPEL	EUROPE	2000	Vectra-B		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2000	Vectra-B		Body	Instrument		X	X	X	X		
OPEL	EUROPE	1999	Vectra-B		Engine	X 16 SZR		X	X	X	X		
OPEL	EUROPE	1999	Vectra-B		Engine	X 16 XEL		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	1999	Vectra-B		Engine	X 18 XE		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	1999	Vectra-B		Engine	X 18 XE1		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	1999	Vectra-B		Engine	20 NEJ		X	X	X	X		
OPEL	EUROPE	1999	Vectra-B		Engine	C 20 SEL		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	1999	Vectra-B		Engine	X 20 DTL		X	X	X	X		
OPEL	EUROPE	1999	Vectra-B		Engine	X 20 DTH		X	X	X	X		
OPEL	EUROPE	1999	Vectra-B		Engine	X 20 XEV		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	1999	Vectra-B		Engine	C 22 SEL		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	1999	Vectra-B		Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	EUROPE	1999	Vectra-B		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	EUROPE	1999	Vectra-B		Chassis	ABS 415		X	X	X	X		
OPEL	EUROPE	1999	Vectra-B		Chassis	ABS 430		X	X	X	X	X	
OPEL	EUROPE	1999	Vectra-B		Chassis	ABS-5-TC		X	X	X	X		
OPEL	EUROPE	1999	Vectra-B		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	1999	Vectra-B		Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	1999	Vectra-B		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	1999	Vectra-B		Body	Instrument		X	X	X	X		
OPEL	EUROPE	1999	Vectra-B		Body	Airbag SAB6		X	X	X	X		

OPEL	EUROPE	1998	Vectra-B		Engine	X 16 SZR		X	X	X	X		
OPEL	EUROPE	1998	Vectra-B		Engine	X 16 XEL		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	1998	Vectra-B		Engine	X 18 XE		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	1998	Vectra-B		Engine	X 18 XE1		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	1998	Vectra-B		Engine	20 NEJ		X	X	X	X		
OPEL	EUROPE	1998	Vectra-B		Engine	C 20 SEL		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	1998	Vectra-B		Engine	X 20 DTL		X	X	X	X		
OPEL	EUROPE	1998	Vectra-B		Engine	X 20 DTH		X	X	X	X		
OPEL	EUROPE	1998	Vectra-B		Engine	X 20 XEV		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	1998	Vectra-B		Engine	C 22 SEL		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	1998	Vectra-B		Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	EUROPE	1998	Vectra-B		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	EUROPE	1998	Vectra-B		Chassis	ABS 415		X	X	X	X		
OPEL	EUROPE	1998	Vectra-B		Chassis	ABS 430		X	X	X	X	X	
OPEL	EUROPE	1998	Vectra-B		Chassis	ABS-5-TC		X	X	X	X		
OPEL	EUROPE	1998	Vectra-B		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	1998	Vectra-B		Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	1998	Vectra-B		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	1998	Vectra-B		Body	Instrument		X	X	X	X		
OPEL	EUROPE	1998	Vectra-B		Body	Airbag SAB6		X	X	X	X		
OPEL	EUROPE	1997	Vectra-B		Engine	X 16 SZR		X	X	X	X		
OPEL	EUROPE	1997	Vectra-B		Engine	X 16 XEL		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	1997	Vectra-B		Engine	X 18 XE		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	1997	Vectra-B		Engine	20 NEJ		X	X	X	X		
OPEL	EUROPE	1997	Vectra-B		Engine	C 20 SEL		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	1997	Vectra-B		Engine	X 20 DTL		X	X	X	X		
OPEL	EUROPE	1997	Vectra-B		Engine	X 20 XEV		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	1997	Vectra-B		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	EUROPE	1997	Vectra-B		Chassis	ABS 415		X	X	X	X		
OPEL	EUROPE	1997	Vectra-B		Chassis	ABS-5-TC		X	X	X	X		
OPEL	EUROPE	1997	Vectra-B		Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	1997	Vectra-B		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	1997	Vectra-B		Body	Instrument		X	X	X	X		
OPEL	EUROPE	1997	Vectra-B		Body	Airbag		X	X	X	X		
OPEL	EUROPE	1997	Vectra-B		Body	Airbag SAB6		X	X	X	X		
OPEL	EUROPE	2008	Vectra-C/Signum		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2008	Vectra-C/Signum		Engine	Engine Cooling		X	X	X	X		

OPEL	EUROPE	2008	Vectra-C/Signum		Engine	Z 20 NET		X	X	X	X	X	Reset Oil Life
OPEL	EUROPE	2008	Vectra-C/Signum		Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2008	Vectra-C/Signum		Engine	Z 18 XE		X	X	X	X		Injector Cutoff Test
OPEL	EUROPE	2008	Vectra-C/Signum		Engine	Z 18 XER		X	X	X	X	X	Injector Cutoff Test
OPEL	EUROPE	2008	Vectra-C/Signum		Engine	Z 19 DT		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Progressure sensor 5.Reset Engine Oil Life 6.Regeneration Diesel Particulate Filter 7.Replace Injector *8.Program Injector 9.Program High Speed CAN-Bus Configuration 10.Reset ECU 11.Replace O2 Sensor 12.Program Idle Speed
OPEL	EUROPE	2008	Vectra-C/Signum		Engine	Z 19 DTH		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Progressure sensor 5.Reset Engine Oil Life 6.Regeneration D. Particulate Filter 7.Reset engine oil sensor 8.Program High Speed Can Bus Config. 9.Reset O2 sensor 10.Program Idle Speed *11.Program Injector 12.Replace Injector
OPEL	EUROPE	2008	Vectra-C/Signum		Engine	Y 20 DTH		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	2008	Vectra-C/Signum		Engine	Y 22 DTR		X	X	X	X		
OPEL	EUROPE	2008	Vectra-C/Signum		Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2008	Vectra-C/Signum		Engine	Z 22 YH		X	X	X	X		Injector Cutoff Test
OPEL	EUROPE	2008	Vectra-C/Signum		Engine	Z 32 SE		X	X	X	X		

OPEL	EUROPE	2008	Vectra-C/Signum		Transmission	AF 23-5/33-5/40-6		X	X	X	X		
OPEL	EUROPE	2008	Vectra-C/Signum		Chassis	ABS/TC/ESP		X	X	X	X	X	
OPEL	EUROPE	2008	Vectra-C/Signum		Chassis	EHPS (Electrohydraulic Power Steering)		X	X	X	X		
OPEL	EUROPE	2008	Vectra-C/Signum		Chassis	CDC (Continuous Damping Control)		X	X	X			
OPEL	EUROPE	2008	Vectra-C/Signum		Body	SDM (Airbag Sensing & Diagnostic Module)		X	X	X	X		
OPEL	EUROPE	2008	Vectra-C/Signum		Body	Instrument		X	X	X	X		
OPEL	EUROPE	2008	Vectra-C/Signum		Body	CIM (Steering Column Module)		X	X	X			1. Erase Transponder-Keys And Remote 2. Program Transponder-Keys And Remote
OPEL	EUROPE	2008	Vectra-C/Signum		Body	BCM (Body Control Module)		X	X	X	X		
OPEL	EUROPE	2008	Vectra-C/Signum		Body	DDM (Driver Door Module)		X	X	X			
OPEL	EUROPE	2008	Vectra-C/Signum		Body	PDM (Passenger Door Module)		X	X	X			
OPEL	EUROPE	2008	Vectra-C/Signum		Body	REC (Rear Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2008	Vectra-C/Signum		Body	UEC (Underhood Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2008	Vectra-C/Signum		Body	SLM (Shift Lever Module)		X	X	X			
OPEL	EUROPE	2008	Vectra-C/Signum		Body	SRM (Sun Roof Module)		X	X	X			
OPEL	EUROPE	2008	Vectra-C/Signum		Body	AHL/AFL (Headlamp Levelling)		X	X	X			
OPEL	EUROPE	2007	Vectra-C/Signum		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2007	Vectra-C/Signum		Engine	Engine Cooling		X	X	X	X		
OPEL	EUROPE	2007	Vectra-C/Signum		Engine	Z 20 NET		X	X	X	X	X	Reset Oil Life
OPEL	EUROPE	2007	Vectra-C/Signum		Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2007	Vectra-C/Signum		Engine	Z 18 XE		X	X	X	X		Injector Cutoff Test

OPEL	EUROPE	2007	Vectra-C/Signum		Engine	Z 18 XER		X	X	X	X	X	Injector Cutoff Test
OPEL	EUROPE	2007	Vectra-C/Signum		Engine	Z 19 DT		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Progressure sensor 5.Reset Engine Oil Life 6.Regeneration Diesel Particulate Filter 7.Replace Injector *8.Program Injector 9.Program High Speed CAN-Bus Configuration 10.Reset ECU 11.Replace O2 Sensor 12.Program Idle Speed
OPEL	EUROPE	2007	Vectra-C/Signum		Engine	Z 19 DTH		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Progressure sensor 5.Reset Engine Oil Life 6.Regeneration D. Particulate Filter 7.Reset engine oil sensor 8.Program High Speed Can Bus Config. 9.Reset O2 sensor 10.Program Idle Speed *11.Program Injector 12.Replace Injector
OPEL	EUROPE	2007	Vectra-C/Signum		Engine	Y 20 DTH		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	2007	Vectra-C/Signum		Engine	Y 22 DTR		X	X	X	X		
OPEL	EUROPE	2007	Vectra-C/Signum		Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2007	Vectra-C/Signum		Engine	Z 22 YH		X	X	X	X		Injector Cutoff Test
OPEL	EUROPE	2007	Vectra-C/Signum		Engine	Z 32 SE		X	X	X	X		
OPEL	EUROPE	2007	Vectra-C/Signum		Transmission	AF 23-5/33-5/40-6		X	X	X	X		

OPEL	EUROPE	2007	Vectra-C/Signum		Chassis	ABS/TC/ESP		X	X	X	X	X	
OPEL	EUROPE	2007	Vectra-C/Signum		Chassis	EHPS (Electrohydraulic Power Steering)		X	X	X	X		
OPEL	EUROPE	2007	Vectra-C/Signum		Chassis	CDC (Continuous Damping Control)		X	X	X			
OPEL	EUROPE	2007	Vectra-C/Signum		Body	SDM (Airbag Sensing & Diagnostic Module)		X	X	X	X		
OPEL	EUROPE	2007	Vectra-C/Signum		Body	Instrument		X	X	X	X		
OPEL	EUROPE	2007	Vectra-C/Signum		Body	CIM (Steering Column Module)		X	X	X			1.Erase Transponder-Keys And Remote 2.Program Transponder-Keys And Remote
OPEL	EUROPE	2007	Vectra-C/Signum		Body	BCM (Body Control Module)		X	X	X	X		
OPEL	EUROPE	2007	Vectra-C/Signum		Body	DDM (Driver Door Module)		X	X	X			
OPEL	EUROPE	2007	Vectra-C/Signum		Body	PDM (Passenger Door Module)		X	X	X			
OPEL	EUROPE	2007	Vectra-C/Signum		Body	REC (Rear Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2007	Vectra-C/Signum		Body	UEC (Underhood Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2007	Vectra-C/Signum		Body	SLM (Shift Lever Module)		X	X	X			
OPEL	EUROPE	2007	Vectra-C/Signum		Body	SRM (Sun Roof Module)		X	X	X			
OPEL	EUROPE	2007	Vectra-C/Signum		Body	AHL/AFL (Headlamp Levelling)		X	X	X			
OPEL	EUROPE	2006	Vectra-C/Signum		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2006	Vectra-C/Signum		Engine	Engine Cooling		X	X	X	X		
OPEL	EUROPE	2006	Vectra-C/Signum		Engine	Z 20 NET		X	X	X	X	X	Reset Oil Life
OPEL	EUROPE	2006	Vectra-C/Signum		Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2006	Vectra-C/Signum		Engine	Z 18 XE		X	X	X	X		Injector Cutoff Test
OPEL	EUROPE	2006	Vectra-C/Signum		Engine	Z 18 XER		X	X	X	X	X	Injector Cutoff Test

OPEL	EUROPE	2006	Vectra-C/Signum		Engine	Z 19 DT		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Progressure sensor 5.Reset Engine Oil Life 6.Regeneration Diesel Particulate Filter 7.Replace Injector *8.Program Injector 9.Program High Speed CAN-Bus Configuration 10.Reset ECU 11.Replace O2 Sensor 12.Program Idle Speed
OPEL	EUROPE	2006	Vectra-C/Signum		Engine	Z 19 DTH		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Progressure sensor 5.Reset Engine Oil Life 6.Regeneration D. Particulate Filter 7.Reset engine oil sensor 8.Program High Speed Can Bus Config. 9.Reset O2 sensor 10.Program Idle Speed *11.Program Injector 12.Replace Injector
OPEL	EUROPE	2006	Vectra-C/Signum		Engine	Y 20 DTH		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	2006	Vectra-C/Signum		Engine	Y 22 DTR		X	X	X	X		
OPEL	EUROPE	2006	Vectra-C/Signum		Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2006	Vectra-C/Signum		Engine	Z 22 YH		X	X	X	X		Injector Cutoff Test
OPEL	EUROPE	2006	Vectra-C/Signum		Engine	Z 32 SE		X	X	X	X		
OPEL	EUROPE	2006	Vectra-C/Signum		Transmission	AF 23-5/33-5/40-6		X	X	X	X		
OPEL	EUROPE	2006	Vectra-C/Signum		Chassis	ABS/TC/ESP		X	X	X	X	X	
OPEL	EUROPE	2006	Vectra-C/Signum		Chassis	EHPS (Electrohydraulic Power Steering)		X	X	X	X		

OPEL	EUROPE	2006	Vectra-C/Signum		Chassis	CDC (Continuous Damping Control)		X	X	X			
OPEL	EUROPE	2006	Vectra-C/Signum		Body	SDM (Airbag Sensing & Diagnostic Module)		X	X	X	X		
OPEL	EUROPE	2006	Vectra-C/Signum		Body	Instrument		X	X	X	X		
OPEL	EUROPE	2006	Vectra-C/Signum		Body	CIM (Steering Column Module)		X	X	X			1. Erase Transponder-Keys And Remote 2. Program Transponder-Keys And Remote
OPEL	EUROPE	2006	Vectra-C/Signum		Body	BCM (Body Control Module)		X	X	X	X		
OPEL	EUROPE	2006	Vectra-C/Signum		Body	DDM (Driver Door Module)		X	X	X			
OPEL	EUROPE	2006	Vectra-C/Signum		Body	PDM (Passenger Door Module)		X	X	X			
OPEL	EUROPE	2006	Vectra-C/Signum		Body	REC (Rear Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2006	Vectra-C/Signum		Body	UEC (Underhood Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2006	Vectra-C/Signum		Body	SLM (Shift Lever Module)		X	X	X			
OPEL	EUROPE	2006	Vectra-C/Signum		Body	SRM (Sun Roof Module)		X	X	X			
OPEL	EUROPE	2006	Vectra-C/Signum		Body	AHL/AFL (Headlamp Levelling)		X	X	X			
OPEL	EUROPE	2005	Vectra-C/Signum		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2005	Vectra-C/Signum		Engine	Engine Cooling		X	X	X	X		
OPEL	EUROPE	2005	Vectra-C/Signum		Engine	Z 20 NET		X	X	X	X	X	Reset Oil Life
OPEL	EUROPE	2005	Vectra-C/Signum		Engine	Z 18 XE		X	X	X	X		Injector Cutoff Test

OPEL	EUROPE	2005	Vectra-C/Signum		Engine	Z 19 DT		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Progressure sensor 5.Reset Engine Oil Life 6.Regeneration Diesel Particulate Filter 7.Replace Injector *8.Program Injector 9.Program High Speed CAN-Bus Configuration 10.Reset ECU 11.Replace O2 Sensor 12.Program Idle Speed
OPEL	EUROPE	2005	Vectra-C/Signum		Engine	Z 19 DTH		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Progressure sensor 5.Reset Engine Oil Life 6.Regeneration D. Particulate Filter 7.Reset engine oil sensor 8.Program High Speed Can Bus Config. 9.Reset O2 sensor 10.Program Idle Speed *11.Program Injector 12.Replace Injector
OPEL	EUROPE	2005	Vectra-C/Signum		Engine	Y 20 DTH		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	2005	Vectra-C/Signum		Engine	Y 22 DTR		X	X	X	X		
OPEL	EUROPE	2005	Vectra-C/Signum		Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2005	Vectra-C/Signum		Engine	Z 22 YH		X	X	X	X		Injector Cutoff Test
OPEL	EUROPE	2005	Vectra-C/Signum		Engine	Y 30 DT		X	X	X	X	X	
OPEL	EUROPE	2005	Vectra-C/Signum		Engine	Z 32 SE		X	X	X	X		
OPEL	EUROPE	2005	Vectra-C/Signum		Transmission	AF 23-5/33-5/40-6		X	X	X	X		
OPEL	EUROPE	2005	Vectra-C/Signum		Chassis	ABS/TC/ESP		X	X	X	X		

OPEL	EUROPE	2005	Vectra-C/Signum		Chassis	EHPS (Electrohydraulic Power Steering)		X	X	X	X		
OPEL	EUROPE	2005	Vectra-C/Signum		Chassis	CDC (Continuous Damping Control)		X	X	X			
OPEL	EUROPE	2005	Vectra-C/Signum		Body	SDM (Airbag Sensing & Diagnostic Module)		X	X	X	X		
OPEL	EUROPE	2005	Vectra-C/Signum		Body	Instrument		X	X	X	X		
OPEL	EUROPE	2005	Vectra-C/Signum		Body	CIM (Steering Column Module)		X	X	X			1. Erase Transponder-Keys And Remote 2. Program Transponder-Keys And Remote
OPEL	EUROPE	2005	Vectra-C/Signum		Body	BCM (Body Control Module)		X	X	X	X		
OPEL	EUROPE	2005	Vectra-C/Signum		Body	DDM (Driver Door Module)		X	X	X			
OPEL	EUROPE	2005	Vectra-C/Signum		Body	PDM (Passenger Door Module)		X	X	X			
OPEL	EUROPE	2005	Vectra-C/Signum		Body	REC (Rear Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2005	Vectra-C/Signum		Body	UEC (Underhood Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2005	Vectra-C/Signum		Body	SLM (Shift Lever Module)		X	X	X			
OPEL	EUROPE	2005	Vectra-C/Signum		Body	SRM (Sun Roof Module)		X	X	X			
OPEL	EUROPE	2005	Vectra-C/Signum		Body	AHL/AFL (Headlamp Levelling)		X	X	X			
OPEL	EUROPE	2004	Vectra-C/Signum		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2004	Vectra-C/Signum		Engine	Engine Cooling		X	X	X	X		
OPEL	EUROPE	2004	Vectra-C/Signum		Engine	Z 20 NET		X	X	X	X	X	Reset Oil Life
OPEL	EUROPE	2004	Vectra-C/Signum		Engine	Z 18 XE		X	X	X	X		Injector Cutoff Test

OPEL	EUROPE	2004	Vectra-C/Signum		Engine	Z 19 DT		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Progressure sensor 5.Reset Engine Oil Life 6.Regeneration Diesel Particulate Filter 7.Replace Injector *8.Program Injector 9.Program High Speed CAN-Bus Configuration 10.Reset ECU 11.Replace O2 Sensor 12.Program Idle Speed
OPEL	EUROPE	2004	Vectra-C/Signum		Engine	Z 19 DTH		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Progressure sensor 5.Reset Engine Oil Life 6.Regeneration D. Particulate Filter 7.Reset engine oil sensor 8.Program High Speed Can Bus Config. 9.Reset O2 sensor 10.Program Idle Speed *11.Program Injector 12.Replace Injector
OPEL	EUROPE	2004	Vectra-C/Signum		Engine	Y 20 DTH		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	2004	Vectra-C/Signum		Engine	Y 22 DTR		X	X	X	X		
OPEL	EUROPE	2004	Vectra-C/Signum		Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2004	Vectra-C/Signum		Engine	Z 22 YH		X	X	X	X		Injector Cutoff Test
OPEL	EUROPE	2004	Vectra-C/Signum		Engine	Y 30 DT		X	X	X	X	X	
OPEL	EUROPE	2004	Vectra-C/Signum		Engine	Z 32 SE		X	X	X	X		

OPEL	EUROPE	2004	Vectra-C/Signum		Transmission	AF 23-5/33-5		X	X	X	X		
OPEL	EUROPE	2004	Vectra-C/Signum		Chassis	ABS/TC/ESP		X	X	X	X		
OPEL	EUROPE	2004	Vectra-C/Signum		Chassis	EHPS (Electrohydraulic Power Steering)		X	X	X	X		
OPEL	EUROPE	2004	Vectra-C/Signum		Body	SDM (Airbag Sensing & Diagnostic Module)		X	X	X	X		
OPEL	EUROPE	2004	Vectra-C/Signum		Body	Instrument		X	X	X	X		
OPEL	EUROPE	2004	Vectra-C/Signum		Body	CIM (Steering Column Module)		X	X	X			1. Erase Transponder-Keys And Remote 2. Program Transponder-Keys And Remote
OPEL	EUROPE	2004	Vectra-C/Signum		Body	BCM (Body Control Module)		X	X	X	X		
OPEL	EUROPE	2004	Vectra-C/Signum		Body	DDM (Driver Door Module)		X	X	X			
OPEL	EUROPE	2004	Vectra-C/Signum		Body	PDM (Passenger Door Module)		X	X	X			
OPEL	EUROPE	2004	Vectra-C/Signum		Body	REC (Rear Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2004	Vectra-C/Signum		Body	UEC (Underhood Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2004	Vectra-C/Signum		Body	SLM (Shift Lever Module)		X	X	X			
OPEL	EUROPE	2004	Vectra-C/Signum		Body	SRM (Sun Roof Module)		X	X	X			
OPEL	EUROPE	2004	Vectra-C/Signum		Body	AHL/AFL (Headlamp Levelling)		X	X	X			
OPEL	EUROPE	2003	Vectra-C/Signum		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2003	Vectra-C/Signum		Engine	Engine Cooling		X	X	X	X		
OPEL	EUROPE	2003	Vectra-C/Signum		Engine	Z 18 XE		X	X	X	X		Injector Cutoff Test

OPEL	EUROPE	2003	Vectra-C/Signum		Engine	Y 20 DTH		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	2003	Vectra-C/Signum		Engine	Y 22 DTR		X	X	X	X		
OPEL	EUROPE	2003	Vectra-C/Signum		Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2003	Vectra-C/Signum		Engine	Z 22 YH		X	X	X	X		Injector Cutoff Test
OPEL	EUROPE	2003	Vectra-C/Signum		Engine	Y 30 DT		X	X	X	X	X	
OPEL	EUROPE	2003	Vectra-C/Signum		Engine	Z 32 SE		X	X	X	X		
OPEL	EUROPE	2003	Vectra-C/Signum		Transmission	AF 23-5/33-5		X	X	X	X		
OPEL	EUROPE	2003	Vectra-C/Signum		Chassis	ABS/TC/ESP		X	X	X	X	X	
OPEL	EUROPE	2003	Vectra-C/Signum		Body	SDM (Airbag Sensing&Diagnostic Module)		X	X	X	X		
OPEL	EUROPE	2003	Vectra-C/Signum		Body	Instrument		X	X	X	X		
OPEL	EUROPE	2003	Vectra-C/Signum		Body	CIM (Steering Column Module)		X	X	X			*1.Erase Transponder-Keys And Remote *2.Program Transponder-Keys And Remote
OPEL	EUROPE	2003	Vectra-C/Signum		Body	BCM (Body Control Module)		X	X	X	X		
OPEL	EUROPE	2003	Vectra-C/Signum		Body	DDM (Driver Door Module)		X	X	X			
OPEL	EUROPE	2003	Vectra-C/Signum		Body	PDM (Passenger Door Module)		X	X	X			
OPEL	EUROPE	2003	Vectra-C/Signum		Body	REC (Rear Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2003	Vectra-C/Signum		Body	UEC (Underhood Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2003	Vectra-C/Signum		Body	SLM (Shift Lever Module)		X	X	X			

OPEL	EUROPE	2003	Vectra-C/Signum		Body	SRM (Sun Roof Module)		X	X	X			
OPEL	EUROPE	2003	Vectra-C/Signum		Body	AHL/AFL (Headlamp Levelling)		X	X	X			
OPEL	EUROPE	2002	Vectra-C/Signum		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2002	Vectra-C/Signum		Engine	Engine Cooling		X	X	X	X		
OPEL	EUROPE	2002	Vectra-C/Signum		Engine	Z 18 XE		X	X	X	X		Injector Cutoff Test
OPEL	EUROPE	2002	Vectra-C/Signum		Engine	Y 20 DTH		X	X	X	X		
OPEL	EUROPE	2002	Vectra-C/Signum		Engine	Y 22 DTR		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	2002	Vectra-C/Signum		Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2002	Vectra-C/Signum		Engine	Z 32 SE		X	X	X	X		
OPEL	EUROPE	2002	Vectra-C/Signum		Transmission	AF 23-5/33-5		X	X	X	X		
OPEL	EUROPE	2002	Vectra-C/Signum		Chassis	ABS/TC/ESP		X	X	X	X	X	
OPEL	EUROPE	2002	Vectra-C/Signum		Body	SDM (Airbag Sensing&Diagnostic Module)		X	X	X	X		
OPEL	EUROPE	2002	Vectra-C/Signum		Body	Instrument		X	X	X	X		
OPEL	EUROPE	2002	Vectra-C/Signum		Body	CIM (Steering Column Module)		X	X	X			1.Erase Transponder-Keys And Remote 2.Program Transponder-Keys And Remote
OPEL	EUROPE	2002	Vectra-C/Signum		Body	BCM (Body Control Module)		X	X	X	X		
OPEL	EUROPE	2002	Vectra-C/Signum		Body	DDM (Driver Door Module)		X	X	X			

OPEL	EUROPE	2002	Vectra-C/Signum		Body	PDM (Passenger Door Module)		X	X	X			
OPEL	EUROPE	2002	Vectra-C/Signum		Body	REC (Rear Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2002	Vectra-C/Signum		Body	UEC (Underhood Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2002	Vectra-C/Signum		Body	SLM (Shift Lever Module)		X	X	X			
OPEL	EUROPE	2002	Vectra-C/Signum		Body	SRM (Sun Roof Module)		X	X	X			
OPEL	EUROPE	2002	Vectra-C/Signum		Body	AHL/AFL (Headlamp Levelling)		X	X	X			
OPEL	EUROPE	2010	Vivaro		Engine	F9Q_760/762 (1.9L)		X	X	X	X	X	
OPEL	EUROPE	2010	Vivaro		Engine	M9R_780 (2.0L)		X	X	X	X	X	
OPEL	EUROPE	2010	Vivaro		Chassis	ABS/ESP		X	X	X	X	X	
OPEL	EUROPE	2010	Vivaro		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2010	Vivaro		Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2009	Vivaro		Engine	M9R_780		X	X	X	X	X	
OPEL	EUROPE	2009	Vivaro		Engine	F9Q 1.9L		X	X	X	X	X	
OPEL	EUROPE	2009	Vivaro		Chassis	ABS		X	X	X	X	X	
OPEL	EUROPE	2009	Vivaro		Body	BCM		X	X	X	X	X	
OPEL	EUROPE	2009	Vivaro		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2008	Vivaro		Engine	M9R_780		X	X	X	X	X	
OPEL	EUROPE	2008	Vivaro		Engine	F9Q 1.9L		X	X	X	X	X	
OPEL	EUROPE	2008	Vivaro		Chassis	ABS		X	X	X	X	X	
OPEL	EUROPE	2008	Vivaro		Body	BCM		X	X	X	X	X	
OPEL	EUROPE	2008	Vivaro		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2007	Vivaro		Engine	M9R_780		X	X	X	X	X	
OPEL	EUROPE	2007	Vivaro		Engine	F9Q 1.9L		X	X	X	X	X	
OPEL	EUROPE	2007	Vivaro		Chassis	ABS		X	X	X	X	X	
OPEL	EUROPE	2007	Vivaro		Body	BCM		X	X	X	X	X	
OPEL	EUROPE	2007	Vivaro		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2006	Vivaro		Engine	M9R_780		X	X	X	X	X	
OPEL	EUROPE	2006	Vivaro		Engine	F9Q 1.9L		X	X	X	X	X	
OPEL	EUROPE	2006	Vivaro		Chassis	ABS		X	X	X	X	X	
OPEL	EUROPE	2006	Vivaro		Body	BCM		X	X	X	X	X	

OPEL	EUROPE	2006	Vivaro	Body	Airbag		X	X	X	X		
OPEL	EUROPE	2005	Vivaro	Engine	M9R_780		X	X	X	X	X	
OPEL	EUROPE	2005	Vivaro	Engine	F9Q 1.9L		X	X	X	X	X	
OPEL	EUROPE	2005	Vivaro	Chassis	ABS		X	X	X	X	X	
OPEL	EUROPE	2005	Vivaro	Body	BCM		X	X	X	X	X	
OPEL	EUROPE	2005	Vivaro	Body	Airbag		X	X	X	X		
OPEL	EUROPE	2004	Vivaro	Engine	M9R 780		X	X	X	X	X	
OPEL	EUROPE	2004	Vivaro	Engine	F9Q 1.9L		X	X	X	X	X	
OPEL	EUROPE	2004	Vivaro	Chassis	ABS		X	X	X	X	X	
OPEL	EUROPE	2004	Vivaro	Body	BCM		X	X	X	X	X	
OPEL	EUROPE	2004	Vivaro	Body	Airbag		X	X	X	X		
OPEL	EUROPE	2003	Vivaro	Engine	M9R_780		X	X	X	X	X	
OPEL	EUROPE	2003	Vivaro	Engine	F9Q 1.9L		X	X	X	X	X	
OPEL	EUROPE	2003	Vivaro	Chassis	ABS		X	X	X	X	X	
OPEL	EUROPE	2003	Vivaro	Body	BCM		X	X	X	X	X	
OPEL	EUROPE	2003	Vivaro	Body	Airbag		X	X	X	X		
OPEL	EUROPE	2009	Vivaro	Engine	M9R_780		X	X	X	X	X	
OPEL	EUROPE	2002	Vivaro	Engine	F9Q 1.9L		X	X	X	X	X	
OPEL	EUROPE	2002	Vivaro	Chassis	ABS		X	X	X	X	X	
OPEL	EUROPE	2002	Vivaro	Body	BCM		X	X	X	X	X	
OPEL	EUROPE	2002	Vivaro	Body	Airbag		X	X	X	X		
OPEL	EUROPE	2001	Vivaro	Engine	F9Q 1.9L		X	X	X	X	X	
OPEL	EUROPE	2001	Vivaro	Chassis	ABS		X	X	X	X	X	
OPEL	EUROPE	2001	Vivaro	Body	BCM		X	X	X	X	X	
OPEL	EUROPE	2005	Zafira	Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2005	Zafira	Engine	Z 16 YNG		X	X	X	X		
OPEL	EUROPE	2005	Zafira	Engine	Z 18 XE		X	X	X	X	X	
OPEL	EUROPE	2005	Zafira	Engine	Y 20 DTH		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2005	Zafira	Engine	Z 20 LET		X	X	X	X		
OPEL	EUROPE	2005	Zafira	Engine	Y 22 DTR		X	X	X	X		
OPEL	EUROPE	2005	Zafira	Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2005	Zafira	Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2005	Zafira	Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2005	Zafira	Chassis	ESP		X	X	X	X		
OPEL	EUROPE	2005	Zafira	Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2005	Zafira	Body	Immobiliser		X	X	X	X		1.Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2005	Zafira	Body	Instrument		X	X	X	X		
OPEL	EUROPE	2005	Zafira	Body	Airbag		X	X	X	X		
OPEL	EUROPE	2005	Zafira	Body	Anti Theft Warning		X	X	X	X		
OPEL	EUROPE	2005	Zafira	Body	Central Door Lock		X	X	X	X		
OPEL	EUROPE	2005	Zafira	Body	Engine Cooling Module		X	X	X	X		
OPEL	EUROPE	2005	Zafira	Body	Electronic Climate Control		X	X	X	X		
OPEL	EUROPE	2005	Zafira	Infotainment	Radio Car 300		X	X	X	X		
OPEL	EUROPE	2004	Zafira	Engine	Z 16 XE		X	X	X	X	X	

OPEL	EUROPE	2004	Zafira	Engine	Z 16 YNG		X	X	X	X		
OPEL	EUROPE	2004	Zafira	Engine	Z 18 XE		X	X	X	X	X	
OPEL	EUROPE	2004	Zafira	Engine	Y 20 DTH		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2004	Zafira	Engine	Z 20 LET		X	X	X	X		
OPEL	EUROPE	2004	Zafira	Engine	Y 22 DTR		X	X	X	X		
OPEL	EUROPE	2004	Zafira	Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2004	Zafira	Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2004	Zafira	Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2004	Zafira	Chassis	ESP		X	X	X	X		
OPEL	EUROPE	2004	Zafira	Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2004	Zafira	Body	Immobiliser		X	X	X	X		1. Erase Key Set; 2. Program Transponder-Keys
OPEL	EUROPE	2004	Zafira	Body	Instrument		X	X	X	X		
OPEL	EUROPE	2004	Zafira	Body	Airbag		X	X	X	X		
OPEL	EUROPE	2004	Zafira	Body	Anti Theft Warning		X	X	X	X		
OPEL	EUROPE	2004	Zafira	Body	Central Door Lock		X	X	X	X		
OPEL	EUROPE	2004	Zafira	Body	Engine Cooling Module		X	X	X	X		
OPEL	EUROPE	2004	Zafira	Body	Electronic Climate Control		X	X	X	X		
OPEL	EUROPE	2004	Zafira	Infotainment	Radio Car 300		X	X	X	X		
OPEL	EUROPE	2003	Zafira	Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2003	Zafira	Engine	Z 16 YNG		X	X	X	X		
OPEL	EUROPE	2003	Zafira	Engine	Z 18 XE		X	X	X	X	X	
OPEL	EUROPE	2003	Zafira	Engine	Y 20 DTH		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2003	Zafira	Engine	Z 20 LET		X	X	X	X		
OPEL	EUROPE	2003	Zafira	Engine	Y 22 DTR		X	X	X	X		
OPEL	EUROPE	2003	Zafira	Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2003	Zafira	Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2003	Zafira	Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2003	Zafira	Chassis	ESP		X	X	X	X		
OPEL	EUROPE	2003	Zafira	Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2003	Zafira	Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2003	Zafira	Body	Instrument		X	X	X	X		
OPEL	EUROPE	2003	Zafira	Body	Airbag		X	X	X	X		
OPEL	EUROPE	2003	Zafira	Body	Anti Theft Warning		X	X	X	X		
OPEL	EUROPE	2003	Zafira	Body	Central Door Lock		X	X	X	X		
OPEL	EUROPE	2003	Zafira	Body	Engine Cooling Module		X	X	X	X		
OPEL	EUROPE	2003	Zafira	Body	Electronic Climate Control		X	X	X	X		
OPEL	EUROPE	2003	Zafira	Infotainment	Radio Car 300		X	X	X	X		
OPEL	EUROPE	2002	Zafira	Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2002	Zafira	Engine	Z 16 YNG		X	X	X	X		
OPEL	EUROPE	2002	Zafira	Engine	Z 18 XE		X	X	X	X	X	
OPEL	EUROPE	2002	Zafira	Engine	Y 20 DTH		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2002	Zafira	Engine	Z 20 LET		X	X	X	X		
OPEL	EUROPE	2002	Zafira	Engine	Y 22 DTR		X	X	X	X		

OPEL	EUROPE	2002	Zafira	Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2002	Zafira	Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2002	Zafira	Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2002	Zafira	Chassis	ESP		X	X	X	X		
OPEL	EUROPE	2002	Zafira	Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2002	Zafira	Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2002	Zafira	Body	Instrument		X	X	X	X		
OPEL	EUROPE	2002	Zafira	Body	Airbag		X	X	X	X		
OPEL	EUROPE	2002	Zafira	Body	Anti Theft Warning		X	X	X	X		
OPEL	EUROPE	2002	Zafira	Body	Central Door Lock		X	X	X	X		
OPEL	EUROPE	2002	Zafira	Body	Engine Cooling Module		X	X	X	X		
OPEL	EUROPE	2002	Zafira	Infotainment	Radio Car 300		X	X	X	X		
OPEL	EUROPE	2001	Zafira	Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2001	Zafira	Engine	Z 16 YNG		X	X	X	X		
OPEL	EUROPE	2001	Zafira	Engine	Z 18 XE		X	X	X	X	X	
OPEL	EUROPE	2001	Zafira	Engine	Y 20 DTH		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2001	Zafira	Engine	Z 22 SE		X	X	X	X		
OPEL	EUROPE	2001	Zafira	Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2001	Zafira	Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2001	Zafira	Chassis	ESP		X	X	X	X		
OPEL	EUROPE	2001	Zafira	Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2001	Zafira	Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2001	Zafira	Body	Instrument		X	X	X	X		
OPEL	EUROPE	2001	Zafira	Body	Airbag		X	X	X	X		
OPEL	EUROPE	2001	Zafira	Body	Anti Theft Warning		X	X	X	X		
OPEL	EUROPE	2001	Zafira	Body	Central Door Lock		X	X	X	X		
OPEL	EUROPE	2001	Zafira	Body	Engine Cooling Module		X	X	X	X		
OPEL	EUROPE	2001	Zafira	Infotainment	Radio Car 300		X	X	X	X		
OPEL	EUROPE	2000	Zafira	Engine	X 16 XEL		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	2000	Zafira	Engine	X 18 XE1		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2000	Zafira	Engine	X 20 DTL		X	X	X	X		
OPEL	EUROPE	2000	Zafira	Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	EUROPE	2000	Zafira	Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2000	Zafira	Chassis	ESP		X	X	X	X		
OPEL	EUROPE	2000	Zafira	Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	2000	Zafira	Chassis	Electronic Power Steering		X	X	X	X		
OPEL	EUROPE	2000	Zafira	Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	2000	Zafira	Body	Instrument		X	X	X	X		
OPEL	EUROPE	2000	Zafira	Body	Airbag		X	X	X	X		
OPEL	EUROPE	2000	Zafira	Body	Airbag SAB6		X	X	X	X		
OPEL	EUROPE	2000	Zafira	Body	Anti Theft Warning		X	X	X	X		
OPEL	EUROPE	2000	Zafira	Body	Central Door Lock		X	X	X	X		
OPEL	EUROPE	2000	Zafira	Body	Engine Cooling Module		X	X	X	X		
OPEL	EUROPE	2000	Zafira	Infotainment	Radio Car 300		X	X	X	X		

OPEL	EUROPE	1999	Zafira		Engine	X 16 XEL		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	1999	Zafira		Engine	X 18 XE1		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	1999	Zafira		Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	EUROPE	1999	Zafira		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	1999	Zafira		Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	1999	Zafira		Body	Immobiliser		X	X	X	X		
OPEL	EUROPE	1999	Zafira		Body	Instrument		X	X	X	X		
OPEL	EUROPE	1999	Zafira		Body	Airbag SAB6		X	X	X	X		
OPEL	EUROPE	1999	Zafira		Body	Anti Theft Warning		X	X	X	X		
OPEL	EUROPE	1999	Zafira		Body	Central Door Lock		X	X	X	X		
OPEL	EUROPE	1999	Zafira		Body	Engine Cooling Module		X	X	X	X		
OPEL	EUROPE	1999	Zafira		Infotainment	Radio Car 300		X	X	X	X		
OPEL	EUROPE	2011	Zafira-B		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2011	Zafira-B		Engine	Z 16 XE1		X	X	X	X	X	
OPEL	EUROPE	2011	Zafira-B		Engine	Z16XEP		X	X	X	X	X	ECU Control Program Idle Speed Reset 02-Loop Block Learn Map Program High Speed CAN-Bus Configuration Reset ECU
OPEL	EUROPE	2011	Zafira-B		Engine	Z16XER		X	X	X	X	X	ECU Control Program Idle Speed Reset Learned Values Program High Speed CAN-Bus Configuration Reset ECU
OPEL	EUROPE	2011	Zafira-B		Engine	Z17DTJ		X	X	X	X	X	1. Replace Diesel Particulate Filter 2. Replace Mass air flow sensor 3. Replace Precatalyst 4. Replace Rail Pressure sensor 5. Regeneration Diesel Particulate Filter 6. Replace Fuel Pump 7. Program High Speed CAN-Bus Configuration 8. Reset ECU 9. Program Idle Speed
OPEL	EUROPE	2011	Zafira-B		Engine	Z18XER		X	X	X	X	X	ECU Control Program Idle Speed Reset Learned Values Program High Speed CAN-Bus Configuration Reset ECU

OPEL	EUROPE	2011	Zafira-B		Engine	Z19DT		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Progressure sensor 5.Reset Engine Oil Life 6.Regeneration Diesel Particulate Filter 7.Replace Injector *8.Program Injector 9.Program High Speed CAN-Bus Configuration 10.Reset ECU 11.Replace O2 Sensor 12.Program Idle Speed
OPEL	EUROPE	2011	Zafira-B		Engine	Z 19 DTH		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Pressure sensor 5.Regeneration Diesel Particulate Filter 6.Reset engine oil sensor 7.Program High Speed Can Bus Config. 8.Replace O2 sensor 9.Program Idle Speed 10.Replace Injector *11.Program Injector
OPEL	EUROPE	2011	Zafira-B		Engine	Z 20 LEH		X	X	X	X	X	
OPEL	EUROPE	2011	Zafira-B		Engine	Z 20 LER		X	X	X	X	X	
OPEL	EUROPE	2011	Zafira-B		Engine	Z 22 YH		X	X	X	X	X	
OPEL	EUROPE	2011	Zafira-B		Transmission	MTA (Easytronic)		X	X	X	X		
OPEL	EUROPE	2011	Zafira-B		Transmission	AF 22-4		X	X	X	X	X	
OPEL	EUROPE	2011	Zafira-B		Chassis	ABS/TC/ESP ECU (Electronic Control unit)		X	X	X	X	X	
OPEL	EUROPE	2011	Zafira-B		Chassis	EHPS (Electro Hydraulic Power Steering)		X	X	X	X		
OPEL	EUROPE	2011	Zafira-B		Chassis	CDC(Continuous Damping Control)		X	X	X	X	X	
OPEL	EUROPE	2011	Zafira-B		Body	SDM (Airbag)		X	X	X	X		
OPEL	EUROPE	2011	Zafira-B		Body	PAS(Park Pilot)		X	X	X	X	X	
OPEL	EUROPE	2011	Zafira-B		Body	CIM(Steering Column Module)		X	X	X	X	X	Erase Transponder-Keys And Remote Program Transponder-Keys And Remote
OPEL	EUROPE	2011	Zafira-B		Body	IPC ECU (Instrument Control unit)		X	X	X	X		
OPEL	EUROPE	2011	Zafira-B		Body	PEPS(Open and Start)		X	X	X	X		
OPEL	EUROPE	2011	Zafira-B		Body	REC (Rear Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2011	Zafira-B		Body	SLM(Shift Lever Module)		X	X	X	X	X	
OPEL	EUROPE	2011	Zafira-B		Body	UEC (Underhood Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2010	Zafira-B		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2010	Zafira-B		Engine	Z 16 XE1		X	X	X	X	X	

OPEL	EUROPE	2010	Zafira-B		Engine	Z16XEP		X	X	X	X	X	ECU Control Program Idle Speed Reset 02-Loop Block Learn Map Program High Speed CAN-Bus Configuration Reset ECU
OPEL	EUROPE	2010	Zafira-B		Engine	Z16XER		X	X	X	X	X	ECU Control Program Idle Speed Reset Learned Values Program High Speed CAN-Bus Configuration Reset ECU
OPEL	EUROPE	2010	Zafira-B		Engine	Z17DTJ		X	X	X	X	X	1. Replace Diesel Particulate Filter 2. Replace Mass air flow sensor 3. Replace Precatalyst 4. Replace Rail Pressure sensor 5. Regeneration Diesel Particulate Filter 6. Replace Fuel Pump 7. Program High Speed CAN-Bus Configuration 8. Reset ECU 9. Program Idle Speed
OPEL	EUROPE	2010	Zafira-B		Engine	Z18XER		X	X	X	X	X	ECU Control Program Idle Speed Reset Learned Values Program High Speed CAN-Bus Configuration Reset ECU
OPEL	EUROPE	2010	Zafira-B		Engine	Z19DT		X	X	X	X	X	1. Replace Diesel Particulate Filter 2. Replace Mass air flow sensor 3. Replace Precatalyst 4. Replace Rail Progressure sensor 5. Reset Engine Oil Life 6. Regeneration Diesel Particulate Filter 7. Replace Injector *8. Program Injector 9. Program High Speed CAN-Bus Configuration 10. Reset ECU 11. Replace 02 Sensor 12. Program Idle Speed

OPEL	EUROPE	2010	Zafira-B		Engine	Z 19 DTH		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Pressure sensor 5.Regeneration Diesel Particulate Filter 6.Reset engine oil sensor 7.Program High Speed Can Bus Config. 8.Replace O2 sensor 9.Program Idle Speed 10.Replace Injector *11.Program Injector
OPEL	EUROPE	2010	Zafira-B		Engine	Z 20 LEH		X	X	X	X	X	
OPEL	EUROPE	2010	Zafira-B		Engine	Z 20 LER		X	X	X	X	X	
OPEL	EUROPE	2010	Zafira-B		Engine	Z 22 YH		X	X	X	X	X	
OPEL	EUROPE	2010	Zafira-B		Transmission	MTA (Easytronic)		X	X	X	X		
OPEL	EUROPE	2010	Zafira-B		Transmission	AF 22-4		X	X	X	X	X	
OPEL	EUROPE	2010	Zafira-B		Chassis	ABS/TC/ESP ECU (Electronic Control unit)		X	X	X	X	X	
OPEL	EUROPE	2010	Zafira-B		Chassis	EHPS (Electro Hydraulic Power Steering)		X	X	X	X		
OPEL	EUROPE	2010	Zafira-B		Chassis	CDC(Continuous Damping Control)		X	X	X	X	X	
OPEL	EUROPE	2010	Zafira-B		Body	SDM (Airbag)		X	X	X	X		
OPEL	EUROPE	2010	Zafira-B		Body	PAS(Park Pilot)		X	X	X	X	X	
OPEL	EUROPE	2010	Zafira-B		Body	CIM(Steering Column Module)		X	X	X	X	X	Erase Transponder-Keys And Remote Program Transponder-Keys And Remote
OPEL	EUROPE	2010	Zafira-B		Body	IPC ECU (Instrument Control unit)		X	X	X	X		
OPEL	EUROPE	2010	Zafira-B		Body	PEPS(Open and Start)		X	X	X	X		
OPEL	EUROPE	2010	Zafira-B		Body	REC (Rear Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2010	Zafira-B		Body	SLM(Shift Lever Module)		X	X	X	X	X	
OPEL	EUROPE	2010	Zafira-B		Body	UEC (Underhood Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2009	Zafira-B		Engine	Z 20 LEH		X	X	X	X	X	
OPEL	EUROPE	2009	Zafira-B		Engine	Z 22 YH		X	X	X	X	X	
OPEL	EUROPE	2009	Zafira-B		Engine	Z16XEP		X	X	X	X	X	Electronic Throttle Control Injector Cut off Test Program Idle Speed Reset Learn Values Program High Can Configuration Reset ECU

OPEL	EUROPE	2009	Zafira-B		Engine	Z17DTJ		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Pressure sensor 5.Regeneration Diesel Particulate Filter 6.Replace Fuel Pump 7.Program High Speed CAN-Bus Configuration 8.Reset ECU 9.Program Idle Speed
OPEL	EUROPE	2009	Zafira-B		Engine	Z18XER		X	X	X	X	X	Program Idle Speed Reset Learn Values Program High Can Configuration Reset ECU
OPEL	EUROPE	2009	Zafira-B		Engine	Z19DT		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Progressure sensor 5.Reset Engine Oil Life 6.Regeneration Diesel Particulate Filter 7.Replace Injector *8.Program Injector 9.Program High Speed CAN-Bus Configuration 10.Reset ECU 11.Replace O2 Sensor 12.Program Idle Speed
OPEL	EUROPE	2009	Zafira-B		Engine	Z 19 DTH		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Pressure sensor 5.Regeneration Diesel Particulate Filter 6.Reset engine oil sensor 7.Program High Speed Can Bus Config. 8.Replace O2 sensor 9.Program Idle Speed 10.Replace Injector *11.Program Injector
OPEL	EUROPE	2009	Zafira-B		Transmission	AF 22-4		X	X	X	X	X	
OPEL	EUROPE	2009	Zafira-B		Transmission	MTA (Easytronic)		X	X	X	X		
OPEL	EUROPE	2009	Zafira-B		Chassis	CDC(Continuous Damping Control)		X	X	X	X	X	
OPEL	EUROPE	2009	Zafira-B		Chassis	ABS/TC/ESP ECU (Electronic Control unit)		X	X	X	X	X	
OPEL	EUROPE	2009	Zafira-B		Chassis	EHPS (Electrohydraulic Power Steering)		X	X	X	X		
OPEL	EUROPE	2009	Zafira-B		Body	PEPS (Open&Start)		X	X	X	X		
OPEL	EUROPE	2009	Zafira-B		Body	PAS (Park Pilot)		X	X	X	X	X	

OPEL	EUROPE	2009	Zafira-B		Body	SLM(Shift Lever Module)		X	X	X	X	X	
OPEL	EUROPE	2009	Zafira-B		Body	SDM (Airbag)		X	X	X	X		
OPEL	EUROPE	2009	Zafira-B		Body	CIM		X	X	X	X	X	Erase Remote Key Program Remote Key
OPEL	EUROPE	2009	Zafira-B		Body	IPC ECU (Instrument Control unit)		X	X	X	X		
OPEL	EUROPE	2009	Zafira-B		Body	REC (Rear Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2009	Zafira-B		Body	UEC (Underhood Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2008	Zafira-B		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2008	Zafira-B		Engine	Z 16 XE1		X	X	X	X	X	
OPEL	EUROPE	2008	Zafira-B		Engine	Z 20 LER		X	X	X	X	X	
OPEL	EUROPE	2008	Zafira-B		Engine	Z 20 LEH		X	X	X	X	X	
OPEL	EUROPE	2008	Zafira-B		Engine	Z 22 YH		X	X	X	X	X	
OPEL	EUROPE	2008	Zafira-B		Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2008	Zafira-B		Engine	Z 16 XER		X	X	X	X		Injector Cutoff Test
OPEL	EUROPE	2008	Zafira-B		Engine	Z 18 XER		X	X	X	X		Injector Cutoff Test
OPEL	EUROPE	2008	Zafira-B		Engine	Z 19 DT		X	X	X	X	X	1. Replace Diesel Particulate Filter 2. Replace Mass air flow sensor 3. Replace Precatalyst 4. Replace Rail Progressure sensor 5. Reset Engine Oil Life 6. Regeneration Diesel Particulate Filter 7. Replace Injector *8. Program Injector 9. Program High Speed CAN-Bus Configuration 10. Reset ECU 11. Replace O2 Sensor 12. Program Idle Speed
OPEL	EUROPE	2008	Zafira-B		Engine	Z 19 DTH		X	X	X	X	X	1. Replace Diesel Particulate Filter 2. Replace Mass air flow sensor 3. Replace Precatalyst 4. Replace Rail Pressure sensor 5. Regeneration Diesel Particulate Filter 6. Reset engine oil sensor 7. Program High Speed Can Bus Config. 8. Replace O2 sensor 9. Program Idle Speed 10. Replace Injector *11. Program Injector
OPEL	EUROPE	2008	Zafira-B		Transmission	AF 22-4		X	X	X	X	X	
OPEL	EUROPE	2008	Zafira-B		Transmission	MTA (Easytronic)		X	X	X	X		
OPEL	EUROPE	2008	Zafira-B		Chassis	CDC(Continuous Damping Control)		X	X	X	X	X	
OPEL	EUROPE	2008	Zafira-B		Chassis	ABS/TC/ESP ECU (Electronic Control unit)		X	X	X	X	X	

OPEL	EUROPE	2008	Zafira-B		Chassis	EHPS (Electrohydraulic Power Steering)		X	X	X	X		
OPEL	EUROPE	2008	Zafira-B		Body	PEPS (Open&Start)		X	X	X	X		
OPEL	EUROPE	2008	Zafira-B		Body	PAS (Park Pilot)		X	X	X	X	X	
OPEL	EUROPE	2008	Zafira-B		Body	SLM (Shift Lever Module)		X	X	X	X	X	
OPEL	EUROPE	2008	Zafira-B		Body	SDM (Airbag)		X	X	X	X		
OPEL	EUROPE	2008	Zafira-B		Body	CIM (Steering Column Module)		X	X	X	X		1. Erase Transponder-Keys And Remote 2. Program Transponder-Keys And Remote
OPEL	EUROPE	2008	Zafira-B		Body	IPC ECU (Instrument Control unit)		X	X	X	X		
OPEL	EUROPE	2008	Zafira-B		Body	REC (Rear Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2008	Zafira-B		Body	UEC (Underhood Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2007	Zafira-B		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2007	Zafira-B		Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2007	Zafira-B		Engine	Z 16 XER		X	X	X	X		Injector Cutoff Test
OPEL	EUROPE	2007	Zafira-B		Engine	Z 18 XER		X	X	X	X		Injector Cutoff Test
OPEL	EUROPE	2007	Zafira-B		Engine	Z 19 DT		X	X	X	X	X	1. Replace Diesel Particulate Filter 2. Replace Mass air flow sensor 3. Replace Precatalyst 4. Replace Rail Progressure sensor 5. Reset Engine Oil Life 6. Regeneration Diesel Particulate Filter 7. Replace Injector *8. Program Injector 9. Program High Speed CAN-Bus Configuration 10. Reset ECU 11. Replace O2 Sensor 12. Program Idle Speed
OPEL	EUROPE	2007	Zafira-B		Engine	Z 19 DTH		X	X	X	X	X	1. Replace Diesel Particulate Filter 2. Replace Mass air flow sensor 3. Replace Precatalyst 4. Replace Rail Pressure sensor 5. Regeneration Diesel Particulate Filter 6. Reset engine oil sensor 7. Program High Speed Can Bus Config. 8. Replace O2 sensor 9. Program Idle Speed 10. Replace Injector *11. Program Injector
OPEL	EUROPE	2007	Zafira-B		Transmission	MTA (Easytronic)		X	X	X	X		
OPEL	EUROPE	2007	Zafira-B		Chassis	ABS/TC/ESP ECU (Electronic Control unit)		X	X	X	X	X	
OPEL	EUROPE	2007	Zafira-B		Chassis	EHPS (Electrohydraulic Power Steering)		X	X	X	X		
OPEL	EUROPE	2007	Zafira-B		Body	SDM (Airbag)		X	X	X	X		

OPEL	EUROPE	2007	Zafira-B		Body	CIM (Steering Column Module)		X	X	X	X		
OPEL	EUROPE	2007	Zafira-B		Body	IPC ECU (Instrument Control unit)		X	X	X	X		
OPEL	EUROPE	2007	Zafira-B		Body	REC (Rear Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2007	Zafira-B		Body	UEC (Underhood Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2006	Zafira-B		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2006	Zafira-B		Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2006	Zafira-B		Engine	Z 18 XER		X	X	X	X		Injector Cutoff Test
OPEL	EUROPE	2006	Zafira-B		Engine	Z 19 DT		X	X	X	X	X	1. Replace Diesel Particulate Filter 2. Replace Mass air flow sensor 3. Replace Precatalyst 4. Replace Rail Progressure sensor 5. Reset Engine Oil Life 6. Regeneration Diesel Particulate Filter 7. Replace Injector 8. Program Injector 9. Program High Speed CAN-Bus Configuration 10. Reset ECU 11. Replace O2 Sensor *12. Program Idle Speed
OPEL	EUROPE	2006	Zafira-B		Engine	Z 19 DTH		X	X	X	X	X	1. Replace Diesel Particulate Filter 2. Replace Mass air flow sensor 3. Replace Precatalyst 4. Replace Rail Pressure sensor 5. Regeneration Diesel Particulate Filter 6. Reset engine oil sensor 7. Program High Speed Can Bus Config. 8. Replace O2 sensor 9. Program Idle Speed 10. Replace Injector *11. Program Injector
OPEL	EUROPE	2006	Zafira-B		Transmission	MTA (Easytronic)		X	X	X	X		
OPEL	EUROPE	2006	Zafira-B		Chassis	ABS/TC/ESP ECU (Electronic Control unit)		X	X	X	X	X	
OPEL	EUROPE	2006	Zafira-B		Chassis	EHPS (Electrohydraulic Power Steering)		X	X	X	X		
OPEL	EUROPE	2006	Zafira-B		Body	SDM (Airbag)		X	X	X	X		
OPEL	EUROPE	2006	Zafira-B		Body	CIM (Steering Column Module)		X	X	X	X		
OPEL	EUROPE	2006	Zafira-B		Body	IPC ECU (Instrument Control unit)		X	X	X	X		
OPEL	EUROPE	2006	Zafira-B		Body	REC (Rear Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2006	Zafira-B		Body	UEC (Underhood Electrical Centre)		X	X	X	X		

OPEL	EUROPE	2005	Zafira-B		Vehicle	Vehicle DTC Information			X	X			
OPEL	EUROPE	2005	Zafira-B		Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2005	Zafira-B		Engine	Z 18 XER		X	X	X	X		Injector Cutoff Test
OPEL	EUROPE	2005	Zafira-B		Engine	Z 19 DT		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Progressure sensor 5.Reset Engine Oil Life 6.Regeneration Diesel Particulate Filter 7.Replace Injector *8.Program Injector 9.Program High Speed CAN-Bus Configuration 10.Reset ECU 11.Replace O2 Sensor 12.Program Idle Speed
OPEL	EUROPE	2005	Zafira-B		Engine	Z 19 DTH		X	X	X	X	X	1.Replace Diesel Particulate Filter 2.Replace Mass air flow sensor 3.Replace Precatalyst 4.Replace Rail Pressure sensor 5.Regeneration Diesel Particulate Filter 6.Reset engine oil sensor 7.Program High Speed Can Bus Config. 8.Replace O2 sensor 9.Program Idle Speed 10.Replace Injector *11.Program Injector
OPEL	EUROPE	2005	Zafira-B		Chassis	ABS/TC/ESP ECU (Electronic Control unit)		X	X	X	X	X	
OPEL	EUROPE	2005	Zafira-B		Chassis	EHPS (Electrohydraulic Power Steering)		X	X	X	X		
OPEL	EUROPE	2005	Zafira-B		Body	SDM (Airbag)		X	X	X	X		
OPEL	EUROPE	2005	Zafira-B		Body	CIM (Steering Column Module)		X	X	X	X		
OPEL	EUROPE	2005	Zafira-B		Body	IPC ECU (Instrument Control unit)		X	X	X	X		
OPEL	EUROPE	2005	Zafira-B		Body	REC (Rear Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2005	Zafira-B		Body	UEC (Underhood Electrical Centre)		X	X	X	X		
OPEL	EUROPE	2011	Astra-G		Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-G		Engine	Z 14 XE		X	X	X	X		
OPEL	EUROPE	2011	Astra-G		Engine	Z 14 XEP		X	X	X	X	X	1.Reset Learn Values 2.Reset O2-Loop Block Lean Map 3. ECU Control-Electronic throttle control 4. Idle speed program. 5.ECU Reset
OPEL	EUROPE	2011	Astra-G		Engine	C 16 SEL		X	X	X	X	X	

OPEL	EUROPE	2011	Astra-G	Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-G	Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Engine	Z 16 YNG		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-G	Engine	Z 17 DTL		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Engine	Z 18 XE		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-G	Engine	Z 18 XEL		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Engine	Y 20 DTH		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2011	Astra-G	Engine	Z 20 LET		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Engine	Y 22 DTR		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	2011	Astra-G	Engine	Z 22 SE		X	X	X	X	X	Programming ECU Control
OPEL	EUROPE	2011	Astra-G	Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-G	Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-G	Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-G	Chassis	ESP		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Chassis	Electronic Power Steering		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-G	Body	Immobiliser		X	X	X	X		Erase Key Set Program Transponder-Keys
OPEL	EUROPE	2011	Astra-G	Body	Instrument		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-G	Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2011	Astra-G	Body	Anti Theft Warning		X	X	X	X		Erase Key Set Program Transponder-Keys
OPEL	EUROPE	2011	Astra-G	Body	Central Door Lock		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Body	Engine Cooling Module		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Body	Electronic Climate Control		X	X	X	X		
OPEL	EUROPE	2011	Astra-G	Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration
OPEL	EUROPE	2010	Astra-G	Engine	Z 12 XE		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-G	Engine	Z 14 XE		X	X	X	X		
OPEL	EUROPE	2010	Astra-G	Engine	Z 14 XEP		X	X	X	X	X	1.Reset Learn Values 2.Reset O2-Loop Block Lean Map 3.ECU Control-Electronic throttle control 4. Idle speed program. 5. ECU Reset
OPEL	EUROPE	2010	Astra-G	Engine	C 16 SEL		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-G	Engine	Z 16 SE		X	X	X	X		
OPEL	EUROPE	2010	Astra-G	Engine	Z 16 YNG		X	X	X	X		
OPEL	EUROPE	2010	Astra-G	Engine	Z 16 XE		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-G	Engine	Z 16 XEP		X	X	X	X		
OPEL	EUROPE	2010	Astra-G	Engine	Y 17 DT		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-G	Engine	Z 17 DTL		X	X	X	X		
OPEL	EUROPE	2010	Astra-G	Engine	Z 18 XE		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-G	Engine	Z 18 XEL		X	X	X	X		

OPEL	EUROPE	2010	Astra-G	Engine	Y 20 DTH		X	X	X	X	X	Adjust Idle Speed
OPEL	EUROPE	2010	Astra-G	Engine	Z 20 LET		X	X	X	X		
OPEL	EUROPE	2010	Astra-G	Engine	Y 22 DTR		X	X	X	X		Adjust Idle Speed
OPEL	EUROPE	2010	Astra-G	Engine	Z 22 SE		X	X	X	X	X	Programming ECU Control
OPEL	EUROPE	2010	Astra-G	Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-G	Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-G	Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-G	Chassis	ESP		X	X	X	X		
OPEL	EUROPE	2010	Astra-G	Chassis	Cruise Control		X	X	X	X		
OPEL	EUROPE	2010	Astra-G	Chassis	Electronic Power Steering		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-G	Body	Immobiliser		X	X	X	X		Erase Key Set Program Transponder-Keys
OPEL	EUROPE	2010	Astra-G	Body	Instrument		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-G	Body	Airbag		X	X	X	X	X	
OPEL	EUROPE	2010	Astra-G	Body	Anti Theft Warning		X	X	X	X		Erase Key Set Program Transponder-Keys
OPEL	EUROPE	2010	Astra-G	Body	Central Door Lock		X	X	X	X		
OPEL	EUROPE	2010	Astra-G	Body	Engine Cooling Module		X	X	X	X		
OPEL	EUROPE	2010	Astra-G	Body	Electronic Climate Control		X	X	X	X		
OPEL	EUROPE	2010	Astra-G	Body	HeadLamp Levelling Device		X	X	X	X	X	Calibration
OPEL	EUROPE	2010	Movano	Engine	Engine Control Module		X	X	X	X	X	
OPEL	EUROPE	2010	Movano	Chassis	ABS/ESP		X	X	X	X	X	
OPEL	EUROPE	2010	Movano	Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2010	Movano	Body	Airbag		X	X	X	X		
OPEL	EUROPE	2009	Movano	Engine	Engine Control Module		X	X	X	X	X	
OPEL	EUROPE	2009	Movano	Chassis	ABS/ESP		X	X	X	X	X	
OPEL	EUROPE	2009	Movano	Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2009	Movano	Body	Airbag		X	X	X	X		
OPEL	EUROPE	2008	Movano	Engine	Engine Control Module		X	X	X	X	X	
OPEL	EUROPE	2008	Movano	Chassis	ABS/ESP		X	X	X	X	X	
OPEL	EUROPE	2008	Movano	Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2008	Movano	Body	Airbag		X	X	X	X		
OPEL	EUROPE	2007	Movano	Engine	Engine Control Module		X	X	X	X	X	
OPEL	EUROPE	2007	Movano	Chassis	ABS/ESP		X	X	X	X	X	
OPEL	EUROPE	2007	Movano	Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2007	Movano	Body	Airbag		X	X	X	X		
OPEL	EUROPE	2006	Movano	Engine	Engine Control Module		X	X	X	X	X	
OPEL	EUROPE	2006	Movano	Chassis	ABS/ESP		X	X	X	X	X	
OPEL	EUROPE	2006	Movano	Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2006	Movano	Body	Airbag		X	X	X	X		
OPEL	EUROPE	2005	Movano	Engine	Engine Control Module		X	X	X	X	X	
OPEL	EUROPE	2005	Movano	Chassis	ABS/ESP		X	X	X	X	X	
OPEL	EUROPE	2005	Movano	Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2005	Movano	Body	Airbag		X	X	X	X		

OPEL	EUROPE	2004	Movano		Engine	Engine Control Module		X	X	X	X	X	
OPEL	EUROPE	2004	Movano		Chassis	ABS/ESP		X	X	X	X	X	
OPEL	EUROPE	2004	Movano		Body	Body Control Module		X	X	X	X	X	
OPEL	EUROPE	2004	Movano		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2009	Astra-G		Engine	C 20 NE/C 20 SE (8V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2009	Astra-G		Engine	C 20 SE/C 20 SEL (16V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2009	Astra-G		Engine	X 20 XE (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2009	Astra-G		Engine	X 24 SE		X	X	X	X		
OPEL	BRAZIL	2009	Astra-G		Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	BRAZIL	2009	Astra-G		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	BRAZIL	2009	Astra-G		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2009	Astra-G		Chassis	Cruise Control		X	X	X	X		
OPEL	BRAZIL	2009	Astra-G		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2009	Astra-G		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2009	Astra-G		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2008	Astra-G		Engine	C 20 NE/C 20 SE (8V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2008	Astra-G		Engine	C 20 SE/C 20 SEL (16V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2008	Astra-G		Engine	X 20 XE (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2008	Astra-G		Engine	X 24 SE		X	X	X	X	X	
OPEL	BRAZIL	2008	Astra-G		Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	BRAZIL	2008	Astra-G		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	BRAZIL	2008	Astra-G		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2008	Astra-G		Chassis	Cruise Control		X	X	X	X		
OPEL	BRAZIL	2008	Astra-G		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2008	Astra-G		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2008	Astra-G		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2007	Astra-G		Engine	C 20 NE/C 20 SE (8V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2007	Astra-G		Engine	C 20 SE/C 20 SEL (16V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2007	Astra-G		Engine	X 20 SE		X	X	X	X	X	
OPEL	BRAZIL	2007	Astra-G		Engine	X 20 XE (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2007	Astra-G		Engine	X 24 SE		X	X	X	X	X	
OPEL	BRAZIL	2007	Astra-G		Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	BRAZIL	2007	Astra-G		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	BRAZIL	2007	Astra-G		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2007	Astra-G		Chassis	Cruise Control		X	X	X	X		
OPEL	BRAZIL	2007	Astra-G		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2007	Astra-G		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2007	Astra-G		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2006	Astra-G		Engine	C 20 NE/C 20 SE (8V) (E0/E20)		X	X	X	X	X	

OPEL	BRAZIL	2006	Astra-G		Engine	C 20 SE/C 20 SEL (16V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2006	Astra-G		Engine	X 20 SE		X	X	X	X	X	
OPEL	BRAZIL	2006	Astra-G		Engine	X 20 XE (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2006	Astra-G		Engine	X 24 SE		X	X	X	X	X	
OPEL	BRAZIL	2006	Astra-G		Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	BRAZIL	2006	Astra-G		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	BRAZIL	2006	Astra-G		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2006	Astra-G		Chassis	Cruise Control		X	X	X	X		
OPEL	BRAZIL	2006	Astra-G		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2006	Astra-G		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2006	Astra-G		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2005	Astra-G		Engine	C 18 YE (E100)		X	X	X	X	X	
OPEL	BRAZIL	2005	Astra-G		Engine	C 20 NE/C 20 SE (8V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2005	Astra-G		Engine	C 20 SE/C 20 SEL (16V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2005	Astra-G		Engine	X 20 SE		X	X	X	X	X	
OPEL	BRAZIL	2005	Astra-G		Engine	X 20 XE (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2005	Astra-G		Engine	X 24 SE		X	X	X	X	X	
OPEL	BRAZIL	2005	Astra-G		Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	BRAZIL	2005	Astra-G		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	BRAZIL	2005	Astra-G		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2005	Astra-G		Chassis	Cruise Control		X	X	X	X		
OPEL	BRAZIL	2005	Astra-G		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2005	Astra-G		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2005	Astra-G		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2004	Astra-G		Engine	C 18 YE (E100)		X	X	X	X	X	
OPEL	BRAZIL	2004	Astra-G		Engine	C 20 NE/C 20 SE (8V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2004	Astra-G		Engine	C 20 SE/C 20 SEL (16V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2004	Astra-G		Engine	X 24 SE		X	X	X	X	X	
OPEL	BRAZIL	2004	Astra-G		Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	BRAZIL	2004	Astra-G		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	BRAZIL	2004	Astra-G		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2004	Astra-G		Chassis	Cruise Control		X	X	X	X		
OPEL	BRAZIL	2004	Astra-G		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2004	Astra-G		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2004	Astra-G		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2003	Astra-G		Engine	C 18 NE (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2003	Astra-G		Engine	C 18 YE (E100)		X	X	X	X	X	
OPEL	BRAZIL	2003	Astra-G		Engine	C 20 NE/C 20 SE (8V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2003	Astra-G		Engine	C 20 SE/C 20 SEL (16V) (E0/E20)		X	X	X	X	X	

OPEL	BRAZIL	2003	Astra-G		Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	BRAZIL	2003	Astra-G		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	BRAZIL	2003	Astra-G		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2003	Astra-G		Chassis	Cruise Control		X	X	X	X		
OPEL	BRAZIL	2003	Astra-G		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2003	Astra-G		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2003	Astra-G		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2002	Astra-G		Engine	C 18 NE (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2002	Astra-G		Engine	C 18 YE (E100)		X	X	X	X	X	
OPEL	BRAZIL	2002	Astra-G		Engine	C 20 NE/C 20 SE (8V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2002	Astra-G		Engine	C 20 SE/C 20 SEL(16V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2002	Astra-G		Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	BRAZIL	2002	Astra-G		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2002	Astra-G		Chassis	Cruise Control		X	X	X	X		
OPEL	BRAZIL	2002	Astra-G		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2002	Astra-G		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2002	Astra-G		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2002	Astra-G		Body	Airbag SAB6		X	X	X	X		
OPEL	BRAZIL	2001	Astra-G		Engine	C 18 NE (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2001	Astra-G		Engine	C 18 YE (E100)		X	X	X	X	X	
OPEL	BRAZIL	2001	Astra-G		Engine	C 20 NE/C 20 SE (8V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2001	Astra-G		Engine	C 20 SE/C 20 SEL(16V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2001	Astra-G		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2001	Astra-G		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2001	Astra-G		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2001	Astra-G		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2001	Astra-G		Body	Airbag SAB6		X	X	X	X		
OPEL	BRAZIL	2000	Astra-G		Engine	C 18 NE (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2000	Astra-G		Engine	C 20 NE (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2000	Astra-G		Engine	C 20 SE (E0/20)		X	X	X	X	X	
OPEL	BRAZIL	2000	Astra-G		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2000	Astra-G		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2000	Astra-G		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2000	Astra-G		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2000	Astra-G		Body	Airbag SAB6		X	X	X	X		
OPEL	BRAZIL	1999	Astra-G		Engine	C 18 NE (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	1999	Astra-G		Engine	C 20 NE (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	1999	Astra-G		Engine	C 20 SE (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	1999	Astra-G		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	1999	Astra-G		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	1999	Astra-G		Body	Airbag SAB6		X	X	X	X		

OPEL	BRAZIL	2009	Celta		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2008	Celta		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2007	Celta		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2006	Celta		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2005	Celta		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2004	Celta		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2003	Celta		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2002	Celta		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2001	Celta		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2000	Celta		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2009	Corsa-B		Engine	16 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2009	Corsa-B		Engine	C 16 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2009	Corsa-B		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	BRAZIL	2009	Corsa-B		Chassis	ABS-5.3		X	X	X	X		
OPEL	BRAZIL	2009	Corsa-B		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2009	Corsa-B		Body	immobiliser-5bps		X	X	X	X		
OPEL	BRAZIL	2009	Corsa-B		Body	Airbag-S		X	X	X	X		
OPEL	BRAZIL	2008	Corsa-B		Engine	16 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2008	Corsa-B		Engine	C 16 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2008	Corsa-B		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	BRAZIL	2008	Corsa-B		Chassis	ABS-5.3		X	X	X	X		
OPEL	BRAZIL	2008	Corsa-B		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2008	Corsa-B		Body	immobiliser-5bps		X	X	X	X		
OPEL	BRAZIL	2008	Corsa-B		Body	Airbag-S		X	X	X	X		
OPEL	BRAZIL	2007	Corsa-B		Engine	C 10 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2007	Corsa-B		Engine	C 10 YE (E100)		X	X	X	X		
OPEL	BRAZIL	2007	Corsa-B		Engine	C 14 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2007	Corsa-B		Engine	16 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2007	Corsa-B		Engine	C 16 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2007	Corsa-B		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	BRAZIL	2007	Corsa-B		Chassis	ABS-5.3		X	X	X	X		
OPEL	BRAZIL	2007	Corsa-B		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2007	Corsa-B		Body	immobiliser-5bps		X	X	X	X		
OPEL	BRAZIL	2007	Corsa-B		Body	Airbag-S		X	X	X	X		
OPEL	BRAZIL	2006	Corsa-B		Engine	C 10 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2006	Corsa-B		Engine	C 10 YE (E100)		X	X	X	X		
OPEL	BRAZIL	2006	Corsa-B		Engine	C 14 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2006	Corsa-B		Engine	16 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2006	Corsa-B		Engine	C 16 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2006	Corsa-B		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	BRAZIL	2006	Corsa-B		Chassis	ABS-5.3		X	X	X	X		
OPEL	BRAZIL	2006	Corsa-B		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2006	Corsa-B		Body	immobiliser-5bps		X	X	X	X		
OPEL	BRAZIL	2006	Corsa-B		Body	Airbag-S		X	X	X	X		
OPEL	BRAZIL	2005	Corsa-B		Engine	C 10 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2005	Corsa-B		Engine	C 10 YE (E100)		X	X	X	X		

OPEL	BRAZIL	2005	Corsa-B		Engine	C 14 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2005	Corsa-B		Engine	16 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2005	Corsa-B		Engine	C 16 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2005	Corsa-B		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	BRAZIL	2005	Corsa-B		Chassis	ABS-5.3		X	X	X	X		
OPEL	BRAZIL	2005	Corsa-B		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2005	Corsa-B		Body	Immobiliser-5bps		X	X	X	X		
OPEL	BRAZIL	2005	Corsa-B		Body	Aribag-S		X	X	X	X		
OPEL	BRAZIL	2004	Corsa-B		Engine	C 10 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2004	Corsa-B		Engine	C 10 YE (E100)		X	X	X	X		
OPEL	BRAZIL	2004	Corsa-B		Engine	C 14 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2004	Corsa-B		Engine	16 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2004	Corsa-B		Engine	C 16 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2004	Corsa-B		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	BRAZIL	2004	Corsa-B		Chassis	ABS-5.3		X	X	X	X		
OPEL	BRAZIL	2004	Corsa-B		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2004	Corsa-B		Body	immobiliser-5bps		X	X	X	X		
OPEL	BRAZIL	2004	Corsa-B		Body	Aribag-S		X	X	X	X		
OPEL	BRAZIL	2003	Corsa-B		Engine	C 10 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2003	Corsa-B		Engine	C 10 YE (E100)		X	X	X	X		
OPEL	BRAZIL	2003	Corsa-B		Engine	C 14 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2003	Corsa-B		Engine	16 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2003	Corsa-B		Engine	C 16 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2003	Corsa-B		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	BRAZIL	2003	Corsa-B		Chassis	ABS-5.3		X	X	X	X		
OPEL	BRAZIL	2003	Corsa-B		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2003	Corsa-B		Body	immobiliser-5bps		X	X	X	X		
OPEL	BRAZIL	2003	Corsa-B		Body	Aribag-S		X	X	X	X		
OPEL	BRAZIL	2002	Corsa-B		Engine	C 10 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2002	Corsa-B		Engine	C 10 YE (E100)		X	X	X	X		
OPEL	BRAZIL	2002	Corsa-B		Engine	C 14 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2002	Corsa-B		Engine	16 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2002	Corsa-B		Engine	C 16 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2002	Corsa-B		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	BRAZIL	2002	Corsa-B		Chassis	ABS-5.3		X	X	X	X		
OPEL	BRAZIL	2002	Corsa-B		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2002	Corsa-B		Body	Aribag-S		X	X	X	X		
OPEL	BRAZIL	2001	Corsa-B		Engine	C 10 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2001	Corsa-B		Engine	C 10 YE (E100)		X	X	X	X		
OPEL	BRAZIL	2001	Corsa-B		Engine	C 14 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2001	Corsa-B		Engine	16 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2001	Corsa-B		Engine	C 16 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2001	Corsa-B		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	BRAZIL	2001	Corsa-B		Chassis	ABS-5.3		X	X	X	X		
OPEL	BRAZIL	2001	Corsa-B		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2001	Corsa-B		Body	Aribag-S		X	X	X	X		
OPEL	BRAZIL	2000	Corsa-B		Engine	C 10 NE (E0/E20)		X	X	X	X		

OPEL	BRAZIL	2000	Corsa-B		Engine	C 10 YE (E100)		X	X	X	X		
OPEL	BRAZIL	2000	Corsa-B		Engine	C 14 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2000	Corsa-B		Engine	16 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2000	Corsa-B		Engine	C 16 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2000	Corsa-B		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	BRAZIL	2000	Corsa-B		Chassis	ABS-5.3		X	X	X	X		
OPEL	BRAZIL	2000	Corsa-B		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2000	Corsa-B		Body	Aribag-S		X	X	X	X		
OPEL	BRAZIL	1999	Corsa-B		Engine	C 10 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	1999	Corsa-B		Engine	C 10 YE (E100)		X	X	X	X		
OPEL	BRAZIL	1999	Corsa-B		Engine	C 14 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	1999	Corsa-B		Engine	16 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	1999	Corsa-B		Engine	C 16 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	1999	Corsa-B		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	BRAZIL	1999	Corsa-B		Chassis	ABS-5.3		X	X	X	X		
OPEL	BRAZIL	1999	Corsa-B		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	1999	Corsa-B		Body	Aribag-S		X	X	X	X		
OPEL	BRAZIL	2009	Corsa-C		Engine	C 18 NE (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2009	Corsa-C		Engine	X 18 NE		X	X	X	X	X	
OPEL	BRAZIL	2009	Corsa-C		Engine	X 18 XF (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2009	Corsa-C		Engine	X 18 XML		X	X	X	X	X	
OPEL	BRAZIL	2009	Corsa-C		Engine	T 18 NE		X	X	X	X	X	
OPEL	BRAZIL	2009	Corsa-C		Transmission	MTA (Easytronic)		X	X	X	X	X	*Bleed Clutch Hydraulic *Learn Gearbox Parameters *Read CAN Configuration *Program CAN Configuration *Clutch Control Test
OPEL	BRAZIL	2009	Corsa-C		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2009	Corsa-C		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2009	Corsa-C		Body	Body Control Module		X	X	X	X	X	
OPEL	BRAZIL	2009	Corsa-C		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2009	Corsa-C		Body	Immobiliser (without BCM)		X	X	X	X		
OPEL	BRAZIL	2009	Corsa-C		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2008	Corsa-C		Engine	C 18 NE (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2008	Corsa-C		Engine	X 18 NE		X	X	X	X	X	
OPEL	BRAZIL	2008	Corsa-C		Engine	X 18 XF (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2008	Corsa-C		Engine	X 18 XML		X	X	X	X	X	
OPEL	BRAZIL	2008	Corsa-C		Engine	T 18 NE		X	X	X	X	X	
OPEL	BRAZIL	2008	Corsa-C		Transmission	MTA (Easytronic)		X	X	X	X	X	*Bleed Clutch Hydraulic *Learn Gearbox Parameters *Read CAN Configuration *Program CAN Configuration *Clutch Control Test
OPEL	BRAZIL	2008	Corsa-C		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2008	Corsa-C		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2008	Corsa-C		Body	Body Control Module		X	X	X	X	X	

OPEL	BRAZIL	2008	Corsa-C		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2008	Corsa-C		Body	Immobiliser (without BCM)		X	X	X	X		
OPEL	BRAZIL	2008	Corsa-C		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2007	Corsa-C		Engine	C 18 NE (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2007	Corsa-C		Engine	X 18 NE		X	X	X	X	X	
OPEL	BRAZIL	2007	Corsa-C		Engine	X 18 XF (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2007	Corsa-C		Engine	X 18 XML		X	X	X	X	X	
OPEL	BRAZIL	2007	Corsa-C		Engine	T 18 NE		X	X	X	X	X	
OPEL	BRAZIL	2007	Corsa-C		Transmission	MTA (Easytronic)		X	X	X	X	X	*Bleed Clutch Hydraulic *Learn Gearbox Parameters *Read CAN Configuration *Program CAN Configuration *Clutch Control Test
OPEL	BRAZIL	2007	Corsa-C		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2007	Corsa-C		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2007	Corsa-C		Body	Body Control Module		X	X	X	X	X	
OPEL	BRAZIL	2007	Corsa-C		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2007	Corsa-C		Body	Immobiliser (without BCM)		X	X	X	X		
OPEL	BRAZIL	2007	Corsa-C		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2006	Corsa-C		Engine	C 18 NE (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2006	Corsa-C		Engine	X 18 NE		X	X	X	X	X	
OPEL	BRAZIL	2006	Corsa-C		Engine	X 18 XF (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2006	Corsa-C		Engine	X 18 XML		X	X	X	X	X	
OPEL	BRAZIL	2006	Corsa-C		Engine	T 18 NE		X	X	X	X	X	
OPEL	BRAZIL	2006	Corsa-C		Transmission	MTA (Easytronic)		X	X	X	X	X	*Bleed Clutch Hydraulic *Learn Gearbox Parameters *Read CAN Configuration *Program CAN Configuration *Clutch Control Test
OPEL	BRAZIL	2006	Corsa-C		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2006	Corsa-C		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2006	Corsa-C		Body	Body Control Module		X	X	X	X	X	
OPEL	BRAZIL	2006	Corsa-C		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2006	Corsa-C		Body	Immobiliser (without BCM)		X	X	X	X		
OPEL	BRAZIL	2006	Corsa-C		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2005	Corsa-C		Engine	C 18 NE (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2005	Corsa-C		Engine	C 18 XE (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2005	Corsa-C		Engine	X 18 NE		X	X	X	X	X	
OPEL	BRAZIL	2005	Corsa-C		Engine	X 18 XML		X	X	X	X	X	
OPEL	BRAZIL	2005	Corsa-C		Transmission	MTA (Easytronic)		X	X	X	X	X	*Bleed Clutch Hydraulic *Learn Gearbox Parameters *Read CAN Configuration *Program CAN Configuration *Clutch Control Test
OPEL	BRAZIL	2005	Corsa-C		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	

OPEL	BRAZIL	2005	Corsa-C		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2005	Corsa-C		Body	Body Control Module		X	X	X	X	X	
OPEL	BRAZIL	2005	Corsa-C		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2005	Corsa-C		Body	Immobiliser (without BCM)		X	X	X	X		
OPEL	BRAZIL	2005	Corsa-C		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2004	Corsa-C		Engine	C 18 NE (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2004	Corsa-C		Engine	C 18 XE (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2004	Corsa-C		Engine	X 18 NE		X	X	X	X	X	
OPEL	BRAZIL	2004	Corsa-C		Transmission	MTA (Easytronic)		X	X	X	X	X	*Bleed Clutch Hydraulic *Learn Gearbox Parameters *Read CAN Configuration *Program CAN Configuration *Clutch Control Test
OPEL	BRAZIL	2004	Corsa-C		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2004	Corsa-C		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2004	Corsa-C		Body	Body Control Module		X	X	X	X	X	
OPEL	BRAZIL	2004	Corsa-C		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2004	Corsa-C		Body	Immobiliser (without BCM)		X	X	X	X		
OPEL	BRAZIL	2004	Corsa-C		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2003	Corsa-C		Engine	C 18 NE (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2003	Corsa-C		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2003	Corsa-C		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2003	Corsa-C		Body	Body Control Module		X	X	X	X	X	
OPEL	BRAZIL	2003	Corsa-C		Body	Immobiliser		X	X	X	X		1. Erase Key Set; 2. Program Transponder-Keys
OPEL	BRAZIL	2003	Corsa-C		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2002	Corsa-C		Engine	C 18 NE (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2002	Corsa-C		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2002	Corsa-C		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2002	Corsa-C		Body	Body Control Module		X	X	X	X	X	
OPEL	BRAZIL	2002	Corsa-C		Body	Immobiliser		X	X	X	X		1. Erase Transponder-Keys And Remote 2. Program Transponder-Keys And Remote
OPEL	BRAZIL	2002	Corsa-C		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2009	E-Lux		Engine	X 20 XE (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2009	E-Lux		Engine	X 24 SFD (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2009	E-Lux		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	BRAZIL	2009	E-Lux		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2009	E-Lux		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2009	E-Lux		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2008	E-Lux		Engine	X 20 XE (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2008	E-Lux		Engine	X 24 SFD (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2008	E-Lux		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	

OPEL	BRAZIL	2008	E-Lux		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2008	E-Lux		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2008	E-Lux		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2007	E-Lux		Engine	X 20 XE (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2007	E-Lux		Engine	X 24 SFD (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2007	E-Lux		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	BRAZIL	2007	E-Lux		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2007	E-Lux		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2007	E-Lux		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2006	E-Lux		Engine	X 20 XE (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2006	E-Lux		Engine	X 24 SFD (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2006	E-Lux		Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	BRAZIL	2006	E-Lux		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2006	E-Lux		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2006	E-Lux		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2009	Meriva		Engine	C 18 NE (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2009	Meriva		Engine	X 18 XF (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2009	Meriva		Engine	T 18 NE		X	X	X	X	X	
OPEL	BRAZIL	2009	Meriva		Transmission	MTA (Easytronic)		X	X	X	X	X	
OPEL	BRAZIL	2009	Meriva		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2009	Meriva		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2009	Meriva		Body	Body Control Module		X	X	X	X	X	
OPEL	BRAZIL	2009	Meriva		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2009	Meriva		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2008	Meriva		Engine	C 18 NE (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2008	Meriva		Engine	X 18 XF (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2008	Meriva		Engine	T 18 NE		X	X	X	X	X	
OPEL	BRAZIL	2008	Meriva		Transmission	MTA (Easytronic)		X	X	X	X	X	
OPEL	BRAZIL	2008	Meriva		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2008	Meriva		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2008	Meriva		Body	Body Control Module		X	X	X	X	X	
OPEL	BRAZIL	2008	Meriva		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2008	Meriva		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2007	Meriva		Engine	C 18 NE (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2007	Meriva		Engine	X 18 XF (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2007	Meriva		Engine	T 18 NE		X	X	X	X	X	
OPEL	BRAZIL	2007	Meriva		Transmission	MTA (Easytronic)		X	X	X	X	X	
OPEL	BRAZIL	2007	Meriva		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2007	Meriva		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2007	Meriva		Body	Body Control Module		X	X	X	X	X	
OPEL	BRAZIL	2007	Meriva		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2007	Meriva		Body	Airbag		X	X	X	X		

OPEL	BRAZIL	2006	Meriva		Engine	C 18 NE (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2006	Meriva		Engine	X 18 XF (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2006	Meriva		Engine	T 18 NE		X	X	X	X	X	
OPEL	BRAZIL	2006	Meriva		Transmission	MTA (Easytronic)		X	X	X	X	X	
OPEL	BRAZIL	2006	Meriva		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2006	Meriva		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2006	Meriva		Body	Body Control Module		X	X	X	X	X	
OPEL	BRAZIL	2006	Meriva		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2006	Meriva		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2005	Meriva		Engine	C 18 NE (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2005	Meriva		Engine	C 18 SEL (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2005	Meriva		Engine	C 18 XE (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2005	Meriva		Engine	X 18 NE1		X	X	X	X	X	
OPEL	BRAZIL	2005	Meriva		Transmission	MTA (Easytronic)		X	X	X	X	X	
OPEL	BRAZIL	2005	Meriva		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2005	Meriva		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2005	Meriva		Body	Body Control Module		X	X	X	X	X	
OPEL	BRAZIL	2005	Meriva		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2005	Meriva		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2004	Meriva		Engine	C 18 NE (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2004	Meriva		Engine	C 18 SEL (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2004	Meriva		Engine	C 18 XE (E20-E100)		X	X	X	X	X	
OPEL	BRAZIL	2004	Meriva		Engine	X 18 NE1		X	X	X	X	X	
OPEL	BRAZIL	2004	Meriva		Transmission	MTA (Easytronic)		X	X	X	X	X	
OPEL	BRAZIL	2004	Meriva		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2004	Meriva		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2004	Meriva		Body	Body Control Module		X	X	X	X	X	
OPEL	BRAZIL	2004	Meriva		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2004	Meriva		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2003	Meriva		Engine	C 18 NE (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2003	Meriva		Engine	C 18 SEL (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2003	Meriva		Body	Body Control Module		X	X	X	X	X	
OPEL	BRAZIL	2003	Meriva		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2009	S-10 Truck/Blaze		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2009	S-10 Truck/Blaze		Body	immobiliser-5bps		X	X	X	X		
OPEL	BRAZIL	2008	S-10 Truck/Blaze		Body	Immobiliser		X	X	X	X		

OPEL	BRAZIL	2008	S-10 Truck/Blaze		Body	immobiliser-5bps		X	X	X	X		
OPEL	BRAZIL	2007	S-10 Truck/Blaze		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2007	S-10 Truck/Blaze		Body	immobiliser-5bps		X	X	X	X		
OPEL	BRAZIL	2006	S-10 Truck/Blaze		Engine	C 24 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2006	S-10 Truck/Blaze		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2005	S-10 Truck/Blaze		Engine	C 24 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2005	S-10 Truck/Blaze		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2004	S-10 Truck/Blaze		Engine	C 24 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2004	S-10 Truck/Blaze		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2003	S-10 Truck/Blaze		Engine	C 24 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2003	S-10 Truck/Blaze		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2002	S-10 Truck/Blaze		Engine	C 24 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2002	S-10 Truck/Blaze		Body	Immobiliser		X	X	X	X		

OPEL	BRAZIL	2001	S-10 Truck/Blaze		Engine	C 24 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2001	S-10 Truck/Blaze		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2000	S-10 Truck/Blaze		Engine	B 22 NZ (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2000	S-10 Truck/Blaze		Engine	C 22 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	1999	S-10 Truck/Blaze		Engine	B 22 NZ (E0/E20)		X	X	X	X		
OPEL	BRAZIL	1999	S-10 Truck/Blaze		Engine	C 22 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2003	Silverado/ Grand Blazer		Engine	C 41 GE (E0/E22)		X	X	X	X		
OPEL	BRAZIL	2002	Silverado/ Grand Blazer		Engine	C 41 GE (E0/E22)		X	X	X	X		
OPEL	BRAZIL	2001	Silverado/ Grand Blazer		Engine	C 41 GE (E0/E22)		X	X	X	X		
OPEL	BRAZIL	2000	Silverado/ Grand Blazer		Engine	C 41 GE (E0/E22)		X	X	X	X		
OPEL	BRAZIL	1999	Silverado/ Grand Blazer		Engine	C 41 GE (E0/E22)		X	X	X	X		
OPEL	BRAZIL	2000	Tigra		Chassis	ABS-5.3		X	X	X	X		
OPEL	BRAZIL	2000	Tigra		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2000	Tigra		Body	Airbag-S		X	X	X	X		
OPEL	BRAZIL	2000	Tigra		Body	Airbag SAB6		X	X	X	X		

OPEL	BRAZIL	1999	Tigra		Chassis	ABS-5.3		X	X	X	X		
OPEL	BRAZIL	1999	Tigra		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	1999	Tigra		Body	Airbag-S		X	X	X	X		
OPEL	BRAZIL	1999	Tigra		Body	Airbag SAB6		X	X	X	X		
OPEL	BRAZIL	1998	Tigra		Chassis	ABS-5.3		X	X	X	X		
OPEL	BRAZIL	1998	Tigra		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	1998	Tigra		Body	Airbag-S		X	X	X	X		
OPEL	BRAZIL	2009	Tracker		Chassis	ABS		X	X	X	X		
OPEL	BRAZIL	2008	Tracker		Chassis	ABS		X	X	X	X		
OPEL	BRAZIL	2007	Tracker		Chassis	ABS		X	X	X	X		
OPEL	BRAZIL	2006	Tracker		Chassis	ABS		X	X	X	X		
OPEL	BRAZIL	2005	Tracker		Chassis	ABS		X	X	X	X		
OPEL	BRAZIL	2004	Tracker		Chassis	ABS		X	X	X	X		
OPEL	BRAZIL	2003	Tracker		Chassis	ABS		X	X	X	X		
OPEL	BRAZIL	2002	Tracker		Chassis	ABS		X	X	X	X		
OPEL	BRAZIL	2001	Tracker		Chassis	ABS		X	X	X	X		
OPEL	BRAZIL	2005	Vectra-B		Engine	C 20 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2005	Vectra-B		Engine	C 22 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2005	Vectra-B		Engine	C 22 SE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2005	Vectra-B		Transmission	AF 13II/20/22/30		X	X	X	X		

OPEL	BRAZIL	2005	Vectra-B		Chassis	ABS 430		X	X	X	X		
OPEL	BRAZIL	2005	Vectra-B		Chassis	ABS-5.3		X	X	X	X		
OPEL	BRAZIL	2005	Vectra-B		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2005	Vectra-B		Chassis	Cruise Control		X	X	X	X		
OPEL	BRAZIL	2005	Vectra-B		Body	immobiliser		X	X	X	X		
OPEL	BRAZIL	2005	Vectra-B		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2004	Vectra-B		Engine	C 20 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2004	Vectra-B		Engine	C 22 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2004	Vectra-B		Engine	C 22 SE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2004	Vectra-B		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	BRAZIL	2004	Vectra-B		Chassis	ABS 430		X	X	X	X		
OPEL	BRAZIL	2004	Vectra-B		Chassis	ABS-5.3		X	X	X	X		
OPEL	BRAZIL	2004	Vectra-B		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2004	Vectra-B		Chassis	Cruise Control		X	X	X	X		
OPEL	BRAZIL	2004	Vectra-B		Body	immobiliser		X	X	X	X		
OPEL	BRAZIL	2004	Vectra-B		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2003	Vectra-B		Engine	C 20 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2003	Vectra-B		Engine	C 22 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2003	Vectra-B		Engine	C 22 SE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2003	Vectra-B		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	BRAZIL	2003	Vectra-B		Chassis	ABS 430		X	X	X	X		
OPEL	BRAZIL	2003	Vectra-B		Chassis	ABS-5.3		X	X	X	X		
OPEL	BRAZIL	2003	Vectra-B		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2003	Vectra-B		Chassis	Cruise Control		X	X	X	X		
OPEL	BRAZIL	2003	Vectra-B		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2003	Vectra-B		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2002	Vectra-B		Engine	C 22 NE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2002	Vectra-B		Engine	C 22 SE (E0/E20)		X	X	X	X		
OPEL	BRAZIL	2002	Vectra-B		Transmission	AF 13II/20/22/30		X	X	X	X		
OPEL	BRAZIL	2002	Vectra-B		Chassis	ABS 430		X	X	X	X		
OPEL	BRAZIL	2002	Vectra-B		Chassis	ABS-5.3		X	X	X	X		

OPEL	BRAZIL	2002	Vectra-B	Chassis	ABS-5.3/5.4 (+TC)	X	X	X	X	X	
OPEL	BRAZIL	2002	Vectra-B	Chassis	Cruise Control	X	X	X	X		
OPEL	BRAZIL	2002	Vectra-B	Body	immobiliser	X	X	X	X		
OPEL	BRAZIL	2002	Vectra-B	Body	Airbag	X	X	X	X		
OPEL	BRAZIL	2001	Vectra-B	Engine	C 22 NE (E0/E20)	X	X	X	X		
OPEL	BRAZIL	2001	Vectra-B	Engine	C 22 SE (E0/E20)	X	X	X	X		
OPEL	BRAZIL	2001	Vectra-B	Transmission	AF 13II/20/22/30	X	X	X	X		
OPEL	BRAZIL	2001	Vectra-B	Chassis	ABS 430	X	X	X	X		
OPEL	BRAZIL	2001	Vectra-B	Chassis	ABS-5.3	X	X	X	X		
OPEL	BRAZIL	2001	Vectra-B	Chassis	ABS-5.3/5.4 (+TC)	X	X	X	X	X	
OPEL	BRAZIL	2001	Vectra-B	Chassis	Cruise Control	X	X	X	X		
OPEL	BRAZIL	2001	Vectra-B	Body	immobiliser	X	X	X	X		
OPEL	BRAZIL	2001	Vectra-B	Body	Airbag	X	X	X	X		
OPEL	BRAZIL	2000	Vectra-B	Engine	C 22 NE (E0/E20)	X	X	X	X		
OPEL	BRAZIL	2000	Vectra-B	Engine	C 22 SE (E0/E20)	X	X	X	X		
OPEL	BRAZIL	2000	Vectra-B	Transmission	AF 13II/20/22/30	X	X	X	X		
OPEL	BRAZIL	2000	Vectra-B	Chassis	ABS 430	X	X	X	X		
OPEL	BRAZIL	2000	Vectra-B	Chassis	ABS-5.3	X	X	X	X		
OPEL	BRAZIL	2000	Vectra-B	Chassis	ABS-5.3/5.4 (+TC)	X	X	X	X	X	
OPEL	BRAZIL	2000	Vectra-B	Chassis	Cruise Control	X	X	X	X		
OPEL	BRAZIL	2000	Vectra-B	Body	immobiliser	X	X	X	X		
OPEL	BRAZIL	2000	Vectra-B	Body	Airbag	X	X	X	X		
OPEL	BRAZIL	1999	Vectra-B	Engine	C 22 NE (E0/E20)	X	X	X	X		
OPEL	BRAZIL	1999	Vectra-B	Engine	C 22 SE (E0/E20)	X	X	X	X		
OPEL	BRAZIL	1999	Vectra-B	Transmission	AF 13II/20/22/30	X	X	X	X		
OPEL	BRAZIL	1999	Vectra-B	Chassis	ABS 415	X	X	X	X		
OPEL	BRAZIL	1999	Vectra-B	Chassis	ABS-5-TC	X	X	X	X		
OPEL	BRAZIL	1999	Vectra-B	Chassis	ABS-5.3	X	X	X	X		
OPEL	BRAZIL	1999	Vectra-B	Chassis	Cruise Control	X	X	X	X		
OPEL	BRAZIL	1999	Vectra-B	Body	immobiliser	X	X	X	X		
OPEL	BRAZIL	1999	Vectra-B	Body	Airbag	X	X	X	X		
OPEL	BRAZIL	1998	Vectra-B	Engine	C 20 NE (E0/E20)	X	X	X	X		
OPEL	BRAZIL	1998	Vectra-B	Engine	C 20 SEL (E0/E20)	X	X	X	X		
OPEL	BRAZIL	1998	Vectra-B	Engine	C 22 NE (E0/E20)	X	X	X	X		
OPEL	BRAZIL	1998	Vectra-B	Engine	C 22 SE (E0/E20)	X	X	X	X		
OPEL	BRAZIL	1998	Vectra-B	Transmission	AF 13II/20/22/30	X	X	X	X		
OPEL	BRAZIL	1998	Vectra-B	Chassis	ABS 415	X	X	X	X		
OPEL	BRAZIL	1998	Vectra-B	Chassis	ABS-5-TC	X	X	X	X		
OPEL	BRAZIL	1998	Vectra-B	Chassis	ABS-5.3	X	X	X	X		
OPEL	BRAZIL	1998	Vectra-B	Chassis	Cruise Control	X	X	X	X		
OPEL	BRAZIL	1998	Vectra-B	Body	immobiliser	X	X	X	X		
OPEL	BRAZIL	1998	Vectra-B	Body	Airbag	X	X	X	X		
OPEL	BRAZIL	2009	Zafira	Engine	C 20 SE (8V) (E0/E20)	X	X	X	X	X	
OPEL	BRAZIL	2009	Zafira	Engine	C 20 SEL(16V) (E0/E20)	X	X	X	X	X	
OPEL	BRAZIL	2009	Zafira	Transmission	AF 13-II/17/20/22	X	X	X	X	X	
OPEL	BRAZIL	2009	Zafira	Transmission	AF 13-II/17/20/22 CAN	X	X	X	X	X	
OPEL	BRAZIL	2009	Zafira	Chassis	ABS-5.3/5.4 (+TC)	X	X	X	X	X	

OPEL	BRAZIL	2009	Zafira	Chassis	Cruise Control		X	X	X	X		
OPEL	BRAZIL	2009	Zafira	Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2009	Zafira	Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2008	Zafira	Engine	C 20 SE (8V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2008	Zafira	Engine	C 20 SEL(16V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2008	Zafira	Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	BRAZIL	2008	Zafira	Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	BRAZIL	2008	Zafira	Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2008	Zafira	Chassis	Cruise Control		X	X	X	X		
OPEL	BRAZIL	2008	Zafira	Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2008	Zafira	Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2007	Zafira	Engine	C 20 SE (8V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2007	Zafira	Engine	C 20 SEL(16V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2007	Zafira	Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	BRAZIL	2007	Zafira	Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	BRAZIL	2007	Zafira	Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2007	Zafira	Chassis	Cruise Control		X	X	X	X		
OPEL	BRAZIL	2007	Zafira	Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2007	Zafira	Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2006	Zafira	Engine	C 20 SE (8V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2006	Zafira	Engine	C 20 SEL(16V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2006	Zafira	Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	BRAZIL	2006	Zafira	Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	BRAZIL	2006	Zafira	Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2006	Zafira	Chassis	Cruise Control		X	X	X	X		
OPEL	BRAZIL	2006	Zafira	Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2006	Zafira	Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2005	Zafira	Engine	C 20 SE (8V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2005	Zafira	Engine	C 20 SEL(16V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2005	Zafira	Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	BRAZIL	2005	Zafira	Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	BRAZIL	2005	Zafira	Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2005	Zafira	Chassis	Cruise Control		X	X	X	X		
OPEL	BRAZIL	2005	Zafira	Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2005	Zafira	Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2004	Zafira	Engine	C 20 SE (8V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2004	Zafira	Engine	C 20 SEL(16V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2004	Zafira	Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	BRAZIL	2004	Zafira	Transmission	AF 13-II/17/20/22 CAN		X	X	X	X	X	
OPEL	BRAZIL	2004	Zafira	Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2004	Zafira	Chassis	Cruise Control		X	X	X	X		
OPEL	BRAZIL	2004	Zafira	Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2004	Zafira	Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2003	Zafira	Engine	C 20 SE (8V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2003	Zafira	Engine	C 20 SEL(16V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2003	Zafira	Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	BRAZIL	2003	Zafira	Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	

OPEL	BRAZIL	2003	Zafira		Chassis	Cruise Control		X	X	X	X		
OPEL	BRAZIL	2003	Zafira		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2003	Zafira		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2003	Zafira		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2002	Zafira		Engine	C 20 SE (8V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2002	Zafira		Engine	C 20 SEL(16V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2002	Zafira		Transmission	AF 13-II/17/20/22		X	X	X	X	X	
OPEL	BRAZIL	2002	Zafira		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2002	Zafira		Chassis	Cruise Control		X	X	X	X		
OPEL	BRAZIL	2002	Zafira		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2002	Zafira		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2002	Zafira		Body	Airbag		X	X	X	X		
OPEL	BRAZIL	2001	Zafira		Engine	C 20 SE (8V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2001	Zafira		Engine	C 20 SEL(16V) (E0/E20)		X	X	X	X	X	
OPEL	BRAZIL	2001	Zafira		Chassis	ABS-5.3/5.4 (+TC)		X	X	X	X	X	
OPEL	BRAZIL	2001	Zafira		Chassis	Electronic Power Steering		X	X	X	X		
OPEL	BRAZIL	2001	Zafira		Body	Immobiliser		X	X	X	X		
OPEL	BRAZIL	2001	Zafira		Body	Airbag		X	X	X	X		
OPEL	EUROPE	2001	Vivaro		Body	Airbag		X	X	X	X		