

How to read this list:	
Mark	Description
X	Function is supported.
*	Function is added or developed newly

Function List													
Automaker:				VOLVO									
Software Version:				V8.3									
Automaker	Region	Year	Model	Vehicle Type	ECU Type	System	ECU Supplier	Sys. Info.	Read Code	Clear Code	Data Stream	Actuations	Special Functions
VOLVO	A11	1996	850		B5202FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1996	850		B5204FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1996	850		B5204FT	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1996	850		B5204T2	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1996	850		B5234FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1996	850		B5234FT	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1996	850		B5234T2	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1996	850		B5234T4	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1996	850		B5234T5	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1996	850		B5252FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1996	850		B5252FS LH 3.2	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1996	850		B5252FS M4.4	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1996	850		D525T MSA 15.7	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1996	850		AW50-42	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	1996	850			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	1996	850			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	1996	850			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	1996	850			Climate Control		X	X	X	X		
VOLVO	A11	1996	850			Immobilizer		X	X	X	X	X	
VOLVO	A11	1996	850			Resetting the service reminder indicator(SRI)							
VOLVO	A11	1997	850		B5202FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	850		B5204FT	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	850		B5204T2	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	850		B5234FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	850		B5234FT	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	850		B5234T4	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	850		B5234T5	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	850		B5252FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	850		B5252FS M4.4	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	850		B5254T	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	850		D525T MSA 15.7	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	850		AW50-42	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	1997	850			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	

VOLVO	A11	1997	850			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	1997	850			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	1997	850			Climate Control		X	X	X	X		
VOLVO	A11	1997	850			Resetting the service reminder indicator(SRI)							
VOLVO	A11	1997	850			Immobilizer		X	X	X	X	X	
VOLVO	A11	1996	940		B6244FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1996	940		B6254FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1996	940		B6254GS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1996	940		B6304FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1996	940		B6304GS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1996	940		AW30-43	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	1996	940			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	1996	940			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	1996	940			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	1996	940			Immobilizer		X	X	X	X	X	
VOLVO	A11	1997	940		B6244FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	940		B6254FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	940		B6254GS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	940		B6304FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	940		B6304GS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	940		AW30-43	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	1997	940			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	1997	940			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	1997	940			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	1997	940			Immobilizer		X	X	X	X	X	
VOLVO	A11	1996	960		B6244FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1996	960		B6254FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1996	960		B6254GS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1996	960		B6304FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1996	960		B6304GS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1996	960		AW30-43	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	1996	960			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	1996	960			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	1996	960			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	1996	960			Immobilizer		X	X	X	X	X	
VOLVO	A11	1997	960		B6244FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	960		B6254FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	960		B6254GS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	960		B6304FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	960		B6304GS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	960		AW30-43	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	1997	960			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	1997	960			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	1997	960			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	1997	960			Immobilizer		X	X	X	X	X	
VOLVO	A11	1999	S40(-04)			Resetting the service reminder indicator(SRI)							X

VOLVO	A11	1999	S40(-04)		B4164S	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	1999	S40(-04)		B4184S	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	1999	S40(-04)		B4184SM	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	1999	S40(-04)		B4194T	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	1999	S40(-04)		B4204S	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	1999	S40(-04)		B4204T	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	1999	S40(-04)		D4192T	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	1999	S40(-04)		D4192T2	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	1999	S40(-04)		B4164S	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1999	S40(-04)		B4184S	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1999	S40(-04)		B4184SM	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1999	S40(-04)		B4194T	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1999	S40(-04)		B4204S	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1999	S40(-04)		B4204T	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1999	S40(-04)		D4192T	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1999	S40(-04)		D4192T2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1999	S40(-04)		AW50-42	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	1999	S40(-04)			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	1999	S40(-04)			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	1999	S40(-04)			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	1999	S40(-04)			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	1999	S40(-04)			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	1999	S40(-04)			Immobilizer		X	X	X	X	X	
VOLVO	A11	1999	S40(-04)			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2000	S40(-04)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2000	S40(-04)		B4164S2	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2000	S40(-04)		B4184S2	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2000	S40(-04)		B4184S3	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2000	S40(-04)		B4184SM	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2000	S40(-04)		B4194T2	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2000	S40(-04)		B4204S2	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2000	S40(-04)		D4192T2	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2000	S40(-04)		B4164S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2000	S40(-04)		B4184S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2000	S40(-04)		B4184S3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2000	S40(-04)		B4184SM	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2000	S40(-04)		B4194T2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2000	S40(-04)		B4204S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2000	S40(-04)		D4192T2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2000	S40(-04)		B4204T2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2000	S40(-04)		B4204T2 CVVT	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2000	S40(-04)		AW50-42	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2000	S40(-04)			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	2000	S40(-04)			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2000	S40(-04)			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	2000	S40(-04)			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2000	S40(-04)			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	2000	S40(-04)			Immobilizer		X	X	X	X	X	
VOLVO	A11	2000	S40(-04)			Lock and alarm		X	X	X	X	X	

VOLVO	A11	2001	S40(-04)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2001	S40(-04)		B4164S2	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		B4184S2	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		B4184S3	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		B4184S9	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		B4184S10	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		B4184SM	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		B4184SJ	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		B4204S2	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		B4204T3	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		B4204T5	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		D4192T3	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		D4192T4	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		B4164S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		B4184S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		B4184S3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		B4184S9	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		B4184S10	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		B4184SM	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		B4184SJ	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		B4204S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		B4204T3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		B4204T5	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		D4192T3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		D4192T4	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2001	S40(-04)			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)			Immobilizer		X	X	X	X	X	
VOLVO	A11	2001	S40(-04)			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2002	S40(-04)		B4164S2	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)		B4184S2	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)		B4184S3	Anti-Spin System		X	X	X	X	X	

VOLVO	A11	2002	S40(-04)		B4184S9	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)		B4184S10	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)		B4184SJ	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)		B4204S2	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)		B4204T3	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)		B4204T5	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)		D4192T3	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)		D4192T4	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)		B4164S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)		B4184S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)		B4184S3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)		B4184S9	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)		B4184S10	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)		B4184SJ	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)		B4204S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)		B4204T3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)		B4204T5	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)		D4192T3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)		D4192T4	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2002	S40(-04)			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)			Immobilizer		X	X	X	X	X	
VOLVO	A11	2002	S40(-04)			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2003	S40(-04)		B4164S2	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)		B4184S2	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)		B4184S3	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)		B4184S9	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)		B4184S10	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)		B4184SJ	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)		B4204S2	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)		B4204T3	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)		B4204T5	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)		D4192T3	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)		D4192T4	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)		B4164S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)		B4184S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)		B4184S3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)		B4184S9	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)		B4184S10	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)		B4184SJ	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)		B4204S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)		B4204T3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)		B4204T5	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)		D4192T3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)		D4192T4	Fuel System/ Combined System		X	X	X	X	X	

VOLVO	A11	2003	S40(-04)		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2003	S40(-04)			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)			Immobilizer		X	X	X	X	X	
VOLVO	A11	2003	S40(-04)			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2004	S40(-04)		B4164S2	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)		B4184S2	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)		B4184S3	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)		B4184S9	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)		B4184S10	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)		B4184SJ	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)		B4204S2	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)		B4204T3	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)		D4192T3	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)		D4192T4	Anti-Spin System		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)		B4164S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)		B4184S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)		B4184S3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)		B4184S9	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)		B4184S10	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)		B4184SJ	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)		B4204S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)		B4204T3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)		D4192T3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)		D4192T4	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2004	S40(-04)			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)			Immobilizer		X	X	X	X	X	
VOLVO	A11	2004	S40(-04)			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2004	S40(04-)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2004	S40(04-)		B5244S4	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2004	S40(04-)		B5244S5	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2004	S40(04-)		B5254T3	Engine Control Module(ECM)		X	X	X	X	X	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)

VOLVO	A11	2004	S40(04-)		D4204T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	A11	2004	S40(04-)		D4204T2	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	A11	2004	S40(04-)		D4204T	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2004	S40(04-)		D4204T2	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2004	S40(04-)		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
VOLVO	A11	2004	S40(04-)			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Calibration(Cars with DSTC)
VOLVO	A11	2004	S40(04-)			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2004	S40(04-)			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2004	S40(04-)			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2004	S40(04-)			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibration the occupant weight sensor(OWS)
VOLVO	A11	2004	S40(04-)			Accessory Electronic Module(AEM)		X	X	X	X	X	
VOLVO	A11	2004	S40(04-)			Audio Module(AUD)		X	X	X			
VOLVO	A11	2004	S40(04-)			Central Electronic Module(CEM)		X	X	X	X	X	1.Calibration of position sensor,GDL lamps 2.Qick test of alternator function 3.Resetting low voltage counters 4.Resetting crash mode 5.Programming of rear window wiper when reversing
VOLVO	A11	2004	S40(04-)			Driver Information Module(DIM)		X	X	X	X	X	1.Resetting the service reminder indicator
VOLVO	A11	2004	S40(04-)			Phone Module(PHM)		X	X	X	X		1.Reinstalling the reserve battery
VOLVO	A11	2004	S40(04-)			Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2004	S40(04-)			Infotainment Control Module(ICM)		X	X	X	X	X	1.Programming the infotainment control module(ICM)
VOLVO	A11	2004	S40(04-)			Multimedia Module(MMM)		X	X	X	X	X	
VOLVO	A11	2005	S40(04-)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2005	S40(04-)		B4164S3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2005	S40(04-)		B4184S11	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2005	S40(04-)		B5244S4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2005	S40(04-)		B5244S5	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2005	S40(04-)		B5254T3	Engine Control Module(ECM)		X	X	X	X	X	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2005	S40(04-)		D4164T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the odometer particle trap 3.Adaptation of the exhaust gas recirculation(EGR) valve

VOLVO	A11	2005	S40(04-)		D4204T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	A11	2005	S40(04-)		D4204T2	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	A11	2005	S40(04-)		D4164T	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2005	S40(04-)		D4204T	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2005	S40(04-)		D4204T2	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2005	S40(04-)		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
VOLVO	A11	2005	S40(04-)		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
VOLVO	A11	2005	S40(04-)		AW50/51AWD	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2005	S40(04-)		M6AWD	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2005	S40(04-)			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Calibration(Cars with DSTC)
VOLVO	A11	2005	S40(04-)			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2005	S40(04-)			Combustion preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2005	S40(04-)			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2005	S40(04-)			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2005	S40(04-)			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2005	S40(04-)			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibration the occupant weight sensor(OWS)
VOLVO	A11	2005	S40(04-)			Accessory Electronic Module(AEM)		X	X	X	X	X	
VOLVO	A11	2005	S40(04-)			Audio Module(AUD)		X	X	X			
VOLVO	A11	2005	S40(04-)			Central Electronic Module(CEM)		X	X	X	X	X	1.Calibration of position sensor,GDL lamps 2.Qick test of alternator function 3.Resetting low voltage counters 4.Resetting crash mode 5.Programming of rear window wiper when reversing
VOLVO	A11	2005	S40(04-)			Driver Information Module(DIM)		X	X	X	X	X	1.Resetting the service reminder indicator
VOLVO	A11	2005	S40(04-)			Phone Module(PHM)		X	X	X	X		1.Reinstalling the reserve battery
VOLVO	A11	2005	S40(04-)			Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2005	S40(04-)			Infotainment Control Module(ICM)		X	X	X	X	X	1.Programming the infotainment control module(ICM)
VOLVO	A11	2005	S40(04-)			Multimedia Module(MMM)		X	X	X	X	X	
VOLVO	A11	2006	S40(04-)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2006	S40(04-)		B4164S3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2006	S40(04-)		B4184S11	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2006	S40(04-)		B5244S4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2006	S40(04-)		B5244S5	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)

VOLVO	A11	2006	S40(04-)	B5254T3	Engine Control Module(ECM)		X	X	X	X	X	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2006	S40(04-)	D4164T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the odometer particle trap 3.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	A11	2006	S40(04-)	D4204T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	A11	2006	S40(04-)	D4204T2	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	A11	2006	S40(04-)	D4164T	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2006	S40(04-)	D4204T	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2006	S40(04-)	D4204T2	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2006	S40(04-)	AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
VOLVO	A11	2006	S40(04-)	AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
VOLVO	A11	2006	S40(04-)	AW50/51AWD	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2006	S40(04-)	M6AWD	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2006	S40(04-)		Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Calibration(Cars with DSTC)
VOLVO	A11	2006	S40(04-)		Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2006	S40(04-)		Combustion preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2006	S40(04-)		Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2006	S40(04-)		Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2006	S40(04-)		Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2006	S40(04-)		Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibration the occupant weight sensor(OWS)
VOLVO	A11	2006	S40(04-)		Accessory Electronic Module(AEM)		X	X	X	X	X	
VOLVO	A11	2006	S40(04-)		Audio Module(AUD)		X	X	X			
VOLVO	A11	2006	S40(04-)		Central Electronic Module(CEM)		X	X	X	X	X	1.Calibration of position sensor,GDL lamps 2.Qick test of alternator function 3.Resetting low voltage counters 4.Resetting crash mode 5.Programming of rear window wiper when reversing
VOLVO	A11	2006	S40(04-)		Driver Information Module(DIM)		X	X	X	X	X	1.Resetting the service reminder indicator
VOLVO	A11	2006	S40(04-)		Phone Module(PHM)		X	X	X	X		1.Reinstalling the reserve battery
VOLVO	A11	2006	S40(04-)		Steering Wheel Module(SWM)		X	X	X	X		

VOLVO	A11	2006	S40(04-)			Infotainment Control Module(ICM)		X	X	X	X	X	1.Programming the infotainment control module(ICM)
VOLVO	A11	2006	S40(04-)			Multimedia Module(MMM)		X	X	X	X	X	
VOLVO	A11	2007	S40(04-)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2007	S40(04-)		B4164S3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	S40(04-)		B4184S11	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	S40(04-)		B5244S4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	S40(04-)		B5244S5	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2007	S40(04-)		B5254T3	Engine Control Module(ECM)		X	X	X	X	X	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2007	S40(04-)		D4164T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the odometer particle trap 3.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	A11	2007	S40(04-)		D4204T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	A11	2007	S40(04-)		D4204T2	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	A11	2007	S40(04-)		D4164T	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2007	S40(04-)		D4204T	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2007	S40(04-)		D4204T2	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2007	S40(04-)		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
VOLVO	A11	2007	S40(04-)		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
VOLVO	A11	2007	S40(04-)		AW50/51AWD	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2007	S40(04-)		M6AWD			X	X	X	X		
VOLVO	A11	2007	S40(04-)			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Calibration(Cars with DSTC)
VOLVO	A11	2007	S40(04-)			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2007	S40(04-)			Combustion preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2007	S40(04-)			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2007	S40(04-)			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2007	S40(04-)			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2007	S40(04-)			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibration the occupant weight sensor(OWS)
VOLVO	A11	2007	S40(04-)			Accessory Electronic Module(AEM)		X	X	X	X	X	
VOLVO	A11	2007	S40(04-)			Audio Module(AUD)		X	X	X			

VOLVO	A11	2007	S40(04-)		Central Electronic Module(CEM)		X	X	X	X	X	1.Calibration of position sensor,GDL lamps 2.Qick test of alternator function 3.Resetting low voltage counters 4.Resetting crash mode 5.Programming of rear window wiper when reversing
VOLVO	A11	2007	S40(04-)		Driver Information Module(DIM)		X	X	X	X	X	1.Resetting the service reminder indicator
VOLVO	A11	2007	S40(04-)		Phone Module(PHM)		X	X	X	X		1.Reinstalling the reserve battery
VOLVO	A11	2007	S40(04-)		Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2007	S40(04-)		Infotainment Control Module(ICM)		X	X	X	X	X	1.Programming the infotainment control module(ICM)
VOLVO	A11	2007	S40(04-)		Multimedia Module(MMM)		X	X	X	X	X	
VOLVO	A11	2008	S40(04-)		Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2008	S40(04-)	B4164S3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	S40(04-)	B4184S11	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	S40(04-)	B5244S4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	S40(04-)	B5244S5	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2008	S40(04-)	B5254T3	Engine Control Module(ECM)		X	X	X	X	X	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2008	S40(04-)	D4164T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the odometer particle trap 3.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	A11	2008	S40(04-)	D4204T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	A11	2008	S40(04-)	D4204T2	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
VOLVO	A11	2008	S40(04-)	D4164T	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2008	S40(04-)	D4204T	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2008	S40(04-)	D4204T2	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2008	S40(04-)	AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
VOLVO	A11	2008	S40(04-)	AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
VOLVO	A11	2008	S40(04-)	AW50/51AWD	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2008	S40(04-)	M6AWD	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2008	S40(04-)		Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Calibration(Cars with DSTC)
VOLVO	A11	2008	S40(04-)		Climate Control Module(CCM)		X	X	X	X		

VOLVO	A11	2008	S40(04-)			Combustion preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2008	S40(04-)			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2008	S40(04-)			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2008	S40(04-)			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2008	S40(04-)			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibration the occupant weight sensor(OWS)
VOLVO	A11	2008	S40(04-)			Accessory Electronic Module(AEM)		X	X	X	X	X	
VOLVO	A11	2008	S40(04-)			Audio Module(AUD)		X	X	X			
VOLVO	A11	2008	S40(04-)			Central Electronic Module(CEM)		X	X	X	X	X	1.Calibration of position sensor,GDL lamps 2.Qick test of alternator function 3.Resetting low voltage counters 4.Resetting crash mode 5.Programming of rear window wiper when reversing
VOLVO	A11	2008	S40(04-)			Driver Information Module(DIM)		X	X	X	X	X	1.Resetting the service reminder indicator
VOLVO	A11	2008	S40(04-)			Phone Module(PHM)		X	X	X	X		1.Reinstalling the reserve battery
VOLVO	A11	2008	S40(04-)			Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2008	S40(04-)			Infotainment Control Module(ICM)		X	X	X	X	X	1.Programming the infotainment control module(ICM)
VOLVO	A11	2008	S40(04-)			Multimedia Module(MMM)		X	X	X	X	X	
VOLVO	A11	2009	S40(04-)		B4164S3	Engine	YES	X	X	X	X	X	1. Resetting adaptation
VOLVO	A11	2009	S40(04-)		B4184S11	Engine	YES	X	X	X	X	X	1.Resetting adaptation values
VOLVO	A11	2009	S40(04-)		B4184S8	Engine	YES	X	X	X	X	X	1.Resetting adaptation values
VOLVO	A11	2009	S40(04-)		B4204S3	Engine	YES	X	X	X	X	X	1.Resetting adaptation values
VOLVO	A11	2009	S40(04-)		B5244S4	Engine	YES	X	X	X	X	X	1.Resetting the adaptation values
VOLVO	A11	2009	S40(04-)		B5244S5	Engine	YES	X	X	X	X	X	1.Resetting the adaptation values
VOLVO	A11	2009	S40(04-)		B5244S7	Engine	YES	X	X	X	X	X	1.Resetting the adaptation values
VOLVO	A11	2009	S40(04-)		B5254T7	Engine		X	X	X	X	X	1. Readiness Code 2. Adaptation of the throttle unit 3. Quick test of exhaust camshaft control 4. Quick test of intake camshaft control 5. Quick test of the fuel pump(FP)
VOLVO	A11	2009	S40(04-)		D4164T	Engine		X	X	X	X	X	1. Adaptation of the exhaust gas recirculation (EGR) valve 2. Combustion of soot particles, particle trap 3. Resetting the odometer particle trap
VOLVO	A11	2009	S40(04-)		D4204T	Engine		X	X	X	X	X	1. Programming the optimizing parameters 2. Resetting the adaptation values 3. Resetting the odometer particle trap 4. Adaptation of the exhaust gas recirculation (EGR) valve 5. Combustion of soot particle, particle trap 6. Quick-test injectors
VOLVO	A11	2009	S40(04-)		D5244T13	Engine		X	X	X	X	X	1.Resetting counter particle filter 2.Combustion of soot particles

VOLVO	A11	2009	S40(04-)		D5244T8	Engine		X	X	X	X	X	
VOLVO	A11	2009	S40(04-)		D5244T9	Engine		X	X	X	X	X	
VOLVO	A11	2009	S40(04-)		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2009	S40(04-)		AW50/51 AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2009	S40(04-)		MPS6	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2009	S40(04-)		AW50/51 AWD	Differential Electronic Module (DEM)		X	X	X			
VOLVO	A11	2009	S40(04-)		M66 AWD	Differential Electronic Module (DEM)		X	X	X			
VOLVO	A11	2009	S40(04-)			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1. Reading off the configuration 2. Calibration (cars with DSTC)
VOLVO	A11	2009	S40(04-)			Climate Control Module(CCM)		X	X	X	X		1. Calibrating the Climate Control Module (CCM) 2. Identifying the Damper Motor Module (DMM)
VOLVO	A11	2009	S40(04-)			Power Seat Module (PSM)		X	X	X	X	X	1.Programming remote control setting
VOLVO	A11	2009	S40(04-)			Accessory electronic module (AEM)		X	X	X	X	X	1.Reading off the configuration
VOLVO	A11	2009	S40(04-)			Electric Power Steering (EPS)		X	X	X	X		
VOLVO	A11	2009	S40(04-)			Park Assist Module (PAM)		X	X	X	X		
VOLVO	A11	2009	S40(04-)			Audio module (AUD)		X	X	X	X		
VOLVO	A11	2009	S40(04-)			Airbag (SRS)		X	X	X	X		
VOLVO	A11	2009	S40(04-)			Driver door module (DDM)		X	X	X	X	X	
VOLVO	A11	2009	S40(04-)			Passenger door module (PDM)		X	X	X	X	X	
VOLVO	A11	2009	S40(04-)			Accessory USB Unit (AUU)		X	X	X	X		
VOLVO	A11	2009	S40(04-)			Central electronic module (CEM-H)		X	X	X	X	X	1.Resetting low voltage counters 2.Ignition switch key position 4.Resetting crash mode
VOLVO	A11	2009	S40(04-)			Central electronic module (CEM-L)		X	X	X	X	X	1.Resetting low voltage counters 2.Ignition switch key position
VOLVO	A11	2009	S40 (04-)			Trailer Module (TRM)		X	X	X	X		
VOLVO	A11	2009	S40 (04-)			Steering wheel module (SWM)		X	X	X	X		

VOLVO	A11	2009	S40 (04-)			Integrated Audio module (IAM)		X	X	X	X	X	
VOLVO	A11	2009	S40 (04-)			Remote Digital Audio Receiver (RDAR)		X	X	X	X		
VOLVO	A11	2009	S40 (04-)			Keyless vehicle module (KVM)		X	X	X	X	X	
VOLVO	A11	2009	S40 (04-)			Bluetooth Phone Module (BPM)		X	X	X	X		
VOLVO	A11	2009	S40 (04-)			Telephone (PHM)		X	X	X	X		
VOLVO	A11	2009	S40 (04-)			Multimedia module (MMM)		X	X	X	X	X	
VOLVO	A11	2009	S40 (04-)			Headlamp Control Module (HCM)		X	X	X	X		
VOLVO	A11	2010	S40(04-)		B4164S3	Engine	YES	X	X	X	X	X	1. Resetting adaptation
VOLVO	A11	2010	S40(04-)		B4184S11	Engine	YES	X	X	X	X	X	1.Resetting adaptation values
VOLVO	A11	2010	S40(04-)		B4184S8	Engine	YES	X	X	X	X	X	1.Resetting adaptation values
VOLVO	A11	2010	S40(04-)		B4204S3	Engine	YES	X	X	X	X	X	1.Resetting adaptation values
VOLVO	A11	2010	S40(04-)		B5244S4	Engine	YES	X	X	X	X	X	1.Resetting the adaptation values
VOLVO	A11	2010	S40(04-)		B5244S5	Engine	YES	X	X	X	X	X	1.Resetting the adaptation values
VOLVO	A11	2010	S40(04-)		B5244S7	Engine	YES	X	X	X	X	X	1.Resetting the adaptation values
VOLVO	A11	2010	S40(04-)		B5254T7	Engine		X	X	X	X	X	1. Readiness Code 2. Adaptation of the throttle unit 3. Quick test of exhaust camshaft control 4. Quick test of intake camshaft control 5. Quick test of the fuel pump(FP)
VOLVO	A11	2010	S40(04-)		D4164T	Engine		X	X	X	X	X	1. Adaptation of the exhaust gas recirculation (EGR) valve 2. Combustion of soot particles, particle trap 3. Resetting the odometer particle trap
VOLVO	A11	2010	S40(04-)		D4204T	Engine		X	X	X	X	X	1. Programming the optimizing parameters 2. Resetting the adaptation values 3. Resetting the odometer particle trap 4. Adaptation of the exhaust gas recirculation (EGR) valve 5. Combustion of soot particle, particle trap 6. Quick-test injectors
VOLVO	A11	2010	S40(04-)		D5244T13	Engine		X	X	X	X	X	
VOLVO	A11	2010	S40(04-)		D5244T8	Engine		X	X	X	X	X	

VOLVO	A11	2010	S40(04-)		D5244T9	Engine		X	X	X	X	X	
VOLVO	A11	2010	S40(04-)		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2010	S40(04-)		AW50/51 AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2010	S40(04-)		MPS6	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2010	S40(04-)		AW50/51 AWD	Differential Electronic Module (DEM)		X	X	X			
VOLVO	A11	2010	S40(04-)		M66 AWD	Differential Electronic Module (DEM)		X	X	X			
VOLVO	A11	2010	S40(04-)			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1. Reading off the configuration 2. Calibration (cars with DSTC)
VOLVO	A11	2010	S40(04-)			Climate Control Module(CCM)		X	X	X	X		1. Calibrating the Climate Control Module (CCM) 2. Identifying components on the LIN network that belong to the climate control system (CCM)
VOLVO	A11	2010	S40(04-)			Driver Information Module(DIM)		X	X	X	X	X	1. Testing all indicators and lamps in the driver information module (DIM) 2. Resetting the service reminder indicator (SRI) 3. Indicates programmed values 4. Display of DSTC message 5. Programming seatbelt reminder in backseat 6. Programming the gear shift indicator
VOLVO	A11	2010	S40(04-)			Power Seat Module (PSM)		X	X	X	X	X	1. Programming remote control setting
VOLVO	A11	2010	S40(04-)			Accessory electronic module (AEM)		X	X	X	X	X	1. Reading off the configuration
VOLVO	A11	2010	S40(04-)			Electric Power Steering (EPS)		X	X	X	X		
VOLVO	A11	2010	S40(04-)			Park Assist Module (PAM)		X	X	X	X		
VOLVO	A11	2010	S40(04-)			Audio module (AUD)		X	X	X	X		
VOLVO	A11	2010	S40(04-)			Airbag (SRS)		X	X	X	X		
VOLVO	A11	2010	S40(04-)			Driver door module (DDM)		X	X	X	X	X	1. Initializing the window position 2. Checking the window in the rear door
VOLVO	A11	2010	S40(04-)			Passenger door module (PDM)		X	X	X	X	X	1. Initializing the window position 2. Checking the window in the rear door
VOLVO	A11	2010	S40(04-)			Accessory USB Unit (AUU)		X	X	X	X		

VOLVO	A11	2010	S40(04-)			Central electronic module (CEM-H)		X	X	X	X	X	1.Resetting low voltage counters 2.Ignition switch key position 4.Resetting crash mode 5.Programming of rear window wiper when reversing
VOLVO	A11	2010	S40(04-)			Central electronic module (CEM-L)		X	X	X	X	X	1.Resetting low voltage counters 2.Ignition switch key position
VOLVO	A11	2010	S40 (04-)			Trailer Module (TRM)		X	X	X	X		
VOLVO	A11	2010	S40 (04-)			Steering wheel module (SWM)		X	X	X	X		
VOLVO	A11	2010	S40 (04-)			Integrated Audio module (IAM)		X	X	X	X	X	
VOLVO	A11	2010	S40 (04-)			Remote Digital Audio Receiver (RDAR)		X	X	X	X		
VOLVO	A11	2010	S40 (04-)			Keyless vehicle module (KVM)		X	X	X	X	X	1.Read out of the number of programmed remote keys. 2.Read-out of part number and serial number, Remote
VOLVO	A11	2010	S40 (04-)			Bluetooth Phone Module (BPM)		X	X	X	X		
VOLVO	A11	2010	S40 (04-)			Telephone (PHM)		X	X	X	X		Reinstalling the reserve battery
VOLVO	A11	2010	S40 (04-)			Multimedia module (MMM)		X	X	X	X	X	
VOLVO	A11	2010	S40 (04-)			Headlamp Control Module (HCM)		X	X	X	X		Calibration of position sensor
VOLVO	A11	2011	S40 (04-)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2011	S40 (04-)			Additive Dosing Module(ADM)		X	X	X	X		X
VOLVO	A11	2011	S40 (04-)		B4164S3	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting adaptation
VOLVO	A11	2011	S40 (04-)		D4164T	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	S40 (04-)		B4204S3	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting adaptation
VOLVO	A11	2011	S40 (04-)		B5254T7	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	S40 (04-)		B4204S4	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting adaptation
VOLVO	A11	2011	S40 (04-)		D5204T	Engine Control Module(ECM)		X	X	X	X	X	

VOLVO	A11	2011	S40 (04-)		D4162T	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2011	S40 (04-)		D5204T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	S40 (04-)			Accessory electronic module (AEM)		X	X	X	X	X	1.Reading off the configuration
VOLVO	A11	2011	S40 (04-)			Park Assist Module (PAM)		X	X	X	X		
VOLVO	A11	2011	S40 (04-)			Audio module (AUD)		X	X	X	X		
VOLVO	A11	2011	S40 (04-)			Accessory USB Unit (AUU)		X	X	X	X		
VOLVO	A11	2011	S40 (04-)			Steering wheel module (SWM)		X	X	X	X		
VOLVO	A11	2011	S40 (04-)			Integrated Audio module (IAM)		X	X	X	X	X	
VOLVO	A11	2011	S40 (04-)			Subwoofer Module(SUB)		X	X	X			
VOLVO	A11	2011	S40 (04-)			Remote Digital Audio Receiver (RDAR)		X	X	X	X		
VOLVO	A11	2011	S40 (04-)			Keyless vehicle module (KVM)		X	X	X	X	X	
VOLVO	A11	2011	S40 (04-)			Infotainment Control Module(ICM)		X	X	X	X	X	1.Programming the infotainment control module(ICM)
VOLVO	A11	2011	S40 (04-)			Headlamp Control Module (HCM)		X	X	X	X		
VOLVO	A11	2011	S40 (04-)			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	2011	S40 (04-)			Multimedia module (MMM)		X	X	X	X	X	
VOLVO	A11	2011	S40 (04-)			Telephone (PHM)		X	X	X	X		
VOLVO	A11	2011	S40 (04-)		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2011	S40 (04-)		MPS6	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2011	S40 (04-)			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	2011	S40 (04-)			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		

VOLVO	A11	2011	S40 (04-)			Electric Power Steering (EPS)		X	X	X	X		
VOLVO	A11	2011	S40 (04-)			Power Seat Module (PSM)		X	X	X	X	X	1.Programming remote control setting
VOLVO	A11	2011	S40 (04-)			Driver Door Module(DDM)		X	X	X	X	X	
VOLVO	A11	2011	S40 (04-)			Passenger door module (PDM)		X	X	X	X	X	
VOLVO	A11	2011	S40 (04-)			Airbag (SRS)		X	X	X	X		
VOLVO	A11	2011	S40 (04-)			Trailer Module (TRM)		X	X	X	X		
VOLVO	A11	2011	S40 (04-)			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2011	S40 (04-)			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2012	S40 (04-)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2012	S40 (04-)			Additive Dosing Module(ADM)		X	X	X	X		X
VOLVO	A11	2012	S40 (04-)		B4164S3	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting adaptation
VOLVO	A11	2012	S40 (04-)		B4204S3	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting adaptation
VOLVO	A11	2012	S40 (04-)		B5254T7	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2012	S40 (04-)		B4204S4	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting adaptation
VOLVO	A11	2012	S40 (04-)		D5204T	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2012	S40 (04-)		D4162T	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2012	S40 (04-)		D5204T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2012	S40 (04-)			Accessory electronic module (AEM)		X	X	X	X	X	1.Reading off the configuration
VOLVO	A11	2012	S40 (04-)			Park Assist Module (PAM)		X	X	X	X		
VOLVO	A11	2012	S40 (04-)			Audio module (AUD)		X	X	X	X		

VOLVO	A11	2012	S40 (04-)			Accessory USB Unit (AUU)		X	X	X	X		
VOLVO	A11	2012	S40 (04-)			Steering wheel module (SWM)		X	X	X	X		
VOLVO	A11	2012	S40 (04-)			Integrated Audio module (IAM)		X	X	X	X	X	
VOLVO	A11	2012	S40 (04-)			Subwoofer Module(SUB)		X	X	X			
VOLVO	A11	2012	S40 (04-)			Remote Digital Audio Receiver (RDAR)		X	X	X	X		
VOLVO	A11	2012	S40 (04-)			Keyless vehicle module (KVM)		X	X	X	X	X	
VOLVO	A11	2012	S40 (04-)			Infotainment Control Module(ICM)		X	X	X	X	X	1.Programming the infotainment control module(ICM)
VOLVO	A11	2012	S40 (04-)			Headlamp Control Module (HCM)		X	X	X	X		
VOLVO	A11	2012	S40 (04-)			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	2012	S40 (04-)			Multimedia module (MMM)		X	X	X	X	X	
VOLVO	A11	2012	S40 (04-)			Telephone (PHM)		X	X	X	X		
VOLVO	A11	2012	S40 (04-)		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2012	S40 (04-)		MPS6	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2012	S40 (04-)			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	2012	S40 (04-)			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2012	S40 (04-)			Electric Power Steering (EPS)		X	X	X	X		
VOLVO	A11	2012	S40 (04-)			Power Seat Module (PSM)		X	X	X	X	X	1.Programming remote control setting
VOLVO	A11	2012	S40 (04-)			Driver Door Module(DDM)		X	X	X	X	X	
VOLVO	A11	2012	S40 (04-)			Passenger door module (PDM)		X	X	X	X	*	
VOLVO	A11	2012	S40 (04-)			Airbag (SRS)		X	X	X	X		

VOLVO	A11	2012	S40 (04-)			Trailer Module (TRM)		X	X	X	X		
VOLVO	A11	2012	S40 (04-)			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2012	S40 (04-)			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2001	S60			Resetting the service reminder indicator(SRI)		X	X	X	X		X
VOLVO	A11	2001	S60		B5204T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2001	S60		B5234T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2001	S60		B5234T7	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2001	S60		B5244S	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2001	S60		B5244S2	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	A11	2001	S60		B5244T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2001	S60		D5244T	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2001	S60		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2001	S60			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2001	S60			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2001	S60			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2001	S60			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2001	S60			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2001	S60			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2001	S60			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2001	S60			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2001	S60			Accessory Electronic Module(AEM)		X	X	X	X	X	
VOLVO	A11	2001	S60			Audio Module(AUM)		X	X	X			
VOLVO	A11	2001	S60			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2001	S60			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	A11	2001	S60			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2001	S60			Rear Electronic Module(REM)		X	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	A11	2001	S60			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2001	S60			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2001	S60			Steering Wheel Module(SWM)		X	X	X	X		

VOLVO	A11	2002	S60			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2002	S60		B5204T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2002	S60		B5234T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2002	S60		B5234T7	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2002	S60		B5244S	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2002	S60		B5244S2	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	A11	2002	S60		B5244SG	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2002	S60		B5244SG2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2002	S60		B5244T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2002	S60		D5244T	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2002	S60		D5244T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2002	S60		AW50/51 AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2002	S60		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2002	S60		AW50/51 AWD	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2002	S60			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2002	S60			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2002	S60			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2002	S60			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2002	S60			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2002	S60			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2002	S60			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2002	S60			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2002	S60			Accessory Electronic Module(AEM)		X	X	X	X	X	
VOLVO	A11	2002	S60			Audio Module(AUM)		X	X	X			
VOLVO	A11	2002	S60			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2002	S60			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	A11	2002	S60			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2002	S60			Rear Electronic Module(REM)		X	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	A11	2002	S60			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2002	S60			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2002	S60			Steering Wheel Module(SWM)		X	X	X	X		

VOLVO	A11	2003	S60			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2003	S60		B5204T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2003	S60		B5234T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2003	S60		B5234T7	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2003	S60		B5244S	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2003	S60		B5244S2	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	A11	2003	S60		B5244SG	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2003	S60		B5244SG2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2003	S60		B5244T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2003	S60		B5254T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2003	S60		D5244T	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2003	S60		D5244T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2003	S60		AW50/51 AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2003	S60		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2003	S60		AW50/51 AWD	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2003	S60			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2003	S60			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2003	S60			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2003	S60			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2003	S60			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2003	S60			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2003	S60			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2003	S60			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2003	S60			Accessory Electronic Module(AEM)		X	X	X	X	X	
VOLVO	A11	2003	S60			Audio Module(AUM)		X	X	X			
VOLVO	A11	2003	S60			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2003	S60			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	A11	2003	S60			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2003	S60			Rear Electronic Module(REM)		X	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	A11	2003	S60			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2003	S60			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2003	S60			Steering Wheel Module(SWM)		X	X	X	X		

VOLVO	A11	2004	S60			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2004	S60		B5204T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2004	S60		B5234T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2004	S60		B5234T7	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2004	S60		B5244S	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	A11	2004	S60		B5244S2	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	A11	2004	S60		B5244SG	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2004	S60		B5244SG2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2004	S60		B5254T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2004	S60		B5254T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2004	S60		D5244T	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2004	S60		D5244T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2004	S60		D5244T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2004	S60		AW50/51 AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2004	S60		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2004	S60		AW50/51 AWD	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2004	S60			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2004	S60			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2004	S60			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2004	S60			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2004	S60			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2004	S60			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2004	S60			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2004	S60			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2004	S60			Accessory Electronic Module(AEM)		X	X	X	X	X	
VOLVO	A11	2004	S60			Audio Module(AUM)		X	X	X			
VOLVO	A11	2004	S60			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2004	S60			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	A11	2004	S60			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code

VOLVO	A11	2004	S60			Rear Electronic Module(REM)		X	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	A11	2004	S60			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2004	S60			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2004	S60			Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2004	S60			Suspension Module(SUM)		X	X	X	X		
VOLVO	A11	2005	S60			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2005	S60		B5204T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2005	S60		B5244S	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	A11	2005	S60		B5244S2	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	A11	2005	S60		B5244SG	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2005	S60		B5244SG2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2005	S60		B5244T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2005	S60		B5244T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2005	S60		B5254T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2005	S60		B5254T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2005	S60		D5244T	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2005	S60		D5244T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2005	S60		D5244T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2005	S60		AW50/51 AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2005	S60		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2005	S60		AW50/51 AWD	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2005	S60		M66AWD			X	X	X	X		
VOLVO	A11	2005	S60			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2005	S60			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2005	S60			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2005	S60			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2005	S60			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2005	S60			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2005	S60			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2005	S60			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2005	S60			Accessory Electronic Module(AEM)		X	X	X	X	X	
VOLVO	A11	2005	S60			Audio Module(AUM)		X	X	X			

VOLVO	A11	2005	S60			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2005	S60			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	A11	2005	S60			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2005	S60			Rear Electronic Module(REM)		X	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	A11	2005	S60			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2005	S60			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2005	S60			Suspension Module(SUM)		X	X	X	X		
VOLVO	A11	2006	S60			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2006	S60		B5204T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2006	S60		B5234T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2006	S60		B5234T7	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2006	S60		B5244S	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	A11	2006	S60		B5244S2	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	A11	2006	S60		B5244SG	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2006	S60		B5244SG2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2006	S60		B5244T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2006	S60		B5244T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2006	S60		B5254T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2006	S60		B5254T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2006	S60		D5244T	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2006	S60		D5244T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2006	S60		D5244T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2006	S60		AW50/51 AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2006	S60		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2006	S60		AW50/51 AWD	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2006	S60		M66AWD			X	X	X	X		
VOLVO	A11	2006	S60			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2006	S60			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2006	S60			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2006	S60			Combustion Preheater Module(CPM)		X	X	X	X	X	

VOLVO	A11	2006	S60			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2006	S60			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2006	S60			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2006	S60			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2006	S60			Accessory Electronic Module(AEM)		X	X	X	X	X	
VOLVO	A11	2006	S60			Audio Module(AUM)		X	X	X			
VOLVO	A11	2006	S60			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2006	S60			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	A11	2006	S60			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2006	S60			Rear Electronic Module(REM)		X	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	A11	2006	S60			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2006	S60			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2006	S60			Suspension Module(SUM)		X	X	X	X		
VOLVO	A11	2007	S60			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2007	S60		B5204T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	S60		B5234T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	S60		B5234T7	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	S60		B5244S	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	A11	2007	S60		B5244S2	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	A11	2007	S60		B5244SG	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	S60		B5244SG2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	S60		B5244T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	S60		B5244T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	S60		B5254T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	S60		B5254T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	S60		D5244T	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	S60		D5244T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	S60		D5244T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	S60		AW50/51 AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change

VOLVO	A11	2007	S60		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2007	S60		AW50/51 AWD	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2007	S60		M66AWD			X	X	X	X		
VOLVO	A11	2007	S60			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2007	S60			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2007	S60			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2007	S60			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2007	S60			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2007	S60			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2007	S60			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2007	S60			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2007	S60			Accessory Electronic Module(AEM)		X	X	X	X	X	
VOLVO	A11	2007	S60			Audio Module(AUM)		X	X	X			
VOLVO	A11	2007	S60			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2007	S60			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	A11	2007	S60			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2007	S60			Rear Electronic Module(REM)		X	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	A11	2007	S60			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2007	S60			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2007	S60			Suspension Module(SUM)		X	X	X	X		
VOLVO	A11	2008	S60			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2008	S60		B5204T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	S60		B5234T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	S60		B5234T7	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	S60		B5244S	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	A11	2008	S60		B5244S2	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	A11	2008	S60		B5244SG	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	S60		B5244SG2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	S60		B5244T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	S60		B5244T4	Engine Control Module(ECM)		X	X	X	X	X	

VOLVO	A11	2008	S60		B5254T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	S60		B5254T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	S60		D5244T	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	S60		D5244T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	S60		D5244T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	S60		AW50/51 AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2008	S60		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2008	S60		AW50/51 AWD	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2008	S60		M66AWD			X	X	X	X		
VOLVO	A11	2008	S60			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2008	S60			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2008	S60			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2008	S60			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2008	S60			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2008	S60			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2008	S60			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2008	S60			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2008	S60			Accessory Electronic Module(AEM)		X	X	X	X	X	
VOLVO	A11	2008	S60			Audio Module(AUM)		X	X	X			
VOLVO	A11	2008	S60			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2008	S60			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	A11	2008	S60			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2008	S60			Rear Electronic Module(REM)		X	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	A11	2008	S60			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2008	S60			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2008	S60			Suspension Module(SUM)		X	X	X	X		
VOLVO	A11	2009	S60		B5204T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2009	S60		B5244S	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
VOLVO	A11	2009	S60		B5244S2	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code

VOLVO	A11	2009	S60		B5244T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2009	S60		B5254T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2009	S60		D5244T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2009	S60		D5244T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2009	S60		D5244T7	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2009	S60		AW50/51 AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2009	S60		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2009	S60		TF-80SC	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2009	S60		AW50/51 AWD	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2009	S60		M66AWD			X	X	X	X		
VOLVO	A11	2009	S60			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	2009	S60			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2009	S60			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2009	S60			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2009	S60			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2009	S60			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2009	S60			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2009	S60			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2009	S60			Accessory Electronic Module(AEM)		X	X	X	X	X	
VOLVO	A11	2009	S60			Audio Module(AUM)		X	X	X			
VOLVO	A11	2009	S60			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2009	S60			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	A11	2009	S60			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2009	S60			Rear Electronic Module(REM)		X	X	X	X	X	
VOLVO	A11	2009	S60			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2009	S60			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2009	S60			Suspension Module(SUM)		X	X	X	X		
VOLVO	A11	2011	S60		B4164T	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	S60		B4164T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	S60		B4204T6	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	S60		B4204T7	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	S60		B6304T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	S60		D5204T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	S60		D5244T10	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2011	S60			Suspension Module(SUM)		X	X	X	X		
VOLVO	A11	2011	S60			Accessory Electronic Module(AEM)		X	X	X	X	X	
VOLVO	A11	2011	S60			Audio Module(AUM)		X	X	X			
VOLVO	A11	2011	S60			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2011	S60			Driver Information Module(DIM)		X	X	X	X		
VOLVO	A11	2011	S60			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2011	S60			Rear Electronic Module(REM)		X	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps

VOLVO	A11	2011	S60			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2011	S60			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2011	S60			Park Assist Module(PAM)		X	X	X			
VOLVO	A11	2011	S60			Accessory USB Unit (AUU)		X	X	X	X		
VOLVO	A11	2011	S60			Digital Audio Broadcast Module(DABM)		X	X	X			
VOLVO	A11	2011	S60			Headlamp Control Module(HCM)		X	X	X	X		
VOLVO	A11	2011	S60			Closing Velocity Module(CVM)		X	X	X			
VOLVO	A11	2011	S60			Keyless Vehicle Module(KVM)		X	X	X	X		
VOLVO	A11	2011	S60			Integrated Audio Module(IAM)		X	X	X			
VOLVO	A11	2011	S60			Infotainment Control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2011	S60			Parking Assistance Camera(PAC)		X	X	X			
VOLVO	A11	2011	S60			Audio Module(AUD)		X	X	X			
VOLVO	A11	2011	S60		MPS6	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2011	S60		TF-80SC	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2011	S60		TF-80SC AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2011	S60			Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2011	S60			Power Steering Control Module(PSCM)		X	X	X	X		
VOLVO	A11	2011	S60			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	2011	S60			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2011	S60			Park Brake Module(PBM)		X	X	X	X		1.Activation and service
VOLVO	A11	2011	S60			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	2011	S60			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2011	S60			Driver Door Module(DDM)		X	X	X	X	X	
VOLVO	A11	2011	S60			Passenger Door Module(PDM)		X	X	X	X	X	
VOLVO	A11	2011	S60			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2011	S60			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2011	S60			Trailer Module(TRM)		X	X	X	X		
VOLVO	A11	1997	S70			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	1997	S70		B5202FS	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1997	S70		B5204T2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1997	S70		B5204T3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1997	S70		B5234FS	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1997	S70		B5234T2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1997	S70		B5234T3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1997	S70		B5252FS	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1997	S70		B5254FS M4.4	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1997	S70		B5254T	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1997	S70		D5252T MSA 15.7	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	S70		AW50-42	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	1997	S70			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	1997	S70			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	1997	S70			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	1997	S70			Road Traffic Information Module(RTI)		X	X	X	X	X	
VOLVO	A11	1997	S70			Immobilizer		X	X	X	X	X	

VOLVO	A11	1998	S70			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	1998	S70		B5202FS	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1998	S70		B5204T2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1998	S70		B5204T3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1998	S70		B5234FS	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1998	S70		B5234T2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1998	S70		B5234T3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1998	S70		B5234T4	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1998	S70		B5234T7	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1998	S70		B5252FS	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1998	S70		B5254FS M4.4	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1998	S70		B5254T	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1998	S70		D5252T MSA 15.7	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	S70		GB5252S	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1998	S70		AW50-42	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	1998	S70			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	1998	S70			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	1998	S70			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	1998	S70			Road Traffic Information Module(RTI)		X	X	X	X	X	
VOLVO	A11	1998	S70			Immobilizer		X	X	X	X	X	
VOLVO	A11	1999	S70			Resetting the service reminder indicator(SRI)							
VOLVO	A11	1999	S70		B5202FS	Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	1999	S70		B5204T3	Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	1999	S70		B5204T4	Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	1999	S70		B5234FS	Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	1999	S70		B5234T3	Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	1999	S70		B5234T7	Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	1999	S70		B5252FS DENSO	Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	1999	S70		B5254T	Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	1999	S70		D5252T MSA 15.7	Central Electronic Module(CEM)		X	X	X	X		
VOLVO	A11	1999	S70		D5252T MSA 15.8	Central Electronic Module(CEM)		X	X	X	X		
VOLVO	A11	1999	S70		GB5252S	Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	1999	S70		GB5252S2	Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	1999	S70		AW42AWD	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	1999	S70		AW50-42	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	1999	S70			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	1999	S70			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	1999	S70			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	1999	S70			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	1999	S70			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	1999	S70			Power Seat Module,Right(PSR)		X	X	X	X	X	
VOLVO	A11	1999	S70			Road Traffic Information Module(RTI)		X	X	X	X	X	
VOLVO	A11	1999	S70			Immobilizer		X	X	X	X	X	
VOLVO	A11	1999	S70			Lock and alarm		X	X	X	X	X	

VOLVO	A11	2000	S70			Resetting the service reminder indicator(SRI)							
VOLVO	A11	2000	S70		B5204T3	Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2000	S70		B5204T4	Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2000	S70		B5234T3	Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2000	S70		B5234T7	Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2000	S70		B5244S	Central Electronic Module(CEM)		X	X	X	X		
VOLVO	A11	2000	S70		B5244S2	Central Electronic Module(CEM)		X	X	X	X		
VOLVO	A11	2000	S70		B5244SG	Central Electronic Module(CEM)		X	X	X	X		
VOLVO	A11	2000	S70		B5244SG2	Central Electronic Module(CEM)		X	X	X	X		
VOLVO	A11	2000	S70		B5244T	Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2000	S70		D5252T MSA 15.8	Central Electronic Module(CEM)		X	X	X	X		
VOLVO	A11	2000	S70		AW42AWD	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2000	S70		AW50-42	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2000	S70			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	2000	S70			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2000	S70			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2000	S70			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2000	S70			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	2000	S70			Power Seat Module,Right(PSR)		X	X	X	X	X	
VOLVO	A11	2000	S70			Road Traffic Information Module(RTI)		X	X	X	X	X	
VOLVO	A11	2000	S70			Immobilizer		X	X	X	X	X	
VOLVO	A11	2000	S70			Lock and alarm		X	X	X	X	X	
VOLVO	A11	1999	S80			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	1999	S80		B5204T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	1999	S80		B5204T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	1999	S80		B5244S	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	1999	S80		B5244S2	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	1999	S80		B6284T	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	1999	S80		B6304S3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	1999	S80		D5252T MSA 15.8	Engine Control Module(ECM)		X	X	X	X		1.Programming optimizing parameters
VOLVO	A11	1999	S80		4T65EV	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	A11	1999	S80		4T65EV-GT	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change

VOLVO	A11	1999	S80		AW50-42	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	1999	S80		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	1999	S80			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	1999	S80			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	1999	S80			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	1999	S80			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	1999	S80			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	1999	S80			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	1999	S80			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	1999	S80			Audio Module(AUM)		X	X	X	X		
VOLVO	A11	1999	S80			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	1999	S80			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	A11	1999	S80			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	1999	S80			Rear Electronic Module(REM)		X	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	A11	1999	S80			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	1999	S80			Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	1999	S80			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2000	S80			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2000	S80		B5204T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2000	S80		B5204T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2000	S80		B5204T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2000	S80		B5234T7	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2000	S80		B5244S	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2000	S80		B5244S2	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2000	S80		B6284T	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code

VOLVO	A11	2000	S80		B6294S	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2000	S80		D5252T MSA 15.8	Engine Control Module(ECM)		X	X	X	X		1.Programming optimizing parameters
VOLVO	A11	2000	S80		4T65EV	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	A11	2000	S80		4T65EV-GT	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	A11	2000	S80		AW50-42	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2000	S80		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2000	S80			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2000	S80			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2000	S80			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2000	S80			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2000	S80			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2000	S80			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2000	S80			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2000	S80			Audio Module(AUM)		X	X	X	X		
VOLVO	A11	2000	S80			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2000	S80			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	A11	2000	S80			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2000	S80			Rear Electronic Module(REM)		X	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	A11	2000	S80			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2000	S80			Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2000	S80			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2001	S80			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2001	S80		B5204T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2001	S80		B5234T7	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2001	S80		B5244S	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code

VOLVO	A11	2001	S80		B5244S2	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2001	S80		B5244SG	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2001	S80		B5244SG2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2001	S80		B5244T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2001	S80		B6284T	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2001	S80		B6294S	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2001	S80		D5244T	Engine Control Module(ECM)		X	X	X	X		1.Programming optimizing parameters
VOLVO	A11	2001	S80		D5252T MSA 15.8	Engine Control Module(ECM)		X	X	X	X		1.Programming optimizing parameters
VOLVO	A11	2001	S80		4T65EV	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	A11	2001	S80		4T65EV-GT	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	A11	2001	S80		AW50-42	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2001	S80		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2001	S80		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2001	S80			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2001	S80			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2001	S80			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2001	S80			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2001	S80			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2001	S80			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2001	S80			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2001	S80			Audio Module(AUM)		X	X	X	X		
VOLVO	A11	2001	S80			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2001	S80			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)

VOLVO	A11	2001	S80			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2001	S80			Rear Electronic Module(REM)		X	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	A11	2001	S80			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2001	S80			Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2001	S80			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2002	S80			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2002	S80		B5204T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2002	S80		B5234T7	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2002	S80		B5244S	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2002	S80		B5244S2	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2002	S80		B5244SG	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2002	S80		B5244SG2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2002	S80		B5244T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2002	S80		B6294S2	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2002	S80		B6294T	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2002	S80		D5244T	Engine Control Module(ECM)		X	X	X	X		1.Programming optimizing parameters
VOLVO	A11	2002	S80		D5244T2	Engine Control Module(ECM)		X	X	X	X		1.Programming optimizing parameters
VOLVO	A11	2002	S80		4T65EV	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	A11	2002	S80		4T65EV-GT	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	A11	2002	S80		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2002	S80		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2002	S80			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2002	S80			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2002	S80			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters

VOLVO	A11	2002	S80			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2002	S80			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2002	S80			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2002	S80			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2002	S80			Audio Module(AUM)		X	X	X	X		
VOLVO	A11	2002	S80			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2002	S80			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	A11	2002	S80			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2002	S80			Rear Electronic Module(REM)		X	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	A11	2002	S80			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2002	S80			Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2002	S80			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2003	S80			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2003	S80		B5204T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2003	S80		B5234T7	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2003	S80		B5244S	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2003	S80		B5244S2	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2003	S80		B5244SG	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2003	S80		B5244SG2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2003	S80		B5244T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2003	S80		B5254T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2003	S80		B6294T	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2003	S80		D5244T	Engine Control Module(ECM)		X	X	X	X		1.Programming optimizing parameters
VOLVO	A11	2003	S80		D5244T2	Engine Control Module(ECM)		X	X	X	X		1.Programming optimizing parameters
VOLVO	A11	2003	S80		4T65EV	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	A11	2003	S80		4T65EV-GT	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change

VOLVO	A11	2003	S80		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2003	S80		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2003	S80			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2003	S80			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2003	S80			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2003	S80			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2003	S80			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2003	S80			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2003	S80			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2003	S80			Audio Module(AUM)		X	X	X	X		
VOLVO	A11	2003	S80			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2003	S80			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	A11	2003	S80			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2003	S80			Rear Electronic Module(REM)		X	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	A11	2003	S80			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2003	S80			Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2003	S80			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2004	S80			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2004	S80		B5204T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2004	S80		B5234T7	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2004	S80		B5244S	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2004	S80		B5244S2	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2004	S80		B5244SG	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2004	S80		B5244SG2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2004	S80		B5254T2	Engine Control Module(ECM)		X	X	X	X	X	

VOLVO	A11	2004	S80		B6294S2	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2004	S80		B6294T	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2004	S80		D5244T	Engine Control Module(ECM)		X	X	X	X		1.Programming optimizing parameters
VOLVO	A11	2004	S80		D5244T2	Engine Control Module(ECM)		X	X	X	X		1.Programming optimizing parameters
VOLVO	A11	2004	S80		4T65EV	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	A11	2004	S80		4T65EV-GT	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	A11	2004	S80		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2004	S80		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2004	S80			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2004	S80			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2004	S80			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2004	S80			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2004	S80			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2004	S80			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2004	S80			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2004	S80			Audio Module(AUM)		X	X	X	X		
VOLVO	A11	2004	S80			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2004	S80			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	A11	2004	S80			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2004	S80			Rear Electronic Module(REM)		X	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	A11	2004	S80			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2004	S80			Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2004	S80			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2005	S80			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2005	S80		B5204T5	Engine Control Module(ECM)		X	X	X	X	X	

VOLVO	A11	2005	S80		B5244S	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2005	S80		B5244S2	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2005	S80		B5244SG	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2005	S80		B5244SG2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2005	S80		B5244T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2005	S80		B5254T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2005	S80		B6294S2	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2005	S80		B6294T	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2005	S80		D5244T	Engine Control Module(ECM)		X	X	X	X		1.Programming optimizing parameters
VOLVO	A11	2005	S80		D5244T2	Engine Control Module(ECM)		X	X	X	X		1.Programming optimizing parameters
VOLVO	A11	2005	S80		4T65EV	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	A11	2005	S80		4T65EV-GT	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	A11	2005	S80		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2005	S80		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2005	S80			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2005	S80			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2005	S80			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2005	S80			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2005	S80			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2005	S80			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2005	S80			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2005	S80			Audio Module(AUM)		X	X	X	X		
VOLVO	A11	2005	S80			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car

VOLVO	A11	2005	S80			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	2005	S80			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2005	S80			Rear Electronic Module(REM)		X	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	A11	2005	S80			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2005	S80			Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2005	S80			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2006	S80			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2006	S80		B5204T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2006	S80		B5244S	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2006	S80		B5244S2	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2006	S80		B5244SG	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2006	S80		B5244SG2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2006	S80		B5244T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2006	S80		B5254T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2006	S80		B6294S2	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2006	S80		B6294T	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2006	S80		D5244T	Engine Control Module(ECM)		X	X	X	X		1.Programming optimizing parameters
VOLVO	A11	2006	S80		D5244T2	Engine Control Module(ECM)		X	X	X	X		1.Programming optimizing parameters
VOLVO	A11	2006	S80		4T65EV	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	A11	2006	S80		4T65EV-GT	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	A11	2006	S80		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2006	S80		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2006	S80			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2006	S80			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2006	S80			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters

VOLVO	A11	2006	S80			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2006	S80			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2006	S80			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2006	S80			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2006	S80			Audio Module(AUM)		X	X	X	X		
VOLVO	A11	2006	S80			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2006	S80			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	A11	2006	S80			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2006	S80			Rear Electronic Module(REM)		X	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	A11	2006	S80			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2006	S80			Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2006	S80			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2007	S80			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2007	S80		B5254T6	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	S80		B8444S	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	S80		B6324S	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	S80		TF-80SC	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2007	S80		TF-80SC AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2007	S80			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	2007	S80			Steering Wheel Angle Sensor Module(SAS)		X	X	X			
VOLVO	A11	2007	S80			Park Brake Module(PBM)		X	X	X			
VOLVO	A11	2007	S80			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	2007	S80			Driver Door Module(DDM)		X	X	X			
VOLVO	A11	2007	S80			Passenger Door Module(PDM)		X	X	X			
VOLVO	A11	2007	S80			Power Seat Module(PSM)		X	X	X			
VOLVO	A11	2007	S80			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2007	S80			Combustion Preheater Module(CPM)		X	X	X			
VOLVO	A11	2007	S80			Trailer Module(TRM)		X	X	X			
VOLVO	A11	2007	S80			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2007	S80			Driver Information Module(DIM)		X	X	X	X		
VOLVO	A11	2007	S80			Phone Module(PHM)		X	X	X			
VOLVO	A11	2007	S80			Forward Sensing Module(FSM)		X	X	X			
VOLVO	A11	2007	S80			Headlamp Control Module(HCM)		X	X	X			
VOLVO	A11	2007	S80			High level Display Front(HLDF)		X	X	X			
VOLVO	A11	2007	S80			Parking Assistance Camera(PAC)		X	X	X			
VOLVO	A11	2007	S80			Suspension Module(SUM)		X	X	X			
VOLVO	A11	2007	S80			Integrated Audio Module(IAM)		X	X	X			
VOLVO	A11	2007	S80			Infotainment Control Module(ICM)		X	X	X			
VOLVO	A11	2007	S80			Keyless Vehicle Module(KVM)		X	X	X	X		

VOLVO	A11	2007	S80			Park Assist Module(PAM)		X	X	X			
VOLVO	A11	2008	S80		B5254T6	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	S80		B8444S	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	S80		B6324S	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	S80		TF-80SC	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2008	S80		TF-80SC AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2008	S80			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	2008	S80			Steering Wheel Angle Sensor Module(SAS)		X	X	X			
VOLVO	A11	2008	S80			Park Brake Module(PBM)		X	X	X			
VOLVO	A11	2008	S80			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	2008	S80			Driver Door Module(DDM)		X	X	X			
VOLVO	A11	2008	S80			Passenger Door Module(PDM)		X	X	X			
VOLVO	A11	2008	S80			Power Seat Module(PSM)		X	X	X			
VOLVO	A11	2008	S80			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2008	S80			Combustion Preheater Module(CPM)		X	X	X			
VOLVO	A11	2008	S80			Trailer Module(TRM)		X	X	X			
VOLVO	A11	2008	S80			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2008	S80			Driver Information Module(DIM)		X	X	X	X		
VOLVO	A11	2008	S80			Phone Module(PHM)		X	X	X			
VOLVO	A11	2008	S80			Forward Sensing Module(FSM)		X	X	X			
VOLVO	A11	2008	S80			Headlamp Control Module(HCM)		X	X	X			
VOLVO	A11	2008	S80			High level Display Front(HLDF)		X	X	X			
VOLVO	A11	2008	S80			Parking Assistance Camera(PAC)		X	X	X			
VOLVO	A11	2008	S80			Suspension Module(SUM)		X	X	X			
VOLVO	A11	2008	S80			Integrated Audio Module(IAM)		X	X	X			
VOLVO	A11	2008	S80			Infotainment Control Module(ICM)		X	X	X			
VOLVO	A11	2008	S80			Keyless Vehicle Module(KVM)		X	X	X	X		
VOLVO	A11	2008	S80			Park Assist Module(PAM)		X	X	X			
VOLVO	A11	2009	S80		B4204S3	Engine Control Module(ECM)		X	X	X	X		1.Resetting Adaptation
VOLVO	A11	2009	S80		B4204S4	Engine Control Module(ECM)		X	X	X	X		1.Resetting Adaptation
VOLVO	A11	2009	S80		B4204S4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2009	S80		B6304T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2009	S80		B6324S	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2009	S80		B8444S	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2009	S80		D4204T	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2009	S80		D5244T10	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2009	S80		D5244T4	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting counter particle filter
VOLVO	A11	2009	S80			Driver Information Module(DIM)		X	X	X	X		
VOLVO	A11	2009	S80			Telephone (PHM)		X	X	X	X		
VOLVO	A11	2009	S80			Infotainment Control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2009	S80			Forward Sensing Module(FSM)		X	X	X	X		
VOLVO	A11	2009	S80			Brake Control Module (BCM)		X	X	X	X		
VOLVO	A11	2009	S80			Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2009	S80			Park Brake Module(PBM)		X	X	X	X		1.Activation and service
VOLVO	A11	2009	S80			Power Seat Module(PSM)		X	X	X	X		

VOLVO	A11	2009	S80			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2009	S80			Parking Assistance Camera(PAC)		X	X	X	X		
VOLVO	A11	2010	S80		B4204S3	Engine Control Module(ECM)		X	X	X	X		1.Resetting Adaptation
VOLVO	A11	2010	S80		B4204S4	Engine Control Module(ECM)		X	X	X	X		1.Resetting Adaptation
VOLVO	A11	2010	S80		B4204S4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2010	S80		B6304T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2010	S80		B6324S	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2010	S80		B8444S	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2010	S80		D4204T	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2010	S80		D5244T10	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2010	S80		D5244T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2010	S80			Driver Information Module(DIM)		X	X	X	X		
VOLVO	A11	2010	S80			Telephone (PHM)		X	X	X	X		
VOLVO	A11	2010	S80			Infotainment Control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2010	S80			Forward Sensing Module(FSM)		X	X	X	X		
VOLVO	A11	2010	S80			Brake Control Module (BCM)		X	X	X	X		
VOLVO	A11	2010	S80			Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2010	S80			Park Brake Module(PBM)		X	X	X	X		1.Activation and service
VOLVO	A11	2010	S80			Power Seat Module(PSM)		X	X	X	X		
VOLVO	A11	2010	S80			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2010	S80			Parking Assistance Camera(PAC)		X	X	X	X		
VOLVO	A11	2011	S80		B8444S	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	S80		D4164T	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2011	S80		B4204S3	Engine Control Module(ECM)		X	X	X	X		1.Resetting adaptation
VOLVO	A11	2011	S80		B4204S4	Engine Control Module(ECM)		X	X	X	X		1.Resetting adaptation
VOLVO	A11	2011	S80		B5254T8	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	S80		D5244T10	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	S80		B4204T6	Engine Control Module(ECM)		X	X	X	X		1.Resetting adaptation
VOLVO	A11	2011	S80		B5254T10	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	S80		B5254T11	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	S80		B6304T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	S80		B6324S4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	S80		B6324S5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	S80		D5204T	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	S80		D5204T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	S80			Suspension Module(SUM)		X	X	X			
VOLVO	A11	2011	S80			Audio Module(AUD)		X	X	X			
VOLVO	A11	2011	S80			Headlamp Control Module(HCM)		X	X	X			
VOLVO	A11	2011	S80			High level Display Front(HLDF)		X	X	X			
VOLVO	A11	2011	S80			Park Assist Module (PAM)		X	X	X			
VOLVO	A11	2011	S80			Accessory USB Unit (AUU)		X	X	X	X		
VOLVO	A11	2011	S80			Parking Assistance Camera(PAC)		X	X	X	X		
VOLVO	A11	2011	S80			Remote Digital Audio Receiver (RDAR)		X	X	X	X		
VOLVO	A11	2011	S80			Infotainment Control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2011	S80			Keyless Vehicle Module(KVM)		X	X	X	X		

VOLVO	A11	2011	S80			Integrated Audio Module(IAM)		X	X	X			
VOLVO	A11	2011	S80			Forward Sensing Module(FSM)		X	X	X	X		
VOLVO	A11	2011	S80			Multimedia Module(MMM)		X	X	X			
VOLVO	A11	2011	S80			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2011	S80			Driver Information Module(DIM)		X	X	X	X		
VOLVO	A11	2011	S80			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2011	S80			Power Steering Control Module(PSCM)		X	X	X	X		
VOLVO	A11	2011	S80		TF-80SC AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2011	S80		TF-80SC	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2011	S80		MPS6	Transmission Control Module(TCM)		X	X	X	X		1.Initial adaptation
VOLVO	A11	2011	S80		TF-80SC AWD	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2011	S80			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2011	S80			Park Brake Module(PBM)		X	X	X	X		1.Activation and service
VOLVO	A11	2011	S80			Brake Control Module (BCM)		X	X	X	X	X	
VOLVO	A11	2011	S80			Combustion Preheater Module(CPM)		X	X	X			
VOLVO	A11	2011	S80			Trailer Module(TRM)		X	X	X			
VOLVO	A11	2011	S80			Power Seat Module(PSM)		X	X	X	X		
VOLVO	A11	2011	S80			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2011	S80			Driver Door Module(DDM)		X	X	X	X		
VOLVO	A11	2011	S80			Passenger Door Module(PDM)		X	X	X	X		
VOLVO	A11	2011	S80			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	2012	S80			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2012	S80		B4164T	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2012	S80		B4164T2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2012	S80		B4204T6	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2012	S80		B4204T7	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2012	S80		B5254T10	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2012	S80		B6304T4	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2012	S80		B6324S5	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2012	S80		D4162T	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2012	S80		D5204T3	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2012	S80		D5244T11	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2012	S80		D5244T15	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2012	S80			Central Electronic Module(CEM)		X	X	X	X		
VOLVO	A11	2012	S80			Driver Information Module(DIM)		X	X	X	X		
VOLVO	A11	2012	S80			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2012	S80			Infotainment Control Module(ICM)		X	X	X	X		
VOLVO	A11	2012	S80			Keyless Vehicle Module(KVM)		X	X	X	X		
VOLVO	A11	2012	S80			Park Assist Module(PAM)		X	X	X	X		
VOLVO	A11	2012	S80			Forward Sensing Module(FSM)		X	X	X	X		
VOLVO	A11	2012	S80			High level Display Front(HLDF)		X	X	X	X		
VOLVO	A11	2012	S80			Parking Assistance Camera(PAC)		X	X	X	X		

VOLVO	A11	2012	S80			Suspension Module(SUM)		X	X	X	X		
VOLVO	A11	2012	S80			Bluetooth Phone Module (BPM)		X	X	X	X		
VOLVO	A11	2012	S80			Multimedia Module(MMM)		X	X	X	X		
VOLVO	A11	2012	S80			Audio Module(AUD)		X	X	X	X		
VOLVO	A11	2012	S80			Closing Velocity Module(CVM)		X	X	X	X		
VOLVO	A11	2012	S80			Integrated Audio Module(IAM)		X	X	X	X		
VOLVO	A11	2012	S80			Remote Digital Audio Receiver (RDAR)		X	X	X	X		
VOLVO	A11	2012	S80			Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2012	S80		TF-80SC AWD	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2012	S80		TF-80SC	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2012	S80		MPS6	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2012	S80			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2012	S80			Park Brake Module(PBM)		X	X	X	X		
VOLVO	A11	2012	S80			Brake Control Module (BCM)		X	X	X	X		
VOLVO	A11	2012	S80			Power Steering Control Module(PSCM)		X	X	X	X		
VOLVO	A11	2012	S80			Combustion Preheater Module(CPM)		X	X	X	X		
VOLVO	A11	2012	S80			Trailer Module(TRM)		X	X	X	X		
VOLVO	A11	2012	S80			Power Seat Module(PSM)		X	X	X	X		
VOLVO	A11	2012	S80			Driver Door Module(DDM)		X	X	X	X		
VOLVO	A11	2012	S80			Passenger Door Module(PDM)		X	X	X	X		
VOLVO	A11	2012	S80			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2012	S80			Airbag(SRS)		X	X	X	X		
VOLVO	A11	2009	S80L		B5254T6	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2009	S80L		B6304T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2009	S80L			Suspension Module(SUM)		X	X	X			
VOLVO	A11	2009	S80L			Keyless Vehicle Module(KVM)		X	X	X	X		
VOLVO	A11	2009	S80L			Headlamp Control Module(HCM)		X	X	X			
VOLVO	A11	2009	S80L			Park Assist Module(PAM)		X	X	X			
VOLVO	A11	2009	S80L			High level Display Front(HLDF)		X	X	X			
VOLVO	A11	2009	S80L			Accessory USB Unit (AUU)		X	X	X	X		
VOLVO	A11	2009	S80L			Audio Module(AUD)		X	X	X			
VOLVO	A11	2009	S80L			Forward Sensing Module(FSM)		X	X	X	X		
VOLVO	A11	2009	S80L			Parking Assistance Camera(PAC)		X	X	X	X		
VOLVO	A11	2009	S80L			Central Electronic Module(CEM)		X	X	X	X		
VOLVO	A11	2009	S80L			Driver Information Module(DIM)		X	X	X	X		
VOLVO	A11	2009	S80L			Integrated Audio Module(IAM)		X	X	X			
VOLVO	A11	2009	S80L			Multimedia Module(MMM)		X	X	X			
VOLVO	A11	2009	S80L			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2009	S80L			Infotainment Control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2009	S80L		TF-80SC	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2009	S80L		TF-80SC AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2009	S80L			Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2009	S80L			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		

VOLVO	A11	2009	S80L			Park Brake Module(PBM)		X	X	X	X		X
VOLVO	A11	2009	S80L			Brake Control Module (BCM)		X	X	X	X		
VOLVO	A11	2009	S80L			Driver Door Module(DDM)		X	X	X	X	X	
VOLVO	A11	2009	S80L			Passenger Door Module(PDM)		X	X	X	X	X	
VOLVO	A11	2009	S80L			Combustion Preheater Module(CPM)		X	X	X			
VOLVO	A11	2009	S80L			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2009	S80L			Trailer Module(TRM)		X	X	X			
VOLVO	A11	2009	S80L			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	2010	S80L		B5254T6	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2010	S80L		B6304T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2010	S80L			Suspension Module(SUM)		X	X	X	X		
VOLVO	A11	2010	S80L			Audio Module(AUD)		X	X	X			
VOLVO	A11	2010	S80L			Headlamp Control Module(HCM)		X	X	X			
VOLVO	A11	2010	S80L			Park Assist Module(PAM)		X	X	X			
VOLVO	A11	2010	S80L			High level Display Front(HLDF)		X	X	X			
VOLVO	A11	2010	S80L			Accessory USB Unit (AUU)		X	X	X			
VOLVO	A11	2010	S80L			Bluetooth Phone Module (BPM)		X	X	X			
VOLVO	A11	2010	S80L			Forward Sensing Module(FSM)		X	X	X	X		
VOLVO	A11	2010	S80L			Parking Assistance Camera(PAC)		X	X	X	X		
VOLVO	A11	2010	S80L			Central Electronic Module(CEM)		X	X	X	X		
VOLVO	A11	2010	S80L			Multimedia Module(MMM)		X	X	X			
VOLVO	A11	2010	S80L			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2010	S80L			Infotainment Control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2010	S80L			Keyless Vehicle Module(KVM)		X	X	X	X		
VOLVO	A11	2010	S80L			Digital Audio Broadcast Module(DABM)		X	X	X			
VOLVO	A11	2010	S80L			Driver Information Module(DIM)		X	X	X	X		

VOLVO	A11	2010	S80L			Integrated Audio Module(IAM)		X	X	X			
VOLVO	A11	2010	S80L		TF-80SC	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2010	S80L		TF-80SC AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2010	S80L			Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2010	S80L			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2010	S80L			Park Brake Module(PBM)		X	X	X	X		
VOLVO	A11	2010	S80L			Brake Control Module (BCM)		X	X	X	X		
VOLVO	A11	2010	S80L			Driver Door Module(DDM)		X	X	X	X	X	
VOLVO	A11	2010	S80L			Passenger Door Module(PDM)		X	X	X	X	X	
VOLVO	A11	2010	S80L			Combustion Preheater Module(CPM)		X	X	X			
VOLVO	A11	2010	S80L			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2010	S80L			Trailer Module(TRM)		X	X	X			
VOLVO	A11	2010	S80L			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	2010	S80L			Power Seat Module(PSM)		X	X	X	X		
VOLVO	A11	2011	S80L		B4204T6	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	S80L		B6304T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	S80L			Suspension Module(SUM)		X	X	X	X		
VOLVO	A11	2011	S80L			Audio Module(AUD)		X	X	X			
VOLVO	A11	2011	S80L			Headlamp Control Module(HCM)		X	X	X			
VOLVO	A11	2011	S80L			Park Assist Module(PAM)		X	X	X			
VOLVO	A11	2011	S80L			High level Display Front(HLDF)		X	X	X			
VOLVO	A11	2011	S80L			Accessory USB Unit (AUU)		X	X	X			
VOLVO	A11	2011	S80L			Bluetooth Phone Module (BPM)		X	X	X			
VOLVO	A11	2011	S80L			Forward Sensing Module(FSM)		X	X	X	X		

VOLVO	A11	2011	S80L			Parking Assistance Camera(PAC)		X	X	X	X		
VOLVO	A11	2011	S80L			Central Electronic Module(CEM)		X	X	X	X		
VOLVO	A11	2011	S80L			Multimedia Module(MMM)		X	X	X			
VOLVO	A11	2011	S80L			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2011	S80L			Infotainment Control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2011	S80L			Keyless Vehicle Module(KVM)		X	X	X	X		
VOLVO	A11	2011	S80L			Digital Audio Broadcast Module(DABM)		X	X	X			
VOLVO	A11	2011	S80L			Driver Information Module(DIM)		X	X	X	X		
VOLVO	A11	2011	S80L			Integrated Audio Module(IAM)		X	X	X			
VOLVO	A11	2011	S80L		MPS6	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2011	S80L		TF-80SC AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2011	S80L			Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2011	S80L			Power Steering Control Module(PSCM)		X	X	X	X		
VOLVO	A11	2011	S80L			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2011	S80L			Park Brake Module(PBM)		X	X	X	X		
VOLVO	A11	2011	S80L			Brake Control Module (BCM)		X	X	X	X		
VOLVO	A11	2011	S80L			Driver Door Module(DDM)		X	X	X	X	X	
VOLVO	A11	2011	S80L			Passenger Door Module(PDM)		X	X	X	X	X	
VOLVO	A11	2011	S80L			Combustion Preheater Module(CPM)		X	X	X			
VOLVO	A11	2011	S80L			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2011	S80L			Trailer Module(TRM)		X	X	X			
VOLVO	A11	2011	S80L			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	2011	S80L			Power Seat Module(PSM)		X	X	X	X		
VOLVO	A11	1997	S90		B6244FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	S90		B6254FS	Fuel System/ Combined System		X	X	X	X		

VOLVO	A11	1997	S90		B6304FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	S90		B6304FS2	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	S90		AW30-40	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	1997	S90		AW30-43	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	1997	S90			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	1997	S90			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	1997	S90			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	1997	S90			Immobilizer		X	X	X	X	X	
VOLVO	A11	1998	S90		B6244FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	S90		B6254FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	S90		B6304FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	S90		B6304FS2	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	S90		AW30-40	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	1998	S90		AW30-43			X	X	X	X		
VOLVO	A11	1998	S90			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	1998	S90			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	1998	S90			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	1998	S90			Immobilizer		X	X	X	X	X	
VOLVO	A11	1998	V40			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	1998	V40		B4164S	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1998	V40		B4184S	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1998	V40		B4184SM	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1998	V40		B4194T	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1998	V40		B4204S	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1998	V40		B4204T	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1998	V40		D4192T	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1998	V40		AW50-42	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	1998	V40			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	1998	V40			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	1998	V40			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	1998	V40			Immobilizer		X	X	X	X	X	
VOLVO	A11	1999	V40			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	1999	V40		B4164S	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1999	V40		B4184S	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1999	V40		B4184SM	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1999	V40		B4194T	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1999	V40		B4204S	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1999	V40		B4204T	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1999	V40		D4192T	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1999	V40		D4192T2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1999	V40		AW50-42	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	1999	V40			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	1999	V40			Climate Control Module(CCM)		X	X	X	X	X	

VOLVO	A11	1999	V40			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	1999	V40			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	1999	V40			Immobilizer		X	X	X	X	X	
VOLVO	A11	1999	V40			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2000	V40			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2000	V40		B4164S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2000	V40		B4184S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2000	V40		B4184S3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2000	V40		B4184SM	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2000	V40		B4194T2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2000	V40		B4204S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2000	V40		B4204T2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2000	V40		D4192T2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2000	V40		AW50-42	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2000	V40			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	2000	V40			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	2000	V40			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2000	V40			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	2000	V40			Immobilizer		X	X	X	X	X	
VOLVO	A11	2000	V40			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2001	V40			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2001	V40		B4164S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	V40		B4184S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	V40		B4184S3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	V40		B4184S9	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	V40		B4184S10	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	V40		B4184SM	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	V40		B4184SJ	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	V40		B4204S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	V40		B4204T3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	V40		B4204T5	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	V40		D4192T3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	V40		D4192T4	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2001	V40		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2001	V40			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	2001	V40			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	2001	V40			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2001	V40			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	2001	V40			Immobilizer		X	X	X	X	X	
VOLVO	A11	2001	V40			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2002	V40			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2002	V40		B4164S2	Fuel System/ Combined System		X	X	X	X	X	

VOLVO	A11	2002	V40		B4184S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2002	V40		B4184S3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2002	V40		B4184S9	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2002	V40		B4184S10	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2002	V40		B4184SJ	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2002	V40		B4204S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2002	V40		B4204T3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2002	V40		B4204T5	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2002	V40		D4192T3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2002	V40		D4192T4	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2002	V40		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2002	V40			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	2002	V40			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	2002	V40			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2002	V40			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	2002	V40			Immobilizer		X	X	X	X	X	
VOLVO	A11	2002	V40			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2003	V40			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2003	V40		B4164S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2003	V40		B4184S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2003	V40		B4184S3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2003	V40		B4184S9	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2003	V40		B4184S10	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2003	V40		B4184SJ	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2003	V40		B4204S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2003	V40		B4204T3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2003	V40		B4204T5	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2003	V40		D4192T3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2003	V40		D4192T4	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2003	V40		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2003	V40			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	2003	V40			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	2003	V40			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2003	V40			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	2003	V40			Immobilizer		X	X	X	X	X	
VOLVO	A11	2003	V40			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2004	V40			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2004	V40		B4164S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2004	V40		B4184S2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2004	V40		B4184S3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2004	V40		B4184S9	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2004	V40		B4184S10	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2004	V40		B4184SJ	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2004	V40		B4204S2	Fuel System/ Combined System		X	X	X	X	X	

VOLVO	A11	2004	V40		B4204T3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2004	V40		D4192T3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2004	V40		D4192T4	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2004	V40		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2004	V40			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	2004	V40			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	2004	V40			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2004	V40			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	2004	V40			Immobilizer		X	X	X	X	X	
VOLVO	A11	2004	V40			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2004	V50			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2004	V50		B5244S4	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2004	V50		B5244S5	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2004	V50		B5254T3	Engine Control Module(ECM)		X	X	X	X	X	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2004	V50		D4204T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
VOLVO	A11	2004	V50		D4204T2	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
VOLVO	A11	2004	V50		D4204T	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2004	V50		D4204T2	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2004	V50		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2004	V50			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Calibration(Cars with DSTC)
VOLVO	A11	2004	V50			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2004	V50			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2004	V50			Driver Door Module(DDM)		X	X	X	X	X	
VOLVO	A11	2004	V50			Passenger Door Module(PDM)		X	X	X	X	X	
VOLVO	A11	2004	V50			Power Seat Module(PSM)		X	X	X	X	X	
VOLVO	A11	2004	V50			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2004	V50			Trailer Module(TRM)		X	X	X	X		
VOLVO	A11	2004	V50			Accessory Electronic Module(AEM)		X	X	X	X	X	
VOLVO	A11	2004	V50			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2004	V50			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	2004	V50			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2004	V50			Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2004	V50			AM/FM Tuner Module(AFM)		X	X	X	X		
VOLVO	A11	2004	V50			Global Positioning System Module(GPS)		X	X	X	X		
VOLVO	A11	2004	V50			Infotainment Control Module(ICM)		X	X	X	X	X	

VOLVO	A11	2004	V50			Media Player Module(MPM)		X	X	X	X	X	
VOLVO	A11	2004	V50			Multimedia Module(MMM)		X	X	X	X	X	
VOLVO	A11	2004	V50			Traffic Message Channel Module(TMC)		X	X	X	X		
VOLVO	A11	2004	V50			Audio Module(AUD)		X	X	X			
VOLVO	A11	2005	V50			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2005	V50		B4164S3	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2005	V50		B4184S11	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2005	V50		B5244S4	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2005	V50		B5244S5	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2005	V50		B5254T3	Engine Control Module(ECM)		X	X	X	X	X	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2005	V50		D4164T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
VOLVO	A11	2005	V50		D4204T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
VOLVO	A11	2005	V50		D4204T2	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
VOLVO	A11	2005	V50		D4164T	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2005	V50		D4204T	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2005	V50		D4204T2	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2005	V50		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2005	V50		M66AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2005	V50		AW50/51AWD	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2005	V50		AW55-50/51SN	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2005	V50			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Calibration(Cars with DSTC)
VOLVO	A11	2005	V50			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2005	V50			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2005	V50			Driver Door Module(DDM)		X	X	X	X	X	
VOLVO	A11	2005	V50			Passenger Door Module(PDM)		X	X	X	X	X	
VOLVO	A11	2005	V50			Power Seat Module(PSM)		X	X	X	X	X	
VOLVO	A11	2005	V50			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2005	V50			Trailer Module(TRM)		X	X	X	X		
VOLVO	A11	2005	V50			Accessory Electronic Module(AEM)		X	X	X	X	X	
VOLVO	A11	2005	V50			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2005	V50			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	2005	V50			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2005	V50			AM/FM Tuner Module(AFM)		X	X	X	X		
VOLVO	A11	2005	V50			Global Positioning System Module(GPS)		X	X	X	X		

VOLVO	A11	2005	V50			Infotainment Control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2005	V50			Media Player Module(MPM)		X	X	X	X	X	
VOLVO	A11	2005	V50			Multimedia Module(MMM)		X	X	X	X	X	
VOLVO	A11	2005	V50			Traffic Message Channel Module(TMC)		X	X	X	X		
VOLVO	A11	2005	V50			Audio Module(AUD)		X	X	X			
VOLVO	A11	2006	V50			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2006	V50		B4164S3	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2006	V50		B4184S11	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2006	V50		B5244S4	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2006	V50		B5244S5	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2006	V50		B5254T3	Engine Control Module(ECM)		X	X	X	X	X	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2006	V50		D4164T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
VOLVO	A11	2006	V50		D4204T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
VOLVO	A11	2006	V50		D4204T2	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
VOLVO	A11	2006	V50		D4164T	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2006	V50		D4204T	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2006	V50		D4204T2	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2006	V50		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2006	V50		M66AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2006	V50		AW50/51AWD	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2006	V50		AW55-50/51SN	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2006	V50			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Calibration(Cars with DSTC)
VOLVO	A11	2006	V50			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2006	V50			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2006	V50			Driver Door Module(DDM)		X	X	X	X	X	
VOLVO	A11	2006	V50			Passenger Door Module(PDM)		X	X	X	X	X	
VOLVO	A11	2006	V50			Power Seat Module(PSM)		X	X	X	X	X	
VOLVO	A11	2006	V50			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2006	V50			Trailer Module(TRM)		X	X	X	X		
VOLVO	A11	2006	V50			Accessory Electronic Module(AEM)		X	X	X	X	X	
VOLVO	A11	2006	V50			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2006	V50			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	2006	V50			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2006	V50			AM/FM Tuner Module(AFM)		X	X	X	X		

VOLVO	A11	2006	V50			Global Positioning System Module(GPS)		X	X	X	X		
VOLVO	A11	2006	V50			Infotainment Control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2006	V50			Media Player Module(MPM)		X	X	X	X	X	
VOLVO	A11	2006	V50			Multimedia Module(MMM)		X	X	X	X	X	
VOLVO	A11	2006	V50			Traffic Message Channel Module(TMC)		X	X	X	X		
VOLVO	A11	2006	V50			Audio Module(AUD)		X	X	X			
VOLVO	A11	2007	V50			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2007	V50		B4164S3	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2007	V50		B4184S11	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2007	V50		B5244S4	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2007	V50		B5244S5	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2007	V50		B5254T3	Engine Control Module(ECM)		X	X	X	X	X	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2007	V50		D4164T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
VOLVO	A11	2007	V50		D4204T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
VOLVO	A11	2007	V50		D4204T2	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
VOLVO	A11	2007	V50		D4164T	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2007	V50		D4204T	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2007	V50		D4204T2	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2007	V50		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2007	V50		M66AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2007	V50		AW50/51AWD	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2007	V50		AW55-50/51SN	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2007	V50			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Calibration(Cars with DSTC)
VOLVO	A11	2007	V50			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2007	V50			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2007	V50			Driver Door Module(DDM)		X	X	X	X	X	
VOLVO	A11	2007	V50			Passenger Door Module(PDM)		X	X	X	X	X	
VOLVO	A11	2007	V50			Power Seat Module(PSM)		X	X	X	X	X	
VOLVO	A11	2007	V50			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2007	V50			Trailer Module(TRM)		X	X	X	X		
VOLVO	A11	2007	V50			Accessory Electronic Module(AEM)		X	X	X	X	X	
VOLVO	A11	2007	V50			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2007	V50			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	2007	V50			Phone Module(PHM)		X	X	X	X		

VOLVO	A11	2007	V50			AM/FM Tuner Module(AFM)		X	X	X	X		
VOLVO	A11	2007	V50			Global Positioning System Module(GPS)		X	X	X	X		
VOLVO	A11	2007	V50			Infotainment Control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2007	V50			Media Player Module(MPM)		X	X	X	X	X	
VOLVO	A11	2007	V50			Multimedia Module(MMM)		X	X	X	X	X	
VOLVO	A11	2007	V50			Traffic Message Channel Module(TMC)		X	X	X	X		
VOLVO	A11	2007	V50			Audio Module(AUD)		X	X	X			
VOLVO	A11	2008	V50			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2008	V50		B4164S3	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2008	V50		B4184S11	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2008	V50		B5244S4	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2008	V50		B5244S5	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2008	V50		B5254T3	Engine Control Module(ECM)		X	X	X	X	X	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2008	V50		D4164T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
VOLVO	A11	2008	V50		D4204T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
VOLVO	A11	2008	V50		D4204T2	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
VOLVO	A11	2008	V50		D4164T	Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2008	V50		D4204T			X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2008	V50		D4204T2			X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2008	V50		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2008	V50		M66AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2008	V50		AW50/51AWD	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2008	V50		AW55-50/51SN	Differential Electronic Module (DEM)		X	X	X	X		
VOLVO	A11	2008	V50			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Calibration(Cars with DSTC)
VOLVO	A11	2008	V50			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2008	V50			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2008	V50			Driver Door Module(DDM)		X	X	X	X	X	
VOLVO	A11	2008	V50			Passenger Door Module(PDM)		X	X	X	X	X	
VOLVO	A11	2008	V50			Power Seat Module(PSM)		X	X	X	X	X	
VOLVO	A11	2008	V50			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2008	V50			Trailer Module(TRM)		X	X	X	X		
VOLVO	A11	2008	V50			Accessory Electronic Module(AEM)		X	X	X	X	X	
VOLVO	A11	2008	V50			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2008	V50			Driver Information Module(DIM)		X	X	X	X	X	

VOLVO	A11	2008	V50			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2008	V50			AM/FM Tuner Module(AFM)		X	X	X	X		
VOLVO	A11	2008	V50			Global Positioning System Module(GPS)		X	X	X	X		
VOLVO	A11	2008	V50			Infotainment Control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2008	V50			Media Player Module(MPM)		X	X	X	X	X	
VOLVO	A11	2008	V50			Multimedia Module(MMM)		X	X	X	X	X	
VOLVO	A11	2008	V50			Traffic Message Channel Module(TMC)		X	X	X	X		
VOLVO	A11	2008	V50			Audio Module(AUD)		X	X	X			
VOLVO	A11	2009	V50			Subwoofer Module(SUB)		X	X	X			
VOLVO	A11	2009	V50		MPS6	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2010	V50			Subwoofer Module(SUB)		X	X	X			
VOLVO	A11	2010	V50		MPS6	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2011	V50			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2011	V50		B4164S3	Engine Control Module(ECM)		X	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
VOLVO	A11	2011	V50		B4204S3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	V50		B5254T7	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	V50		D4162T	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2011	V50		D4164T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
VOLVO	A11	2011	V50		D5204T	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	V50		D5204T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	V50			Additive Dosing Module(ADM)		X	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2011	V50			Accessory Electronic Module(AEM)		X	X	X	X	X	1.Reading off the configuration
VOLVO	A11	2011	V50			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	2011	V50			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2011	V50			Steering Wheel Module(SWM)		X	X	X	X	X	
VOLVO	A11	2011	V50			Infotainment Control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2011	V50			Integrated Audio Module(IAM)		X	X	X	X	X	
VOLVO	A11	2011	V50			Keyless vehicle module (KVM)		X	X	X	X	X	
VOLVO	A11	2011	V50			Multimedia module (MMM)		X	X	X	X	X	
VOLVO	A11	2011	V50			Park Assist Module (PAM)		X	X	X	X		
VOLVO	A11	2011	V50			Subwoofer Module(SUB)		X	X	X			
VOLVO	A11	2011	V50			Audio Module(AUD)		X	X	X			
VOLVO	A11	2011	V50			Headlamp Control Module(HCM)		X	X	X	X	X	
VOLVO	A11	2011	V50			Parking Assistance Camera(PAC)		X	X	X	X		
VOLVO	A11	2011	V50			Accessory USB Unit (AUU)		X	X	X	X		
VOLVO	A11	2011	V50			Remote Digital Audio Receiver (RDAR)		X	X	X	X	X	
VOLVO	A11	2011	V50		MPS6	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2011	V50		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2011	V50			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	2011	V50			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2011	V50			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	2011	V50			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2011	V50			Driver Door Module(DDM)		X	X	X	X	X	
VOLVO	A11	2011	V50			Passenger Door Module(PDM)		X	X	X	X	X	

VOLVO	A11	2011	V50			Power Seat Module(PSM)		X	X	X	X	X	
VOLVO	A11	2011	V50			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2011	V50			Trailer Module(TRM)		X	X	X	X		
VOLVO	A11	2011	V50			Electric Power Steering (EPS)		X	X	X	X		
VOLVO	A11	1997	V70(-00)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	1997	V70(-00)		B5202FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	V70(-00)		B5204T2	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	V70(-00)		B5204T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	V70(-00)		B5234FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	V70(-00)		B5234T2	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	V70(-00)		B5234T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	V70(-00)		B5252FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	V70(-00)		B5254FS M4.4	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	V70(-00)		B5254T	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	V70(-00)		D5252T MSA 15.7	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1997	V70(-00)		AW42AWD	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	1997	V70(-00)		AW50-42	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	1997	V70(-00)			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	1997	V70(-00)			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	1997	V70(-00)			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	1997	V70(-00)			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	1997	V70(-00)			Road Traffic Information Module(RTI)		X	X	X	X		
VOLVO	A11	1997	V70(-00)			Immobilizer		X	X	X	X		
VOLVO	A11	1998	V70(-00)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	1998	V70(-00)		B5202FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	V70(-00)		B5204T2	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	V70(-00)		B5204T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	V70(-00)		B5234FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	V70(-00)		B5234T2	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	V70(-00)		B5234T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	V70(-00)		B5234T4	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	V70(-00)		B5234T6	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	V70(-00)		B5234T7	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	V70(-00)		B5252FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	V70(-00)		B5254FS M4.4	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	V70(-00)		B5254T	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	V70(-00)		D5252T MSA 15.7	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	V70(-00)		GB5252S	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	1998	V70(-00)		AW42AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	1998	V70(-00)		AW50-42	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	1998	V70(-00)			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	1998	V70(-00)			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	1998	V70(-00)			Supplemental Restraint System Module(SRS)		X	X	X	X		

VOLVO	A11	1998	V70(-00)			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	1998	V70(-00)			Road Traffic Information Module(RTI)		X	X	X	X		
VOLVO	A11	1998	V70(-00)			Immobilizer		X	X	X	X		
VOLVO	A11	1999	V70(-00)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	1999	V70(-00)		B5202FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	V70(-00)		B5204T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	V70(-00)		B5204T4	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	V70(-00)		B5234FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	V70(-00)		B5234T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	V70(-00)		B5234T7	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	V70(-00)		B5234T8	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	V70(-00)		B5252FS	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	V70(-00)		B5254S DENSO	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	V70(-00)		B5254T	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	V70(-00)		D5252T MSA 15.7	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	V70(-00)		D5252T MSA 15.8	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	V70(-00)		GB5252S	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	V70(-00)		GB5252S2	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	V70(-00)		AW42AWD	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	1999	V70(-00)		AW50-42	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	1999	V70(-00)			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	1999	V70(-00)			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	1999	V70(-00)			Combustion Preheater Module(CPM)		X	X	X	X		
VOLVO	A11	1999	V70(-00)			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	1999	V70(-00)			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	1999	V70(-00)			Power Seat Module,Right(PSR)		X	X	X	X	X	
VOLVO	A11	1999	V70(-00)			Road Traffic Information Module(RTI)		X	X	X	X		
VOLVO	A11	1999	V70(-00)			Immobilizer		X	X	X	X	X	
VOLVO	A11	1999	V70(-00)			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2000	V70(-00)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2000	V70(-00)		B5204T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2000	V70(-00)		B5204T4	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2000	V70(-00)		B5234T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2000	V70(-00)		B5234T7	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2000	V70(-00)		B5244S	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2000	V70(-00)		B5244S2	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2000	V70(-00)		B5244SG	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2000	V70(-00)		B5244T	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2000	V70(-00)		B5244T2	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2000	V70(-00)		D5252T MSA 15.8	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2000	V70(-00)		AW42AWD	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2000	V70(-00)		AW50-42	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2000	V70(-00)		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2000	V70(-00)		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2000	V70(-00)			Anti-brake System Module(ABS/BCM)		X	X	X	X		

VOLVO	A11	2000	V70(-00)			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2000	V70(-00)			Combustion Preheater Module(CPM)		X	X	X	X		
VOLVO	A11	2000	V70(-00)			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2000	V70(-00)			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	2000	V70(-00)			Power Seat Module,Right(PSR)		X	X	X	X	X	
VOLVO	A11	2000	V70(-00)			Road Traffic Information Module(RTI)		X	X	X	X		
VOLVO	A11	2000	V70(-00)			Immobilizer		X	X	X	X	X	
VOLVO	A11	2000	V70(-00)			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2000	V70(00-)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2000	V70(00-)		B5204T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2000	V70(00-)		B5234T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2000	V70(00-)		B5244T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2000	V70(00-)		D5252T MSA 15.8	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2000	V70(00-)		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2000	V70(00-)		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2000	V70(00-)		AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2000	V70(00-)			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	2000	V70(00-)			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2000	V70(00-)			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2000	V70(00-)			Combustion Preheater Module(CPM)		X	X	X	X		
VOLVO	A11	2000	V70(00-)			Driver Door Module(DDM)		X	X	X	X	X	
VOLVO	A11	2000	V70(00-)			Passenger Door Module(PDM)		X	X	X	X	X	
VOLVO	A11	2000	V70(00-)			Power Seat Module(PSM)		X	X	X	X	X	
VOLVO	A11	2000	V70(00-)			Supplemental Restraint System Module(SRS)		X	X	X			1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2000	V70(00-)			Accessory Electronic Module(AEM)		X	X	X	X		
VOLVO	A11	2000	V70(00-)			Audio Module(AUM)		X	X	X	X		
VOLVO	A11	2000	V70(00-)			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2000	V70(00-)			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	2000	V70(00-)			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2000	V70(00-)			Rear Electronic Module(REM)		X	X	X	X	X	
VOLVO	A11	2000	V70(00-)			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2000	V70(00-)			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2000	V70(00-)			Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2001	V70(00-)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2001	V70(00-)		B5204T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2001	V70(00-)		B5234T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2001	V70(00-)		B5234T7	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2001	V70(00-)		B5244S	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2001	V70(00-)		B5244S2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2001	V70(00-)		B5244SG	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2001	V70(00-)		B5244T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2001	V70(00-)		D5244T	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2001	V70(00-)		D5252T MSA 15.8	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2001	V70(00-)		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	

VOLVO	A11	2001	V70(00-)		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2001	V70(00-)		AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2001	V70(00-)			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	2001	V70(00-)			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2001	V70(00-)			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2001	V70(00-)			Combustion Preheater Module(CPM)		X	X	X	X		
VOLVO	A11	2001	V70(00-)			Driver Door Module(DDM)		X	X	X	X	X	
VOLVO	A11	2001	V70(00-)			Passenger Door Module(PDM)		X	X	X	X	X	
VOLVO	A11	2001	V70(00-)			Power Seat Module(PSM)		X	X	X	X	X	
VOLVO	A11	2001	V70(00-)			Supplemental Restraint System Module(SRS)		X	X	X			1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2001	V70(00-)			Accessory Electronic Module(AEM)		X	X	X	X		
VOLVO	A11	2001	V70(00-)			Audio Module(AUM)		X	X	X	X		
VOLVO	A11	2001	V70(00-)			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2001	V70(00-)			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	2001	V70(00-)			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2001	V70(00-)			Rear Electronic Module(REM)		X	X	X	X	X	
VOLVO	A11	2001	V70(00-)			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2001	V70(00-)			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2001	V70(00-)			Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2002	V70(00-)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2002	V70(00-)		B5204T5	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2002	V70(00-)		B5234T3	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2002	V70(00-)		B5234T7	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2002	V70(00-)		B5244S	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2002	V70(00-)		B5244S2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2002	V70(00-)		B5244SG	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2002	V70(00-)		B5244SG2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2002	V70(00-)		B5244T3	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2002	V70(00-)		D5244T	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2002	V70(00-)		D5244T2	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2002	V70(00-)		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2002	V70(00-)		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2002	V70(00-)		AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2002	V70(00-)			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	2002	V70(00-)			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2002	V70(00-)			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2002	V70(00-)			Combustion Preheater Module(CPM)		X	X	X	X		
VOLVO	A11	2002	V70(00-)			Driver Door Module(DDM)		X	X	X	X		
VOLVO	A11	2002	V70(00-)			Passenger Door Module(PDM)		X	X	X	X		
VOLVO	A11	2002	V70(00-)			Power Seat Module(PSM)		X	X	X	X		
VOLVO	A11	2002	V70(00-)			Supplemental Restraint System Module(SRS)		X	X	X			1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2002	V70(00-)			Accessory Electronic Module(AEM)		X	X	X	X		
VOLVO	A11	2002	V70(00-)			Audio Module(AUM)		X	X	X	X		

VOLVO	A11	2002	V70(00-)		Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2002	V70(00-)		Driver Information Module(DIM)		X	X	X	X		
VOLVO	A11	2002	V70(00-)		Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2002	V70(00-)		Rear Electronic Module(REM)		X	X	X	X		
VOLVO	A11	2002	V70(00-)		Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2002	V70(00-)		Upper Electronic Module(UEM)		X	X	X	X		
VOLVO	A11	2002	V70(00-)		Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)		Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2003	V70(00-)	B5204T5	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)	B5234T3	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)	B5234T7	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)	B5244S	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)	B5244S2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)	B5244SG	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)	B5244SG2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)	B5244T3	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)	B5254T2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)	D5244T	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2003	V70(00-)	D5244T2	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2003	V70(00-)	AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)	AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)	AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)		Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)		Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2003	V70(00-)		Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)		Combustion Preheater Module(CPM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)		Driver Door Module(DDM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)		Passenger Door Module(PDM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)		Power Seat Module(PSM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)		Supplemental Restraint System Module(SRS)		X	X	X			1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2003	V70(00-)		Accessory Electronic Module(AEM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)		Audio Module(AUM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)		Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2003	V70(00-)		Driver Information Module(DIM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)		Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)		Rear Electronic Module(REM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)		Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2003	V70(00-)		Upper Electronic Module(UEM)		X	X	X	X		
VOLVO	A11	2003	V70(00-)		Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)		Resetting the service reminder indicator(SRI)							X

VOLVO	A11	2004	V70(00-)		B5204T5	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)		B5234T3	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)		B5234T7	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)		B5244S	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)		B5244S2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)		B5244SG	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)		B5244SG2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)		B5254T2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)		B5254T4	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)		D5244T	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2004	V70(00-)		D5244T2	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2004	V70(00-)		D5244T3	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2004	V70(00-)		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)		AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)		M66AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2004	V70(00-)			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)			Combustion Preheater Module(CPM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)			Driver Door Module(DDM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)			Passenger Door Module(PDM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)			Power Seat Module(PSM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)			Supplemental Restraint System Module(SRS)		X	X	X			1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2004	V70(00-)			Accessory Electronic Module(AEM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)			Audio Module(AUM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2004	V70(00-)			Driver Information Module(DIM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)			Rear Electronic Module(REM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2004	V70(00-)			Upper Electronic Module(UEM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)			Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2004	V70(00-)			Suspension Module(SUM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2005	V70(00-)		B5204T5	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)		B5244S	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)		B5244S2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)		B5244SG	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)		B5244SG2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)		B5244T4	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)		B5244T5	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)		B5254T2	Engine Control Module(ECM)		X	X	X	X		

VOLVO	A11	2005	V70(00-)		B5254T4	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)		D5244T	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2005	V70(00-)		D5244T2	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2005	V70(00-)		D5244T3	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2005	V70(00-)		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)		AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)		M66AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2005	V70(00-)			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)			Combustion Preheater Module(CPM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)			Driver Door Module(DDM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)			Passenger Door Module(PDM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)			Power Seat Module(PSM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)			Supplemental Restraint System Module(SRS)		X	X	X			1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2005	V70(00-)			Accessory Electronic Module(AEM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)			Audio Module(AUM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2005	V70(00-)			Driver Information Module(DIM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)			Rear Electronic Module(REM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2005	V70(00-)			Upper Electronic Module(UEM)		X	X	X	X		
VOLVO	A11	2005	V70(00-)			Suspension Module(SUM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2006	V70(00-)		B5204T5	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)		B5244S	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)		B5244S2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)		B5244SG	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)		B5244SG2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)		B5244T4	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)		B5244T5	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)		B5254T2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)		B5254T4	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)		D5244T	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2006	V70(00-)		D5244T2	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2006	V70(00-)		D5244T3	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2006	V70(00-)		D5244T4	Fuel system/combined system		X	X	X	X	X	1.Resetting counter oil 2.Adaptation of throttle module 3.Combustion Of SootParticles 4.Resetting Counter Particle Filter
VOLVO	A11	2006	V70(00-)		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X		

VOLVO	A11	2006	V70(00-)		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)		AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)		M66AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2006	V70(00-)			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)			Combustion Preheater Module(CPM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)			Driver Door Module(DDM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)			Passenger Door Module(PDM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)			Power Seat Module(PSM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)			Supplemental Restraint System Module(SRS)		X	X	X			1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2006	V70(00-)			Accessory Electronic Module(AEM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)			Audio Module(AUM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2006	V70(00-)			Driver Information Module(DIM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)			Rear Electronic Module(REM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2006	V70(00-)			Upper Electronic Module(UEM)		X	X	X	X		
VOLVO	A11	2006	V70(00-)			Suspension Module(SUM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2007	V70(00-)		B5204T5	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)		B5244S	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)		B5244S2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)		B5244SG	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)		B5244SG2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)		B5244T4	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)		B5244T5	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)		B5254T2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)		B5254T4	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)		D5244T	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2007	V70(00-)		D5244T2	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2007	V70(00-)		D5244T3	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2007	V70(00-)		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)		AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)		M66AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2007	V70(00-)			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)			Combustion Preheater Module(CPM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)			Driver Door Module(DDM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)			Passenger Door Module(PDM)		X	X	X	X		

VOLVO	A11	2007	V70(00-)			Power Seat Module(PSM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)			Supplemental Restraint System Module(SRS)		X	X	X			1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2007	V70(00-)			Accessory Electronic Module(AEM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)			Audio Module(AUM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2007	V70(00-)			Driver Information Module(DIM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)			Rear Electronic Module(REM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2007	V70(00-)			Upper Electronic Module(UEM)		X	X	X	X		
VOLVO	A11	2007	V70(00-)			Suspension Module(SUM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2008	V70(00-)		B5204T5	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)		B5244S	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)		B5244S2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)		B5244SG	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)		B5244SG2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)		B5244T4	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)		B5244T5	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)		B5254T2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)		B5254T4	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)		D5244T	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2008	V70(00-)		D5244T2	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2008	V70(00-)		D5244T3	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2008	V70(00-)		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)		AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)		M66AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2008	V70(00-)			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)			Combustion Preheater Module(CPM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)			Driver Door Module(DDM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)			Passenger Door Module(PDM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)			Power Seat Module(PSM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)			Supplemental Restraint System Module(SRS)		X	X	X			1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2008	V70(00-)			Accessory Electronic Module(AEM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)			Audio Module(AUM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2008	V70(00-)			Driver Information Module(DIM)		X	X	X	X		

VOLVO	A11	2008	V70(00-)			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)			Rear Electronic Module(REM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2008	V70(00-)			Upper Electronic Module(UEM)		X	X	X	X		
VOLVO	A11	2008	V70(00-)			Suspension Module(SUM)		X	X	X	X		
VOLVO	A11	2008(08-)	V70(00-)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2008(08-)	V70(00-)		B4204S3	Engine Control Module(ECM)		X	X	X	X		Resetting adaptation
VOLVO	A11	2008(08-)	V70(00-)		B4204S4	Engine Control Module(ECM)		X	X	X	X		Resetting adaptation
VOLVO	A11	2008(08-)	V70(00-)		B5254T6	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of throttle unit 2.Checking the fuel pump(FP)
VOLVO	A11	2008(08-)	V70(00-)		B6304T2	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting the adaptation values
VOLVO	A11	2008(08-)	V70(00-)		B6324S	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting the adaptation values
VOLVO	A11	2008(08-)	V70(00-)		D5244T4	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting counter particle filter
VOLVO	A11	2008(08-)	V70(00-)		D5244T5	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting counter particle filter
VOLVO	A11	2008(08-)	V70(00-)		D4204T	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2008(08-)	V70(00-)			Suspension Module(SUM)		X	X	X	X		
VOLVO	A11	2008(08-)	V70(00-)			Keyless Vehicle Module(KVM)		X	X	X	X		
VOLVO	A11	2008(08-)	V70(00-)			Audio model(AUD)		X	X	X			
VOLVO	A11	2008(08-)	V70(00-)			Power operated tailgate(POT)		X	X	X	X		
VOLVO	A11	2008(08-)	V70(00-)			Accessory USB Unit (AUU)		X	X	X			
VOLVO	A11	2008(08-)	V70(00-)			Bluetooth Phone Module (BPM)		X	X	X			
VOLVO	A11	2008(08-)	V70(00-)			Forward Sensing Module(FSM)		X	X	X	X		
VOLVO	A11	2008(08-)	V70(00-)			Parking Assistance Camera(PAC)		X	X	X	X		
VOLVO	A11	2008(08-)	V70(00-)			Driver Information Module(DIM)		X	X	X	X		Resetting the service reminder indicator
VOLVO	A11	2008(08-)	V70(00-)			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2008(08-)	V70(00-)		M66AWD	Differential Electronic Module(DEM)		X	X	X	X	X	
VOLVO	A11	2008(08-)	V70(00-)		TF-80SC AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2008(08-)	V70(00-)			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2008(08-)	V70(00-)			Park Brake Module(PBM)		X	X	X	X		Activation and service
VOLVO	A11	2008(08-)	V70(00-)			Brake Control Module (BCM)		X	X	X	X	X	
VOLVO	A11	2008(08-)	V70(00-)			Dirver Door Module(DDM)		X	X	X	X	X	
VOLVO	A11	2008(08-)	V70(00-)			Passenger Door Module(PDM)		X	X	X	X	X	
VOLVO	A11	2008(08-)	V70(00-)			Airbag (SRS)		X	X	X	X		
VOLVO	A11	2008(08-)	V70(00-)			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	2008(08-)	V70(00-)			Combustion Preheater Module(CPM)		X	X	X			
VOLVO	A11	2008(08-)	V70(00-)			Trailer Module(TRM)		X	X	X			
VOLVO	A11	2008(08-)	V70(00-)			Power Seat Module(PSM)		X	X	X	X	X	
VOLVO	A11	2008(08-)	V70(00-)			Headlamp Control Module (HCM)		X	X	X	X		Calibration of position sensor
VOLVO	A11	2008(08-)	V70(00-)			High level Display Front(HLDF)		X	X	X	X		Activation
VOLVO	A11	2008(08-)	V70(00-)			Integrated Audio Module(IAM)		X	X	X			
VOLVO	A11	2008(08-)	V70(00-)			Infotainment Control Module(ICM)		X	X	X	X	X	1.Checking MOST communication 2.Programming control module
VOLVO	A11	2008(08-)	V70(00-)			Multimedia module(MMM)		X	X	X			
VOLVO	A11	2008(08-)	V70(00-)			Park Assist Module (PAM)		X	X	X	X		Programming of Parking Assistance Module (PAM)
VOLVO	A11	2008(08-)	V70(00-)			Phone Module(PHM)		X	X	X	X		Reinstalling the reserve battery
VOLVO	A11	2008(08-)	V70(00-)			Remote Digital Audio Receiver (RDAR)		X	X	X			
VOLVO	A11	2008(08-)	V70(00-)			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		

VOLVO	A11	2009	V70(00-)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2009	V70(00-)		B5204T5	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)		B5244S	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)		B5244S2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)		B5244SG	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)		B5244SG2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)		B5244T4	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)		B5244T5	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)		B5254T2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)		B5254T4	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)		D5244T	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2009	V70(00-)		D5244T2	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2009	V70(00-)		D5244T3	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2009	V70(00-)		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)		AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)		M66AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2009	V70(00-)			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)			Combustion Preheater Module(CPM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)			Driver Door Module(DDM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)			Passenger Door Module(PDM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)			Power Seat Module(PSM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2009	V70(00-)			Power Operated Tailgate (POT)		X	X	X	X		
VOLVO	A11	2009	V70(00-)			Infotainment Control Module(ICM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)			Integrated Audio Module(IAM)		X	X	X			
VOLVO	A11	2009	V70(00-)			Accessory Electronic Module(AEM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)			Audio Module(AUM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2009	V70(00-)			Driver Information Module(DIM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)			Rear Electronic Module(REM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2009	V70(00-)			Upper Electronic Module(UEM)		X	X	X	X		
VOLVO	A11	2009	V70(00-)			Suspension Module(SUM)		X	X	X	X		
VOLVO	A11	2010	V70(00-)			Additive Dosing Module(ADM)		X	X	X	X		
VOLVO	A11	2010	V70(00-)		B4204T2	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2010	V70(00-)		D4164T	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2010	V70(00-)		B4204S3	Fuel System/ Combined System		X	X	X	X		

VOLVO	A11	2010	V70(00-)		D4204T	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2010	V70(00-)		B5254T6	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2010	V70(00-)		B6324S	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2010	V70(00-)		D5244T4	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2010	V70(00-)		D5244T5	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2010	V70(00-)		B4204S4	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2010	V70(00-)		B5254T8	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2010	V70(00-)		D5244T10	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2010	V70(00-)		B4204T6	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2010	V70(00-)		D5244T14	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2010	V70(00-)		B4204S7	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2010	V70(00-)		B5254T10	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2010	V70(00-)		B5254T11	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2010	V70(00-)		D5244T19	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2010	V70(00-)		B6304T2	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2010	V70(00-)			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2010	V70(00-)			Keyless vehicle module (KVM)		X	X	X	X		
VOLVO	A11	2010	V70(00-)			Audio Module(AUM)		X	X	X	X		
VOLVO	A11	2010	V70(00-)			Headlamp Control Module(HCM)		X	X	X	X		
VOLVO	A11	2010	V70(00-)			High level Display Front(HLDF)		X	X	X	X		
VOLVO	A11	2010	V70(00-)			Park Assist Module (PAM)		X	X	X	X		
VOLVO	A11	2010	V70(00-)			Power Operated Tailgate (POT)		X	X	X	X		
VOLVO	A11	2010	V70(00-)			Forward Sensing Module(FSM)		X	X	X	X		
VOLVO	A11	2010	V70(00-)			Parking Assistance Camera(PAC)		X	X	X	X		
VOLVO	A11	2010	V70(00-)			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2010	V70(00-)			Infotainment Control Module(ICM)		X	X	X	X		
VOLVO	A11	2010	V70(00-)			Driver Information Module(DIM)		X	X	X	X		
VOLVO	A11	2010	V70(00-)			Power Steering Control Module(PSCM)		X	X	X	X		
VOLVO	A11	2010	V70(00-)		MPS6	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2010	V70(00-)		M66AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2010	V70(00-)		TF-80SC AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2010	V70(00-)			Brake Control Module (BCM)		X	X	X	X		
VOLVO	A11	2010	V70(00-)			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2010	V70(00-)			Park Brake Module(PBM)		X	X	X	X		
VOLVO	A11	2010	V70(00-)			Driver Door Module(DDM)		X	X	X	X		
VOLVO	A11	2010	V70(00-)			Passenger Door Module(PDM)		X	X	X	X		
VOLVO	A11	2010	V70(00-)			Combustion Preheater Module(CPM)		X	X	X	X		
VOLVO	A11	2010	V70(00-)			Trailer Module (TRM)		X	X	X	X		
VOLVO	A11	2010	V70(00-)			Power Seat Module(PSM)		X	X	X	X		
VOLVO	A11	2010	V70(00-)			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2010	V70(00-)			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2011	V70(00-)			Additive Dosing Module(ADM)		X	X	X	X		
VOLVO	A11	2011	V70(00-)		B4204S3	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2011	V70(00-)		B4204S4	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2011	V70(00-)		B4204T6	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2011	V70(00-)		B4204T7	Fuel System/ Combined System		X	X	X	X	X	

VOLVO	A11	2011	V70(00-)		B5254T10	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2011	V70(00-)		B5254T11	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2011	V70(00-)		B6304T4	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2011	V70(00-)		B6324S5	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2011	V70(00-)		D4164T	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2011	V70(00-)		D5204T2	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2011	V70(00-)		D5244T10	Fuel System/ Combined System		X	X	X	X	X	
VOLVO	A11	2011	V70(00-)			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2011	V70(00-)			Keyless vehicle module (KVM)		X	X	X	X		
VOLVO	A11	2011	V70(00-)			Audio Module(AUM)		X	X	X	X		
VOLVO	A11	2011	V70(00-)			Headlamp Control Module(HCM)		X	X	X	X		
VOLVO	A11	2011	V70(00-)			High level Display Front(HLDF)		X	X	X	X		
VOLVO	A11	2011	V70(00-)			Park Assist Module (PAM)		X	X	X	X		
VOLVO	A11	2011	V70(00-)			Power Operated Tailgate (POT)		X	X	X	X		
VOLVO	A11	2011	V70(00-)			Forward Sensing Module(FSM)		X	X	X	X		
VOLVO	A11	2011	V70(00-)			Parking Assistance Camera(PAC)		X	X	X	X		
VOLVO	A11	2011	V70(00-)			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2011	V70(00-)			Infotainment Control Module(ICM)		X	X	X	X		
VOLVO	A11	2011	V70(00-)			Driver Information Module(DIM)		X	X	X	X		
VOLVO	A11	2011	V70(00-)			Power Steering Control Module(PSCM)		X	X	X	X		
VOLVO	A11	2011	V70(00-)		MPS6	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2011	V70(00-)		M66AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2011	V70(00-)		TF-80SC AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2011	V70(00-)			Brake Control Module (BCM)		X	X	X	X		
VOLVO	A11	2011	V70(00-)			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2011	V70(00-)			Park Brake Module(PBM)		X	X	X	X		
VOLVO	A11	2011	V70(00-)			Driver Door Module(DDM)		X	X	X	X		
VOLVO	A11	2011	V70(00-)			Passenger Door Module(PDM)		X	X	X	X		
VOLVO	A11	2011	V70(00-)			Combustion Preheater Module(CPM)		X	X	X	X		
VOLVO	A11	2011	V70(00-)			Trailer Module (TRM)		X	X	X	X		
VOLVO	A11	2011	V70(00-)			Power Seat Module(PSM)		X	X	X	X		
VOLVO	A11	2011	V70(00-)			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2011	V70(00-)			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	1998	V70XC(-00)			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	1998	V70XC(-00)		B5204T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	V70XC(-00)		B5254T	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	V70XC(-00)		AW42AWD	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	1998	V70XC(-00)			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	1998	V70XC(-00)			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	1998	V70XC(-00)			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	1998	V70XC(-00)			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	1998	V70XC(-00)			Road Traffic Information Module(RTI)		X	X	X	X	X	
VOLVO	A11	1998	V70XC(-00)			Immobilizer		X	X	X	X	X	
VOLVO	A11	1999	V70XC(-00)			Resetting the service reminder indicator(SRI)							X

VOLVO	A11	1999	V70XC(-00)	B5204T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	V70XC(-00)	B5254T	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	V70XC(-00)	AW42AWD	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	1999	V70XC(-00)		Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	1999	V70XC(-00)		Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	1999	V70XC(-00)		Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	1999	V70XC(-00)		Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	1999	V70XC(-00)		Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	1999	V70XC(-00)		Power Seat Module,Right(PSR)		X	X	X	X	X	
VOLVO	A11	1999	V70XC(-00)		Road Traffic Information Module(RTI)		X	X	X	X	X	
VOLVO	A11	1999	V70XC(-00)		Immobilizer		X	X	X	X	X	
VOLVO	A11	1999	V70XC(-00)		Lock and alarm		X	X	X	X	X	
VOLVO	A11	2000	V70XC(-00)		Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2000	V70XC(-00)	B5244T	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2000	V70XC(-00)	AW42AWD	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2000	V70XC(-00)		Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	2000	V70XC(-00)		Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2000	V70XC(-00)		Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2000	V70XC(-00)		Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2000	V70XC(-00)		Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	2000	V70XC(-00)		Power Seat Module,Right(PSR)		X	X	X	X	X	
VOLVO	A11	2000	V70XC(-00)		Road Traffic Information Module(RTI)		X	X	X	X	X	
VOLVO	A11	2000	V70XC(-00)		Immobilizer		X	X	X	X	X	
VOLVO	A11	2000	V70XC(-00)		Lock and alarm		X	X	X	X	X	
VOLVO	A11	2001	V70XC(0 1-)/XC70		Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2001	V70XC(0 1-)/XC70	B5234T7	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2001	V70XC(0 1-)/XC70	B5244T3	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2001	V70XC(0 1-)/XC70	AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2001	V70XC(0 1-)/XC70	AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2001	V70XC(0 1-)/XC70		Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2001	V70XC(0 1-)/XC70		Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		

VOLVO	A11	2001	V70XC(0 1-)/XC70			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2001	V70XC(0 1-)/XC70			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2001	V70XC(0 1-)/XC70			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2001	V70XC(0 1-)/XC70			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2001	V70XC(0 1-)/XC70			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2001	V70XC(0 1-)/XC70			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2001	V70XC(0 1-)/XC70			Accessory Electronic Module(AEM)		X	X	X	X		
VOLVO	A11	2001	V70XC(0 1-)/XC70			Audio Module(AUM)		X	X	X			
VOLVO	A11	2001	V70XC(0 1-)/XC70			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2001	V70XC(0 1-)/XC70			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	A11	2001	V70XC(0 1-)/XC70			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2001	V70XC(0 1-)/XC70			Rear Electronic Module(REM)		X	X	X	X		
VOLVO	A11	2001	V70XC(0 1-)/XC70			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2001	V70XC(0 1-)/XC70			Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2001	V70XC(0 1-)/XC70			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2002	V70XC(0 1-)/XC70			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2002	V70XC(0 1-)/XC70		B5234T7	Engine Control Module(ECM)		X	X	X	X		

VOLVO	A11	2002	V70XC(0 1-)/XC70		B5244T3	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2002	V70XC(0 1-)/XC70		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2002	V70XC(0 1-)/XC70		AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2002	V70XC(0 1-)/XC70			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2002	V70XC(0 1-)/XC70			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2002	V70XC(0 1-)/XC70			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2002	V70XC(0 1-)/XC70			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2002	V70XC(0 1-)/XC70			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2002	V70XC(0 1-)/XC70			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2002	V70XC(0 1-)/XC70			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2002	V70XC(0 1-)/XC70			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2002	V70XC(0 1-)/XC70			Accessory Electronic Module(AEM)		X	X	X	X		
VOLVO	A11	2002	V70XC(0 1-)/XC70			Audio Module(AUM)		X	X	X			
VOLVO	A11	2002	V70XC(0 1-)/XC70			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2002	V70XC(0 1-)/XC70			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	A11	2002	V70XC(0 1-)/XC70			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2002	V70XC(0 1-)/XC70			Rear Electronic Module(REM)		X	X	X	X		

VOLVO	A11	2002	V70XC(0 1-)/XC70			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2002	V70XC(0 1-)/XC70			Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2002	V70XC(0 1-)/XC70			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2003	V70XC(0 1-)/XC70			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2003	V70XC(0 1-)/XC70		B5234T7	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2003	V70XC(0 1-)/XC70		B5254T2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2003	V70XC(0 1-)/XC70		D5244T	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2003	V70XC(0 1-)/XC70		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2003	V70XC(0 1-)/XC70		AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2003	V70XC(0 1-)/XC70			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2003	V70XC(0 1-)/XC70			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2003	V70XC(0 1-)/XC70			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2003	V70XC(0 1-)/XC70			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2003	V70XC(0 1-)/XC70			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2003	V70XC(0 1-)/XC70			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2003	V70XC(0 1-)/XC70			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2003	V70XC(0 1-)/XC70			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)

VOLVO	A11	2003	V70XC(0 1-)/XC70			Accessory Electronic Module(AEM)		X	X	X	X		
VOLVO	A11	2003	V70XC(0 1-)/XC70			Audio Module(AUM)		X	X	X			
VOLVO	A11	2003	V70XC(0 1-)/XC70			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2003	V70XC(0 1-)/XC70			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	A11	2003	V70XC(0 1-)/XC70			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2003	V70XC(0 1-)/XC70			Rear Electronic Module(REM)		X	X	X	X		
VOLVO	A11	2003	V70XC(0 1-)/XC70			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2003	V70XC(0 1-)/XC70			Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2003	V70XC(0 1-)/XC70			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2004	V70XC(0 1-)/XC70			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2004	V70XC(0 1-)/XC70		B5234T7	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2004	V70XC(0 1-)/XC70		B5254T2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2004	V70XC(0 1-)/XC70		D5244T	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2004	V70XC(0 1-)/XC70		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2004	V70XC(0 1-)/XC70		AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2004	V70XC(0 1-)/XC70			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2004	V70XC(0 1-)/XC70			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		

VOLVO	A11	2004	V70XC(0 1-)/XC70			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2004	V70XC(0 1-)/XC70			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2004	V70XC(0 1-)/XC70			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2004	V70XC(0 1-)/XC70			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2004	V70XC(0 1-)/XC70			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2004	V70XC(0 1-)/XC70			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2004	V70XC(0 1-)/XC70			Accessory Electronic Module(AEM)		X	X	X	X		
VOLVO	A11	2004	V70XC(0 1-)/XC70			Audio Module(AUM)		X	X	X			
VOLVO	A11	2004	V70XC(0 1-)/XC70			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2004	V70XC(0 1-)/XC70			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	A11	2004	V70XC(0 1-)/XC70			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2004	V70XC(0 1-)/XC70			Rear Electronic Module(REM)		X	X	X	X		
VOLVO	A11	2004	V70XC(0 1-)/XC70			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2004	V70XC(0 1-)/XC70			Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2004	V70XC(0 1-)/XC70			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2005	V70XC(0 1-)/XC70			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2005	V70XC(0 1-)/XC70		B5244T4	Engine Control Module(ECM)		X	X	X	X		

VOLVO	A11	2005	V70XC(0 1-)/XC70		B5254T2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2005	V70XC(0 1-)/XC70		D5244T	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2005	V70XC(0 1-)/XC70		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2005	V70XC(0 1-)/XC70		AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2005	V70XC(0 1-)/XC70		M66AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2005	V70XC(0 1-)/XC70			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2005	V70XC(0 1-)/XC70			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2005	V70XC(0 1-)/XC70			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2005	V70XC(0 1-)/XC70			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2005	V70XC(0 1-)/XC70			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2005	V70XC(0 1-)/XC70			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2005	V70XC(0 1-)/XC70			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2005	V70XC(0 1-)/XC70			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2005	V70XC(0 1-)/XC70			Accessory Electronic Module(AEM)		X	X	X	X		
VOLVO	A11	2005	V70XC(0 1-)/XC70			Audio Module(AUM)		X	X	X			
VOLVO	A11	2005	V70XC(0 1-)/XC70			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2005	V70XC(0 1-)/XC70			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)

VOLVO	A11	2005	V70XC(0 1-)/XC70			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2005	V70XC(0 1-)/XC70			Rear Electronic Module(REM)		X	X	X	X		
VOLVO	A11	2005	V70XC(0 1-)/XC70			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2005	V70XC(0 1-)/XC70			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2006	V70XC(0 1-)/XC70			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2006	V70XC(0 1-)/XC70		B5244T4	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2006	V70XC(0 1-)/XC70		B5254T2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2006	V70XC(0 1-)/XC70		D5244T	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2006	V70XC(0 1-)/XC70		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2006	V70XC(0 1-)/XC70		AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2006	V70XC(0 1-)/XC70		M66AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2006	V70XC(0 1-)/XC70			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2006	V70XC(0 1-)/XC70			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2006	V70XC(0 1-)/XC70			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2006	V70XC(0 1-)/XC70			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2006	V70XC(0 1-)/XC70			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2006	V70XC(0 1-)/XC70			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position

VOLVO	A11	2006	V70XC(0 1-)/XC70			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2006	V70XC(0 1-)/XC70			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2006	V70XC(0 1-)/XC70			Accessory Electronic Module(AEM)		X	X	X	X		
VOLVO	A11	2006	V70XC(0 1-)/XC70			Audio Module(AUM)		X	X	X			
VOLVO	A11	2006	V70XC(0 1-)/XC70			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2006	V70XC(0 1-)/XC70			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	A11	2006	V70XC(0 1-)/XC70			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2006	V70XC(0 1-)/XC70			Rear Electronic Module(REM)		X	X	X	X		
VOLVO	A11	2006	V70XC(0 1-)/XC70			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2006	V70XC(0 1-)/XC70			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2007	V70XC(0 1-)/XC70			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2007	V70XC(0 1-)/XC70		B5244T4	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2007	V70XC(0 1-)/XC70		B5254T2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2007	V70XC(0 1-)/XC70		D5244T	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2007	V70XC(0 1-)/XC70		D5244T4	Fuel system/combined system		X	X	X	X		1.Resetting counter oil 2.Adaptation of throttle module 3.Combustion Of SootParticles 4.Resetting Counter Particle Filter"
VOLVO	A11	2007	V70XC(0 1-)/XC70		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change

VOLVO	A11	2007	V70XC(0 1-)/XC70		AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2007	V70XC(0 1-)/XC70		M66AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2007	V70XC(0 1-)/XC70			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2007	V70XC(0 1-)/XC70			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2007	V70XC(0 1-)/XC70			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2007	V70XC(0 1-)/XC70			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2007	V70XC(0 1-)/XC70			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2007	V70XC(0 1-)/XC70			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2007	V70XC(0 1-)/XC70			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2007	V70XC(0 1-)/XC70			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2007	V70XC(0 1-)/XC70			Accessory Electronic Module(AEM)		X	X	X	X		
VOLVO	A11	2007	V70XC(0 1-)/XC70			Audio Module(AUM)		X	X	X			
VOLVO	A11	2007	V70XC(0 1-)/XC70			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2007	V70XC(0 1-)/XC70			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	A11	2007	V70XC(0 1-)/XC70			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2007	V70XC(0 1-)/XC70			Rear Electronic Module(REM)		X	X	X	X		
VOLVO	A11	2007	V70XC(0 1-)/XC70			Road Traffic Information Module(RTI)		X	X	X			

VOLVO	A11	2007	V70XC(0 1-)/XC70			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2008	V70XC(0 1-)/XC70			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2008	V70XC(0 1-)/XC70		B5244T4	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2008	V70XC(0 1-)/XC70		B5254T2	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2008	V70XC(0 1-)/XC70		D5244T	Fuel system/combined system		X	X	X	X		
VOLVO	A11	2008	V70XC(0 1-)/XC70		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2008	V70XC(0 1-)/XC70		AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2008	V70XC(0 1-)/XC70		M66AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2008	V70XC(0 1-)/XC70			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2008	V70XC(0 1-)/XC70			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2008	V70XC(0 1-)/XC70			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2008	V70XC(0 1-)/XC70			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2008	V70XC(0 1-)/XC70			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2008	V70XC(0 1-)/XC70			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2008	V70XC(0 1-)/XC70			Power Seat Module(PSM)		X	X	X	X	X	1.Programming the remote control setting
VOLVO	A11	2008	V70XC(0 1-)/XC70			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2008	V70XC(0 1-)/XC70			Accessory Electronic Module(AEM)		X	X	X	X		

VOLVO	A11	2008	V70XC(0 1-)/XC70			Audio Module(AUM)		X	X	X			
VOLVO	A11	2008	V70XC(0 1-)/XC70			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2008	V70XC(0 1-)/XC70			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
VOLVO	A11	2008	V70XC(0 1-)/XC70			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2008	V70XC(0 1-)/XC70			Rear Electronic Module(REM)		X	X	X	X		
VOLVO	A11	2008	V70XC(0 1-)/XC70			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2008	V70XC(0 1-)/XC70			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2009	V70XC(0 1-)/XC70			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2009	V70XC(0 1-)/XC70		B6304T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2009	V70XC(0 1-)/XC70		B6324S	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2009	V70XC(0 1-)/XC70		D5244T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2009	V70XC(0 1-)/XC70		D5244T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2009	V70XC(0 1-)/XC70		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2009	V70XC(0 1-)/XC70			Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2009	V70XC(0 1-)/XC70			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	2009	V70XC(0 1-)/XC70			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2009	V70XC(0 1-)/XC70			Climate Control Module(CCM)		X	X	X	X	X	

VOLVO	A11	2009	V70XC(0 1-)/XC70			Combustion Preheater Module(CPM)		X	X	X	X		
VOLVO	A11	2009	V70XC(0 1-)/XC70			Driver Door Module(DDM)		X	X	X	X		
VOLVO	A11	2009	V70XC(0 1-)/XC70			Passenger Door Module(PDM)		X	X	X	X		
VOLVO	A11	2009	V70XC(0 1-)/XC70			Power Seat Module(PSM)		X	X	X	X		
VOLVO	A11	2009	V70XC(0 1-)/XC70			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2009	V70XC(0 1-)/XC70			Power Operated Tailgate (POT)		X	X	X	X		
VOLVO	A11	2009	V70XC(0 1-)/XC70			Infotainment Control Module(ICM)		X	X	X	X		
VOLVO	A11	2009	V70XC(0 1-)/XC70			Integrated Audio Module(IAM)		X	X	X			
VOLVO	A11	2009	V70XC(0 1-)/XC70			Accessory Electronic Module(AEM)		X	X	X	X		
VOLVO	A11	2009	V70XC(0 1-)/XC70			Audio Module(AUM)		X	X	X	X		
VOLVO	A11	2009	V70XC(0 1-)/XC70			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2009	V70XC(0 1-)/XC70			Driver Information Module(DIM)		X	X	X	X		
VOLVO	A11	2009	V70XC(0 1-)/XC70			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2009	V70XC(0 1-)/XC70			Rear Electronic Module(REM)		X	X	X	X		
VOLVO	A11	2009	V70XC(0 1-)/XC70			Road Traffic Information Module(RTI)		X	X	X			
VOLVO	A11	2009	V70XC(0 1-)/XC70			Upper Electronic Module(UEM)		X	X	X	X		
VOLVO	A11	2010	V70XC(0 1-)/XC70			Resetting the service reminder indicator(SRI)							X

VOLVO	A11	2010	V70XC(0 1-)/XC70		B6304T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2010	V70XC(0 1-)/XC70		B6324S	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2010	V70XC(0 1-)/XC70		D5244T10	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2010	V70XC(0 1-)/XC70		D5244T14	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2010	V70XC(0 1-)/XC70		D5244T16	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2010	V70XC(0 1-)/XC70		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
VOLVO	A11	2010	V70XC(0 1-)/XC70			Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2010	V70XC(0 1-)/XC70			Suspension Module(SUM)		X	X	X			
VOLVO	A11	2010	V70XC(0 1-)/XC70			Audio Module(AUD)		X	X	X			
VOLVO	A11	2010	V70XC(0 1-)/XC70			Headlamp Control Module(HCM)		X	X	X			
VOLVO	A11	2010	V70XC(0 1-)/XC70			High level Display Front(HLDF)		X	X	X			
VOLVO	A11	2010	V70XC(0 1-)/XC70			Park Assist Module (PAM)		X	X	X			
VOLVO	A11	2010	V70XC(0 1-)/XC70			Accessory USB Unit (AUU)		X	X	X	X		
VOLVO	A11	2010	V70XC(0 1-)/XC70			Parking Assistance Camera(PAC)		X	X	X	X		
VOLVO	A11	2010	V70XC(0 1-)/XC70			Remote Digital Audio Receiver (RDAR)		X	X	X	X		
VOLVO	A11	2010	V70XC(0 1-)/XC70			Infotainment Control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2010	V70XC(0 1-)/XC70			Keyless Vehicle Module(KVM)		X	X	X	X		

VOLVO	A11	2010	V70XC(0 1-)/XC70			Integrated Audio Module(IAM)		X	X	X			
VOLVO	A11	2010	V70XC(0 1-)/XC70			Forward Sensing Module(FSM)		X	X	X	X		
VOLVO	A11	2010	V70XC(0 1-)/XC70			Multimedia Module(MMM)		X	X	X			
VOLVO	A11	2010	V70XC(0 1-)/XC70			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2010	V70XC(0 1-)/XC70			Driver Information Module(DIM)		X	X	X	X		
VOLVO	A11	2010	V70XC(0 1-)/XC70			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2010	V70XC(0 1-)/XC70			Power Steering Control Module(PSCM)		X	X	X	X		
VOLVO	A11	2010	V70XC(0 1-)/XC70			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2010	V70XC(0 1-)/XC70			Park Brake Module(PBM)		X	X	X	X		1.Activation and service
VOLVO	A11	2010	V70XC(0 1-)/XC70			Brake Control Module (BCM)		X	X	X	X	X	
VOLVO	A11	2010	V70XC(0 1-)/XC70			Combustion Preheater Module(CPM)		X	X	X			
VOLVO	A11	2010	V70XC(0 1-)/XC70			Trailer Module(TRM)		X	X	X			
VOLVO	A11	2010	V70XC(0 1-)/XC70			Power Seat Module(PSM)		X	X	X	X		
VOLVO	A11	2010	V70XC(0 1-)/XC70			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2010	V70XC(0 1-)/XC70			Driver Door Module(DDM)		X	X	X	X		
VOLVO	A11	2010	V70XC(0 1-)/XC70			Passenger Door Module(PDM)		X	X	X	X		
VOLVO	A11	2010	V70XC(0 1-)/XC70			Climate Control Module(CCM)		X	X	X	X	X	

VOLVO	A11	2011	V70XC(0 1-)/XC70			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2011	V70XC(0 1-)/XC70		B6304T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	V70XC(0 1-)/XC70		B6324S5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	V70XC(0 1-)/XC70		D5204T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	V70XC(0 1-)/XC70		D5244T10	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	V70XC(0 1-)/XC70		D5244T16	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	V70XC(0 1-)/XC70		TF-80SC AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2011	V70XC(0 1-)/XC70		TF-80SC	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2011	V70XC(0 1-)/XC70			Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2011	V70XC(0 1-)/XC70			Suspension Module(SUM)		X	X	X			
VOLVO	A11	2011	V70XC(0 1-)/XC70			Audio Module(AUD)		X	X	X			
VOLVO	A11	2011	V70XC(0 1-)/XC70			Headlamp Control Module(HCM)		X	X	X			
VOLVO	A11	2011	V70XC(0 1-)/XC70			High level Display Front(HLDF)		X	X	X			
VOLVO	A11	2011	V70XC(0 1-)/XC70			Park Assist Module (PAM)		X	X	X			
VOLVO	A11	2011	V70XC(0 1-)/XC70			Accessory USB Unit (AUU)		X	X	X	X		
VOLVO	A11	2011	V70XC(0 1-)/XC70			Parking Assistance Camera(PAC)		X	X	X	X		
VOLVO	A11	2011	V70XC(0 1-)/XC70			Remote Digital Audio Receiver (RDAR)		X	X	X	X		

VOLVO	A11	2011	V70XC(0 1-)/XC70			Infotainment Control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2011	V70XC(0 1-)/XC70			Keyless Vehicle Module(KVM)		X	X	X	X		
VOLVO	A11	2011	V70XC(0 1-)/XC70			Integrated Audio Module(IAM)		X	X	X			
VOLVO	A11	2011	V70XC(0 1-)/XC70			Forward Sensing Module(FSM)		X	X	X	X		
VOLVO	A11	2011	V70XC(0 1-)/XC70			Multimedia Module(MMM)		X	X	X			
VOLVO	A11	2011	V70XC(0 1-)/XC70			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2011	V70XC(0 1-)/XC70			Driver Information Module(DIM)		X	X	X	X		
VOLVO	A11	2011	V70XC(0 1-)/XC70			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2011	V70XC(0 1-)/XC70			Power Steering Control Module(PSCM)		X	X	X	X		
VOLVO	A11	2011	V70XC(0 1-)/XC70			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2011	V70XC(0 1-)/XC70			Park Brake Module(PBM)		X	X	X	X		1.Activation and service
VOLVO	A11	2011	V70XC(0 1-)/XC70			Brake Control Module (BCM)		X	X	X	X	X	
VOLVO	A11	2011	V70XC(0 1-)/XC70			Combustion Preheater Module(CPM)		X	X	X			
VOLVO	A11	2011	V70XC(0 1-)/XC70			Trailer Module(TRM)		X	X	X			
VOLVO	A11	2011	V70XC(0 1-)/XC70			Power Seat Module(PSM)		X	X	X	X		
VOLVO	A11	2011	V70XC(0 1-)/XC70			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2011	V70XC(0 1-)/XC70			Driver Door Module(DDM)		X	X	X	X		

VOLVO	A11	2011	V70XC(0 1-)/XC70			Passenger Door Module(PDM)		X	X	X	X		
VOLVO	A11	2011	V70XC(0 1-)/XC70			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	2007	C30		B4184S8	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting adaptation
VOLVO	A11	2007	C30		B4164S3	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting adaptation
VOLVO	A11	2007	C30		B4184S11	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting adaptation
VOLVO	A11	2007	C30		B5244S4	Engine Control Module(ECM)		X	X	X	X	X	1.Readiness Code 2.Quick test of the fuel pump(FP) 3.Resetting adaptation
VOLVO	A11	2007	C30		B4204S3	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting adaptation
VOLVO	A11	2007	C30		B5254T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	C30		D4204T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation (EGR) valve
VOLVO	A11	2007	C30		D4164T	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	C30		D5244T8	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	C30		D5244T9	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	C30		D4204T	Additive Dosing Module(ADM)		X	X	X	X	X	1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2007	C30		D4164T	Additive Dosing Module(ADM)		X	X	X	X	X	1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2007	C30		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2007	C30			Driver information module (DIM)		X	X	X	X	X	1.Resetting the service reminder indicator
VOLVO	A11	2007	C30			Global Positioning System Module (GPS)		X	X	X	X		
VOLVO	A11	2007	C30			Brake Control Module (BCM)		X	X	X	X		
VOLVO	A11	2007	C30			Traffic Message Channel Module (TMC)		X	X	X	X		
VOLVO	A11	2007	C30			Steering wheel module (SWM)		X	X	X	X		
VOLVO	A11	2007	C30			Keyless vehicle module (KVM)		X	X	X	X	X	
VOLVO	A11	2007	C30			Telephone (PHM)		X	X	X	X		
VOLVO	A11	2007	C30			Multimedia module (MMM)		X	X	X	X	X	1.Reinstalling the reserve battery
VOLVO	A11	2007	C30			Electric Power Steering (EPS)		X	X	X	X		
VOLVO	A11	2007	C30			Park Assist Module (PAM)		X	X	X	X		
VOLVO	A11	2007	C30			Audio Module(AUD)		X	X	X			
VOLVO	A11	2007	C30			Airbag (SRS)		X	X	X	X		
VOLVO	A11	2007	C30			Driver door module (DDM)		X	X	X	X	X	
VOLVO	A11	2007	C30			Passenger door module (PDM)		X	X	X	X	X	
VOLVO	A11	2007	C30			Power seat module, left (PSL)		X	X	X	X		
VOLVO	A11	2007	C30			Power seat module, right (PSR)		X	X	X	X		
VOLVO	A11	2007	C30			Remote Digital Audio Receiver (RDAR)		X	X	X	X		
VOLVO	A11	2007	C30			Integrated Audio module (IAM)		X	X	X	X	X	
VOLVO	A11	2007	C30			Trailer Module (TRM)		X	X	X	X		
VOLVO	A11	2007	C30			Infotainment Control Module (ICM)		X	X	X	X	X	
VOLVO	A11	2007	C30			Climate control unit (CCM)		X	X	X	X		
VOLVO	A11	2007	C30			Central Electronic Module(CEM)		X	X	X	X	X	

VOLVO	A11	2007	C30			Combustion preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2008	C30		B4184S8	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting adaptation
VOLVO	A11	2008	C30		B4164S3	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting adaptation
VOLVO	A11	2008	C30		B4184S11	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting adaptation
VOLVO	A11	2008	C30		B5244S4	Engine Control Module(ECM)		X	X	X	X	X	1.Readiness Code 2.Quick test of the fuel pump(FP) 3.Resetting adaptation
VOLVO	A11	2008	C30		B4204S3	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting adaptation
VOLVO	A11	2008	C30		B5254T7	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	C30		D4204T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation (EGR) valve
VOLVO	A11	2008	C30		D4164T	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	C30		D5244T8	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	C30		D5244T9	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	C30		D5244T13	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	C30		D4204T	Additive Dosing Module(ADM)		X	X	X	X	X	1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2008	C30		D4164T	Additive Dosing Module(ADM)		X	X	X	X	X	1.Refilling the feed hose with additive 2.Resetting the tank level gauge
VOLVO	A11	2008	C30		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting the service reminder indicator
VOLVO	A11	2008	C30		MPS6	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2008	C30			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2008	C30			Brake Control Module (BCM)		X	X	X	X	X	
VOLVO	A11	2008	C30			Electric Power Steering (EPS)		X	X	X	X		
VOLVO	A11	2008	C30			Park Assist Module (PAM)		X	X	X	X		
VOLVO	A11	2008	C30			Audio Module(AUD)		X	X	X			
VOLVO	A11	2008	C30			Airbag (SRS)		X	X	X	X		
VOLVO	A11	2008	C30			Driver door module (DDM)		X	X	X	X	X	
VOLVO	A11	2008	C30			Passenger door module (PDM)		X	X	X	X		
VOLVO	A11	2008	C30			Power seat module, left (PSL)		X	X	X	X		
VOLVO	A11	2008	C30			Power seat module, right (PSR)		X	X	X	X		
VOLVO	A11	2008	C30			Accessory USB Unit (AUU)		X	X	X	X		
VOLVO	A11	2008	C30			Trailer Module (TRM)		X	X	X	X		
VOLVO	A11	2008	C30			Steering wheel module (SWM)		X	X	X	X	X	
VOLVO	A11	2008	C30			Integrated Audio module (IAM)		X	X	X	X	X	
VOLVO	A11	2008	C30			Climate control unit (CCM)		X	X	X	X		
VOLVO	A11	2008	C30			Driver information module (DIM)		X	X	X	X	X	1.Resetting the service reminder indicator
VOLVO	A11	2008	C30			Telephone (PHM)		X	X	X	X		
VOLVO	A11	2008	C30			Remote Digital Audio Receiver (RDAR)		X	X	X	X		
VOLVO	A11	2008	C30			Keyless vehicle module (KVM)		X	X	X	X	X	
VOLVO	A11	2008	C30			Infotainment Control Module (ICM)		X	X	X	X		
VOLVO	A11	2008	C30			Multimedia module (MMM)		X	X	X	X	X	
VOLVO	A11	2008	C30			Combustion preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2009	C30		B4184S8	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2009	C30		B4164S3	Engine Control Module(ECM)		X	X	X	X		

VOLVO	A11	2009	C30		B4184S11	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2009	C30		B5244S4	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2009	C30		B4204S3	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2009	C30		B5254T7	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2009	C30		D4204T	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2009	C30		D4164T	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2009	C30		D5244T8	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2009	C30		D5244T9	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2009	C30		D5244T13	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2009	C30		D4204T	Additive Dosing Module(ADM)		X	X	X	X		
VOLVO	A11	2009	C30		D4164T	Additive Dosing Module(ADM)		X	X	X	X		
VOLVO	A11	2009	C30		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2009	C30		MPS6	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2009	C30			Central Electronic Module(CEM)		X	X	X	X	X	1.Ignition switch key position 2.Reading off programmed values
VOLVO	A11	2009	C30			Accessory electronic module (AEM)		X	X	X	X	X	1.Reading off the configuration
VOLVO	A11	2009	C30			Electric Power Steering (EPS)		X	X	X	X		
VOLVO	A11	2009	C30			Park Assist Module (PAM)		X	X	X	X		
VOLVO	A11	2009	C30			Audio Module(AUD)		X	X	X			
VOLVO	A11	2009	C30			Airbag (SRS)		X	X	X	X		
VOLVO	A11	2009	C30			Driver door module (DDM)		X	X	X	X	X	
VOLVO	A11	2009	C30			Passenger door module (PDM)		X	X	X	X		
VOLVO	A11	2009	C30			Accessory USB Unit (AUU)		X	X	X	X		
VOLVO	A11	2009	C30			Trailer Module (TRM)		X	X	X	X		
VOLVO	A11	2009	C30			Steering wheel module (SWM)		X	X	X	X		
VOLVO	A11	2009	C30			Integrated Audio module (IAM)		X	X	X	X		
VOLVO	A11	2009	C30			Brake Control Module (BCM)		X	X	X	X	X	
VOLVO	A11	2009	C30			Remote Digital Audio Receiver (RDAR)		X	X	X	X		
VOLVO	A11	2009	C30			Keyless vehicle module (KVM)		X	X	X	X	X	
VOLVO	A11	2009	C30			Bluetooth Phone Module (BPM)		X	X	X	X		
VOLVO	A11	2009	C30			Climate control unit (CCM)		X	X	X	X		
VOLVO	A11	2009	C30			Power seat module, left (PSL)		X	X	X	X		
VOLVO	A11	2009	C30			Power seat module, right (PSR)		X	X	X	X		
VOLVO	A11	2009	C30			Combustion preheater Module(CPM)		X	X	X	X		
VOLVO	A11	2009	C30			Telephone (PHM)		X	X	X	X		
VOLVO	A11	2009	C30			Infotainment Control Module (ICM)		X	X	X	X	X	
VOLVO	A11	2009	C30			Driver information module (DIM)		X	X	X	X	X	1.Resetting the service reminder indicator
VOLVO	A11	2009	C30			Multimedia module (MMM)		X	X	X	X	X	
VOLVO	A11	2010	C30		B4184S8	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2010	C30		B4164S3	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2010	C30		B4184S11	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2010	C30		B5244S4	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2010	C30		B4204S3	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2010	C30		B5254T7	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2010	C30		D4204T	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2010	C30		D4164T	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2010	C30		D5244T8	Engine Control Module(ECM)		X	X	X	X		

VOLVO	A11	2010	C30		D5244T9	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2010	C30		D5244T13	Engine Control Module(ECM)		X	X	X	X		
VOLVO	A11	2010	C30		D4204T	Additive Dosing Module(ADM)		X	X	X	X		
VOLVO	A11	2010	C30		D4164T	Additive Dosing Module(ADM)		X	X	X	X		
VOLVO	A11	2010	C30		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2010	C30		MPS6	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2010	C30			Central Electronic Module(CEM)		X	X	X	X	X	1.Ignition switch key position 2.Reading off programmed values
VOLVO	A11	2010	C30			Accessory electronic module (AEM)		X	X	X	X	X	1.Reading off the configuration
VOLVO	A11	2010	C30			Electric Power Steering (EPS)		X	X	X	X		
VOLVO	A11	2010	C30			Park Assist Module (PAM)		X	X	X	X		
VOLVO	A11	2010	C30			Audio Module(AUD)		X	X	X			
VOLVO	A11	2010	C30			Airbag (SRS)		X	X	X	X		
VOLVO	A11	2010	C30			Driver door module (DDM)		X	X	X	X	X	
VOLVO	A11	2010	C30			Passenger door module (PDM)		X	X	X	X		
VOLVO	A11	2010	C30			Accessory USB Unit (AUU)		X	X	X	X		
VOLVO	A11	2010	C30			Trailer Module (TRM)		X	X	X	X		
VOLVO	A11	2010	C30			Steering wheel module (SWM)		X	X	X	X		
VOLVO	A11	2010	C30			Integrated Audio module (IAM)		X	X	X	X		
VOLVO	A11	2010	C30			Brake Control Module (BCM)		X	X	X	X	X	
VOLVO	A11	2010	C30			Remote Digital Audio Receiver (RDAR)		X	X	X	X		
VOLVO	A11	2010	C30			Keyless vehicle module (KVM)		X	X	X	X	X	
VOLVO	A11	2010	C30			Bluetooth Phone Module (BPM)		X	X	X	X		
VOLVO	A11	2010	C30			Climate control unit (CCM)		X	X	X	X		
VOLVO	A11	2010	C30			Power seat module, left (PSL)		X	X	X	X		
VOLVO	A11	2010	C30			Power seat module, right (PSR)		X	X	X	X		
VOLVO	A11	2010	C30			Combustion preheater Module(CPM)		X	X	X	X		
VOLVO	A11	2010	C30			Telephone (PHM)		X	X	X	X		
VOLVO	A11	2010	C30			Infotainment Control Module (ICM)		X	X	X	X	X	
VOLVO	A11	2010	C30			Driver information module (DIM)		X	X	X	X	X	1.Resetting the service reminder indicator
VOLVO	A11	2010	C30			Multimedia module (MMM)		X	X	X	X	X	
VOLVO	A11	2011	C30		B4164S3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	C30		B4204S3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	C30		B5254T7	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	C30		D4164T	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	C30		D5204T	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	C30		D5204T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	C30		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2011	C30		MPS6	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2011	C30			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2011	C30			Accessory electronic module (AEM)		X	X	X	X	X	
VOLVO	A11	2011	C30			Electric Power Steering (EPS)		X	X	X	X		
VOLVO	A11	2011	C30			Park Assist Module (PAM)		X	X	X	X		
VOLVO	A11	2011	C30			Audio Module(AUD)		X	X	X			
VOLVO	A11	2011	C30			Airbag (SRS)		X	X	X	X		
VOLVO	A11	2011	C30			Driver door module (DDM)		X	X	X	X	X	
VOLVO	A11	2011	C30			Passenger door module (PDM)		X	X	X	X		

VOLVO	A11	2011	C30			Accessory USB Unit (AUU)		X	X	X	X		
VOLVO	A11	2011	C30			Trailer Module (TRM)		X	X	X	X		
VOLVO	A11	2011	C30			Steering wheel module (SWM)		X	X	X	X		
VOLVO	A11	2011	C30			Integrated Audio module (IAM)		X	X	X	X		
VOLVO	A11	2011	C30			Brake Control Module (BCM)		X	X	X	X	X	
VOLVO	A11	2011	C30			Remote Digital Audio Receiver (RDAR)		X	X	X	X		
VOLVO	A11	2011	C30			Keyless vehicle module (KVM)		X	X	X	X	X	
VOLVO	A11	2011	C30			Bluetooth Phone Module (BPM)		X	X	X	X		
VOLVO	A11	2011	C30			Climate control unit (CCM)		X	X	X	X		
VOLVO	A11	2011	C30			Power seat module, left (PSL)		X	X	X	X		
VOLVO	A11	2011	C30			Power seat module, right (PSR)		X	X	X	X		
VOLVO	A11	2011	C30			Combustion preheater Module(CPM)		X	X	X	X		
VOLVO	A11	2011	C30			Telephone (PHM)		X	X	X	X		
VOLVO	A11	2011	C30			Infotainment Control Module (ICM)		X	X	X	X	X	
VOLVO	A11	2011	C30			Driver information module (DIM)		X	X	X	X	X	
VOLVO	A11	2011	C30			Multimedia module (MMM)		X	X	X	X	X	
VOLVO	A11	1998	C70 Coupe			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	1998	C70 Coupe		B5204T2	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	C70 Coupe		B5204T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	C70 Coupe		B5234T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	C70 Coupe		B5254T	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	C70 Coupe		AW50-42	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	1998	C70 Coupe			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	1998	C70 Coupe			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	1998	C70 Coupe			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	1998	C70 Coupe			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	1998	C70 Coupe			Road Traffic Information Module(RTI)		X	X	X	X	X	
VOLVO	A11	1998	C70 Coupe			Immobilizer		X	X	X	X	X	
VOLVO	A11	1999	C70 Coupe			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	1999	C70 Coupe		B5204T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	C70 Coupe		B5204T4	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	C70 Coupe		B5234T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	C70 Coupe		B5254S DENSO	Fuel System/ Combined System		X	X	X	X		

VOLVO	A11	1999	C70 Coupe		B5254T	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	C70 Coupe		AW50-42	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	1999	C70 Coupe			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	1999	C70 Coupe			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	1999	C70 Coupe			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	1999	C70 Coupe			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	1999	C70 Coupe			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	1999	C70 Coupe			Power Seat Module,Right(PSR)		X	X	X	X	X	
VOLVO	A11	1999	C70 Coupe			Road Traffic Information Module(RTI)		X	X	X	X	X	
VOLVO	A11	1999	C70 Coupe			Immobilizer		X	X	X	X	X	
VOLVO	A11	1999	C70 Coupe			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2000	C70 Coupe			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2000	C70 Coupe		B5204T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2000	C70 Coupe		B5204T4	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2000	C70 Coupe		B5234T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2000	C70 Coupe		B5244S	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2000	C70 Coupe		B5244T	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2000	C70 Coupe		AW50-42	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2000	C70 Coupe		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2000	C70 Coupe			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	2000	C70 Coupe			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2000	C70 Coupe			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2000	C70 Coupe			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2000	C70 Coupe			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	2000	C70 Coupe			Power Seat Module,Right(PSR)		X	X	X	X	X	
VOLVO	A11	2000	C70 Coupe			Road Traffic Information Module(RTI)		X	X	X	X	X	

VOLVO	A11	2000	C70 Coupe			Immobilizer		X	X	X	X	X	
VOLVO	A11	2000	C70 Coupe			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2001	C70 Coupe			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2001	C70 Coupe		B5204T4	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2001	C70 Coupe		B5234T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2001	C70 Coupe		B5244T	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2001	C70 Coupe		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2001	C70 Coupe			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	2001	C70 Coupe			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2001	C70 Coupe			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2001	C70 Coupe			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2001	C70 Coupe			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	2001	C70 Coupe			Power Seat Module,Right(PSR)		X	X	X	X	X	
VOLVO	A11	2001	C70 Coupe			Road Traffic Information Module(RTI)		X	X	X	X	X	
VOLVO	A11	2001	C70 Coupe			Immobilizer		X	X	X	X	X	
VOLVO	A11	2001	C70 Coupe			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2002	C70 Coupe			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2002	C70 Coupe		B5204T4	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2002	C70 Coupe		B5234T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2002	C70 Coupe		B5244T	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2002	C70 Coupe		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2002	C70 Coupe			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	2002	C70 Coupe			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2002	C70 Coupe			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2002	C70 Coupe			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2002	C70 Coupe			Power Seat Module,Left(PSL)		X	X	X	X	X	

VOLVO	A11	2002	C70 Coupe			Power Seat Module,Right(PSR)		X	X	X	X	X	
VOLVO	A11	2002	C70 Coupe			Road Traffic Information Module(RTI)		X	X	X	X	X	
VOLVO	A11	2002	C70 Coupe			Immobilizer		X	X	X	X	X	
VOLVO	A11	2002	C70 Coupe			Lock and alarm		X	X	X	X	X	
VOLVO	A11	1998	C70 Conv			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	1998	C70 Conv		B5204T2	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	C70 Conv		B5204T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	C70 Conv		B5234T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	C70 Conv		B5254T	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1998	C70 Conv		AW50-42	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	1998	C70 Conv			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	1998	C70 Conv			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	1998	C70 Conv			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	1998	C70 Conv			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	1998	C70 Conv			Road Traffic Information Module(RTI)		X	X	X	X	X	
VOLVO	A11	1998	C70 Conv			Immobilizer		X	X	X	X	X	
VOLVO	A11	1999	C70 Conv			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	1999	C70 Conv		B5204T2	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	C70 Conv		B5204T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	C70 Conv		B5234T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	C70 Conv		B5254T	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	1999	C70 Conv		AW50-42	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	1999	C70 Conv			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	1999	C70 Conv			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	1999	C70 Conv			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	1999	C70 Conv			Supplemental Restraint System Module(SRS)		X	X	X	X		

VOLVO	A11	1999	C70 Conv			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	1999	C70 Conv			Power Seat Module,Right(PSR)		X	X	X	X	X	
VOLVO	A11	1999	C70 Conv			Road Traffic Information Module(RTI)		X	X	X	X	X	
VOLVO	A11	1999	C70 Conv			Immobilizer		X	X	X	X	X	
VOLVO	A11	1999	C70 Conv			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2000	C70 Conv			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2000	C70 Conv		B5204T2	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2000	C70 Conv		B5204T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2000	C70 Conv		B5234T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2000	C70 Conv		B5244S	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2000	C70 Conv		B5254T	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2000	C70 Conv		AW50-42	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2000	C70 Conv		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2000	C70 Conv			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	2000	C70 Conv			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2000	C70 Conv			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2000	C70 Conv			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2000	C70 Conv			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	2000	C70 Conv			Power Seat Module,Right(PSR)		X	X	X	X	X	
VOLVO	A11	2000	C70 Conv			Road Traffic Information Module(RTI)		X	X	X	X	X	
VOLVO	A11	2000	C70 Conv			Immobilizer		X	X	X	X	X	
VOLVO	A11	2000	C70 Conv			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2001	C70 Conv			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2001	C70 Conv		B5204T4	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2001	C70 Conv		B5234T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2001	C70 Conv		B5244T	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2001	C70 Conv		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		

VOLVO	A11	2001	C70 Conv			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	2001	C70 Conv			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2001	C70 Conv			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2001	C70 Conv			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2001	C70 Conv			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	2001	C70 Conv			Power Seat Module,Right(PSR)		X	X	X	X	X	
VOLVO	A11	2001	C70 Conv			Road Traffic Information Module(RTI)		X	X	X	X	X	
VOLVO	A11	2001	C70 Conv			Immobilizer		X	X	X	X	X	
VOLVO	A11	2001	C70 Conv			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2002	C70 Conv			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2002	C70 Conv		B5204T4	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2002	C70 Conv		B5234T3	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2002	C70 Conv		B5244T	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2002	C70 Conv		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2002	C70 Conv			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	2002	C70 Conv			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2002	C70 Conv			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2002	C70 Conv			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2002	C70 Conv			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	2002	C70 Conv			Power Seat Module,Right(PSR)		X	X	X	X	X	
VOLVO	A11	2002	C70 Conv			Road Traffic Information Module(RTI)		X	X	X	X	X	
VOLVO	A11	2002	C70 Conv			Immobilizer		X	X	X	X	X	
VOLVO	A11	2002	C70 Conv			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2003	C70 Conv			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2003	C70 Conv		B5204T4	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2003	C70 Conv		B5234T9	Fuel System/ Combined System		X	X	X	X		

VOLVO	A11	2003	C70 Conv		B5244T7	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2003	C70 Conv		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2003	C70 Conv			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	2003	C70 Conv			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2003	C70 Conv			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2003	C70 Conv			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2003	C70 Conv			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	2003	C70 Conv			Power Seat Module,Right(PSR)		X	X	X	X	X	
VOLVO	A11	2003	C70 Conv			Road Traffic Information Module(RTI)		X	X	X	X	X	
VOLVO	A11	2003	C70 Conv			Immobilizer		X	X	X	X	X	
VOLVO	A11	2003	C70 Conv			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2004	C70 Conv			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2004	C70 Conv		B5204T4	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2004	C70 Conv		B5234T9	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2004	C70 Conv		B5244T7	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2004	C70 Conv		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2004	C70 Conv			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	2004	C70 Conv			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2004	C70 Conv			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2004	C70 Conv			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2004	C70 Conv			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	2004	C70 Conv			Power Seat Module,Right(PSR)		X	X	X	X	X	
VOLVO	A11	2004	C70 Conv			Road Traffic Information Module(RTI)		X	X	X	X	X	
VOLVO	A11	2004	C70 Conv			Immobilizer		X	X	X	X	X	
VOLVO	A11	2004	C70 Conv			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2005	C70 Conv			Resetting the service reminder indicator(SRI)							X

VOLVO	A11	2005	C70 Conv		B5204T4	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2005	C70 Conv		B5234T9	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2005	C70 Conv		B5244T7	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2005	C70 Conv		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2005	C70 Conv			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	2005	C70 Conv			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2005	C70 Conv			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2005	C70 Conv			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2005	C70 Conv			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	2005	C70 Conv			Power Seat Module,Right(PSR)		X	X	X	X	X	
VOLVO	A11	2005	C70 Conv			Road Traffic Information Module(RTI)		X	X	X	X	X	
VOLVO	A11	2005	C70 Conv			Immobilizer		X	X	X	X	X	
VOLVO	A11	2005	C70 Conv			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2006	C70 Conv			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2006	C70 Conv		B5204T4	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2006	C70 Conv		B5234T9	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2006	C70 Conv		B5244T7	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2006	C70 Conv		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2006	C70 Conv			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	2006	C70 Conv			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2006	C70 Conv			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2006	C70 Conv			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2006	C70 Conv			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	2006	C70 Conv			Power Seat Module,Right(PSR)		X	X	X	X	X	
VOLVO	A11	2006	C70 Conv			Road Traffic Information Module(RTI)		X	X	X	X	X	
VOLVO	A11	2006	C70 Conv			Immobilizer		X	X	X	X	X	

VOLVO	A11	2006	C70 Conv			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2007	C70 Conv			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2007	C70 Conv		B5204T4	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2007	C70 Conv		B5234T9	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2007	C70 Conv		B5244T7	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2007	C70 Conv		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2007	C70 Conv			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	2007	C70 Conv			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2007	C70 Conv			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2007	C70 Conv			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2007	C70 Conv			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	2007	C70 Conv			Power Seat Module,Right(PSR)		X	X	X	X	X	
VOLVO	A11	2007	C70 Conv			Road Traffic Information Module(RTI)		X	X	X	X	X	
VOLVO	A11	2007	C70 Conv			Immobilizer		X	X	X	X	X	
VOLVO	A11	2007	C70 Conv			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2008	C70 Conv			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2008	C70 Conv		B5204T4	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2008	C70 Conv		B5234T9	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2008	C70 Conv		B5244T7	Fuel System/ Combined System		X	X	X	X		
VOLVO	A11	2008	C70 Conv		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2008	C70 Conv			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	2008	C70 Conv			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2008	C70 Conv			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2008	C70 Conv			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2008	C70 Conv			Power Seat Module,Left(PSL)		X	X	X	X	X	
VOLVO	A11	2008	C70 Conv			Power Seat Module,Right(PSR)		X	X	X	X	X	

VOLVO	A11	2008	C70 Conv			Road Traffic Information Module(RTI)		X	X	X	X	X	
VOLVO	A11	2008	C70 Conv			Immobilizer		X	X	X	X	X	
VOLVO	A11	2008	C70 Conv			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2009	C70 Conv		B5244S4	Engine		X	X	X	X	X	1.Resetting the adaptation values
VOLVO	A11	2009	C70 Conv		B5244S5	Engine		X	X	X	X	X	1.Resetting the adaptation values
VOLVO	A11	2009	C70 Conv		B5254T7	Engine		X	X	X	X	X	1. Readiness Code 2. Adaptation of the throttle unit 3. Quick test of exhaust camshaft control 4. Quick test of intake camshaft control 5. Quick test of the fuel pump(FP)
VOLVO	A11	2009	C70 Conv		D4204T	Engine		X	X	X	X	X	1. Programming the optimizing parameters 2. Resetting the adaptation values 3. Resetting the odometer particle trap 4. Adaptation of the exhaust gas recirculation (EGR) valve 5. Combustion of soot particle, particle trap 6. Quick-test injectors
VOLVO	A11	2009	C70 Conv		D5244T13	Engine		X	X	X	X	X	
VOLVO	A11	2009	C70 Conv		D5244T8	Engine		X	X	X	X	X	
VOLVO	A11	2009	C70 Conv		D5244T9	Engine		X	X	X	X	X	
VOLVO	A11	2009	C70 Conv			Accessory electronic module (AEM)		X	X	X	X	X	
VOLVO	A11	2009	C70 Conv			Audio module (AUD)		X	X	X			
VOLVO	A11	2009	C70 Conv			Integrated Audio Module(IAM)		X	X	X	X	X	
VOLVO	A11	2009	C70 Conv			Subwoofer Module(SUB)		X	X	X			
VOLVO	A11	2009	C70 Conv			Airbag		X	X	X	X		
VOLVO	A11	2009	C70 Conv			Convertible Roof Module(CRM)		X	X	X	X		
VOLVO	A11	2010	C70 Conv			Immobilizer		X	X	X	X	X	
VOLVO	A11	2010	C70 Conv			Lock and alarm		X	X	X	X	X	
VOLVO	A11	2010	C70 Conv		B5244S4	Engine		X	X	X	X	X	
VOLVO	A11	2010	C70 Conv		B5244S5	Engine		X	X	X	X	X	
VOLVO	A11	2010	C70 Conv		B5254T7	Engine		X	X	X	X	X	
VOLVO	A11	2010	C70 Conv		D4204T	Engine		X	X	X	X	X	

VOLVO	A11	2010	C70 Conv		D5244T13	Engine		X	X	X	X	X	
VOLVO	A11	2010	C70 Conv		D5244T8	Engine		X	X	X	X	X	
VOLVO	A11	2010	C70 Conv		D5244T9	Engine		X	X	X			
VOLVO	A11	2010	C70 Conv			Accessory electronic module (AEM)		X	X	X	X	X	
VOLVO	A11	2010	C70 Conv			Audio module (AUD)		X	X	X			
VOLVO	A11	2010	C70 Conv			Integrated Audio Module(IAM)		X	X	X	X		
VOLVO	A11	2010	C70 Conv			Subwoofer Module(SUB)		X	X	X	X		
VOLVO	A11	2010	C70 Conv			Airbag							
VOLVO	A11	2010	C70 Conv			Convertible Roof Module(CRM)							
VOLVO	A11	2011	C70 Conv		B5254T7	Engine		X	X	X	X	X	
VOLVO	A11	2011	C70 Conv			Accessory electronic module (AEM)		X	X	X	X	X	1.Reading off the configuration
VOLVO	A11	2011	C70 Conv			Park Assist Module (PAM)		X	X	X	X		
VOLVO	A11	2011	C70 Conv			Audio module (AUD)		X	X	X	X		
VOLVO	A11	2011	C70 Conv			Accessory USB Unit (AUU)		X	X	X	X		
VOLVO	A11	2011	C70 Conv			Steering wheel module (SWM)		X	X	X	X		
VOLVO	A11	2011	C70 Conv			Integrated Audio module (IAM)		X	X	X	X	X	
VOLVO	A11	2011	C70 Conv			Subwoofer Module(SUB)		X	X	X			
VOLVO	A11	2011	C70 Conv			Remote Digital Audio Receiver (RDAR)		X	X	X	X		
VOLVO	A11	2011	C70 Conv			Keyless vehicle module (KVM)		X	X	X	X	X	
VOLVO	A11	2011	C70 Conv			Infotainment Control Module(ICM)		X	X	X	X	X	1.Programming the infotainment control module(ICM)
VOLVO	A11	2011	C70 Conv			Headlamp Control Module (HCM)		X	X	X	X		
VOLVO	A11	2011	C70 Conv			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	2011	C70 Conv			Multimedia module (MMM)		X	X	X	X	X	
VOLVO	A11	2011	C70 Conv			Telephone (PHM)		X	X	X	X		
VOLVO	A11	2011	C70 Conv		AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2011	C70 Conv			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	

VOLVO	A11	2011	C70 Conv			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2011	C70 Conv			Electric Power Steering (EPS)		X	X	X	X		
VOLVO	A11	2011	C70 Conv			Power Seat Module (PSM)		X	X	X	X	X	1.Programming remote control setting
VOLVO	A11	2011	C70 Conv			Driver Door Module(DDM)		X	X	X	X	X	
VOLVO	A11	2011	C70 Conv			Passenger door module (PDM)		X	X	X	X	X	
VOLVO	A11	2011	C70 Conv			Airbag (SRS)		X	X	X	X		
VOLVO	A11	2011	C70 Conv			Trailer Module (TRM)		X	X	X	X		
VOLVO	A11	2011	C70 Conv			Combustion Preheater Module(CPM)		X	X	X	X	X	
VOLVO	A11	2011	C70 Conv			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2003	XC90			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2003	XC90		B5254T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2003	XC90		B6294T	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2003	XC90		D5244T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters
VOLVO	A11	2003	XC90		4T65AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	A11	2003	XC90		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2003	XC90		4T65AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2003	XC90		AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2003	XC90			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2003	XC90			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2003	XC90			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2003	XC90			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2003	XC90			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2003	XC90			Power Seat Module(PSM)		X	X	X	X	X	1.Checking current values 2.Programming the remote control setting
VOLVO	A11	2003	XC90			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2003	XC90			Audio Module(AUM)		X	X	X			
VOLVO	A11	2003	XC90			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car

VOLVO	A11	2003	XC90			Driver Information Module(DIM)		X	X	X	X	X	1.Resetting the service reminder indicator 2.Testing all needles and lamps in the dashboard 3.Programming the driver information module(DIM)
VOLVO	A11	2003	XC90			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2003	XC90			Rear Electronic Module(REM)		X	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	A11	2003	XC90			Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2003	XC90			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2003	XC90			Infotainment control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2003	XC90			Multimedia Module(MMM)		X	X	X			
VOLVO	A11	2003	XC90			Subwoofer Module(SUB)		X	X	X			
VOLVO	A11	2003	XC90			Antenna Module(ATM)		X	X	X	X		
VOLVO	A11	2003	XC90			CD Player Module(MP2)		X	X	X	X	X	
VOLVO	A11	2003	XC90			MD Player Module(MP1)		X	X	X	X	X	
VOLVO	A11	2004	XC90			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2004	XC90		B5254T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2004	XC90		B6294T	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
VOLVO	A11	2004	XC90		D5244T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters
VOLVO	A11	2004	XC90		4T65AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	A11	2004	XC90		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2004	XC90		4T65AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2004	XC90		AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2004	XC90		M66AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2004	XC90			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2004	XC90			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2004	XC90			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2004	XC90			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2004	XC90			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2004	XC90			Power Seat Module(PSM)		X	X	X	X	X	1.Checking current values 2.Programming the remote control setting
VOLVO	A11	2004	XC90			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS)
VOLVO	A11	2004	XC90			Audio Module(AUM)		X	X	X			
VOLVO	A11	2004	XC90			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2004	XC90			Driver Information Module(DIM)		X	X	X	X	X	1.Resetting the service reminder indicator 2.Testing all needles and lamps in the dashboard 3.Programming the driver information module(DIM)

VOLVO	A11	2004	XC90			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2004	XC90			Rear Electronic Module(REM)		X	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	A11	2004	XC90			Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2004	XC90			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2004	XC90			Infotainment control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2004	XC90			Multimedia Module(MMM)		X	X	X			
VOLVO	A11	2004	XC90			Subwoofer Module(SUB)		X	X	X			
VOLVO	A11	2004	XC90			Antenna Module(ATM)		X	X	X	X		
VOLVO	A11	2004	XC90			CD Player Module(MP2)		X	X	X	X	X	
VOLVO	A11	2004	XC90			MD Player Module(MP1)		X	X	X	X	X	
VOLVO	A11	2005	XC90			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2005	XC90		B5254T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2005	XC90		B6294T	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2005	XC90		D5244T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters
VOLVO	A11	2005	XC90		4T65AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	A11	2005	XC90		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2005	XC90		M66AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2005	XC90		4T65AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2005	XC90		AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2005	XC90		M66AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2005	XC90			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2005	XC90			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2005	XC90			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2005	XC90			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2005	XC90			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2005	XC90			Power Seat Module(PSM)		X	X	X	X	X	1.Checking current values 2.Programming the remote control setting
VOLVO	A11	2005	XC90			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS) 2.Storing the ID number for the occupant weight sensor (OWS).
VOLVO	A11	2005	XC90			Audio Module(AUM)		X	X	X			
VOLVO	A11	2005	XC90			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2005	XC90			Driver Information Module(DIM)		X	X	X	X	X	1.Resetting the service reminder indicator 2.Testing all needles and lamps in the dashboard 3.Programming the driver information module(DIM)
VOLVO	A11	2005	XC90			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code

VOLVO	A11	2005	XC90			Rear Electronic Module(REM)		X	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	A11	2005	XC90			Steering Wheel Module(SWM)		X	X	X	X		
VOLVO	A11	2005	XC90			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2005	XC90			Infotainment control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2005	XC90			Multimedia Module(MMM)		X	X	X			
VOLVO	A11	2005	XC90			Subwoofer Module(SUB)		X	X	X			
VOLVO	A11	2005	XC90			Antenna Module(ATM)		X	X	X	X		
VOLVO	A11	2005	XC90			CD Player Module(MP2)		X	X	X	X	X	
VOLVO	A11	2005	XC90			MD Player Module(MP1)		X	X	X	X	X	
VOLVO	A11	2006	XC90			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2006	XC90		B5254T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2006	XC90		B6294T	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2006	XC90		D5244T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters
VOLVO	A11	2006	XC90		4T65AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	A11	2006	XC90		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2006	XC90		M66AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2006	XC90		4T65AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2006	XC90		AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2006	XC90		M66AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2006	XC90			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2006	XC90			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2006	XC90			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2006	XC90			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2006	XC90			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2006	XC90			Power Seat Module(PSM)		X	X	X	X	X	1.Checking current values 2.Programming the remote control setting
VOLVO	A11	2006	XC90			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS) 2.Storing the ID number for the occupant weight sensor (OWS).
VOLVO	A11	2006	XC90			Audio Module(AUM)		X	X	X			
VOLVO	A11	2006	XC90			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2006	XC90			Driver Information Module(DIM)		X	X	X	X	X	1.Resetting the service reminder indicator 2.Testing all needles and lamps in the dashboard 3.Programming the driver information module(DIM)
VOLVO	A11	2006	XC90			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2006	XC90			Rear Electronic Module(REM)		X	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	A11	2006	XC90			Steering Wheel Module(SWM)		X	X	X	X		

VOLVO	A11	2006	XC90			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2006	XC90			Infotainment control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2006	XC90			Multimedia Module(MMM)		X	X	X			
VOLVO	A11	2006	XC90			Subwoofer Module(SUB)		X	X	X			
VOLVO	A11	2006	XC90			Antenna Module(ATM)		X	X	X	X		
VOLVO	A11	2006	XC90			CD Player Module(MP2)		X	X	X	X	X	
VOLVO	A11	2006	XC90			MD Player Module(MP1)		X	X	X	X	X	
VOLVO	A11	2007	XC90			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2007	XC90		B5254T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	XC90		B6294T	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	XC90		B6324S	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2007	XC90		D5244T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters
VOLVO	A11	2007	XC90		4T65AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	A11	2007	XC90		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2007	XC90		M66AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2007	XC90		TF-80SC AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2007	XC90		4T65AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2007	XC90		AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2007	XC90		M66AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2007	XC90			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2007	XC90			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2007	XC90			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2007	XC90			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2007	XC90			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2007	XC90			Power Seat Module(PSM)		X	X	X	X	X	1.Checking current values 2.Programming the remote control setting
VOLVO	A11	2007	XC90			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS) 2.Storing the ID number for the occupant weight sensor (OWS).
VOLVO	A11	2007	XC90			Audio Module(AUM)		X	X	X			
VOLVO	A11	2007	XC90			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2007	XC90			Driver Information Module(DIM)		X	X	X	X	X	1.Resetting the service reminder indicator 2.Testing all needles and lamps in the dashboard 3.Programming the driver information module(DIM)
VOLVO	A11	2007	XC90			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2007	XC90			Rear Electronic Module(REM)		X	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	A11	2007	XC90			Steering Wheel Module(SWM)		X	X	X	X		

VOLVO	A11	2007	XC90			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2007	XC90			Infotainment control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2007	XC90			Multimedia Module(MMM)		X	X	X			
VOLVO	A11	2007	XC90			Subwoofer Module(SUB)		X	X	X			
VOLVO	A11	2007	XC90			Antenna Module(ATM)		X	X	X	X		
VOLVO	A11	2007	XC90			CD Player Module(MP2)		X	X	X	X	X	
VOLVO	A11	2007	XC90			MD Player Module(MP1)		X	X	X	X	X	
VOLVO	A11	2008	XC90			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2008	XC90		B5254T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	XC90		B6294T	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	XC90		B6324S	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2008	XC90		D5244T	Engine Control Module(ECM)		X	X	X	X	X	1.Programming optimizing parameters
VOLVO	A11	2008	XC90		4T65AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
VOLVO	A11	2008	XC90		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2008	XC90		M66AWD	Transmission Control Module(TCM)		X	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaptation
VOLVO	A11	2008	XC90		TF-80SC AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2008	XC90		4T65AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2008	XC90		AW50/51AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2008	XC90		M66AWD	Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2008	XC90			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2008	XC90			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2008	XC90			Climate Control Module(CCM)		X	X	X	X		1.Adjusting ECC parameters
VOLVO	A11	2008	XC90			Driver Door Module(DDM)		X	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
VOLVO	A11	2008	XC90			Passenger Door Module(PDM)		X	X	X	X	X	1.Initializing the window position
VOLVO	A11	2008	XC90			Power Seat Module(PSM)		X	X	X	X	X	1.Checking current values 2.Programming the remote control setting
VOLVO	A11	2008	XC90			Supplemental Restraint System Module(SRS)		X	X	X	X		1.Calibrating the occupant weight sensor(OWS) 2.Storing the ID number for the occupant weight sensor (OWS).
VOLVO	A11	2008	XC90			Audio Module(AUM)		X	X	X			
VOLVO	A11	2008	XC90			Central Electronic Module(CEM)		X	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
VOLVO	A11	2008	XC90			Driver Information Module(DIM)		X	X	X	X	X	1.Resetting the service reminder indicator 2.Testing all needles and lamps in the dashboard 3.Programming the driver information module(DIM)
VOLVO	A11	2008	XC90			Phone Module(PHM)		X	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the car phone code
VOLVO	A11	2008	XC90			Rear Electronic Module(REM)		X	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
VOLVO	A11	2008	XC90			Steering Wheel Module(SWM)		X	X	X	X		

VOLVO	A11	2008	XC90			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2008	XC90			Infotainment control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2008	XC90			Multimedia Module(MMM)		X	X	X			
VOLVO	A11	2008	XC90			Subwoofer Module(SUB)		X	X	X			
VOLVO	A11	2008	XC90			Antenna Module(ATM)		X	X	X	X		
VOLVO	A11	2008	XC90			CD Player Module(MP2)		X	X	X	X	X	
VOLVO	A11	2008	XC90			MD Player Module(MP1)		X	X	X	X	X	
VOLVO	A11	2009	XC90		B5254T2	Engine Control Module(ECM)		X	X	X	X	X	1.Adaptation of throttle module 2.Adaptation of the throttle unit 3.Quick test of intake camshaft control 4.Quick test of exhaust camshaft control 5.Quick test of the fuel pump (FP) 6.ReadinessCode
VOLVO	A11	2009	XC90			Driver information module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the audible acknowledgement signal, seat belt reminder 3.Reading off programmed values 4.Programming the driver information module(DIM) 5.Resetting the service reminder indicator(SRI) 6.Display of DSTC message
VOLVO	A11	2009	XC90			Upper Electronic Module(UEM)		X	X	X	X	X	1. Activating and reading off sun roof parameters 2. Programming the control module 3. Configuration of the siren 4. Replacing the control module 5. Reading the programmed values
VOLVO	A11	2009	XC90		B6324S	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2009	XC90		B8444S	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2009	XC90			Anti-brake System Module(ABS/BCM)		X	X	X	X		1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2009	XC90			Headlamp Control Module(HCM)		X	X	X	X		
VOLVO	A11	2009	XC90			Steering angle sensor(SAS)		X	X	X	X		
VOLVO	A11	2009	XC90			Infotainment Control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2009	XC90			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2010	XC90		B5254T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2010	XC90			Driver information module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the audible acknowledgement signal, seat belt reminder 3.Reading off programmed values 4.Programming the driver information module(DIM) 5.Resetting the service reminder indicator(SRI) 6.Display of DSTC message
VOLVO	A11	2010	XC90			Upper Electronic Module(UEM)		X	X	X	X	X	1. Activating and reading off sun roof parameters 2. Programming the control module 3. Configuration of the siren 4. Replacing the control module 5. Reading the programmed values
VOLVO	A11	2010	XC90		B6324S	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2010	XC90		B8444S	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2010	XC90		D5244T4	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting counter particle filter 2.Combustion of soot particles

VOLVO	A11	2010	XC90			Anti-brake System Module(ABS/BCM)		X	X	X	X		1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2010	XC90			Headlamp Control Module(HCM)		X	X	X	X		
VOLVO	A11	2010	XC90			Steering angle sensor(SAS)		X	X	X	X		
VOLVO	A11	2010	XC90			Infotainment Control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2010	XC90			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2011	XC90			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2011	XC90		B5254T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	XC90		B6324S5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	XC90		B8444S	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	XC90		D5244T4	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting counter particle filter 2.Combustion of soot particles
VOLVO	A11	2011	XC90		D5244T5	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting counter particle filter 2.Combustion of soot particles
VOLVO	A11	2011	XC90			Headlamp Control Module(HCM)		X	X	X	X		
VOLVO	A11	2011	XC90			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2011	XC90			Global Positioning System Module(GPS)		X	X	X	X		
VOLVO	A11	2011	XC90			Subwoofer Module(SUB)		X	X	X			
VOLVO	A11	2011	XC90			Accessory Electronic Module(AEM)		X	X	X	X	X	
VOLVO	A11	2011	XC90			Driver Information Module(DIM)		X	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the audible acknowledgement signal, seat belt reminder 3.Reading off programmed values 4.Programming the driver information module(DIM) 5.Resetting the service reminder indicator(SRI) 6.Display of DSTC message
VOLVO	A11	2011	XC90			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2011	XC90			Rear Electronic Module(REM)		X	X	X	X	X	
VOLVO	A11	2011	XC90			Upper Electronic Module(UEM)		X	X	X	X	X	
VOLVO	A11	2011	XC90			Infotainment Control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2011	XC90			Integrated Audio module (IAM)		X	X	X			
VOLVO	A11	2011	XC90			Multimedia Module(MMM)		X	X	X			
VOLVO	A11	2011	XC90			Audio Module(AUD)		X	X	X			
VOLVO	A11	2011	XC90			Accessory USB Unit (AUU)		X	X	X	X		
VOLVO	A11	2011	XC90			Remote Digital Audio Receiver (RDAR)		X	X	X	X		
VOLVO	A11	2011	XC90		AW50/51AWD	Transmission Control Module(TCM)		X	X	X	X		
VOLVO	A11	2011	XC90			Steering angle sensor(SAS)		X	X	X	X		
VOLVO	A11	2011	XC90			Anti-brake System Module(ABS/BCM)		X	X	X	X		1.Check brake light switch adjustment 2.Calibration
VOLVO	A11	2011	XC90			Climate Control Module(CCM)		X	X	X	X		
VOLVO	A11	2011	XC90			Combustion Preheater Module(CPM)		X	X	X	X		
VOLVO	A11	2011	XC90			Power Seat Module(PSM)		X	X	X	X		
VOLVO	A11	2011	XC90			Driver Door Module(DDM)		X	X	X			
VOLVO	A11	2011	XC90			Passenger Door Module(PDM)		X	X	X			
VOLVO	A11	2011	XC90			Supplemental Restraint System Module(SRS)		X	X	X			
VOLVO	A11	2012	XC90			Resetting the service reminder indicator(SRI)							*

VOLVO	A11	2012	XC90		B5254T2	Engine control module		*	*	*	*	*	
VOLVO	A11	2012	XC90		D5244T4	Engine control module		*	*	*	*	*	*
VOLVO	A11	2012	XC90		AW50/51 AWD	Transmission control module		*	*	*	*	*	
VOLVO	A11	2012	XC90			Brake Control Module		*	*	*	*	*	
VOLVO	A11	2012	XC90			Steering angle sensor		*	*	*	*		
VOLVO	A11	2012	XC90			Headlamp Control Module		*	*	*	*		
VOLVO	A11	2012	XC90			Central electronic module		*	*	*	*	*	
VOLVO	A11	2012	XC90			Global Positioning System Module		*	*	*	*		
VOLVO	A11	2012	XC90			Power seat module		*	*	*	*	*	
VOLVO	A11	2012	XC90			Subwoofer module		*	*	*			
VOLVO	A11	2012	XC90			Driver door module		*	*	*	*	*	
VOLVO	A11	2012	XC90			Passenger door module		*	*	*	*	*	
VOLVO	A11	2012	XC90			Accessory electronic module		*	*	*	*	*	
VOLVO	A11	2012	XC90			Driver information module		*	*	*	*	*	*
VOLVO	A11	2012	XC90			Audio module		*	*	*			
VOLVO	A11	2012	XC90			Accessory USB Unit		*	*	*	*		
VOLVO	A11	2012	XC90			Integrated Audio Module (IAM)		*	*	*	*	*	
VOLVO	A11	2012	XC90			Upper electronic module		*	*	*	*	*	
VOLVO	A11	2012	XC90			Multimedia module		*	*	*			
VOLVO	A11	2012	XC90			Airbag		*	*	*			
VOLVO	A11	2012	XC90			Infotainment Control Module		*	*	*	*	*	
VOLVO	A11	2009	XC60			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2009	XC60		B6304T2	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting adaptation 2. Readiness Code (USA/CDN) 3. Reading off IUMPR (USA/CDN)
VOLVO	A11	2009	XC60		D5244T4	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting adaptation 2.Resetting counter particle filter
VOLVO	A11	2009	XC60		D5244T5	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting adaptation
VOLVO	A11	2009	XC60			Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2009	XC60			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	2009	XC60			Steering Wheel Angle Sensor Module(SAS)		X	X	X			
VOLVO	A11	2009	XC60			Park Brake Module(PBM)		X	X	X	X		1. Activation and service
VOLVO	A11	2009	XC60			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	2009	XC60			Driver Door Module(DDM)		X	X	X			
VOLVO	A11	2009	XC60			Passenger Door Module(PDM)		X	X	X			
VOLVO	A11	2009	XC60			Power Seat Module(PSM)		X	X	X	X		
VOLVO	A11	2009	XC60			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2009	XC60			Combustion Preheater Module(CPM)		X	X	X			
VOLVO	A11	2009	XC60			Trailer Module (TRM)		X	X	X			
VOLVO	A11	2009	XC60			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2009	XC60			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	2009	XC60			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2009	XC60			Infotainment control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2009	XC60			Keyless Vehicle Module(KVM)		X	X	X	X		

VOLVO	A11	2009	XC60			Park Assist Module (PAM)		X	X	X			
VOLVO	A11	2009	XC60			Forward Sensing Module(FSM)		X	X	X	X		
VOLVO	A11	2009	XC60			Parking Assistance Camera(PAC)		X	X	X	X		
VOLVO	A11	2009	XC60			Headlamp Control Module(HCM)		X	X	X	X		
VOLVO	A11	2009	XC60			High level Display Front(HLDF)		X	X	X	X		
VOLVO	A11	2009	XC60			Suspension Module(SUM)		X	X	X			
VOLVO	A11	2009	XC60			Closing Velocity Module(CVM)		X	X	X			
VOLVO	A11	2009	XC60			Power Operated Tailgate(POT)		X	X	X	X		
VOLVO	A11	2010	XC60			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2010	XC60		B4204T6	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting adaptation
VOLVO	A11	2010	XC60		B4204T7	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting adaptation
VOLVO	A11	2010	XC60		B6304T2	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting adaptation 2. Readiness Code (USA/CDN) 3. Reading off IUMPR (USA/CDN)
VOLVO	A11	2010	XC60		B6324S	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting adaptation
VOLVO	A11	2010	XC60		D5244T10	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2010	XC60		D5244T14	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2010	XC60		D5244T16	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2010	XC60		D5244T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2010	XC60		D5244T5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2010	XC60			Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2010	XC60			Transmission Control Module(TCM)		X	X	X			1 Initial adaptation
VOLVO	A11	2010	XC60			Anti-brake System Module(ABS/BCM)		X	X	X	X		
VOLVO	A11	2010	XC60			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2010	XC60			Park Brake Module(PBM)		X	X	X	X		1. Activation and service
VOLVO	A11	2010	XC60			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	2010	XC60			Driver Door Module(DDM)		X	X	X			
VOLVO	A11	2010	XC60			Passenger Door Module(PDM)		X	X	X			
VOLVO	A11	2010	XC60			Power Seat Module(PSM)		X	X	X	X		
VOLVO	A11	2010	XC60			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2010	XC60			Combustion Preheater Module(CPM)		X	X	X			
VOLVO	A11	2010	XC60			Trailer Module (TRM)		X	X	X			
VOLVO	A11	2010	XC60			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2010	XC60			Driver Information Module(DIM)		X	X	X	X	X	
VOLVO	A11	2010	XC60			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2010	XC60			Infotainment control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2010	XC60			Keyless Vehicle Module(KVM)		X	X	X	X		
VOLVO	A11	2010	XC60			Park Assist Module (PAM)		X	X	X			
VOLVO	A11	2010	XC60			Forward Sensing Module(FSM)		X	X	X	X		
VOLVO	A11	2010	XC60			Parking Assistance Camera(PAC)		X	X	X			
VOLVO	A11	2010	XC60			Headlamp Control Module(HCM)		X	X	X	X		
VOLVO	A11	2010	XC60			High level Display Front(HLDF)		X	X	X	X		
VOLVO	A11	2010	XC60			Suspension Module(SUM)		X	X	X			
VOLVO	A11	2010	XC60			Closing Velocity Module(CVM)		X	X	X			

VOLVO	A11	2010	XC60			Power Operated Tailgate(POT)		X	X	X	X		
VOLVO	A11	2011	XC60			Resetting the service reminder indicator(SRI)							X
VOLVO	A11	2011	XC60		B4204T6	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting adaptation
VOLVO	A11	2011	XC60		B4204T7	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	XC60		B6304T4	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	XC60		B6324S5	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	XC60		D5204T2	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	XC60		D5204T3	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	XC60		D5244T10	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	XC60		D5244T13	Engine Control Module(ECM)		X	X	X	X	X	
VOLVO	A11	2011	XC60			Central Electronic Module(CEM)		X	X	X	X	X	
VOLVO	A11	2011	XC60			Driver Information Module(DIM)		X	X	X	X		
VOLVO	A11	2011	XC60			Phone Module(PHM)		X	X	X	X		
VOLVO	A11	2011	XC60			Infotainment control Module(ICM)		X	X	X	X	X	
VOLVO	A11	2011	XC60			Keyless Vehicle Module(KVM)		X	X	X	X		
VOLVO	A11	2011	XC60			Park Assist Module (PAM)		X	X	X			
VOLVO	A11	2011	XC60			Forward Sensing Module(FSM)		X	X	X	X		
VOLVO	A11	2011	XC60			Parking Assistance Camera(PAC)		X	X	X			
VOLVO	A11	2011	XC60			Headlamp Control Module(HCM)		X	X	X			
VOLVO	A11	2011	XC60			High level Display Front(HLDF)		X	X	X	X		
VOLVO	A11	2011	XC60			Suspension Module(SUM)		X	X	X			
VOLVO	A11	2011	XC60			Closing Velocity Module(CVM)		X	X	X			
VOLVO	A11	2011	XC60			Power Operated Tailgate(POT)		X	X	X	X		
VOLVO	A11	2011	XC60			Audio Module(AUD)		X	X	X			
VOLVO	A11	2011	XC60			Accessory USB Unit (AUU)		X	X	X	X		
VOLVO	A11	2011	XC60			Integrated Audio module (IAM)		X	X	X			
VOLVO	A11	2011	XC60			Multimedia Module(MMM)		X	X	X			
VOLVO	A11	2011	XC60			Power Steering Control Module(PSCM)		X	X	X	X		
VOLVO	A11	2011	XC60			Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2011	XC60		TF-80SC AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2011	XC60		TF-80SC	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2011	XC60		MPS6	Transmission Control Module(TCM)		X	X	X			1 Initial adaptation
VOLVO	A11	2011	XC60			Park Brake Module(PBM)		X	X	X	X		1. Activation and service
VOLVO	A11	2011	XC60			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	2011	XC60			Steering Wheel Angle Sensor Module(SAS)		X	X	X	X		
VOLVO	A11	2011	XC60			Climate Control Module(CCM)		X	X	X	X	X	
VOLVO	A11	2011	XC60			Combustion preheater Module(CPM)		X	X	X			
VOLVO	A11	2011	XC60			Driver Door Module(DDM)		X	X	X	X		
VOLVO	A11	2011	XC60			Passenger Door Module(PDM)		X	X	X	X		
VOLVO	A11	2011	XC60			Power Seat Module(PSM)		X	X	X	X		
VOLVO	A11	2011	XC60			Supplemental Restraint System Module(SRS)		X	X	X	X		
VOLVO	A11	2011	XC60			Trailer Module (TRM)		X	X	X			

VOLVO	A11	2012	XC60		D5244T14	Engine Control Module(ECM)		X	X	X	X	X	1.Resetting counter particle filter 2.Checking injectors 3.Adaptation of throttle module 4.Adaptation of the exhaust gas recirculation (EGR) valve 5.Checking the oil level
VOLVO	A11	2012	XC60		B4204T6	Engine Control Module(ECM)		*	*	*	*		
VOLVO	A11	2012	XC60		B4204T7	Engine Control Module(ECM)		*	*	*	*		
VOLVO	A11	2012	XC60		B6304T4	Engine Control Module(ECM)		*	*	*	*		
VOLVO	A11	2012	XC60		B6324S5	Engine Control Module(ECM)		*	*	*	*		
VOLVO	A11	2012	XC60		D5204T3	Engine Control Module(ECM)		*	*	*	*		
VOLVO	A11	2012	XC60		D5244T11	Engine Control Module(ECM)		*	*	*	*		
VOLVO	A11	2012	XC60		D5244T15	Engine Control Module(ECM)		*	*	*	*		
VOLVO	A11	2012	XC60		D5244T17	Engine Control Module(ECM)		*	*	*	*		
VOLVO	A11	2012	XC60		MPS6	Transmission Control Module(TCM)		*	*	*	*		
VOLVO	A11	2012	XC60		TF-80SC	Transmission Control Module(TCM)		*	*	*	*		
VOLVO	A11	2012	XC60		TF-80SC AWD	Transmission Control Module(TCM)		X	X	X	X	X	
VOLVO	A11	2012	XC60			Driver Information Module(DIM)		X	X	X	X		
VOLVO	A11	2012	XC60			Suspension Module(SUM)		X	X	X			
VOLVO	A11	2012	XC60			Anti-brake System Module(ABS/BCM)		X	X	X	X	X	
VOLVO	A11	2012	XC60			Airbag(SRS)		X	X	X	X		
VOLVO	A11	2012	XC60			Differential Electronic Module(DEM)		X	X	X	X		
VOLVO	A11	2012	XC60			Forward Sensing Module(FSM)		X	X	X	X		
VOLVO	A11	2012	XC60			Central Electronic Module(CEM)		*	*	*	*		
VOLVO	A11	2012	XC60			Phone Module(PHM)		*	*	*	*		
VOLVO	A11	2012	XC60			Infotainment control Module(ICM)		*	*	*	*		
VOLVO	A11	2012	XC60			Keyless Vehicle Module(KVM)		*	*	*	*		
VOLVO	A11	2012	XC60			Park Assist Module (PAM)		*	*	*	*		
VOLVO	A11	2012	XC60			Forward Sensing Module(FSM)		*	*	*	*		
VOLVO	A11	2012	XC60			Parking Assistance Camera(PAC)		*	*	*	*		
VOLVO	A11	2012	XC60			High level Display Front(HLDF)		*	*	*	*		
VOLVO	A11	2012	XC60			Closing Velocity Module(CVM)		*	*	*	*		
VOLVO	A11	2012	XC60			Power Operated Tailgate(POT)		*	*	*	*		
VOLVO	A11	2012	XC60			Audio Model(AUD)		*	*	*	*		
VOLVO	A11	2012	XC60			Integrated Audio module (IAM)		*	*	*	*		
VOLVO	A11	2012	XC60			Multimedia Module(MMM)		*	*	*	*		
VOLVO	A11	2012	XC60			Digital Audio Broadcast Module(DABM)		*	*	*	*		
VOLVO	A11	2012	XC60			Remote Digital Audio Receiver (RDAR)		*	*	*	*		
VOLVO	A11	2012	XC60			Subwoofer Module(SUB)		*	*	*	*		
VOLVO	A11	2012	XC60			Television Module(TVM)		*	*	*	*		
VOLVO	A11	2012	XC60			Differential Electronic Module(DEM)		*	*	*	*		
VOLVO	A11	2012	XC60			Power Steering Control Module(PSCM)		*	*	*	*		
VOLVO	A11	2012	XC60			Brake Control Module		*	*	*	*		
VOLVO	A11	2012	XC60			Steering Wheel Angle Sensor Module(SAS)		*	*	*	*		
VOLVO	A11	2012	XC60			Park Brake Module(PBM)		*	*	*	*		
VOLVO	A11	2012	XC60			Climate Control Module(CCM)		*	*	*	*		
VOLVO	A11	2012	XC60			Combustion Preheater Module(CPM)		*	*	*	*		

[illegible]