

Bars Professional



DAIHATSU READ / CLEAR FAULT CODES, DATA STREAM, ACTIVATION, ADAPTAION for ENGINE, TRANSMISSION, ABS, SRS, VSC, IMB

VERSION: 2V05 DATE: May, 2012

MODEL LISTS, General, Japan, Indonesia, Venezuela

| MODEL | AREA | YEAR | FUNCTIONS |
|--------------|--------------------|-----------------------|------------------------|
| APPLAUSE | JAPAN | 1997 – 2000 | EFI, ABS, SRS |
| ATRAI | JAPAN | 1999 – 2001 | EFI, SRS |
| ATRAI-7 | JAPAN | 2000 – 2001 | EFI, AT, ABS, SRS |
| ATRAI WAGON | JAPAN | 2000 – 2007 and after | EFI, AT, ABS, SRS |
| BE-GO | JAPAN | 2006 – 2010 and after | EFI, AT, ABS, SRS, VSC |
| BOON | JAPAN | 2004 – 2010 and after | EFI, AT, ABS, SRS |
| BOON LUMINAS | JAPAN | After 2008 | EFI, AT, ABS, SRS, VSC |
| CHARADE | GENERAL | 2003 – 2007 and after | EFI, ABS, SRS, IMB |
| COO | JAPAN | 2006 – 2010 and after | EFI, AT, ABS, SRS, VSC |
| COPEN | JAPAN, GENERAL | 2002 – 2010 and after | EFI, AT, ABS, SRS, IMB |
| COURE | GENERAL | 1998 – 2007 and after | EFI, ABS, SRS, IMB |
| CUORE | GENERAL | 1998 – 2007 and after | EFI, ABS, SRS, IMB |
| DELTA | GENERAL | After 2004 | EFI |
| ESSE | JAPAN | 2005 – 2010 and after | EFI, ABS, SRS |
| EXTOL | GENERAL | After 2000 | EFI, AT, SRS, IMB |
| GRAN MAX | GENERAL, INDONESIA | After 2008 | EFI, AT, ABS, SRS |
| HIJET | JAPAN, GENERAL | 2001 – 2010 and after | EFI, AT, ABS, SRS |
| MATERIA | GENERAL | After 2006 | EFI, AT, ABS, SRS, IMB |
| MAX | JAPAN | 2001 and after | EFI, AT, ABS, SRS |
| MIRA | JAPAN | 2000 – 2010 and after | EFI, AT, ABS, SRS, VSC |
| MIRA COCOA | JAPAN | After 2009 | EFI, AT, ABS, SRS |
| MIRA GINO | JAPAN | 2002 – 2008 | EFI, AT, ABS, SRS |

| | | | |
|---------------------------|--------------------------------------|-----------------------|-----------------------------|
| MOVE | JAPAN, GENERAL | 1999 – 2009 and after | EFI, AT, ABS, SRS, VSC, IMB |
| MOVE CONTE | JAPAN | 2008 – 2009 and after | EFI, AT, ABS, SRS |
| MOVE LATTE | JAPAN | 2004 – 2008 | EFI, AT, ABS, SRS |
| MYVI | INDONESIA | After 2006 | EFI, AT, IMB |
| NAKED | JAPAN | 2000 – 2004 | EFI, AT, ABS, SRS |
| OPTI | JAPAN | 2000 – 2002 | EFI, AT, ABS, SRS |
| SIRON | JAPAN, GENERAL | 1998 – 2010 and after | EFI, AT, ABS, SRS, VSC, IMB |
| SONICA | JAPAN | 2006 – 2009 | EFI, AT, ABS, SRS |
| STORIA | JAPAN | 2000 – 2004 | EFI, AT, ABS, SRS |
| TANTO | JAPAN | 2003 – 2009 and after | EFI, AT, ABS, SRS |
| TANTO EXE | JAPAN | After 2009 | EFI, AT, ABS, SRS |
| TARUNA | INDONESIA | After 2000 | EFI |
| TERIOS | JAPAN, GENERAL, VENEZUELA, INDONESIA | 1997 – 2007 and after | EFI, AT, ABS, SRS, IMB |
| TERIOS KID | JAPAN | After 2010 | EFI, AT, ABS, SRS |
| TERIOS KID / LUCIA | JAPAN | 2000 – 2010 and after | EFI, AT, ABS, SRS |
| XENIA | INDONESIA | 2001 – 2006 and after | EFI, AT |
| YRV | JAPAN, GENERAL | After 2000 | EFI, AT, ABS, SRS, IMB |

APPLAUSE 1997 – 2000

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|--------------|-----------|------------|------------|------------|------------|
| EFI (Engine) | + | + | + | | |
| ABS | + | + | | | |
| SRS (Airbag) | + | + | | | |

ATRAI 1999 – 2001

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|--------------|-----------|------------|------------|------------|------------|
| EFI (Engine) | + | + | + | + | |
| SRS (Airbag) | + | + | | | |

ATRAI-7 2000 – 2001

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|--------------|
| EFI (Engine) | + | + | + | + | RESET MEMORY |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |

ATRAI-WAGON 2001 – 2007 and after

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|----------------|---------------------------|
| EFI (Engine) | + | + | + | +(before 2007) | RESET MEMORY |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY |
| ABS | + | + | + | +(before 2003) | AIR BLEEDING (after 2003) |
| SRS (Airbag) | + | + | | | |

BE-GO 2006 – 2010 and after

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|--------------|
| EFI (Engine) | + | + | + | | RESET MEMORY |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |
| VSC | + | + | + | | |

BE-GO 2006 – 2010 and after

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|--------------|
| EFI (Engine) | + | + | + | | RESET MEMORY |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |
| VSC | + | + | + | | |

BOON 2004 – 2010 and after

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|-----------------|-----------------|----------------------------|
| EFI (Engine) | + | + | + | + (before 2005) | RESET MEMORY |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY (before 2010) |
| ABS | + | + | + (before 2010) | | AIR BLEEDING (before 2010) |
| SRS (Airbag) | + | + | | | |

BOON LUMINAS After 2008

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|--------------|
| EFI (Engine) | + | + | + | | RESET MEMORY |
| AT / CVT (Transmission) | + | + | + | | |
| ABS | + | + | + | | |
| SRS (Airbag) | + | + | | | |
| VSC | + | + | + | | |

CHARADE 2003 – 2007

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------|-----------|------------|------------|------------|---------------------|
| EFI (Engine) | + | + | + | | RESET MEMORY (note) |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |
| IMB (Immobilizer) | + | + | + | | INITIALIZATION |

COO 2006 – 2010 and after

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|--------------|
| EFI (Engine) | + | + | + | + | RESET MEMORY |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |
| VSC | + | + | + | | |

COPEN 2002 – 2010 and after (Japan)

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|--------------|
| EFI (Engine) | + | + | + | + | RESET MEMORY |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |
| IMB (Immobilizer) | + | + | | | |

COPEN 2002 – 2005 and after (General)

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------|-----------|------------|------------|------------|--------------|
| EFI (Engine) | + | + | + | + | RESET MEMORY |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |
| IMB (Immobilizer) | + | + | | | |

CUORE 1998 – 2007 and after

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------|-----------|------------|------------|------------|-----------------------|
| EFI (Engine) | + | + | + | + (note) | RESET MEMORY |
| ABS | + | + | +□(note) | | AIR BLEEDING (note) |
| SRS (Airbag) | + | + | | | |
| IMB (Immobilizer) | + | + (note) | + | | INITIALIZATION (note) |

Note: Some ECUs do not support those functions.

CUORE 1998 – 2007 and after

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------|-----------|------------|------------|------------|-----------------------|
| EFI (Engine) | + | + | + | + (note) | RESET MEMORY |
| ABS | + | + | + (note) | | AIR BLEEDING (note) |
| SRS (Airbag) | + | + | | | |
| IMB (Immobilizer) | + | + (note) | + (note) | | INITIALIZATION (note) |

Note: Some ECUs do not support those functions.

DELTA After 2004

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|--------------|-----------|------------|------------|------------|------------|
| EFI (Engine) | + | + | + | | |

ESSE 2005 – 2010 and after

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|--------------|-----------|------------|------------|-----------------|--------------|
| EFI (Engine) | + | + | + | + (before 2010) | RESET MEMORY |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |

EXTOL After 2000

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|--------------|
| EFI (Engine) | + | + | + | + | RESET MEMORY |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY |
| SRS (Airbag) | + | + | | | |
| IMB (Immobilizer) | + | + | | | |

GRAN MAX After 2008 (General)

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|--------------|
| EFI (Engine) | + | + | + | | |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |

GRAN MAX After 2008 (Indonesia)

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|--------------|
| EFI (Engine) | + | + | + | | |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY |
| ABS | + | + | + | | AIR BLEEDING |

HIJET 2001 – 2010 and after (Japan)

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|---------------------|
| EFI (Engine) | + | + | + | + (note) | RESET MEMORY (note) |
| AT / CVT (Transmission) | + | + | + | | |
| ABS | + | + | + (note) | | AIR BLEEDING (note) |
| SRS (Airbag) | + | + | | | |

Note: Some ECUs do not support those functions.

HIJET 2004 – 2007 and after (GENERAL)

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|--------------|-----------|------------|------------|------------|---------------------|
| EFI (Engine) | + | + | + | | |
| ABS | + | + | + | + (note) | AIR BLEEDING (note) |
| SRS (Airbag) | + | + | | | |

Note: Some ECUs do not support those functions.

MATERIA After 2006

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|----------------|
| EFI (Engine) | + | + | + | | |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |
| IMB (Immobilizer) | + | + | + | | INITIALIZATION |

MAX 2001 and after

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|---------------------|
| EFI (Engine) | + | + | + | + | RESET MEMORY |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY (note) |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |

Note: Some ECUs do not support those functions.

MIRA 2000 – 2010 and after

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|-------------------------------|
| EFI (Engine) | + | + | + | + | (note) RESET MEMORY (note) |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY (note) |
| ABS | + | + | + | + | (note) AIR BLEEDING (note) |
| SRS (Airbag) | + | + | | | |
| VSC | + | + | + | | |

Note: Some ECUs do not support those functions.

MIRA GINO 2002 – 2008

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|--------------|
| EFI (Engine) | + | + | + | + | RESET MEMORY |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |

MIRA COCOA After 2009

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|--------------|
| EFI (Engine) | + | + | + | | RESET MEMORY |
| AT / CVT (Transmission) | + | + | + | | |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |

MOVE 2000 – 2009 and after (JAPAN)

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|-------------------------------|
| EFI (Engine) | + | + | + | + | (note) RESET MEMORY (note) |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY (note) |
| ABS | + | + | + | + | (note) AIR BLEEDING (note) |
| SRS (Airbag) | + | + | | | |
| VSC | + | + | + | | |

Note: Some ECUs do not support those functions.

MOVE 1999 – 2002 (GENERAL)

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------|-----------|------------|------------|------------|----------------|
| EFI (Engine) | + | + | + | | |
| ABS | + | + | | | |
| SRS (Airbag) | + | + | | | |
| IMB (Immobilizer) | + | + | + | | INITIALIZATION |

MOVE CONTE 2008 – 2009 and after

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|--------------|
| EFI (Engine) | + | + | + | | RESET MEMORY |
| AT / CVT (Transmission) | + | + | + | | |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |

MOVE LATTE 2008 – 2009 and after

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|--------------|
| EFI (Engine) | + | + | + | | RESET MEMORY |
| AT / CVT (Transmission) | + | + | + | | |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | + | | |

MYVI After 2006

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|----------------|
| EFI (Engine) | + | + | + | | |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY |
| IMB (Immobilizer) | + | + | + | | INITIALIZATION |

NAKED 2000 – 2004

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|---------------------|
| EFI (Engine) | + | + | + | + | RESET MEMORY (note) |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY (note) |
| ABS | + | + | + | + | AIR BLEEDING (note) |
| SRS (Airbag) | + | + | | | |
| VSC | + | + | + | | |

Note: Some ECUs do not support those functions.

OPTI 2000 – 2002

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|---------------------|
| EFI (Engine) | + | + | + | + | RESET MEMORY (note) |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY (note) |
| ABS | + | + | + | + | |
| SRS (Airbag) | + | + | | | |

Note: Some ECUs do not support those functions.

SIRION 2000 – 2010 and after (Japan)

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|-----------------|------------|----------------------------|
| EFI (Engine) | + | + | + | + | RESET MEMORY |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY |
| ABS | + | + | + (before 2010) | | AIR BLEEDING (before 2010) |
| SRS (Airbag) | + | + | | | |

Note: Some ECUs do not support those functions.

SIRION 2000 – 2010 and after (General)

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|---------------------|
| EFI (Engine) | + | + | + (note) | + (note) | RESET MEMORY (note) |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY |
| ABS | + | + | + (note) | | AIR BLEEDING (note) |
| SRS (Airbag) | + | + | | | |

Note: Some ECUs do not support those functions.

SONICA 2006 – 2009

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|--------------|
| EFI (Engine) | + | + | + | | RESET MEMORY |
| AT / CVT (Transmission) | + | + | + | | |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |

STORIA 2000 – 2004

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|--------------|
| EFI (Engine) | + | + | + | + | RESET MEMORY |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |

TANTO 2003 – 2009 and after

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|---------------------|
| EFI (Engine) | + | + | + | + (note) | RESET MEMORY |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY (note) |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |

Note: Some ECUs do not support those functions.

TANTO EXE 2003 – 2009 and after

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|--------------|
| EFI (Engine) | + | + | + | | RESET MEMORY |
| AT / CVT (Transmission) | + | + | + | | |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |

Note: Some ECUs do not support those functions.

TARUNA After 2000

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|--------------|-----------|------------|------------|------------|------------|
| EFI (Engine) | + | + | + | + | |

TERIOS 2000 – 2005 (Japan)

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|--------------|
| EFI (Engine) | + | + | + | + | RESET MEMORY |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |

TERIOS 1997 – 2007 and after (General)

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|-----------------------|
| EFI (Engine) | + | + | + | + (note) | RESET MEMORY (note) |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY |
| ABS | + | + | + (note) | | AIR BLEEDING (note) |
| SRS (Airbag) | + | + | | | |
| IMB (Immobilizer) | + | + (note) | + (note) | | INITIALIZATION (note) |

Note: Some ECUs do not support those functions.

TERIOS 2001 – 2007 and after (Venezuela)

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|----------------|
| EFI (Engine) | + | + | + | + (note) | RESET MEMORY |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |
| IMB (Immobilizer) | + | + | + | | INITIALIZATION |

Note: Some ECUs do not support those functions.

TERIOS After 2006 (Indonesia)

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|--------------|
| EFI (Engine) | + | + | + | | |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY |

TERIOS KID After 2010

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|--------------|-----------|------------|------------|------------|--------------|
| EFI (Engine) | + | + | + | | RESET MEMORY |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |

TERIOS KID / LUCIA 2000 – 2010

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|--------------|-----------|------------|------------|------------|--------------|
| EFI (Engine) | + | + | + | + (note) | RESET MEMORY |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |

Note: Some ECUs do not support those functions.

XENIA 2001 – 2006 and after (Indonesia)

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|---------------------|
| EFI (Engine) | + | + | + | + (note) | RESET MEMORY (note) |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY |

Note: Some ECUs do not support those functions.

YRV After 2000 (Japan)

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|--------------|
| EFI (Engine) | + | + | + | + | RESET MEMORY |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |

YRV After 2000 (General)

| SYSTEM | READ CODE | CLEAR CODE | DATASTREAM | ACTIVATION | ADAPTATION |
|-------------------------|-----------|------------|------------|------------|-----------------------|
| EFI (Engine) | + | + | + | + (note) | RESET MEMORY (note) |
| AT / CVT (Transmission) | + | + | + | | RESET MEMORY |
| ABS | + | + | + | | AIR BLEEDING |
| SRS (Airbag) | + | + | | | |
| IMB (Immobilizer) | + | + (note) | + (note) | | INITIALIZATION (note) |

Note: Some ECUs do not support those functions.