

# Bars Professional



## TOYOTA / LEXUS / SCION 1991 – 2012

Version: 2V12 DATE: JUN, 2012

### POWER TRAIN SYSTEMS

CAN SYSTEMS, AFTER 2006

SYSTEM	READ / CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTAION
<b>ENGINE</b> Gasoline Engine Diesel Engine	+	+	+	Gasoline Engine: 1. Deceleration Sensor Zero Point Calibration 2. CVT Oil Pressure Calibration 3. Reset Memory 4. Check Mode 5. Electric Throttle Learning 6. Shift Control Synchronization  Diesel Engine: 1. Reset Memory 2. Check Mode 3. Injector Compensation 4. Supply Pump Initialization 5. Crank Time Compensation Reset 6. A/F Sensor Compensation Reset 7. DPF Deterioration Record Clear
<b>ECT</b> Transmission	+	+		1. AT/CVT Learning Value Initialization 2. Check Mode
<b>CCS</b> Cruise Control System	+	+	-	
<b>HV Control</b> Hybrid Vehicle ECU	+	+	+	1. Initialization 2. Reset Memory 3. Inspection Mode 4. Check Mode
<b>HV Battery</b>	+	+		1. Check Mode 2. Initialization
<b>HV CCS</b> Hybrid Vehicle Cruise Control System	+	+	-	

SYSTEM	READ / CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTAION
<b>FCHV</b> Fuel Cell Hybrid Vehicle	-	+		
<b>FC</b> Fuel Cell	-	+		
<b>E-ACM</b> Electrically Controlled Engine Vibration	+	+		
<b>Stop and Go</b>	+			<ul style="list-style-type: none"> <li>1. Starter Exchange</li> <li>2. Reset A/C Information</li> <li>3. Deceleration Sensor Zero Point Calibration</li> <li>4. Deceleration Sensor Zero Point Clear</li> <li>5. Oil Pump Air Bleeding</li> </ul>

SYSTEM	READ / CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTAION
<b>ENGINE and ECT</b> Engine and Transmission  NON-CAN SYSTEMS, 1997 ~ 2006	+	+	+	Gasoline Engine: 1. Reset ECM/Memory 2. Check Mode Setting 3. VIN 4. Deceleration Sensor Zero Point Calibration 5. CVT Oil Pressure Calibration  Diesel Engine: 1. Injector Compensation
<b>Sequential M/T</b> Manual Transmission	+			1. Parts Exchange
<b>CCS</b> Cruise Control System	+	+	-	
<b>HV Control</b> Hybrid Vehicle ECU	+	+		
<b>HV Battery</b>	+	+		1. Onboard Equalizing Charge 2. ECU Initialization
<b>HV CCS</b> Hybrid Vehicle Cruise Control	+	+	-	
<b>Stop and Go</b>	+	+		

## CHASSIS SYSTEM

CAN SYSTEMS, 2006 ~

SYSTEM	READ / CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTAION
<b>ABS / VSC / TRC</b> Anti-Lock Brake System Vehicle Stability Control Traction Control	+	+	+	1. Reset Memory 2. Zero Point Calibration 3. ECB Utility (if provided) 4. Inspection Mode 5. Air Bleeding 6. Check Mode 7. Test Mode
<b>TPMS</b> Tire Pressure Monitor	+	+	-	1. Reset Memory 2. ID Registration (ID Code) 3. Check Mode
<b>AHC</b> Active Height Control	+	+		
<b>EMPS / EHPS</b> Electric Motor Powering Steering Electric Hydraulic Power Steering	+	+	-	1. Torque sensor adjustment (Type 4) 2. Torque sensor adjustment (Type 5) 3. Torque sensor adjustment (Type 6) 4. Torque sensor adjustment (Japanese Models) 5. Check Mode
<b>4WD</b> 4-Wheel Drive	+	+	+	1. Check Mode 2. Reset Memory
<b>Intelligent Parking Assist</b>	+		-	
<b>Electric Parking Brake</b>	+		+	1. Reset Memory
<b>Lane Keeping Assist</b>	+	+	-	
<b>Front Stabilizer</b>	+		+	
<b>Rear Stabilizer</b>	+		+	
<b>KDSS</b> Kinetic Dynamic Suspension System	+			1. Check Mode

Non-CAN SYSTEMS, 1997 ~ 2006

SYSTEM	READ / CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTAION
<b>ABS / VSC / TRC</b> Anti-Lock Brake System Vehicle Stability Control Traction Control	+	+	+	1. Reset Memory 2. Zero Point Calibration 3. ECB Utility (if provided) 4. Test Mode Setting
<b>TPMS</b> Tire Pressure Monitor	+	+	-	1. ID Registration (Color Code) 2. ID Registration (ID Code)
<b>AHC</b> Active Height Control	+	+		1. Height Offset Utility
<b>EMPS / EHPS</b> Electric Motor Powering Steering Electric Hydraulic Power Steering	+	+	-	1. Torque sensor adjustment (Type 1) 2. Torque sensor adjustment (Type 2)
<b>VGRS</b> Variable Gear Ratio Steering	+		-	1. Steer Angle Adjust 2. Counter Clear 3. Clear Predriver Mailfunction counter value 4. System Lock 5. System Unlock
<b>T/M Control</b>	+		-	
<b>KDSS</b> Kinetic Dynamic Suspension System	+	+		
<b>Stabilizer</b>	+		-	1. Backup Memory Reset

## AIR CONDITION SYSTEM

CAN SYSTEMS, 2006 ~

SYSTEM	READ / CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTAION
Air Conditioner	+	+	+	1. Servomotor Initialization 2. Refrigerant Gas Volume Check
Front Right Seat A/C	+	+	+	
Front Left Seat A/C	+	+	+	
Rear Right Seat A/C	+	+	+	
Rear Left Seat A/C	+	+	+	

Non-CAN, 1997 ~ 2006

SYSTEM	READ / CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTAION
Air Conditioner	+	+	+	1. Servomotor Initialization

## MAIN BODY SYSTEMS

CAN SYSTEMS, 2006 ~

SYSTEM	READ / CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTAION
<b>SRS Airbag</b>	+	+	-	1. Check Mode
<b>Meter</b>	+	+	+	
<b>Tilt &amp; Telescopic</b>	+	+	+	
<b>AFS</b>	+		+	1. ECU Information Sync
<b>Body / Gateway</b>	+	+	+	1. Initialization
<b>Body 4</b>	+	+	+	
<b>Body 5</b>	+		+	
<b>Power Source Control</b>	+	+		1. Auto Power OFF Cancel
<b>Electric Power Control</b>	+	+		
<b>Charging Control</b>				
<b>Rain Sensor</b>	+	+	-	
<b>Intuitive P/A</b> Clearance Sonar	+	+	+	
<b>Pre-Collision</b>	+	+		1. Check Mode
<b>Pre-Collision 2</b>	+	+		
<b>Navigation System</b>	+	-	-	
<b>PCS WIL R</b> Active Headrest R	+			
<b>PCS WIL L</b> Active Headrest L	+			

Non-CAN SYSTEMS, 1997 ~ 2006

SYSTEM	READ / CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTAION
SRS Airbag	+	-	-	
Meter		+	+	
Tilt & Telescopic	+	+	+	
AFS	+	+	+	1. Steering Sensor Initialization
Body / Gateway	+	+	+	1. Wireless Register 2. Automatic door locking and unlocking function 3. ECU Connection Information Initialization
Body 2	+	+	+	
Body 3	++		+	
Body 4	+	+	+	
Body 5	-	+	+	
Power Source Control	+	+	+	
Rain Sensor	-	+	-	
Wiper	-	+	+	
Clearance Sonar	+	+	+	
Pre-Collision	+	+	+	
Mirror-L	-	+	+	
Mirror/Mirror-R	-	+	+	
Night View	+			
Telematics				

## GATEWAY SYSTEMS

CAN SYSTEMS, 2006 ~

SYSTEM	READ / CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTAION
Gateway	+	+	-	
HV Gateway	+	+	-	
ECM Gateway	+	+	-	
ECB Gateway	+	+	-	
Mayday Gateway	+	+	-	
PM1 Gateway	+	+	-	1. Initialization
PM2 Gateway	+		-	1. Initialization
Accessory Gateway	+		-	
WIL Gateway	+		-	

Non-CAN SYSTEMS, 1997 ~ 2006

SYSTEM	READ / CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTAION
Gateway	+			

## IMMOBILIZER SYSTEMS

### CAN SYSTEMS, 2006 ~

SYSTEM	READ / CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTAION
<b>Entry &amp; Start /Smart Key</b>	+	+	+	
<b>TDS</b> Thief Detection System	+	+	+	
<b>Remote Engine Starter</b>	+	+	-	1. Trouble Factor Code Clear
<b>Starting Control</b>	+	+	+	

### Non-CAN SYSTEMS, 1997 ~ 2006

SYSTEM	READ / CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTAION
<b>Smart Key</b>	+	+	+	
<b>Thief Detection System</b>	+	+	+	
<b>Immobilizer</b>	+	+	+	1. Key utility 2. Reset Immobiliser(No Master Keys)

**SEAT/DOOR/ROOF SYSTEM**

CAN SYSTEMS, 2006 ~

<b>SYSTEM</b>	<b>READ / CLEAR CODE</b>	<b>DATA STREAM</b>	<b>ACTIVATION</b>	<b>ADAPTAION</b>
Driver Door	+			
Passenger Door	+			
Rear Left Door	+	+	+	
Rear Right Door	+	+	+	
Back Door	+			
Driver Door Motor	+	+	+	
Passenger Door Motor	+	+	+	
Rear Left Door Motor	+	+	+	
Rear Right Door Motor	+	+	+	
Driver Seat	+ (Note 1)	+	+	
Passenger Seat	+ (Note 1)	+		
Rear Left Seat	+	+		
Rear Right Seat	+	+		
Slide Roof	+	+		
Back Door P/W	+	+	+	

Note 1: 07' ~ 09' LS460 does support

Non-CAN SYSTEMS, 1997 ~ 2006

<b>SYSTEM</b>	<b>READ / CLEAR CODE</b>	<b>DATA STREAM</b>	<b>ACTIVATION</b>	<b>ADAPTAION</b>
<b>Occupant Detect</b>	+	+	-	1. Zero Calibration 2. Sensitivity Check
<b>Driver Door</b>	+	+	+	
<b>Passenger Door</b>	+	+	+	
<b>Rear Left Door</b>	+	+	+	
<b>Rear Right Door</b>	+	+	+	
<b>Back Door</b>	+	+	+	
<b>Driver Seat</b>	-	+	+	
<b>Passenger Seat</b>	-	+	+	
<b>Rear Left Seat</b>	-	+	+	
<b>Rear Right Seat</b>	-	+	+	
<b>Retractable Hardtop</b>	+	+	+	
<b>Slide Roof</b>	-	+	+	

## SWITCH SYSTEMS

CAN SYSTEMS, 2006 ~

SYSTEM	READ / CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTAION
Master Switch	+	+	-	
Combination Switch	-	+	-	
Driver Seat Switch	+	+	+	
Steering Pad Switch	-	+	-	
Center Console Switch	-	+	+	
Rear Console Switch	+	+	+	

Non-CAN SYSTEMS, 1997 ~ 2006

SYSTEM	READ / CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTAION
Master Switch	-	+	+	
Combination Switch	-	+	-	
Driver Seat Switch	-	+	-	
Rear Seat Switch	-	+	-	
Steering Pad Switch	-	+	-	
P Master Switch	-			

**SPECIAL LOCAL VEHICLES****AVANZA, ~ 2005 / 05**

SYSTEM	READ / CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTAION
Engine	+	+		
ECT	+	+		
ABS	+	+		
Immobiliser	+	-	-	

**AVANZA, 2005 / 05 ~**

SYSTEM	READ / CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTAION
Engine	+	+		
ECT	+	+		
ABS	+	+		
SRS Airbag	+	-	-	
Immobiliser	+	-	-	

**RUSH**

SYSTEM	READ / CLEAR CODE	DATA STREAM	ACTIVATION	ADAPTAION
Engine	+	+		
ECT	+	+		
ABS	+	+		
SRS Airbag	+	-	-	
Immobiliser	+	-	-	

**WORK SUPPORT**

<b>SYSTEM</b>	<b>FUNCTION DESCRIPTION</b>
<b>Transmission</b>	<ol style="list-style-type: none"><li>1. SMT Learning Value Initialization</li><li>2. G Sensor Zero Point Learning</li><li>3. AT/CVT Learning Value Initialization</li><li>4. CVT Oil Pressure Learning</li><li>5. AT Unit Correction (AT Code Read / Save)</li><li>6. AT Unit Correction (Automatic AT Code Registration)</li><li>7. AT Unit Correction (Manual AT Code Registration)</li><li>8. AT Unit Correction (AT Code Initialization)</li><li>9. Clutch Oil Pressure Learning</li></ol>
<b>Electronic Controlled Diesel (ECD)</b>	<ol style="list-style-type: none"><li>1. Injector correction (each cylinder code confirmation)</li><li>2. Injector correction (manual ID code registration)</li><li>3. Injector class confirmation</li><li>4. Injector class setting</li><li>5. Filter's related work (compulsion again start)</li><li>6. Filter's related work (difference presses confirmation)</li><li>7. Supply pump initialization</li><li>8. Engine setting change</li></ol>
<b>Radar Cruise</b>	<ol style="list-style-type: none"><li>1. Optical Axis Adjustment</li><li>2. Radar Cruise Initialization</li></ol>
<b>Battery</b>	<ol style="list-style-type: none"><li>1. ECU Initialization</li></ol>
<b>Mild HV</b>	<ol style="list-style-type: none"><li>1. Refresh Charge</li><li>2. SOC Learning</li></ol>
<b>Stop &amp; Go</b>	<ol style="list-style-type: none"><li>1. Starter Active Count Display</li><li>2. Starter Active Count Setting</li><li>3. Starter Active Count Clear</li><li>4. CVT Oil Pressure Pump Air Bleeding</li></ol>
<b>VGRS</b>	<ol style="list-style-type: none"><li>1. Actuator Angle Center Adjustment</li><li>2. System Lock</li><li>3. System Unlock</li><li>4. Clear Predriver Malfunction Counter Value</li></ol>
<b>Electric Power Steering</b>	<ol style="list-style-type: none"><li>1. Steering Wheel Zero Point Adjustment</li></ol>

**CUSTOMIZE**

ITEM	FUNCTION LIST
<b>Door Lock</b>	<ol style="list-style-type: none"><li>1. Speed Autolock (Once)</li><li>2. All Unlock w/ D door open-close</li><li>3. IG ON Parking Unlock</li><li>4. D-Seat 2Operation Unlock</li><li>5. Lock Shift Brake</li><li>6. Double Lock Set</li><li>7. Unlock /Park</li><li>8. All Unlock/Open-Close</li><li>9. Unlock Key Twice</li><li>10. Auto Lock</li><li>11. Auto Lock/ Shift</li><li>12. Lock W/Shift P-except P Brake Release</li><li>13. Auto Lock/ Shift not P</li><li>14. Mech. Key Entry Alarm Cancel</li><li>15. Auto Unlock/Shift</li></ol>
<b>Warning</b>	<ol style="list-style-type: none"><li>1. Key Remind Volume</li><li>2. Key Remind Sound</li><li>3. Seat Belt Warning</li><li>4. Driver Side Seatbelt Warning Buzzer</li><li>5. Front Passenger Side Seatbelt Warning Buzzer</li><li>6. Light Reminder</li><li>7. Door Open Warning</li><li>8. Key Low Battery Warning</li><li>9. Fr Sensor Onset Range</li><li>10. Rr Sensor Onset Range</li><li>11. Keep Sense Buzzer</li><li>12. Fr &amp; Rr Buzzer Freq</li><li>13. Fr &amp; Rr Buzzer Volume</li><li>14. Speed Warning Buzzer</li><li>15. Buzzer Length</li><li>16. Door Open-Close Buzzer/P</li><li>17. Push-on Door-open Buzzer/P</li><li>18. Carry Out Key Buzzer</li><li>19. Door Op/Cl Buzzer</li><li>20. Push-on Door-close Buzzer</li></ol>

ITEM	FUNCTION LIST
	21. Key No Fit Warn Buzzer 22. Key Battery Warn Buzzer 23. Key Inside Lock Buzzer 24. Half Lock Buzzer 25. Smart Buzzer Volume 26. Smart Buzzer Number 27. Keep Sense Status Buzzer 28. Rear Buzzer Onset Range 29. Front Buzzer Onset Range 30. 31. 32. Key Left in Vehicle Buzzer 33. Lock Door in E/G Idling Buzzer 34. Passenger Take Key 35. Key Taken Warning (w/o P range) 36. Key Taken Warning (w/P range) 37. Number of Warning Buzzer Sound 38. Key Out Range Warning
<b>Slide Roof</b>	1. Door Key Related Open 2. Door Key Related Close 3. Wireless Key Related Open 4. Wireless Key Related Close 5. Door Handle Lock Button 6. Door Key Related Operation 7. Wireless Key Related Operation
<b>Unit Conversion</b>	1. Units By Region
<b>Compass Calibration</b>	1. Compass Calibration
<b>PSD &amp; PBD operation</b>	1. Wireless PSD Operation (RR) 2. PSD Buzzer Volume (RR) 3. PSD SW Operation (RR) 4. Wireless PSD Operation (RL) 5. PSD Buzzer Volume (RL) 6. PSD SW Operation (RL) 7. PBD Assist Open 8. PBD Assist Close

ITEM	FUNCTION LIST
	9. Wireless PBD Operation 10. PBD Buzzer Volume 11. PBD SW Operation 12. PBD One Motion 13. PBD Power Operation 14. Wireless PBD Operation 15. PBD SW Operation 16. PBD Buzzer 17. PBD Close SW Waiting Time 18. PBD Close SW Press Condition 19. Door Unlock with 1 Motion 20. One Motion 21. One Motion with Unlock Door 22. Smart Back Door P/W Up 23. Smart Back Door P/W Down 24. Smart Back Door P/W ON Time 25. Back Door P/W UP when half-shut
TVSS (Toyota Vehicle Security System)	1. Garage Mode 2. IG Door Lock 3. Piezo Buzzer Defeat

### KEY REGISTER / ERASE

SYSTEM	FUNCTION DESCRIPTION
Smart Key	1. Key Status 2. Key Registration 3. Clear Keys (except Master-Key)

## MODELS EQUIPPED WITH 23-PIN AND 17-PIN CONNECTOR

### 23-PIN CONNECTOR MODELS

1991 ~ 1997

SYSTEM	READ CODE	CLEAR CODE	DATA STREAM	ACTIVATION
Engine	+	Disconnect fuse	+	-
Airbag / SRS	+	+	-	-
ABS	+	Disconnect fuse	-	-

### 17-PIN CONNECTOR MODELS

1991 ~ 1997

SYSTEM	READ CODE	CLEAR CODE	DATA STREAM	ACTIVATION
Engine	+	Disconnect fuse	+	-
Airbag / SRS	+	+	-	-
ABS	+	Disconnect fuse	-	-
Traction	+	-	-	-
Cruise Control	+	-	-	-

- : ECU does not support the function

#### TROUBLE SHUTTING:

Some models equipped not only one connector. Some systems can be found on OBD-II connector, 17-pin connector, and 23-pin connector individually.