

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
	98/10-00/10	EF-DET	EFI	√	√	√		1.Read ECU No.	
		EF-SE	EFI	√	√	√		1.Read ECU No.	
		EF-SE,-VN	EFI	√	√	√		1.Read ECU No.	
	00/10-01/06	EF-DET(Mechanism AT)	EFI	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
		EF-DET(Electrical Control AT)	EFI	√	√	√	√	1.Read ECU No.	
			A/T	√	√	√	√	1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
		EF-SE	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
		EF-VE	EFI	√	√	√	√	1.Read ECU No.	
			CVT	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
			EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
		EF-VE2	CVT	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			EPS	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
	01/06-02/12	EF-DET	EFI	√	√	√	√	1.Read ECU No.	
			A/T	√	√	√	√	1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
		EF-SE	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
		EF-VE	EFI	√	√	√	√	1.Read ECU No.	
			CVT	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
			EFI	√	√	√	√	1.Read ECU No.	
			CVT	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
	02/12-04/12	EF-VE2		√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			EPS						
			A/B	√	√			1.Read ECU No.	
		EF-DET	EFI	√	√	√	√	1.Read ECU No.	
			A/T	√	√	√	√	1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√		1.Read ECU No.	
				√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			EPS						
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No.	
		EF-SE	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
				√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			EPS						
			EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
Mira		EF-VD	A/B	√	√			1.Read ECU No.	
				√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
		EF-VE	EPS						
			EFI	√	√	√	√	1.Read ECU No.	
			CVT	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
				√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			EPS						
		EF-VN	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
				√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			EPS						
			EFI	√	√	√	√	1.Read ECU No.	
				√	√	√	√	1.Read ECU No. 2.A/T Learning Value Initialization	
			A/T						
			DVS	√	√	√		1.Read ECU No. 2.DVS Bleeding	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
	04/12-	EF-DET		√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			EPS						
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
		EF-SE	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
			EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
		EF-VD	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
			EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
		EF-	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
		VE(BEYOND CVT)		√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			EPS						
		EF-VE(CVT)	EFI	√	√	√	√	1.Read ECU No.	
			CVT	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
				√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			EPS						
		EF-VN	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
				√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			EPS						
	KF-DET		EFI	√	√	√	√	1.Read ECU No.	
				√	√	√		1.Read ECU No. 2.CVT ECU Learning Initializing	
			CVT						
			ACC	√	√			1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			VSC	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
	06/12-	KF-VE	EPS	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			ITC	√	√	√	√	1.Read ECU No.	
			Power Source	√	√	√	√	1.Read ECU No.	
			EFI	√	√	√	√	1.Read ECU No.	
			CVT	√	√	√		1.Read ECU No. 2.CVT ECU Learning Initializing	
			ERS	√	√	√	√	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	
			ABS	√	√	1.Read ECU No. 2.Eco-Run ECU Initialization Learning 3.Delete and input Starter Working Times	√	1.Read ECU No. 2.ABS Bleeding	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
		KF-VN	EPS	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√	√	1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			ITC	√	√	√	√	1.Read ECU No.	
			Power Source	√	√	√	√	1.Read ECU No.	
			EFI	√	√	√	√	1.Read ECU No.	
			EPS	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
	98/10-00/10	EF-DET	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No.	
			DVS	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
		EF-SE	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
		EF-VE	EFI	√	√	√	√	1.Read ECU No.	
			CVT	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No.	
			DVS	√	√	√		1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
		JB-DET	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√		1.Read ECU No. 2.DVS Bleeding	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
	00/10-01/06		A/B	√	√			1.Read ECU No.	
			EFI	√	√	√		1.Read ECU No.	
		EF-DET(Mechanism AT)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
			EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
		EF-DET(Electrical Control AT)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
		EF-VE(W/tyre blow-up device)	EFI	√	√	√	√	1.Read ECU No.	
			CVT	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
		EF-VE(W/O tyre blow-up device)	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
			EFI	√	√	√		1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
		JB-DET	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	01/06-01/10	EF-DET	EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
		EF-VE(W/ tyre blow-up device)	EFI	√	√	√	√	1.Read ECU No.	
			CVT	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
		EF-VE(W/O tyre blow-up device)	EFI	√	√	√	√	1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
			EFI	√	√	√		1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
		JB-DET	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	01/10-02/10	EF-DET	EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No.	
		EF-VE(W/ tyre blow-up device)	EFI	√	√	√	√	1.Read ECU No.	
			CVT	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
		EF-VE(W/O tyre blow-up device)	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
			EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
Move		JB-DET	DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
		EF-DET	EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√		1.Read ECU No. 2.DVS Bleeding	
			EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			EFI	√	√	√	√	1.Read ECU No.	
			CVT	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
	02/10-04/12	EF-VE		√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			EPS						
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
		JB-DET	EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√		1.Read ECU No. 2.DVS Bleeding	
			EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			ACC	√	√			1.Read ECU No. 2.Radar Cruise Optical Axis Adjustment	
			EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
	04/12-	EF-DET	AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√		1.Read ECU No.	
			EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
		EF-VE(BEYOND CVT)	EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			EFI	√	√	√	√	1.Read ECU No.	
			CVT	√	√	√		1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
		EF-VE(CVT)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
				√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			EPS						
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No.	
		JB-DET	EFI	√	√	√	√	1.Read ECU No.	
				√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			AT						
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
				√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			EPS						
			A/B	√	√			1.Read ECU No.	
				√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			KFS						
				√	√			1.Read ECU No. 2.Radar Cruise Optical Axis Adjustment	
			ACC						
			EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
	07/01-	EF-VE	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
		KF-VE	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
				√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			KFS						
	00/08-00/12	EJ-VE	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
		K3-VE	EFI	√	√	√	√	1.Read ECU No.	
				√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			AT						
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√		1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No.	
			EFI	√	√	√	√	1.Read ECU No.	
				√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			AT						

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
YRV		K3-VET	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√		1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	00/12-	EJ-VE	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
		K3-VE	EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√		1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
		K3-VET	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No.	
	01/01-02/01	EF-DET	EFI	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
				√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
		EF-VE	EFI	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No.	
	02/01-03/05	EF-DET	EFI	√	√	√	√	1.Read ECU No.	
				√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
				√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			KFS	√	√	√		1.Read ECU No.	
			EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
AtraiWagon	03/05-05/04	EF-VE	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No.	
		EF-DET	EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
				√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			KFS	√	√	√			
		EF-VE	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
				√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			KFS	√	√	√			
	05/05-	EF-DET(A/T)	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
		EF-DET(M/T)	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
			EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
Atrai-7/Hijet Grancargo	00/07-01/06	K3-VE	AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	01/06-	K3-VE	EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Altis	06/01-	2AZ-FE						1.Read ECU No.	Use Toyota software to test it.
Esse	05/12-	KF-VE(A/T)	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
		KF-VE(M/T)	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
Opti	00/10-01/06	EF-DET(Mechanism AT)	EFI	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
		EF-DET(Electrical Control AT)	EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√	√	1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
		EF-SE	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
		EF-VE	EFI	√	√	√	√	1.Read ECU No.	
			CVT	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No.	
			DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
		EF-DET	EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			A/B	√	√			1.Read ECU No.	
			EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
	01/06-02/08	EF-SE	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
		EF-VE	EFI	√	√	√	√	1.Read ECU No.	
			CVT	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
Copen	02/06-	JB-DET	EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
			IMB	√	√			1.Read ECU No.	
			roof	√	√	√	√	1.Read ECU No. 2.Roof ECU Initialization	
	~00/05	EJ-DE	EFI	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
		EJ-VE	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
	00/05-00/12	K3-VE2	KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	00/12-02/01	EJ-VE	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
		K3-VE2	EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√		1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
Storia	02/01-02/08		KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			EFI	√	√	√	√	1.Read ECU No.	
		EJ-VE	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
				√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			KFS	√	√	√		1.Read ECU No.	
		K3-VE	EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√		1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
				√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			KFS	√	√	√		1.Read ECU No.	
		K3-VE2	EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
	02/08-		DVS	√	√	√		1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No.	
		EJ-VE	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
		JC-DET	EFI	√	√	√	√	1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
		K3-VE	EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√		1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
		K3-VE2	EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
		K5-VEZ	DVS	√	√	√		1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No.	
	03/11-05/06	EF-DET	EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
				√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			EPS						
			A/B	√	√			1.Read ECU No.	
		EF-VE	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
				√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			EPS						
			A/B	√	√			1.Read ECU No.	
			EFI	√	√	√	√	1.Read ECU No.	
				√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
Tanto	05/06-	EF-DET		√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			EPS						
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
		EF-VE	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
				√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			EPS						
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No.	
		KF-VE	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
				√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			EPS						
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			EFI	√	√	√		1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions							
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others		
Terios	~00/05	HC_EJ	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding			
			A/B	√	√			1.Read ECU No.			
	00/05-05/12	K3-VE	EFI	√	√	√	√	1.Read ECU No.			
			AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization			
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding			
			EPS	√	√	√		1.Read ECU No.			
			A/B	√	√			1.Read ECU No.			
			EFI	√	√	√	√	1.Read ECU No.			
		K3-VET	AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization			
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding			
			EPS	√	√	√		1.Read ECU No.			
			A/B	√	√			1.Read ECU No.			
			00/11-01/11	EF-DEM	EFI	√	√	√		1.Read ECU No.	
					ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
A/B	√	√					1.Read ECU No.				
KFS	√	√			√		1.Read ECU No.				
EF-DET	EFI	√	√	√		1.Read ECU No.					
	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding					
	A/B	√	√			1.Read ECU No.					

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
Terios Kid/Lucia			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	01/11-	EF-DEM	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			EPS	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
		EF-DET	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			EPS	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No.	
		EF- DET(Mechan nism AT)	EFI	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
Naked	00/10-01/06	EF-DET(Electrical Control AT)	AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
		EF-VE	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No.	
		EF-DET	EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
	01/06-02/12		KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			EFI	√	√	√	√	1.Read ECU No.	
		EF-VE	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No.	
			EFI	√	√	√	√	1.Read ECU No.	
	02/12-04/04	EF-DET	AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√	√	1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			EFI	√	√	√	√	1.Read ECU No.	
		EF-VE	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No.	
			EFI	√	√	√		1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
	01/01-01/05	EF-DET	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No.	
		EF-SE	EFI	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			EPS	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
		EF-VE	EFI	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			EPS	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No.	
		EF-VN	EFI	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
		EF-DET	EFI	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
				√	√			1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			KFS						
		EF-SE(Truck)	EFI	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			EPS	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
	01/05-01/09	EF-SE(Cargo, Atrai)	EFI	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
		EF-VE(Truck)	EFI	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			EPS	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
		EF-VE(Cargo, Atrai)	EFI	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
		EF-VN	EFI	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
		EF-DET	EFI	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No.	
		EF-SE(Truck)	EFI	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			EPS	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
		EF-	EFI	√	√	√		1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
	01/09-01/10	EF-SE(Cargo, Atrai)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
		EF-VE(Truck)	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			EPS	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
			EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
		EF-VE(Cargo, Atrai)		√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			KFS						
			EFI	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
		EF-VN	EFI	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
		EF-DET	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
				√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			KFS						
		EF-SE(Truck)	EFI	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			EPS	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
Hijet/Atrai	01/10-02/01	EF-SE(Cargo, Atrai)	EFI	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
		EF-VE(Truck)	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			EPS	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
		EF-VE(Cargo, Atrai)	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
		EF-VN	EFI	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
		EF-DET	EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
		EF-SE(Truck)	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
	02/01-04/12		EPS	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
		EF-SE(Cargo, Atrai)	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
		EF-VE(Truck)	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			EPS	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
		EF-VE(Cargo, Atrai)	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
				√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			KFS						
		EF-VN	EFI	√	√	√	√	1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
		EF-DET(A/T)	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
		EF-DET(M/T)	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
			EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
	04/12-	EF-SE(Truck)	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			EPS	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
		EF-SE(Cargo, Atrai)	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
		EF-VE(Truck->A/T)	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			EPS	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
		EF-VE(Truck->M/T)	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			EPS	√	√	√		1.Read ECU No.	
			A/B	√	√			1.Read ECU No.	
		EF-VE(Cargo-->A/T)	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
		EF-VE(Cargo-->M/T)	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
			EFI	√	√	√	√	1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
		EF-VE(HV)	AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			A/B	√	√			1.Read ECU No.	
		EF-VN	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
			EFI	√	√	√	√	1.Read ECU No.	
BEGO	06/01-	3SZ-VE	AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			VSC	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
			EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			A/B	√	√			1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
Roon	04/05-05/11	1KR-FE	EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			EFI	√	√	√	√	1.Read ECU No.	
		K3-VE	AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			EPS	√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			A/B	√	√			1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
Daihatsu			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
	05/11-	1KR-FE	EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No.	
				√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			EPS						
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No.	
		K3-VE	EFI	√	√	√	√	1.Read ECU No.	
				√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			AT						
			ABS	√	√	√	√	1.Read ECU No.	
				√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			EPS						
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
Max	01/10-	EF-DET	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√		1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No.	
		EF-VE	EFI	√	√	√	√	1.Read ECU No.	
			CVT	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			DVS	√	√	√		1.Read ECU No. 2.DVS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
		JB-DET	EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
			KFS	√	√	√		1.Read ECU No. 2.Confirm Main Key and Subkey Status	
			4wd	√	√	√		1.Read ECU No.	
			EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No.	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
Mira Gino	02/08-04/12	EF-DET	ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
		EF-VE	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
		EJ-VE	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
	04/12-	EF-VE	EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			A/B	√	√			1.Read ECU No.	
MOVE Latte	04/08-	EF-DET	EFI	√	√	√	√	1.Read ECU No.	
			AT	√	√	√		1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
				√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			EPS						
			A/B	√	√			1.Read ECU No.	
			EFI	√	√	√	√	1.Read ECU No.	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	

Daihatsu **V18.10** Diagnostics List(Note:For reference only)

Vehicle	Year	Engine Type	System	Functions					
				Read Dtc	Clear Dtc	Data Stream	Actuation	Special Function	Others
COO	06/01-	EF-VE		√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			EPS						
			A/B	√	√			1.Read ECU No.	
		K3-VE	EFI	√	√	√	√	1.Read ECU No.	
				√	√	√		1.Read ECU No. 2.A/T Learning Value Initialization	
			ABS	√	√	√	√	1.Read ECU No. 2.ABS Bleeding	
			VSC	√	√	√	√	1.Read ECU No. 2.DVS Bleeding	
				√	√	√		1.Torque sensor zero point adjustment(*) 2.Mode change(*)	
			EPS						
			A/B	√	√			1.Read ECU No.	

(*):Tested;

(?):Manual on website(www.x431.com)

Note:The final interpretation of the products belongs to LAUNCH TECH CO.,LTD.

CONNECTOR	X431	DIAGUN
SMART OBD	N/A	N/A
OBD 16C	N/A	N/A
CANBUS II	It is available for the 16PIN DLC.	N/A
diagun connector	N/A	It is available for the 16PIN DLC.
SUPER 16	It is available for 16PIN DLC.	N/A