

Benz **V40.05** CAN Diagnostics List (Note: For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
220	As of 09/2002	AB	√	√	√	√			
		CGW	√	√	√				
		SDS	√	√	√				
		CDI3	√	√	√	√	√	√	
		DS_LF	√	√	√	√			
		DS_RF	√	√	√	√			
		DSP	√	√	√	√			
		RevETR-LF	√	√	√	√			
		RevETR-RF	√	√	√	√			
		DTR	√	√	√				
		OCP	√	√	√				
		UCP	√	√	√				
		STH	√	√	√				
		ETC	√	√	√	√			
				AB	√	√	√	√	
CGW	√			√	√				
SDS	√			√	√				
ESM	√			√	√	√			
EIS	√			√	√				
BCM	√			√	√	√			
HRA	√			√	√	√			
SUSPENSION	√			√	√	√	√	√	
HS	√			√	√				
LCP	√			√	√				
UCP	√			√	√	√			
OCP	√			√	√	√			

Benz **V40.05** CAN Diagnostics List (Note:For reference only)

Menu			Functions							
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others	
211	ALL MODEL	PASS_SAM	√	√	√	√				
		DR_SAM	√	√	√	√				
		REAR_SAM	√	√	√	√				
		IC	√	√	√	√				
		PTS	√	√	√					
		SCM	√	√	√	√				
		DCM_RR	√	√	√	√				
		DCM_RL	√	√	√	√				
		DCM_FR	√	√	√	√				
		DCM_FL	√	√	√	√				
		ESA	√	√	√	√				
		ESA_PASS	√	√	√	√				
		AAC	√	√	√	√				
		ESP	√	√	√	√	√	√	√	
		SBC	√	√	√	√			√	
		CDI3	√	√	√	√	√	√	√	
		ASSYST	√	√	√	√			√	
		ETC	√	√	√	√	√			
		ME9.7	√	√	√	√	√	√	√	
		CDI4	√	√	√	√	√	√	√	
		ME9.7(AMG)	√	√	√	√	√	√	√	
		DTR	√	√	√	√				
		TPC	√	√	√	√				
		ABR	√	√	√	√	√	√	√	
		WSS	√	√	√	√				
REVETR-LF	√	√	√	√						

Benz **V40.05** CAN Diagnostics List (Note: For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		REVETR-RF	√	√	√				
		XALWA-L	√	√	√				
		XALWA-R	√	√	√				
		AHE	√	√	√				
		SVMCM	√	√	√				
		On-Board	√	√	√				
		ASSYST_PLUS	√	√	√				
		DS-LF	√	√	√				
		DS-RF	√	√	√				
		DSP	√	√	√				
		TLC	√	√	√				
		RWT	√	√	√				
		REDC	√	√	√				
		ARWT	√	√	√				
		LAE	√	√	√				
		AGW	√	√	√				
		CDC	√	√	√				
		CTEL	√	√	√				
		COMAND/ AUDIO	√	√	√				
		VCS	√	√	√				
		NAVI	√	√	√				
		TV	√	√	√				
		NAVI(USA)	√	√	√				
		TELEAID	√	√	√				
		TELEAID(J)	√	√	√				

Benz **V40.05** CAN Diagnostics List (Note: For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		ESA-DRIVER	√	√	√				
		ESA-PASS	√	√	√				
		DCM-RR	√	√	√				
		AAC	√	√	√				
		STH	√	√	√				
		WSS	√	√	√				
		AGW	√	√	√				
		CDC	√	√	√				
		CTEL	√	√	√				
		COMAND/ AUDIO	√	√	√				
		VCS	√	√	√				
		NAVI	√	√	√				
		TV	√	√	√				
		NAVI(USA)	√	√	√				
		TELEAID	√	√	√				
		TELEAID(J)	√	√	√				
		AVEH	√	√	√				
		PTS	√	√	√				
215	As of 09/2002	AB	√	√	√	√			
		CGW	√	√	√				
		DTR	√	√	√				
		OCP	√	√	√				
		UCP	√	√	√				
		STH	√	√	√				
		ETC	√	√	√	√			

Benz **V40.05** CAN Diagnostics List (Note: For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		SDS	√	√	√				
230	As of 09/2003	AB	√	√	√	√			
		CGW	√	√	√				
		SBC	√	√	√			√	
		ME2.7.2	√	√	√				
		ETC	√	√	√	√			
		ME9.7	√	√	√	√	√	√	√
		DTR	√	√	√				
		ESP	√	√	√	√	√	√	√
		ABC	√	√	√	√			
		TPC	√	√	√				
		WSS	√	√	√				
		ICM	√	√	√				√
		SDS	√	√	√				
				ME9.7	√	√	√	√	√
		ESP	√	√	√	√	√	√	
		AB	√	√	√	√			
		ETC	√	√	√	√			
		DR-SAM	√	√	√				
		PASS-SAM	√	√	√				
		REAR-SAM	√	√	√				
		DCM-FL	√	√	√	√			
		DCM-FR	√	√	√	√			
		DCM-RR	√	√	√	√			
		DCM-RL	√	√	√	√			
		AAC	√	√	√	√			

Benz **V40.05** CAN Diagnostics List (Note: For reference only)

Menu			Functions								
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others		
219	ALL MODEL	ESM	√	√	√						
		EIS	√	√	√						
		UCP	√	√	√						
		HRA	√	√	√	√					
		SBC	√	√	√				√		
		PTS	√	√	√						
		ESA-DR	√	√	√	√					
		ESA-PASS	√	√	√	√	√				
		AIRMATIC	√	√	√	√	√			√	
		CGW	√	√	√						
		SDS	√	√	√						
		HS	√	√	√						
		LCP	√	√	√						
		OCP	√	√	√						
		SCM	√	√	√						
		IC	√	√	√						
		ASSYST	√	√	√						√
		ASSYST-PLUS	√	√	√						
		DTR	√	√	√						
		ME9.7(AMG)	√	√	√	√	√	√	√	√	
		MED9.7	√	√	√	√	√	√	√	√	
		ABR	√	√	√	√	√	√	√	√	
		TPC	√	√	√						
WSS	√	√	√								
REVETR_LF	√	√	√								
REVETR_RF	√	√	√								

Benz **V40.05** CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		BCM	√	√	√				
		On-Board	√	√	√				
		AGW	√	√	√				
		CDC	√	√	√				
		CTEL	√	√	√				
		COMAND/ AUDIO	√	√	√				
		VCS	√	√	√				
		NAVI	√	√	√				
		TV	√	√	√				
		NAVI(USA)	√	√	√				
		TELEAID	√	√	√				
		TELEAID(J)	√	√	√				
		AVEH	√	√	√				
		DS_LF	√	√	√				
		DS_RF	√	√	√				
		DSP	√	√	√				
		TLC	√	√	√				
		STH	√	√	√				
		HSW	√	√	√				
		CDI4	√	√	√	√	√	√	
		ETC	√	√	√	√			
		ME9.7	√	√	√	√	√	√	
		CDI4	√	√	√	√	√	√	
		ISM	√	√	√				
		ESP	√	√	√	√	√	√	

Benz **V40.05** CAN Diagnostics List (Note: For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		AB	√	√	√	√			
		CGW	√	√	√				
		EIS	√	√	√				
		HRA	√	√	√	√			
		OCP	√	√	√				
		REAR-SAM	√	√	√				
		SDS	√	√	√				
		SAM-F	√	√	√				
		HBF	√	√	√				
		IC	√	√	√				
		SCM	√	√	√				
		AGW	√	√	√				
		DCM-FL	√	√	√				
		DCM-FR	√	√	√				
		ASSYST	√	√	√			√	
		ME9.7(AMG)	√	√	√	√	√	√	
		CDI5	√	√	√				
		VG	√	√	√				
		HAQ	√	√	√				
		DTR	√	√	√				
		Airmatic	√	√	√				
		TPC	√	√	√				
		WSS	√	√	√				
164	ALL MODEL	REVETR_LF	√	√	√				
		REVETR_RF	√	√	√				
		KG	√	√	√				

Benz **V40.05** CAN Diagnostics List (Note: For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		XALWA-R	√	√	√				
		UCP	√	√	√				
		ASSYST_PLUS	√	√	√				
		CM	√	√	√				
		PTS	√	√	√				
		AGW	√	√	√				
		CDC	√	√	√				
		CTEL	√	√	√				
		COMAND/ AUDIO	√	√	√				
		VCS	√	√	√				
		NAVI	√	√	√				
		TV	√	√	√				
		NAVI(USA)	√	√	√				
		TELEAID	√	√	√				
		TELEAID(J)	√	√	√				
		AVEH	√	√	√				
		REDC	√	√	√				
		ESA_DRIVER	√	√	√				
		ESA_PASS	√	√	√				
		DS_LF	√	√	√				
		DS_RF	√	√	√				
		DSP	√	√	√				
		HS	√	√	√				
		STH	√	√	√				
		HSW	√	√	√				

Benz **V40.05** CAN Diagnostics List (Note: For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		SVMCM	√	√	√				
		CM	√	√	√				
		AGW	√	√	√				
		CDC	√	√	√				
		CTEL	√	√	√				
		COMAND/ AUDIO	√	√	√				
		VCS	√	√	√				
		NAVI	√	√	√				
		TV	√	√	√				
		NAVI(USA)	√	√	√				
		TELEAID	√	√	√				
		TELEAID(J)	√	√	√				
		AVEH	√	√	√				
		AAC	√	√	√				
		ETC	√	√	√	√			
		ESM	√	√	√				
		ME97	√	√	√	√	√	√	
		ESP	√	√	√	√	√	√	
		AB	√	√	√	√			
		CGW	√	√	√				
		EIS	√	√	√				
		VR	√	√	√				
		HRA	√	√	√	√			
		OCP	√	√	√				
		UCP	√	√	√				

Benz **V40.05** CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
171	ALL MODEL	SAM-F	√	√	√				
		REAR SAM	√	√	√				
		SDS	√	√	√				
		IC	√	√	√				
		ASSYST	√	√	√			√	
		SCM	√	√	√				
		PTS	√	√	√				
		DCM-L	√	√	√				
		DCM-R	√	√	√				
		ESA DRIVER	√	√	√				
		ESA PASSENGER	√	√	√				
		HS	√	√	√				
		AAC	√	√	√				
		WSS	√	√	√				
		ASSYST_PLUS	√	√	√				
		TPC	√	√	√				
		AGW	√	√	√				
		CDC	√	√	√				
		CTEL	√	√	√				
		COMAND/ AUDIO	√	√	√				
		VCS	√	√	√				
		NAVI	√	√	√				
		TV	√	√	√				
NAVI(USA)	√	√	√						
TELEAID	√	√	√						

Benz **V40.05** CAN Diagnostics List (Note: For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		TELEAID(J)	√	√	√				
		AVEH	√	√	√				
		HSW	√	√	√				
		ETC	√	√	√	√			
		ME97	√	√	√	√	√	√	
		ISM	√	√	√				
		ABR	√	√	√	√	√	√	
		SUSPENSION	√	√	√	√		√	√
		AB	√	√	√	√			
		REVETR-LF	√	√	√				
		REVETR-RF	√	√	√				
		CGW	√	√	√				
		EIS	√	√	√				
		KG	√	√	√				
		XALWA-L	√	√	√				
		XALWA-R	√	√	√				
		UCP	√	√	√				
		OCP	√	√	√				
		COU	√	√	√				
		DR-SAM	√	√	√				
		REAR SAM	√	√	√				
		SDS	√	√	√				
		BNS	√	√	√				
		IC	√	√	√				
		SCM	√	√	√				
		PTS	√	√	√				

Benz **V40.05** CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
221	ALL MODEL	DCM-FL	√	√	√				
		DCM-FR	√	√	√				
		DCM-RL	√	√	√				
		DCM-RR	√	√	√				
		ESA-FL	√	√	√				
		ESA-FR	√	√	√				
		ESA-R	√	√	√				
		TLC	√	√	√				
		C-AAC	√	√	√				
		ME9.7(AMG)	√	√	√	√	√	√	
		FSCU	√	√	√				
		ME2.7.2	√	√	√				
		CDI5	√	√	√				
		FSCU(AMG)	√	√	√				
		SGR	√	√	√				
		DTR	√	√	√				
		EFB	√	√	√				
		TPC	√	√	√				
		WSS	√	√	√				
		HBF	√	√	√				
		AHE	√	√	√				
		SVMCM	√	√	√				
		ASSYST	√	√	√				
		ASSYST_PLUS	√	√	√				
COMAND	√	√	√						
TUENR	√	√	√						

Benz **V40.05** CAN Diagnostics List (Note: For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		CTEL	√	√	√				
		VCS	√	√	√				
		SDAR	√	√	√				
		TV	√	√	√				
		AVEH	√	√	√				
		TELEAID	√	√	√				
		DS_LF	√	√	√				
		DS_RF	√	√	√				
		DSP	√	√	√				
		MKL_HL	√	√	√				
		MKL_HR	√	√	√				
		STH	√	√	√				
		KBE-H	√	√	√				
		FCVT	√	√	√				
		ESM	√	√	√				
		ME-SFI	√	√	√				
		ESP	√	√	√	√	√	√	
		ES	√	√	√				
		AB	√	√	√	√			
		CGW	√	√	√				
		EIS	√	√	√				
		UCP	√	√	√				
		IC	√	√	√				
		ASSYST	√	√	√			√	
		ASSYST-PLUS	√	√	√				
		SCM	√	√	√				

Benz **V40.05** CAN Diagnostics List (Note: For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
169	ALL MODEL	PTS	√	√	√				
		DCM-FL	√	√	√				
		DCM-FR	√	√	√				
		DCM-RL	√	√	√				
		DCM-RR	√	√	√				
		ATA	√	√	√				
		OCP	√	√	√				
		SAM	√	√	√				
		CDIA1	√	√	√				
		AHE	√	√	√				
		SVMCM	√	√	√				
		CM	√	√	√				
		AGW	√	√	√				
		CDC	√	√	√				
		CTEL	√	√	√				
		COMAND/ AUDIO	√	√	√				
		VCS	√	√	√				
		NAVI	√	√	√				
		TV	√	√	√				
		NAVI(USA)	√	√	√				
		TELEAID	√	√	√				
		TELEAID(J)	√	√	√				
		AVEH	√	√	√				
		AAC	√	√	√				
ETC	√	√	√		√				

Benz **V40.05** CAN Diagnostics List (Note: For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		ME9.7	√	√	√	√	√	√	
		ISM	√	√	√				
		ESP	√	√	√	√	√	√	
		AB	√	√	√	√			
		CGW	√	√	√				
		EIS	√	√	√				
		HRA	√	√	√	√			
		OCP	√	√	√				
		REAR-SAM	√	√	√				
		SDS	√	√	√				
		SAM-F	√	√	√				
		HBF	√	√	√				
		IC	√	√	√				
		SCM	√	√	√				
		DCM-FL	√	√	√				
		DCM-FR	√	√	√				
		ASSYST	√	√	√			√	
		VG	√	√	√				
		HAQ	√	√	√				
		DTR	√	√	√				
		Airmatic	√	√	√				
		TPC	√	√	√				
		WSS	√	√	√				
		REVETR_LF	√	√	√				
		REVETR_RF	√	√	√				
		KG	√	√	√				

X164

ALL

Benz **V40.05** CAN Diagnostics List (Note: For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
X104	MODEL	XALWA-R	√	√	√				
		UCP	√	√	√				
		ASSYST_PLUS	√	√	√				
		CM	√	√	√				
		PTS	√	√	√				
		AGW	√	√	√				
		CDC	√	√	√				
		CTEL	√	√	√				
		COMAND/ AUDIO	√	√	√				
		VCS	√	√	√				
		NAVI	√	√	√				
		TV	√	√	√				
		NAVI(USA)	√	√	√				
		TELEAID	√	√	√				
		TELEAID(J)	√	√	√				
		AVEH	√	√	√				
		REDC	√	√	√				
		ESA_DRIVER	√	√	√				
		ESA_PASS	√	√	√				
		DS_LF	√	√	√				
		DS_RF	√	√	√				
		DSP	√	√	√				
		HS	√	√	√				
STH	√	√	√						
HSW	√	√	√						

Benz **V40.05** CAN Diagnostics List (Note: For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		AAC	√	√	√				
199	AIL MODEL	AB	√	√	√	√			
		WSS	√	√	√				
		CGW	√	√	√				
		AIRMATIC	√	√	√	√		√	
		ETC	√	√	√	√			
		AB	√	√	√	√			
		CGW	√	√	√				
		EIS	√	√	√				
		HRA	√	√	√	√			
		HBF	√	√	√				
		DR-SAM	√	√	√				
		PASS-SAM	√	√	√				
		ICM	√	√	√				
		SCM	√	√	√				
		PTS	√	√	√				
		DCM-FL	√	√	√				
		DCM-FR	√	√	√				
		DCM-RL	√	√	√				
		DCM-RR	√	√	√				
		ESA-FL	√	√	√				
		ESA-FR	√	√	√				
		ME2.7.2	√	√	√				
		DTR	√	√	√				
FSCU	√	√	√						
SGR	√	√	√						

Benz **V40.05** CAN Diagnostics List (Note: For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
240	ALL MODEL	TPC	√	√	√				
		WSS	√	√	√				
		BNS	√	√	√				
		OCP	√	√	√				
		CRN	√	√	√				
		VBF	√	√	√				
		PSE	√	√	√				
		REAR_SAM1	√	√	√				
		REAR_SAM2	√	√	√				
		SDS	√	√	√				
		SVMCM	√	√	√				
		ESA_LR	√	√	√				
		ESA_RR	√	√	√				
		PWC	√	√	√				
		LDCA	√	√	√				
		RDCA	√	√	√				
		OSB_FL	√	√	√				
		OSB_FR	√	√	√				
		MKL_HL	√	√	√				
		MKL_HR	√	√	√				
		REAR_AC	√	√	√				
		TLC	√	√	√				
		STH	√	√	√				
		HSW	√	√	√				
AGW	√	√	√						
CDC	√	√	√						

Benz **V40.05** CAN Diagnostics List (Note: For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		CTEL	√	√	√				
		COMAND/ AUDIO	√	√	√				
		VCS	√	√	√				
		NAVI	√	√	√				
		TV	√	√	√				
		NAVI(USA)	√	√	√				
		TELEAID	√	√	√				
		TELEAID(J)	√	√	√				
		AVEH	√	√	√				
		AAC	√	√	√				
		ETC	√	√	√	√			
		ESM	√	√	√				
		ME9.7	√	√	√	√	√	√	
		CDI4	√	√	√	√	√	√	
		ESP	√	√	√	√	√	√	
		AB	√	√	√	√			
		EIS	√	√	√				
		HRA	√	√	√				
		REAR-SAM	√	√	√				
		OCP	√	√	√				
		UCP	√	√	√				
		LCP	√	√	√				
		IC	√	√	√			√	
		SCM	√	√	√				
		PTS	√	√	√				

Benz **V40.05** CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
209	As of 04/2004	DCM-L	√	√	√				
		DCM-R	√	√	√				
		ESA DRIVER	√	√	√				
		ESA PASS	√	√	√				
		ME9.7(AMG)	√	√	√	√	√	√	
		DTR	√	√	√				
		WSS	√	√	√				
		SAM_F	√	√	√				
		AHE	√	√	√				
		PESA	√	√	√				
		TLC	√	√	√				
		STH	√	√	√				
		AGW	√	√	√				
		CDC	√	√	√				
		CTEL	√	√	√				
		COMAND/ AUDIO	√	√	√				
		VCS	√	√	√				
		NAVI	√	√	√				
		TV	√	√	√				
		NAVI(USA)	√	√	√				
		TELEAID	√	√	√				
		TELEAID(J)	√	√	√				
		AVEH	√	√	√				
		AAC	√	√	√				
ETC	√	√	√		√				

Benz **V40.05** CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		ME9.7	√	√	√	√	√	√	
		ISM	√	√	√				
		CDI4	√	√	√	√	√	√	
		SUSPENSION	√	√	√	√	√	√	
		ESP	√	√	√	√	√	√	
		AB	√	√	√	√			
		RevETR-LF	√	√	√				
		RevETR-RF	√	√	√				
		CGW	√	√	√				
		EIS	√	√	√				
		HRA	√	√	√				
		OCP	√	√	√				
		REAR SAM	√	√	√				
		SDS	√	√	√				
		SAM-F	√	√	√				
		HBF	√	√	√				
		IC	√	√	√				
		SCM	√	√	√				
		PTS	√	√	√				
		ASSYST	√	√	√			√	
		DCM-FL	√	√	√				
		DCM-FR	√	√	√				
		HS	√	√	√				
		ESA DRIVER	√	√	√				
		ESA PASSENGER	√	√	√				
251	ALL MODEL	ME9.7(AMG)	√	√	√	√	√	√	

Benz **V40.05** CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	MODEL	DTR	√	√	√				
		TPC	√	√	√				
		WSS	√	√	√				
		KG	√	√	√				
		UCP	√	√	√				
		ASSYST_PLUS	√	√	√				
		CM	√	√	√				
		REDC	√	√	√				
		DS-LF	√	√	√				
		DS-RF	√	√	√				
		DSP	√	√	√				
		STH	√	√	√				
		HSW	√	√	√				
		AGW	√	√	√				
		CDC	√	√	√				
		CTEL	√	√	√				
		COMAND/ AUDIO	√	√	√				
		VCS	√	√	√				
		NAVI	√	√	√				
		TV	√	√	√				
		NAVI(USA)	√	√	√				
		TELEAID	√	√	√				
		TELEAID(J)	√	√	√				
		AVEH	√	√	√				
		AAC	√	√	√				

Benz **V40.05** CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		ETC	√	√	√	√			
		ME9.7	√	√	√	√	√	√	
		ME9.7(AMG)	√	√	√	√	√	√	
		FSCU	√	√	√				
		FSCU(AMG)	√	√	√				
		ME2.7.2	√	√	√				
		ISM	√	√	√				
		SGR	√	√	√				
		DTR	√	√	√				
		ABR	√	√	√	√	√	√	
		Suspension	√	√	√	√		√	√
		EFB	√	√	√				
		TPC	√	√	√				
		AB	√	√	√	√			
		WSS	√	√	√				
		CGW	√	√	√				
		EIS	√	√	√				
		KG	√	√	√				
		XALWA-L	√	√	√				
		XALWA-R	√	√	√				
		UCP	√	√	√				
		OCP	√	√	√				
		COU	√	√	√				
		HBF	√	√	√				
		Dr-SAM	√	√	√				
		REAR_SAM	√	√	√				

Benz **V40.05** CAN Diagnostics List (Note: For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
216	ALL MODEL	SDS	√	√	√				
		BNS	√	√	√				
		AHE	√	√	√				
		IC	√	√	√				
		SCM	√	√	√				
		NSA	√	√	√				
		PTS	√	√	√				
		ASSYST	√	√	√				
		ASSYST_PLUS	√	√	√				
		COMAND	√	√	√				
		Tuner	√	√	√				
		CTEL	√	√	√				
		VCS	√	√	√				
		SDAR	√	√	√				
		TV	√	√	√				
		AVE-H	√	√	√				
		TELE-AID	√	√	√				
		DCM-FL	√	√	√				
		DCM-FR	√	√	√				
		ESA-FL	√	√	√				
		ESA-FR	√	√	√				
		DS-LF	√	√	√				
		DS-RF	√	√	√				
DSP	√	√	√						
TLC	√	√	√						
C-AAC	√	√	√						

Benz **V40.05** CAN Diagnostics List (Note: For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		DCM-FL	√	√	√				
		SVS-VL	√	√	√				
		DCM-FR	√	√	√				
		SVS-VR	√	√	√				
		DCM-RL	√	√	√				
		DCM-RR	√	√	√				
		AAC	√	√	√				
		AB	√	√	√	√			
		DR-SAM	√	√	√				
		FSW,AIS,RLS,OBF, LDS,WBS	√	√	√				
		SUSPENSION	√	√	√				
		KG	√	√	√				
		REAR SAM	√	√	√				
		MSS	√	√	√				
		461 (16PIN)	As of 03/2007	ETC	√	√	√	√	
CDI4	√			√	√	√	√	√	
CGW	√			√	√				
463 (16PIN)	As of (From 04/2004	EIS	√	√	√				
		UCP	√	√	√				
		SAM-F	√	√	√				
		REAR_SAM	√	√	√				
		AHE	√	√	√				
		OCP	√	√	√				
		SVMCM(MSS)	√	√	√				
		IC	√	√	√				

Benz **V40.05** CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	to 08/2006)	SCM	√	√	√				
		DCM-FL	√	√	√				
		DCM-FR	√	√	√				
		ESA_DRIVER	√	√	√				
		ESA_PASS	√	√	√				
		AAC	√	√	√				
		STH	√	√	√				
463 (16PIN)	As of (From 09/2006 to 02/2007)	EIS	√	√	√				
		UCP	√	√	√				
		SAM-F	√	√	√				
		REAR_SAM	√	√	√				
		AHE	√	√	√				
		OCP	√	√	√				
		SVMCM(MSS)	√	√	√				
		IC	√	√	√				
		SCM	√	√	√				
		DCM-FL	√	√	√				
		DCM-FR	√	√	√				
		ESA_DRIVER	√	√	√				
		ESA_PASS	√	√	√				
		AAC	√	√	√				
		STH	√	√	√				
		ALWR	√	√	√				
				EIS	√	√	√		
UCP	√			√	√				
SAM-F	√			√	√				

Benz **V40.05** CAN Diagnostics List (Note: For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
463 (16PIN)	As of 03/2007	REAR_SAM	√	√	√				
		AHE	√	√	√				
		OCP	√	√	√				
		SVMCM(MSS)	√	√	√				
		IC	√	√	√				
		SCM	√	√	√				
		DCM-FL	√	√	√				
		DCM-FR	√	√	√				
		ESA_DRIVER	√	√	√				
		ESA_PASS	√	√	√				
		AAC	√	√	√				
		STH	√	√	√				
		ALWR	√	√	√				
		ETC	√	√	√		√		
		CDI4	√	√	√		√	√	√
		TPC	√	√	√				
		AGW	√	√	√				
		CDC	√	√	√				
		CTEL	√	√	√				
		COMAND/ AUDIO	√	√	√				
		VCS	√	√	√				
		NAVI	√	√	√				
TV	√	√	√						
NAVI(USA)	√	√	√						
TELEAID	√	√	√						

Benz **V40.05** CAN Diagnostics List (Note:For reference only)

Menu			Functions						
Chassis	Model	System	Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		TELEAID(J)	√	√	√				
		AVEH	√	√	√				

(*):Tested;

(?):Manual on website(www.x431.com)

Note:All description rights reserved by LAUNCH TECH. CO., LTD

CONNECTOR	X431	DIAGUN
SMART OBD	N/A	N/A
BENZ-38	N/A	N/A
UNIVERSAL-3	N/A	N/A
OBD 16C	N/A	N/A
CANBUS II	Use for the cars of 16-PIN Diagnostic socket	N/A
diagun connector	N/A	Use for the cars of 16-PIN Diagnostic socket
SUPER 16	Use for the cars of 16-PIN Diagnostic socket	N/A