

Mitsubishi **V26.10** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	73 TRUCK	ENGINE	√	√	√	√	√		
		AT	√	√	√	√	√		
	CLIPPER	ENGINE	√	√	√	√	√		
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
	COLT	ENGINE	√	√	√	√	√		
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√		
		ETACS	√	√	√	√	√		
		4WS/EPS	√	√	√	√	√		
	COLT PLUS	ENGINE	√	√	√	√	√		
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√		
		ETACS	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		4WS/EPS	√	√	√	√	√		
		POWER GATE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST 2. CODING
	DELICA D:5	ENGINE	√	√	√	√	√	1. Clear CVT oil level (*)	
		AT	√	√	√	√	√	1. Emission test mode(*) 2. All sensors calibration(*)	
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√	1. Head lamp Auto leveling Diag mode(*) 2. Service reminder(*)	
		METER	√	√	√	√	√	1. personalization(*) 2. Personalization information(*) 3. Reset personalization(*) 4. Alarm record (optional)(*)	
		ETACS	√	√	√	√	√		
		4WS/EPS	√	√	√	√	√	SAS calibration(*)	

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		POWER GATE	√	√	√	√	√		
		AFS/ACL	√	√	√	√	√		
	DELICA SPACE GEAR	ENGINE	√	√	√	√	√		
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		AC	√	√	√	√	√		
		ETACS	√	√	√	√	√		
		ECS	√	√	√	√	√		
	DELICA VAN / CARGO /TRUCK	ENGINE	√	√	√	√	√		
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√		
		AND	√	√	√	√	√		
	EK-WAGON(H81W)	ENGINE	√	√	√	√	√		
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
	EK-WAGON(H82W)	ENGINE	√	√	√	√	√		
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	GALANT FORTIS	ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST 2. CODING
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√	1. Head lamp Auto leveling Diag mode(*) 2. Service reminder(*)	
		ETACS	√	√	√	√	√	1. personalization(*) 2. Personalization information(*) 3. Reset personalization(*) 4. Alarm record (optional)(*)	
		SAS	√	√	√	√	√	SAS calibration(*)	
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number)(*) 3. Key&KOS (Keyless Operation System) key registration (*)	

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		AUTO CRUISE	√	√	√	√			
		AFS/ACL	√	√	√	√	√		
		AND	√	√	√	√	√		
		LIN	√	√	√	√			
		AUDIO	√	√	√	√	√		
		AT	√	√	√	√	√		
		MULTI SELECT 4WD	√	√	√	√	√		
	GRANDIS	ENGINE	√	√	√	√	√		
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√		
		ETACS	√	√	√	√	√		
		SAS	√	√	√	√	√		
		IMMO	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			
		CAMERA	√	√	√	√	√		
		POWER GATE	√	√	√	√	√		
		AND	√	√	√	√	√		
		DISPLAY	√	√	√	√			

Mitsubishi **V26.10** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
JAPAN		KEYLESS OPERATION	√	√	√	√			
		MULTI SELECT 4WD	√	√	√	√	√		
	I	ENGINE	√	√	√	√	√	1. Reset adaptation(*)	
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√	1. Service reminder(*)	
		ETACS	√	√	√	√	√	1.personalization(*) 2. Personalization information(*) 3. Reset personalization(*) 4. Keyless ID registration(*)5. Keyless reception check(*)	
		4WS/EPS	√	√	√	√	√		
		LIN	√	√	√	√			
		KEYLESS OPERATION	√	√	√	√			
		ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	LANCER	SWS	√	√	√	√	√		
		AT	√	√	√	√	√		
		AC	√	√	√	√	√		
		AYC/ACD	√	√	√	√	√		
	LANCER CARGO	ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AT	√	√	√	√	√		
	LANCER WAGON	ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AT	√	√	√	√	√		
	MINICA	ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
	MINICAB / TOWNBOX	ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AT	√	√	√	√	√		
		ENGINE	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	OTTI(H91W)	AT	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
	OTTI(H92W)	ENGINE	√	√	√	√	√		
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
	OUTLANDER	ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST 2. CODING
		AT	√	√	√	√	√	1. Clear CVT oil level (*)	
		ABS	√	√	√	√	√	1. Emission test mode(*) 2. All sensors calibration(*)	
		SRS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√	1. Head lamp Auto leveling Diag mode(*) 2. Service reminder(*)	

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		ETACS	√	√	√	√	√		
		SAS	√	√	√	√	√	SAS calibration(*)	
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		AND	√	√	√	√	√		
		LIN	√	√	√	√			
		MULTI SELECT 4WD	√	√	√	√	√		
		AUDIO	√	√	√	√	√		
	PAJERO(V6#,V7#)	ENGINE	√	√	√	√	√		
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		IMMO	√	√	√	√	√		
		TCL/STABILITY CONTROL	√	√	√	√	√		
		SS4II	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		HBB	√	√	√	√	√		
	PAJERO(V8#,V9#)	ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST 2. CODING
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√		
		ETACS	√	√	√	√	√		
		IMMO	√	√	√	√	√		
		SS4II	√	√	√	√	√		
		HBB	√	√	√	√	√		
		DISPLAY	√	√	√	√			
		AT	√	√	√	√	√	1. Reset adaptation(*) 2. Test(INVECS-2 control stopped) (*)	
		AUTO CRUISE	√	√	√	√			
	PAJERO iO	ENGINE	√	√	√	√	√		
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	PAJERO IO	SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
	PAJERO MINI	ENGINE	√	√	√	√	√		
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
	TRITON	ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST 2. CODING
		AT	√	√	√	√	√	1. Reset adaptation(*)	
		ABS	√	√	√	√	√	1. Emission test mode(*) 2. All sensors calibration(*)	
		SRS	√	√	√	√	√		
		AC	√	√	√	√	√		
		ETACS	√	√	√	√	√		
		IMMO	√	√	√	√	√		
		LIN	√	√	√	√			
		DISPLAY	√	√	√	√			

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	COLT CZC	ENGINE	√	√	√	√	√	1. Temporary DTCs(*)	1. CODING
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√		
		ETACS	√	√	√	√	√	1. personalization(*) 2. Personalization information(*) 3. Reset personalization(*) 4. Keyless ID registration(*) 5. Keyless reception check(*)	
		IMMO	√	√	√	√	√		
		4WS/EPS	√	√	√	√	√		
		DISPLAY	√	√	√	√			
		RHT/TOPSTACK	√	√	√	√			
		ENGINE	√	√	√	√	√	1. Temporary DTCs(*)	1. CODING
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		AC	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	COLT, COLT CZ3 / CZT	METER	√	√	√	√	√		
		ETACS	√	√	√	√	√	1. personalization(*) 2. Personalization information(*) 3. Reset personalization(*) 4. Keyless ID registration(*) 5. Keyless reception check(*)	
		IMMO	√	√	√	√	√		
		4WS/EPS	√	√	√	√	√		
		DISPLAY	√	√	√	√			
		AT	√	√	√	√	√		
	GALANT(DJ#)	ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST 2. CODING
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		ETACS	√	√	√	√	√		
		IMMO	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			
	GRANDIS	ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√		
		ETACS	√	√	√	√	√		
		SAS	√	√	√	√	√		
		IMMO	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			
		AND	√	√	√	√	√		
		DISPLAY	√	√	√	√			
		AT	√	√	√	√	√		
		ENGINE	√	√	√	√	√	1. Reset adaptation(*)	
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√	1. Emission test mode(*) 2. All sensors calibration(*)	
		SRS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	I	ETACS	√	√	√	√	√	1.personalization(*) 2. Personalization information(*) 3. Reset personalization(*) 4. Keyless ID registration(*)5. Keyless reception check(*)	
		4WS/EPS	√	√	√	√	√		
		LIN	√	√	√	√			
		KEYLESS OPERATION	√	√	√	√			
	L200(K6#,K7#)	ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		ETACS	√	√	√	√	√		
		IMMO	√	√	√	√	√		
		AC	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	L200(KB#)	ENGINE	√	√	√	√	√	1. Initialization (Supply pump exchange service) (*) 2. Test (Fuel system leak detection) (*) 3. Learning (Micro injection adaptation) (*) 4. Injector ID copy (injector exchange) (*) 5. Read injector 4 ID (*)	CODING
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		ETACS	√	√	√	√	√	1. personalization (*) 2. Personalization information (*) 3. Reset personalization (*) 4. Keyless ID registration (*) 5. Keyless reception check (*)	
		IMMO	√	√	√	√	√		
		LIN	√	√	√	√			
		AT	√	√	√	√	√		
		AC	√	√	√	√	√	SAS calibration (*)	
		SAS	√	√	√	√	√		
		DISPLAY	√	√	√	√			
	L300								

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
EUR	LANCER(CS#,CT#)	ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		IMMO	√	√	√	√	√		
		AT	√	√	√	√	√		
		AYC/ACD	√	√	√	√	√		
		ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST 2. CODING
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√	1. Head lamp Auto leveling Diag mode(*) 2. Service reminder(*)	

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	LANCER(CY#)	ETACS	√	√	√	√	√	1.personalization(*) 2. Personalization information(*) 3. Reset personalization(*) 4. Alarm record (optional)(*)	
		SAS	√	√	√	√	√	SAS calibration(*)	
		IMMO	√	√	√	√	√	1.Password Change 2.Key registration 3.Key registration (bar code number) 4.Keyless ID registration 5.Engine key code registration 6.ENGINE KEY CODE REG.&VIN WRITING	
		4WS/EPS	√	√	√	√	√		
		LIN	√	√	√	√	√		
		AUDIO	√	√	√	√	√		
		AFS/ACL	√	√	√	√	√		
		AND	√	√	√	√	√		
		HFM	√	√	√	√			
		AT	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			
	LANCER	ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	LANCER WAGON	SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		IMMO	√	√	√	√	√		
		AT	√	√	√	√	√		
	OUTLANDER(CU #)	ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		IMMO	√	√	√	√	√		
		AND	√	√	√	√	√		
		AT	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			
		ENGINE	√	√	√	√	√	1. Temporary DTCs (*) 2. Reset adaptation (*)	1. READINESS TEST 2. CODING
		AT	√	√	√	√	√	1. Clear CVT oil level (*)	
		ABS	√	√	√	√	√	1. Emission test mode (*) 2. All sensors calibration (*)	
		SRS	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	OUTLANDER(CW#)	AC	√	√	√	√	√		
		METER	√	√	√	√	√	1. Head lamp Auto leveling Diag mode(*) 2. Service reminder(*)	
		ETACS	√	√	√	√	√	1. personalization(*) 2. Personalization information(*) 3. Reset personalization(*) 4. Alarm record (optional) (*)	
		IMMO	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			
		AND	√	√	√	√	√		
		LIN	√	√	√	√	√		
		MULTI SELECT 4WD	√	√	√	√	√		
		AUDIO	√	√	√	√	√		
		SAS	√	√	√	√	√		
		HFM	√	√	√	√	√		
	PAJERO / MONTERO(V6#)	ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		IMMO	√	√	√	√	√		
		SS4II	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	MONTERO(V6#, V7#)	HBB	√	√	√	√	√		
		AC	√	√	√	√	√		
		AT	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			
		TCL/STABILITY CONTROL	√	√	√	√	√		
	PAJERO / MONTERO(V8#, V9#)	ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST 2. CODING
		AT	√	√	√	√	√	1. Reset adaptation(*) 2. Test(INVECS-2 control stopped) (*)	
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√		
		ETACS	√	√	√	√	√		
		IMMO	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			
		SS4II	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	PAJERO SPORT / MONTERO SPORT	DISPLAY	√	√	√	√			
		ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		AC	√	√	√	√	√		
		ETACS	√	√	√	√	√		
		IMMO	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			
		AT	√	√	√	√	√		
	ECLIPSE	ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST 2. CODING
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√		
		ETACS	√	√	√	√	√		
		IMMO	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			
		AT	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		TCL/STABILITY CONTROL	√	√	√	√	√		
		TPMS	√	√	√	√	√	1. Tire pressure sensor identification register(*) 2. Tire pressure sensor confirmation check(*) 3. Tire pressure sensor confirmation check(REQUIRES TOOL) (*)	
		SAS	√	√	√	√	√		
	ECLIPSE SPYDER	ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST2. CODING
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√		
		ETACS	√	√	√	√	√		
		IMMO	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		RHT/TOPSTACK	√	√	√	√			
		AT	√	√	√	√	√		
		TCL/STABILITY CONTROL	√	√	√	√	√		
		TPMS	√	√	√	√	√	1. Tire pressure sensor identification register(*) 2. Tire pressure sensor confirmation check(*) 3. Tire pressure sensor confirmation check (REQUIRES TOOL) (*)	
		SAS	√	√	√	√	√		
		ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST 2. CODING
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	ENDEAVOR	ETACS	√	√	√	√	√		
		IMMO	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			
		TPMS	√	√	√	√	√	1. Tire pressure sensor identification register(*) 2. Tire pressure sensor confirmation check(*) 3. Tire pressure sensor confirmation check(REQUIRES TOOL) (*)	
		TCL/STABILITY CONTROL	√	√	√	√	√		
		DISPLAY	√	√	√	√			
		SAS	√	√	√	√	√		
	GALANT	ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST2. CODING
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
USA		AC	√	√	√	√	√		
		METER	√	√	√	√	√		
		ETACS	√	√	√	√	√		
		IMMO	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			
		TPMS	√	√	√	√	√		
		DISPLAY	√	√	√	√			
		TCL/STABILITY CONTROL	√	√	√	√	√		
	LANCER(CS#,CT#)	ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			
		AT	√	√	√	√	√		
		IMMO	√	√	√	√	√		
		AYC/ACD	√	√	√	√	√		
		ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST 2. CODING

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	LANCER(CY#)	ABS	√	√	√	√	√	1. Emission test mode(*) 2. All sensors calibration(*)	
		SRS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√	1. Head lamp Auto leveling Diag mode(*) 2. Service reminder(*)	
		ETACS	√	√	√	√	√	1. personalization(*) 2. Personalization information(*) 3. Reset personalization(*) 4. Alarm record (optional)(*)	
		IMMO	√	√	√	√	√		
		LIN	√	√	√	√			
		AUDIO	√	√	√	√	√		
		OCM	√	√	√	√			
		AUTO CRUISE	√	√	√	√			
		AND	√	√	√	√	√		
		HFM	√	√	√	√			
		SATELLITE RADIO	√	√	√	√			
		AT	√	√	√	√	√		
	LANCER	ENGINE	√	√	√	√	√		
		AT	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	LANCER SPORTBACK	ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
	MONTERO	ENGINE	√	√	√	√	√		
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		IMMO	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			
		TPMS	√	√	√	√	√	1. Tire pressure sensor identification register(*) 2. Tire pressure sensor confirmation check(*) 3. Tire pressure sensor confirmation check(REQUIRES TOOL) (*)	
		TCL/STABILITY CONTROL	√	√	√	√	√		
		SS4II	√	√	√	√	√		
		AC	√	√	√	√	√		
		HBB	√	√	√	√	√		
		ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	OUTLANDER(CU#)	SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		IMMO	√	√	√	√	√		
		AND	√	√	√	√	√		
		AT	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			
		AC	√	√	√	√	√		
	OUTLANDER(CW#)	ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST 2. CODING
		AT	√	√	√	√	√	1. Clear CVT oil level (*)	
		ABS	√	√	√	√	√	1. Emission test mode(*) 2. All sensors calibration(*)	
		SRS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√	1. Head lamp Auto leveling Diag mode(*) 2. Service reminder(*)	
		ETACS	√	√	√	√	√		
		SAS	√	√	√	√	√	SAS calibration(*)	

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		AUTO CRUISE	√	√	√	√			
		AND	√	√	√	√	√		
		LIN	√	√	√	√			
		AUDIO	√	√	√	√	√		
		HFM	√	√	√	√			
		OCM	√	√	√	√			
		SATELLITE RADIO	√	√	√	√			
		MULTI SELECT 4WD	√	√	√	√	√		
		ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST 2. CODING
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	380	AC	√	√	√	√	√		
		METER	√	√	√	√	√		
		ETACS	√	√	√	√	√		
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		AUTO CRUISE	√	√	√	√			
		TCL/STABILITY CONTROL	√	√	√	√	√		
		DISPLAY	√	√	√	√			
		AT	√	√	√	√	√		
	CHALLENGER	ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		ETACS	√	√	√	√	√		
		IMMO	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			
		AT	√	√	√	√	√		
		ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	COLT	SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√		
		ETACS	√	√	√	√	√		
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		4WS/EPS	√	√	√	√	√		
		AT	√	√	√	√	√		
		ENGINE	√	√	√	√	√	1. Temporary DTCs (*)	1. CODING
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	COLT CABRIOLET	ETACS	√	√	√	√	√	1.personalization(*) 2. Personalization information(*) 3. Reset personalization(*) 4. Keyless ID registration(*)5. Keyless reception check(*)	
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		4WS/EPS	√	√	√	√	√		
		DISPLAY	√	√	√	√			
		RHT/TOPSTACK	√	√	√	√			
		ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		ETACS	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	EXPRESS(PB#)	IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
	EXPRESS / STAR WAGON(P0#,P1#)	ENGINE	√	√	√	√	√		
	GRANDIS	ENGINE	√	√	√	√	√		
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√		
		ETACS	√	√	√	√	√		
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		AUTO CRUISE	√	√	√	√			
		AND	√	√	√	√	√		
	LANCER(CY#)	ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST 2. CODING
		ABS	√	√	√	√	√	1. Emission test mode(*) 2. All sensors calibration(*)	
		SRS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√	1. Head lamp Auto leveling Diag mode(*) 2. Service reminder(*)	
		ETACS	√	√	√	√	√	1. personalization(*) 2. Personalization information(*) 3. Reset personalization(*) 4. Alarm record (optional)(*)	
		SAS	√	√	√	√	√	SAS calibration(*)	

Mitsubishi **V26.10** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
AUSTRALIA		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		AUTO CRUISE	√	√	√	√			
		LIN	√	√	√	√			
		AUDIO	√	√	√	√	√		
		HFM	√	√	√	√			
		AT	√	√	√	√	√		
		AFS/ACL	√	√	√	√	√		
	LANCER SEDAN	ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		AUTO CRUISE	√	√	√	√			
		AT	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		AC	√	√	√	√	√		
		AYC/ACD	√	√	√	√	√		
	LANCER WAGON	ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		AUTO CRUISE	√	√	√	√			
		AT	√	√	√	√	√		
		ENGINE	√	√	√	√	√		
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	OUTLANDER(CU#)	IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (barcode number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		AUTO CRUISE	√	√	√	√			
		AND	√	√	√	√	√		
		ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST 2. CODING
		AT	√	√	√	√	√	1. Clear CVT oil level (*)	
		ABS	√	√	√	√	√	1. Emission test mode(*) 2. All sensors calibration(*)	
		SRS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√	1. Head lamp Auto leveling Diag mode(*) 2. Service reminder(*)	

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	OUTLANDER(CW#)	ETACS	√	√	√	√	√	1.personalization(*) 2. Personalization information(*) 3. Reset personalization(*) 4. Alarm record (optional)(*)	
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number)(*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		AUTO CRUISE	√	√	√	√			
		AND	√	√	√	√	√		
		LIN	√	√	√	√			
		MULTI SELECT 4WD	√	√	√	√	√		
		AUDIO	√	√	√	√	√		
		SAS	√	√	√	√	√	SAS calibration(*)	
		ENGINE	√	√	√	√	√		
	ABS	√	√	√	√	√			
	SRS	√	√	√	√	√			
	SWS	√	√	√	√	√			

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	#)	AC	√	√	√	√	√		
		METER	√	√	√	√	√	1. Service reminder(*)	
		ETACS	√	√	√	√	√		
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		AUTO CRUISE	√	√	√	√			
		SS4II	√	√	√	√	√		
		DISPLAY	√	√	√	√			
		ENGINE	√	√	√	√	√		
	TRITON(K6#,K7#)	IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		ETACS	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		AT	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	TRITON(KB#)	ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST 2. CODING
		ABS	√	√	√	√	√	1. Emission test mode(*) 2. All sensors calibration(*)	
		SRS	√	√	√	√	√		
		ETACS	√	√	√	√	√	1.personalization(*) 2. Personalization information(*) 3. Reset personalization(*) 4. Keyless ID registration(*)5. Keyless reception check(*)	
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		AT	√	√	√	√	√		
		AC	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		LIN	√	√	√	√			
		DISPLAY	√	√	√	√			
		ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST 2. CODING
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√		
	380	ETACS	√	√	√	√	√		
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (barcode number)(*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		AUTO CRUISE	√	√	√	√			
		TCL/STABILITY CONTROL	√	√	√	√	√		
		DISPLAY	√	√	√	√			

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	ADVENTURE	AT	√	√	√	√	√		
		ENGINE	√	√	√	√	√		
		AT	√	√	√	√	√		
	CHARIOT	ENGINE	√	√	√	√	√		
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		SRS	√	√	√	√	√		
	COLT	ENGINE	√	√	√	√	√		
		ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√		
		ETACS	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	COLT/COLT PLUS	IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		4WS/EPS	√	√	√	√	√		
		AT	√	√	√	√	√		
		POWER GATE	√	√	√	√	√		
	DELICA D:5	ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST 2. CODING
		AT	√	√	√	√	√	1. Clear CVT oil level (*)	
		ABS	√	√	√	√	√	1. Emission test mode(*) 2. All sensors calibration(*)	
		SRS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√		
		ETACS	√	√	√	√	√		
		SAS	√	√	√	√	√	SAS calibration(*)	

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		AUTO CRUISE	√	√	√	√			
		AFS/ACL	√	√	√	√	√		
		POWER GATE	√	√	√	√	√		
		LIN	√	√	√	√			
		ELECTRIC SLIDE DOOR R	√	√	√	√			
		ELECTRIC SLIDE DOOR L	√	√	√	√			
	DELICA PICK UP	ENGINE	√	√	√	√	√		
		ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	DION	IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		AC	√	√	√	√	√		
	EXPRESS(PB#)	ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		ETACS	√	√	√	√	√		
		IMMO	√	√	√	√	√		
	GALANT(DJ#)	ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST2. CODING
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		ETACS	√	√	√	√	√		
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		AUTO CRUISE	√	√	√	√			
		TCL/STABILITY CONTROL	√	√	√	√	√		
	GALANT(DL#)	ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST2. CODING
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√		
		ETACS	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		AUTO CRUISE	√	√	√	√			
		TCL/STABILITY CONTROL	√	√	√	√	√		
		DISPLAY	√	√	√	√			
		AT	√	√	√	√	√		
	GALANT(EA#)	ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		ETACS	√	√	√	√	√		
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		AC	√	√	√	√	√		
		AT	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		TCL/STABILITY CONTROL	√	√	√	√	√		
	GRANDIS	ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√		
		ETACS	√	√	√	√	√		
		AND	√	√	√	√	√		
		IMMO	√	√	√	√	√	1. Password change (*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		AT	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			
		KEYLESS OPERATION	√	√	√	√			
		SAS	√	√	√	√	√		
		DISPLAY	√	√	√	√			
		POWER GATE	√	√	√	√	√		
		ENGINE	√	√	√	√	√	1. Reset adaptation (*)	

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	I	AT	√	√	√	√	√	1. Reset adaptation(*)	
		ABS	√	√	√	√	√	1. Emission test mode(*) 2. All sensors calibration(*)	
		SRS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√		
		ETACS	√	√	√	√	√	1. personalization(*) 2. Personalization information(*) 3. Reset personalization(*) 4. Keyless ID registration(*) 5. Keyless reception check(*)	
		4WS/EPS	√	√	√	√	√		
		LIN	√	√	√	√			
		KEYLESS OPERATION	√	√	√	√			
		ENGINE	√	√	√	√	√		
		ETACS	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
GENERAL	L200	IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
	L300/DELICA WAGON	ENGINE	√	√	√	√	√		
	LANCER(CK#)	ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		AT	√	√	√	√	√		
	LANCER(CS#,CT#)	ENGINE	√	√	√	√	√		
		SWS	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		AT	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		AC	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			
		AYC/ACD	√	√	√	√	√		
	LANCER/LANCER EX(CY#)	ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST 2. CODING
		ABS	√	√	√	√	√	1. Emission test mode(*) 2. All sensors calibration(*)	
		SRS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√	1. Head lamp Auto leveling Diag mode(*) 2. Service reminder(*)	
		ETACS	√	√	√	√	√	1. personalization(*) 2. Personalization information(*) 3. Reset personalization(*) 4. Alarm record (optional)(*)	
		SAS	√	√	√	√	√	SAS calibration(*)	

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		4WS/EPS	√	√	√	√	√		
		AFS/ACL	√	√	√	√	√		
		LIN	√	√	√	√			
		AUDIO	√	√	√	√	√		
		AT	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			
		HFM	√	√	√	√			
	LANCER WAGON	ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
		AUTO CRUISE	√	√	√	√			
		AT	√	√	√	√	√		
	MAVEN	ENGINE	√	√	√	√	√		
	OUTLANDER(CU#)	ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AND	√	√	√	√	√		
		AT	√	√	√	√	√		
		AC	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number)(*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST2. CODING
		AT	√	√	√	√	√	1. Clear CVT oil level (*)	

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	OUTLANDER(CW#)/OUTLANDER EX(CW#)	ABS	√	√	√	√	√	1. Emission test mode(*) 2. All sensors calibration(*)	
		SRS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√	1. Head lamp Auto leveling Diag mode(*) 2. Service reminder(*)	
		ETACS	√	√	√	√	√	1. personalization(*) 2. Personalization information(*) 3. Reset personalization(*) 4. Alarm record (optional)(*)	
		SAS	√	√	√	√	√	SAS calibration(*)	
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (barcode number)(*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		AND	√	√	√	√	√		
		LIN	√	√	√	√			
		MULTI SELECT 4WD	√	√	√	√	√		
		AUDIO	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	PAJERO/MONTERO(V6#,V7#)	AUTO CRUISE	√	√	√	√			
		ENGINE	√	√	√	√	√		
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		TCL/STABILITY CONTROL	√	√	√	√	√		
		SS4II	√	√	√	√	√		
		HBB	√	√	√	√	√		
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number)(*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		AUTO CRUISE	√	√	√	√			
		ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST2. CODING

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	PAJERO/MONTERO(V8#,V9#)	AT	√	√	√	√	√	1. Reset adaptation(*) 2. Test(INVECS-2 control stopped) (*)	
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AC	√	√	√	√	√		
		METER	√	√	√	√	√		
		ETACS	√	√	√	√	√		
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (barcode number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		AUTO CRUISE	√	√	√	√			
		SS4II	√	√	√	√	√		
		HBB	√	√	√	√	√		
		DISPLAY	√	√	√	√			
		LIN	√	√	√	√			
		CAN/LIN/SWS CONVERTER	√	√	√	√			
		ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note: For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	PAJERO iO	SRS	√	√	√	√	√		
		SWS	√	√	√	√	√		
		AT	√	√	√	√	√		
	PAJERO SPORT	ENGINE	√	√	√	√	√		
		ABS	√	√	√	√	√		
		SRS	√	√	√	√	√		
		ETACS	√	√	√	√	√		
		AT	√	√	√	√	√		
		AUTO CRUISE	√	√	√	√			
		AC	√	√	√	√	√		
		IMMO	√	√	√	√	√	1. Password change (*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		ENGINE	√	√	√	√	√	1. Initialization (Supply pump exchange service) (*) 2. Test (Fuel system leak detection) (*) 3. Learning (Micro injection adaptation) (*) 4. Injector ID copy (injector exchange) (*) 5. Read injector 4 ID (*)	CODING

Mitsubishi **V26.10** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	TRITON/L2(KA#, KB#)/STRADA(KA#,KB#)	ETACS	√	√	√	√	√	1.personalization(*) 2. Personalization information(*) 3. Reset personalization(*) 4. Keyless ID registration(*)5. Keyless reception check(*)	
		ABS	√	√	√	√	√	1. Emission test mode(*) 2. All sensors calibration(*)	
		SRS	√	√	√	√	√		
		AT	√	√	√	√	√		
		DISPLAY	√	√	√	√			
		LIN	√	√	√	√			
		IMMO	√	√	√	√	√	1. Password change(*) 2. Key registration (bar code number) (*) 3. Key&KOS (Keyless Operation System) key registration (*)	
		AC	√	√	√	√	√		

Mitsubishi **V26.10** Diagnostics List (Note:For reference only)

District	Vehicle	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
	ZINGER/FUZION	ENGINE	√	√	√	√	√	1. Temporary DTCs(*) 2. Reset adaptation(*)	1. READINESS TEST 2. CODING
		ETACS	√	√	√	√	√	1.personalization(*) 2. Personalization information(*) 3. Reset personalization(*) 4. Keyless ID registration(*)5. Keyless reception check(*)	
		SRS	√	√	√	√	√		
		AT	√	√	√	√	√		
		ABS	√	√	√	√	√	1. Emission test mode(*) 2. All sensors calibration(*)	
		AC	√	√	√	√	√		

(*):Tested;

(?):Manual on website(www.x431.com);

Note:The final interpretation of the products belongs to LAUNCH TECH CO.,LTD.

CONNECTOR	X431	DIAGUN
SMART OBDII -16	Use for the cars of 16-PIN Diagnostic socket	N/A
MITSUBISHI 12+16	Use for the cars of 12+16PIN Diagnostic socket	Use for the cars of 12+16PIN Diagnostic socket
OBD 16C	N/A	N/A
CANBUS II	Use for the cars of 16-PIN Diagnostic socket	N/A
diagun connector	N/A	Use for the cars of 16-PIN Diagnostic socket
SUPER 16	Use for the cars of 16-PIN Diagnostic socket	N/A