

INFINITI V11.00 Diagnostics List(Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

ALL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device , CGC:CHG COMM , TETC:TK_ECU_TYPE_CLUCH , DC:DISTANCE CONTROL , MA:MOTOR ASSIST , IVMS:Integrated Voice-Messaging System , TQC:TORQ CONT , AP:ACCELE PEDAL , CON:CONVERTIBLE ROOF

Vehicle	Vehicle Type	Release Date	Eng	AT	ABS	BCM	IPC	ABG	ICC	HVAC	ITM	EPS	IPDM	APM	HLL	E-4WD	I-KEY	DIU	ASD	PSB	ADP	4WD	4WAS /RAS /HICAS	SONAR	LDW	NATS	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Break Contr	AUTO SLID	CAN GAT EWA	POP UP HOO	TOTAL ILLU	OCCUPANT	MULTI DISP	SVT
INFINITI EX25/EX35	J50	2009 2011 2012	SCD TF1 F2 F3 F4 F7 F8	SCD TF1 F2 F3 F8	SCD TF1 F2 F3 F7	SCD TF2 F3	SCD TF3	SCD TF1	SCD TF3		SCD TF3		SCD TF3		SCD TF2					SCD TF3	SCD TF3	SCD TF3		CD	SCD TF										SCD TF3					SCD TF2							
INFINITI EX25/J50	J50	2012 2013	SCD TF1 F2 F3 F4 F7 F8	SCD TF1 F2 F3 F8	SCD TF1 F2 F3 F7	SCD TF2 F3	SCD TF3	SCD TF1			SCD TF3		SCD TF3	SCD TF2	SCD TF2						SCD TF3	SCD TF3		CD														SCD TF2									
INFINITI EX35	J50	2007 2008 2009 2010 2011 2012 2013	SCD TF1 F2 F3 F4 F7 F8	SCD TF1 F2 F3 F8	SCD TF1 F2 F3 F7	SCD TF2 F3	SCD TF3	SCD TF1	SCD TF3		SCD TF3		SCD TF3		SCD TF2					SCD TF3	SCD TF3	SCD TF3		CD	SCD TF				SD F2						SCD TF3					SCD TF2							
INFINITI EX35(DOM)	J50	2009 2010	SCD TF1 F2 F3 F4 F7 F8	SCD TF1 F2 F3 F8	SCD TF1 F2 F3	SCD TF2 F3	SCD TF3	SCD TF1	SCD TF3		SCD TF3		SCD TF3		SCD TF2					SCD TF3	SCD TF3	SCD TF3		CD	SCD TF										SCD TF3					SCD TF2							

INFINITI V11.00 Diagnostics List(Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

ALL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device , CGC:CHG COMM , TETC:TK_ECU_TYPE_CLUCH , DC:DISTANCE CONTROL , MA:MOTOR ASSIST , IVMS:Integrated Voice-Messaging System , TQC:TORQ CONT , AP:ACCELE PEDAL , CON:CONVERTIBLE ROOF

[illegible]

INFINITI V11.00 Diagnostics List(

Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、 F2、 F3.....)

F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed

Controlo Device , CGC:CHG COMM , TETC:TK_ECU_TYPE_CLUCH , DC:DISTANCE CONTROL , MA:MOTOR ASSIST , IVMS:Integrated Voice-Messaging System , TQC:TORQ CONT , AP:ACCELE PEDAL , CON:CONVERTIBLE ROOF

Vehicle	Vehicle Type	Release Date	Eng	AT	ABS	BCM	IPC	ABG	ICC	HVAC	ITM	EPS	IPDM	APM	HLL	E-4WD	I-KEY	DIU	ASD	PSB	ADP	4WD	4WAS /RAS /HICAS	SONAR	LDW	NATS	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Break Contr	AUTO SLID	CAN GAT EWA	POP UP HOO	TOTAL ILLU	OCC UPANT	MULTI DISP	SVT
INFINITI FX37	S51	2012 2013	SC D T F1 F2 F3 F4 F7 F8		SC D D F1 F2 F3 F8	SC D D F1 F2 F3							SC D D T F3		SC D D T F2						SC D D T F2 F3	SC D D T F2 F3		CD										SC D D T F3		SC D D T F3			SC D D T F2		SC D D F3		SC D D T F2				
INFINITI FX37/FX50	S51	2008 2009 2012 2013	SC D T F1 F2 F3 F4 F7 F8		SC D D F1 F2 F3 F8	SC D D F1 F2 F3							SC D D T F3	SC D D T F2	SC D D T F2						SC D D T F2 F3	SC D D T F3		CD												SC D D T F3			SC D D F2								
INFINITI FX37/FX50/FX30d	S51	2009 2010 2011 2012	SC D T F1 F2 F3 F4 F7 F8		SC D D F1 F2 F3 F8	SC D D F1 F2 F3							SC D D T F3	SC D D T F2	SC D D T F2						SC D D T F2 F3	SC D D T F3		CD													SC D D T F3			SC D D T F2							
INFINITI G20	P11	1999 2000 2001 2002	SC D T F1 F2 F3 F4 F7 F8		SC D D F1 F2 F3 F7	SC D D F1 F2							SC D D T F2	SC D D T F2	SC D D T F2		SC D D T F3 F7	SC D D T F1 F2				SC D D T F2 F7	SC D D T F2 F7		SC D D T F2			CD T F2	CD T F2			SC D D T F2	CD T F2	SC D D T F2							SC D D T F2						

INFINITI V11.00 Diagnostics List(Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

ALL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device , CGC:CHG COMM , TETC:TK_ECU_TYPE_CLUCH , DC:DISTANCE CONTROL , MA:MOTOR ASSIST , IVMS:Integrated Voice-Messaging System , TQC:TORQ CONT , AP:ACCELE PEDAL , CON:CONVERTIBLE ROOF

Vehicle	Vehicle Type	Release Date	Eng	AT	ABS	BCM	IPC	ABG	ICC	HVAC	ITM	EPS	IPDM	APM	HLL	E-4WD	I-KEY	DIU	ASD	PSB	ADP	4WD	4WAS /RAS /HICAS	SONAR	LDW	NATS	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Break Contr	AUTO SLID	CAN GAT EWA	POP UP HOO	TOTAL ILLU	OCCUPANT	MULTI DISP	SVT	
INFINITI G25/G37 Sedan	V36	2009 2010 2011 2012	SC D T F1 F2 F3 F4 F7 F8		SC D T F1 F2 F3 F7				SC D T F3				SC D T F3		SC D T F2						SC D T F2 F3	SC D T F3	SC D T F3												SC D T F2 F3			SC D T F2										
INFINITI G35 Coupe	CV35	2003 2004 2005 2006 2007	SC D T F1 F2 F3 F4 F7 F8		SC D T F1 F2 F3 F7								SC D T F3	SC D T F2	SC D T F2	SC D T F7	SC D T F2					SC D T F2 F7		SC D T F2		CD T F2 F2	CD T F2				SC D T F2 F7	CD T F2 F2	SC D T F2	SC D T F2						SC D F2								
INFINITI G35 Sedan	V36	2006 2007 2008	SC D T F1 F2 F3 F4 F7 F8		SC D T F1 F2 F7				SC D T F2				SC D T F3		SC D T F2							SC D T F2 F2	SC D T F2 F3	SC D T F3						SD F2											SC D F2							
INFINITI G35 Sedan	V35	2003 2004 2005 2006	SC D T F1 F2 F3 F4 F7 F8		SC D T F1 F2 F3 F7								SC D T F3	SC D T F2	SC D T F2	SC D T F7	SC D T F2					SC D T F2 F7	SC D T F2 F7	SC D T F2 F7			CD T F2 F2	CD T F2			SC D T F2 F7	CD T F2 F2	SC D T F2	SC D T F2							SC D T F2							

INFINITI V11.00 Diagnostics List(Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

ALL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device , CGC:CHG COMM , TETC:TK_ECU_TYPE_CLUCH , DC:DISTANCE CONTROL , MA:MOTOR ASSIST , IVMS:Integrated Voice-Messaging System , TQC:TORQ CONT , AP:ACCELE PEDAL , CON:CONVERTIBLE ROOF

[illegible]

INFINITI V11.00 Diagnostics List(Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

ALL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device , CGC:CHG COMM , TETC:TK_ECU_TYPE_CLUCH , DC:DISTANCE CONTROL , MA:MOTOR ASSIST , IVMS:Integrated Voice-Messaging System , TQC:TORQ CONT , AP:ACCELE PEDAL , CON:CONVERTIBLE ROOF

[illegible]

INFINITI V11.00 Diagnostics List (Note: For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1, F2, F3...) F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device , CGC:CHG COMM , TETC:TK_ECU_TYPE_CLUCH , DC:DISTANCE CONTROL , MA:MOTOR ASSIST , IVMS:Integrated Voice-Messaging System , TQC:TORQ CONT , AP:ACCELE PEDAL , CON:CONVERTIBLE ROOF

Vehicle	Vehicle Type	Release Date	Eng	AT	ABS	BCM	IPC	ABG	ICC	HVAC	ITM	EPS	IPDM	APM	HLL	E-4WD	I-KEY	DIU	ASD	PSB	ADP	4WD	4WAS /RAS /HICAS	SONAR	LDW	NATS	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Break Contr	AUTO SLID	CAN GAT EWA	POP UP HOO	TOTAL ILLU	OCCUPANT	MULTI DISP	SVT		
INFINITI M37/M56/M30d	Y51	2010 2011 2012	SC D T F1 F2 F3 F4 F7 F8		SC D T F1 F2 F3 F7					SC D T F2 F3				SC D T F2	SC D T F2						SC D T F2 F3		SC D T F3												SC D T F3			SC D T F3											
INFINITI M45	Y34	2003 2004 2005	SC D T F1 F2 F3 F4 F7 F8		SC D T F1 F2 F3 F7										SC D T F2	SC D T F3 F7	SC D T F2					SC D T F2 F7		SC D T F2			CD T F2	CD T F2				SC D T F2 F7	CD D F2 F7	SC D T F2						SC D T F2									
INFINITI Q45	FY33	1995 1996 1997 1998 1999 2000 2001	SC D T F1 F2 F3 F4 F7 F8		SC D T F1 F2 F3 F7										SC D T F2 F7	SC D T F3 F7	SC D T F2 F7					SC D T F2 F7		SC D T F2			CD T F2 F7	CD T F2				SC D T F2 F7	CD D F2 F7	SC D T F2						SC D T F2			SC D F3						
INFINITI Q45	F50	2001 2002 2003 2004 2005 2006*	SC D T F1 F2 F3 F4 F7 F8		SC D T F1 F2 F3 F7										SC D T F2 F7	SC D T F3 F7	SC D T F2 F7					SC D T F2 F7		SC D T F2			CD T F2 F7	CD T F2				SC D T F2 F7	CD D F2 F7	SC D T F2							SC D T F2			SC D F3					

INFINITI V11.00 Diagnostics List (Note: For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1, F2, F3,...)
F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

ALL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device , CGC:CHG COMM , TETC:TK_ECU_TYPE_CLUCH , DC:DISTANCE CONTROL , MA:MOTOR ASSIST , IVMS:Integrated Voice-Messaging System , TQC:TORQ CONT , AP:ACCELE PEDAL , CON:CONVERTIBLE ROOF

[illegible]

(*) : Tested;
(?) : Manual on website (www.x431.com)
Note: The final interpretation of the products belongs to LAUNCH TECH CO., LTD.