ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	INJECTION	V,C,D,A,R	IDLE SPEED SETTING DECREMENTATION IDLE SPEED SETTING INCREMENTATION WITH AUTOMATIC TRANSMISSION WITHOUT AUTOMATIC TRANSMISSION PROGRAMMING REINITIALISATION
	A.B.S	V,C,D,A	PROGRAMMING REINITIALISATION
	VARIABLE P.A.S	V,C,D,A	
	AUTOMATIC GEARBOX	V,C,D,A	
	ENGINE IMMOBILISER	V,C,D,A	ABANDON KEY REALLOCATION CODED DIESEL SOLENOID VALVE ENGINE IMMOBILISER DIESEL/PETROL ENG IMMOB WITHOUT CODED SOL VALVE END OF KEY REALLOCATION VALIDATION ENGINE IMMOBILISER AUTHORISATION ENGINE IIMMOBILISER PROHIBITION KEY PROGRAMMING SPECIAL NOTE TYPE 1 UNIT TYPE 2 UNIT WITH ALARM WITHOUT ALARM
TWINGO	INTERCONNECTION UNIT	V,C,D,A	ABANDON KEY REALLOCATION ALL TYPES EXCEPT 164 4X4 AUTO LOCK/DRIVING FUNCT AUTH.BY DIAG AUTO LOCKING WHEN DRIVING FUNCTION PREVENTION CABRIOLET E64 CABRIOLET TYPE VEHICLE CALIBRATION CODED DIESEL SOLENOID VALVE ENGINE IMMOBILISER CONFIGURATION TYPE 2 ENGINE IMMOBILISER DIESEL/PETROL ENG IMMOB WITHOUT CODED SOL VALVE END OF KEY REALLOCATION VALIDATION ENGINE IMMOBILISER AUTHORISATION ENGINE IMMOBILISER AUTHORISATION ILLUMINATE HAZARD LAMPS UPON IMPACT IMMOBILISER CONFIGURATION TYPE 3 I64 4X4 KEY PROGRAMMING NON CABRIOLET E64 OTHER TYPE OF VEHICLE RF FUNCTION AUTHORISED RF FUNCTION AUTHORISED SPECIAL NOTE TYPE 1 ENGINE IMMOBILISER CONFIGURATION TYPE 1 UNIT TYPE 2 UNIT WITH ALARM WITH ALARM WITH ALARM WITH ALABIAN OVERSPEED WITH AUTO LOCKING WITH DIESEL ENGINE IMMOBILISER ENGINE IMMOBILISER PROHIBITION ILLUMINATE HAZARD LAMPS UPON IMPACT IMMOBILISER CONFIGURATION TYPE 3
	AIRBAG/PRETENSIONERS	V,C,D,A	

		BASE	
ESPACE IV PH2	SYSTEMS	FUNCTIONS	SPECIAL FUNCTIONS
	PETROL INJECTION	V,C,D,A,R	DECREMENT IDLE SPEED IDLE SPEED SETTING DECREMENTATION IDLE SPEED SETTING INCREMENTATION INCREMENT OF IDLE SPEED PROGRAMMING REINITIALISATION WITH AUTOMATIC TRANSMISSION WITH POWER ASSISTED STEERING WITHOUT AUTOMATIC TRANSMISSION WITHOUT POWER ASSISTED STEERING TYPE 2 UNIT WITH ALARM WITH ALARM WITH ARABIAN OVERSPEED WITH AUTO LOCKING WITH DIESEL ENGINE IMMOBILISER ENGINE IMMOBILISER PROHIBITION ILLUMINATE HAZARD LAMPS UPON IMPACT
	A.B.S	V,C,D,A	IMMOBILISER CONFIGURATION TYPE 3 BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS SPEEDO INDEX VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
TWINGO PHASE 2	исн	V,C,D,A	CODED DIESEL SOLENOID VALVE ENGINE IMMOBILISER DIESEL/PETROL ENG IMMOB WITHOUT CODED SOL VALVE FLASHING BUZZER PROGRAMMING WITH 1 KEY PROGRAMMING WITH 2 KEYS
	VARIABLE P.A.S	V,C,D,A	
	AUTOMATIC GEARBOX	V,C,D,A	PROGRAMMING SELECTION/ENGAGING ZONES CLUTCH INITIAL CLOSED POSITION GEARBOX TYPE PROGRAMME SLIP POINT PROGRAMMED VALUES PROGRAMMING OF NO LOAD AND FULL LOAD POSITIONS PROGRAMMING SELECTION/ENGAGING ZONES WRITE CLUTCH INITIAL CLOSED POSITION WRITE DATE NEW CLUTCH FITTED WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	ENGINE IMMOBILISER	V,C,D,A	
	INTERCONNECTION UNIT	V,C,D,A	
	GAS INJ	V,C,D,A	
	AIRBAG/PRETENSIONERS	V,C,D,A	LOCK COMPUTER LOCK PASSENGER'S FRONT AIR BAG UNLOCK COMPUTER UNLOCK PASSENGER'S FRONT AIR BAG WRITE DATE OF LAST AFTER SALES OPERATION
	INJECTION		ADAPTIVES AFTER REGENERATING PARTICLE FILTER ADAPTIVES AFTER REPLACING CABIN FILTER AIR DAMPER VALVE PROGRAMMING AIR PATH PROGRAMMING CABIN FILTER REGENERATION CAMSHAFT SENSOR PROGRAMMING COMMERCIAL VEHICLE IDLE SPEED MODIFICATION

ESPACE IV PH2	SYSTEMS	BASE	SPECIAL FUNCTIONS
, <u>-</u>		FUNCTIONS	
			CRUISE CONTROL/SPEED LIMITER PROGRAMMING
			CYLINDER 1 INJECTOR CODE
			CYLINDER 2 INJECTOR CODE
			CYLINDER 3 INJECTOR CODE
			CYLINDER 4 INJECTOR CODE
			EGR ADAPTIVES
			EGR VALVE PROGRAMMING
			ENGINE ADAPTIVES
			ENTER INJECTOR CODES EXHAUST INJECTOR CIRCUIT
			FAULT MEMORY
		V,C,D,A,R	
			FLYWHEEL TARGET PROGRAMMING
			FUEL FLOW REGULATOR
			FUEL SUPPLY PREVENTION
			INJECTOR ADAPTIVES LOCK INJECTOR CONTROL
			OIL CHANGE INTERVAL (OCS): DILUTION
			PARAMETRAGE PRIVE 237
			PARAMETRAGE PRIVE 237 PARAMETRAGE PRIVE 238
			PARAMETRAGE PRIVE 238 PARAMETRAGE PRIVE 239
			PARAMETRAGE PRIVE 239 PARAMETRAGE PRIVE 240
			PARTICLE FILTER RELATIVE PRESSURE SENSOR PRESSURE REGULATION ADAPTIVES
			PROGRAMMED VALUES
			RAIL PRESSURE SENSOR ADAPTIVES
			SPEED LIMITER
			STOP FUEL SUPPLY PREVENTION
			UNLOCK INJECTOR CONTROL
			WRITE V.I.N.
			AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
			BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
			CHECK TARGET TEETH
			FAULT MEMORY
			GEARBOX TYPE
			PREVENTION OF STOP LIGHT AUTO ILLUMINATION
	A.B.S	V,C,D,A,R	SENSOR OFFSETS
			SPEEDO INDEX
			STEERING WHEEL ANGLE SENSOR
			VEHICLE PARAMETERS
			WRITE DATE OF LAST AFTER SALES OPERATION
			WRITE VIN
	INSTRUMENT PANEL	V,C,D,A,R	
			FAULT MEMORY
	VARIABLE P.A.S	V,C,D,A,R	MODE NUMBER
			CLUTCH INITIAL CLOSED POSITION
			FAULT/S MEMORISED
			PROGRAMME SLIP POINT
			PROGRAMMED VALUES
	AUTOMATIC GEARBOX	V,C,D,A,R	PROGRAMMING SELECTION/ENGAGING ZONES
			WRITE CLUTCH INITIAL CLOSED POSITION
			WRITE DATE NEW CLUTCH FITTED
			WRITE DATE OF LAST AFTER SALES OPERATION
			WRITE VIN

ECDACE IVENIA	CVCTTAG	BASE	CDECIAL FUNCTIONS
ESPACE IV PH2	SYSTEMS	FUNCTIONS	SPECIAL FUNCTIONS
	INSTRUMENT PANEL	V,C,D,A,R	ADAC CONFIGURATION CLOCK CRUISE CTRL/SPD LIMITER DISTANCE UNITS ELECTRIC POWER ASSISTED STEERING EXTERNAL TEMPERATURE FAULT MEMORY FUEL LEVEL DISPLAY UPDATE FUEL TYPE GEARBOX TYPE OIL SERVICE AND ODOMETRY MILES - KM OVERSPEED FUNCTION - ARABIA PERSONALISED OIL CHANGE FREQUENCY RHEOSTAT PRESENCE SEAT BELT REMINDER BUZZER TRAJECTORY CONTROL WRITE VIN
	UPC	V,C,D,A	
TWINGO II	AIRBAG/PRETENSIONERS	V,C,D,A,R	CURTAIN SIDE AIR BAG AND DRIVER'S SIDE CURTAIN SIDE AIR BAG AND PASSENGER SIDE DRIVER'S FRONT AIRBAG DRIVER'S FRONT BUCKLE PRETENSIONER DRIVER'S FRONT SIDE IMPACT SENSOR DRIVER'S SEAT BUCKLE SENSOR FAULT MEMORY FRONT THORAX SIDE AIR BAG, DRIVER SIDE FRONT THORAX SIDE AIR BAG, PASSENGER SIDE LOCK COMPUTER PASSENGER AIR BAG LOCKING MODE PASSENGER'S FRONT AIRBAG PASSENGER'S FRONT BUCKLE PRETENSIONER PASSENGER'S FRONT BUCKLE PRETENSIONER PASSENGER'S FRONT SIDE IMPACT SENSOR READING IMPACT CONTEXTS SIDE ON WHICH STEERING WHEEL FITTED UNLOCK COMPUTER WRITE VIN
	AIR CONDITIONING	V,C,D,A,R,	FAULT MEMORY GEOGRAPHICAL ZONE HEATING RESISTOR TYPE VEHICLE TYPE WRITE VIN BUIZZER VOLUME
	PARKING ASSISTANCE	V,C,D,A,R	BUZZER VOLUME CARAVAN TOWING DISTANCE FAULT MEMORY TONE ADJUSTMENT VEHICLE IDENTIFICATION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	UCH	V,C,D,A,R	AIR CONDITIONING TYPE ALARM AUTOMATIC LIGHTING FUNCTION AUTOMATIC LOCKING WHEN DRIVING AUTOMATIC WIPING FUNCTION CALIBRATION CHECKING A KEY DAYTIME RUNNING LIGHTS DEADLOCKING ENGINE TYPE EXTERNAL TEMPERATURE SENSOR FAULT MEMORY FRONT FOG LIGHTS HAZARD WARNING LIGHTS ILLUMINATION BY ABS KEY ASSIGNMENT KEY TYPE ONE-TOUCH ELECTRIC WINDOW(S) / SUNROOF OPENING ELEMENTS CENTRAL LOCKING PROGRAMMING THE INJECTION IMMOBILISER CODE RAIN/LIGHT SENSOR SEE-ME-HOME LIGHTING SPARE TEMPERATURE DISPLAY WIPER INTERMITTENT SPEED RING WRITE VIN
	MULTIMEDIA INTERFACE	V,C,D,A,R,	COMP CONFIGURATION FAULT MEMORY LIGHTING RADIO VEHICLE CONFIGURATION VEHICLE IDENTIFIER VEHICLE TYPE WRITE VIN
	MULTIMED. CONNECTION	V,C,D,A,R,	FAULT MEMORY SYSTEM CONFIGURATION WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	RADIO	V,C,D,A,R,	COMP CONFIGURATION CUSTOMER SETTINGS AND DETAILS FAULT MEMORY RESET RADIO SYSTEM CONFIGURATION WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	REV COUNTER/SYMBOL	V,C,D,A,R	FREE SHIFT FREE SHIFT DISPLAY OVERSPEED LIGHT RHEOSTAT LIGHTING TRAJECTORY CONTROL WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE	SPECIAL FUNCTIONS
ESPACE IV PH2	INJECTION	FUNCTIONS V,C,D,A,R	SPECIAL FUNCTIONS ADAPTIVES AFTER REGENERATING PARTICLE FILTER ADAPTIVES AFTER REPLACING CABIN FILTER AIR DAMPER VALVE PROGRAMMING AIR PATH PROGRAMMING CABIN FILTER REGENERATION CAMSHAFT SENSOR PROGRAMMING COMMERCIAL VEHICLE IDLE SPEED MODIFICATION CRUISE CONTROL/SPEED LIMITER PROGRAMMING CYLINDER 1 INJECTOR CODE CYLINDER 2 INJECTOR CODE CYLINDER 3 INJECTOR CODE CYLINDER A INJECTOR CODE CYLINDER A INJECTOR CODE CYLINDER A INJECTOR CODE EGR ADAPTIVES EGR VALVE PROGRAMMING ENGINE ADAPTIVES ENTER INJECTOR CODES ENTER VIN CODE EXHAUST INJECTOR CIRCUIT FAULT MEMORY FLYWHEEL TARGET PROGRAMMING FUEL FLOW REGULATOR FUEL SUPPLY PREVENTION IGNITION COIL ADAPTIVE INJECTOR ADAPTIVES LOCK INJECTOR CONTROL OIL CHANGE INTERVAL (OCS): DILUTION PARAMETRAGE PRIVE 237 PARAMETRAGE PRIVE 238 PARAMETRAGE PRIVE 239 PARAMETRAGE PRIVE 240 PARTICLE FILTER RELATIVE PRESSURE SENSOR PINKING SENSOR PROGRAMMING PRESSURE REGULATION ADAPTIVES PROGRAMMING REINITIALISATION PROGRAMMING THROTTLE LIMITS RAIL PRESSURE SENSOR ADAPTIVES RICHNESS REGULATION PROGRAMMING SPEED LIMITER STOP FUEL SUPPLY PREVENTION
	A.B.S	V,C,D,A,R	UNLOCK INJECTOR CONTROL WRITE VIN AUTO STOP LIGHTS ILLUMINATION AUTHORISATION BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS CHECK TARGET TEETH ESP AUTOMATIC RECONNECTION THRESHOLD ESP SENSOR PROGRAMMING FAULT MEMORY PREVENTION OF STOP LIGHT AUTO ILLUMINATION SPEEDO INDEX VEH. SPEED AT INITIALISATION VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	AIR CONDITIONING	V,C,D,R	FAULT MEMORY GEOGRAPHICAL ZONE HEATING RESISTOR TYPE VEHICLE TYPE WRITE VIN
	AUTOMATIC GEARBOX	V,C,D,A,	WAITE VIN AUTO-ADAPTIVES CLUTCH INITIAL CLOSED POSITION FAULT MEMORY FAULT/S MEMORISED NOTE OIL WEAR COUNTER PROGRAM CLUTCH OPEN POSITION PROGRAMMED VALUES PROGRAMMING SELECTION/ENGAGING ZONES PROGRAMMING SELECTION/ENGAGING ZONES WRITE CLUTCH INITIAL CLOSED POSITION WRITE DATE NEW CLUTCH FITTED WRITE DATE OF LAST AFTER SALES OPERATION WRITE TRANSMISSION OIL CHANGE DATE WRITE VIN
	VARIABLE P.A.S	V,C,D,A,R	COMPUTER CALIBRATION FAULT MEMORY STEERING WHEEL ANGLE SENSOR PROGRAMMING WRITE DATE OF AFTER SALES OPERATION WRITE VIN
MODUS	INSTRUMENT PANEL	V,C,D,A,R	ADAC DISPLAY TYPE CRUISE CTRL/SPD LIMITER DISTANCE UNITS FAULT MEMORY FREE SHIFT FUEL SENDER CALIBRATION (DOI). FUEL SENDER CALIBRATION (EUROPE) FUEL TYPE GEARBOX TYPE LANGUAGE VERSION. LIGHTS AUTOMATIC ILLUMINATION MODUS FUEL SENDER CALIBRATION (EUROPE) MODUS LONG FUEL SENDER CALIBRATION (EUROPE) MODUS LONG FUEL SENDER CALIBRATION (EUROPE) OIL CHANGE INTERVAL IN KM OIL CHANGE INTERVAL IN MONTHS OIL CHANGE RANGE:CURRENT VALUE IN KM OIL CHANGE RANGE:CURRENT VALUE IN MONTHS OVERSPEED FUNCTION - ARABIA PARTICLE FILTER PERSONALISED OIL CHANGE FREQUENCY TRAJECTORY CONTROL TYRE PRESSURE MONITORING UPDATE ODOMETER VEHICLE TYPE WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	AIRBAG/PRETENSIONERS	V,C,D,R,	CONFIGURATION OF SYSTEM COMPONENTS CURTAIN SIDE AIR BAG AND DRIVER'S SIDE CURTAIN SIDE AIR BAG AND PASSENGER SIDE DRIVER FRONT AIR BAG CIRCUIT 1 DRIVER FRONT AIR BAG CIRCUIT 2 DRIVER LAP STRAP PRETENSIONER DRIVER'S LATERAL SENSOR DRIVER'S SEAT BUCKLE SENSOR DRIVER'S SEAT POSITION SENSOR FAULT MEMORY FRONT SEAT BELT RETRACTORS FRONT THORAX SIDE AIR BAG, DRIVER SIDE FRONT THORAX SIDE AIR BAG, DRIVER SIDE LOCK COMPUTER PASSENGER AIR BAG LOCKING MODE PASSENGER FRONT AIR BAG CIRCUIT 1 PASSENGER FRONT AIR BAG CIRCUIT 1 PASSENGER FRONT AIR BAG CIRCUIT 2 PASSENGER LAP STRAP PRETENSIONER PASSENGER LAP STRAP PRETENSIONER PASSENGER LAP STRAP PRETENSIONER PASSENGER SEAT BUCKLE SENSOR PASSENGER'S LATERAL SENSOR PASSENGER'S LATERAL SENSOR READING IMPACT CONTEXTS REAR INERTIA REELS SIDE ON WHICH STEERING WHEEL FITTED UNLOCK COMPUTER W FR CHEST AIRBAGS W/OUT HEAD-LVL AIRBAGS WITH FR CHEST AIRBAGSS+HEAD-LEVEL AIRBAGS WITH OUT SIDE AIRBAGS WITH OUT SIDE AIRBAGS WITHOUT SIDE AIRBAGS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	PARKING ASSISTANCE	V,C,D,A,R	BUZZER VOLUME CARAVAN TOWING DISTANCE FAULT MEMORY TONE ADJUSTMENT VEHICLE IDENTIFICATION WRITE VIN
	исн	V,C,D,A,R	3-BUTTON KEY CHECKING A KEY CHILDPROOF LOCK DEADLOCKING DRIVING TYPE FAULT MEMORY HAZARD WARNING LIGHTS ILLUMINATION BY ABS HEADLIGHT WASHERS KEY ASSIGNMENT NEW VEHICLE STORAGE MODE DEACTIVATION PROGRAMMING THE INJECTION IMMOBILISER CODE SELECTIVE OPENING OF DOORS SPARE TAILGATE FLAP WINDSCREEN TYPE WRITE VIN
	TYRES	V,C,D,A,R	

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	LIGHTING	V,C,D,A,R	AUTOMATIC FOLD-DOWN HEADLIGHTS CORNERING LIGHTS DIPPED HEADLIGHTS RAISE DYNAMIC CORRECTION FAULT MEMORY SIGNATURE SYSTEM INITIALISATION VEHICLE TYPE WRITE VIN
	HANDS-FREE KIT	V,C,D,A,R	AUDIO LINKS TEST COMPUTER CALIBRATION AND OPERATION FAULT MEMORY LANGUAGE MICROPHONE TEST SERIAL LINK TEST WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	UPC	V,C,D,A,	FAULT MEMORY VEHICLE PARAMETERS WRITE VIN
	PETROL INJECTION	V,C,D,A,R	
	A.B.S	V,C,D,A	
CLIO	AUTOMATIC GEARBOX	V,C,D,A	
	ENGINE IMMOBILISER	V,C,D,A	
	AIRBAG/PRETENSIONERS	V,C,D,A	
	INJECTION	V,C,D,A,R	AIR CONDITIONING IDLE SPEED SETTING DECREMENTATION IDLE SPEED SETTING INCREMENTATION POWER STEERING ELECTRIC PUMP UNIT PROGRAMMING REINITIALISATION THERMOPLUNGERS WITH AUTOMATIC TRANSMISSION WITHOUT AUTOMATIC TRANSMISSION
	A.B.S	V,C,D,	BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS SPEEDO INDEX VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	UCH	V,C,D,A,	AUTO LOCKING WHEN DRIVING FUNCTION PREVENTION AUTOMATIC RELOCKING FLASHING BUZZER ILLUMINATE HAZARD LAMPS UPON IMPACT KEY PROGRAMMING ONE-TOUCH CENTRAL DOOR LOCKING BUTTON RAID FUNCTION AUTHORISATION RAID FUNCTION AUTHORISATION BY DIAG ROCKER CENTRAL DOOR LOCKING BUTTON WITH AUTOMATIC RE-LOCKING WITH AUTOMATIC RE-LOCKING WITH HAZARD LIGHTS UPON IMPACT WITH INFRA-RED REMOTE CONTROL WITH OVERSPEED WARNING WITH RUNNING LIGHTS WITH TIMED COURTESY LIGHT WITH VARIABLE W'SCREEN WIPER INTERMITTENT WITHOUT AUTOMATIC RE-LOCKING WITHOUT AUTOMATIC RE-LOCKING WITHOUT THOMATIC RE-LOCKING WITHOUT TUNNING LIGHTS WITHOUT TIMED COURTESY LIGHT WITHOUT TUNNING LIGHTS WITHOUT TIMED COURTESY LIGHT
CLIO II	AIR CONDITIONING	V,C,D,A,	BEHR PROBE CONFIGURATION CONFIG. WITHOUT RECYCLING FLAP AUTO-SETTING CONFIGURATION WITH RECYCLING FLAP AUTO-SETTING EEPROM PROBE CONFIGURATION HOKURIKU PROBE CONFIGURATION SIEMENS PROBE CONFIGURATION WITH COOLANT SENSOR WITH EVAPORATOR TEMPERATURE SENSOR WITH HARRISON TYPE COMPRESSOR WITH HEATED REAR SCREEN WITH ONE-TOUCH TYPE CONTROL WITH PERMANENT TYPE CONTROL WITH PERMANENT TYPE CONTROL WITH RECYCLING MOTOR TIMER WITH SANDEN TYPE COMPRESSOR WITHOUT COOLANT SENSOR WITHOUT EVAPORATOR TEMPERATURE SENSOR WITHOUT HEATED REAR SCREEN WITHOUT HEATED REAR SCREEN WITHOUT HEATED REAR SCREEN WITHOUT RECYCLING MOTOR TIMER WRITE DATE OF LAST AFTER SALES OPERATION

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	AUTOMATIC GEARBOX	V,C,D,A,	AIR CONDITIONING WITH WIRE CONNECTION AUTO-ADAPTIVES CHECK MOTOR TORQUE BY ABS CONVERTER LOCK UP ADAPTIVE ENGINE TORQUE CONTROL FUNCTION LEVER LOCKING CONNECTION FAULT FINDING NOTE OIL WEAR COUNTER OBD MEMORY OIL CHANGE COUNTER OFFSET PROGRAMMING OF NO LOAD AND FULL LOAD POSITIONS SELECTOR LEVER LOCKING TRAJECTORY CONTROL WITH AIR CONDITIONING WITHOUT AIR CONDITIONING WITHOUT OBD WRITE DATE OF LAST AFTER SALES OPERATION WRITE TRANSMISSION OIL CHANGE DATE WITH UN
	GAS INJ	V,C,D,A,	
	AIRBAG/PRETENSIONERS	V,C,D,A,	LOCK PASSENGER'S FRONT AIR BAG UNLOCK PASSENGER'S FRONT AIR BAG WITH PASSENGER'S AIRBAG WITHOUT PASSENGER'S AIRBAG WRITE DATE OF LAST AFTER SALES OPERATION
	INJECTION	V,C,D,A,R	AIR CONDITIONING CRUISE CTRL/SPEED LIMITER DECREMENT IDLE SPEED EGR ADAPTIVES ENGINE PARAMETER ADAPTIVES ENTER INJECTOR CALIBRATION DATA FUEL SYSTEM TEST GEARBOX TYPE HIGH PRESSURE CIRCUIT LEAK TEST INCREMENT OF IDLE SPEED INJECTION PROHIBITION INJECTOR CYLINDER 1 INJECTOR CYLINDER 1 INJECTOR CYLINDER 2 INJECTOR CYLINDER 3 INJECTOR CYLINDER 4 POWER STEERING ELECTRIC PUMP UNIT PREVENTION OF ELECTRICAL CONSUMERS PROGRAMMING REINITIALISATION SAVE DATA FOR COMPUTER REPLACEMENT STATIC/AUTOCONFIGURATION TEST THERMOPLUNGERS VEHICLE FUNCTION PROGRAMMING WRITING DATA TO MEMORY
	A.B.S	V,C,D	WRITE VIN BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS SPEEDO INDEX VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	AIR CONDITIONING	V,C,D,A,	

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	VARIABLE P.A.S	V,C,D,A	COMPUTER CALIBRATION WRITE DATE OF LAST AFTER SALES OPERATION
CLIO II PH 2/3/4	AUTOMATIC GEARBOX	V,C,D,A,	AIR CONDITIONING WITH WIRE CONNECTION AUTO-ADAPTIVES CHECK MOTOR TORQUE BY ABS CONVERTER LOCK UP ADAPTIVE ENGINE TORQUE CONTROL FUNCTION LEVER LOCKING CONNECTION FAULT FINDING NOTE OIL WEAR COUNTER OBD MEMORY PROGRAMMING OF NO LOAD AND FULL LOAD POSITIONS SELECTOR LEVER LOCKING TRAJECTORY CONTROL WRITE DATE OF AFTER SALES OPERATION WRITE TRANSMISSION OIL CHANGE DATE WRITE TRANSMISSION OIL CHANGE DATE
	ENGINE IMMOBILISER	V,C,D,A	KEY PROGRAMMING
	INTERCONNECTION UNIT	V,C,D,A,R	
	LIGHTING	V,C,D,A,R	HIGH AND LOW POSITION ACTUATOR CONTROL
	AIRBAG/PRETENSIONERS	V,C,D,A,R	CURTAIN SIDE AIR BAG AND DRIVER'S SIDE CURTAIN SIDE AIR BAG AND PASSENGER SIDE DRIVER FRONT AIR BAG CIRCUIT 1 DRIVER FRONT AIR BAG CIRCUIT 2 DRIVER'S FRONT BUCKLE PRETENSIONER DRIVER'S LATERAL SENSOR DRIVER'S SIDE REAR INERTIA REEL FRONT THORAX SIDE AIR BAG, DRIVER SIDE FRONT THORAX SIDE AIR BAG, PASSENGER SIDE LOCK COMPUTER PARAMETRAGE PRIVE 1 PASSENGER AIR BAG LOCKING MODE PASSENGER FRONT AIR BAG CIRCUIT 1 PASSENGER FRONT AIR BAG CIRCUIT 2 PASSENGER FRONT BUCKLE PRETENSIONER PASSENGER'S LATERAL SENSOR PASSENGER'S SIDE REAR INERTIA REEL UNLOCK COMPUTER WRITE DATE OF LAST AFTER SALES OPERATION
	DISCHARGE LAMP	V,C,D,A,	

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	INJECTION	V,C,D,A,R	ADAPTIVES AFTER REGENERATING PARTICLE FILTER ADAPTIVES AFTER REPLACING CABIN FILTER AIR DAMPER VALVE PROGRAMMING AIR PATH PROGRAMMING CABIN FILTER REGENERATION CAMSHAFT SENSOR PROGRAMMING COMMERCIAL VEHICLE IDLE SPEED MODIFICATION CRUISE CONTROL/SPEED LIMITER PROGRAMMING CYLINDER 1 INJECTOR CODE CYLINDER 2 INJECTOR CODE CYLINDER 3 INJECTOR CODE CYLINDER 4 INJECTOR CODE EGR ADAPTIVES EGR VALVE PROGRAMMING ENGINE ADAPTIVES ENTER INJECTOR CODES ENTER VIN CODE EXHAUST INJECTOR CIRCUIT FAULT MEMORY FLYWHEEL TARGET PROGRAMMING FUEL FLOW REGULATOR FUEL SUPPLY PREVENTION HIGH PRESSURE CIRCUIT LEAK TEST IGNITION COIL ADAPTIVE INJECTOR ADAPTIVES LOCK INJECTOR CONTROL OIL CHANGE INTERVAL (OCS): DILUTION PARAMETRAGE PRIVE 237 PARAMETRAGE PRIVE 238 PARAMETRAGE PRIVE 239 PARAMETRAGE PRIVE 240 PARTICLE FILTER RELATIVE PRESSURE SENSOR PINKING SENSOR PROGRAMMING PRESSURE REGULATION ADAPTIVES PROGRAMMING REINITIALISATION PROGRAMMING THROTTLE LIMITS RAIL PRESSURE SENSOR ADAPTIVES RICHNESS REGULATION PROGRAMMING SPEED LIMITER STOP FUEL SUPPLY PREVENTION UNLOCK INJECTOR CONTROL WILLOCK INJECTOR CONTROL
	A.B.S	V,C,D,A,R	AUTO STOP LIGHTS ILLUMINATION AUTHORISATION BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS CHECK TARGET TEETH ESP AUTOMATIC RECONNECTION THRESHOLD ESP SENSOR PROGRAMMING FAULT MEMORY PREVENTION OF STOP LIGHT AUTO ILLUMINATION SPEEDO INDEX VEH. SPEED AT INITIALISATION VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	AUTOMATIC GEARBOX	V,C,D,A,R	AUTO-ADAPTIVES CLUTCH INITIAL CLOSED POSITION FAULT MEMORY FAULT/S MEMORISED NOTE OIL WEAR COUNTER PROGRAM CLUTCH OPEN POSITION PROGRAMME SLIP POINT PROGRAMMED VALUES PROGRAMMING SELECTION/ENGAGING ZONES WRITE CLUTCH INITIAL CLOSED POSITION WRITE DATE NEW CLUTCH FITTED WRITE DATE OF LAST AFTER SALES OPERATION WRITE TRANSMISSION OIL CHANGE DATE WRITE TRANSMISSION OIL CHANGE DATE WRITE VIN
	VARIABLE P.A.S	V,C,D,A,R	COMPUTER CALIBRATION FAULT MEMORY STEERING WHEEL ANGLE SENSOR PROGRAMMING WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	INSTRUMENT PANEL	V,C,D,A,R	ADAC CONFIGURATION ADAC DISPLAY TYPE ANALOGIC DISPLAY FUEL GAUGE CALIBRATION BACKUP OF INSTRUMENT PANEL DATA FOR INJECTION BODYWORK TYPE CARD/KEY CLOCK CONSUMPTION MEASUREMENT UNITS CRUISE CTRL/SPD LIMITER DISTANCE BEFORE NEXT OIL CHANGE CONFIGURATION DISTANCE UNITS DRIVE TYPE CONFIGURATION EXTERNAL TEMPERATURE FAULT MEMORY FREE SHIFT FUEL GAUGE CALIBRATION FUEL TYPE GEARBOX TYPE LANGUAGE CONFIGURATION LANGUAGE VERSION. LCD DISPLAY FUEL GAUGE CALIBRATION LIGHTS AUTOMATIC ILLUMINATION

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
CLIO III		FUNCTIONS	OIL CHANGE INTERVAL IN KM OIL CHANGE INTERVAL IN MONTHS OIL CHANGE RANGE:CURRENT VALUE IN KM OIL CHANGE RANGE:CURRENT VALUE IN MONTHS OVERSPEED ALARM OVERSPEED FUNCTION - ARABIA PARTICLE FILTER PERSONALISED OIL CHANGE FREQUENCY RESERVE CAPACITY RESTART THE COMPUTER REV COUNTER RHEOSTAT PRESENCE SEAT BELT REMINDER BUZZER SEAT BELT WARNING MODULE TANK CAPACITY TRAJECTORY CONTROL TYRE PRESSURE MONITORING
			UPDATE ODOMETER VEHICLE SPEED SIGNAL TRANSMITTER WRITE VIN WRITING OF INSTRUMENT PANEL DATA FOR INJECTION
	AIRBAG/PRETENSIONERS	V,C,D,R	CONFIGURATION OF SYSTEM COMPONENTS CURTAIN SIDE AIR BAG AND DRIVER'S SIDE CURTAIN SIDE AIR BAG AND PASSENGER SIDE DRIVER FRONT AIR BAG CIRCUIT 1 DRIVER FRONT AIR BAG CIRCUIT 2 DRIVER'S LAP STRAP/SEAT AIRBAG DRIVER'S LAP STRAP/SEAT AIRBAG DRIVER'S LAP STRAP/SEAT AIRBAG DRIVER'S SEAT BUCKLE SENSOR DRIVER'S SEAT BUCKLE SENSOR FAULT MEMORY FRONT SEAT BELT RETRACTORS FRONT THORAX SIDE AIR BAG, DRIVER SIDE FRONT THORAX SIDE AIR BAG, PASSENGER SIDE LOCK COMPUTER PASSENGER AIR BAG LOCKING MODE PASSENGER FRONT AIR BAG CIRCUIT 1 PASSENGER FRONT AIR BAG CIRCUIT 2 PASSENGER'S LAP STRAP/SEAT AIRBAG WASSENGER'S LAP STRAP/SEAT AIRBAG PASSENGER'S LAP STRAP/SEAT AIRBAG WASSENGER'S LAP STRAP/SEAT AIRBAG PASSENGER'S LAP STRAP/SEAT AIRBAG PASSENGER'S LAP STRAP/SEAT AIRBAG PASSENGER'S LAP STRAP/SEAT AIRBAG WASSENGER'S LAP STRAP/SEAT AIRBAG PASSENGER'S LAP STRAP/SEAT AIRBAG PASSENGER STAP SAIRBAG PASSENGER'S LAP STRAP/SEAT AIRBAG PASSENGER'S LAP STRAP/SEAT AIRBAG PASSENGER'S LAP STRAP/SEAT AIRBAG PASSENGER'S LAP STRAP/SEAT AIRBAG PA
	UPC	V,C,D,A	FAULT MEMORY VEHICLE PARAMETERS WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE	SPECIAL FUNCTIONS
		FUNCTIONS	
			BUZZER VOLUME
			CARAVAN TOWING DISTANCE
	PARKING ASSISTANCE	V,C,D,A,R	FAULT MEMORY
		, , , ,	TONE ADJUSTMENT
			VEHICLE IDENTIFICATION
			WRITE VIN
			FAULT MEMORY
			GEOGRAPHICAL ZONE
	AIR CONDITIONING	V,C,D,R	HEATING RESISTOR TYPE
			VEHICLE TYPE
			WRITE VIN
			3-BUTTON KEY
		I	CHECKING A KEY
		I	CHILDPROOF LOCK
		I	COLUMN LOCK IMMOBILISER PROGRAMMING CODE
		I	DEADLOCKING
		I	DISCHARGE LAMP
			DRIVING TYPE
			EXTERNAL TEMPERATURE SENSOR
			FAULT MEMORY
			FRONT FOG LIGHTS
			GEARBOX TYPE
	UCH	V,C,D,A,R	HAZARD WARNING LIGHTS ILLUMINATION BY ABS
	och		HEADLIGHT WASHERS
			KEY ASSIGNMENT
			NEW VEHICLE STORAGE MODE DEACTIVATION
			ONE-TOUCH ELECTRIC WINDOW(S) / SUNROOF
			PROGRAMMING THE INJECTION IMMOBILISER CODE
			REAR ACCESS AERIALS
		I	SELECTIVE OPENING OF DOORS
		I	SPARE
			TEMPERATURE DISPLAY
		I	WINDSCREEN TYPE
		Į	WRITE VIN
		I	COMP CONFIGURATION
		I	FAULT MEMORY
		I	LIGHTING
		I	NAVIGATION
	MULTIMEDIA INTERFACE	V,C,D,A,R	RADIO
		I	VEHICLE CONFIGURATION
		I	VEHICLE IDENTIFIER
		I	VEHICLE TYPE
		I	WRITE VIN
			FAULT MEMORY
	L	L	SYSTEM CONFIGURATION
	MULTIMED. CONNECTION	V,C,D,A,R	WRITE DATE OF LAST AFTER SALES OPERATION
			WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	COMMUNICATIONS UNIT	V,C,D,A,R	ACTIVATION OF CONNECTIVITY SERVICES ANGLE OF ASSEMBLY CONSTRUCTOR/MANUFACTURER DISTANCE UNITS ECU MEMORY FAULT MEMORY GSM ANTENNA REVERSING CAMERA CALIBRATION SYSTEM CONFIGURATION WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	TYRES	V,C,D,A,R	FAULT MEMORY PROGRAMMING A VALVE CODE PROGRAMMING THE CODES OF THE FOUR VALVES READING THE VALVE SET AND VALVE CODES SELECTION OF VALVE SET VEHICLE TYPE WRITE VIN COMP CONFIGURATION
	RADIO	V,C,D,A,R	FAULT MEMORY WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	LIGHTING	V,C,D,A,R	AUTOMATIC FOLD-DOWN HEADLIGHTS CORNERING LIGHTS DIPPED HEADLIGHTS RAISE DYNAMIC CORRECTION FAULT MEMORY SIGNATURE SYSTEM INITIALISATION VEHICLE TYPE WRITE VIN
	INJECTION	V,C,D,A	CATALYTIC CONVERTER TEST DECREMENT IDLE SPEED ENGINE RUNNING ENGINE SPEED ZERO ENTER INJECTOR CALIBRATION DATA INCREMENT OF IDLE SPEED INJECTOR CYLINDER 1 INJECTOR CYLINDER 2 INJECTOR CYLINDER 3 INJECTOR CYLINDER 4 START OBD TEST: OZ SENSORS PROGRAMMING REINITIALISATION SAVE DATA FOR COMPUTER REPLACEMENT WRITE VIN WRITING DATA TO MEMORY
	A.B.S	V,C,D	BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS SPEEDO INDEX VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	AIR CONDITIONING	V,C,D,A	BEHR PROBE CONFIGURATION CONFIG. WITHOUT RECYCLING FLAP AUTO-SETTING CONFIGURATION WITH RECYCLING FLAP AUTO-SETTING EEPROM PROBE CONFIGURATION HOKURIKU PROBE CONFIGURATION SIEMENS PROBE CONFIGURATION WITH COOLANT SENSOR WITH EVAPORATOR TEMPERATURE SENSOR WITH HARRISON TYPE COMPRESSOR WITH HARRISON TYPE COMPRESSOR WITH HEATED REAR SCREEN WITH ONE-TOUCH TYPE CONTROL WITH PERMANENT TYPE CONTROL WITH PERMANENT TYPE CONTROL WITH RECYCLING MOTOR TIMER WITH SANDEN TYPE COMPRESSOR WITHOUT COOLANT SENSOR WITHOUT HEATED REAR SCREEN WITHOUT HEATED REAR SCREEN WITHOUT HEATED REAR SCREEN WITHOUT HEATED REAR SCREEN WITHOUT RECYCLING MOTOR TIMER
THALIA/SYMBL	AUTOMATIC GEARBOX	V,C,D,A	AIR CONDITIONING CONNECTION FAULT FINDING AIR CONDITIONING WITH WIRE CONNECTION AUTO-ADAPTIVES CHECK MOTOR TORQUE BY ABS CONVERTER LOCK UP ADAPTIVE ENGINE TORQUE CONTROL FUNCTION LEVER LOCKING CONNECTION FAULT FINDING NOTE OIL WEAR COUNTER OBD MEMORY OIL CHANGE COUNTER OFFSET PROGRAMMING OF NO LOAD AND FULL LOAD POSITIONS SELECTOR LEVER LOCKING TRAJECTORY CONTROL WITH AIR CONDITIONING WITH OBD WITHOUT AIR CONDITIONING WITHOUT OBD WRITE DATE OF LAST AFTER SALES OPERATION WRITE TRANSMISSION OIL CHANGE DATE WRITE VIN
	ENGINE IMMOBILISER	V,C,D,A	KEY PROGRAMMING

	0.00000	BASE	
ESPACE IV PH2	SYSTEMS	FUNCTIONS	SPECIAL FUNCTIONS
	INTERCONNECTION UNIT	V,C,D,A	AUTO LOCKING WHEN DRIVING FUNCTION PREVENTION AUTOMATIC RELOCKING FLASHING BUZZER ILLUMINATE HAZARD LAMPS UPON IMPACT ONE-TOUCH CENTRAL DOOR LOCKING BUTTON RAID FUNCTION AUTHORISATION RAID FUNCTION AUTHORISATION BY DIAG ROCKER CENTRAL DOOR LOCKING BUTTON WITH AUTOMATIC RE-LOCKING WITH HAZARD LIGHTS UPON IMPACT WITH INFRA-RED REMOTE CONTROL WITH OVERSPEED WARNING WITH RUNNING LIGHTS WITH TIMED COURTESY LIGHT WITH VARIABLE W'SCREEN WIPER INTERMITTENT WITHOUT AUTOMATIC RE-LOCKING WITHOUT AUTOMATIC RE-LOCKING WITHOUT HAZARD LIGHTS UPON IMPACT WITHOUT OVERSPEED WARNING WITHOUT RUNNING LIGHTS WITHOUT RUNNING LIGHTS WITHOUT TIMED COURTESY LIGHT WITHOUT TIMED COURTESY LIGHT WITHOUT TIMED COURTESY LIGHT
	AIRBAG/PRETENSIONERS	V,C,D,A	LOCK PASSENGER'S FRONT AIR BAG UNLOCK PASSENGER'S FRONT AIR BAG WITH PASSENGER'S AIRBAG WITHOUT PASSENGER'S AIRBAG WRITE DATE OF LAST AFTER SALES OPERATION
	INJECTION	V,C,D,A,R	AIR CONDITIONING ALCOHOL LEVEL PROG. CYLINDER 1 INJECTOR CODE CYLINDER 2 INJECTOR CODE CYLINDER 3 INJECTOR CODE CYLINDER 4 INJECTOR CODE CYLINDER 4 INJECTOR CODE EGR ADAPTIVES ENGINE ADAPTIVES ENGINE PARAMETER ADAPTIVES ENGINE PARAMETER ADAPTIVES ENTER INJECTOR CODES FAULT MEMORY FLYWHEEL TARGET PROGRAMMING FUEL SUPPLY PREVENTION GEARBOX TYPE INJECTION PROHIBITION LOCK INJECTOR CONTROL NUMBER OF HEATING ELEMENTS POWER STEERING ELECTRIC PUMP UNIT PRESSURE REGULATION ADAPTIVES PREVENTION OF ELECTRICAL CONSUMERS PROGRAMMED VALUES PROGRAMMING REINITIALISATION PROGRAMMING THROTTLE LIMITS RICHNESS REGULATION PROGRAMMING VEHICLE FUNCTION PROGRAMMING VEHICLE FUNCTION PROGRAMMING VENICE FUNCTION PROGRAMMING
	VARIABLE P.A.S	V,C,D,A,R	FAULT MEMORY WRITE DATE OF AFTER SALES OPERATION WRITE VIN

ECDA CE IV DUO	CVCTERAC	BASE	CRECIAL FUNCTIONS
ESPACE IV PH2	SYSTEMS	FUNCTIONS	SPECIAL FUNCTIONS
THALIA/SYMBL.2	AIRBAG/PRETENSIONERS	V,C,D,A,R	CONFIGURATION OF SYSTEM COMPONENTS DRIVER'S FRONT AIRBAG DRIVER'S FRONT BUCKLE PRETENSIONER DRIVER'S FRONT SIDE IMPACT SENSOR DRIVER'S SEAT BUCKLE SENSOR FAULT MEMORY FRONT THORAX SIDE AIR BAG, DRIVER SIDE FRONT THORAX SIDE AIR BAG, PASSENGER SIDE IMPACT INFORMATION CONNECTION LOCK COMPUTER PASS AIRBAG DEACTIVATION WARNING LIGHT PASSENGER AIR BAG LOCKING MODE PASSENGER'S FRONT AIRBAG PASSENGER'S FRONT SIDE IMPACT SENSOR READING IMPACT CONTEXTS SEAT BELT LIGHT SEAT BELT REMINDER BUZZER SIDE ON WHICH STEERING WHEEL FITTED UNLOCK COMPUTER WITHOUT INHIBITION SWITCH WITHOUT INHIBITION SWITCH
	исн	V,C,D,A,R	FAULT MEMORY FLASHING BUZZER KEY ASSIGNMENT SDO SPARE WRITE VIN
	TRACKER	V,C,D,A,R	ALARM EXTERN GPS ANTENNA FAULT MEMORY SVT CONFIGURATION TIMED + BATT WRITE V.I.N.
	AUTOMATIC GEARBOX	V,C,D,A	AUTO-ADAPTIVES FAULT MEMORY NOTE OIL WEAR COUNTER PROGRAMMING OF NO LOAD AND FULL LOAD POSITIONS WRITE DATE OF LAST AFTER SALES OPERATION WRITE TRANSMISSION OIL CHANGE DATE WRITE VIN
	AIR CONDITIONING	V,C,D,A	FAULT MEMORY
	AIRBAG/PRETENSIONERS	V,C,D,A	
	A.B.S	V,C,D,A,R	BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS CHECK TARGET TEETH FAULT MEMORY SPEEDO INDEX VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	INJECTION	V,C,D,A	PROGRAMMING REINITIALISATION

		BASE	i – – – – – – – – – – – – – – – – – – –
ESPACE IV PH2	SYSTEMS	FUNCTIONS	SPECIAL FUNCTIONS
CLIO V6	исн	V,C,D,A	AUTO LOCKING WHEN DRIVING FUNCTION PREVENTION ONE-TOUCH CENTRAL DOOR LOCKING BUTTON RAID FUNCTION AUTHORISATION ROCKER CENTRAL DOOR LOCKING BUTTON WITH AUTOMATIC RE-LOCKING WITH HAZARD LIGHTS UPON IMPACT WITH INFRA-RED REMOTE CONTROL WITH OVERSPEED WARNING WITH RADIO FREQUENCY REMOTE CONTROL WITH RUNNING LIGHTS WITH TIMED COURTESY LIGHT WITH VARIABLE W'SCREEN WIPER INTERMITTENT WITHOUT AUTOMATIC RE-LOCKING WITHOUT AUTOMATIC RE-LOCKING WITHOUT HAZARD LIGHTS UPON IMPACT WITHOUT TUNNING LIGHTS WITHOUT TUNNING LIGHTS WITHOUT TUNNING LIGHTS WITHOUT TIMED COURTESY LIGHT WITHOUT TIMED COURTESY LIGHT
	AIR CONDITIONING AIRBAG/PRETENSIONERS	V,C,D,A V,C,D,A	WITH COCLANT SENSOR WITH COCLANT SENSOR WITH EVAPORATOR TEMPERATURE SENSOR WITHOUT EVAPORATOR TEMPERATURE SENSOR WITH EVAPORATOR TEMPERATURE SENSOR WITH RECYCLING MOTOR TIMER WITHOUT ECYCLING MOTOR TIMER WITH ONE-TOUCH TYPE CONTROL WITH PERMANENT TYPE CONTROL WITH HARRISON TYPE COMPRESSOR WITH SANDEN TYPE COMPRESSOR HOKURIKU PROBE CONFIGURATION BEHR PROBE CONFIGURATION CONFIGURATION WITH RECYCLING FLAP AUTO-SETTING CONFIG. WITHOUT RECYCLING FLAP AUTO-SETTING LOCK PASSENGER'S FRONT AIR BAG UNLOCK PASSENGER'S FRONT AIR BAG
			WRITE DATE OF LAST AFTER SALES OPERATION
	INJECTION	V,C,D,A	PROGRAMMING REINITIALISATION
	UCH	V,C,D,A	KEY PROGRAMMING
	AIR CONDITIONING	V,C,D,A	

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
CLIO V6 PH 2	AIRBAG/PRETENSIONERS	V,C,D,A	CURTAIN SIDE AIR BAG AND DRIVER'S SIDE CURTAIN SIDE AIR BAG AND PASSENGER SIDE DRIVER FRONT AIR BAG CIRCUIT 1 DRIVER FRONT AIR BAG CIRCUIT 2 DRIVER'S FRONT BUCKLE PRETENSIONER DRIVER'S LATERAL SENSOR DRIVER'S SEAT SENSOR DRIVER'S SIDE REAR INERTIA REEL FRONT THORAX SIDE AIR BAG, DRIVER SIDE FRONT THORAX SIDE AIR BAG, DRIVER SIDE FRONT THORAX SIDE AIR BAG, PASSENGER SIDE LOCK COMPUTER PARAMETRAGE PRIVE 1 PASSENGER AIR BAG LOCKING MODE PASSENGER FRONT AIR BAG CIRCUIT 1 PASSENGER FRONT AIR BAG CIRCUIT 1 PASSENGER'S FRONT BUCKLE PRETENSIONER PASSENGER'S SIDE REAR INERTIA REEL UNLOCK COMPUTER WRITE DATE OF LAST AFTER SALES OPERATION
	INJECTION	V,C,D,A,R	ADAPTIVE VALUE - A/F RATIO ADAPTIVE VALUE - TPS CABIN FILTER REGENERATION CATALYTIC CONVERTER TEST ECU MEMORY ENTER INJECTOR CODES ERASE IDLE REGULATION ADAPTIVES FAULT MEMORY FUEL SUPPLY PREVENTION HIGH PRESSURE FUEL CIRCUIT FAULT FINDING IDLE AIR VOLUME LEARNING - FACTORY MODE IDLE AIR VOLUME LEARNING - SERVICE MODE IGNITION TIMING ADJUSTMENT INCREMENT OF IDLE SPEED OIL CHANGE INTERVAL (OCS): DILUTION PROGRAMMED VALUES PROGRAMMING REINITIALISATION STOP FUEL SUPPLY PREVENTION VEHICLE FUNCTION PROGRAMMING WRITE VIN
	A.B.S	V,C,D,A	FAULT MEMORY STEERING ANGLE SENSOR INITIALISATION
	VARIABLE P.A.S	V,C,D,R	FAULT MEMORY

ESPACE IV PH2	SYSTEMS	BASE	SPECIAL FUNCTIONS
LOFACE IV PHZ	SISILIVIS	FUNCTIONS	
	INSTRUMENT PANEL	V,C,D,A,R	ADAC DISPLAY TYPE BLIND SPOT DETECTION CONSUMPTION MEASUREMENT UNITS DAYTIME BACKLIGHTS DISTANCE BEFORE NEXT OIL CHANGE DISTANCE UNITS FAULT MEMORY FREE SHIFT FREE SHIFT FREE SHIFT DISPLAY LANGUAGE CONFIGURATION LANGUAGE VERSION. OVERSPEED ALARM PERSONALISED OIL CHANGE FREQUENCY POINTER ANIMATION SEAT BELT REMINDER BUZZER SLOPE SENSOR ADJUSTMENT TRAJECTORY CONTROL TYPE OF PARKING BRAKE
	AIDDAG/DDETENCIONEDC	VCD	TYRE PRESSURE MONITOR FUNCTION
	AIRBAG/PRETENSIONERS UPC	V,C,D V,C,D,A,R	FAULT MEMORY FAULT MEMORY
	UCH	V,C,D,A,R	ALARM ANTI-THEFT ALARM TRIGGER S/W COLUMN LOCK IMMOBILISER PROGRAMMING CODE DAYTIME RUNNING LIGHTS DEADLOCKING DONGLE FAULT MEMORY HANDS-FREE FUNCTION HAZARD WARNING LIGHTS ILLUMINATION BY ABS HEAD LAMP BATTERY SAVER FUNCTION HEADLIGHT WASHERS INDICATOR LIGHT CONFIGURATION ONE-TOUCH ELECTRIC WINDOW(S) PASSENGER COMPARTMENT HEATING RESISTOR PROGRAMMING THE INJECTION IMMOBILISER CODE RAIN/LIGHT SENSOR RAISING OF ELECT. WINDOW(WITH ANTI-PINCH) SEAT BELT REMINDER BUZZER SEE-ME-HOME LIGHTING SPARE UNLOCKING MODE. DOORS HANDS FREE WRITE V.I.N. FAULT MEMORY
	AUTOMATIC GEARBOX	V,C,D	FAULT MEMORY RESET OIL CHANGE COUNTER
KOLEOS	PARKING PROX CAN	V,C,D,R	REJECT OF CHARACT CONTROL BUZZER VOLUME FRONT BUZZER VOLUME FRONT TONE SETTING GEARBOX TYPE SENSOR TYPE TONE ADJUSTMENT WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	BLIND SPOT DETECTION	V,C,D,R	FAULT MEMORY WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	MULTIMEDIA INTERFACE	V,C,D,A,R	FAULT MEMORY NAVIGATION RADIO TEMPERATURE DISPLAY TIME FORMAT VEHICLE CONFIGURATION VEHICLE IDENTIFIER WRITE VIN
	TYRES	V,C,D,A	FAULT MEMORY PROGRAMMING THE CODES OF THE FOUR VALVES
	4 WHEELS DRIVE	V,C,D	FAULT MEMORY
	PARKING BRAKE	V,C,D,A,R	BRAKE LINING FRICTION LEARNING COMPUTER CALIBRATION AND OPERATION FAULT MEMORY REAR BRAKE UNIT INITIALISATION REAR BRAKE UNIT REPOSITIONING SAVE CLUTCH PEDAL PROGRAMMING SHOE LINING ENERGY COUNTER VEHICLE CONFIGURATION WRITE VIN
	COMMUNICATIONS UNIT	V,C,D,A,R	ACTIVATION OF CONNECTIVITY SERVICES COMP CONFIGURATION COUNTRY MODEL DISTANCE UNITS ECU MEMORY FAULT MEMORY GSM ANTENNA CIRCUIT GSM CONNECTIVITY LANGUAGE LIGHT SENSOR SYSTEM CONFIGURATION VEHICLE TYPE WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	RADIO	V,C,D,A,R	CD CHANGER COMP CONFIGURATION COMPUTER CALIBRATION AND OPERATION COUNTRY MODEL DISTANCE UNITS DRIVING TYPE EXTERNAL COMPONENTS FAULT MEMORY RADIO PROGRAMMING KEY RESET RADIO SYSTEM CONFIGURATION WRITE DATE OF AFTER SALES OPERATION WRITE DATE OF AFTER SALES OPERATION
	AMPLIFIER	V,C,D,A,R	WRITE VIIN
	DISCHARGE LAMP	V,C,D,A,R	EEPROM MEMORY WRITE PROCEDURE FAULT MEMORY SYSTEM INITIALISATION
	MULTIMED. CONNECTION	V,C,D	FAULT MEMORY SYSTEM CONFIGURATION WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	TELEMATIC CTRL UNIT	V,C,D,A,R	COMPUTER RESET FAULT MEMORY WRITE VIN
	AUTO FRONT LIGHTING	V,C,D,A	FAULT MEMORY STEERING ANGLE SENSOR INITIALISATION
	A.B.S	V,C,D,A,R	SPEEDO INDEX WRITE DATE OF LAST AFTER SALES OPERATION
	AIR CONDITIONING	V,C,D,A,R	BEHR PROBE CONFIGURATION CONFIG. WITHOUT RECYCLING FLAP AUTO-SETTING CONFIGURATION WITH RECYCLING FLAP AUTO-SETTING EEPROM PROBE CONFIGURATION HOKURIKU PROBE CONFIGURATION LEFT-HAND DRIVE RIGHT HAND DRIVE RIGHT HAND DRIVE SIEMENS PROBE CONFIGURATION WITH COOLANT SENSOR WITH EVAPORATOR TEMPERATURE SENSOR WITH HARRISON TYPE COMPRESSOR WITH HARRISON TYPE COMPRESSOR WITH HARRISON TYPE CONTROL WITH PERMANENT TYPE CONTROL WITH PERMANENT TYPE CONTROL WITH PERMANENT TYPE COMPRESSOR WITHOUT COOLANT SENSOR WITHOUT EVAPORATOR TEMPERATURE SENSOR WITHOUT EVAPORATOR TEMPERATURE SENSOR WITHOUT EVAPORATOR TEMPERATURE SENSOR WITHOUT HEATED REAR SCREEN WITHOUT HEATED REAR SCREEN WITHOUT RECYCLING MOTOR TIMER WITHOUT RECYCLING MOTOR TIMER
MEGANE/SCENIC	AUTOMATIC GEARBOX	V,C,D,A,R	AIR CONDITIONING PROGRAMMING AIR CONDITIONING WITH WIRE CONNECTION AUTO-ADAPTIVES CHECK MOTOR TORQUE BY ABS CONVERTER LOCK UP ADAPTIVE ENGINE TORQUE CONTROL FUNCTION LEVER LOCKING CONNECTION FAULT FINDING MEMORIZATION OF NL AND FL POSITIONS NOTE OIL WEAR COUNTER OBD MEMORY OIL CHANGE COUNTER OFFSET PROGRAMMING OF NO LOAD AND FULL LOAD POSITIONS SELECTOR LEVER LOCKING TRAJECTORY CONTROL WITH AIR CONDITIONING WITHOUT AIR CONDITIONING WITHOUT OBD WRITE DATE OF LAST AFTER SALES OPERATION WRITE TRANSMISSION OIL CHANGE DATE WRITE TRANSMISSION OIL CHANGE DATE
	ENGINE IMMOBILISER	V,C,D,A	

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	INJECTION	V,C,D,A,R	DECREMENT IDLE SPEED INCREMENT OF IDLE SPEED PROGRAMMING REINITIALISATION WITH AC(FIXED CAPACITY COMPRESSOR) WITH AC(VARIABLE CAPACITY COMPRESSOR) WITH AUTOMATIC TRANSMISSION WITH CRUISE CONTROL WITH POWER ASSISTED STEERING WITH THERMOPLUNGERS WITHOUT AIR CONDITIONING WITHOUT AUTOMATIC TRANSMISSION WITHOUT CRUISE CONTROL WITHOUT POWER ASSISTED STEERING
	INTERCONNECTION LINE	VCDA	WITHOUT MERINOF LONGERS
	AIRBAG/PRETENSIONERS	V,C,D,A V,C,D,R	LOCK COMPUTER LOCK PASSENGER'S FRONT AIR BAG UNLOCK COMPUTER UNLOCK PASSENGER'S FRONT AIR BAG WRITE DATE OF LAST AFTER SALES OPERATION
	HOOD CONTROL	V,C,D,A	
	DRIVER'S POSITION	V,C,D,A,R	
	GAS INJ	V,C,D,A,R	
	TYRES	V,C,D,A,R	
	INJECTION	V,C,D,A,R	CABIN FILTER REGENERATION COMMERCIAL VEHICLE IDLE SPEED MODIFICATION CYLINDER 1 INJECTOR CODE CYLINDER 2 INJECTOR CODE CYLINDER 3 INJECTOR CODE CYLINDER 4 INJECTOR CODE CYLINDER 4 INJECTOR CODE DECREMENT IDLE SPEED ECU MEMORY EGR ADAPTIVES ENTER INJECTOR CODES ENTER VIN CODE FAULT MEMORY FUEL SUPPLY PREVENTION HIGH PRESSURE FUEL CIRCUIT FAULT FINDING INCREMENT OF IDLE SPEED LOCK INJECTOR CONTROL PARTICLE FILTER ADAPTIVES PRESSURE REGULATION ADAPTIVES PROGRAMMED VALUES PROGRAMMING REINITIALISATION SPEED LIMITER STOP ELECTRICAL CONSUMER PREVENTION THERMOPLUNGERS UNLOCK INJECTOR CONTROL WRITE V.I.N.
	AIR CONDITIONING	V,C,D,R	FAULT MEMORY HEATING RESISTOR TYPE VEHICLE TYPE WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	A.B.S	V,C,D,A,R	AUTO STOP LIGHTS ILLUMINATION AUTHORISATION BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS CHECK TARGET TEETH ESP AUTOMATIC RECONNECTION THRESHOLD ESP SENSOR PROGRAMMING FAULT MEMORY PREVENTION OF STOP LIGHT AUTO ILLUMINATION SPEEDO INDEX VEH. SPEED AT INITIALISATION VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	VARIABLE P.A.S	V,C,D,A,R	COMPUTER CALIBRATION FAULT MEMORY PULLING CORRECTION PULLING CORRECTION PROGRAM STEERING WHEEL ANGLE SENSOR PROGRAMMING WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	INSTRUMENT PANEL	V,C,D,A,R	BODYWORK TYPE CARD/KEY CLOCK CONSUMPTION MEASUREMENT UNITS CRUISE CTRL/SPD LIMITER DISTANCE UNITS FAULT MEMORY FUEL GAUGE CALIBRATION FUEL TYPE GEARBOX TYPE LANGUAGE CONFIGURATION LIGHTS AUTOMATIC ILLUMINATION OIL CHANGE INTERVAL IN KM OIL CHANGE INTERVAL IN MONTHS OIL CHANGE RANGE:CURRENT VALUE IN KM OIL CHANGE RANGE:CURRENT VALUE IN MONTHS OVERSPEED FUNCTION - ARABIA PARTICLE FILTER PERSONALISED OIL CHANGE FREQUENCY RESERVE CAPACITY RHEOSTAT PRESENCE SEAT BELT REMINDER BUZZER TANK CAPACITY TRAJECTORY CONTROL TYRE PRESSURE MONITORING UPDATE ODOMETER VEHICLE SYEED SIGNAL TRANSMITTER VEHICLE SYEED SIGNAL TRANSMITTER VEHICLE TYPE

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
MEGANE II	AIRBAG/PRETENSIONERS	V,C,D,R	B/C WITH FR/RR THORAX + HEAD AIRBAGS B/C WITH FRONT THORAX + HEAD AIRBAGS B/C WITHOUT SIDE AIRBAGS CONFIGURATION OF SYSTEM COMPONENTS CURTAIN SIDE AIR BAG AND PRIVER'S SIDE CURTAIN SIDE AIR BAG AND PASSENGER SIDE DRIVER FRONT AIR BAG CIRCUIT 1 DRIVER FRONT AIR BAG CIRCUIT 2 DRIVER'S SIDE REAR FRONTAL AIRBAG DRIVER'S LATERAL SENSOR DRIVER'S LATERAL SENSOR DRIVER'S SEAT POSITION SENSOR DRIVER'S SEAT POSITION SENSOR DRIVER'S SEAT POSITION SENSOR DRIVER'S SIDE REAR STRAP SENSOR E WITH SIDE AIRBAGS E WITHOUT SIDE AIRBAGS FAULT MEMORY FRONT BUCKLE PRETENSIOMETERS FRONT THORAX SIDE AIR BAG, DRIVER SIDE G/S WITHOUT SIDE AIRBAGS G/S WITHOUT HEAD AIRBAG J WITHOUT SIDE AIRBAGS J WITHOUT SIDE AIRBAGS K/L WITH F/R CHEST + CURT AIRBAGS K/L WITH F/R CHEST + CURT AIRBAGS K/L WITH OIL SIDE AIRBAGS LOCK COMPUTER PASSENGER FRONT AIR BAG CIRCUIT 1 PASSENGER FRONT AIR BAG CIRCUIT 2 PASSENGER FRONT AIR BAG CIRCUIT 1 PASSENGER FRONT AIR BAG CIRCUIT 1 PASSENGER FRONT AIR BAG CIRCUIT 1 PASSENGER SIDE REAR FRONTAL AIRBAG

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	исн	V,C,D,A,R	AUTOMATIC RELOCKING CARD ALLOCATION CARD TESTING CHILDPROOF LOCK DEADLOCKING DEADLOCKING DRIVING TYPE ENGINE TYPE EXTERNAL TEMPERATURE SENSOR FAULT MEMORY FRONT FOG LIGHTS GEARBOX TYPE HAZARD WARNING LIGHTS ILLUMINATION BY ABS NEW VEHICLE STORAGE MODE DEACTIVATION PROGRAMMING THE CODES OF THE FOUR VALVES READ VALVE SET AND MEMORISED CODES REAR ACCESS AERIALS REAR SCREEN WIPER SEE-ME-HOME LIGHTING SPARE UPC COMP. TYPE
	UPC	V,C,D,A	WRITE VIN COMPUTER CALIBRATION FAULT MEMORY PULLING CORRECTION PULLING CORRECTION PROGRAM STEERING WHEEL ANGLE SENSOR PROGRAMMING WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	PARKING ASSISTANCE	V,C,D,A,R	BUZZER VOLUME CARAVAN TOWING DISTANCE FAULT MEMORY TONE ADJUSTMENT VEHICLE IDENTIFICATION WRITE VIN
	COMMUNICATIONS UNIT	V,C,D,A,R	COMP CONFIGURATION FAULT MEMORY WRITE VIN
	GAS INJ.	V,C,D,A,R	FAULT MEMORY WRITE VIN
	TRACKER	V,C,D,A,R	FAULT MEMORY SVT CONFIGURATION WRITE V.I.N.
	DISCHARGE LAMP	V,C,D,A,R	COMPUTER ADDRESS FAULT MEMORY WRITE VIN
	LEFT COSLAD	V,C,D,A,R	COMPUTER ADDRESS COMPUTER CALIBRATION FAULT MEMORY VEHICLE TYPE WRITE VIN
	RIGHT COSLAD	V,C,D,A,R	COMPUTER ADDRESS COMPUTER CALIBRATION FAULT MEMORY VEHICLE TYPE WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	AUTOMATIC GEARBOX	V,C,D,A,R	AUTO-ADAPTIVES CONVERTER LOCK UP ADAPTIVE FAULT MEMORY NOTE OIL WEAR COUNTER WRITE DATE OF LAST AFTER SALES OPERATION WRITE TRANSMISSION OIL CHANGE DATE WRITE VIN
	LIGHTING	V,C,D,A,R	AUTOMATIC FOLD-DOWN HEADLIGHTS DYNAMIC CORRECTION FAULT MEMORY SIGNATURE SYSTEM INITIALISATION VEHICLE TYPE WRITE VIN
	SUNROOF	V,C,D,A,R	FAULT MEMORY ROLL BARS WRITE V.I.N.
	INJECTION		ADAPTIVES AFTER REGENERATING PARTICLE FILTER ADAPTIVES ON AIR INTAKE FLAP FAULT AIR DAMPER VALVE PROGRAMMING AIR FLOWMETER PROGRAMMING AIR PATH PROGRAMMING ALCOHOL LEVEL PROG. AVERAGE AIR TEMPERATURE BOOST PRESSURE SENSOR PROGRAMMING CABIN FILTER REGENERATION CAMSHAFT SENSOR PROGRAMMING CATALYTIC CONVERTER CRUISE CONTROL/SPEED LIMITER PROGRAMMING CYLINDER 1 INJECTOR CODE CYLINDER 1 SINJECTOR CODE CYLINDER 3 INJECTOR CODE CYLINDER 4 INJECTOR CODE EGR VALVE PROGRAMMING ENGINE ADAPTIVES ENTER INJECTOR CODE ESTHAUST AIR FLAP EXHAUST AIR FLAP EXHAUST AIR FLAP EXHAUST INJECTOR CIRCUIT FAST IDLE SPEED MODIFICATION FAULT MEMORY

ESPACE IV PH2		BASE	SDECIAL ELINCTIONS	
	SYSTEMS	FUNCTIONS	SPECIAL FUNCTIONS	
			FLYWHEEL TARGET PROGRAMMING	
			FUEL FLOW REGULATOR	
			FUEL PUMP PROGRAMMING	
			FUEL SUPPLY PREVENTION	
			HIGH PRESSURE FUEL CIRCUIT FAULT FINDING	
			IGNITION COIL ADAPTIVE	
			INJECTION PUMP ADAPTATIVES	
		V,C,D,A,R	INJECTOR ADAPTIVES	
			INJECTOR ADAPTIVES NO. 1	
			INJECTOR ADAPTIVES NO. 2	
			INJECTOR ADAPTIVES NO. 3	
			INJECTOR ADAPTIVES NO. 4	
			LOW PRESSURE EGR VALVE PROGRAMMING	
			MANIFOLD PRESSURE SENSOR PROGRAMMING	
			NUMBER OF STARTING 1	
]			NUMBER OF STARTING 2	
			NUMBER OF STARTING 3	
			NUMBER OF STARTING 4	
			NUMBER OF STARTING CYCLES	
			OIL CHANGE INTERVAL (OCS): DILUTION	
			PARAMETRAGE PRIVE 98	
			PARTICLE FILTER PRESSURE DIFF. SENSOR	
			PARTICLE FILTER RELATIVE PRESSURE SENSOR	
			PINKING SENSOR PROGRAMMING	
			PREHEATER UNIT	
			PRESSURE REGULATION ADAPTIVES	
			PROGRAMMED VALUES	
			PROGRAMMING REINITIALISATION	
			PROGRAMMING THROTTLE LIMITS	
			PROPORTIONAL RICHNESS SENSOR PROGRAMMING	
			RAIL PRESSURE SENSOR ADAPTIVES	
			RICHNESS REGULATION PROGRAMMING	
			SPEED LIMITER	
			STOP FUEL SUPPLY PREVENTION	
			SWIRL FLAP	
			SWIRL FLAP PROGRAMMING	
			TURBOCHARGER PROGRAMMING	
			VEHICLE FUNCTION PROGRAMMING	
			WRITE V.I.N.	
			BRAKE PRESSURE OFFSET SENSOR	
			CHECK TARGET TEETH	
			FAULT MEMORY	
			HILL START	
	c	VCDAD	LONGITUDINAL ACCELERATION SENSOR OFFSET	
A.B.	5	V,C,D,A,R	SPEEDO INDEX	
			STEERING WHEEL ANGLE OFFSET SENSOR	
			TRANSVERSE ACCELERATION OFFSET SENSOR	
			WRITE DATE OF LAST AFTER SALES OPERATION	
			WRITE VIN	
			COMPUTER REINITIALISATION	
AIR	CONDITIONING	V,C,D,R	FAULT MEMORY	
		1 , ,	WRITE VIN	

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	AIRBAG/PRETENSIONERS	V,C,D,R	FAULT MEMORY LOCK COMPUTER READING IMPACT CONTEXTS SIDE ON WHICH STEERING WHEEL FITTED UNLOCK COMPUTER WRITE VIN
	PARKING BRAKE	V,C,D,R	ACTIVATE MAINTENANCE MODE ASSISTED ENGAGEMENT WHEN STATIONARY DEACTIVATE MAINTENANCE MODE FAULT MEMORY WRITE VIN
MEGANE III/SCENIC III	INSTRUMENT PANEL	V,C,D,A,R	ADAC DISPLAY TYPE AUTOMATIC CONFIGURATION BACKUP OF INSTRUMENT PANEL DATA FOR INJECTION COMPUTER INITIALISATION CONSUMPTION MEASUREMENT UNITS CRUISE CTRL/SPD LIMITER DISTANCE BEFORE NEXT OIL CHANGE DISTANCE UNITS EEPROM MEMORY WRITE PROCEDURE FAULT MEMORY GEARBOX TYPE LANGUAGE VERSION. ODOMETER IN KM ODOMETER IN MILES OIL CHANGE FREQUENCY OIL CHANGE FREQUENCY OIL CHANGE RANGE: CURRENT VALUE IN KM OVERSPEED ALARM PARAMETRAGE PRIVE 1 TYRE PRESSURE MONITOR FUNCTION TYRE PRESSURE UNITS UNIT OF VOLUME UPDATE ODOMETER WRITE VIN WRITING OF INSTRUMENT PANEL DATA FOR INJECTION COLUMN LOCK IMMOBILISED PROGRAMMING CODE
	исн	V,C,D,A,R	COLUMN LOCK IMMOBILISER PROGRAMMING CODE CONFIGURATION RESERVEE 10 FAULT MEMORY PROGRAMMING THE CODES OF THE FOUR VALVES PROGRAMMING THE INJECTION IMMOBILISER CODE SPARE VALVE CODE READING WRITE V.I.N.

_			
-			
J			

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	UPC	V,C,D,A	AUTOMATIC CONFIGURATION BATTERY CORROSION COUNTER BATTERY CYCLE COUNTER ESTIMATED BATTERY CYCLE COUNTER RESTIMATED BATTERY CYCLE COUNTER MEMORISED BATTERY DISCONNECTION UNIT TEST CALCULATE BATTERY WEAR COUNTERS CORROSION BATTERY COUNTER ESTIMATED CORROSION BATTERY COUNTER MEMORISED DTC RESET FAULT MEMORY NUMBER OF STARTING NUMBER OF STARTING 1 NUMBER OF STARTING 2 NUMBER OF STARTING 3 NUMBER OF STARTING 4 NUMBER OF STARTING 4 NUMBER OF STARTING 4 NUMBER OF STARTING CYCLES PARAMETRAGE PRIVE 1 PARAMETRAGE PRIVE 3 PARAMETRAGE PRIVE 3 PARAMETRAGE PRIVE 4 RESETTING INTERNAL PROTECTION STOP&START FUNCTION CONFIGURATION WRITE VIN
	VARIABLE P.A.S	V,C,D,A,R	FAULT MEMORY STEERING WHEEL ANGLE SENSOR PROGRAMMING WRITE VIN
	AUTOMATIC GEARBOX	V,C,D,A	CLUTCH WEAR ERASE AUTO-ADAPTIVE VALUES FAULT MEMORY FAULT/S MEMORISED PARAMETRAGE PRIVE 2 PROGRAMME CLUTCH POSITION PROGRAMME SLIP POINT PROGRAMMING SELECTION/ENGAGING ZONES RESET SHIFT DRUM REFERENCE POSITION WRITE DATE OF LAST AFTER SALES OPERATION
	SUNROOF CONTROL UNIT	V,C,D,A	WRITE VIN COMPUTER INITIALISATION COMPUTER PROGRAMMING/INITIALISATION COMPUTER RESET FAULT MEMORY WRITE V.I.N.

	NAULI V42.05DIAGNOS	BASE		
ESPACE IV PH2	SYSTEMS	FUNCTIONS	SPECIAL FUNCTIONS	
	RADIO	V,C,D,A,R	CD CHANGER AND AUXILIARY INPUT COUNTRY MODEL CUSTOMER SETTINGS AND DETAILS EMERGENCY CALL NUMBER EXTERNAL COMPONENTS FAULT MEMORY LANGUAGE PARAMETRAGE PRIVE 1 REAR LOUD SPEAKER RESET RADIO SYSTEM CONFIGURATION TEST PARAMETERS WRITE DATE OF AFTER SALES OPERATION WRITE VIN	
	LIGHTING	V,C,D,A,R	FAULT MEMORY SYSTEM INITIALISATION WRITE VIN	
	MULTIMEDIA INTERFACE	V,C,D,A	FAULT MEMORY HOUR SETTING TEMPERATURE DISPLAY TIME FORMAT WRITE VIN	
	MULTIMED. CONNECTION	V,C,D	ECU MEMORY FAULT MEMORY WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN	
	PARKING PROX CAN	V,C,D,A	BUZZER VOLUME CARAVAN TOWING DISTANCE FAULT MEMORY FRONT BUZZER VOLUME FRONT TONE SETTING TONE ADJUSTMENT WRITE VIN	
	TELEMATIC CTRL UNIT	V,C,D,A,R	ACTIVATION OF CONNECTIVITY SERVICES COMPUTER RESET FAULT MEMORY WRITE VIN	
	COMMUNICATIONS UNIT	V,C,D,A,R	ACTIVATION OF CONNECTIVITY SERVICES COUNTRY MODEL DISTANCE UNITS FAULT MEMORY LANGUAGE REVERSING CAMERA CALIBRATION WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN	
	DRIVER'S DOOR	V,C,D,A	COMPUTER REINITIALISATION FAULT MEMORY WRITE VIN	
	PASSENGER'S DOOR	V,C,D	FAULT MEMORY WRITE VIN	
	FRONT CAMERA	V,C,D,A,R	ECU MEMORY FAULT MEMORY WRITE VIN	
	SEAT MANAGEMENT	V,C,D,Y8	FAULT MEMORY PROGRAMMING OF SEAT STOPS WRITE VIN	

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	INJECTION	V,C,D,A,R	CABIN FILTER REGENERATION COMMERCIAL VEHICLE IDLE SPEED MODIFICATION CYLINDER 1 INJECTOR CODE CYLINDER 2 INJECTOR CODE CYLINDER 3 INJECTOR CODE CYLINDER 3 INJECTOR CODE CYLINDER 4 INJECTOR CODE DECREMENT IDLE SPEED ECU MEMORY EGR ADAPTIVES ENTER INJECTOR CODES ENTER VIN CODE FAULT MEMORY FUEL SUPPLY PREVENTION HIGH PRESSURE FUEL CIRCUIT FAULT FINDING INCREMENT OF IDLE SPEED LOCK INJECTOR CONTROL PARTICLE FILTER ADAPTIVES PRESSURE REGULATION ADAPTIVES PRESSURE REGULATION ADAPTIVES PROGRAMMING REINITIALISATION SPEED LIMITER STOP ELECTRICAL CONSUMER PREVENTION THERMOPLUNGERS UNLOCK INJECTOR CONTROL VARIEW SUPPLY PREVENTION THERMOPLUNGERS UNLOCK INJECTOR CONTROL WRITE V.I.N.
	AIR CONDITIONING	V,C,D,R	FAULT MEMORY HEATING RESISTOR TYPE VEHICLE TYPE WRITE VIN
	A.B.S	V,C,D,A,R	AUTO STOP LIGHTS ILLUMINATION AUTHORISATION BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS CHECK TARGET TEETH ESP AUTOMATIC RECONNECTION THRESHOLD ESP SENSOR PROGRAMMING FAULT MEMORY PREVENTION OF STOP LIGHT AUTO ILLUMINATION SPEEDO INDEX VEH. SPEED AT INITIALISATION VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	VARIABLE P.A.S	V,C,D,A,R	COMPUTER CALIBRATION FAULT MEMORY PULLING CORRECTION PULLING CORRECTION PROGRAM STEERING WHEEL ANGLE SENSOR PROGRAMMING WRITE DATE OF AFTER SALES OPERATION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	INSTRUMENT PANEL	V,C,D,A,R	AUTOMATIC HANDBRAKE CONSUMPTION MEASUREMENT UNITS CRUISE CTRL/SPD LIMITER DISTANCE UNITS FAULT MEMORY FUEL TYPE GEARBOX TYPE LANGUAGE CONFIGURATION OIL CHANGE INTERVAL IN KM OIL CHANGE INTERVAL IN MONTHS OVERSPEED FUNCTION - ARABIA TRAJECTORY CONTROL TYRE PRESSURE MONITORING VEHICLE TYPE
	AIRBAG/PRETENSIONERS		B/C WITH FR/RR THORAX + HEAD AIRBAGS B/C WITH FRONT THORAX + HEAD AIRBAGS B/C WITH FRONT THORAX + HEAD AIRBAGS B/C WITHOUT SIDE AIRBAGS CONFIGURATION OF SYSTEM COMPONENTS CURTAIN SIDE AIR BAG AND DRIVER'S SIDE CURTAIN SIDE AIR BAG AND PASSENGER SIDE DRIVER FRONT AIR BAG CIRCUIT 1 DRIVER FRONT AIR BAG CIRCUIT 2 DRIVER'S SIDE REAR FRONTAL AIRBAG DRIVER'S LAP STRAP/SEAT AIRBAG DRIVER'S SEAT BUCKLE SENSOR DRIVER'S SEAT BUCKLE SENSOR DRIVER'S SIDE REAR STRAP SENSOR DRIVER'S SIDE REAR STRAP SENSOR E WITH SIDE AIRBAGS FAULT MEMORY FRONT BUCKLE PRETENSIOMETERS FRONT THORAX SIDE AIR BAG, DRIVER SIDE

		BASE	and the second s
ESPACE IV PH2	SYSTEMS	FUNCTIONS	SPECIAL FUNCTIONS
	1		FRONT THORAX SIDE AIR BAG, PASSENGER SIDE
			G/S WITH HEAD AIRBAGS
			G/S WITHOUT HEAD AIRBAG
		V,C,D,R	J WITHOUT SIDE AIRBAGS
		V,C,D,IX	J WITH SIDE AB W/O REAR CHEST AB
			K/L WITH F CHEST + CURT AIRBAGS
			K/L WITH F/R CHEST + CURT AIRBAGS
			K/L WITHOUT SIDE AIRBAGS
			LOCK COMPUTER
			PASSENGER AIR BAG LOCKING MODE
			PASSENGER FRONT AIR BAG CIRCUIT 1
SCENIC II			PASSENGER FRONT AIR BAG CIRCUIT 2
SCENIC II			PASSENGER PRESENCE DETECTION SENSOR
			PASSENGER SIDE REAR FRONTAL AIRBAG PASSENGER SIDE REAR STRAP SENSOR
			PASSENGER'S LAP STRAP/SEAT AIRBAG
			PASSENGER'S SEAT BUCKLE SENSOR
			READING IMPACT CONTEXTS
			REAR INERTIA REELS
			REAR THORAX SIDE AIR BAG, DRIVER SIDE
			REAR THORAX SIDE AIR BAG, PASSENGER SIDE
			SIDE ON WHICH STEERING WHEEL FITTED
			UNLOCK COMPUTER
			VEHICLE TYPE
			WRITE DATE OF LAST AFTER SALES OPERATION
			WRITE VIN
			AUTO-ADAPTIVES
			CONVERTER LOCK UP ADAPTIVE
			ERASE AUTO-ADAPTIVE VALUES
			FAULT MEMORY
	AUTOMATIC GEARBOX	V,C,D,A,R	FAULT/S MEMORISED
			NOTE OIL WEAR COUNTER
			WRITE DATE OF LAST AFTER SALES OPERATION WRITE TRANSMISSION OIL CHANGE DATE
			WRITE TRANSMISSION OIL CHANGE DATE WRITE VIN
			ALTERNATOR TYPE
			FAULT MEMORY
	UPC	V,C,D,A	VEHICLE PARAMETERS
			WRITE VIN
			COMPUTER CALIBRATION AND OPERATION
			FAULT MEMORY
			SAVE CLUTCH PEDAL PROGRAMMING
	PARKING BRAKE	V,C,D,A,R	SLOPE INITIALISATION
			VEHICLE CONFIGURATION
			WRITE CLUTCH PEDAL PROGRAMMING
		1	WRITE VIN
			BUZZER VOLUME
			CARAVAN TOWING DISTANCE
			FAULT MEMORY
	PARKING PROX CAN	V,C,D,A,R	FRONT BUZZER VOLUME FRONT TONE SETTING
	PARKING PRUX CAIN	v,C,D,A,R	TONE ADJUSTMENT
			VEHICLE IDENTIFICATION
			WRITE DATE OF LAST AFTER SALES OPERATION
			WRITE VIN
•		1	

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	PARKING ASSISTANCE	V,C,D,A,R	BUZZER VOLUME CARAVAN TOWING DISTANCE FAULT MEMORY TONE ADJUSTMENT VEHICLE IDENTIFICATION
	DISCHARGE LAMP	V,C,D,A,R	WRITE VIN COMPUTER CALIBRATION FAULT MEMORY VEHICLE TYPE WRITE VIN
	GAS INJ.	V,C,D,A,R	FAULT MEMORY WRITE VIN
	RADIO	V,C,D,A,R	CD CHANGER AND AUXILIARY INPUT COMPUTER CALIBRATION AND OPERATION DISTANCE UNITS FAULT MEMORY TEST PARAMETERS WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	COMMUNICATIONS UNIT	V,C,D,A,R	COMP CONFIGURATION CUSTOMER SETTINGS AND DETAILS ECU MEMORY FAULT MEMORY NETHERLANDS LEGISLATION VEHICLE TYPE WRITE VIN
	MULTIMEDIA INTERFACE	V,C,D,A,R	ECU MEMORY FAULT MEMORY VEHICLE CONFIGURATION VEHICLE TYPE WRITE VIN
	исн	V,C,D,A,R	AUTOMATIC RELOCKING CARD ALLOCATION CARD TESTING CHILDPROOF LOCK DEADLOCKING DRIVING TYPE ENGINE TYPE EXTERNAL TEMPERATURE SENSOR FAULT MEMORY FRONT FOG LIGHTS GEARBOX TYPE HAZARD WARNING LIGHTS ILLUMINATION BY ABS NEW VEHICLE STORAGE MODE DEACTIVATION PROGRAMMING THE CODES OF THE FOUR VALVES READ VALVE SET AND MEMORISED CODES REAR ACCESS AERIALS REAR SCREEN WIPER SEE-ME-HOME LIGHTING SPARE UPC COMP. TYPE WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	INJECTION	V,C,D,A,R	IDLE SPEED SETTING DECREMENTATION IDLE SPEED SETTING INCREMENTATION WITH AIR CONDITIONING WITH AUTOMATIC TRANSMISSION WITHOUT AIR CONDITIONING WITHOUT AUTOMATIC TRANSMISSION
	A.B.S	V,C,D,A	WRITE DATE OF LAST AFTER SALES OPERATION
	AIR CONDITIONING	V,C,D,A	
	VARIABLE P.A.S	V,C,D,A	
LALIGNA	INSTRUMENT PANEL	V,C,D,A	DISTANCE BEFORE NEXT OIL CHANGE CONFIGURATION LANGUAGE CONFIGURATION NUMBER OF CYLINDERS CONFIGURATION
LAUGNA	исн	V,C,D,A	DIESEL ENGINE IMMOBILISER DIESEL/PETROL ENG IMMOB WITHOUT CODED SOL VALVE MANUAL CODE ENTERING PROGRAMMING WITH 1 KEY PROGRAMMING WITH 2 KEYS WITH INFRA-RED REMOTE CONTROL WITH RADIO FREQUENCY REMOTE CONTROL WITH TIMED COURTESY LIGHT WITHOUT TIMED COURTESY LIGHT
	AUTOMATIC GEARBOX	V,C,D,A	AIR CONDITIONING PROGRAMMING
	AIRBAG/PRETENSIONERS	V,C,D,A	MEMORIZATION OF NL AND FL POSITIONS
	AIRBAG/PRETEINSIONERS	V,C,D,A	READ SPEEDO INDEX
	A.B.S	V,C,D,A	SPEEDO INDEX WRITE DATE OF LAST AFTER SALES OPERATION
	AIR CONDITIONING	V,C,D,A	
	VARIABLE P.A.S	V,C,D,A	
	INSTRUMENT PANEL	V,C,D,A	DISTANCE BEFORE NEXT OIL CHANGE CONFIGURATION ENGINE IMMOBILISER 2 LANGUAGE CONFIGURATION NUMBER OF CYLINDERS CONFIGURATION
	AUTOMATIC GEARBOX	V,C,D,A	AIR CONDITIONING PROGRAMMING MEMORIZATION OF NL AND FL POSITIONS OIL CHANGE COUNTER OFFSET WITH AIR CONDITIONING WITH OBD WITHOUT AIR CONDITIONING WITHOUT OBD WITHOUT OBD WRITE DATE OF LAST AFTER SALES OPERATION WRITE TRANSMISSION OIL CHANGE DATE
LAGUNA PHAE 2	исн	V,C,D,A	DIESEL ENGINE IMMOBILISER DIESEL/PETROL ENG IMMOB WITHOUT CODED SOL VALVE MANUAL CODE ENTERING PROGRAMMING WITH 1 KEY PROGRAMMING WITH 2 KEYS WITH INFRA-RED REMOTE CONTROL WITH RADIO FREQUENCY REMOTE CONTROL WITH TIMED COURTESY LIGHT WITHOUT TIMED COURTESY LIGHT
	GAS INJ	V,C,D,A,R	
	DRIVER'S POSITION	V,C,D,A,R	
	VOICE SYNTHESISER	V,C,D,A,R	

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	INJECTION	V,C,D,A,R	AIR CONDITIONING POWER STEERING ELECTRIC PUMP UNIT PROGRAMMING REINITIALISATION THERMOPLUNGERS WITH AUTOMATIC TRANSMISSION WITHOUT AUTOMATIC TRANSMISSION
	AIRBAG/PRETENSIONERS	V,C,D,A	
	INJECTION	V,C,D,A,R	AIR CONDITIONING CABIN FILTER REGENERATION CHECK UPSTREAM OZ SENSOR DECREMENT IDLE SPEED EGR ADAPTIVES ENGINE ADAPTIVES ENTER INJECTOR CODES FAULT MEMORY FUEL SUPPLY PREVENTION INCREMENT OF IDLE SPEED PROGRAMMED VALUES PROGRAMMING REINITIALISATION STOP FUEL SUPPLY PREVENTION THERMOPLUNGERS WRITE VIN
	A.B.S	V,C,D,A,R	ABS/ESP CALIBRATION CHECK TARGET TEETH FAULT MEMORY GEARBOX TYPE PRESSURE SENSOR FUNCTION SPEEDO INDEX STEERING WHEEL ANGLE SENSOR TRANSVERSE ACCELERATION SENSOR VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	AIR CONDITIONING	V,C,D,A	COMPRESSOR TYPE DRIVE RATIO EVAPORATOR TEMPERATURE SENSOR FAULT MEMORY HEATED WINDSCREEN TYPE OF POWER STEERING VEHICLE TYPE WRITE VIN

	T	·	T
ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	INSTRUMENT PANEL	V,C,D,A,R	ADAC DISPLAY TYPE AUTOMATIC HANDBRAKE CRUISE CONTR./SP, LIMIT. SPEED DIFF. CRUISE CTRL/SPD LIMITER DISTANCE BEFORE NEXT OIL CHANGE DISTANCE REGULATOR DISTANCE UNITS FAULT MEMORY FUEL GAUGE CALIBRATION FUEL TYPE GAS RESERV. CAPAC. GEARBOX TYPE LANGUAGE VERSION. LIGHTS AUTOMATIC ILLUMINATION OIL CHANGE INTERVAL IN KM OIL CHANGE INTERVAL IN MONTHS OIL CHANGE RANGE:CURRENT VALUE IN KM OIL CHANGE RANGE:CURRENT VALUE IN MONTHS OTHER AT OTHER MANUAL OVERSPEED FUNCTION - ARABIA PSY AT PSY AMANUAL PARTICLE FILTER RESERVE CAPACITY SEAT BELT REMINDER BUZZER TANK CAPACITY TRAJECTORY CONTROL TYRE PRESSURE MONITORING TYRE PRESSURE MONITORING TYRE PRESSURE MONITORING TYRE PRESSURE UNITS UCH UPDATE ODOMETER VAY AUTOMATIC GEARBOX VAY MANUAL VEHICLE TYPE VOICE SYNTHESISER
LAGUNA II	AUTOMATIC GEARBOX	V,C,D,A,R	WRITE VIN ACTUATORS SEQUENTIAL CONTROL AIR CONDITIONING WITH WIRE CONNECTION AUTO-ADAPTIVES CHECK MOTOR TORQUE BY ABS CONVERTER LOCK UP ADAPTIVE FAULT MEMORY FAULT/S MEMORISED NOTE OIL WEAR COUNTER OBD MEMORY SELECTOR LEVER LOCKING TRAJECTORY CONTROL WRITE DATE OF LAST AFTER SALES OPERATION WRITE TRANSMISSION OIL CHANGE DATE WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE	SPECIAL FUNCTIONS
LIFACEIVENZ	UCH	FUNCTIONS V,C,D,A,R	AUTO LOCKING WARNING SOUND AUTOMATIC CLOSING OF WINDOWS (BY CARD) AUTOMATIC LOCKING WHEN DRIVING AUTOMATIC SEAT RECALL CHANGE IN TRIGGERING LIMIT DAYTIME RUNNING LIGHTS DEADLOCKING DOOR UNLOCKING MODE DRIVING TYPE ELECTRIC CHILD SAFETY FAULT MEMORY FOLLOWING TYRE CHANGE GEARBOX TYPE HANDS FREE LOCKING HANDS-FREE FUNCTION HAZARD WARNING LIGHTS ILLUMINATION BY ABS INTERIOR LIGHTING LIGHTS AUTOMATIC ILLUMINATION LOCK LATCH LOCKING MEMORISING DRIVER'S SEAT POSITION OVERSPEED FUNCTION - ARABIA POWER-ASSISTED STEERING PROGRAM PROGRAMMING A VALVE CODE PROGRAMMING A VALVE CODE PROGRAMMING THE CODES OF THE FOUR VALVES RAIN SENSOR SEE-ME-HOME LIGHTING SPARE TIMER COURTESY LIGHT TYPE OF POWER STEERING TYPE PRESSURE MONITOR FUNCTION UNLOCKING MODE. DOORS HANDS FREE VALVE SET SELECTION VOICE SYNTHESISER WRITE VIN
	AIRBAG/PRETENSIONERS	V,C,D,A,R	CONFIGURATION OF SYSTEM COMPONENTS FAULT MEMORY IGNITION MODULE CONFIGURATION LOCK COMPUTER READING IMPACT CONTEXTS SIDE ON WHICH STEERING WHEEL FITTED SIDE SENSOR CONFIGURATION UNLOCK COMPUTER WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	DISCHARGE LAMP	V,C,D,A,R	COMPUTER CALIBRATION FAULT MEMORY VEHICLE TYPE WRITE VIN
	PARKING ASSISTANCE	V,C,D,A,R	BUZZER VOLUME FAULT MEMORY TONE ADJUSTMENT VEHICLE IDENTIFICATION WRITE VIN
	GAS INJ.	V,C,D,A,R	FAULT MEMORY

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	HEATER	V,C,D,A	ERASE INCORRECT CRANKING COUNTER ERASE OVERHEATING COUNTER FAULT MEMORY
	INJECTION	V,C,D,A,R	AIR CONDITIONING CABIN FILTER REGENERATION DECREMENT IDLE SPEED ECU MEMORY EGR ADAPTIVES ENGINE ADAPTIVES ENTER INJECTOR CODES FAULT MEMORY FUEL SUPPLY PREVENTION HIGH PRESSURE FUEL CIRCUIT FAULT FINDING INCREMENT OF IDLE SPEED LOCK INJECTOR CONTROL PROGRAMMED VALUES PROGRAMMING REINITIALISATION STOP FUEL SUPPLY PREVENTION THERMOPLUNGERS UNLOCK INJECTOR CONTROL WRITE VIN
	A.B.S	V,C,D,A,R	AUTO STOP LIGHTS ILLUMINATION AUTHORISATION BRAKE PRESSURE OFFSET SENSOR CHASSIS WEAR PROGRAMMING CHECK TARGET TEETH FAULT MEMORY GEARBOX TYPE HYDRAULIC BRAKE COMPENSATION PREVENTION OF STOP LIGHT AUTO ILLUMINATION SPEEDO INDEX STEERING WHEEL ANGLE OFFSET SENSOR TRANSVERSE ACCELERATION OFFSET SENSOR VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	AIR CONDITIONING	V,C,D,A	COMPRESSOR TYPE DRIVE RATIO EVAPORATOR TEMPERATURE SENSOR FAULT MEMORY HEATED WINDSCREEN TYPE OF POWER STEERING VEHICLE TYPE WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	INSTRUMENT PANEL	V,C,D,A,R	ADAC DISPLAY TYPE AUTOMATIC HANDBRAKE CRUISE CONTR./SP. LIMIT. SPEED DIFF. CRUISE CTRL/SPD LIMITER DISTANCE UNITS FAULT MEMORY FUEL GAUGE CALIBRATION FUEL TYPE GAS RESERV. CAPAC. GEARBOX TYPE LANGUAGE VERSION. LIGHTS AUTOMATIC ILLUMINATION OIL CHANGE INTERVAL IN KM OIL CHANGE INTERVAL IN MONTHS OIL CHANGE RANGE:CURRENT VALUE IN KM OIL CHANGE RANGE:CURRENT VALUE IN MONTHS OVERSPEED FUNCTION - ARABIA PARTICLE FILTER RESERVE CAPACITY SEAT BELT REMINDER BUZZER TANK CAPACITY TRAJECTORY CONTROL TYRE PRESSURE MONITORING TYRE PRESSURE UNITS UCH UPDATE ODOMETER VEHICLE TYPE VOICE SYNTHESISER WRITE VIN
	AUTOMATIC GEARBOX	V,C,D,A,R	ACTUATORS SEQUENTIAL CONTROL AUTO-ADAPTIVES FAULT MEMORY FAULT/S MEMORISED NOTE OIL WEAR COUNTER WRITE TRANSMISSION OIL CHANGE DATE WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
LAGUNA II PH2	исн	V,C,D,A,R	AUTO LOCKING WARNING SOUND AUTOMATIC CLOSING OF WINDOWS (BY CARD) AUTOMATIC LOCKING WHEN DRIVING AUTOMATIC SEAT RECALL CHANGE IN TRIGGERING LIMIT DAYTIME RUNNING LIGHTS DEADLOCKING DISCHARGE LAMP DOOR UNLOCKING MODE DRIVING TYPE ELECTRIC CHILD SAFETY FAULT MEMORY FOLLOWING TYBE CHANGE GEARBOX TYPE HANDS FREE LOCKING HANDS-FREE FUNCTION HANDS-FREE START-UP HANDS-FREE SYSTEM TEST HAZARD WARNING LIGHTS ILLUMINATION BY ABS HEADLIGHT WASHERS INHIBITION OF SELECTIVE DOOR OPENING INTERIOR LIGHTING LIGHTS AUTOMATIC ILLUMINATION LOCK LATCH LOCKING MEMORISING DRIVER'S SEAT POSITION OVERSPEED FUNCTION - ARABIA POWER-ASSISTED STEERING PROGRAM PROGRAMMING A VALVE CODE PROGRAMMING THE CODES OF THE FOUR VALVES RAIN SENSOR
	AIRBAG/PRETENSIONERS	V,C,D,A,R	CONFIGURATION OF SYSTEM COMPONENTS FAULT MEMORY IGNITION MODULE CONFIGURATION LOCK COMPUTER READING IMPACT CONTEXTS SIDE ON WHICH STEERING WHEEL FITTED UNLOCK COMPUTER WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	COMMUNICATIONS UNIT	V,C,D,A,R	COMP CONFIGURATION CUSTOMER SETTINGS AND DETAILS ECU MEMORY FAULT MEMORY NETHERLANDS LEGISLATION VEHICLE TYPE WRITE VIN
	PARKING BRAKE	V,C,D,A,R	COMPUTER CALIBRATION AND OPERATION FAULT MEMORY SAVE CLUTCH PEDAL PROGRAMMING SLOPE INITIALISATION VEHICLE CONFIGURATION WRITE CLUTCH PEDAL PROGRAMMING WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	LIGHTING	V,C,D,A,R	AUTOMATIC FOLD-DOWN HEADLIGHTS DIPPED HEADLIGHTS RAISE DYNAMIC CORRECTION FAULT MEMORY SIGNATURE SYSTEM INITIALISATION VEHICLE TYPE WRITE VIN
	HEATER	V,C,D,A	ERASE INCORRECT CRANKING COUNTER ERASE OVERHEATING COUNTER FAULT MEMORY
	HANDS-FREE KIT	V,C,D,A,R	AUDIO LINKS TEST COMPUTER CALIBRATION AND OPERATION FAULT MEMORY LANGUAGE MICROPHONE TEST SERIAL LINK TEST WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	PARKING ASSISTANCE	V,C,D,A	BUZZER VOLUME CARAVAN TOWING DISTANCE FAULT MEMORY TONE ADJUSTMENT VEHICLE IDENTIFICATION WRITE VIN
	INJECTION	V.C.D.A.R	ADAPTIVES AFTER REGENERATING PARTICLE FILTER ADAPTIVES ON AIR INTAKE FLAP FAULT AIR DAMPER VALVE PROGRAMMING AIR FLOWMETER PROGRAMMING AIR FLOWMETER PROGRAMMING AIR PATH PROGRAMMING ALCOHOL LEVEL PROG. CABIN FILTER REGENERATION CAMSHAFT SENSOR PROGRAMMING CATALYTIC CONVERTER TEST CRUISE CONTROL/SPEED LIMITER PROGRAMMING EGR ADAPTIVES EGR VALVE PROGRAMMING ENGINE ADAPTIVES ENTER INJECTOR CODES FAULT MEMORY FLYWHEEL TARGET PROGRAMMING FUEL PUMP PROGRAMMING FUEL SUPPLY PREVENTION HIGH PRESSURE FUEL CIRCUIT FAULT FINDING IGNITION COIL ADAPTIVE INJECTION PUMP ADAPTATIVES

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
		v,C,D,A,N	MANIFOLD PRESSURE SENSOR PROGRAMMING
			NUMBER OF STARTING 1
			NUMBER OF STARTING 2
			NUMBER OF STARTING 3
			NUMBER OF STARTING 4
			NUMBER OF STARTING CYCLES
			OIL CHANGE INTERVAL (OCS): DILUTION
			PARAMETRAGE PRIVE 1
			PARAMETRAGE PRIVE 1
			PARTICLE FILTER RELATIVE PRESSURE SENSOR
			PINKING SENSOR PROGRAMMING
			PRESSURE REGULATION ADAPTIVES
			PROGRAMMED VALUES
			PROGRAMMING REINITIALISATION
	1		PROGRAMMING THROTTLE LIMITS
			PROPORTIONAL RICHNESS SENSOR PROGRAMMING
			RAIL PRESSURE SENSOR ADAPTIVES
			RICHNESS REGULATION PROGRAMMING
			STOP FUEL SUPPLY PREVENTION
			TURBOCHARGER PROGRAMMING
			VEHICLE FUNCTION PROGRAMMING
			WRITE V.I.N.
			BRAKE PRESSURE OFFSET SENSOR
			CHECK TARGET TEETH
			FAULT MEMORY
			HILL START
	A.B.S	V,C,D,A,R	SPEEDO INDEX
		, -, , ,	STEERING WHEEL ANGLE OFFSET SENSOR
			TRANSVERSE ACCELERATION OFFSET SENSOR
			WRITE DATE OF LAST AFTER SALES OPERATION
			WRITE VIN
			COMPUTER REINITIALISATION
			FAULT MEMORY
	AIR CONDITIONING	V,C,D,A	GEOGRAPHICAL ZONE
			WRITE VIN
			FAULT MEMORY
			LOCK COMPUTER
			PASSENGER AIR BAG LOCKING MODE
	AIRBAG/PRETENSIONERS	V,C,D,A,R	READING IMPACT CONTEXTS
	AIRBAG/PRETEINSIONERS	V,C,D,A,N	SIDE ON WHICH STEERING WHEEL FITTED
			UNLOCK COMPUTER
			WRITE VIN
			COLUMN LOCK IMMOBILISER PROGRAMMING CODE
	1		FAULT MEMORY
			PROGRAMMING THE CODES OF THE FOUR VALVES
	I	L	PROGRAMMING THE INJECTION IMMOBILISER CODE
	UCH	V,C,D,A,R	READING THE VALVE SET AND VALVE CODES
			SPARE
			VALVE CODE READING
			VALVE SET SELECTION
		I	WRITE V.I.N.

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
LAGUNA III	UPC	V,C,D,A	AUTOMATIC CONFIGURATION BATTERY CORROSION COUNTER BATTERY CYCLE COUNTER ESTIMATED BATTERY CYCLE COUNTER ESTIMATED BATTERY CYCLE COUNTER ESTIMATED BATTERY CYCLE COUNTER MEMORISED BATTERY DISCONNECTION UNIT TEST CALCULATE BATTERY WEAR COUNTERS COMPUTER INITIALISATION CORROSION BATTERY COUNTER ESTIMATED CORROSION BATTERY COUNTER MEMORISED DTC RESET FAULT MEMORY NUMBER OF STARTING NUMBER OF STARTING 1 NUMBER OF STARTING 2 NUMBER OF STARTING 3 NUMBER OF STARTING 4 NUMBER OF STARTING 4 NUMBER OF STARTING 4 NUMBER OF STARTING 4 PARAMETRAGE PRIVE 1 PARAMETRAGE PRIVE 1 PARAMETRAGE PRIVE 2 PARAMETRAGE PRIVE 3 PARAMETRING INTERNAL PROTECTION STOP&START FUNCTION CONFIGURATION WRITE VIN
	INSTRUMENT PANEL	V,C,D,A,R	ADAC DISPLAY TYPE CONSUMPTION MEASUREMENT UNITS CRUISE CTRL/SPD LIMITER DISTANCE BEFORE NEXT OIL CHANGE DISTANCE UNITS FAULT MEMORY LANGUAGE VERSION. OVERSPEED ALARM TYRE PRESSURE MONITOR FUNCTION TYPEE PRESSURE UNITS WRITE VIN
	PARKING BRAKE	V,C,D,A,R	ASSISTED ENGAGEMENT WHEN STATIONARY FAULT MEMORY INITIALISATION AFTER AUTOMATIC CONFIGURATION PREPARATION BEFORE AUTOMATIC CONFIGURATION SAVE CLUTCH PEDAL PROGRAMMING WRITE VIN
	VARIABLE P.A.S	V,C,D,Y9	COMPUTER CALIBRATION FAULT MEMORY WRITE VIN
	LIGHTING	V,C,D,A,R	FAULT MEMORY SYSTEM INITIALISATION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	AUTOMATIC GEARBOX	V,C,D,A,R	CLUTCH WEAR ERASE AUTO-ADAPTIVE VALUES FAULT MEMORY FAULT/S MEMORISED PARAMETRAGE PRIVE 2 PROGRAMME CLUTCH POSITION PROGRAMME SLIP POINT PROGRAMMING SELECTION/ENGAGING ZONES RESET SHIFT DRUM REFERENCE POSITION
	RADIO	V,C,D,A,R	CD CHANGER AND AUXILIARY INPUT COUNTRY MODEL CUSTOMER SETTINGS AND DETAILS EMERGENCY CALL NUMBER EXTERNAL COMPONENTS FAULT MEMORY LANGUAGE PARAMETRAGE PRIVE 1 RESET RADIO SYSTEM CONFIGURATION TEST PARAMETERS WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	MULTIMEDIA INTERFACE	V,C,D,A,R	FAULT MEMORY TEMPERATURE DISPLAY TIME FORMAT WRITE VIN
	4 WHEELS STEERING	V,C,D,A,R	FAULT MEMORY INHIBITION OF 4-WHEEL DRIVE FUNCTION REINSTATEMENT OF 4-WHEEL DRIVE FUNCTION WRITE VIN
	MULTIMED. CONNECTION	V,C,D	ECU MEMORY FAULT MEMORY WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	PARKING PROX CAN	V,C,D,A,R	BUZZER VOLUME CARAVAN TOWING DISTANCE FAULT MEMORY FRONT BUZZER VOLUME FRONT TONE SETTING TONE ADJUSTMENT WRITE VIN
	DRIVER'S DOOR	V,C,D,A	FAULT MEMORY FROST MANAGEMENT MODE WRITE VIN
	PASSENGER'S DOOR	V,C,D,A	FAULT MEMORY FROST MANAGEMENT MODE WRITE VIN
	SEAT MANAGEMENT	V,C,D,Y8	FAULT MEMORY PROGRAMMING OF SEAT STOPS WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	AMPLIFIER	V,C,D,A,R	AMPLIFIER RESET FAULT MEMORY SUBWOOFER WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	TELEMATIC CTRL UNIT	V,C,D,A,R	ACTIVATION OF CONNECTIVITY SERVICES COMPUTER RESET FAULT MEMORY WRITE VIN
	LEFT-HAND DOOR	V,C,D,A,R	COMPUTER REINITIALISATION
	RIGHT-HAND DOOR	V,C,D,A,R	COMPUTER REINITIALISATION WINDOW WINDER 1 DECONFIGURATION
	COMMUNICATIONS UNIT	V,C,D,A,R	ACTIVATION OF CONNECTIVITY SERVICES COUNTRY MODEL DISTANCE UNITS FAULT MEMORY LANGUAGE REVERSING CAMERA CALIBRATION WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	PETROL INJECTION	V,C,D,A,R	
	A.B.S	V,C,D	
	AIR CONDITIONING	V,C,D,A,R	
	VARIABLE P.A.S	V,C,D,A,R	
	INSTRUMENT PANEL	V,C,D,A,R	
SAFRANE	AUTOMATIC GEARBOX	V,C,D,A,R	
	ENGINE IMMOBILISER	V,C,D,A,R	
	AIRBAG/PRETENSIONERS	V,C,D,A	
	DOOR MANAGEMENT	V,C,D,A,R	<u>†</u>
	DISCHARGE LAMP	V,C,D,A,R	
	INJECTION	V,C,D,A,R	AIR CONDITIONING AIR PATH PROGRAMMING CABIN FILTER REGENERATION CHECK UPSTREAM 02 SENSOR DECREMENT IDLE SPEED EGR ADAPTIVES ENGINE ADAPTIVES ENTER INJECTOR CODES FAULT MEMORY FUEL SUPPLY PREVENTION INCREMENT OF IDLE SPEED LOCK INJECTOR CONTROL PROGRAMMED VALUES PROGRAMMING REINITIALISATION STOP FUEL SUPPLY PREVENTION THERMOPLUNGERS UNLOCK INJECTOR CONTROL WITH SUPPLY PREVENTION THERMOPLUNGERS UNLOCK INJECTOR CONTROL WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	A.B.S	V,C,D,A,R	ABS/ESP CALIBRATION CHECK TARGET TEETH FAULT MEMORY GEARBOX TYPE PRESSURE SENSOR FUNCTION REMOTE CONTROL CRUISE CONTROL SPEEDO INDEX STEERING WHEEL ANGLE SENSOR TRANSVERSE ACCELERATION SENSOR VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	AIR CONDITIONING	V,C,D,A,R	COMPRESSOR TYPE DRIVE RATIO EVAPORATOR TEMPERATURE SENSOR FAULT MEMORY HEATED WINDSCREEN TYPE OF POWER STEERING VEHICLE TYPE WRITE VIN
	VARIABLE P.A.S	V,C,D,A,R	
	INSTRUMENT PANEL		ADAC DISPLAY TYPE AUTOMATIC HANDBRAKE CRUISE CONTR,/SP, LIMIT. SPEED DIFF. CRUISE CTRL/SPD LIMITER DISTANCE BEFORE NEXT OIL CHANGE DISTANCE REGULATOR DISTANCE UNITS ENGINE/GEARBOX TYPE FAULT MEMORY FUEL GAUGE CALIBRATION FUEL TYPE GEARBOX TYPE LANGUIGE VERSION. LIGHTS AUTOMATIC ILLUMINATION OIL CHANGE INTERVAL IN KM OIL CHANGE INTERVAL IN MONTHS

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
			OIL CHANGE RANGE:CURRENT VALUE IN KM OIL CHANGE RANGE:CURRENT VALUE IN MONTHS OIL MEASUREMENT TIMER
		V,C,D,A,R	OIL PRESSURE WARNING THRESHOLD OIL TEMPERATURE MEASUREMENT THRESHOLD OTHER AT OTHER MANUAL OVERSPEED FUNCTION - ARABIA PSX AT PSX MANUAL PARKING PROXIMITY SENSOR FUNCTION PARTICLE FILTER RESERVE CAPACITY SEAT BELT REMINDER BUZZER TANK CAPACITY TRAJECTORY CONTROL TYRE PRESSURE MONITORING TYRE PRESSURE UNITS UCH UPDATE ODOMETER
			V4Y AUTOMATIC GEARBOX V4Y MANUAL VEHICLE TYPE VOICE SYNTHESISER WRITE VIN
/EL SATIS	AUTOMATIC GEARBOX	V,C,D,A,R	ACTUATORS SEQUENTIAL CONTROL AUTO-ADAPTIVES FAULT/S MEMORISED WRITE VIN
	AIRBAG/PRETENSIONERS	V,C,D,A	CONFIGURATION OF SYSTEM COMPONENTS FAULT MEMORY IGNITION MODULE CONFIGURATION LOCK COMPUTER READING IMPACT CONTEXTS SIDE ON WHICH STEERING WHEEL FITTED SIDE SENSOR CONFIGURATION UNLOCK COMPUTER WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	DOOR MANAGEMENT	V,C,D,A,R	WHILE VIIV
	DISCHARGE LAMP	V,C,D,A,R	COMPUTER CALIBRATION FAULT MEMORY VEHICLE TYPE WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE	SPECIAL FUNCTIONS
		FUNCTIONS	
	исн		AUTO LOCKING WARNING SOUND AUTOMATIC CLOSING OF WINDOWS (BY CARD) AUTOMATIC SEAT RECALL DAYTIME RUNNING LIGHTS DEADLOCKING DOOR UNLOCKING MODE DRIVING TYPE ELECTRIC CHILD SAFETY FAULT MEMORY
		V,C,D,A,R	GEARBOX TYPE HANDS FREE LOCKING HANDS-FREE FUNCTION HAZARD WARNING LIGHTS ILLUMINATION BY ABS INTERIOR LIGHTING LIGHTS AUTOMATIC ILLUMINATION LOCK LATCH LOCKING
			MEMORISING DRIVER'S SEAT POSITION OVERSPEED ALARM FOR ARABIA OVERSPEED FUNCTION - ARABIA POWER-ASSISTED STEERING PROGRAM RAIN SENSOR SEE-ME-HOME LIGHTING SPARE TIMER COURTESY LIGHT TYPE OF POWER STEERING TYRE PRESSURE MONITOR FUNCTION UNLOCKING MODE. DOORS HANDS FREE WRITE VIN
	TYRES	V,C,D,A,R	CHANGE IN TRIGGERING LIMIT FAULT MEMORY PROGRAMMING A VALVE CODE PROGRAMMING THE CODES OF THE FOUR VALVES SELECTION OF VALVE SET VEHICLE TYPE
	HEATER	V,C,D,A,R	ERASE INCORRECT CRANKING COUNTER ERASE OVERHEATING COUNTER FAULT MEMORY
	PARKING ASSISTANCE	V,C,D,A,R	BUZZER VOLUME FAULT MEMORY TONE ADJUSTMENT VEHICLE IDENTIFICATION WRITE VIN
	HANDS-FREE KIT	V,C,D,A,R	AUDIO LINKS TEST COMPUTER CALIBRATION AND OPERATION FAULT MEMORY LANGUAGE MICROPHONE TEST SERIAL LINK TEST WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	DISTANCE REGULATOR	V,C,D,A,R	ERASE STORED MISALIGNMENT FAULT MEMORY KM MILES STEERING ANGLE OFFSET WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	PARKING BRAKE	V,C,D,A,R	COMPUTER CALIBRATION AND OPERATION FAULT MEMORY SAVE CLUTCH PEDAL PROGRAMMING SLOPE INITIALISATION VEHICLE CONFIGURATION WRITE CLUTCH PEDAL PROGRAMMING WRITE VIN
	INJECTION	V,C,D,A,R	AIR CONDITIONING AIR PATH PROGRAMMING CABIN FILTER REGENERATION CHECK UPSTREAM OZ SENSOR DECREMENT IDLE SPEED ECU MEMORY EGR ADAPTIVES ENGINE ADAPTIVES ENTER INJECTOR CODES FAULT MEMORY FUEL SUPPLY PREVENTION HIGH PRESSURE FUEL CIRCUIT FAULT FINDING INCREMENT OF IDLE SPEED LOCK INJECTOR CONTROL PREVENTION OF ELECTRICAL CONSUMERS PROGRAMMIED VALUES PROGRAMMIED VALUES PROGRAMMING REINITIALISATION STOP FUEL SUPPLY PREVENTION THERMOPLUNGERS UNLOCK INJECTOR CONTROL
	A.B.S	V,C,D,A,R	ABS/ESP CALIBRATION AUTO STOP LIGHTS ILLUMINATION AUTHORISATION BRAKE PRESSURE OFFSET SENSOR CHASSIS WEAR PROGRAMMING CHECK TARGET TEETH FAULT MEMORY GEARBOX TYPE HYDRAULIC BRAKE COMPENSATION PRESSURE SENSOR FUNCTION PRESVENTION OF STOP LIGHT AUTO ILLUMINATION REMOTE CONTROL CRUISE CONTROL SPEEDO INDEX STEERING WHEEL ANGLE OFFSET SENSOR STEERING WHEEL ANGLE SENSOR TRANSVERSE ACCELERATION OFFSET SENSOR TRANSVERSE ACCELERATION SENSOR VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE	SPECIAL FUNCTIONS
	-	FUNCTIONS	EDACE ALITO ADADTIVE VALUES
			ERASE AUTO-ADAPTIVE VALUES
	ALITOMANTIC CEARDOV	V C D A D	FAULT/S MEMORISED
	AUTOMATIC GEARBOX	V,C,D,A,R	NEUTRAL POSITION PROGRAMMING
			WRITE DATE OF LAST AFTER SALES OPERATION
			WRITE VIN
			COMPUTER CALIBRATION AND OPERATION
			FAULT MEMORY
			SAVE CLUTCH PEDAL PROGRAMMING
	PARKING BRAKE	V,C,D,A,R	SLOPE INITIALISATION
			VEHICLE CONFIGURATION
			WRITE CLUTCH PEDAL PROGRAMMING
			WRITE VIN
			AUTOMATIC FOLD-DOWN HEADLIGHTS
			DIPPED HEADLIGHTS RAISE
			DYNAMIC CORRECTION
	LIGHTING	V,C,D,A,R	FAULT MEMORY
	LIGITING	v,c,D,A,II	SIGNATURE
			SYSTEM INITIALISATION
			VEHICLE TYPE
			WRITE VIN
			BUZZER VOLUME
			CARAVAN TOWING DISTANCE
			FAULT MEMORY
			FRONT BUZZER VOLUME
	PARKING PROX CAN	V,C,D,A,R	FRONT TONE SETTING
		1 ' - ' ' '	TONE ADJUSTMENT
			VEHICLE IDENTIFICATION
			WRITE DATE OF LAST AFTER SALES OPERATION
			WRITE VIN
			AUDIO LINKS TEST
			COMPUTER CALIBRATION AND OPERATION
			FAULT MEMORY
			LANGUAGE
	HANDS FREE KIT	V,C,D,A,R	MICROPHONE TEST
			SERIAL LINK TEST
			WRITE DATE OF LAST AFTER SALES OPERATION
			WRITE VIN
			CONFIGURATION OF SYSTEM COMPONENTS
			FAULT MEMORY
			IGNITION MODULE CONFIGURATION
			LOCK COMPUTER
	AIRBAG/PRETENSIONERS	V,C,D,A,R	READING IMPACT CONTEXTS
	AINDAG/FRETEINSIONERS	ν,C,D,A,N	SIDE ON WHICH STEERING WHEEL FITTED
			UNLOCK COMPUTER
			WRITE DATE OF LAST AFTER SALES OPERATION
		_	WRITE VIN
			BUZZER VOLUME
VEL SATIS PH2			CARAVAN TOWING DISTANCE
-	PARKING ASSISTANCE	V,C,D,A,R	FAULT MEMORY
		., -, - , . ,	TONE ADJUSTMENT
			VEHICLE IDENTIFICATION
			WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	INSTRUMENT PANEL	V,C,D,A,R	ADAC DISPLAY TYPE AUTOMATIC HANDBRAKE CRUISE CONTR./SP. LIMIT. SPEED DIFF. CRUISE CTRL/SPD LIMITER DISTANCE UNITS FAULT MEMORY FUEL GAUGE CALIBRATION FUEL TYPE GEARBOX TYPE LANGUAGE VERSION. LIGHTS AUTOMATIC ILLUMINATION OIL CHANGE INTERVAL IN KM OIL CHANGE INTERVAL IN MONTHS OIL CHANGE INTERVAL IN MONTHS OIL CHANGE RANGE:CURRENT VALUE IN MONTHS OIL CHANGE RANGE:CURRENT VALUE IN MONTHS OIL MEASUREMENT TIMER OIL PRESSURE WARNING THRESHOLD OVERSPEED FUNCTION - ARABIA PARKING PROXIMITY SENSOR FUNCTION PARTICLE FILTER RESERVE CAPACITY SEAT BELT REMINDER BUZZER TANK CAPACITY TRAJECTORY CONTROL TYRE PRESSURE UNITS UCH UPDATE ODOMETER VEHICLE TYPE VOICE SYNTHESISER
	UCH		AERIAL TEST AUTO LOCKING WARNING SOUND AUTOMATIC CLOSING OF WINDOWS (BY CARD) AUTOMATIC FOLDING OF DOOR MIRRORS DAYTIME RUNNING LIGHTS DEADLOCKING DISCHARGE LAMP DRIVING TYPE ELECTRIC CHILD SAFETY FAULT MEMORY FOLLOWING TYRE CHANGE GEARBOX TYPE HANDS FREE LOCKING HANDS-FREE START-UP HANDS-FREE START-UP

ESPACE IV PH2	SYSTEMS	BASE	SPECIAL FUNCTIONS
	1	FUNCTIONS	HAZARD WARNING LIGHTS ILLUMINATION BY ABS
		V,C,D,A,R	HEADLIGHT WASHERS INHIBITION OF SELECTIVE DOOR OPENING LIGHT SENSOR SENSITIVITY LIGHTS AUTOMATIC ILLUMINATION
			MEMORISING DRIVER'S SEAT POSITION PROGRAMMING A VALVE CODE PROGRAMMING THE CODES OF THE FOUR VALVES
			RAIN/LIGHT SENSOR RAIN/LUMINOSITY SENSOR TYPE SEE-ME-HOME LIGHTING SELECTIVE OPENING OF DOORS
			SPARE SUNROOF TYPE OF POWER STEERING
			TYRE PRESSURE MONITOR FUNCTION VALVE SET SELECTION VEHICLE TYPE VOICE SYNTHESISER
	HEATER	V,C,D,A	WRITE VIN ERASE INCORRECT CRANKING COUNTER ERASE OVERHEATING COUNTER FAULT MEMORY
	COMMUNICATIONS UNIT	V,C,D,A,R	CUSTOMER SETTINGS AND DETAILS ECU MEMORY FAULT MEMORY NETHERLANDS LEGISLATION VEHICLE TYPE
	AIR CONDITIONING	V,C,D,A	WRITE VIN COMPRESSOR TYPE DRIVE RATIO EVAPORATOR TEMPERATURE SENSOR FAULT MEMORY HEATED WINDSCREEN TYPE OF POWER STEERING VEHICLE TYPE
	INJECTION	V,C,D,A,R	WRITE VIN DECREMENT IDLE SPEED EGR VALVE PROGRAMMING ENGINE PARAMETER ADAPTIVES ENTER INJECTOR CALIBRATION DATA INCREMENT OF IDLE SPEED SAVE DATA FOR COMPUTER REPLACEMENT WITH AIR CONDITIONING WITH BOILER
			WITH POWER STEERING ELECTRIC PUMP UNIT WITH THERMOPLUNGERS WITHOUT AIR CONDITIONING WITHOUT BOILER WITHOUT POWER STEERING ELECTRIC PUMP UNIT WITHOUT THERMOPLUNGERS WRITE DATA AFTER REPLACING COMPUTER WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	A.B.S	V,C,D,A	READ SPEEDO INDEX READ VEHICLE PARAMETERS SPEEDO INDEX STEERING WHEEL ANGLE SENSOR VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION
AVANTIME	AIR CONDITIONING	V,C,D,A,R	AVANTIME (F4R): WITH HEATED WINDSCREEN AVANTIME (F4R):WITHOUT HEATED WINDSCREEN AVANTIME(EXCEPT F4R):WITH HEATED WINDSCR. AVANTIME(EXCEPT F4R):WITHOUT HEATED WINDSCR ESPACE: WITH EVAPORATOR SENSOR ESPACE: WITHOUT EVAPORATOR SENSOR
	INSTRUMENT PANEL	V,C,D,A,R	
	AUTOMATIC GEARBOX	V,C,D,A,R	ACTUATORS SEQUENTIAL CONTROL WRITE VIN
	ENGINE IMMOBILISER	V,C,D,A,R	
	INTERCONNECTION UNIT	V,C,D,A,R	ABS TYPE AIR CONDITIONING TYPE AUTOMATIC RELOCKING DRIVING TYPE GEARBOX TYPE HAZARD LAMPS RECALL ON TRF RADIOFREQUENCY TYPE RAIN SENSOR SUNROOF CONTROL UNIT
	AIRBAG/PRETENSIONERS	V,C,D,A	LOCK COMPUTER UNLOCK COMPUTER WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	HEATER	V,C,D,A,R	
	DISCHARGE LAMP	V,C,D,A,R	
	INJECTION	V,C,D,A,R	DECREMENT IDLE SPEED IDLE SPEED SETTING DECREMENTATION IDLE SPEED SETTING INCREMENTATION INCREMENT OF IDLE SPEED PROGRAMMING REINITIALISATION WITH AIR CONDITIONING WITH AUTOMATIC TRANSMISSION WITH CRUISE CONTROL WITH SWIRL FLAP WITH THERMOPLUNGERS WITHOUT AIR CONDITIONING WITHOUT AUTOMATIC TRANSMISSION WITHOUT CRUISE CONTROL WITHOUT CRUISE CONTROL
	A.B.S	V,C,D,A	SPEEDO INDEX WRITE DATE OF LAST AFTER SALES OPERATION
	AIR CONDITIONING	V,C,D,A,R	AVANTIME (F4R): WITH HEATED WINDSCREEN AVANTIME (F4R):WITHOUT HEATED WINDSCREEN AVANTIME(EXCEPT F4R):WITH HEATED WINDSCR. AVANTIME(EXPT F4R):WITHOUT HEATED WINDSCR ESPACE: WITH EVAPORATOR SENSOR ESPACE: WITHOUT EVAPORATOR SENSOR
	INSTRUMENT PANEL	V,C,D,A,R	WITH HAZARD LAMPS RECALL ON TRF WITHOUT HAZARD LAMPS RECALL ON TRF

	1	BASE	I
ESPACE IV PH2	SYSTEMS	FUNCTIONS	SPECIAL FUNCTIONS
ESPACE	AUTOMATIC GEARBOX	V,C,D,A,R	AIR CONDITIONING PROGRAMMING AUTO-ADAPTIVES CONVERTER LOCK UP ADAPTIVE MEMORIZATION OF NL AND FL POSITIONS NOTE OIL WEAR COUNTER OBD MEMORY OIL CHANGE COUNTER OFFSET WITH AIR CONDITIONING WITHOUT AIR CONDITIONING WITHOUT OBD WITHOUT OBD WRITE DATE OF LAST AFTER SALES OPERATION WRITE TRANSMISSION OIL CHANGE DATE
	исн	V,C,D,A,R	WITH OUT ADAC WITHOUT ADIO DISPLAY WITHOUT RADIO DISPLAY
	INSTRUMENT PANEL	V,C,D,A	
	AIRBAG/PRETENSIONERS	V,C,D,A	WITH FUEL PUMP CUT-OUT WITH SIDE AIRBAGS WITHOUT FUEL PUMP CUT-OUT WITHOUT SIDE AIRBAGS WRITE DATE OF LAST AFTER SALES OPERATION
	DOOR MANAGEMENT	V,C,D,A,R	
	HEATER	V,C,D,A,R	
	DISCHARGE LAMP	V,C,D,A,R	

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	INJECTION	V,C,D,A,R	AIR CONDITIONING AIR PATH PROGRAMMING CHECK UPSTREAM OZ SENSOR DECREMENT IDLE SPEED EGG ADAPTIVES ENGINE ADAPTIVES ENTER INJECTOR CODES FAULT MEMORY FUEL SUPPLY PREVENTION INCREMENT OF IDLE SPEED LOCK INJECTOR CONTROL PROGRAMMING REINITIALISATION STOP FUEL SUPPLY PREVENTION THERMOPLUNGERS UNLOCK INJECTOR CONTROL WITHOUTH OR THE STOPP OF THE STOPP OF THE SUPPLY PREVENTION THERMOPLUNGERS UNLOCK INJECTOR CONTROL
	A.B.S	V,C,D,A,R	WRITE VIN ABS/ESP CALIBRATION AUTO STOP LIGHTS ILLUMINATION AUTHORISATION BRAKE PRESSURE OFFSET SENSOR CHASSIS WEAR PROGRAMMING CHECK TARGET TEETH FAULT MEMORY GEARBOX TYPE HYDRAULIC BRAKE COMPENSATION PRESSURE SENSOR FUNCTION PREVENTION OF STOP LIGHT AUTO ILLUMINATION SPEEDO INDEX STEERING WHEEL ANGLE OFFSET SENSOR STEERING WHEEL ANGLE OFFSET SENSOR STERNING WHEEL ANGLE OFFSET SENSOR TRANSVERSE ACCELERATION OFFSET SENSOR TRANSVERSE ACCELERATION SENSOR VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION
	AIR CONDITIONING	V,C,D,R	CONFIGURATION OF SYSTEM COMPONENTS FAULT MEMORY IGNITION MODULE CONFIGURATION LOCK COMPUTER READING IMPACT CONTEXTS SIDE ON WHICH STEERING WHEEL FITTED SIDE SENSOR CONFIGURATION UNLOCK COMPUTER WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE	SPECIAL FUNCTIONS
		FUNCTIONS	
	INSTRUMENT PANEL	V,C,D,A,R	ADAC DISPLAY TYPE AUTOMATIC HANDBRAKE CONSUMPTION MEASUREMENT UNITS CRUISE CONTR./SP. LIMIT. SPEED DIFF. CRUISE CONTR./SP. LIMITER DIRECTIONAL HEADLIGHTS DISTANCE BEFORE NEXT OIL CHANGE DISTANCE UNITS FAULT MEMORY FUEL TYPE GEARBOX TYPE HANDS FREE INCREASE FUEL WARNING THRESHOLD LANGUAGE VERSION. LIGHTS AUTOMATIC ILLUMINATION NAVIGATION SYSTEM OIL MEASUREMENT OIL SERVICE AND ODOMETRY MILES - KM OTHER AT OTHER MANUAL OVERSPEED FUNCTION - ARABIA PARKING AID PARTICLE FILTER PERSONALISED OIL CHANGE FREQUENCY TEMPERATURE UNITS TRAJECTORY CONTROL TYRE PRESSURE MONITORING TYRE PRESSURE WINTS VAY AUTOMATIC GEARBOX VAY MANUAL VEHICLE TYPE VOICE SYNTHESISER WRITE VIN
ESPACE IV	AUTOMATIC GEARBOX	V,C,D,A	ACTUATORS SEQUENTIAL CONTROL AUTO-ADAPTIVES FAULT/S MEMORISED NEUTRAL POSITION PROGRAMMING WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	AIRBAG/PRETENSIONERS	V,C,D,R	CONFIGURATION OF SYSTEM COMPONENTS FAULT MEMORY IGNITION MODULE CONFIGURATION LOCK COMPUTER READING IMPACT CONTEXTS SIDE ON WHICH STEERING WHEEL FITTED SIDE SENSOR CONFIGURATION UNLOCK COMPUTER WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	UPC	V,C,D,A,R	
	VARIABLE P.A.S	V,C,D,A,R	•

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
ESPACE IV PH2	UCH	FUNCTIONS V,C,D,A,R	AERIAL TEST AUTO LOCKING WARNING SOUND AUTOMATIC CLOSING OF WINDOWS (BY CARD) AUTOMATIC FOLDING OF DOOR MIRRORS DAYTIME RUNNING LIGHTS DEADLOCKING DISCHARGE LAMP DRIVING TYPE ELECTRIC CHILD SAFETY FAULT MEMORY FOLLOWING TYRE CHANGE GEARBOX TYPE HANDS FREE LOCKING HANDS-FREE FUNCTION HANDS-FREE START-UP HANDS-FREE SYSTEM TEST HAZARD WARNING LIGHTS ILLUMINATION BY ABS INHIBITION OF SELECTIVE DOOR OPENING LIGHT SENSOR SENSITIVITY LIGHTS AUTOMATIC ILLUMINATION LOCK LATCH LOCKING MEMORISING DRIVER'S SEAT POSITION OVERSPEED FUNCTION - ARABIA PROGRAMMING A VALVE CODE PROGRAMMING A VALVE CODE PROGRAMMING THE CODES OF THE FOUR VALVES RAIN/LIGHT SENSOR RAIN/LUMINOSITY SENSOR TYPE SEE-ME-HOME LIGHTING SELECTIVE OPENING OF DOORS SPARE SUNROOF TYPE OF POWER STEERING TYRE PRESSURE MONITOR FUNCTION VALVE SET SELECTION VEHICLE FAMILY VEHICLE TYPE
	DISCHARGE LAMP	V,C,D,A	WRITE VIN COMPUTER CALIBRATION FAULT MEMORY VEHICLE TYPE WRITE VIN
	PARKING ASSISTANCE	V,C,D,A	BUZZER VOLUME FAULT MEMORY TONE ADJUSTMENT VEHICLE IDENTIFICATION WRITE VIN
	HEATER	V,C,D,A	ERASE INCORRECT CRANKING COUNTER ERASE OVERHEATING COUNTER FAULT MEMORY

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	HANDS FREE KIT	V,C,D,A,R	AUDIO LINKS TEST COMPUTER CALIBRATION AND OPERATION FAULT MEMORY LANGUAGE MICROPHONE TEST SERIAL LINK TEST WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	PARKING BRAKE	V,C,D,A,R	COMPUTER CALIBRATION AND OPERATION FAULT MEMORY SAVE CLUTCH PEDAL PROGRAMMING SLOPE INITIALISATION VEHICLE CONFIGURATION WRITE CLUTCH PEDAL PROGRAMMING WRITE CLUTCH PEDAL PROGRAMMING WRITE VIN
	INJECTION	V,C,D,A,R	ADAPTIVES AFTER REGENERATING PARTICLE FILTER ADAPTIVES AFTER REPLACING CABIN FILTER ADAPTIVES ON AIR INTAKE FLAP FAULT AIR CONDITIONING AIR DAMPER VALVE PROGRAMMING AIR FLOWMETER PROGRAMMING AIR FLOWMETER PROGRAMMING AIR PATH PROGRAMMING ALTERNATOR SETPOINT VOLTAGE CABIN FILTER REGENERATION CRUISE CONTROL/SPEED LIMITER PROGRAMMING DECREMENT IDLE SPEED ECU MEMORY EGR ADAPTIVES EGR VALVE PROGRAMMING ENGINE ADAPTIVES ENTER INJECTOR CODES FAULT MEMORY FLYWHEEL TARGET PROGRAMMING FUEL SUPPLY PREVENTION HIGH PRESSURE FUEL CIRCUIT FAULT FINDING INCREMENT OF IDLE SPEED LOCK INJECTOR CONTROL MANIFOLD PRESSURE SENSOR PROGRAMMING OIL CHANGE INTERVAL (OCS): DILUTION PARTICLE FILTER FLATIVE PRESSURE SENSOR PREVENTION OF ELECTRICAL CONSUMERS PROGRAMMING REINITIALISATION PROPORTIONAL RICHNESS SENSOR PROGRAMMING RAIL PRESSURE SENSOR ADAPTIVES STOP ELECTRICAL CONSUMER PREVENTION THERMOPLUNGERS TURBOCHARGER PROGRAMMING UNLOCK INJECTOR CONTROL WITH THE PREVENTION THERMOPLUNGERS TURBOCHARGER PROGRAMMING UNLOCK INJECTOR CONTROL WRITE V.I.N. WRITE V.I.N.

ESPACE IV PH2	SYSTEMS	BASE	SDECIAL ELINICTIONS
ESPACE IV PHZ	SYSTEMS	FUNCTIONS	SPECIAL FUNCTIONS
	INSTRUMENT PANEL	V,C,D,A,R	ADAC DISPLAY TYPE BATTERY CHARGE WARNING INFORMATION CRUISE CONTR./SP. LIMIT. SPEED DIFF. CRUISE CTRL/SPD LIMITER DIRECTIONAL HEADLIGHTS DISTANCE UNITS ELECTRIC PUMP UNIT FAULT MEMORY FUEL TYPE GEARBOX TYPE LANGUAGE VERSION. LIGHTS AUTOMATIC ILLUMINATION ODOMETER IN KM ODOMETER IN KM ODOMETER IN MILES OIL MEASUREMENT OIL SERVICE AND ODOMETRY MILES - KM OVERSPEED FUNCTION - ARABIA PARKING AID PARTICLE FILTER PERSONALISED OIL CHANGE FREQUENCY TRAJECTORY CONTROL TYRE PRESSURE MONITORING TYRE PRESSURE MONITORING TYRE PRESSURE UNITS
	A.B.S	V,C,D,A,R	AUTO STOP LIGHTS ILLUMINATION AUTHORISATION BRAKE PRESSURE OFFSET SENSOR CHASSIS WEAR PROGRAMMING CHECK TARGET TEETH FAULT MEMORY GEARBOX TYPE HYDRAULIC BRAKE COMPENSATION PREVENTION OF STOP LIGHT AUTO ILLUMINATION SPEEDO INDEX STEERING WHEEL ANGLE OFFSET SENSOR TRANSVERSE ACCELERATION OFFSET SENSOR VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	AIR CONDITIONING	V,C,D,R	ADDITIONAL HEATING AIR CONDITIONING TYPE ALTERNATOR TYPE COMPRESSOR TYPE DRIVE RATIO DRIVING TYPE FAULT MEMORY GEOGRAPHICAL ZONE HEATING RESISTOR TYPE REAR SHELVES TOXICITY SENSOR WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE	SPECIAL FUNCTIONS
ESPACE IV PHZ	STSTEIVIS	FUNCTIONS	SPECIAL FUNCTIONS
	AIRBAG/PRETENSIONERS	V,C,D,R	CONFIGURATION OF SYSTEM COMPONENTS FAULT MEMORY IGNITION MODULE CONFIGURATION LOCK COMPUTER READING IMPACT CONTEXTS SIDE ON WHICH STEERING WHEEL FITTED UNLOCK COMPUTER WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
ESPACE IV PH2	исн	V,C,D,A,R	AERIAL TEST AUTO LOCKING WARNING SOUND AUTOMATIC CLOSING OF WINDOWS (BY CARD) AUTOMATIC FOLDING OF DOOR MIRRORS DAYTIME RUNNING LIGHTS DEADLOCKING DISCHARGE LAMP DRIVING TYPE ELECTRIC CHILD SAFETY FAULT MEMORY FOLLOWING TYRE CHANGE GEARBOX TYPE HANDS FREE LOCKING HANDS-FREE FUNCTION HANDS-FREE SYSTEM TEST HAZARD WARNING LIGHTS ILLUMINATION BY ABS HEADLIGHT WASHERS INHIBITION OF SELECTIVE DOOR OPENING LIGHTS ENSOR SENSITIVITY LIGHTS AUTOMATIC ILLUMINATION MEMORISING DRIVER'S SEAT POSITION PROGRAMMING A VALVE CODE PROGRAMMING THE CODES OF THE FOUR VALVES RAIN/LIGHT SENSOR RAIN/LUMINOSITY SENSOR TYPE SELECTIVE OPENING OF DOORS SPARE SUNROOF TYPE OF POWER STEERING TYPE OF POWER STEERING TYPE PRESSURE MONITOR FUNCTION VEHICLE FAMILY VEHICLE TYPE WRITE VIIN
	AUTOMATIC GEARBOX	V,C,D,A,R	ACTUATORS SEQUENTIAL CONTROL AUTO-ADAPTIVES ERASE AUTO-ADAPTIVE VALUES FAULT/S MEMORISED NEUTRAL POSITION PROGRAMMING WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	PARKING ASSISTANCE	V,C,D,A	BUZZER VOLUME CARAVAN TOWING DISTANCE ERASE INCORRECT CRANKING COUNTER ERASE OVERHEATING COUNTER FAULT MEMORY TONE ADJUSTMENT VEHICLE IDENTIFICATION WRITE VIN
	PARKING PROX	V,C,D,A,R	BUZZER VOLUME CARAVAN TOWING DISTANCE FAULT MEMORY FRONT BUZZER VOLUME FRONT TONE SETTING TONE ADJUSTMENT VEHICLE IDENTIFICATION WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	PARKING BRAKE	V,C,D,A,R	COMPUTER CALIBRATION AND OPERATION FAULT MEMORY SAVE CLUTCH PEDAL PROGRAMMING SLOPE INITIALISATION VEHICLE CONFIGURATION WRITE CLUTCH PEDAL PROGRAMMING WRITE CUTCH PEDAL PROGRAMMING WRITE VIN
	HEATER	V,C,D,A,R	
	RADIO	V,C,D,A,R	CD CHANGER AND AUXILIARY INPUT COMP CONFIGURATION COMPUTER CALIBRATION AND OPERATION DISTANCE UNITS FAULT MEMORY TEST PARAMETERS WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	MULTIMEDIA INTERFACE	V,C,D,A,R	ECU MEMORY FAULT MEMORY VEHICLE CONFIGURATION VEHICLE TYPE WRITE VIN
	MULTIMED. CONNECTION	V,C,D,A	FAULT MEMORY SYSTEM CONFIGURATION WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	COMMUNICATIONS UNIT	V,C,D,A,R	ACTIVATION OF CONNECTIVITY SERVICES ANGLE OF ASSEMBLY CONSTRUCTOR/MANUFACTURER CUSTOMER SETTINGS AND DETAILS DISTANCE UNITS ECU MEMORY FAULT MEMORY GSM ANTENNA NETHERLANDS LEGISLATION REVERSING CAMERA CALIBRATION SYSTEM CONFIGURATION VEHICLE TYPE WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	VARIABLE P.A.S	V,C,D,A,R	COMPUTER CALIBRATION FAULT MEMORY WRITE VIN
	LIGHTING	V,C,D,A	AUTOMATIC FOLD-DOWN HEADLIGHTS DIRECTIONAL HEADLIGHTS DRIVING TYPE DYNAMIC CORRECTION FAULT MEMORY LIGHT SENSOR SIGNAL SIGNATURE SYSTEM INITIALISATION VEHICLE TYPE WRITE VIN
	INJECTION	V,C,D,A,R	AIR CONDITIONING CRUISE CTRL/SPEED LIMITER DECREMENT IDLE SPEED EGR ADAPTIVES ENGINE PARAMETER ADAPTIVES FIRST VIN CODE ENTRY GEARBOX TYPE HIGH PRESSURE CIRCUIT LEAK TEST IDLE SPEED SETTING DECREMENTATION IDLE SPEED SETTING INCREMENTATION INCREMENT OF IDLE SPEED INJECTION PROHIBITION INJECTION PROHIBITION INJECTOR CYLINDER 1 INJECTOR CYLINDER 2 INJECTOR CYLINDER 3 INJECTOR CYLINDER 4 POWER STEERING ELECTRIC PUMP UNIT PREVENTION OF ELECTRICAL CONSUMERS PROGRAMMING REINITIALISATION STATIC/AUTOCONFIGURATION TEST THERMOPLUNGERS VEHICLE FUNCTION PROGRAMMING WITH AUTOMATIC TRANSMISSION WITH MANUAL GEARBOX WITHOUT AUTOMATIC TRANSMISSION WITHOUT AUTOMATIC TRANSMISSION WITHOUT AUTOMATIC TRANSMISSION WITHOUT AUTOMATIC TRANSMISSION
	A.B.S	V,C,D,A	WRITE VIN WRITE DATE OF LAST AFTER SALES OPERATION

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	AIR CONDITIONING	V,C,D,A	BEHR PROBE CONFIGURATION CONFIG. WITHOUT RECYCLING FLAP AUTO-SETTING CONFIGURATION WITH RECYCLING FLAP AUTO-SETTING EEPROM PROBE CONFIGURATION SIEMENS PROBE CONFIGURATION SIEMENS PROBE CONFIGURATION WITH COOLANT SENSOR WITH EVAPORATOR TEMPERATURE SENSOR WITH HARRISON TYPE COMPRESSOR WITH HARRISON TYPE COMPRESSOR WITH HARTED REAR SCREEN WITH ONE-TOUCH TYPE CONTROL WITH PERMANENT TYPE CONTROL WITH RECYCLING MOTOR TIMER WITH SANDEN TYPE COMPRESSOR WITHOUT COOLANT SENSOR WITHOUT EVAPORATOR TEMPERATURE SENSOR WITHOUT HEATED REAR SCREEN WITHOUT HEATED REAR SCREEN WITHOUT RECYCLING MOTOR TIMER
KANGOO	исн	V,C,D,A	AUTO LOCKING WHEN DRIVING FUNCTION PREVENTION CODED DIESEL SOLENOID VALVE ENGINE IMMOBILISER DIESEL/PETROL ENG IMMOB WITHOUT CODED SOL VALVE ONE-TOUCH CENTRAL DOOR LOCKING BUTTON PROGRAMMING WITH 1 KEY PROGRAMMING WITH 2 KEYS RAID FUNCTION AUTHORISATION ROCKER CENTRAL DOOR LOCKING BUTTON WITH AUTOMATIC RE-LOCKING WITH HAZARD LIGHTS UPON IMPACT WITH INFRA-RED REMOTE CONTROL WITH OVERSPEED WARNING WITH RADIO FREQUENCY REMOTE CONTROL WITH VARIABLE W'SCREEN WIPER INTERMITTENT WITH UT AUTOMATIC RE-LOCKING WITHOUT AUTOMATIC RE-LOCKING WITHOUT HAZARD LIGHTS UPON IMPACT WITHOUT RUNNING LIGHTS WITHOUT RUNNING LIGHTS WITHOUT RUNNING LIGHTS UPON IMPACT WITHOUT RUNNING LIGHTS UPON IMPACT WITHOUT RUNNING LIGHTS UPON IMPACT WITHOUT RUNNING LIGHTS WITHOUT RUNNING LIGHTS WITHOUT RUNNING LIGHTS WITHOUT TIMED COURTESY LIGHT WITHOUT TIMED COURTESY LIGHT

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	AUTOMATIC GEARBOX	V,C,D,A	AIR CONDITIONING CONNECTION FAULT FINDING AIR CONDITIONING WITH WIRE CONNECTION AUTO-ADAPTIVES CHECK MOTOR TORQUE BY ABS CONVERTER LOCK UP ADAPTIVE ENGINE TORQUE CONTROL FUNCTION LEVER LOCKING CONNECTION FAULT FINDING NOTE OIL WEAR COUNTER OBD MEMORY OIL CHANGE COUNTER OFFSET SELECTOR LEVER LOCKING TRAJECTORY CONTROL WITH AIR CONDITIONING WITHOUT AIR CONDITIONING WITHOUT OBD WRITE DATE OF LAST AFTER SALES OPERATION WRITE TRANSMISSION OIL CHANGE DATE
	HEATER	V,C,D,A	White Hawasinssion ole of Minor British
	GAS INJ	V,C,D,A,R	
	SUPERVISOR	V,C,D,A,R	100 AH TRACTION BATTERY BOILER RANGE EXTENDER SAVE DATA FOR COMPUTER REPLACEMENT WITH RANGE EXTENSION WITHOUT RANGE EXTENSION WRITE DATA AFTER REPLACING COMPUTER
	INVERTER	V,C,D,A,R	
	AIRBAG/PRETENSIONERS	V,C,D,A,R	DRIVER'S LATERAL SENSOR DRIVER'S FRONT AIRBAG DRIVER'S FRONT BUCKLE PRETENSIONER FRONT THORAX SIDE AIR BAG,DRIVER SIDE FRONT THORAX SIDE AIR BAG,PASSENGER SIDE IMPACT INFORMATION CONNECTION LOCK COMPUTER PASSENGER'S FRONT BUCKLE PRETENSIONER PASSENGER AIR BAG LOCKING BY KEY PASSENGER'S FRONT AIRBAG PASSENGER'S LATERAL SENSOR UNLOCK COMPUTER WRITE DATE OF LAST AFTER SALES OPERATION

		BASE	I STEIL ON KEI EKENEE GNET
ESPACE IV PH2	SYSTEMS	FUNCTIONS	SPECIAL FUNCTIONS
	INJECTION	V,C,D,A,R	AIR CONDITIONING CRUISE CTRL/SPEED LIMITER DECREMENT IDLE SPEED EGR ADAPTIVES ENGINE PARAMETER ADAPTIVES ENGINE PARAMETER ADAPTIVES ENTER INJECTOR CALIBRATION DATA FIRST VIN CODE ENTRY FUEL SYSTEM TEST GEARBOX TYPE HIGH PRESSURE CIRCUIT LEAK TEST INCREMENT OF IDLE SPEED INJECTION PROHIBITION INJECTOR CYLINDER 1 INJECTOR CYLINDER 2 INJECTOR CYLINDER 3 INJECTOR CYLINDER 4 START OBD TEST: 02 SENSORS POWER STEERING ELECTRIC PUMP UNIT PREVENTION OF ELECTRICAL CONSUMERS PROGRAMMING REINITIALISATION PROGRAMMING REINITIALISATION SAVE DATA FOR COMPUTER REPLACEMENT STATIC/AUTOCONFIGURATION TEST THERMOPLUNGERS VEHICLE FUNCTION PROGRAMMING WRITING DATA TO MEMORY
KANGOO MUX	A.B.S	V,C,D,A	BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS SPEEDO INDEX VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	AUTOMATIC GEARBOX	V,C,D,A,R	AIR CONDITIONING CONNECTION FAULT FINDING AIR CONDITIONING WITH WIRE CONNECTION AUTO-ADAPTIVES CHECK MOTOR TORQUE BY ABS CONVERTER LOCK UP ADAPTIVE ENGINE TORQUE CONTROL FUNCTION LEVER LOCKING CONNECTION FAULT FINDING NOTE OIL WEAR COUNTER OBD MEMORY SELECTOR LEVER LOCKING TRAJECTORY CONTROL WRITE DATE OF AFTER SALES OPERATION WRITE DATE OF LAST AFTER SALES OPERATION WRITE TRANSMISSION OIL CHANGE DATE WRITE TRANSMISSION OIL CHANGE DATE
	ENGINE IMMOBILISER	V,C,D,A,R	
	INTERCONNECTION UNIT	V,C,D,A,R	AUTOMATIC RELOCKING DAYTIME RUNNING LIGHTS ILLUMINATE HAZARD LAMPS UPON IMPACT SELECTIVE OPENING OF DOORS

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	AIRBAG/PRETENSIONERS	V,C,D,A,R	DRIVER'S LATERAL SENSOR DRIVER'S FRONT AIRBAG DRIVER'S FRONT BUCKLE PRETENSIONER FRONT THORAX SIDE AIR BAG, DRIVER SIDE FRONT THORAX SIDE AIR BAG, PASSENGER SIDE IMPACT INFORMATION CONNECTION LOCK COMPUTER PASSENGER'S FRONT BUCKLE PRETENSIONER PASSENGER AIR BAG LOCKING BY KEY PASSENGER'S FRONT AIRBAG PASSENGER'S LATERAL SENSOR UNLOCK COMPUTER WRITE DATE OF LAST AFTER SALES OPERATION
	INJECTION	V C D A	ADAPTIVES AFTER REGENERATING PARTICLE FILTER ADAPTIVES AFTER REPLACING CABIN FILTER AIR DAMPER VALVE PROGRAMMING AIR PATH PROGRAMMING CABIN FILTER REGENERATION CAMSHAFT SENSOR PROGRAMMING COMMERCIAL VEHICLE IDLE SPEED MODIFICATION CRUISE CONTROL/SPEED LIMITER PROGRAMMING CYLINDER 1 INJECTOR CODE CYLINDER 2 INJECTOR CODE CYLINDER 3 INJECTOR CODE CYLINDER 4 INJECTOR CODE EGR ADAPTIVES EGR VALVE PROGRAMMING ENGINE ADAPTIVES ENTER INJECTOR CODES ENTER VIN CODE EXHAUST INJECTOR CICCUIT FAULT MEMORY FLYWHEEL TARGET PROGRAMMING FUEL SUPPLY PREVENTION

ESPACE IV PH2	SYSTEMS	BASE	SPECIAL FUNCTIONS
ESPACE IV PHZ	2121 EIVI2	FUNCTIONS	SPECIAL FUNCTIONS
		v,C,D,A	HIGH PRESSURE CIRCUIT LEAK TEST
			IGNITION COIL ADAPTIVE
			INJECTOR ADAPTIVES
			LOCK INJECTOR CONTROL
			OIL CHANGE INTERVAL (OCS): DILUTION
			PARAMETRAGE PRIVE 237
			PARAMETRAGE PRIVE 238
			PARAMETRAGE PRIVE 239
			PARAMETRAGE PRIVE 240
			PARTICLE FILTER ADAPTIVES
			PARTICLE FILTER RELATIVE PRESSURE SENSOR
			PINKING SENSOR PROGRAMMING
			PRESSURE REGULATION ADAPTIVES
			PROGRAMMED VALUES
			PROGRAMMING REINITIALISATION
			PROGRAMMING THROTTLE LIMITS
			RAIL PRESSURE SENSOR ADAPTIVES
			RICHNESS REGULATION PROGRAMMING
			SPEED LIMITER
			STOP FUEL SUPPLY PREVENTION
			UNLOCK INJECTOR CONTROL
			WRITE V.I.N.
			AUTO STOP LIGHTS ILLUMINATION AUTHORISATION
			BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
			CHECK TARGET TEETH
			ESP AUTOMATIC RECONNECTION THRESHOLD
			FAULT MEMORY
	ABS	V,C,D,A,	PREVENTION OF STOP LIGHT AUTO ILLUMINATION
			SPEEDO INDEX
			VEHICLE PARAMETERS
			WRITE DATE OF LAST AFTER SALES OPERATION
			WRITE VIN
,	AUTOMATIC GEARBOX		AUTO-ADAPTIVES
			FAULT MEMORY
			NOTE OIL WEAR COUNTER
		V,C,D,A,R	WRITE DATE OF LAST AFTER SALES OPERATION
			WRITE TRANSMISSION OIL CHANGE DATE
			WRITE VIN
,	исн	V,C,D,A,R	CHECKING A KEY
			FAULT MEMORY
			KEY ASSIGNMENT
			PROGRAMMING THE INJECTION IMMOBILISER CODE
			SPARE
			STORED ENERGY MANAGEMENT DATA
			UCH CONFIGURATION
			WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
KANGOO II	INSTRUMENT PANEL	V,C,D,A,R	ADAC CONFIGURATION ADAC DISPLAY TYPE ANALOGIC DISPLAY FUEL GAUGE CALIBRATION BACKUP OF INSTRUMENT PANEL DATA FOR INJECTION CALIBR. ENTRY LEV. INSTR. PANEL FUEL GAUGE CALIBR. MID/TOP RANGE INSTR. PANEL FUEL GAUGE CLOCK CRUISE CTRL/SPD LIMITER DISTANCE BEFORE NEXT OIL CHANGE CONFIGURATION DISTANCE UNITS DRIVE TYPE CONFIGURATION EXTERNAL TEMPERATURE FAULT MEMORY FREE SHIFT FUEL GAUGE CALIBRATION FUEL TYPE GEARBOX TYPE LANGUAGE CONFIGURATION LANGUAGE VERSION. LCD DISPLAY FUEL GAUGE CALIBRATION UIC CHANGE INTERVAL IN MONTHS OIL CHANGE INTERVAL IN MONTHS OIL CHANGE RANGE:CURRENT VALUE IN KM OIL CHANGE RANGE:CURRENT VALUE IN MONTHS OVERSPEED FUNCTION - ARABIA PERSONALISED OIL CHANGE FREQUENCY RESTART THE COMPUTER SEAT BELT WARNING MODULE TANK CAPACITY TRAJECTORY CONTROL UPDATE ODOMETER WRITE DATE OF LAST AFTER SALES OPERATION WRITEN OF INSTRUMENT PANEL DATA FOR INJECTION

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	AIRBAG/PRETENSIONERS	V,C,D,A	DRIVER'S FRONT AIRBAG DRIVER'S SEAT BUCKLE SENSOR FAULT MEMORY FRONT LEFT-HAND BUCKLE PRETENSIONER FRONT LEFT-HAND CHEST-LEVEL SIDE AIRBAG FRONT RIGHT-HAND CHEST-LEVEL SIDE AIRBAG FRONT RIGHT-HAND CHEST-LEVEL SIDE AIRBAG LEFT-HAND CURTAIN AIRBAG LEFT-HAND SIDE IMPACT SENSOR LOCK COMPUTER PASSENGER AIR BAG LOCKING MODE PASSENGER'S FRONT AIRBAG READING IMPACT CONTEXTS REAR LEFT-HAND INERTIA WHEEL REAR RIGHT-HAND INERTIA REEL RIGHT-HAND SIDE IMPACT SENSOR SIDE ON WHICH STEERING WHEEL FITTED UNLOCK COMPUTER
	VARIABLE P.A.S	V,C,D,A,R	WRITE VIN FAULT MEMORY MODE NUMBER STEERING WHEEL ANGLE SENSOR PROGRAMMING WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	UPC	V,C,D,A,R	FAULT MEMORY VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	AIRBAG/PRETENSIONERS	V,C,D,A,R	BODYWORK TYPE DRIVING TYPE FAULT MEMORY GEOGRAPHICAL ZONE HEATING RESISTOR TYPE WRITE VIN
	PARKING ASSISTANCE	V,C,D,A,R	BUZZER VOLUME FAULT MEMORY TONE ADJUSTMENT VEHICLE IDENTIFICATION WRITE VIN
	ADAPTATION UNIT	V,C,D,A,R	FAULT MEMORY
	MULTIMEDIA INTERFACE	V,C,D,A,R	FAULT MEMORY LIGHTING NAVIGATION RADIO VEHICLE CONFIGURATION WRITE VIN
	COMMUNICATIONS UNIT	V,C,D,A,R	ACTIVATION OF CONNECTIVITY SERVICES CONSTRUCTOR/MANUFACTURER DISTANCE UNITS ECU MEMORY FAULT MEMORY GSM ANTENNA SYSTEM CONFIGURATION WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	RADIO	V,C,D,A	CD CHANGER AND AUXILIARY INPUT COMP CONFIGURATION COMPUTER CALIBRATION AND OPERATION CONFIGURING THE MULTIMEDIA COMPUTER DISTANCE UNITS FAULT MEMORY TEST PARAMETERS WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	MULTIMED. CONNECTION	V,C,D,A,R	FAULT MEMORY SYSTEM CONFIGURATION WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	TELEMATIC CTRL UNIT	V,C,D,A,R	ACTIVATION OF CONNECTIVITY SERVICES COMP CONFIGURATION COMPUTER CONFIGURATION COMPUTER RESET FAULT MEMORY WRITE VIN
	AIRBAG/PRETENSIONERS	V,C,D,A	
TDAFIC	PETROL INJECTION	V,C,D,A,R	
TRAFIC	DIESEL INJECTION	V,C,D,A,R	
	ENGINE IMMOBILISER	V,C,D,A	
	AIRBAG/PRETENSIONERS	V,C,D,R	
TRAFIC II	INJECTION	V,C,D,A,R	AIR CONDITIONING DECREMENT IDLE SPEED EGR VALVE PROGRAMMING ENGINE PARAMETER ADAPTIVES ENTER INJECTOR CALIBRATION DATA ERASE OBD FAULT MEMORY FIRST VIN CODE ENTRY INCREMENT OF IDLE SPEED PROGRAMMING REINITIALISATION SAVE DATA FOR COMPUTER REPLACEMENT VAN FAST IDLE SPEED DECREASE VAN FAST IDLE SPEED INCREASE ENTER VIN CODE WITH AIR CONDITIONING WITH BOILER WITH POWER STEERING ELECTRIC PUMP UNIT WITH THERMOPLUNGERS WITHOUT AIR CONDITIONING WITHOUT BOILER WITHOUT FOWER STEERING ELECTRIC PUMP UNIT WITHOUT THERMOPLUNGERS WITHOUT HERMOPLUNGERS WITHOUT HERMOPLUNGERS WITHOUT HERMOPLUNGERS WITHOUT HERMOPLUNGERS WITHOUT HERMOPLUNGERS WITHOUT HERMOPLUNGERS WITHOUT DATA AFTER REPLACING COMPUTER WRITE DATA AFTER REPLACING COMPUTER
	AIRBAG/PRETENSIONERS	V,C,D,R	CONFIGURATION OF SYSTEM COMPONENTS IGNITERS IN SERIES CONFIGURATION LOCK COMPUTER SIDE ON WHICH STEERING WHEEL FITTED UNLOCK COMPUTER WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	AUTOMATIC GEARBOX	V,C,D,R	PROGRAM CLUTCH OPEN POSITION PROGRAMMING SELECTION / ENGAGING ZONES WRITE DATE NEW CLUTCH FITTED WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	AIRBAG/PRETENSIONERS	V,C,D,R	
	A.B.S	V,C,D,R	SPEEDO INDEX WRITE DATE OF LAST AFTER SALES OPERATION
	ENGINE IMMOBILISER	V,C,D,A,R	KEY PROGRAMMING
	INTERCONNECTION UNIT	V,C,D,A,R	AUTOMATIC RELOCKING
	HEATER	V,C,D,A,R	
	INJECTION	V,C,D,A	ADAPTIVES AFTER REGENERATING PARTICLE FILTER ADAPTIVES AFTER REPLACING CABIN FILTER AIR CONDITIONING AIR DAMPER VALVE PROGRAMMING AVERAGE AIR TEMPERATURE CABIN FILTER REGENERATION COMMERCIAL VEHICLE IDLE SPEED MODIFICATION CRUISE CONTROL/SPEED LIMITER PROGRAMMING DECREMENT IDLE SPEED ECU MEMORY EGR ADAPTIVES EGR VALVE PROGRAMMING ENGINE ADAPTIVES ENTER INJECTOR CODES EXHAUST AIR FLAP EXHAUST INJECTOR CIRCUIT FAST IDLE SPEED MODIFICATION FAULT MEMORY FLYWHEEL TARGET PROGRAMMING IDLE SPEED MODIFICATION HIGH PRESSURE FUEL CIRCUIT FAULT FINDING IDLE SPEED REFERENCE INCREMENT OF IDLE SPEED LOCK INJECTOR CONTROL OIL CHANGE INTERVAL (OCS): DILUTION PARTICLE FILTER RELATIVE PRESSURE SENSOR PREHEATER UNIT PROGRAMMING REINITIALISATION PROPORTIONAL RICHNESS SENSOR PROGRAMMING PUMP PRESSURE SESOR ADAPTIVES SPEED LIMITER STOP FUEL SUPPLY PREVENTION THERMOPLUNGERS UNLOCK INJECTOR CONTROL OIL CHANGE INTERVAL (PROGRAMMING PUMP PRESSURE SENSOR ADAPTIVES SPEED LIMITER STOP FUEL SUPPLY PREVENTION THERMOPLUNGERS UNLOCK INJECTOR CONTROL WITH SWIRL FLAP WRITE V.I.N.

ECDACE IV DUO	CVCTTAG	BASE	CDECIAL FUNCTIONS	
ESPACE IV PH2	SYSTEMS	FUNCTIONS	SPECIAL FUNCTIONS	
	AIRBAG/PRETENSIONERS	V,C,D,R	CONFIGURATION OF SYSTEM COMPONENTS FAULT MEMORY IGNITERS IN SERIES CONFIGURATION IGNITION MODULE CONFIGURATION LOCK COMPUTER READING IMPACT CONTEXTS SIDE ON WHICH STEERING WHEEL FITTED UNLOCK COMPUTER WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN	
	ABS	V,C,D,A,	BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS BLEEDING THE BRAKING SYSTEM CHECK TARGET TEETH ESP AUTOMATIC RECONNECTION THRESHOLD ESP SENSOR PROGRAMMING FAULT MEMORY LONGITUDINAL ACCELERATION SENSOR SPEEDO INDEX STEERING WHEEL ANGLE SENSOR VEH. SPEED AT INITIALISATION VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN	
TRAFIC II PH2/3	INSTRUMENT PANEL	V,C,D,A,R	ABS/ESP ADAC CONFIGURATION BACKUP OF INSTRUMENT PANEL DATA FOR INJECTION CLOCK COMPUTER INITIALISATION CRUISE CTRL/SPD LIMITER DISTANCE UNITS FAULT MEMORY FREE SHIFT FUEL GAUGE CALIBRATION FUEL TYPE GEARBOX TYPE LANGUAGE VERSION. OIL SERVICE AND ODOMETRY MILES - KM OVERSPEED ALARM PARTICLE FILTER PERSONALISED OIL CHANGE FREQUENCY SEAT BELT REMINDER BUZZER TACHOGRAPH TRAJECTORY CONTROL TYRES WRITE VIN WRITING OF INSTRUMENT PANEL DATA FOR INJECTION	

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	исн	V,C,D,A,R	AUTOMATIC LOCKING WHEN DRIVING DAYTIME RUNNING LIGHTS DEADLOCKING FAULT MEMORY HEATED REAR SCREEN INDICATOR LIGHT CIRCUIT INSTRUMENT PANEL TYPE KEY PROGRAMMING MULTIPLEXED NETWORK CONFIGURATION OVERSPEED FUNCTION - ARABIA REAR SCREEN DEMISTER SPARE WRITE VIN
	AIR CONDITIONING	V,C,D,A,R	COMPRESSOR FEEDBACK FAULT MEMORY VEHICLE TYPE WRITE VIN
	ADAPTATION UNIT	V,C,D,A,R	FAULT MEMORY
	PARKING ASSISTANCE	V,C,D,A,R	BUZZER VOLUME FAULT MEMORY TONE ADJUSTMENT VEHICLE IDENTIFICATION WRITE VIN
	AUTOMATIC GEARBOX	V,C,D,A,R	CLUTCH INITIAL CLOSED POSITION FAULT MEMORY FAULT/S MEMORISED PROGRAM CLUTCH OPEN POSITION PROGRAMMES SLIP POINT PROGRAMMING SELECTION/ENGAGING ZONES REINIT. EXTREME COLD REVERSE GEAR ENGAGEMENT WRITE CLUTCH INITIAL CLOSED POSITION WRITE DATE NEW CLUTCH FITTED WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	COMMUNICATIONS UNIT	V,C,D,A,R	ACTIVATION OF CONNECTIVITY SERVICES COMP CONFIGURATION CONSTRUCTOR/MANUFACTURER DISTANCE UNITS ECU MEMORY FAULT MEMORY GSM ANTENNA SYSTEM CONFIGURATION WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	HEATER	V,C,D,A,R	ERASE INCORRECT CRANKING COUNTER ERASE OVERHEATING COUNTER FAULT MEMORY
	RADIO	V,C,D,A,R	COMP CONFIGURATION CONFIGURING THE MULTIMEDIA COMPUTER FAULT MEMORY WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	MULTIMED. CONNECTION	V,C,D,A,R	FAULT MEMORY SYSTEM CONFIGURATION WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	MULTIMEDIA INTERFACE	V,C,D,A,R	FAULT MEMORY LIGHTING NAVIGATION RADIO VEHICLE CONFIGURATION VEHICLE IDENTIFIER WRITE VIN
	AIRBAG/PRETENSIONERS	V,C,D,A	
MASTER	INJECTION	V,C,D,A,R	AIR CONDITIONING DECREMENT IDLE SPEED EGR VALVE PROGRAMMING ENGINE PARAMETER ADAPTIVES ENTER INJECTOR CALIBRATION DATA INCREMENT OF IDLE SPEED POWER ASSISTED STEERING POWER STEERING ELECTRIC PUMP UNIT SAVE DATA FOR COMPUTER REPLACEMENT THERMOPLUNGERS WITH AIR CON / WITHOUT HEATED WINDSCREEN WITH AIR CONDITIONING WITH AIR CONDITIONING / WITH HEATED WINDSCREEN WITH BOILER WITH CRUISE CONTROL WITH POWER STEERING ELECTRIC PUMP UNIT WITH SWIRL FLAP WITH THERMOPLUNGERS WITHOUT AIR CON / WITH HEATED WINDSCREEN WITHOUT AIR CON / WITHOUT HEATED WINDSCREEN WITHOUT AIR CON DITIONING WITHOUT BOILER WITHOUT FOWER STEERING ELECTRIC PUMP UNIT WITHOUT POWER STEERING ELECTRIC PUMP UNIT WITHOUT FOWER STEERING ELECTRIC PUMP UNIT WITHOUT SWIRL FLAP WITHOUT THERMOPLUNGERS WRITE DATA AFTER REPLACING COMPUTER WRITE DATA AFTER REPLACING COMPUTER
	AIRBAG/PRETENSIONERS	V,C,D,A	
	A.B.S	V,C,D,A	WRITE DATE OF LAST AFTER SALES OPERATION
	AIRBAG/PRETENSIONERS	V,C,D,A	

		BASE	
ESPACE IV PH2	SYSTEMS	FUNCTIONS	SPECIAL FUNCTIONS
	исн	V,C,D,A	AUTO LOCKING WHEN DRIVING FUNCTION PREVENTION CODED DIESEL SOLENOID VALVE ENGINE IMMOBILISER DIESEL/PETROL ENG IMMOB WITHOUT CODED SOL VALVE ONE-TOUCH CENTRAL DOOR LOCKING BUTTON PROGRAMMING WITH 1 KEY PROGRAMMING WITH 2 KEYS RAID FUNCTION AUTHORISATION ROCKER CENTRAL DOOR LOCKING BUTTON WITH AUTOMATIC RE-LOCKING WITH HAZARD LIGHTS UPON IMPACT WITH INFRA-RED REMOTE CONTROL WITH OVERSPEED WARNING WITH RUNNING LIGHTS WITH TIMED COURTESY LIGHT WITH VARIABLE W'SCREEN WIPER INTERMITTENT WITHOUT AUTOMATIC RE-LOCKING WITHOUT AUTOMATIC RE-LOCKING WITHOUT HAZARD LIGHTS UPON IMPACT WITHOUT RUNNING LIGHTS WITHOUT TIMED COURTESY LIGHT
	AUTOMATIC GEARBOX	V,C,D,A	William Value and Carlotte and
	PILOTED SUSPENSION	V,C,D,A,R	WRITE DATE OF AFTER SALES OPERATION
	INJECTION	V,C,D,A	ADAPTIVES ON EGR VALVE FAULT AIR CONDITIONING DECREMENT IDLE SPEED EGR VALVE PROGRAMMING ENGINE PARAMETER ADAPTIVES ENTER INJECTOR CALIBRATION DATA FUEL SUPPLY PREVENTION INCREMENT OF IDLE SPEED PASSENGER COMPARTMENT HEATING RESISTOR SAVE DATA FOR COMPUTER REPLACEMENT VAN FAST IDLE SPEED DECREASE VAN FAST IDLE SPEED INCREASE WRITE DATA AFTER REPLACING COMPUTER WRITE DATA AFTER REPLACING COMPUTER WRITE DATA AFTER REPLACING COMPUTER
	A.B.S	V,C,D,R	WRITE DATE OF LAST AFTER SALES OPERATION SPEEDO INDEX
MASTER PH 2	INTERCONNECTION UNIT	V,C,D,A,R	AUTOMATIC RELOCKING CRUISE CONTROL/SPEED LIMITER
	ENGINE IMMOBILISER	V,C,D,A,R	KEY PROGRAMMING
	AUTOMATIC GEARBOX	V,C,D,A,R	PROGRAM CLUTCH OPEN POSITION PROGRAMMING SELECTION / ENGAGING ZONES WRITE DATE NEW CLUTCH FITTED WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	PILOTED SUSPENSION	V,C,D,A,R	WRITE DATE OF AFTER SALES OPERATION
	PILOTED SUSPENSION	V,C,D,A,R	BUZZER VOLUME TONE ADJUSTMENT VEHICLE IDENTIFICATION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	AIRBAG/PRETENSIONERS	V,C,D,A,R	CONFIGURATION OF SYSTEM COMPONENTS IGNITION MODULE CONFIGURATION LOCK COMPUTER UNLOCK COMPUTER WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	INJECTION	V,C,D,A,R	
	AIRBAG/PRETENSIONERS	V,C,D,	
MASTER RWD	исн	V,C,D,A,	AUTO LOCKING WHEN DRIVING FUNCTION PREVENTION CODED DIESEL SOLENOID VALVE ENGINE IMMOBILISER DIESEL/PETROL ENG IMMOB WITHOUT CODED SOL VALVE ONE-TOUCH CENTRAL DOOR LOCKING BUTTON PROGRAMMING WITH 1 KEY PROGRAMMING WITH 2 KEYS RAID FUNCTION AUTHORISATION ROCKER CENTRAL DOOR LOCKING BUTTON WITH AUTOMATIC RE-LOCKING WITH HAZARD LIGHTS UPON IMPACT WITH INFRA-RED REMOTE CONTROL WITH OVERSPEED WARNING WITH RUNNING LIGHTS WITH TIMED COURTESY LIGHT WITH VARIABLE W'SCREEN WIPER INTERMITTENT WITHOUT AUTOMATIC RE-LOCKING WITHOUT HAZARD LIGHTS UPON IMPACT WITHOUT AUTOMATIC RE-LOCKING WITHOUT TOVERSPEED WARNING WITHOUT TUNNING LIGHTS WITHOUT TIMED COURTESY LIGHT WITHOUT TIMED COURTESY LIGHT
	INJECTION	V,C,D,A,R	ENTER INJECTOR CODES FAULT MEMORY FUEL SUPPLY PREVENTION PROGRAMMED VALUES PROGRAMMING REINITIALISATION STOP FUEL SUPPLY PREVENTION WRITE V.I.N.
	COMMUNICATIONS UNIT	V,C,D,A,R	COMP CONFIGURATION FAULT MEMORY WRITE VIN
	исн	V,C,D,A,R	DAYTIME RUNNING LIGHTS FAULT MEMORY INSTRUMENT PANEL TYPE KEY PROGRAMMING SPARE WRITE VIN
MASTER RWD PH3	AIRBAG/PRETENSIONERS ADAPTATION UNIT	V,C,D,A,R V,C,D,A,R	CONFIGURATION OF SYSTEM COMPONENTS FAULT MEMORY IGNITION MODULE CONFIGURATION LOCK COMPUTER READING IMPACT CONTEXTS UNLOCK COMPUTER WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN FAULT MEMORY

	I	BASE	I
ESPACE IV PH2	SYSTEMS	FUNCTIONS	SPECIAL FUNCTIONS
	A.B.S	V,C,D,A,R	BLEEDING THE BRAKING SYSTEM CHECK TARGET TEETH FAULT MEMORY SPEEDO INDEX VEHICLE PARAMETERS
			WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	INJECTION	V,C,D,A,R	AIR CONDITIONING BOILER CABIN FILTER REGENERATION COMMERCIAL VEHICLE IDLE SPEED MODIFICATION DECREMENT IDLE SPEED ECU MEMORY EGR PROGRAMMING ENGINE ADAPTIVES ENTER INJECTOR CODES FAULT MEMORY FUEL SUPPLY PREVENTION HIGH PRESSURE FUEL CIRCUIT FAULT FINDING INCREMENT OF IDLE SPEED OIL CHANGE INTERVAL (OCS): DILUTION PROGRAMMING REINITIALISATION PUMP PRESSURE REGULATOR TYPE SPEED LIMITER STOP FUEL SUPPLY PREVENTION THERMOPLUNGERS VAN FAST IDLE SPEED DECREASE VAN FAST IDLE SPEED DECREASE WRITE V.I.N.
	A.B.S	V,C,D,A,R	BLEEDING THE BRAKING SYSTEM FAULT MEMORY SPEEDO INDEX STEERING WHEEL ANGLE SENSOR VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION
	исн	V,C,D,A,R	DAYTIME RUNNING LIGHTS FAULT MEMORY INSTRUMENT PANEL TYPE KEY PROGRAMMING SPARE WRITE VIN
MASTER PH3	PARKING ASSISTANCE	V,C,D,A,R	BUZZER VOLUME FAULT MEMORY TONE ADJUSTMENT VEHICLE IDENTIFICATION WRITE VIN

		BASE	T
ESPACE IV PH2	SYSTEMS	FUNCTIONS	SPECIAL FUNCTIONS
	AUTOMATIC GEARBOX	V,C,D,A	CLUTCH INITIAL CLOSED POSITION FAULT/S MEMORISED PROGRAM CLUTCH OPEN POSITION PROGRAMMES SLIP POINT PROGRAMMED VALUES PROGRAMMING SELECTION/ENGAGING ZONES REINIT. EXTREME COLD REVERSE GEAR ENGAGEMENT WRITE CLUTCH INITIAL CLOSED POSITION WRITE DATE NEW CLUTCH FITTED WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	COMMUNICATIONS UNIT	V,C,D,A,R	COMP CONFIGURATION FAULT MEMORY WRITE VIN
	PILOTED SUSPENSION	V,C,D,A,R	FAULT MEMORY PROGRAMME PNEUMATIC SUSPENSION
	ADAPTATION UNIT	V,C,D,A,R	FAULT MEMORY
	TRACKER	V,C,D,A,R	ALARM EXTERN GPS ANTENNA FAULT MEMORY SVT CONFIGURATION TIMED + BATT WRITE V.I.N.
	AIRBAG/PRETENSIONERS	V,C,D,A,R	CONFIGURATION OF SYSTEM COMPONENTS FAULT MEMORY IGNITION MODULE CONFIGURATION LOCK COMPUTER READING IMPACT CONTEXTS UNLOCK COMPUTER WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	INJECTION		ADAPTIVES AFTER REGENERATING PARTICLE FILTER ADAPTIVES AFTER REPLACING CABIN FILTER ADAPTIVES ON AIR INTAKE FLAP FAULT AIR DAMPER VALVE PROGRAMMING AIR FLOWMETER PROGRAMMING AIR FLOWMETER PROGRAMMING AVERAGE AIR TEMPERATURE CABIN FILTER REGENERATION CRUISE CONTROL/SPEED LIMITER PROGRAMMING CYLINDER 1 INJECTOR CODE CYLINDER 2 INJECTOR CODE CYLINDER 3 INJECTOR CODE CYLINDER 4 INJECTOR CODE CYLINDER 4 INJECTOR CODE CYLINDER 5 INJECTOR CODE CYLINDER 6 INJECTOR CODE CYLINDER 7 INJECTOR CODE EGR BYPASS PROGRAMMING EGR PROGRAMMING EGR PROGRAMMING

ESPACE IV PH2	SYSTEMS	BASE	SPECIAL FUNCTIONS
ESTACE IVIIIE	31312.03	FUNCTIONS	
			ENGINE ADAPTIVES
			ENTER INJECTOR CODES
			EXHAUST INJECTOR CIRCUIT
			FAST IDLE SPEED MODIFICATION
		V,C,D,A,R	FAULT MEMORY
			FLYWHEEL TARGET PROGRAMMING
			FUEL PUMP PROGRAMMING
			FUEL SUPPLY PREVENTION
			HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
			INJECTION PUMP ADAPTATIVES
			MANIFOLD PRESSURE SENSOR PROGRAMMING
			NUMBER OF STARTING 1
			NUMBER OF STARTING 2
			NUMBER OF STARTING 3
			NUMBER OF STARTING 4
			NUMBER OF STARTING CYCLES
			OIL CHANGE INTERVAL (OCS): DILUTION
			PARTICLE FILTER RELATIVE PRESSURE SENSOR
			PREHEATER UNIT
			PRESSURE REGULATION ADAPTIVES
			PROPORTIONAL RICHNESS SENSOR PROGRAMMING
			RAIL PRESSURE SENSOR ADAPTIVES
			SPEED LIMITER
			TURBOCHARGER PROGRAMMING
			WRITE V.I.N.
			BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
			CHECK TARGET TEETH
	A.B.S	V,C,D,A,R	FAULT MEMORY
	A.B.3	V,C,D,A,N	SPEEDO INDEX
			WRITE DATE OF LAST AFTER SALES OPERATION
			WRITE VIN
			ADAC DISPLAY TYPE
			BACKUP OF INSTRUMENT PANEL DATA FOR INJECTION
			DISTANCE UNITS
			FAULT MEMORY
			FUEL TYPE
			LANGUAGE VERSION.
			OIL CHANGE INTERVAL IN KM
			OIL CHANGE INTERVAL IN MONTHS
			OIL CHANGE RANGE:CURRENT VALUE IN KM
			OIL CHANGE RANGE:CURRENT VALUE IN MONTHS
	INSTRUMENT PANEL	V,C,D,A,R	OIL SERVICE AND ODOMETRY MILES - KM
			OIL SERVICE INTERVAL IN DAYS
			OVERSPEED ALARM
			PARAMETRAGE PRIVE 1
			PERSONALISED OIL CHANGE FREQUENCY
			RESTART THE COMPUTER
			SEAT BELT WARNING MODULE
			TYRE PRESSURE MONITOR FUNCTION
			UPDATE ODOMETER
			WRITE VIN
	Ī	1	WRITING OF INSTRUMENT PANEL DATA FOR INJECTION

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	исн	V,C,D,A,R	CHECKING A KEY FAULT MEMORY KEY ASSIGNMENT PROGRAMMING THE INJECTION IMMOBILISER CODE SPARE STORED ENERGY MANAGEMENT DATA TIMED LIGHTING SUPPLY UCH CONFIGURATION WRITE V.I.N.
MASTER III	AIRBAG/PRETENSIONERS	V,C,D,A,R	CONFIGURATION OF SYSTEM COMPONENTS FAULT MEMORY LOCK COMPUTE PASSENGER AIR BAG LOCKING MODE READING IMPACT CONTEXTS SIDE ON WHICH STEERING WHEEL FITTED UNLOCK COMPUTER WRITE VIN
	AIR CONDITIONING	V,C,D,A,R	COMPUTER REINITIALISATION FAULT MEMORY WRITE VIN
	AUTOMATIC GEARBOX	V,C,D,A	CLUTCH INITIAL CLOSED POSITION FAULT MEMORY MEMORISATION OF SPEEDS PROGRAM CLUTCH OPEN POSITION PROGRAMME SLIP POINT PROGRAMMED VALUES PROGRAMMING SELECTION/ENGAGING ZONES WRITE CLUTCH INITIAL CLOSED POSITION WRITE DATE NEW CLUTCH FITTED WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	PARKING ASSISTANCE	V,C,D,A,R	BUZZER VOLUME CARAVAN TOWING DISTANCE FAULT MEMORY TONE ADJUSTMENT WRITE VIN
	RADIO	V,C,D,A,R	COUNTRY MODEL EMERGENCY CALL NUMBER EXTERNAL COMPONENTS FAULT MEMORY LANGUAGE PARAMETRAGE PRIVE 1 REAR LOUD SPEAKER RESET RADIO SYSTEM CONFIGURATION WRITE DATE OF AFTER SALES OPERATION WRITE DATE OF AFTER SALES OPERATION
	LIGHTING	V,C,D,A,R	WRITE VIN FAULT MEMORY
	TELEMATIC CTRL UNIT	V,C,D,A,R	ACTIVATION OF CONNECTIVITY SERVICES COMPUTER RESET FAULT MEMORY WRITE VIN
	ADAPTATION UNIT	V,C,D	FAULT MEMORY

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	COMMUNICATIONS UNIT	V,C,D,A,R	ACTIVATION OF CONNECTIVITY SERVICES COUNTRY MODEL DISTANCE UNITS FAULT MEMORY LANGUAGE REVERSING CAMERA CALIBRATION TYRE PRESSURE UNITS WRITE DATE OF LAST AFTER SALES OPERATION WURTE VIN
	TRACKER	V,C,D,A,R	FAULT MEMORY SVT CONFIGURATION WRITE V.I.N.
	MULTIMED. CONNECTION	V,C,D,A,R	ECU MEMORY FAULT MEMORY WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	MULTIMEDIA INTERFACE	V,C,D,A,R	FAULT MEMORY HOUR SETTING TEMPERATURE DISPLAY TIME FORMAT WRITE VIN
	HANDS-FREE ACCESS	V,C,D,A,R	EXTERNAL BOOT AERIAL TEST FAULT MEMORY FRONT LEFT-HAND EXTERNAL AERIAL TEST FRONT RIGHT-HAND EXTERNAL AERIAL TEST HANDS-FREE CARD READING HANDS-FREE CARDS LOW BATTERY COUNTER INTERIOR AERIAL 1 TEST INTERIOR AERIAL 2 TEST PROGRAMMING THE HANDS-FREE CARD WRITE VIN
	UPC	V,C,D,A	EXTERNAL BOOT AERIAL TEST FAULT MEMORY FRONT LEFT-HAND EXTERNAL AERIAL TEST FRONT RIGHT-HAND EXTERNAL AERIAL TEST HANDS-FREE CARD READING HANDS-FREE CARD SLOW BATTERY COUNTER INTERIOR AERIAL 1 TEST INTERIOR AERIAL 2 TEST PROGRAMMING THE HANDS-FREE CARD WRITE VIN
	INTERCONNECTION UNIT	V,C,D,A,	
MASCOTT	AIRBAG/PRETENSIONERS	V,C,D,	
	ENGINE IMMOBILISER	V,C,D,A,	
	ENGINE IMMOBILISER	V,C,D,A,	
SPIDER	AIRBAG/PRETENSIONERS	V,C,D,	
	PETROL INJECTION	V,C,D,A,	
SUPER 5	PETROL INJECTION	V,C,D,A,R	
	AIRBAG/PRETENSIONERS	V,C,D,	
EXTRA	ENGINE IMMOBILISER	V,C,D,A	
LATINA	PETROL INJECTION	V,C,D,A,R	
	AUTOMATIC GEARBOX	V,C,D,A	
	ENGINE IMMOBILISER	V,C,D,A	

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
D40	AUTOMATIC GEARBOX	V,C,D,A	
R19	PETROL INJECTION	V,C,D,A,R	
	A.B.S	V,C,D	
R21/SAVANNA	PETROL INJECTION	V,C,D,A,R	
R25	PETROL INJECTION	V,C,D,A,R	
ALPINE	PETROL INJECTION	V.C.D.A.R	
	AIRBAG/PRETENSIONERS	DRIVEF DRIVEF DRIVEF FAULT FRONT FRONT FRONT IMPAC S V,C,D,A,R LOCK C PASS A PASSEN PASSEN PASSEN READIN SEAT B SIDE O	CONFIGURATION OF SYSTEM COMPONENTS DRIVER'S FRONT AIRBAG DRIVER'S FRONT SIDE IMPACT SENSOR DRIVER'S SEAT BUCKLE SENSOR FAULT MEMORY FRONT LEFT-HAND INERTIA WHEEL FRONT RIGHT-HAND INERTIA WHEEL FRONT THORAX SIDE AIR BAG, DRIVER SIDE FRONT THORAX SIDE AIR BAG, PASSENGER SIDE IMPACT INFORMATION CONNECTION LOCK COMPUTER PASS AIRBAG DEACTIVATION WARNING LIGHT PASSENGER AIR BAG LOCKING MODE PASSENGER'S FRONT AIRBAG PASSENGER'S FRONT BUCKLE PRETENSIONER
	INJECTION		ADAPTIVES AFTER REGENERATING PARTICLE FILTER ADAPTIVES AFTER REPLACING CABIN FILTER AIR DAMPER VALVE PROGRAMMING AIR PATH PROGRAMMING ALCOHOL LEVEL PROG. CABIN FILTER REGENERATION CAMSHAFT SENSOR PROGRAMMING COMMERCIAL VEHICLE IDLE SPEED MODIFICATION CRUISE CONTROL/SPEED LIMITER PROGRAMMING CYLINDER 1 INJECTOR CODE CYLINDER 2 INJECTOR CODE CYLINDER 3 INJECTOR CODE CYLINDER 3 INJECTOR CODE EGR ADAPTIVES

BASI			
ESPACE IV PH2	SYSTEMS	FUNCTIONS	SPECIAL FUNCTIONS
		Tonenons	EGR VALVE PROGRAMMING
			ENGINE ADAPTIVES
			ENTER INJECTOR CODES
			EXHAUST INJECTOR CIRCUIT
			FAULT MEMORY
		V,C,D,A,R	FLYWHEEL TARGET PROGRAMMING
		v,c,b,r,r	FUEL FLOW REGULATOR
			FUEL SUPPLY PREVENTION
			INJECTOR ADAPTIVES
			LOCK INJECTOR CONTROL
			OIL CHANGE INTERVAL (OCS): DILUTION
			PARAMETRAGE PRIVE 237
			PARAMETRAGE PRIVE 238
			PARAMETRAGE PRIVE 239
			PARAMETRAGE PRIVE 239 PARAMETRAGE PRIVE 240
			PARTICLE FILTER RELATIVE PRESSURE SENSOR
			PRESSURE REGULATION ADAPTIVES
			PROGRAMMED VALUES
			PROGRAMMING REINITIALISATION
			PROGRAMMING THROTTLE LIMITS
			RAIL PRESSURE SENSOR ADAPTIVES
			RICHNESS REGULATION PROGRAMMING
			SPEED LIMITER
			STOP FUEL SUPPLY PREVENTION
			WRITE VIN BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS
			CHECK TARGET TEETH
	A D C	VCDAD	FAULT MEMORY
	A.B.S	V,C,D,A,R	SPEEDO INDEX
			VEHICLE PARAMETERS
			WRITE DATE OF LAST AFTER SALES OPERATION
			WRITE VIN
			COMPUTER CALIBRATION
	VARIABLE P.A.S	V,C,D,A,R	FAULT MEMORY
			WRITE DATE OF AFTER SALES OPERATION
			WRITE VIN
	RADIO	VCDAB	COMP CONFIGURATION
	NADIO	V,C,D,A,R	FAULT MEMORY
		 	WRITE DATE OF AFTER SALES OPERATION FAULT MEMORY
	GAS INJ.	V,C,D,A,R	
		ł	WRITE VIN
			FAULT MEMORY
			FLASHING BUZZER
			KEY ASSIGNMENT
		V,C,D,A,R	SDO SDADE
	UCH		SPARE
			TYPE N2
			TYPE N3
			TYPE N4
			TYPE N5
1			WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	TRACKER	V,C,D,A,R	ALARM EXTERN GPS ANTENNA FAULT MEMORY SVT CONFIGURATION TIMED + BATT WRITE V.I.N.
LOGAN	AUTOMATIC GEARBOX	V,C,D,A,R	AUTO-ADAPTIVES FAULT MEMORY NOTE OIL WEAR COUNTER WRITE DATE OF LAST AFTER SALES OPERATION WRITE TRANSMISSION OIL CHANGE DATE WRITE VIN
LOGAN	INJECTION	V,C,D,A,R	ADAPTIVES AFTER REGENERATING PARTICLE FILTER ADAPTIVES AFTER REPLACING CABIN FILTER AIR DAMPER VALVE PROGRAMMING AIR PATH PROGRAMMING ALCOHOL LEVEL PROG. CABIN FILTER REGENERATION CAMSHAFT SENSOR PROGRAMMING COMMERCIAL VEHICLE IDLE SPEED MODIFICATION CRUISE CONTROL/SPEED LIMITER PROGRAMMING CYLINDER 1 INJECTOR CODE CYLINDER 2 INJECTOR CODE CYLINDER 3 INJECTOR CODE CYLINDER 4 INJECTOR CODE EGR ADAPTIVES EGR VALVE PROGRAMMING ENGINE ADAPTIVES ENTER INJECTOR CODES EXHAUST INJECTOR CICCUIT FAULT MEMORY FLYWHEEL TARGET PROGRAMMING FUEL FLOW REGULATOR FUEL SUPPLY PREVENTION INJECTOR ADAPTIVES LOCK INJECTOR CONTROL OIL CHANGE INTERVAL (OCS): DILUTION PARAMETRAGE PRIVE 237 PARAMETRAGE PRIVE 238 PARAMETRAGE PRIVE 239 PARAMETRAGE PRIVE 240 PARTICLE FILTER RELATIVE PRESSURE SENSOR PRESSURE REGULATION ADAPTIVES PROGRAMMING THROTTLE LIMITS RAIL PRESSURE SENSOR ADAPTIVES RICHNESS REGULATION PROGRAMMING SPEED LIMITER STOP FUEL SUPPLY PREVENTION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	A.B.S	V,C,D,A,R	BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS CHECK TARGET TEETH FAULT MEMORY SPEEDO INDEX VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	VARIABLE P.A.S	V,C,D,A,R	COMPUTER CALIBRATION FAULT MEMORY WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	исн	V,C,D,A,R	FAULT MEMORY FLASHING BUZZER KEY ASSIGNMENT SDO SPARE TYPE N2 TYPE N3 TYPE N4 TYPE N4 TYPE N5 WRITE VIN
	RADIO	V,C,D,A,R	COMP CONFIGURATION FAULT MEMORY WRITE DATE OF AFTER SALES OPERATION
	AIRBAG/PRETENSIONERS	V,C,D,A,R	CONFIGURATION OF SYSTEM COMPONENTS DRIVER'S FRONT AIRBAG DRIVER'S FRONT BUCKLE PRETENSIONER DRIVER'S FRONT SIDE IMPACT SENSOR DRIVER'S SEAT BUCKLE SENSOR FAULT MEMORY FRONT LEFT-HAND INERTIA WHEEL FRONT THORAX SIDE AIR BAG, DRIVER SIDE FRONT THORAX SIDE AIR BAG, DRIVER SIDE FRONT THORAX SIDE AIR BAG, PASSENGER SIDE IMPACT INFORMATION CONNECTION LOCK COMPUTER PASS AIRBAG DEACTIVATION WARNING LIGHT PASSENGER'S FRONT AIRBAG PASSENGER'S FRONT BUCKLE PRETENSIONER PASSENGER'S FRONT BUCKLE PRETENSIONER READING IMPACT CONTEXTS SEAT BELT REMINDER BUZZER SIDE ON WHICH STEERING WHEEL FITTED UNLOCK COMPUTER WRITE VIN
	GAS INJ.	V,C,D,A,R	FAULT MEMORY WRITE VIN
	TRACKER	V,C,D,A,R	ALARM EXTERN GPS ANTENNA FAULT MEMORY SVT CONFIGURATION TIMED + BATT WRITE V.I.N.

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	AUTOMATIC GEARBOX	V,C,D,A,R	AUTO-ADAPTIVES FAULT MEMORY NOTE OIL WEAR COUNTER WRITE DATE OF LAST AFTER SALES OPERATION WRITE TRANSMISSION OIL CHANGE DATE WRITE VIN
	INJECTION	V,C,D,A,R	ADAPTIVES AFTER REGENERATING PARTICLE FILTER ADAPTIVES AFTER REPLACING CABIN FILTER AIR DAMPER VALVE PROGRAMMING AIR PATH PROGRAMMING ALCOHOL LEVEL PROG. CABIN FILTER REGENERATION CAMSHAFT SENSOR PROGRAMMING COMMERCIAL VEHICLE IDLE SPEED MODIFICATION CRUISE CONTROL/SPEED LIMITER PROGRAMMING CYLINDER 1 INJECTOR CODE CYLINDER 2 INJECTOR CODE CYLINDER 3 INJECTOR CODE CYLINDER 3 INJECTOR CODE CYLINDER 4 INJECTOR CODE CYLINDER 4 INJECTOR CODE EGR ADAPTIVES EGR VALVE PROGRAMMING ENGINE ADAPTIVES ENTER INJECTOR CODES EXHAUST INJECTOR CODE EXHAUST INJECTOR C
	A.B.S	V,C,D,A,R	BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS CHECK TARGET TEETH FAULT MEMORY SENSOR OFFSETS SPEEDO INDEX VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	исн	V,C,D,A,R	FAULT MEMORY FLASHING BUZZER KEY ASSIGNMENT SDO SPARE
DUSTER	VARIABLE P.A.S	V,C,D,R	WRITE VIN COMPUTER CALIBRATION FAULT MEMORY WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	AUTOMATIC GEARBOX	V,C,D,A	AUTO-ADAPTIVES FAULT MEMORY NOTE OIL WEAR COUNTER WRITE DATE OLAST AFTER SALES OPERATION WRITE TRANSMISSION OIL CHANGE DATE WRITE VIN
	RADIO	V,C,D,A,R	COMP CONFIGURATION COUNTRY MODEL FAULT MEMORY LANGUAGE WRITE DATE OF AFTER SALES OPERATION WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	TRACKER	V,C,D,R	ALARM EXTERN GPS ANTENNA FAULT MEMORY SVT CONFIGURATION TIMED + BATT WRITE V.I.N.
	AIRBAG/PRETENSIONERS	V,C,D,R	DRIVER'S FRONT AIRBAG DRIVER'S FRONT SIDE IMPACT SENSOR DRIVER'S SEAT BUCKLE SENSOR FAULT MEMORY FRONT THORAX SIDE AIR BAG, DRIVER SIDE FRONT THORAX SIDE AIR BAG, PASSENGER SIDE IMPACT INFORMATION CONNECTION LOCK COMPUTER PASS AIRBAG DEACTIVATION WARNING LIGHT PASSENGER AIR BAG LOCKING MODE PASSENGER PRESENCE DETECTION SENSOR PASSENGER'S FRONT INERTIA REEL PASSENGER'S FRONT SIDE IMPACT SENSOR PASSENGER'S SEAT BUCKLE SENSOR READING IMPACT CONTEXTS SEAT BELT REMINDER BUZZER SIDE ON WHICH STEERING WHEEL FITTED UNLOCK COMPUTER WRITE VIN

			NOTE:FOR REFERENCE ONLY)
ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	4 WHEELS DRIVE	V,C,D	CHECK TARGET TEETH COMPUTER INITIALISATION FAULT MEMORY GEARBOX TYPE MODIFICATION OF PARAMETERS AFTER INITIALISATION SPEEDO INDEX VEHICLE PARAMETERS VEHICLE TYPE WRITE VIN
	INJECTION	V,C,D,A,R	ADAPTIVES AFTER REGENERATING PARTICLE FILTER ADAPTIVES ON AIR INTAKE FLAP FAULT AIR DAMPER VALVE PROGRAMMING AIR FLOWMETER PROGRAMMING AIR FLOWMETER PROGRAMMING AIR PATH PROGRAMMING ALCOHOL LEVEL PROG. BOOST PRESSURE SENSOR PROGRAMMING CABIN FILTER REGENERATION CAMSHAFT SENSOR PROGRAMMING CATALYTIC CONVERTER CRUISE CONTROL/SPEED LIMITER PROGRAMMING CYLINDER 1 INJECTOR CODE CYLINDER 2 INJECTOR CODE CYLINDER 3 INJECTOR CODE CYLINDER 4 INJECTOR CODE CYLINDER 4 INJECTOR CODE EGR VALVE PROGRAMMING ENGINE ADAPTIVES ENTER INJECTOR CODES EXHAUST AIR FLAP EXHAUST INJECTOR CIRCUIT FAULT MEMORY FLYWHEEL TARGET PROGRAMMING FUEL FLOW REGULATOR FUEL FLOW REGULATOR FUEL PUMP PROGRAMMING FUEL SUPPLY PREVENTION HIGH PRESSURE FUEL CIRCUIT FAULT FINDING IGNITION COIL ADAPTIVE INJECTOR ADAPTIVES NO. 2 INJECTOR ADAPTIVES NO. 3 INJECTOR ADAPTIVES NO. 4 LOW PRESSURE FER VALVE PROGRAMMING NUMBER OF STARTING 1 NUMBER OF STARTING 2 NUMBER OF STARTING 2 NUMBER OF STARTING 4 NUMBER OF STARTING 4 NUMBER OF STARTING 4 NUMBER OF STARTING CYCLES

ESPACE IV PH2	SYSTEMS	BASE	SPECIAL FUNCTIONS
LSI ACE IVI IIZ	313121413	FUNCTIONS	SI ECIAE I ONCTIONS
			OIL CHANGE INTERVAL (OCS): DILUTION
			PARAMETRAGE PRIVE 98
			PARTICLE FILTER PRESSURE DIFF. SENSOR
			PARTICLE FILTER RELATIVE PRESSURE SENSOR
			PINKING SENSOR PROGRAMMING
			PRESSURE REGULATION ADAPTIVES
			PROGRAMMED VALUES
			PROGRAMMING THROTTLE LIMITS
			PROPORTIONAL RICHNESS SENSOR PROGRAMMING
			RAIL PRESSURE SENSOR ADAPTIVES
			RICHNESS REGULATION PROGRAMMING
			SWIRL FLAP
			SWIRL FLAP PROGRAMMING
			TURBOCHARGER PROGRAMMING
			WRITE V.I.N.
			BRAKE PRESSURE OFFSET SENSOR
			CHECK TARGET TEETH
			FAULT MEMORY
			HILL START
		V,C,D,A,R	LONGITUDINAL ACCELERATION SENSOR OFFSET
	A.B.S		SPEEDO INDEX
			STEERING WHEEL ANGLE OFFSET SENSOR
			TRANSVERSE ACCELERATION OFFSET SENSOR
			WRITE DATE OF LAST AFTER SALES OPERATION
			WRITE VIN
			ADAC DISPLAY TYPE
			AUTOMATIC CONFIGURATION
			BACKUP OF INSTRUMENT PANEL DATA FOR INJECTION
			COMPUTER INITIALISATION
			CONSUMPTION MEASUREMENT UNITS CRUISE CTRL/SPD LIMITER
			DISTANCE BEFORE NEXT MAINTENANCE
			DISTANCE BEFORE NEXT OIL CHANGE
			DISTANCE UNITS
			EEPROM MEMORY WRITE PROCEDURE
			FAULT MEMORY
	INSTRUMENT PANEL	V,C,D,A,R	GEARBOX TYPE
	1,9,2,1		LANGUAGE VERSION.
			MAINTENANCE AUTONOMY INTERVAL
			OIL CHANGE FREQUENCY
			OIL CHANGE RANGE:CURRENT VALUE IN KM
			OVERSPEED ALARM
			PARAMETRAGE PRIVE 1
			TRAJECTORY CONTROL
			TYRE PRESSURE MONITOR FUNCTION
			TYRE PRESSURE UNITS
			UPDATE ODOMETER
			WRITE VIN
			WRITING OF INSTRUMENT PANEL DATA FOR INJECTION

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	исн	V,C,D,A,R	CHECKING A KEY COLUMN LOCK IMMOBILISER PROGRAMMING CODE FAULT FINDING: TYRE PRESSURE MONITOR WARNINGS FAULT MEMORY LIGHT SENSOR SENSITIVITY PROGRAMMING THE CODES OF THE FOUR VALVES PROGRAMMING THE INJECTION IMMOBILISER CODE SPARE VALVE CODE READING WRITE V.I.N.
NEW SM3/FLUENCE/MEGA NE	AIRBAG/PRETENSIONERS	V,C,D,R	FAULT MEMORY LOCK COMPUTER READING IMPACT CONTEXTS SIDE ON WHICH STEERING WHEEL FITTED UNLOCK COMPUTER WRITE VIN
	AIR CONDITIONING	V,C,D,A,R	COMPUTER REINITIALISATION FAULT MEMORY WRITE VIN
	AUTOMATIC GEARBOX	V,C,D,A	AUTO-ADAPTIVES CLUTCH WEAR ERASE AUTO-ADAPTIVE VALUES FAULT MEMORY GEARBOX VEHICLE ACCELERATION SENSOR INIT. NOTE OIL WEAR COUNTER PARAMETRAGE PRIVE 2 PROGRAMME CLUTCH POSITION PROGRAMME SLIP POINT PROGRAMMING SELECTION/ENGAGING ZONES RESET SHIFT DRUM REFERENCE POSITION WRITE DATE OF LAST AFTER SALES OPERATION WRITE TRANSMISSION OIL CHANGE DATE WRITE VIN
	COMMUNICATIONS UNIT	V,C,D,A	ACTIVATION OF CONNECTIVITY SERVICES COUNTRY MODEL DISTANCE UNITS FAULT MEMORY LANGUAGE REVERSING CAMERA CALIBRATION WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	SUNROOF	V,C,D,A	COMPUTER INITIALISATION COMPUTER PROGRAMMING/INITIALISATION FAULT MEMORY WRITE V.I.N.
	LIGHTING	V,C,D,A	FAULT MEMORY SYSTEM INITIALISATION WRITE VIN
	PARKING BRAKE	V,C,D,A	ACTIVATE MAINTENANCE MODE ASSISTED ENGAGEMENT WHEN STATIONARY DEACTIVATE MAINTENANCE MODE FAULT MEMORY WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
		FUNCTIONS	BUZZER VOLUME
			CARAVAN TOWING DISTANCE
			FAULT MEMORY
	PARKING PROX	V,C,D,A,R	FRONT BUZZER VOLUME
	7 MARING TROX	v, c, b, r, r, r	FRONT TONE SETTING
			TONE ADJUSTMENT
			WRITE VIN
			FAULT MEMORY
	VARIABLE P.A.S	V,C,D,A,R	STEERING WHEEL ANGLE SENSOR PROGRAMMING
	VARIABLE P.A.3	v,c,D,A,N	WRITE VIN
			COMPUTER REINITIALISATION
	DRIVER'S DOOR	VCDAB	FAULT MEMORY
	DRIVER 3 DOOR	V,C,D,A,R	WRITE VIN
			ACTIVATION OF CONNECTIVITY SERVICES
			COMPUTER RESET
	TELEMATIC CTRL UNIT	V,C,D,A,R	
			FAULT MEMORY
			WRITE VIN
	ВСВ	V,C,D,A,R	WRITE V.I.N.
		- / = / - / - /	FAULT MEMORY
	LBC	V,C,D,A,R	FAULT MEMORY
		- / - / - / - / - / -	STARTING AUTHORIZATION BY LBC
			FAULT MEMORY
			HOUR SETTING
	MULTIMEDIA INTERFACE	V,C,D,A,R	TEMPERATURE DISPLAY
			TIME FORMAT
			WRITE VIN
			AMPLIFIER RESET
			FAULT MEMORY
	AMPLIFIER	V,C,D,A,R	SUBWOOFER
			WRITE DATE OF AFTER SALES OPERATION
			WRITE VIN
	LBC2	V,C,D,A,R	STARTING AUTHORIZATION BY LBC2
	LBC2	v,c,D,A,N	FAULT MEMORY
			COUNTRY MODEL
			EMERGENCY CALL NUMBER
			EXTERNAL COMPONENTS
			FAULT MEMORY
			LANGUAGE
	RADIO	V,C,D,A,R	PARAMETRAGE PRIVE 1
			REAR LOUD SPEAKER
			RESET RADIO
			SYSTEM CONFIGURATION
			WRITE DATE OF AFTER SALES OPERATION
			WRITE VIN
			ECU MEMORY
	1	1	FAULT MEMORY
	MULTIMED. CONNECTION	V,C,D,A,R	WRITE DATE OF LAST AFTER SALES OPERATION
			WRITE VIN
			ALARM
			EXTERN GPS ANTENNA
			FAULT MEMORY
	TRACKER	V,C,D,A,R	SVT CONFIGURATION
			TIMED + BATT
			WRITE V.I.N.

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	UPC	V,C,D,A	DTC RESET ESM ACTIVATION COMMAND FAULT MEMORY RESETTING INTERNAL PROTECTION STOP&START FUNCTION CONFIGURATION WRITE VIN
	INJECTION	V,C,D,A,R	ADAPTIVE VALUE - A/F RATIO ADAPTIVE VALUE - TPS ADAPTIVES AFTER REGENERATING PARTICLE FILTER ADAPTIVES AFTER REPLACING CABIN FILTER ADAPTIVES ON AIR INTAKE FLAP FAULT AIR DAMPER VALVE PROGRAMMING AIR FLOWMETER PROGRAMMING ALCOHOL LEVEL PROG. CABIN FILTER REGENERATION CAMSHAFT SENSOR PROGRAMMING CATALYTIC CONVERTER TEST CRUISE CONTROL/SPEED LIMITER PROGRAMMING ECU MEMORY EGR ADAPTIVES EGR VALVE PROGRAMMING ENGINE ADAPTIVES ENTER INJECTOR CODES ERASE IDLE REGULATION ADAPTIVES FAULT MEMORY FLYWHEEL TARGET PROGRAMMING FUEL PUMP PORCED CONVERSION FUEL PUMP PROGRAMMING FUEL PUMP PROGRAMMING FUEL PUMP PROGRAMMING FUEL SUPPLY PREVENTION HIGH PRESSURE FUEL CIRCUIT FAULT FINDING IDLE AIR VOLUME LEARNING - FACTORY MODE IGNITION COIL ADAPTIVE INJECTION PUMP ADAPTATIVES MANIFOLD PRESSURE SENSOR PROGRAMMING NUMBER OF STARTING 1 NUMBER OF STARTING 1 NUMBER OF STARTING 1 NUMBER OF STARTING 2 NUMBER OF STARTING 3 NUMBER OF STARTING 4 NUMBER OF STARTING 4 NUMBER OF STARTING 4 NUMBER OF STARTING 1 NUMBER OF STARTING 1 NUMBER OF STARTING 4 NUMBER OF STARTING 4 NUMBER OF STARTING 1 NUMBER OF STARTING 4 NUMBER OF STARTING 4 NUMBER OF STARTING 4 NUMBER OF STARTING 9 PARTICLE FILTER RELATIVE PRESSURE SENSOR PINKING SENSOR PROGRAMMING PROGRAMMING REINITIALISATION PROGRAMMING REINITIALISATION PROGRAMMING REINITIALISATION PROGRAMMING REINITIALISATION PROGRAMMING THROTTLE LIMITS PROPORTIONAL RICHNESS SENSOR PROGRAMMING RAIL PRESSURE SENSOR ADAPTIVES RICHNESS REGULATION PROGRAMMING SELF LEARNING VALUE ERASE - FUEL PUMP PWM

ESPACE IV PH2	SYSTEMS	BASE	SPECIAL FUNCTIONS
LOFACE IV PHZ	313161913	FUNCTIONS	
			BRAKE PRESSURE OFFSET SENSOR
			CHECK TARGET TEETH
			FAULT MEMORY
			SPEEDO INDEX
	A.B.S	V,C,D,A,R	STEERING WHEEL ANGLE OFFSET SENSOR
			STEERING WHEEL ANGLE SENSOR
			TRANSVERSE ACCELERATION OFFSET SENSOR
			WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
			ADAC DISPLAY TYPE
			CONSUMPTION MEASUREMENT UNITS
			CRUISE CTRL/SPD LIMITER
			DISTANCE BEFORE NEXT OIL CHANGE
			DISTANCE BEFORE NEXT OIL CHANGE DISTANCE UNITS
			FAULT MEMORY
	INSTRUMENT PANEL	V,C,D,A,R	GEARBOX TYPE
	INSTRUMENT FAREE	V,C,D,A,II	LANGUAGE VERSION.
			OVERSPEED ALARM
			TRAJECTORY CONTROL
			TYRE PRESSURE MONITOR FUNCTION
			TYRE PRESSURE UNITS
			WRITE VIN
			COLUMN LOCK IMMOBILISER PROGRAMMING CODE
			FAULT FINDING: TYRE PRESSURE MONITOR WARNINGS
			FAULT MEMORY
			PROGRAMMING THE CODES OF THE FOUR VALVES
	UCH	V,C,D,A,R	PROGRAMMING THE INJECTION IMMOBILISER CODE
			READING THE VALVE SET AND VALVE CODES
			SPARE
			VALVE SET SELECTION
			WRITE V.I.N.
			COMPUTER REINITIALISATION
	AIR CONDITIONING	V,C,D,A,R	FAULT MEMORY
	AIR CONDITIONING	v,c,b,n,n	GEOGRAPHICAL ZONE
			WRITE VIN
			CLUTCH WEAR
			ERASE AUTO-ADAPTIVE VALUES
			FAULT MEMORY
1 A TITLIDE (CA 45			PARAMETRAGE PRIVE 2
LATITUDE/SM5	ALITOMATIC CEARROY		PROGRAMME CLUTCH POSITION
	AUTOMATIC GEARBOX	V,C,D,A	PROGRAMME SLIP POINT
			PROGRAMMING SELECTION/ENGAGING ZONES
			RESET
			SHIFT DRUM REFERENCE POSITION
ĺ			WRITE DATE OF LAST AFTER SALES OPERATION
			WRITE VIN
	VARIABLE P.A.S	V,C,D,A,R	FAULT MEMORY
1			WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	RADIO	V,C,D,A,R	COUNTRY MODEL EMERGENCY CALL NUMBER EXTERNAL COMPONENTS FAULT MEMORY LANGUAGE REAR LOUD SPEAKER RESET RADIO SYSTEM CONFIGURATION WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	MULTIMEDIA INTERFACE	V,C,D,A,R	FAULT MEMORY TEMPERATURE DISPLAY TIME FORMAT WRITE VIN
	MULTIMED. CONNECTION	V,C,D,	ECU MEMORY FAULT MEMORY WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	AIRBAG/PRETENSIONERS	V,C,D,A,R	FAULT MEMORY LOCK COMPUTER READING IMPACT CONTEXTS SIDE ON WHICH STEERING WHEEL FITTED UNLOCK COMPUTER WRITE VIN
	DRIVER'S DOOR	V,C,D,A	WRITE VIN FAULT MEMORY
	PASSENGER'S DOOR	V,C,D,A	WRITE VIN FAULT MEMORY
	LEFT-HAND DOOR	V,C,D,A,R	COMPUTER REINITIALISATION AUTOMATIC CONFIGURATION
	RIGHT-HAND DOOR	V,C,D,A,R	COMPUTER REINITIALISATION AUTOMATIC CONFIGURATION
	BLIND SPOT DETECTION	V,C,D,A,R	WRITE VIN FAULT MEMORY
	AMPLIFIER	V,C,D,A,R	AMPLIFIER RESET FAULT MEMORY SUBWOOFER WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	TELEMATIC CTRL UNIT	V,C,D,A,R	ACTIVATION OF CONNECTIVITY SERVICES COMPUTER RESET FAULT MEMORY WRITE VIN
	SEAT MANAGEMENT	V,C,D,A,R	FAULT MEMORY PROGRAMMING OF SEAT STOPS WRITE VIN
	COMMUNICATIONS UNIT	V,C,D,A,R	ACTIVATION OF CONNECTIVITY SERVICES COUNTRY MODEL DISTANCE UNITS FAULT MEMORY LANGUAGE REVERSING CAMERA CALIBRATION WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	PARKING PROX CAN	V,C,D,A,R	BUZZER VOLUME CARAVAN TOWING DISTANCE FAULT MEMORY FRONT BUZZER VOLUME FRONT TONE SETTING TONE ADJUSTMENT WRITE VIN
	PARKING BRAKE	V,C,D,A,R	ASSISTED ENGAGEMENT WHEN STATIONARY AUTOMATIC CONFIGURATION FAULT MEMORY INITIALISATION AFTER AUTOMATIC CONFIGURATION PREPARATION BEFORE AUTOMATIC CONFIGURATION SAVE CLUTCH PEDAL PROGRAMMING WRITE VIN
	LIGHTING	V,C,D,A,R	FAULT MEMORY SYSTEM INITIALISATION WRITE VIN
	UPC	V,C,D,A	BATTERY DISCONNECTION UNIT TEST COMPUTER INITIALISATION DTC RESET ESM CONFIGURATION FAULT MEMORY RESETTING INTERNAL PROTECTION STOP&START FUNCTION CONFIGURATION WRITE VIN
TWIZY	AIRBAG/PRETENSIONERS	V,C,D,R	DRIVER'S FRONT AIRBAG DRIVER'S FRONT BUCKLE PRETENSIONER DRIVER'S FRONT SIDE IMPACT SENSOR DRIVER'S SEAT BUCKLE SENSOR FAULT MEMORY FRONT LEFT-HAND INERTIA WHEEL FRONT RIGHT-HAND INERTIA WHEEL FRONT THORAX SIDE AIR BAG, DRIVER SIDE IMPACT INFORMATION CONNECTION LOCK COMPUTER PASS AIRBAG DEACTIVATION WARNING LIGHT PASSENGER AIR BAG LOCKING MODE PASSENGER AIR BAG LOCKING MODE PASSENGER'S FRONT AIRBAG PASSENGER'S FRONT SIDE IMPACT SENSOR READING IMPACT CONTEXTS SEAT BELT LIGHT SEAT BELT REMINDER BUZZER SIDE ON WHICH STEERING WHEEL FITTED UNLOCK COMPUTER WRITE VIN
	INSTRUMENT PANEL	V,C,D,R	AUTONOMY BATTERY DISTANCE UNITS ECONOMETER FAULT MEMORY GEAR POSITIONS MEMORIZATION UPDATE ODOMETER VEHICLE TYPE WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	ADAPTATION UNIT	V,C,D,R	FAULT MEMORY WRITE DATE OF AFTER SALES OPERATION
			WRITE VIN FAULT MEMORY FLASHING BUZZER
	исн	V,C,D,A,R	KEY ASSIGNMENT SPARE
			WRITE VIN STARTING AUTHORIZATION BY LBC
	LBC	V,C,D,	FAULT MEMORY
			ADAPTIVES AFTER REGENERATING PARTICLE FILTER ADAPTIVES AFTER REPLACING CABIN FILTER ADAPTIVES ON AIR INTAKE FLAP FAULT AIR DAMPER VALVE PROGRAMMING
	INJECTION		AIR PATH PROGRAMMING ALCOHOL LEVEL PROG. CABIN FILTER REGENERATION CAMSHAFT SENSOR PROGRAMMING CRUISE CONTROL/SPEED LIMITER PROGRAMMING
			CYLINDER 1 INJECTOR CODE CYLINDER 2 INJECTOR CODE CYLINDER 3 INJECTOR CODE CYLINDER 3 INJECTOR CODE
			CYLINDER 4 INJECTOR CODE EGR ADAPTIVES EGR BYPASS PROGRAMMING
			EGR PROGRAMMING EGR VALVE PROGRAMMING ENGINE ADAPTIVES
			ENTER INJECTOR CODES EXHAUST AIR FLAP EXHAUST INJECTOR CIRCUIT FAST IDLE SPEED MODIFICATION
			FAULT MEMORY FLYWHEEL TARGET PROGRAMMING FUEL FLOW REGULATOR
		V,C,D,A,R	FUEL PUMP PROGRAMMING FUEL SUPPLY PREVENTION HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
			INJECTION PUMP ADAPTATIVES INJECTOR ADAPTIVES INJECTOR ADAPTIVES NO. 1
		Ī	INJECTOR ADAPTIVES NO. 2

		BASE	
ESPACE IV PH2	SYSTEMS	FUNCTIONS	SPECIAL FUNCTIONS
			INJECTOR ADAPTIVES NO. 3
			INJECTOR ADAPTIVES NO. 4
			LOW PRESSURE EGR VALVE PROGRAMMING
			MANIFOLD PRESSURE SENSOR PROGRAMMING
			NUMBER OF STARTING 1
			NUMBER OF STARTING 2
			NUMBER OF STARTING 3
			NUMBER OF STARTING 4
			NUMBER OF STARTING CYCLES
			OIL CHANGE INTERVAL (OCS): DILUTION
			PARTICLE FILTER PRESSURE DIFF. SENSOR
			PARTICLE FILTER RELATIVE PRESSURE SENSOR
			PRESSURE REGULATION ADAPTIVES
			PROGRAMMED VALUES
		I	PROGRAMMING THROTTLE LIMITS
			PROPORTIONAL RICHNESS SENSOR PROGRAMMING
LODGY			RAIL PRESSURE SENSOR ADAPTIVES
LODGY			RICHNESS REGULATION PROGRAMMING
			SPEED LIMITER
			TURBOCHARGER PROGRAMMING
			WRITE V.I.N.
			BRAKE PRESSURE OFFSET SENSOR
			CHECK TARGET TEETH
			FAULT MEMORY
			SPEEDO INDEX
	ABS	V,C,D,A,R	STEERING WHEEL ANGLE OFFSET SENSOR
			STEERING WHEEL ANGLE SENSOR
			TRANSVERSE ACCELERATION OFFSET SENSOR
			WRITE DATE OF LAST AFTER SALES OPERATION
			WRITE VIN
			ADAC DISPLAY TYPE
			BATTERY CHARGE WARNING INFORMATION
			COMPUTER INITIALISATION
			CONSUMPTION MEASUREMENT UNITS
			DISTANCE UNITS
	INSTRUMENT PANEL	V,C,D,A,R	EXTERNAL TEMPERATURE
			FAULT MEMORY
			GEARBOX TYPE
		I	OVERSPEED ALARM
			UPDATE ODOMETER WRITE VIN
		-	ALARM
ĺ			ALAKM FAULT MEMORY
			HAZARD WARNING LIGHTS ILLUMINATION BY ABS
		I	KEY ASSIGNMENT
			PROGRAMMING THE CODES OF THE FOUR VALVES
	UCH	V,C,D,A,R	PROGRAMMING THE INJECTION IMMOBILISER CODE
			SECOND FITTING ALARM
			SELECTIVE OPENING OF DOORS
			SPARE
			WRITE V.I.N.
		1	remark counts

ESPACE IV PH2	SYSTEMS	BASE	SPECIAL FUNCTIONS
LOI ACL IV FIIZ	SISILIVIS	FUNCTIONS	
			FAULT MEMORY LOCK COMPUTER
	AIRBAG/PRETENSIONERS	V,C,D,A,R	READING IMPACT CONTEXTS
		1,7,2,2,1,1,1	SENSOR CONFIGURATION
			UNLOCK COMPUTER WRITE VIN
			FAULT MEMORY
	VARIABLE P.A.S	V,C,D	WRITE DATE OF AFTER SALES OPERATION
			WRITE VIN
			COUNTRY MODEL
			FAULT MEMORY LANGUAGE
	RADIO	V,C,D,A,R	REVERSING CAMERA CALIBRATION
			WRITE DATE OF AFTER SALES OPERATION
			WRITE VIN
			ADAPTIVES AFTER REGENERATING PARTICLE FILTER
	1		ADAPTIVES AFTER REPLACING CABIN FILTER
			ADAPTIVES ON AIR INTAKE FLAP FAULT
	1		AIR DAMPER VALVE PROGRAMMING
			AIR PATH PROGRAMMING CABIN FILTER REGENERATION
			CRUISE CONTROL/SPEED LIMITER PROGRAMMING
			CYLINDER 1 INJECTOR CODE
	INJECTION		CYLINDER 2 INJECTOR CODE
			CYLINDER 3 INJECTOR CODE
			CYLINDER 4 INJECTOR CODE
			EGR ADAPTIVES
			EGR PROGRAMMING
			EGR VALVE PROGRAMMING ENGINE ADAPTIVES
			ENTER INJECTOR CODES
			EXHAUST AIR FLAP
			FAST IDLE SPEED MODIFICATION
			FAULT MEMORY
			FLYWHEEL TARGET PROGRAMMING
		V,C,D,A,R	FUEL PUMP PROGRAMMING
			FUEL SUPPLY PREVENTION HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
			INJECTION PUMP ADAPTATIVES
			INJECTION ADAPTIVES
			LOW PRESSURE EGR VALVE PROGRAMMING
			MANIFOLD PRESSURE SENSOR PROGRAMMING
	1		NUMBER OF STARTING 1
			NUMBER OF STARTING 2
			NUMBER OF STARTING 3 NUMBER OF STARTING 4
	1		NUMBER OF STARTING 4 NUMBER OF STARTING CYCLES
			OIL CHANGE INTERVAL (OCS): DILUTION
	1		PARTICLE FILTER PRESSURE DIFF. SENSOR
	1		PARTICLE FILTER RELATIVE PRESSURE SENSOR
	1		PROGRAMMED VALUES
	1		PROPORTIONAL RICHNESS SENSOR PROGRAMMING
			RAIL PRESSURE SENSOR ADAPTIVES
			SPEED LIMITER TURBOCHARGER PROGRAMMING

ESPACE IV PH2	CVCTEAG	BASE	SPECIAL FUNCTIONS	
ESPACE IV PHZ	SYSTEMS	FUNCTIONS	SPECIAL FUNCTIONS	
	ABS	V,C,D,A,R	AUTO STOP LIGHTS ILLUMINATION AUTHORISATION BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS BRAKE PRESSURE OFFSET SENSOR CHECK TARGET TEETH ESP AUTOMATIC RECONNECTION THRESHOLD FAULT MEMORY HILL START PREVENTION OF STOP LIGHT AUTO ILLUMINATION RESET SPEEDO INDEX STEERING WHEEL ANGLE OFFSET SENSOR STEERING WHEEL ANGLE SENSOR TRANSVERSE ACCELERATION OFFSET SENSOR VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN	
	INSTRUMENT PANEL	V,C,D,A,R	ADAC DISPLAY TYPE BACKUP OF INSTRUMENT PANEL DATA FOR INJECTION DISTANCE UNITS FAULT MEMORY FUEL TYPE LANGUAGE VERSION. MAINTENANCE AUTONOMY INTERVAL IN KM MAINTENANCE AUTONOMY INTERVAL IN KM MAINTENANCE AUTONOMY: CURRENT VALUE IN KM MAINTENANCE AUTONOMY: CURRENT VALUE IN KM MAINTENANCE AUTONOMY: CURRENT VALUE IN KM MOIL CHANGE INTERVAL IN KM OIL CHANGE INTERVAL IN MONTHS OIL CHANGE RANGE: CURRENT VALUE IN KM OIL CHANGE RANGE: CURRENT VALUE IN MONTHS OIL SERVICE AND ODOMETRY MILES - KM OIL SERVICE INTERVAL IN DAYS OVERSPEED ALARM PARAMETRAGE PRIVE 1 PERSONALISED OIL CHANGE FREQUENCY RESTART THE COMPUTER SEAT BELT WARNING MODULE TYRE PRESSURE MONITOR FUNCTION UPDATE ODOMETER WRITE VIN WRITING OF INSTRUMENT PANEL DATA FOR INJECTION	
	исн	V,C,D,A,R	CHECKING A KEY FAULT MEMORY KEY ASSIGNMENT PROGRAMMING THE INJECTION IMMOBILISER CODE SPARE STORED ENERGY MANAGEMENT DATA TIMED LIGHTING SUPPLY UCH CONFIGURATION WRITE V.I.N.	

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
KANGOO_ZE_STOPST ART_PH2	AIRBAG/PRETENSIONERS	V,C,D,A,R	DRIVER'S FRONT AIRBAG FAULT MEMORY FRONT LEFT-HAND BUCKLE PRETENSIONER FRONT LEFT-HAND SEAT BELT SENSOR FRONT RIGHT-HAND SEAT BELT SENSOR FRONT RIGHT-HAND CHEST-LEVEL SIDE AIRBAG FRONT RIGHT-HAND CHEST-LEVEL SIDE AIRBAG FRONT RIGHT-HAND SEAT BELT SENSOR LEFT-HAND CURTAIN AIRBAG LEFT-HAND SIDE IMPACT SENSOR LOCK COMPUTER PASSENGER AIR BAG LOCKING MODE PASSENGER AIR BAG LOCKING MODE PASSENGER'S FRONT AIRBAG READING IMPACT CONTEXTS RIGHT-HAND CURTAIN AIRBAG RIGHT-HAND SIDE IMPACT SENSOR SIDE ON WHICH STEERING WHEEL FITTED UNLOCK COMPUTER
	AIRBAG/PRETENSIONERS	V,C,D,A,R	SODYWORK TYPE COMPUTER REINITIALISATION DRIVING TYPE FAULT MEMORY GEOGRAPHICAL ZONE HEATING RESISTOR TYPE WRITE VIN
	VARIABLE P.A.S	V,C,D,A,R	FAULT MEMORY MODE NUMBER STEERING WHEEL ANGLE SENSOR PROGRAMMING WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	AUTOMATIC GEARBOX	V,C,D,A,R	CLUTCH WEAR ERASE AUTO-ADAPTIVE VALUES FAULT MEMORY PARAMETRAGE PRIVE 2 PROGRAMME CLUTCH POSITION PROGRAMMIS SLIP POINT PROGRAMMING SELECTION/ENGAGING ZONES RESET SHIFT DRUM REFERENCE POSITION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE	SPECIAL FUNCTIONS
	0.0.20	FUNCTIONS	
	UPC	V,C,D,A,R	BATTERY CORROSION COUNTER BATTERY CYCLE COUNTER BATTERY CYCLE COUNTER ESTIMATED BATTERY CYCLE COUNTER ESTIMATED BATTERY CYCLE COUNTER MEMORISED CALCULATE BATTERY WEAR COUNTERS CORROSION BATTERY COUNTER ESTIMATED CORROSION BATTERY COUNTER MEMORISED DTC RESET FAULT MEMORY NUMBER OF STARTING NUMBER OF STARTING NUMBER OF STARTING 1 NUMBER OF STARTING 2
		V,0,0,0,1	NUMBER OF STARTING 3 NUMBER OF STARTING 4 NUMBER OF STARTING CYCLES PARAMETRAGE PRIVE 1 PARAMETRAGE PRIVE 2 PARAMETRAGE PRIVE 3 PARAMETRAGE PRIVE 4 RESETTING INTERNAL PROTECTION STOP&START FUNCTION CONFIGURATION WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	PARKING PROX CAN	V,C,D,A,R	BUZZER VOLUME CARAVAN TOWING DISTANCE FAULT MEMORY WRITE VIN
	COMMUNICATIONS UNIT	V,C,D,A,R	ACTIVATION OF CONNECTIVITY SERVICES COUNTRY MODEL DISTANCE UNITS FAULT MEMORY LANGUAGE REVERSING CAMERA CALIBRATION TYRE PRESSURE UNITS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	RADIO	V,C,D,A,R	COUNTRY MODEL EMERGENCY CALL NUMBER EXTERNAL COMPONENTS FAULT MEMORY LANGUAGE PARAMETRAGE PRIVE 1 REAR LOUD SPEAKER RESET RADIO WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	MULTIMED. CONNECTION	V,C,D,A,R	ECU MEMORY FAULT MEMORY WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	MULTIMEDIA INTERFACE	V,C,D,A,R	FAULT MEMORY HOUR SETTING TEMPERATURE DISPLAY TIME FORMAT WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	ADAPTATION UNIT	V,C,D,A,R	FAULT MEMORY
	PARKING ASSISTANCE	V,C,D,A,R	BUZZER VOLUME CARAVAN TOWING DISTANCE FAULT MEMORY TONE ADJUSTMENT WRITE VIN
	ВСВ	V,C,D,A,R	WRITE V.I.N. FAULT MEMORY
	LBC	V,C,D,A,R	FAULT MEMORY STARTING AUTHORIZATION BY LBC
	EVC	V,C,D,A,R	
	PEB	V,C,D,A,R	
	LBC2	V,C,D,A,R	STARTING AUTHORIZATION BY LBC2 FAULT MEMORY
	HEATER	V,C,D,A,R	ERASE INCORRECT CRANKING COUNTER ERASE OVERHEATING COUNTER FAULT MEMORY
	TELEMATIC CTRL UNIT	V,C,D,A,R	ACTIVATION OF CONNECTIVITY SERVICES COMPUTER RESET FAULT MEMORY WRITE VIN
	INJECTION	V,C,D,A,R	FAULT MEMORY LOCK INJECTOR CONTROL PROGRAMMED VALUES UNLOCK INJECTOR CONTROL WRITE V.I.N.
	ABS	V,C,D,A,R	AUTO STOP LIGHTS ILLUMINATION AUTHORISATION BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS CHECK TARGET TEETH FAULT MEMORY GEARBOX TYPE PREVENTION OF STOP LIGHT AUTO ILLUMINATION SENSOR OFFSETS SPEEDO INDEX STEERING WHEEL ANGLE SENSOR VEHICLE PARAMETERS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	INSTRUMENT PANEL	V,C,D,A,R	ADAC DISPLAY TYPE COMPUTER INITIALISATION CRUISE CTRL/SPD LIMITER DISTANCE UNITS DRIVE TYPE CONFIGURATION FAULT MEMORY FUEL GAUGE CALIBRATION LIGHTS AUTOMATIC ILLUMINATION OIL SERVICE AND ODOMETRY MILES - KM SEAT BELT WARNING MODULE TRAJECTORY CONTROL WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
WIND	UCH	V,C,D,A,R	AIR CONDITIONING TYPE ALARM AUTOMATIC LIGHTING FUNCTION AUTOMATIC LOCKING WHEN DRIVING AUTOMATIC LOCKING WHEN DRIVING AUTOMATIC WIPING FUNCTION CALIBRATION CHECKING A KEY DAYTIME RUNNING LIGHTS DEADLOCKING ENGINE TYPE EXTERNAL TEMPERATURE SENSOR FAULT MEMORY FRONT FOG LIGHTS GRADUAL SWITCHING ON AND OFF OF COURTESY LIGHT HAZARD WARNING LIGHTS ILLUMINATION BY ABS KEY ASSIGNMENT KEY TYPE OPENING ELEMENTS CENTRAL LOCKING PROGRAMMING THE INJECTION IMMOBILISER CODE RAIN/LIGHT SENSOR SEE-ME-HOME LIGHTING SPARE TEMPERATURE DISPLAY WIPER INTERMITTENT SPEED RING WRITE VIN
	AIRBAG/PRETENSIONERS	V,C,D,R	DRIVER'S FRONT AIRBAG DRIVER'S FRONT SIDE IMPACT SENSOR DRIVER'S SEAT BUCKLE SENSOR FAULT MEMORY FRONT THORAX SIDE AIR BAG, DRIVER SIDE FRONT THORAX SIDE AIR BAG, PASSENGER SIDE LOCK COMPUTER PASSENGER AIR BAG LOCKING MODE PASSENGER'S FRONT AIRBAG PASSENGER'S FRONT INERTIA REEL PASSENGER'S FRONT SIDE IMPACT SENSOR READING IMPACT CONTEXTS SIDE ON WHICH STEERING WHEEL FITTED UNLOCK COMPUTER WRITE VIN
	AIR CONDITIONING	V,C,D,A,R	FAULT MEMORY GEOGRAPHICAL ZONE HEATING RESISTOR TYPE VEHICLE TYPE WRITE VIN
	SUNROOF CONTROL UNIT V,C,D		WRITE V.I.N. FAULT MEMORY
	RADIO	V,C,D,A,R	COMP CONFIGURATION FAULT MEMORY WRITE DATE OF AFTER SALES OPERATION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	MULTIMEDIA INTERFACE	V,C,D,A,R	FAULT MEMORY LIGHTING RADIO VEHICLE CONFIGURATION WRITE VIN
	MULTIMED. CONNECTION	V,C,D	FAULT MEMORY SYSTEM CONFIGURATION WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	VARIABLE P.A.S	V,C,D,R	FAULT MEMORY MODE NUMBER
CLIO II PH6	INJECTION	V,C,D,A,R	ALCOHOL LEVEL PROG. ENGINE ADAPTIVES FAULT MEMORY FLYWHEEL TARGET PROGRAMMING FUEL SUPPLY PREVENTION PROGRAMMING REINITIALISATION PROGRAMMING THROTTLE LIMITS RICHNESS REGULATION PROGRAMMING WRITE VIN
	исн	V,C,D,A,R	FAULT MEMORY FLASHING BUZZER KEY ASSIGNMENT SDO SPARE WRITE VIN
	TRACKER	V,C,D,A,R	FAULT MEMORY SVT CONFIGURATION WRITE V.I.N.
	INJECTION	V,C,D,A,R	CATALYTIC CONVERTER TEST ECU MEMORY ERASE IDLE REGULATION ADAPTIVES FUEL SUPPLY PREVENTION IDLE AIR VOLUME LEARNING - FACTORY MODE IDLE AIR VOLUME LEARNING - SERVICE MODE STOP FUEL SUPPLY PREVENTION VEHICLE FUNCTION PROGRAMMING WRITE V.I.N.
	ABS	V,C,D,A,R	BRAKE PRESSURE OFFSET SENSOR CHECK TARGET TEETH SPEEDO INDEX STEERING WHEEL ANGLE OFFSET SENSOR STEERING WHEEL ANGLE SENSOR TRANSVERSE ACCELERATION OFFSET SENSOR WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	INSTRUMENT PANEL	V,C,D,R	CONSUMPTION MEASUREMENT UNITS CRUISE CTRL/SPD LIMITER DISTANCE BEFORE NEXT OIL CHANGE ODOMETER IN KM OVERSPEED ALARM TYRE PRESSURE MONITOR FUNCTION TYRE PRESSURE UNITS ADAC DISPLAY TYPE DISTANCE UNITS GEARBOX TYPE LANGUAGE VERSION. TRAJECTORY CONTROL WRITE VIN
	UCH	V,C,D,A,R	VALVE SET SELECTION WRITE V.I.N.
	AIRBAG/PRETENSIONERS	V,C,D,A,R	LOCK COMPUTER SIDE ON WHICH STEERING WHEEL FITTED UNLOCK COMPUTER WRITE VIN
	AIRBAG/PRETENSIONERS	V,C,D,A,R	COMPUTER REINITIALISATION GEOGRAPHICAL ZONE WRITE VIN
SM7 L47	AUTOMATIC GEARBOX	V,C,D,A,R	CLUTCH WEAR ERASE AUTO-ADAPTIVE VALUES FAULT MEMORY PARAMETRAGE PRIVE 2 PROGRAMME SLIP POINT RESET WRITE VIN
	PARKING BRAKE	V,C,D,A,R	WRITE VIN ASSISTED ENGAGEMENT WHEN STATIONARY
	DRIVER'S DOOR	V,C,D,R	WRITE VIN
	PASSENGER'S DOOR	V,C,D,R	WRITE VIN
	COMMUNICATIONS UNIT	V,C,D,R	COUNTRY MODEL DISTANCE UNITS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	LIGHTING	V,C,D,R	SYSTEM INITIALISATION WRITE VIN
	MULTIMED. CONNECTION	V,C,D,R	WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN ECU MEMORY
	RADIO	V,C,D,R	COUNTRY MODEL LANGUAGE RESET RADIO SYSTEM CONFIGURATION WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	AMPLIFIER	V,C,D,R	AMPLIFIER RESET SUBWOOFER WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	UPC	V,C,D,A,R	WRITE VIN DTC RESET RESETTING INTERNAL PROTECTION

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	PARKING PROX CAN	V,C,D,A,R	BUZZER VOLUME CARAVAN TOWING DISTANCE FRONT BUZZER VOLUME FRONT TONE SETTING TONE ADJUSTMENT WRITE VIN
	MULTIMEDIA INTERFACE	V,C,D,A,R	TEMPERATURE DISPLAY TIME FORMAT WRITE VIN
	INJECTION	V,C,D,A,R	ADAPTIVES AFTER REGENERATING PARTICLE FILTER ADAPTIVES ON AIR INTAKE FLAP FAULT AIR DAMPER VALVE PROGRAMMING AIR PATH PROGRAMMING ALCOHOL LEVEL PROG. CABIN FILTER REGENERATION CAMSHAFT SENSOR PROGRAMMING CRUISE CONTROL/SPEED LIMITER PROGRAMMING CYLINDER 1 INJECTOR CODE CYLINDER 1 INJECTOR CODE CYLINDER 2 INJECTOR CODE CYLINDER 3 INJECTOR CODE CYLINDER 4 INJECTOR CODE EGR ADAPTIVES EGR PROGRAMMING EGR VALVE PROGRAMMING ERNSINE ADAPTIVES ENTER INJECTOR CODES EXHAUST AIR FLAP FAST IDLE SPEED MODIFICATION FAULT MEMORY ELYWHELL TARGET PROGRAMMING FUEL FLOW REGULATOR FUEL PUMP PROGRAMMING FUEL SUPPLY PREVENTION HIGH PRESSURE FUEL CIRCUIT FAULT FINDING INJECTOR ADAPTIVES NO. 1 INJECTOR ADAPTIVES NO. 2 INJECTOR ADAPTIVES NO. 3 INJECTOR ADAPTIVES NO. 4 LOW PRESSURE FOR SYALVE PROGRAMMING MANIFOLD PRESSURE SENSOR PROGRAMMING MANIFOLD PRESSURE SENSOR PROGRAMMING MANIFOLD PRESSURE SENSOR PROGRAMMING MANIFOLD PRESSURE SENSOR PROGRAMMING MUMBER OF STARTING 1 NUMBER OF STARTING 2

ESPACE IV PH2	SYSTEMS	BASE	SPECIAL FUNCTIONS
ESTACE IVITIE	313121413	FUNCTIONS	SI ECIAL I GIVETIONS
			NUMBER OF STARTING 3
			NUMBER OF STARTING 4
			NUMBER OF STARTING CYCLES
			OIL CHANGE INTERVAL (OCS): DILUTION
			PARTICLE FILTER PRESSURE DIFF. SENSOR
			PARTICLE FILTER RELATIVE PRESSURE SENSOR
			PRESSURE REGULATION ADAPTIVES
			PROGRAMMED VALUES
			PROGRAMMING THROTTLE LIMITS
			PROPORTIONAL RICHNESS SENSOR PROGRAMMING
			RAIL PRESSURE SENSOR ADAPTIVES
DOWNER			RICHNESS REGULATION PROGRAMMING
DOKKER			SPEED LIMITER
			TURBOCHARGER PROGRAMMING
			WRITE V.I.N.
			BRAKE PRESSURE OFFSET SENSOR
			CHECK TARGET TEETH
			FAULT MEMORY
			SPEEDO INDEX
	ABS	V,C,D,A,R	STEERING WHEEL ANGLE OFFSET SENSOR
	ABS	v,C,D,A,N	STEERING WHEEL ANGLE OFFSET SENSOR STEERING WHEEL ANGLE SENSOR
			TRANSVERSE ACCELERATION OFFSET SENSOR
			WRITE DATE OF LAST AFTER SALES OPERATION
			WRITE VIN
			FAULT MEMORY
			LOCK COMPUTER
	AIRBAG/PRETENSIONERS	V,C,D,R	READING IMPACT CONTEXTS
			SENSOR CONFIGURATION
			UNLOCK COMPUTER
			WRITE VIN
			COUNTRY MODEL
			FAULT MEMORY
	RADIO	V,C,D,A,R	LANGUAGE
		, , , ,	REVERSING CAMERA CALIBRATION
			WRITE DATE OF AFTER SALES OPERATION
			WRITE VIN
	_		FAULT MEMORY
	VARIABLE P.A.S	V,C,D,R	WRITE DATE OF AFTER SALES OPERATION
			WRITE VIN
			ALARM
ĺ			FAULT MEMORY
			HAZARD WARNING LIGHTS ILLUMINATION BY ABS
ĺ			KEY ASSIGNMENT
	исн	V,C,D,R	PROGRAMMING THE CODES OF THE FOUR VALVES
ĺ		۷,۵,۵,۱۱	PROGRAMMING THE INJECTION IMMOBILISER CODE
			SECOND FITTING ALARM
ĺ			SELECTIVE OPENING OF DOORS
ĺ			SPARE
I	Ī		WRITE V.I.N.

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	INSTRUMENT PANEL	V,C,D,A,R	ADAC DISPLAY TYPE BATTERY CHARGE WARNING INFORMATION COMPUTER INITIALISATION CONSUMPTION MEASUREMENT UNITS DISTANCE UNITS EXTERNAL TEMPERATURE FAULT MEMORY GEARBOX TYPE OVERSPEED ALARM UPDATE ODOMETER WRITE VIN
	ABS	V,C,D,R	
	INSTRUMENT PANEL	V,C,D,R	CRUISE CTRL/SPD LIMITER DISTANCE BEFORE NEXT MAINTENANCE DISTANCE UNITS FAULT MEMORY LANGUAGE CONFIGURATION OVERSPEED ALARM TYRE PRESSURE UNITS WRITE VIN
	исн	V,C,D,R	AUTOMATIC CONFIGURATION CARD ALLOCATION CARD TESTING COLUMN LOCK IMMOBILISER PROGRAMMING CODE FAULT MEMORY PROGRAMMING IMMOBILISER CODE SPARE WRITE V.I.N.
	AIRBAG/PRETENSIONERS	V,C,D,R	FAULT MEMORY LOCK COMPUTER READING IMPACT CONTEXTS SENSOR CONFIGURATION UNLOCK COMPUTER WRITE VIN
	AIRBAG/PRETENSIONERS	V,C,D,R	
	VARIABLE P.A.S	V,C,D,R	FAULT MEMORY STEERING WHEEL ANGLE SENSOR PROGRAMMING WRITE VIN
ZOE	UPC	V,C,D,R	BATTERY CORROSION COUNTER BATTERY CYCLE COUNTER BATTERY CYCLE COUNTER ESTIMATED BATTERY CYCLE COUNTER MEMORISED CALCULATE BATTERY WEAR COUNTERS CORROSION BATTERY COUNTER ESTIMATED CORROSION BATTERY COUNTER MEMORISED DTC RESET RESETTING INTERNAL PROTECTION WRITE VIN
	PARKING PROX CAN	V,C,D,R	BUZZER VOLUME CARAVAN TOWING DISTANCE FAULT MEMORY WRITE VIN
	TELEMATIC CTRL UNIT	V,C,D,R	ACTIVATION OF CONNECTIVITY SERVICES COMPUTER RESET FAULT MEMORY WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	LBC	V,C,D,R	
	LBC2	V,C,D,R	FAULT MEMORY
	EVC	V,C,D,R	
	PEB	V,C,D,R	
	1 25	V,C,D,IX	COUNTRY MODEL
			FAULT MEMORY
			LANGUAGE
	COMMUNICATIONS UNIT	V,C,D,R	REVERSING CAMERA CALIBRATION
			TYRE PRESSURE UNITS
			WRITE DATE OF LAST AFTER SALES OPERATION
			WRITE VIN
			COUNTRY MODEL
			FAULT MEMORY
	RADIO	V,C,D,A,R	LANGUAGE
	10.010	v,c,b,r,r,	RESET RADIO
			WRITE DATE OF AFTER SALES OPERATION
			WRITE VIN
			ADAPTIVES AFTER REGENERATING PARTICLE FILTER
			ADAPTIVES AFTER REPLACING CABIN FILTER ADAPTIVES ON AIR INTAKE FLAP FAULT
			AIR DAMPER VALVE PROGRAMMING
			AIR PATH PROGRAMMING
	INJECTION		ALCOHOL LEVEL PROG.
	INSECTION		CABIN FILTER REGENERATION
			CAMSHAFT SENSOR PROGRAMMING
			CRUISE CONTROL/SPEED LIMITER PROGRAMMING
			CYLINDER 1 INJECTOR CODE
			CYLINDER 2 INJECTOR CODE
			CYLINDER 3 INJECTOR CODE
			CYLINDER 4 INJECTOR CODE
			EGR ADAPTIVES
			EGR PROGRAMMING
			EGR VALVE PROGRAMMING
			ENGINE ADAPTIVES
			ENTER INJECTOR CODES
			EXHAUST AIR FLAP FAST IDLE SPEED MODIFICATION
			FAULT MEMORY
			FLYWHEEL TARGET PROGRAMMING
			FUEL FLOW REGULATOR
			FUEL PUMP PROGRAMMING
			FUEL SUPPLY PREVENTION
			HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
			INJECTION PUMP ADAPTATIVES
		VCDAB	INJECTOR ADAPTIVES
		V,C,D,A,R	INJECTOR ADAPTIVES NO. 1
			INJECTOR ADAPTIVES NO. 2
			INJECTOR ADAPTIVES NO. 3
			INJECTOR ADAPTIVES NO. 4
			LOW PRESSURE EGR VALVE PROGRAMMING
			MANIFOLD PRESSURE SENSOR PROGRAMMING
			NUMBER OF STARTING 1
	I		NUMBER OF STARTING 2

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	1		NUMBER OF STARTING 3 NUMBER OF STARTING 4
			NUMBER OF STARTING CYCLES OIL CHANGE INTERVAL (OCS): DILUTION
			PARTICLE FILTER PRESSURE DIFF. SENSOR
			PARTICLE FILTER RELATIVE PRESSURE SENSOR
			PRESSURE REGULATION ADAPTIVES
			PROGRAMMED VALUES
			PROGRAMMING THROTTLE LIMITS
			PROPORTIONAL RICHNESS SENSOR PROGRAMMING
			RAIL PRESSURE SENSOR ADAPTIVES
			RICHNESS REGULATION PROGRAMMING
			SAVE COMPUTER DATA
			SPEED LIMITER
			START OBD TEST: CATALYTIC CONVERTER START OBD TEST: O2 SENSORS
			TURBOCHARGER PROGRAMMING
			WASTE GATE REGULATION
			WRITE SAVED DATA
			WRITE V.I.N.
			CHECK TARGET TEETH
			FAULT MEMORY
	ABS	V,C,D,A,R	SPEEDO INDEX
	7.65	v,c,b,r,r,	WRITE DATE OF LAST AFTER SALES OPERATION
			WRITE VIN
			ADAC DISPLAY TYPE
			COMPUTER INITIALISATION
			CONSUMPTION MEASUREMENT UNITS
			DISTANCE UNITS
	INSTRUMENT PANEL	V,C,D,A,R	FAULT MEMORY
			LANGUAGE VERSION.
			ODOMETER IN KM
CLIO IV			ODOMETER IN MILES
			WRITE VIN
			ALARM
			FAULT MEMORY
			HAZARD WARNING LIGHTS ILLUMINATION BY ABS
			KEY ASSIGNMENT PROGRAMMING THE CODES OF THE FOUR VALVES
	UCH	V,C,D,A,R	PROGRAMMING THE CODES OF THE POOR VALVES PROGRAMMING THE INJECTION IMMOBILISER CODE
			SECOND FITTING ALARM
			SELECTIVE OPENING OF DOORS
			SPARE
			WRITE V.I.N.
			FAULT MEMORY
			LOCK COMPUTER
	AIRBAG/PRETENSIONERS	VCDAB	READING IMPACT CONTEXTS
		V,C,D,A,R	SENSOR CONFIGURATION
			UNLOCK COMPUTER
			WRITE VIN
			COMPUTER REINITIALISATION
	AIRBAG/PRETENSIONERS	V,C,D,A,R	FAULT MEMORY
			WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE	SPECIAL FUNCTIONS
		FUNCTIONS	
	AUTOMATIC GEARBOX	V,C,D,A,R	CLUTCH WEAR ERASE AUTO-ADAPTIVE VALUES FAULT MEMORY PARAMETRAGE PRIVE 2 PROGRAMME CLUTCH POSITION PROGRAMME SLIP POINT PROGRAMMING SELECTION/ENGAGING ZONES RESET SHIFT DRUM REFERENCE POSITION WRITE VIN
	VARIABLE P.A.S	V,C,D,A,R	FAULT MEMORY WRITE VIN
	UPC	V,C,D,A,R	
	PARKING PROX CAN	V,C,D,A,R	BUZZER VOLUME CARAVAN TOWING DISTANCE FAULT MEMORY WRITE VIN
	TELEMATIC CTRL UNIT	V,C,D,A,R	ACTIVATION OF CONNECTIVITY SERVICES COMPUTER RESET FAULT MEMORY WRITE VIN
	COMMUNICATIONS UNIT	V,C,D,A,R	COUNTRY MODEL FAULT MEMORY LANGUAGE REVERSING CAMERA CALIBRATION TYRE PRESSURE UNITS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	HANDS-FREE MODULE	V,C,D,A,R	CARD ALLOCATION CARD TESTING COLUMN LOCK IMMOBILISER PROGRAMMING CODE FAULT MEMORY PROGRAM HANDS-FREE-MODULE PROGRAMMING THE INJECTION IMMOBILISER CODE REMOTE LOCKING BUZZER WRITE V.I.N.
	RADIO	V,C,D,A,R	COUNTRY MODEL FAULT MEMORY LANGUAGE RESET RADIO REVERSING CAMERA CALIBRATION WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	MULTIMEDIA INTERFACE	V,C,D,A,R	FAULT MEMORY HOUR SETTING TEMPERATURE DISPLAY TIME FORMAT WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	INJECTION	V,C,D,A,R	ADAPTIVES ATTER REDLACING CABIN FILTER ADAPTIVES ON AIR INTAKE FLAP FAULT AIR DAMPER VALVE PROGRAMMING AIR PATH PROGRAMMING ALCOHOL LEVEL PROG. CABIN FILTER REGENERATION CAMSHAFT SENSOR PROGRAMMING CRUISE CONTROL/SPEED LIMITER PROGRAMMING CRUISE CONTROL/SPEED LIMITER PROGRAMMING CYLINDER 1 INJECTOR CODE CYLINDER 2 INJECTOR CODE CYLINDER 3 INJECTOR CODE CYLINDER 3 INJECTOR CODE EGR ADAPTIVES EGR PROGRAMMING EGG VALVE PROGRAMMING ENGINE ADAPTIVES ENTER INJECTOR CODES EXHAUST AIR FLAP FAST IDLE SPEED MODIFICATION FAULT MEMORY FLYWHEEL TARGET PROGRAMMING FUEL FLOW REGULATOR FUEL SUPPLY PREVENTION HIGH PRESSURE FUEL CIRCUIT FAULT FINDING INJECTIOR ADAPTIVES INJECTOR ADAPTIVES INJECTOR ADAPTIVES INJECTOR ADAPTIVES INJECTOR ADAPTIVES INJECTOR ADAPTIVES NO. 1 INJECTOR ADAPTIVES NO. 2 INJECTOR ADAPTIVES NO. 3 INJECTOR ADAPTIVES NO. 4 INJECTOR
	ABS	V,C,D,A,R	CHECK TARGET TEETH FAULT MEMORY SPEEDO INDEX WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
LOGAN II/SANDERO II	INSTRUMENT PANEL	V,C,D,A,R	ADAC DISPLAY TYPE BATTERY CHARGE WARNING INFORMATION COMPUTER INITIALISATION CONSUMPTION MEASUREMENT UNITS CRUISE CTRL/SPD LIMITER DISTANCE UNITS EXTERNAL TEMPERATURE FAULT MEMORY GEARBOX TYPE OVERSPEED ALARM UPDATE ODOMETER WRITE VIN

		BASE	
ESPACE IV PH2	SYSTEMS	FUNCTIONS	SPECIAL FUNCTIONS
			ALARM
	исн	V,C,D,A,R	FAULT MEMORY HAZARD WARNING LIGHTS ILLUMINATION BY ABS KEY ASSIGNMENT PROGRAMMING THE CODES OF THE FOUR VALVES PROGRAMMING THE INJECTION IMMOBILISER CODE SECOND FITTING ALARM SELECTIVE OPENING OF DOORS SPARE WRITE V.I.N.
	AIRBAG/PRETENSIONERS	V,C,D,A,R	FAULT MEMORY LOCK COMPUTER READING IMPACT CONTEXTS SENSOR CONFIGURATION UNLOCK COMPUTER WRITE VIN
	AIRBAG/PRETENSIONERS	V,C,D,A,R	
	AUTOMATIC GEARBOX	V,C,D,A,R	
	VARIABLE P.A.S	V,C,D,A,R	FAULT MEMORY WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	RADIO	V,C,D,A,R	COUNTRY MODEL FAULT MEMORY LANGUAGE REVERSING CAMERA CALIBRATION WRITE DATE OF AFTER SALES OPERATION WRITE VIN
	MULTIMEDIA INTERFACE	V,C,D,A,R	FAULT MEMORY HOUR SETTING TEMPERATURE DISPLAY TIME FORMAT WRITE VIN
	TRACKER	V,C,D,A,R	FAULT MEMORY SVT CONFIGURATION WRITE V.I.N.
	INJECTION		ADAPTIVES AFTER REGENERATING PARTICLE FILTER ADAPTIVES AFTER REPLACING CABIN FILTER ADAPTIVES ON AIR INTAKE FLAP FAULT AIR DAMPER VALVE PROGRAMMING AIR PATH PROGRAMMING ALCOHOL LEVEL PROG. CABIN FILTER REGENERATION CAMSHAFT SENSOR PROGRAMMING CRUISE CONTROL/SPEED LIMITER PROGRAMMING CYLINDER 1 INJECTOR CODE CYLINDER 2 INJECTOR CODE

ESPACE IV PH2	SYSTEMS	BASE	SPECIAL FUNCTIONS
LOFACE IV FIZ	SISTEMS	V,C,D,A,R	CYLINDER 3 INJECTOR CODE CYLINDER 4 INJECTOR CODE EGR ADAPTIVES EGR PROGRAMMING EGR VALVE PROGRAMMING EGR VALVE PROGRAMMING ENGINE ADAPTIVES ENTER INJECTOR CODES EXHAUST AIR FLAP FAST IDLE SPEED MODIFICATION FAULT MEMORY FLYWHEEL TARGET PROGRAMMING FUEL FLOW REGULATOR FUEL PUMP PROGRAMMING FUEL SUPPLY PREVENTION HIGH PRESSURE FUEL CIRCUIT FAULT FINDING INJECTION PUMP ADAPTATIVES INJECTOR ADAPTIVES NO. 1 INJECTOR ADAPTIVES NO. 2 INJECTOR ADAPTIVES NO. 3 INJECTOR ADAPTIVES NO. 3 INJECTOR ADAPTIVES NO. 3 INJECTOR ADAPTIVES NO. 4 LOW PRESSURE FOR VALVE PROGRAMMING MANIFOLD PRESSURE SENSOR PROGRAMMING NUMBER OF STARTING 1 NUMBER OF STARTING 1 NUMBER OF STARTING 3 NUMBER OF STARTING 3 NUMBER OF STARTING 3 NUMBER OF STARTING 4 NUMBER OF STARTING 3 NUMBER OF STARTING 4 NUMBER OF STARTING 5 PROGRAMMING THROTHE LIMITS PROPORTIONAL RICHNESS SENSOR PROGRAMMING PRESSURE REGULATION ADAPTIVES PROGRAMMING THROTTLE LIMITS PROPORTIONAL RICHNESS SENSOR PROGRAMMING RAIL PRESSURE SENSOR ADAPTIVES RICHNESS REGULATION PROGRAMMING SAVE COMPUTER DATA SPEED LIMITER START OBD TEST: CATALYTIC CONVERTER START OBD TEST: CATALYTIC CONVERTER START OBD TEST: COS SENSORS TURBOCHARGER PROGRAMMING WASTE GATE REGULATION
	исн	V,C,D,A,R	WRITE SAVED DATA WRITE V.I.N. ALARM FAULT MEMORY HAZARD WARNING LIGHTS ILLUMINATION BY ABS KEY ASSIGNMENT PROGRAMMING THE CODES OF THE FOUR VALVES PROGRAMMING THE INJECTION IMMOBILISER CODE SECOND FITTING ALARM SELECTIVE OPENING OF DOORS SPARE WRITE V.I.N.

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
CAPTUR	AIRBAG/PRETENSIONERS	V,C,D,A,R	FAULT MEMORY LOCK COMPUTER READING IMPACT CONTEXTS SENSOR CONFIGURATION UNLOCK COMPUTER WRITE VIN
	ABS	V,C,D,A,R	CHECK TARGET TEETH FAULT MEMORY SPEEDO INDEX WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	INSTRUMENT PANEL	V,C,D,A,R	ADAC DISPLAY TYPE COMPUTER INITIALISATION CONSUMPTION MEASUREMENT UNITS DISTANCE UNITS FAULT MEMORY LANGUAGE VERSION. ODOMETER IN KM ODOMETER IN MILES WRITE VIN
	AIRBAG/PRETENSIONERS	V,C,D,A,R	COMPUTER REINITIALISATION FAULT MEMORY WRITE VIN
	AUTOMATIC GEARBOX	V,C,D,A,R	CLUTCH WEAR ERASE AUTO-ADAPTIVE VALUES FAULT MEMORY PARAMETRAGE PRIVE 2 PROGRAMME CLUTCH POSITION PROGRAMME SLIP POINT PROGRAMMING SELECTION/ENGAGING ZONES RESET SHIFT DRUM REFERENCE POSITION WRITE VIN
	VARIABLE P.A.S	V,C,D,A,R	FAULT MEMORY WRITE VIN
	UPC	V,C,D,A,R	
	PARKING PROX CAN	V,C,D,A,R	BUZZER VOLUME CARAVAN TOWING DISTANCE FAULT MEMORY WRITE VIN
	TELEMATIC CTRL UNIT	V,C,D,A,R	ACTIVATION OF CONNECTIVITY SERVICES COMPUTER RESET FAULT MEMORY WRITE VIN
	COMMUNICATIONS UNIT	V,C,D,A,R	COUNTRY MODEL FAULT MEMORY LANGUAGE REVERSING CAMERA CALIBRATION TYRE PRESSURE UNITS WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN

		<u> </u>	
ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
		FUNCTIONS	COUNTRY MODEL
			FAULT MEMORY
			LANGUAGE
	RADIO	V,C,D,A,R	RESET RADIO
	KADIO	v,c,D,A,N	REVERSING CAMERA CALIBRATION
			WRITE DATE OF AFTER SALES OPERATION
			WRITE DATE OF AFTER SALES OPERATION WRITE VIN
			CARD ALLOCATION
			CARD TESTING
			COLUMN LOCK IMMOBILISER PROGRAMMING CODE
			FAULT MEMORY
	HANDS FREE KIT	V,C,D,A,R	PROGRAM HANDS-FREE-MODULE
			PROGRAMMING THE INJECTION IMMOBILISER CODE
			REMOTE LOCKING BUZZER
			WRITE V.I.N.
			FAULT MEMORY
			HOUR SETTING
	MULTIMEDIA INTERFACE	V,C,D,A,R	TEMPERATURE DISPLAY
	WOLTHWIEDIA INTERFACE	v,C,D,A,N	TIME FORMAT
			WRITE VIN
			ACTIVATE EVAP PROGRAMMING
			ADAPTIVES ON AIR INTAKE FLAP FAULT
			AIR DAMPER VALVE PROGRAMMING
			AIR PATH PROGRAMMING
	INJECTION		CAMSHAFT SENSOR N°2 PROGRAMMING
			CAMSHAFT SENSOR PROGRAMMING
			CRUISE CONTROL/SPEED LIMITER PROGRAMMING
			CYLINDER 1 INJECTOR CODE
			CYLINDER 2 INJECTOR CODE
			CYLINDER 3 INJECTOR CODE
			CYLINDER 4 INJECTOR CODE
			EGR ADAPTIVES
			EGR BYPASS PROGRAMMING
			EGR PROGRAMMING
			EGR VALVE PROGRAMMING
			ENGINE ADAPTIVES
			ENTER INJECTOR CODES
			EXHAUST AIR FLAP
			EXHAUST INJECTOR CIRCUIT
			FAST IDLE SPEED MODIFICATION
			FLYWHEEL TARGET PROGRAMMING
			FUEL FLOW REGULATOR
			FUEL PUMP PROGRAMMING
			FUEL SUPPLY PREVENTION
			HIGH PRESSURE FUEL CIRCUIT FAULT FINDING
			INHIBIT EVAP STRATEGY
		V,C,D,A,R	INJECTION PUMP ADAPTATIVES
			INJECTOR ADAPTIVES
			INJECTOR ADAPTIVES NO. 1
			INJECTOR ADAPTIVES NO. 2
	<u>I</u>	I	INDECTOR ADAF TIVES NO. 2

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
DUSTER PH2	SISIEWS	FUNCTIONS	INJECTOR ADAPTIVES NO. 3 INJECTOR ADAPTIVES NO. 4 INTERVAL OF OIL CHANGE (OCS) OXIDATION LOW PRESSURE EGR VALVE PROGRAMMING MANIFOLD PRESSURE SENSOR PROGRAMMING NUMBER OF STARTING 1 NUMBER OF STARTING 2 NUMBER OF STARTING 3 NUMBER OF STARTING 4 NUMBER OF STARTING 4 NUMBER OF STARTING 4 PARAMETRAGE PRIVE 159 PARAMETRAGE PRIVE 159 PARAMETRAGE PRIVE 160 PARTICLE FILTER PRESSURE DIFF. SENSOR PARTICLE FILTER PRESSURE DIFF. SENSOR PINKING SENSOR PROGRAMMING PRESSURE REGULATION ADAPTIVES PROGRAMMING THROTTLE LIMITS RAIL PRESSURE SENSOR ADAPTIVES RICHNESS REGULATION PROGRAMMING SPEED LIMITER STATIC TEST TURBOCHARGER PROGRAMMING WASTE GATE REGULATION
	ABS	V,C,D,A,R	WRITE V.I.N. BRAKE PRESSURE OFFSET SENSOR CHECK TARGET TEETH LONGITUDINAL ACCELERATION SENSOR OFFSET SPEEDO INDEX STEERING WHEEL ANGLE OFFSET SENSOR TRANSVERSE ACCELERATION OFFSET SENSOR WRITE DATE OF LAST AFTER SALES OPERATION WRITE VIN
	INSTRUMENT PANEL	V,C,D,A,R	ADAC DISPLAY TYPE BATTERY CHARGE WARNING INFORMATION COMPUTER INITIALISATION CONSUMPTION MEASUREMENT UNITS CRUISE CTRL/SPD LIMITER DISTANCE UNITS EXTERNAL TEMPERATURE GEARBOX TYPE OVERSPEED ALARM UPDATE ODOMETER
	исн	V,C,D,A,R	ALARM HAZARD WARNING LIGHTS ILLUMINATION BY ABS SECOND FITTING ALARM WRITE V.I.N.
	AIRBAG/PRETENSIONERS	V,C,D,A,R	LOCK COMPUTER UNLOCK COMPUTER
	VARIABLE P.A.S	V,C,D,A,R	WRITE VIN WRITE DATE OF AFTER SALES OPERATION
	RADIO	V,C,D,A,R	COUNTRY MODEL LANGUAGE WRITE DATE OF AFTER SALES OPERATION WRITE VIN

ESPACE IV PH2	SYSTEMS	BASE FUNCTIONS	SPECIAL FUNCTIONS
	4 WHEELS DRIVE	V,C,D,A,R	COMPUTER INITIALISATION MODIFICATION OF PARAMETERS AFTER INITIALISATION SPEEDO INDEX VEHICLE TYPE WRITE VIN
NOTE:			
V:	SYSTEM VERSION INFO		
C:	DTC		
D:	DATA DISPLAY		
A:	ACTION TEST		
R	READ CONFIGURE INFO		