

OilRest_BMW_V1.20 Function List (Note:For reference only)

Part	Components	Year	Body Type
MAINTENANCE	Engine oil	all	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X5_E70 X6_E71 1_F20 3_F30/F35 5_F07 5_F18 7_F01/F02/F04 5_F10/F11 x3_F25 x4_F26 X1_E84 X6_E72
MAINTENANCE	Spark plugs	all	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X5_E70 X6_E71 1_F20 3_F30/F35 5_F07 5_F18 7_F01/F02/F04 5_F10/F11 x3_F25 x4_F26 X1_E84 X6_E72
MAINTENANCE	Front brakes	all	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X5_E70 X6_E71 1_F20 3_F30/F35 5_F07 5_F18 7_F01/F02/F04 5_F10/F11 x3_F25 x4_F26 X1_E84 X6_E72

Part	Components	Year	Body Type
	Rear brakes	all	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X5_E70 X6_E71 1_F20 3_F30/F35 5_F07 5_F18 7_F01/F02/F04 5_F10/F11 x3_F25 x4_F26 X1_E84 X6_E72
MAINTENANCE	Coolant	all	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X5_E70 X6_E71 1_F20 3_F30/F35 5_F07 5_F18 7_F01/F02/F04 5_F10/F11 x3_F25 x4_F26 X1_E84 X6_E72
MAINTENANCE	Diesel particle filter	all	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X5_E70 X6_E71 1_F20 3_F30/F35 5_F07 5_F18 7_F01/F02/F04 5_F10/F11 x3_F25 x4_F26 X1_E84 X6_E72
MAINTENANCE	Brake fluid	all	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X5_E70 X6_E71 1_F20 3_F30/F35 5_F07 5_F18 7_F01/F02/F04 5_F10/F11 x3_F25 x4_F26 X1_E84 X6_E72

Part	Components	Year	Body Type
MAINTENANCE	Microfilter	all	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X5_E70 X6_E71 1_F20 3_F30/F35 5_F07 5_F18 7_F01/F02/F04 5_F10/F11 x3_F25 x4_F26 X1_E84 X6_E72
MAINTENANCE	Vehicle inspection	all	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X5_E70 X6_E71 1_F20 3_F30/F35 5_F07 5_F18 7_F01/F02/F04 5_F10/F11 x3_F25 x4_F26 X1_E84 X6_E72
MAINTENANCE	Exhaust emission inspection	all	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X5_E70 X6_E71 1_F20 3_F30/F35 5_F07 5_F18 7_F01/F02/F04 5_F10/F11 x3_F25 x4_F26 X1_E84 X6_E72
MAINTENANCE	Vehicle check	all	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X5_E70 X6_E71 1_F20 3_F30/F35 5_F07 5_F18 7_F01/F02/F04 5_F10/F11 x3_F25 x4_F26 X1_E84 X6_E72

Part	Components	Year	Body Type
MAINTENANCE	Oil Reset with tool	all	3_E46 5_E39 7_E38 X5_E53 Z8_E52
MAINTENANCE	Oil Reset without tool	all	3_E46 5_E39 7_E38 X5_E53 Z8_E52