

**TOYOTA/LEXUS/HINO NON-USA SPECIAL FUNCTION  
VER. 3.30**

SYSTEM	ITEM	Specification	
4WD_CAN	Reset memory	4WD-01	
ABS/VSC/TRC	Air bleeding	ABS-01	
		ABS-02	
		ABS-03	
		ABS-05	
		ABS-14	
	ABS-15		
	Ecb utility	ABS-09	
	Es calibration	ABS-06	
Inspection mode	ABS-12		
Reset memory	ABS-04		
Test mode	ABS-08		
AIR CONDITIONER	Rear cooling unit check	AC-03	
	Servomotor initialization	AC-01	
ECT	A/t code reset	EFI-18	
	A/t code registration	EFI-17	
	Reset memory	EFI-03	
EMPS	Torque sensor adjustment	EMPS-01	
		EMPS-04	
		EMPS-05	
		EMPS-06	
Abnormal operation history	EMPS-02		
Engine and ECT	A/f sensor compensation reset	ECD-12	
	Cvt oil pressure calibration	EFI-23	
	Catalyst record clear	ECD-07	
	Catalyst record read	ECD-08	
	Catalyst record transferring	ECD-06	
	Crank time compensation reset	ECD-11	
	Dpf deterioration record clear	ECD-23	
	Deceleration sensor zero point calibration	EFI-24	
	Electric throttle learning	EFI-14	
	Injector compensation	ECD-03	
		ECD-04	
		ECD-13	
		ECD-17	
	Reset memory	EFI-03,EFI-98	
	All readiness	EFI-10	
	Engine oil pressure control check	ECD-27	
	Learning values confirmation	EFI-16	
	Learning values save	ECD-14,19	
	Learning values write	ECD-15,20	
	Pilot quantity learning	ECD-09	
	Pilot quantity learning values clear	ECD-25	
	Pilot quantity learning values reset	ECD-22	
	Shift control synchronization	EFI-25	
Vin	EFI-12		
Learning value and mileage control	ECD-02		
Injector class change	ECD-01		
Vehicle mileage write	ECD-24		
Supply pump initialization	ECD-05		
Entry&Start	Key code erasure	SMRT-04,09	
		SMRT-07,06,12	
Four Wheel Drive	Reset memory	4WD-01	
Free-Tronic	Air bleeding	ACS-02	
	Parts exchange	ACS-01	
	Pressure release	ACS-03	
Hybrid Control	Initialization	HV-01	
	B1 air bleeding	HV-03	
	Inspection mode	HV-04	
	Reset memory	HV-02	

**TOYOTA/LEXUS/HINO NON-USA SPECIAL FUNCTION  
VER. 3.30**

SYSTEM	ITEM	Specification	
Immobiliser	Key code erasure	IMM-02	
		IMM-05	
	Transponder code erasure	STR-02	
		STR-10	
		STR-42	
	Transponder code erasure 2	STR-08	
	Transponder code registration	STR-01	
Transponder code registration / key code registration	STR-41,STR-51		
Multi-Mode M/T	Air bleeding	MMT-03	
	Clutch adjust count	MMT-05	
	Initialization	MMT-04	
	Parts exchange	MMT-01	
		MMT-02	
Occupant Detection	Sensitivity check	OCC-02	
	Zero point calibration	OCC-04	
Stabilizer	Stabilizer system check	STB-02	
Steering Lock	Transponder code erasure	STR-02	
Stop and Start	Ecu exchange	ECO-02	
	Starter exchange	ECO-01	
Theft Deterrent	Key code erasure	TDS-02	
VGRS	Steering angle adjust	VGRS-01	
		VGRS-03	
	Abnormal operation history	VGRS-02	
AFS	Ecu information sync	AFS-02	
	Steering sensor initialization	AFS-01	
Clearance Sonar	Steering initialization	CSN-01,CSN-02	
Electric Parking Brake	Reset memory	EPB-01	
HV Battery	Initialization	HVB-02	
Lane Keeping Assist /Pre-Crash 2	Camera axis adjust	DLK-02,DLK-04	
	Camera/target position memory	DLK-01,DLK-03	
Remote Engine Starter	Trouble factor code clear	RES-01	
Pre-Crash 2	Rear beam axis adjustment	DP2-01,DP2-04	
	Rear radar sensor check	DP2-02	
	Recog ecu h temp hist reset	DP2-03	

TOYOTA/LEXUS/HINO NON-USA  
VER. 3.30

● : SUPPORT  
- : NOT SUPPORT

MODEL	SYSTEM	DTC	CD	ACT	SPECIAL FUNCTION
4RUNNER	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
	PPS	●	●	-	●
	SRS	●	●	-	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	BACK-DOOR	●	●	●	-
	TDS	●	●	●	-
	KDSS	●	●	●	-
AVALON	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	METER	●	●	●	-
	GATEWAY	●	-	-	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	BACK-DOOR	●	●	●	-
	D SEAT	●	●	●	-
	ENTRY&START	●	●	●	-
	MIRROR-L/R	●	●	●	-
	COMBINAION S/W	-	●	●	-
	TDS	●	●	●	-
	RAIN SENSOR	●	●	-	-
	POWER SOURCE CONTROL	●	●	●	-
	OCCUPANT DETECTION	●	●	-	●
	AVENSIS	ENGINE AND ECT	●	●	●
ECT		●	●	●	●
CRUISE CONTROL		●	●	-	-
RADAR CRUISER		●	●	-	-
EMPS		●	●	-	●
ABS/VSC		●	●	●	●
ELECTRIC PARKING BRAKE		●	●	●	●
SRS		●	●	-	-
AIR CONDITIONER		●	●	●	-
AFS		●	●	●	●
METER		●	●	●	-
MAIN BODY		●	●	●	-
PM3 GATEWAY		●	●	-	-
IMMOBILIZER		●	●	●	●
BODY (1,2,3,4,5)		●	●	●	-
D/P DOOR MOTOR		●	●	●	-
RL/RR DOOR MOTOR		●	●	●	-
D SEAT		●	●	●	-
ENTRY&START		●	●	●	-
PRE-CRASH		●	●	●	-
PRE-CRASH2		●	●	●	●
MASTER SW		●	●	-	-
SLIDE ROOF		●	●	●	-
TILT & TELESCO		●	●	●	-
TDS		●	●	●	-
TVSS		●	●	●	-
CHARGING CONTROL		●	●	●	-
STARTING CONTROL		●	●	●	-
POWER SOURCE CONTROL		●	●	●	-
LANE KEEPING ASSIST		●	●	-	●
TIRE PRSSURE MONITOR	●	●	-	-	
AVENSIS VERSO	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	PM5 GATEWAY	●	●	-	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR MOTOR	●	●	●	-
	RL/RR DOOR MOTOR	●	●	●	-
	ENTRY&START	●	●	●	-
	MASTER SW	●	●	-	-

TOYOTA/LEXUS/HINO NON-USA  
VER. 3.30

● : SUPPORT  
- : NOT SUPPORT

MODEL	SYSTEM	DTC	CD	ACT	SPECIAL FUNCTION
	SLIDE ROOF	●	●	●	-
	CHARGING CONTROL	●	●	●	-
	NAVIGATION SYSTEM	●	-	-	-
	STARTING CONTROL	●	●	●	-
	HL AUTOLEVELING	●	●	●	-
	POWER SOURCE CONTROL	●	●	●	-
COROLLA ALTIS	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
COROLLA	CHARGING CONTROL	●	●	●	-
	ENGINE AND ECT	●	●	●	●
	MULTI-MODE MT	●	●	●	●
	STOP & GO	●	●	●	●
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	ACCESSORY GATEWAY	●	●	-	-
	GATEWAY	●	-	-	-
	IMMOBILIZER	●	●	●	●
	D/P DOOR MOTOR	●	●	●	-
	RL/RR DOOR MOTOR	●	●	●	-
	MASTER SW	●	●	-	-
	SLIDE ROOF	●	●	●	-
	TDS	●	●	●	-
	CHARGING CONTROL	●	●	●	-
	HL AUTOLEVELING	●	●	●	-
COROLLA VERSO	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	PM11 GATEWAY	●	●	-	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR MOTOR	●	●	●	-
	RL/RR DOOR MOTOR	●	●	●	-
	ENTRY&START	●	●	●	-
	MASTER SW	●	●	-	-
	SLIDE ROOF	●	●	●	-
	CHARGING CONTROL	●	●	●	-
	NAVIGATION SYSTEM	●	-	-	-
	STARTING CONTROL	●	●	●	-
	HL AUTOLEVELING	●	●	●	-
POWER SOURCE CONTROL	●	●	●	-	
AURIS	ENGINE AND ECT	●	●	●	●
	MULTI-MODE MT	●	●	●	●
	STOP & GO	●	●	●	●
	EV	●	-	-	-
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	AIR CONDITIONER	●	●	●	-
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	ACCESSORY GATEWAY	●	●	-	-
	GATEWAY	●	-	-	-
	IMMOBILIZER	●	●	●	●
	D/P DOOR MOTOR	●	●	●	-
	RL/RR DOOR MOTOR	●	●	●	-
	ENTRY&START	●	●	●	-
	MASTER SW	●	●	-	-
	SLIDE ROOF	●	●	●	-
	TDS	●	●	●	-
	CHARGING CONTROL	●	●	●	-
	HL AUTOLEVELING	●	●	●	-
	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	RADAR CRUISER	●	●	-	-
	E-ACM	●	●	●	-

TOYOTA/LEXUS/HINO NON-USA  
VER. 3.30

● : SUPPORT  
- : NOT SUPPORT

MODEL	SYSTEM	DTC	CD	ACT	SPECIAL FUNCTION
CAMRY	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	AFS	●	●	●	●
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	GATEWAY	●	-	-	-
	IMMOBILIZER	●	●	●	●
	D/P DOOR MOTOR	●	●	●	-
	RL/RR DOOR MOTOR	●	●	●	-
	D SEAT	●	●	●	-
	ENTRY&START	●	●	●	-
	MIRROR	-	●	●	-
	PRE-CRASH	●	●	●	-
	MASTER SW	●	●	-	-
	SLIDE ROOF	●	●	●	-
	TILT & TELESCO	●	●	●	-
	TDS	●	●	●	-
	NAVIGATION SYSTEM	●	-	-	-
	CLEARANCE SONAR	●	●	●	●
CAMRY HV	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	HYBRID CONTROL	●	●	●	●
	EV	●	-	-	-
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	AFS	●	●	●	●
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	GATEWAY	●	-	-	-
	D/P DOOR MOTOR	●	●	●	-
	RL/RR DOOR MOTOR	●	●	●	-
	D SEAT	●	●	●	-
	ENTRY&START	●	●	●	-
	MIRROR	-	●	●	-
	MASTER SW	●	●	-	-
	SLIDE ROOF	●	●	●	-
	TILT & TELESCO	●	●	●	-
	TDS	●	●	●	-
NAVIGATION SYSTEM	●	-	-	-	
CARINA	ENGINE AND ECT	●	●	●	●
	SRS	●	●	-	-
	IMMOBILIZER	●	●	●	●
CELICA	ENGINE AND ECT	●	●	●	●
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
CENTURY	IMMOBILIZER	●	●	●	●
	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	AIR SUSPENSION	●	●	-	-
	SRS	●	●	-	-
CORONA	IMMOBILIZER	●	●	●	●
	ENGINE AND ECT	●	●	●	●
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
CRESSIDA	IMMOBILIZER	●	●	●	●
	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
CROWN	ABS/VSC	●	●	●	●
	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	METER	●	●	●	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	-	-
	FRONT LEFT DOOR	●	●	●	-
	FRONT RIGHT DOOR	●	●	●	-
	SLIDE ROOF	●	●	●	-
TILT & TELESCO	●	●	●	-	

TOYOTA/LEXUS/HINO NON-USA  
VER. 3.30

● : SUPPORT  
- : NOT SUPPORT

MODEL	SYSTEM	DTC	CD	ACT	SPECIAL FUNCTION
	COMBINAION S/W	-	●	-	-
	TDS	●	●	●	-
	POWER SOURCE CONTROL	●	●	●	-
CELSIOR	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
DYNA	ENGINE AND ECT	●	●	●	●
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
HIACE	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
HILUX	IMMOBILIZER	●	●	●	●
	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
HARRIER	SRS	●	●	-	-
	IMMOBILIZER	●	●	●	●
	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
HIGHLANDER	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	IMMOBILIZER	●	●	●	●
	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	EMPS	●	●	-	●
	FOUR WHEEL DRIVE	●	●	●	●
	AIR CONDITIONER	●	●	●	-
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR MOTOR	●	●	●	-
	RL/RR DOOR MOTOR	●	●	●	-
	BACK-DOOR	●	●	●	-
	ENTRY&START	●	●	●	-
SLIDE ROOF	●	●	●	-	
OCCUPANT DETECTION	●	●	-	●	
HIGHLANDER HV	IMMOBILIZER	●	●	●	●
	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
KIJANG	SRS	●	●	-	-
	IMMOBILIZER	●	●	●	●
	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
LAND CRUISER/PRADO	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	ACCESSORY GATEWAY	●	●	-	-
	GATEWAY	●	-	-	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR MOTOR	●	●	●	-
	RL/RR DOOR MOTOR	●	●	●	-
	D SEAT	●	●	●	-
	FRONT L/R SEAT A/C	●	●	●	-
	ENTRY&START	●	●	●	-
	MIRROR	-	●	●	-
	PRE-CRASH	●	●	●	-

TOYOTA/LEXUS/HINO NON-USA  
VER. 3.30

● : SUPPORT  
- : NOT SUPPORT

MODEL	SYSTEM	DTC	CD	ACT	SPECIAL FUNCTION
	MASTER SW	●	●	-	-
	SLIDE ROOF	●	●	●	-
	TILT & TELESKO	●	●	●	-
	TDS	●	●	●	-
	RAIN SENSOR	●	●	-	-
	WIPER	-	●	●	-
	CLEARANCE SONAR	●	●	●	●
LITEACE	ENGINE AND ECT	●	●	●	●
	SRS	●	●	-	-
	IMMOBILIZER	●	●	●	●
MR2	ENGINE AND ECT	●	●	●	●
	SEQUENTIAL MT	●	●	●	-
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	EHPS	●	●	-	●
	SRS	●	●	-	-
	IMMOBILIZER	●	●	●	●
PASEO	ENGINE AND ECT	●	●	●	●
	SRS	●	●	-	-
	IMMOBILIZER	●	●	●	●
PICNIC	ENGINE AND ECT	●	●	●	●
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	IMMOBILIZER	●	●	●	●
PREVIA(TARAGO)	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	PARK ASSIST MONITOR SYSTEM	●	●	-	-
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	AFS	●	●	●	●
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	GATEWAY	●	-	-	-
	IMMOBILIZER	●	●	●	●
	D/P DOOR MOTOR	●	●	●	-
	RL/RR DOOR MOTOR	●	●	●	-
	BACK-DOOR	●	●	●	-
	ENTRY&START	●	●	●	-
	PRE-CRASH	●	●	●	-
	MASTER SW	●	●	-	-
	SLIDE ROOF	●	●	●	-
TDS	●	●	●	-	
PREMIO	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
RAV4	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	FOUR WHEEL DRIVE	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	ACCESSORY GATEWAY	●	●	-	-
	IMMOBILIZER	●	●	●	●
	D/P DOOR MOTOR	●	●	●	-
	SLIDE ROOF	●	●	●	-
	TDS	●	●	●	-
	NAVIGATION SYSTEM	●	-	-	-
TIRE PRSSURE MONITOR	●	●	-	-	
OCCUPANT DETECTION	●	●	-	●	
RAV4 EV	ENGINE AND ECT	●	●	●	●
	EV BATTERY	●	●	●	-
	BATTERY	●	●	●	-
	SRS	●	●	-	-
	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	LASER CRUISE	●	●	-	-
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-

TOYOTA/LEXUS/HINO NON-USA  
VER. 3.30

● : SUPPORT  
- : NOT SUPPORT

MODEL	SYSTEM	DTC	CD	ACT	SPECIAL FUNCTION
SIENNA	AIR CONDITIONER	●	●	●	-
	METER	●	●	●	-
	GATEWAY	●	-	-	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	RL/RR DOOR MOTOR	●	●	●	-
	BACK-DOOR	●	●	●	-
	D SEAT	●	●	●	-
	MIRROR-L/R	-	●	●	-
	TIRE PRSSURE MONITOR	●	●	-	-
	OCCUPANT DETECTION	●	●	-	●
SOLARA	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
SOLUNA(AFC)	SRS	●	●	-	-
	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
SPACIO	SRS	●	●	-	-
	ENGINE AND ECT	●	●	●	●
	ABS/VSC	●	●	●	●
STARLET	SRS	●	●	-	-
	ENGINE AND ECT	●	●	●	●
	IMMOBILIZER	●	●	●	●
SUPRA	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	TRACTION	●	-	-	-
	ABS/VSC	●	●	●	●
TAMARAW	SRS	●	●	-	-
	ENGINE AND ECT	●	●	●	●
TERCEL	ENGINE AND ECT	●	●	●	●
	SRS	●	●	-	-
TRUCK	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
SEQUOIA	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
	AIR SUSPENSION	●	●	●	-
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR MOTOR	●	●	●	-
	RL/RR DOOR MOTOR	●	●	●	-
	D/P DOOR	●	●	●	-
	BACK-DOOR	●	●	●	-
	BACK DOOR PW	●	●	●	-
	D SEAT	●	●	●	-
	MIRROR	●	●	●	-
	SLIDE ROOF	●	●	●	-
	TILT & TELESCO	●	●	●	-
	NAVIGATION SYSTEM	●	-	-	-
TIRE PRSSURE MONITOR	●	●	●	-	
OCCUPANT DETECTION	●	●	-	●	
TUNDRA	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR MOTOR	●	●	●	-
	RL/RR DOOR MOTOR	●	●	●	-
	D/P DOOR	●	●	●	-
	BACK DOOR PW	●	●	-	-
	D SEAT	●	●	●	-
	MIRROR	-	●	●	-



TOYOTA/LEXUS/HINO NON-USA  
VER. 3.30

● : SUPPORT  
- : NOT SUPPORT

MODEL	SYSTEM	DTC	CD	ACT	SPECIAL FUNCTION
	SLIDE ROOF	●	●	●	-
	TILT & TELESCO	●	●	●	-
	NAVIGATION SYSTEM	●	-	-	-
	OCCUPANT DETECTION	●	●	-	●
T100	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
TACOMA	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
UNSER	ENGINE AND ECT	●	●	●	●
YARIS / Echo	ENGINE AND ECT	●	●	●	●
	MULTI-MODE MT	●	●	●	●
	STOP & GO	●	●	●	●
	FREE-TRONIC	●	●	●	●
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	MAIN BODY	●	●	●	-
	IMMOBILIZER	●	●	●	●
	D/P DOOR MOTOR	●	●	●	-
	ENTRY&START	●	●	●	-
	TDS	●	●	●	-
	CHARGING CONTROL	●	●	●	-
	OCCUPANT DETECTION	●	●	-	●
COASTER	ENGINE AND ECT	●	●	●	●
	ABS/VSC	●	●	●	●
CONDOR	ENGINE AND ECT	●	●	●	●
	SRS	●	●	-	-
	IMMOBILIZER	●	●	●	●
PRIUS	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	RADAR CRUISER	●	●	-	-
	HYBRID CONTROL	●	●	●	●
	HV BATTERY	●	●	●	●
	BATTERY	●	●	●	-
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	INTELLIGENT PARKING ASSIST	●	-	-	-
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	PM99 GATEWAY	●	●	-	-
	PM100 GATEWAY	●	●	-	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR MOTOR	●	●	●	-
	RL/RR DOOR MOTOR	●	●	●	-
	D SEAT	●	●	●	-
	ENTRY&START	●	●	●	-
	PRE-CRASH2	●	●	-	●
	MASTER SW	●	●	-	-
CHARGING CONTROL	●	●	●	-	
NAVIGATION SYSTEM	●	-	-	-	
HL AUTOLEVELING	●	●	●	-	
TRANSMISSION CONTROL	●	●	-	-	
POWER SOURCE CONTROL	●	●	●	-	
LANE KEEPING ASSIST	●	●	-	●	
ZACE	ENGINE AND ECT	●	●	●	●
CROWN COMFORT	ENGINE AND ECT	●	●	●	●
QUALIS	ENGINE AND ECT	●	●	●	●
VIOS	ENGINE AND ECT	●	●	●	●
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	IMMOBILIZER	●	●	●	●
	D/P DOOR MOTOR	●	●	●	-
	ENTRY&START	●	●	●	-
SLIDE ROOF	●	●	●	-	

TOYOTA/LEXUS/HINO NON-USA  
VER. 3.30

● : SUPPORT  
- : NOT SUPPORT

MODEL	SYSTEM	DTC	CD	ACT	SPECIAL FUNCTION
ALPHARD	TDS	●	●	●	-
	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	EMS	●	●	●	-
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	ELECTRIC PARKING BRAKE	●	●	●	●
	FOUR WHEEL DRIVE	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	AFS	●	●	●	●
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	GATEWAY	●	-	-	-
	IMMOBILIZER	●	●	●	●
	D/P DOOR MOTOR	●	●	●	-
	RL/RR DOOR MOTOR	●	●	●	-
	D/P DOOR	●	●	●	-
	RL/RR DOOR	●	●	●	-
	BACK-DOOR	●	●	●	-
	D SEAT	●	●	●	-
	ENTRY&START	●	●	●	-
MIRROR	-	●	●	-	
MASTER SW	●	●	●	-	
SLIDE ROOF	●	●	●	-	
CLEARANCE SONAR	●	●	●	●	
KLUGER	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	-	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	METER	●	●	●	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	-	-
SLIDE ROOF	●	●	●	-	
WISH	TDS	●	●	●	-
	ENGINE AND ECT	●	●	●	●
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	IMMOBILIZER	●	●	●	●
AVANZA	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
INNOVA	IMMOBILIZER	●	●	●	●
	ENGINE AND ECT	●	●	●	●
Fortuner	ABS/VSC	●	●	●	●
	ENGINE AND ECT	●	●	●	●
	SRS	●	●	-	-
Rush	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
ZACE	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
RIZ	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	EV	●	●	●	-
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	AFS	●	●	●	●
	METER	●	●	●	-
	GATEWAY	●	-	-	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	ENTRY&START	●	●	●	-
	MASTER SW	●	●	●	-
SLIDE ROOF	●	●	●	-	
POWER SOURCE CONTROL	●	●	●	-	

TOYOTA/LEXUS/HINO NON-USA  
VER. 3.30

● : SUPPORT  
- : NOT SUPPORT

MODEL	SYSTEM	DTC	CD	ACT	SPECIAL FUNCTION
IQ	ENGINE AND ECT	●	●	●	●
	STOP & GO	●	●	●	●
	EV	●	-	-	-
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	PM127 GATEWAY	●	●	-	-
	PM128 GATEWAY	●	●	-	-
	IMMOBILIZER	●	●	●	●
	D/P DOOR MOTOR	●	●	●	-
	RL/RR DOOR MOTOR	●	●	●	-
	MASTER SW	●	●	●	-
	CHARGING CONTROL	●	●	●	-
	STARTING CONTROL	●	●	●	-
	POWER SOURCE CONTROL	●	●	●	-
ESTIMA	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	PARK ASSIST MONITOR SYSTEM	●	●	-	-
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	AFS	●	●	●	●
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	GATEWAY	●	-	-	-
	IMMOBILIZER	●	●	●	●
	D/P DOOR MOTOR	●	●	●	-
	RL/RR DOOR MOTOR	●	●	●	-
	BACK-DOOR	●	●	●	-
	ENTRY&START	●	●	●	-
	PRE-CRASH	●	●	●	-
MASTER SW	●	●	-	-	
SLIDE ROOF	●	●	●	-	
TDS	●	●	●	-	
RACTIS	ENGINE AND ECT	●	●	●	●
	MULTI-MODE MT	●	●	●	●
	STOP & GO	●	●	●	●
	FREE-TRONIC	●	●	●	●
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	MAIN BODY	●	●	●	-
	IMMOBILIZER	●	●	●	●
	D/P DOOR MOTOR	●	●	●	-
	ENTRY&START	●	●	●	-
	TDS	●	●	●	-
VELLFIRE	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	EMS	●	●	-	-
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	ELECTRIC PARKING BRAKE	●	●	●	●
	FOUR WHEEL DRIVE	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	AFS	●	●	●	●
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	GATEWAY	●	-	-	-
	IMMOBILIZER	●	●	●	●
	D/P DOOR MOTOR	●	●	●	-
	RL/RR DOOR MOTOR	●	●	●	-
	D/P DOOR	●	●	●	-
	RL/RR DOOR	●	●	●	-
	BACK-DOOR	●	●	●	-
	D SEAT	●	●	●	-
ENTRY&START	●	●	●	-	

TOYOTA/LEXUS/HINO NON-USA  
VER. 3.30

● : SUPPORT  
- : NOT SUPPORT

MODEL	SYSTEM	DTC	CD	ACT	SPECIAL FUNCTION
	MIRROR	-	●	●	-
	MASTER SW	●	●	●	-
	SLIDE ROOF	●	●	●	-
HARRIER	CLEARANCE SONAR	●	●	●	●
	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	LASER CRUISE	●	●	-	-
	RADAR CRUISER	●	●	-	-
	HYBRID CONTROL	●	●	●	●
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	AIR SUSPENSION	●	●	●	-
	FOUR WHEEL DRIVE	●	●	●	●
	PARK ASSIST MONITOR SYSTEM	●	●	-	-
	INTELLIGENT PARKING ASSIST	●	●	-	-
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	AFS	●	●	●	●
	MAIN BODY	●	●	●	-
	PM135 GATEWAY	●	●	-	-
	PM136 GATEWAY	●	●	-	-
	GATEWAY	●	-	-	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR MOTOR	●	●	●	-
	RL/RR DOOR MOTOR	●	●	●	-
	RL/RR DOOR	●	●	●	-
	BACK-DOOR	●	●	●	-
	D SEAT	●	●	●	-
	ENTRY&START	●	●	●	-
	MIRROR-L/R	-	●	●	-
	PRE-CRASH	●	●	-	-
	PRE-CRASH2	●	●	-	●
	SLIDE ROOF	●	●	●	-
	TILT & TELESCO	●	●	●	-
	TDS	●	●	●	-
	RAIN SENSOR	●	●	-	-
	CHARGING CONTROL	●	●	●	-
	WIPER	-	●	●	-
	NAVIGATION SYSTEM	●	-	-	-
	STARTING CONTROL	●	●	●	-
	POWER SOURCE CONTROL	●	●	●	-
REMOTE ENGINE STARTER	●	●	-	●	
OCCUPANT DETECTION	●	●	-	●	
CLEARANCE SONAR	●	●	●	●	
BB	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	EMPS	●	●	-	●
ES250	SRS	●	●	-	-
	ENGINE AND ECT	●	●	●	●
ES300	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	EMS	●	●	●	-
	ABS/VSC	●	●	●	●
	SRS	●	-	-	-
	AIR CONDITIONER	●	●	●	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR	-	●	●	-
	TDS	●	●	●	-
ES330	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	EMS	●	●	●	-
	ABS/VSC	●	●	●	●
	SRS	●	-	-	-
	AIR CONDITIONER	●	●	●	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR	-	●	●	-
TDS	●	●	●	-	
	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-

TOYOTA/LEXUS/HINO NON-USA  
VER. 3.30

● : SUPPORT  
- : NOT SUPPORT

MODEL	SYSTEM	DTC	CD	ACT	SPECIAL FUNCTION
ES350	RADAR CRUISER	●	●	-	-
	E-ACM	●	●	●	-
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	AFS	●	●	●	●
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	GATEWAY	●	-	-	-
	D/P DOOR MOTOR	●	●	●	-
	RL/RR DOOR MOTOR	●	●	●	-
	D SEAT	●	●	●	-
	P SEAT	●	●	●	-
	ENTRY&START	●	●	●	-
	MIRROR	-	●	●	-
	PRE-CRASH	●	●	●	-
	MASTER SW	●	●	●	-
	SLIDE ROOF	●	●	●	-
	TILT & TELESCO	●	●	●	-
	NAVIGATION SYSTEM	●	-	-	-
	TIRE PRSSURE MONITOR	●	●	●	-
	OCCUPANT DETECTION	●	●	-	●
	CLEARANCE SONAR	●	●	●	●
GS300	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	RADAR CRUISER	●	●	-	-
	EMS	●	-	-	-
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	FOUR WHEEL DRIVE	●	●	●	●
	VGRS	●	●	-	●
	FRONT STABILIZER	●	●	●	-
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	AFS	●	●	●	●
	METER	●	●	●	-
	GATEWAY	●	-	-	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR	●	●	●	-
	RL/RR DOOR	●	●	●	-
	D SEAT	●	●	●	-
	P SEAT	●	●	●	-
	D-SEAT SW	-	●	-	-
	ENTRY&START	●	●	●	-
	PRE-CRASH	●	●	●	-
	MASTER SW	●	●	-	-
	SLIDE ROOF	-	●	●	-
	TILT & TELESCO	●	●	●	-
	RAIN SENSOR	●	●	-	-
	POWER SOURCE CONTROL	●	●	●	-
	TIRE PRSSURE MONITOR	●	●	●	-
OCCUPANT DETECTION	●	●	-	●	
CLEARANCE SONAR	●	●	●	●	
COMBINATION SWITCH	-	●	-	-	
GS400	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	METER	●	●	●	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR	●	●	●	-
	RL/RR DOOR	●	●	●	-
	P SEAT	●	●	●	-
	SLIDE ROOF	-	●	●	-
	TILT & TELESCO	●	●	●	-
	STEERING PAD	-	●	-	-
	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	RADAR CRUISER	●	●	-	-
	EMS	●	-	-	-
	EMPS	●	●	-	●

TOYOTA/LEXUS/HINO NON-USA  
VER. 3.30

● : SUPPORT  
- : NOT SUPPORT

MODEL	SYSTEM	DTC	CD	ACT	SPECIAL FUNCTION
GS430	ABS/VSC	●	●	●	●
	FOUR WHEEL DRIVE	●	●	●	●
	VGRS	●	●	-	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	AFS	●	●	●	●
	METER	●	●	●	-
	GATEWAY	●	-	-	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR	●	●	●	-
	RL/RR DOOR	●	●	●	-
	D SEAT	●	●	●	-
	P SEAT	●	●	●	-
	D-SEAT SW	-	●	-	-
	ENTRY&START	●	●	●	-
	PRE-CRASH	●	●	●	-
	MASTER SW	-	●	●	-
	SLIDE ROOF	-	●	●	-
	TILT & TELESCO	●	●	●	-
	RAIN SENSOR	●	●	-	-
	POWER SOURCE CONTROL	●	●	●	-
	OCCUPANT DETECTION	●	●	-	●
	STEERING PAD	-	●	-	-
GS450H	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	RADAR CRUISER	●	●	-	-
	HYBRID CONTROL	●	●	●	●
	EMS	●	-	-	-
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	FOUR WHEEL DRIVE	●	●	●	●
	VGRS	●	●	-	●
	STABILIZER	●	●	-	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	AFS	-	●	●	●
	METER	●	●	●	-
	HV GATEWAY	●	-	-	-
	GATEWAY	●	-	-	-
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR	●	●	●	-
	RL/RR DOOR	●	●	●	-
	D SEAT	●	●	●	-
	P SEAT	●	●	●	-
	D-SEAT SW	-	●	-	-
	ENTRY&START	●	●	●	-
	PRE-CRASH	●	●	●	-
	MASTER SW	-	●	●	-
	SLIDE ROOF	-	●	●	-
	TILT & TELESCO	●	●	●	-
	RAIN SENSOR	●	●	-	-
	POWER SOURCE CONTROL	●	●	●	-
	TIRE PRSSURE MONITOR	●	●	-	-
OCCUPANT DETECTION	●	●	-	●	
CLEARANCE SONAR	●	●	●	●	
COMBINATION SWITCH	-	●	-	-	
GS460	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	RADAR CRUISER	●	●	-	-
	HYBRID CONTROL	●	●	●	●
	EMS	●	-	-	-
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	VGRS	●	●	-	●
	STABILIZER	●	●	-	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	AFS	-	●	●	●
	METER	●	●	●	-
	GATEWAY	●	-	-	-
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR	●	●	●	-
	RL/RR DOOR	●	●	●	-
	D SEAT	●	●	●	-
	P SEAT	●	●	●	-

TOYOTA/LEXUS/HINO NON-USA  
VER. 3.30

● : SUPPORT  
- : NOT SUPPORT

MODEL	SYSTEM	DTC	CD	ACT	SPECIAL FUNCTION
	D-SEAT SW	-	●	-	-
	ENTRY&START	●	●	●	-
	PRE-CRASH	●	●	●	-
	MASTER SW	-	●	●	-
	SLIDE ROOF	-	●	●	-
	TILT & TELESCO	●	●	●	-
	RAIN SENSOR	●	●	-	-
	POWER SOURCE CONTROL	●	●	●	-
	TIRE PRSSURE MONITOR	●	●	-	-
	OCCUPANT DETECTION	●	●	-	●
	CLEARANCE SONAR	●	●	●	●
	COMBINATION SWITCH	-	●	-	-
GX460	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	RADAR CRUISER	●	●	-	-
	ABS/VSC	●	●	●	●
	AIR SUSPENSION	●	●	●	-
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	AFS	-	●	●	●
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	PM157 GATEWAY	●	●	-	-
	PM158 GATEWAY	●	●	-	-
	D/P DOOR MOTOR	●	●	●	-
	RL/RR DOOR MOTOR	●	●	●	-
	D SEAT	●	●	●	-
	ENTRY&START	●	●	●	-
	MIRROR-L/R	●	●	-	-
	PRE-CRASH	●	●	●	-
	PRE-CRASH2	●	●	●	●
	SLIDE ROOF	-	●	●	-
	TILT & TELESCO	●	●	●	-
	NAVIGATION SYSTEM	●	-	-	-
	STARTING CONTROL	●	●	●	-
	POWER SOURCE CONTROL	●	●	●	-
	LANE KEEPING ASSIST	●	●	-	●
	KDSS	●	●	●	-
	CLEARANCE SONAR	●	●	●	●
	GX470	ENGINE AND ECT	●	●	●
CRUISE CONTROL		●	●	-	-
ABS/VSC		●	●	●	●
SRS		●	●	-	-
AIR CONDITIONER		●	●	●	-
METER		●	●	●	-
IMMOBILIZER		●	●	●	●
BODY (1,2,3,4,5)		●	●	●	-
D/P DOOR		●	●	●	-
RL/RR DOOR		●	●	●	-
P SEAT		●	●	●	-
SLIDE ROOF		-	●	●	-
TILT & TELESCO		●	●	●	-
STEERING PAD		-	●	-	-
LS400	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
	AIR SUSPENSION	●	●	-	-
	SRS	●	●	-	-
	SIDE BAG	●	-	-	-
	AIR CONDITIONER	●	●	●	-
	METER	●	●	●	-
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR	●	●	●	-
	RL/RR DOOR	●	●	●	-
	P SEAT	●	●	●	-
	SLIDE ROOF	-	●	●	-
	TILT & TELESCO	●	●	●	-
		ENGINE AND ECT	●	●	●
ECT		●	●	●	●
CRUISE CONTROL		●	●	-	-
LASER CRUISE		●	●	-	-
RADAR CRUISER		●	●	-	-
ABS/VSC		●	●	●	●
AIR SUSPENSION		●	●	-	-
SRS		●	●	-	-

TOYOTA/LEXUS/HINO NON-USA  
VER. 3.30

● : SUPPORT  
- : NOT SUPPORT

MODEL	SYSTEM	DTC	CD	ACT	SPECIAL FUNCTION
LS430	AIR CONDITIONER	●	●	●	-
	AFS	●	●	-	●
	METER	●	●	●	-
	GATEWAY	●	-	-	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR	●	●	●	-
	RL/RR DOOR	●	●	●	-
	D SEAT	●	●	●	-
	RR/RL SEAT	-	●	●	-
	REAR SEAT S/W	-	●	-	-
	PRE-CRASH	●	●	-	-
	SLIDE ROOF	-	●	●	-
	TILT & TELESCO	●	●	●	-
	COMBINAION S/W	-	●	-	-
	TDS	●	●	●	-
	RAIN SENSOR	●	●	-	-
	STEERING LOCK	●	●	●	-
	STEERING PAD	-	●	-	-
	CLEARANCE SONAR	●	●	●	●
LS450	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
	AIR SUSPENSION	●	●	-	-
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	METER	●	●	●	-
	GATEWAY	●	-	-	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR	●	●	●	-
	RL/RR DOOR	●	●	●	-
	D SEAT	●	●	●	-
	RR/RL SEAT	-	●	●	-
	REAR SEAT S/W	-	●	-	-
	SLIDE ROOF	-	●	●	-
	TILT & TELESCO	●	●	●	-
	COMBINAION S/W	-	●	-	-
	TDS	●	●	●	-
	RAIN SENSOR	●	●	-	-
STEERING LOCK	●	●	●	-	
STEERING PAD	-	●	-	-	
CLEARANCE SONAR	●	●	●	●	
LS460	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	RADAR CRUISER	●	●	-	-
	ABS/VSC	●	●	●	●
	AIR SUSPENSION	●	●	●	-
	ELECTRIC PARKING BRAKE	●	●	●	●
	INTELLIGENT PARKING ASSIST	●	-	-	-
	VGRS	●	●	-	●
	FRONT STABILIZER	●	●	●	-
	REAR STABILIZER	●	●	-	-
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	AFS	●	●	●	●
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	ACCESSORY GATEWAY	●	●	-	-
	ECB GATEWAY	●	●	-	-
	ECM GATEWAY	●	●	-	-
	WIL GATEWAY	●	●	-	-
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR	●	●	●	-
	RL/RR DOOR	●	●	●	-
	BACK-DOOR	●	●	●	-
	D SEAT	●	●	●	-
	P SEAT	●	●	●	-
	RR/RL SEAT	●	●	●	-
REAR SEAT S/W	-	●	●	-	
D-SEAT SW	●	●	●	-	
FRONT L/R SEAT A/C	●	●	●	-	
REAR L/R SEAT A/C	●	●	●	-	
ENTRY&START	●	●	●	-	
PRE-CRASH	●	●	●	-	



TOYOTA/LEXUS/HINO NON-USA  
VER. 3.30

● : SUPPORT  
- : NOT SUPPORT

MODEL	SYSTEM	DTC	CD	ACT	SPECIAL FUNCTION
	PRE-CRASH2	●	●	●	●
	MASTER SW	●	●	-	-
	SLIDE ROOF	●	●	●	-
	TILT & TELESCO	●	●	●	-
	COMBINAION S/W	-	●	-	-
	RAIN SENSOR	●	●	-	-
	LANE KEEPING ASSIST	●	●	-	●
	TIRE PRSSURE MONITOR	●	●	-	-
	OCCUPANT DETECTION	●	●	-	●
	CENTER CONSOLE SWITCH	-	●	●	-
	ELECTRIC POWER CONTROL	●	●	●	-
	ACTIVE HEADREST L/R	●	●	●	-
	STEERING PAD	-	●	-	-
	CLEARANCE SONAR	●	●	●	●
	COMBINATION SWITCH	●	●	-	-
LS600H	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	RADAR CRUISER	●	●	-	-
	HYBRID CONTROL	●	●	●	●
	ABS/VSC	●	●	●	●
	AIR SUSPENSION	●	●	●	-
	ELECTRIC PARKING BRAKE	●	●	●	●
	VGRS	●	●	-	●
	FRONT STABILIZER	●	●	●	-
	REAR STABILIZER	●	●	-	-
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	AFS	●	●	●	●
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	ACCESSORY GATEWAY	●	●	-	-
	ECB GATEWAY	●	●	-	-
	ECM GATEWAY	●	●	-	-
	WIL GATEWAY	●	●	-	-
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR	●	●	●	-
	RL/RR DOOR	●	●	●	-
	BACK-DOOR	●	●	●	-
	D SEAT	●	●	●	-
	P SEAT	●	●	●	-
	RR/RL SEAT	●	●	●	-
	REAR SEAT S/W	-	●	●	-
	D-SEAT SW	●	●	●	-
	FRONT L/R SEAT A/C	●	●	●	-
	REAR L/R SEAT A/C	●	●	●	-
	ENTRY&START	●	●	●	-
	PRE-CRASH	●	●	●	-
	PRE-CRASH2	●	●	●	●
	MASTER SW	●	●	-	-
	SLIDE ROOF	●	●	●	-
	TILT & TELESCO	●	●	●	-
	COMBINAION S/W	-	●	-	-
	RAIN SENSOR	●	●	-	-
	TIRE PRSSURE MONITOR	●	●	-	-
	OCCUPANT DETECTION	●	●	-	●
	CENTER CONSOLE SWITCH	-	●	●	-
	ELECTRIC POWER CONTROL	●	●	●	-
	ACTIVE HEADREST L/R	●	●	●	-
	STEERING PAD	-	●	-	-
CLEARANCE SONAR	●	●	●	●	
COMBINATION SWITCH	●	●	-	-	
LX430	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
	AHC	●	●	-	-
	VGRS	●	●	-	●
	SRS	●	●	-	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR	●	●	●	-
	D SEAT	●	●	●	-
	P SEAT	●	●	●	-
	MIRROR	-	●	●	-
	SLIDE ROOF	-	●	●	-
	TILT & TELESCO	●	●	●	-

TOYOTA/LEXUS/HINO NON-USA  
VER. 3.30

● : SUPPORT  
- : NOT SUPPORT

MODEL	SYSTEM	DTC	CD	ACT	SPECIAL FUNCTION
	TDS	●	●	●	-
	RAIN SENSOR	●	●	-	-
	WIPER	-	●	●	-
LX450	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
	AHC	●	●	●	-
	VGRS	●	●	-	●
	SRS	●	●	-	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR	●	●	●	-
	D SEAT	●	●	●	-
	P SEAT	●	●	●	-
	MIRROR	-	●	●	-
	SLIDE ROOF	-	●	●	-
	TILT & TELESCO	●	●	●	-
	TDS	●	●	●	-
	RAIN SENSOR	●	●	-	-
	WIPER	-	●	●	-
	ENGINE AND ECT	●	●	●	●
LX470	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
	AHC	●	●	●	-
	VGRS	●	●	-	●
	SRS	●	●	-	-
	ACCESSORY GATEWAY	●	●	-	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR	●	●	●	-
	D SEAT	●	●	●	-
	P SEAT	●	●	●	-
	MIRROR	-	●	-	-
	SLIDE ROOF	-	●	●	-
	TILT & TELESCO	●	●	●	-
	TDS	●	●	●	-
	RAIN SENSOR	●	●	-	-
	WIPER	-	●	●	-
LX570	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	RADAR CRUISER	●	●	-	-
	ABS/VSC	●	●	●	●
	AHC	●	●	●	-
	VGRS	●	●	-	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	-
	AFS	●	●	●	●
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	ACCESSORY GATEWAY	●	●	-	-
	GATEWAY	●	-	-	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR MOTOR	●	●	●	-
	RL/RR DOOR MOTOR	●	●	●	-
	D/P DOOR	●	●	●	-
	BACK-DOOR	●	●	●	-
	D SEAT	●	●	●	-
	P SEAT	●	●	●	-
	FRONT L/R SEAT A/C	●	●	●	-
	ENTRY&START	●	●	●	-
	MIRROR	-	●	●	-
	PRE-CRASH	●	●	●	-
	MASTER SW	●	●	-	-
SLIDE ROOF	●	●	●	-	
TILT & TELESCO	●	●	●	-	
	TDS	●	●	●	-
	RAIN SENSOR	●	●	-	-
	WIPER	-	●	●	-
	CLEARANCE SONAR	●	●	●	●
	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	RADAR CRUISER	●	●	-	-

TOYOTA/LEXUS/HINO NON-USA  
VER. 3.30

● : SUPPORT  
- : NOT SUPPORT

MODEL	SYSTEM	DTC	CD	ACT	SPECIAL FUNCTION
IS F	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	●
	AFS	●	●	-	●
	METER	●	●	●	-
	GATEWAY	●	-	-	-
	BODY (1,2,3,4,5)	●	●	●	-
	D SEAT	●	●	●	-
	P SEAT	●	●	●	-
	ENTRY&START	●	●	●	-
	MIRROR-L/R	●	●	-	-
	PRE-CRASH	●	●	●	-
	MASTER SW	-	●	●	-
	SLIDE ROOF	-	●	●	-
	TILT & TELESCO	●	●	●	-
	COMBINAION S/W	-	●	-	-
	RAIN SENSOR	●	●	-	-
	POWER SOURCE CONTROL	●	●	●	-
	CLEARANCE SONAR	●	●	●	●
IS200	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	●
	METER	●	●	●	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
IS220D	TDS	●	●	●	-
	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	SRS	●	●	●	-
	AIR CONDITIONER	●	●	●	●
	AFS	●	●	●	●
	METER	●	●	●	-
	GATEWAY	●	-	-	-
	BODY (1,2,3,4,5)	●	●	●	-
	D SEAT	●	●	●	-
	P SEAT	●	●	●	-
	ENTRY&START	●	●	●	-
	MIRROR-L/R	-	●	●	-
	PRE-CRASH	●	●	●	-
	MASTER SW	-	●	●	-
	SLIDE ROOF	-	●	●	-
	TILT & TELESCO	●	●	●	-
RAIN SENSOR	●	●	-	-	
POWER SOURCE CONTROL	●	●	●	-	
CLEARANCE SONAR	●	●	●	●	
COMBINATION SWITCH	-	●	-	-	
IS250	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	RADAR CRUISER	●	●	-	-
	ABS/VSC	●	●	●	●
	PARK ASSIST MONITOR SYSTEM	●	●	-	-
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	●
	AFS	●	●	●	●
	METER	●	●	●	-
	GATEWAY	●	-	-	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	BACK-DOOR	●	●	-	-
	D SEAT	●	●	●	-
	P SEAT	●	●	●	-
	ENTRY&START	●	●	●	-
	MIRROR-L/R	-	●	●	-
	PRE-CRASH	●	●	●	-
	MASTER SW	-	●	●	-
	SLIDE ROOF	-	●	●	-
	TILT & TELESCO	●	●	●	-
	COMBINAION S/W	-	●	-	-
	TDS	●	●	●	-
RAIN SENSOR	●	●	-	-	

TOYOTA/LEXUS/HINO NON-USA  
VER. 3.30

● : SUPPORT  
- : NOT SUPPORT

MODEL	SYSTEM	DTC	CD	ACT	SPECIAL FUNCTION
	NAVIGATION SYSTEM	●	-	-	-
	POWER SOURCE CONTROL	●	●	●	-
	TIRE PRSSURE MONITOR	●	●	-	-
	OCCUPANT DETECTION	●	●	-	●
	CLEARANCE SONAR	●	●	●	●
IS300	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	RADAR CRUISER	●	●	-	-
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	●
	AFS	●	●	●	●
	METER	●	●	●	-
	GATEWAY	●	-	-	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	D SEAT	●	●	●	-
	P SEAT	●	●	●	-
	ENTRY&START	●	●	●	-
	MIRROR-L/R	-	●	●	-
	PRE-CRASH	●	●	●	-
	MASTER SW	-	●	●	-
	SLIDE ROOF	-	●	●	-
	TILT & TELESKO	●	●	●	-
	COMBINAION S/W	-	●	-	-
	TDS	●	●	●	-
	RAIN SENSOR	●	●	-	-
	POWER SOURCE CONTROL	●	●	●	-
CLEARANCE SONAR	●	●	●	●	
IS350	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	●
	METER	●	●	●	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	TDS	●	●	●	-
SC430	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	●
	AFS	●	●	●	●
	METER	●	●	●	-
	GATEWAY	●	-	-	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR	●	●	●	-
	D SEAT	●	●	●	-
	P SEAT	●	●	●	-
	TILT & TELESKO	●	●	●	-
	COMBINAION S/W	-	●	-	-
	TDS	●	●	●	-
	TIRE PRSSURE MONITOR	●	●	-	-
	OCCUPANT DETECTION	●	●	-	●
	RETRACTABLE HARDTOP	●	●	-	-
STEERING PAD	-	●	-	-	
RX300	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	●
	METER	●	●	●	-
	GATEWAY	●	-	-	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR	●	●	●	-
	D SEAT	●	●	●	-
	P SEAT	●	●	●	-
	TILT & TELESKO	●	●	●	-
	COMBINAION S/W	-	●	-	-
	TDS	●	●	●	-

TOYOTA/LEXUS/HINO NON-USA  
VER. 3.30

● : SUPPORT  
- : NOT SUPPORT

MODEL	SYSTEM	DTC	CD	ACT	SPECIAL FUNCTION
	TIRE PRSSURE MONITOR	●	●	-	-
	RETRACTABLE HARDTOP	●	●	-	-
	STEERING PAD	-	●	-	-
RX330	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	LASER CRUISE	●	●	-	-
	RADAR CRUISER	●	●	-	-
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	AIR SUSPENSION	●	●	●	-
	FOUR WHEEL DRIVE	●	●	●	●
	PARK ASSIST MONITOR SYSTEM	●	●	-	-
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	●
	AFS	●	●	●	●
	METER	●	●	●	-
	MAIN BODY	●	●	●	-
	PM195 GATEWAY	●	●	-	-
	PM196 GATEWAY	●	●	-	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR MOTOR	●	●	●	-
	RL/RR DOOR MOTOR	●	●	●	-
	BACK-DOOR	●	●	●	-
	D SEAT	●	●	●	-
	ENTRY&START	●	●	●	-
	MIRROR	-	●	●	-
	MIRROR-L/R	●	●	●	-
	PRE-CRASH	●	●	●	-
	PRE-CRASH2	●	●	●	●
	MASTER SW	-	●	●	-
	SLIDE ROOF	●	●	●	-
	TILT & TELESCO	●	●	●	-
	RAIN SENSOR	●	●	-	-
	WIPER	-	●	●	-
	NAVIGATION SYSTEM	●	-	-	-
	STARTING CONTROL	●	●	●	-
	POWER SOURCE CONTROL	●	●	-	-
	REMOTE ENGINE STARTER	●	●	-	●
	TIRE PRSSURE MONITOR	●	●	-	-
	OCCUPANT DETECTION	●	●	-	●
	CHARGING CONTROL	●	●	●	-
	CLEARANCE SONAR	●	●	●	●
	RX350	ENGINE AND ECT	●	●	●
ECT		●	●	●	●
CRUISE CONTROL		●	●	-	-
LASER CRUISE		●	●	-	-
RADAR CRUISER		●	●	-	-
EMPS		●	●	-	●
ABS/VSC		●	●	●	●
AIR SUSPENSION		●	●	●	-
FOUR WHEEL DRIVE		●	●	●	●
PARK ASSIST MONITOR SYSTEM		●	●	-	-
SRS		●	●	-	-
AIR CONDITIONER		●	●	●	●
AFS		●	●	●	●
METER		●	●	●	-
MAIN BODY		●	●	●	-
PM197 GATEWAY		●	●	-	-
PM198 GATEWAY		●	●	-	-
IMMOBILIZER		●	●	●	●
BODY (1,2,3,4,5)		●	●	●	-
D/P DOOR MOTOR		●	●	●	-
RL/RR DOOR MOTOR		●	●	●	-
BACK-DOOR		●	●	●	-
D SEAT		●	●	●	-
ENTRY&START		●	●	●	-
MIRROR		-	●	●	-
MIRROR-L/R		●	●	●	-
PRE-CRASH		●	●	●	-
PRE-CRASH2		●	●	●	●
MASTER SW		-	●	●	-
SLIDE ROOF		●	●	●	-
TILT & TELESCO		●	●	●	-
RAIN SENSOR		●	●	-	-

TOYOTA/LEXUS/HINO NON-USA  
VER. 3.30

● : SUPPORT  
- : NOT SUPPORT

MODEL	SYSTEM	DTC	CD	ACT	SPECIAL FUNCTION
	WIPER	-	●	●	-
	NAVIGATION SYSTEM	●	-	-	-
	STARTING CONTROL	●	●	●	-
	POWER SOURCE CONTROL	●	●	-	-
	REMOTE ENGINE STARTER	●	●	-	●
	TIRE PRSSURE MONITOR	●	●	-	-
	OCCUPANT DETECTION	●	●	-	●
	CHARGING CONTROL	●	●	●	-
	CLEARANCE SONAR	●	●	●	●
RX400H	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	LASER CRUISE	●	●	-	-
	HYBRID CONTROL	●	●	●	●
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	●
	AFS	●	●	●	●
	METER	●	●	●	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	BACK-DOOR	●	●	●	-
	D SEAT	●	●	●	-
	MIRROR-L/R	●	●	●	-
	MASTER SW	-	●	●	-
	SLIDE ROOF	●	●	●	-
	TILT & TELESCO	●	●	●	-
	RAIN SENSOR	●	●	-	-
	WIPER	-	●	●	-
TIRE PRSSURE MONITOR	●	●	-	-	
OCCUPANT DETECTION	●	●	-	●	
RX450H	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	LASER CRUISE	●	●	-	-
	HYBRID CONTROL	●	●	●	●
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	●
	AFS	●	●	●	●
	METER	●	●	●	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	BACK-DOOR	●	●	●	-
	D SEAT	●	●	●	-
	MIRROR-L/R	●	●	●	-
	MASTER SW	-	●	●	-
	SLIDE ROOF	●	●	●	-
	TILT & TELESCO	●	●	●	-
	RAIN SENSOR	●	●	-	-
	WIPER	-	●	●	-
TIRE PRSSURE MONITOR	●	●	-	-	
OCCUPANT DETECTION	●	●	-	●	
SC300	ENGINE AND ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	IMMOBILIZER	●	●	●	●
GS350	ENGINE AND ECT	●	●	●	●
	ECT	●	●	●	●
	CRUISE CONTROL	●	●	-	-
	RADAR CRUISER	●	●	-	-
	EMS	●	-	-	-
	EMPS	●	●	-	●
	ABS/VSC	●	●	●	●
	FOUR WHEEL DRIVE	●	●	-	●
	VGRS	●	●	-	●
	FRONT STABILIZER	●	●	●	-
	SRS	●	●	-	-
	AIR CONDITIONER	●	●	●	●
	AFS	●	●	●	●
	METER	●	●	●	-
	GATEWAY	●	-	-	-
	IMMOBILIZER	●	●	●	●
	BODY (1,2,3,4,5)	●	●	●	-
	D/P DOOR	●	●	●	-

TOYOTA/LEXUS/HINO NON-USA  
VER. 3.30

● : SUPPORT  
- : NOT SUPPORT

MODEL	SYSTEM	DTC	CD	ACT	SPECIAL FUNCTION
	RL/RR DOOR	●	●	●	-
	D SEAT	●	●	●	-
	P SEAT	●	●	●	-
	D-SEAT SW	-	●	-	-
	ENTRY&START	●	●	●	-
	PRE-CRASH	●	●	●	-
	MASTER SW	●	●	-	-
	SLIDE ROOF	-	●	●	-
	TILT & TELESCO	●	●	●	-
	RAIN SENSOR	●	●	-	-
	POWER SOURCE CONTROL	●	●	●	-
	TIRE PRSSURE MONITOR	●	●	●	-
	OCCUPANT DETECTION	●	●	-	●
	CLEARANCE SONAR	●	●	●	●
	COMBINATION SWITCH	-	●	-	-
DUTRO	ENGINE AND ECT	●	●	●	-
	AT	●	●	●	-
	ABS	●	●	●	-
	SRS	●	●	●	-
RANGER	ENGINE AND ECT	●	●	●	-
	AT	●	●	●	-
	ABS	●	●	●	-
	SRS	●	●	●	-
PROFIA	ENGINE AND ECT	●	●	●	-
	AT	●	●	●	-
	ABS	●	●	●	-
	SRS	●	●	●	-