

## MaxiDiagElite\_Eobd\_V1. 43 Function List (Note:For reference only)

## NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported.

▲ This function is the new feature in this version.

As for special function please refer to the special function table.

Function	Mode	ISO 15765-4 (CAN)	SAE J1850 (PWM)	SAE J1850 (VPW)	ISO 14230-4 (KWP2000)	ISO 9141-2
DTC&FFD	\$02, \$03, \$04, \$07	•	•	•	•	•
DTC&FFD	\$0a	•	0	0	0	0
Live Data	\$01	•	•	•	•	•
Vehicle Status	\$01	•	•	•	•	•
I/M Readiness	\$01	•	•	•	•	•
02 Sensor Monitor	\$05	0	•	•	•	•
On-Board Monitor	\$06	•	•	•	•	•
Component Test	\$08	•	•	•	•	•
Vehicle Info.	\$09	•	•	•	•	•