



OilRest_Rolls-Royce_V1.20 Function List (Note:For reference only)

Part	Components	Year	Body Type
MAINTENANCE	Engine oil	all	RR1 RR2 RR3 RR4 RR5
MAINTENANCE	Spark plugs	all	RR1 RR2 RR3 RR4 RR5
MAINTENANCE	Front brakes	all	RR1 RR2 RR3 RR4 RR5
MAINTENANCE	Rear brakes	all	RR1 RR2 RR3 RR4 RR5
MAINTENANCE	Coolant	all	RR1 RR2 RR3 RR4 RR5
MAINTENANCE	Diesel particle filter	all	RR1 RR2 RR3 RR4 RR5
MAINTENANCE	Brake fluid	all	RR1 RR2 RR3 RR4 RR5
MAINTENANCE	Microfilter	all	RR1 RR2 RR3 RR4 RR5
MAINTENANCE	Vehicle inspection	all	RR1 RR2 RR3 RR4 RR5
MAINTENANCE	Exhaust emission inspection	all	RR1 RR2 RR3 RR4 RR5
MAINTENANCE	Vehicle check	all	RR1 RR2 RR3 RR4 RR5