

MaxiDas_FordEU_V9.12 Function List (Note:For reference only)

NOTES:

- This function is supported. ✖ This function may be supported, which depends on the actual condition of the vehicle.
 - This function is not supported. ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.**

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	4X4	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	ABS	●	●	●	●	0x0008
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	GEM	●	●	●	●	0x000A 0x000F
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	IC	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	PAM	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x00C5
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	RCM	●	●	●	●	0x000C
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	4X4	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	ABS	●	●	●	●	0x0008
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	GEM	●	●	●	●	0x000A 0x000F
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	IC	●	●	●	●	0x0005
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	PAM	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x00C5
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	RCM	●	●	●	●	0x000C 0x006D
AEROSTAR	3.0L	Other	1996 - 1997	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
AEROSTAR	4.0L	Other	1996 - 1997	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	ABS	●	●	●	○	○
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	ACM	●	●	●	○	○
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	APIM	●	●	●	●	○
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	BCMii	●	●	●	●	○
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	DDM	●	●	●	○	○
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	FCDIM	●	●	●	●	○
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	FDSM	●	●	●	○	○
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	GPSM	●	●	●	○	○
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	GWM	●	●	●	○	○
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	HVAC	●	●	●	●	○
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	IPC	●	●	●	●	○
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	PDM	●	●	●	○	○
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	PSCM	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	RCM	●	●	●	○	○
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	RFA	●	●	●	○	○
B-Max	1.25L	DURATEC 16V	2008	ABS	●	●	●	●	○
B-Max	1.25L	DURATEC 16V	2008	ACM	●	●	●	●	○
B-Max	1.25L	DURATEC 16V	2008	BCMii	●	●	●	●	○
B-Max	1.25L	DURATEC 16V	2008	FCDIM	●	●	●	●	○
B-Max	1.25L	DURATEC 16V	2008	HVAC	●	●	●	●	○
B-Max	1.25L	DURATEC 16V	2008	IPC	●	●	●	●	0x0009
B-Max	1.25L	DURATEC 16V	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
B-Max	1.25L	DURATEC 16V	2008	PSCM	●	●	●	●	○
B-Max	1.25L	DURATEC 16V	2008	RCM	●	●	●	●	○
B-Max	1.25L	DURATEC 16V	2008	RFA	●	●	●	●	○
B-Max	1.25L	DURATEC 16V	2008	SRM	●	●	●	●	○
B-Max	1.4L	DURATEC 16V	2008	SRM	●	●	●	●	○
B-Max	1.4L	DURATEC 16V	2008	TCM	●	●	●	●	○
B-Max	1.4L	DURATEC 16V	2008 - 2012	ABS	●	●	●	●	○
B-Max	1.4L	DURATEC 16V	2008 - 2012	ACM	●	●	●	●	○
B-Max	1.4L	DURATEC 16V	2008 - 2012	BCMii	●	●	●	●	○
B-Max	1.4L	DURATEC 16V	2008 - 2012	FCDIM	●	●	●	●	○
B-Max	1.4L	DURATEC 16V	2008 - 2012	HVAC	●	●	●	●	○
B-Max	1.4L	DURATEC 16V	2008 - 2012	IPC	●	●	●	●	0x0009
B-Max	1.4L	DURATEC 16V	2008 - 2012	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
B-Max	1.4L	DURATEC 16V	2008 - 2012	PSCM	●	●	●	●	○
B-Max	1.4L	DURATEC 16V	2008 - 2012	RCM	●	●	●	●	○
B-Max	1.4L	DURATEC 16V	2008 - 2012	RFA	●	●	●	●	○
B-Max	1.4L	DURATEC 16V	2012	APIM	●	●	●	●	○
B-Max	1.4L	DURATEC 16V	2012	DDM	●	●	●	○	○
B-Max	1.4L	DURATEC 16V	2012	FDSM	●	●	●	○	○
B-Max	1.4L	DURATEC 16V	2012	GPSM	●	●	●	○	○
B-Max	1.4L	DURATEC 16V	2012	GWM	●	●	●	○	○
B-Max	1.4L	DURATEC 16V	2012	PDM	●	●	●	○	○
B-Max	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	ABS	●	●	●	●	○
B-Max	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	ACM	●	●	●	●	○
B-Max	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	BCMii	●	●	●	●	○
B-Max	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	FCDIM	●	●	●	●	○
B-Max	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	HVAC	●	●	●	●	○
B-Max	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	IPC	●	●	●	●	0x0009
B-Max	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0099 0x009A 0x00B4 0x00BC 0x00C1

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
B-Max	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	PSCM	●	●	●	●	○
B-Max	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	RCM	●	●	●	●	○
B-Max	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	RFA	●	●	●	●	○
B-Max	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	SRM	●	●	●	●	○
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	ABS	●	●	●	○	0x002B 0x002C 0x0054 0x00D7 0x00D9 0x00DB 0x00E8 0x0119
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	ACM	●	●	●	○	○
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	APIM	●	●	●	●	○
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	BCMii	●	●	●	●	0x00FE 0x0101 0x0118
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	DDM	●	●	●	○	○
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	FCDIM	●	●	●	●	○
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	FDSM	●	●	●	○	○
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	GPSM	●	●	●	○	○
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	GWM	●	●	●	○	○
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	HVAC	●	●	●	●	○
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	IPC	●	●	●	●	0x0009
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	PDM	●	●	●	○	○
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	PSCM	●	●	●	○	0x00DC
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	RCM	●	●	●	○	0x00EF
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	RFA	●	●	●	○	○
B-Max	1.6L	DURATEC VCT	2008	SRM	●	●	●	●	○
B-Max	1.6L	DURATEC VCT	2008 - 2012	ABS	●	●	●	●	○
B-Max	1.6L	DURATEC VCT	2008 - 2012	ACM	●	●	●	●	○
B-Max	1.6L	DURATEC VCT	2008 - 2012	BCMii	●	●	●	●	○
B-Max	1.6L	DURATEC VCT	2008 - 2012	FCDIM	●	●	●	●	○
B-Max	1.6L	DURATEC VCT	2008 - 2012	HVAC	●	●	●	●	○
B-Max	1.6L	DURATEC VCT	2008 - 2012	IPC	●	●	●	●	0x0009
B-Max	1.6L	DURATEC VCT	2008 - 2012	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
B-Max	1.6L	DURATEC VCT	2008 - 2012	PSCM	●	●	●	●	○
B-Max	1.6L	DURATEC VCT	2008 - 2012	RCM	●	●	●	●	○
B-Max	1.6L	DURATEC VCT	2008 - 2012	RFA	●	●	●	●	○
B-Max	1.6L	DURATEC VCT	2012	APIM	●	●	●	●	○
B-Max	1.6L	DURATEC VCT	2012	DDM	●	●	●	○	○
B-Max	1.6L	DURATEC VCT	2012	FDSM	●	●	●	○	○
B-Max	1.6L	DURATEC VCT	2012	GPSM	●	●	●	○	○
B-Max	1.6L	DURATEC VCT	2012	GWM	●	●	●	○	○
B-Max	1.6L	DURATEC VCT	2012	PDM	●	●	●	○	○
B-Max	1.6L	DURATEC VCT	2012	TCM	●	●	●	●	○
B-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	ABS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
B-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	ACM	●	●	●	●	○
B-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	BCMii	●	●	●	●	○
B-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	FCDIM	●	●	●	●	○
B-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	HVAC	●	●	●	●	○
B-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	IPC	●	●	●	●	0x0009
B-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x00AA 0x00B0 0x00B1
B-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	PSCM	●	●	●	●	○
B-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	RCM	●	●	●	●	○
B-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	RFA	●	●	●	●	○
B-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	SRM	●	●	●	●	○
B-Max	1.6L	TDCi ECO II	2012	ABS	●	●	●	○	0x002B 0x002C 0x0054 0x00D7 0x00D9 0x00DB 0x00E8 0x0119
B-Max	1.6L	TDCi ECO II	2012	ACM	●	●	●	○	○
B-Max	1.6L	TDCi ECO II	2012	APIM	●	●	●	●	○
B-Max	1.6L	TDCi ECO II	2012	BCMii	●	●	●	●	0x00FE 0x0101 0x0118
B-Max	1.6L	TDCi ECO II	2012	DDM	●	●	●	○	○
B-Max	1.6L	TDCi ECO II	2012	FCDIM	●	●	●	●	○
B-Max	1.6L	TDCi ECO II	2012	FDSM	●	●	●	○	○
B-Max	1.6L	TDCi ECO II	2012	GPSM	●	●	●	○	○
B-Max	1.6L	TDCi ECO II	2012	GWM	●	●	●	○	○
B-Max	1.6L	TDCi ECO II	2012	HVAC	●	●	●	●	○
B-Max	1.6L	TDCi ECO II	2012	IPC	●	●	●	●	0x0009
B-Max	1.6L	TDCi ECO II	2012	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
B-Max	1.6L	TDCi ECO II	2012	PDM	●	●	●	○	○
B-Max	1.6L	TDCi ECO II	2012	PSCM	●	●	●	○	0x00DC
B-Max	1.6L	TDCi ECO II	2012	RCM	●	●	●	○	0x00EF
B-Max	1.6L	TDCi ECO II	2012	RFA	●	●	●	○	○
BT-50 / Ranger	2.2L	F2	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	2.2L	F2	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
BT-50 / Ranger	2.2L	F2	2007	RCM	●	●	●	●	○
BT-50 / Ranger	2.5L	L5	2012	ABS	●	●	●	●	○
BT-50 / Ranger	2.5L	L5	2012	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083
BT-50 / Ranger	2.5L	WL	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	2.5L	WL	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
BT-50 / Ranger	2.5L	WL	2007	RCM	●	●	●	●	○
BT-50 / Ranger	2.5L	WL-CD	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	2.5L	WL-CD	2007	PCM	●	●	●	●	0x0055 0x0080 0x0081 0x0082 0x0083
BT-50 / Ranger	2.5L	WL-CD	2007	RCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
BT-50 / Ranger	2.5L	WL-CD	2007	TCM	●	●	●	●	○
BT-50 / Ranger	2.6L	G6	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	2.6L	G6	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
BT-50 / Ranger	2.6L	G6	2007	RCM	●	●	●	●	○
BT-50 / Ranger	3.0L	WE-CD	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	3.0L	WE-CD	2007	PCM	●	●	●	●	0x0055 0x0080 0x0081 0x0082 0x0083
BT-50 / Ranger	3.0L	WE-CD	2007	RCM	●	●	●	●	○
BT-50 / Ranger	3.0L	WE-CD	2007	TCM	●	●	●	●	○
BT-50 / Ranger	4.0L	V6 SOHC	2007	ABS/TCS	●	●	●	●	0x0008
BT-50 / Ranger	4.0L	V6 SOHC	2007	ESOF	●	●	●	●	○
BT-50 / Ranger	4.0L	V6 SOHC	2007	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083
BT-50 / Ranger	4.0L	V6 SOHC	2007	RCM	●	●	●	●	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	ABS	●	●	●	●	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	ACM	●	●	●	●	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	APIM	●	●	●	●	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	BECM	●	●	●	●	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	DDM	●	●	●	○	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	GWM	●	●	●	○	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	HVAC	●	●	●	●	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	IPC	●	●	●	●	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	PAM	●	●	○	○	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	PSCM	●	●	●	●	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	RFA	●	●	●	○	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2014	FCIM	●	●	●	●	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2014	GPSM	●	●	●	○	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2014	RGTM	●	●	●	○	○
C-MAX	2.0L	PHEV	2013 - 2014	ABS	●	●	●	●	○
C-MAX	2.0L	PHEV	2013 - 2014	ACM	●	●	●	●	○
C-MAX	2.0L	PHEV	2013 - 2014	APIM	●	●	●	●	○
C-MAX	2.0L	PHEV	2013 - 2014	BECM	●	●	●	●	○
C-MAX	2.0L	PHEV	2013 - 2014	DDM	●	●	●	○	○
C-MAX	2.0L	PHEV	2013 - 2014	GFM	●	●	●	○	○
C-MAX	2.0L	PHEV	2013 - 2014	GWM	●	●	●	○	○
C-MAX	2.0L	PHEV	2013 - 2014	HVAC	●	●	●	●	○
C-MAX	2.0L	PHEV	2013 - 2014	IPC	●	●	●	●	○
C-MAX	2.0L	PHEV	2013 - 2014	PAM	●	●	○	○	○
C-MAX	2.0L	PHEV	2013 - 2014	PSCM	●	●	●	●	○
C-MAX	2.0L	PHEV	2013 - 2014	RFA	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
C-MAX	2. 0L	PHEV	2013 - 2014	SOBDM	●	●	●	●	○
C-MAX	2. 0L	PHEV	2013 - 2014	TCU#1	●	●	●	○	○
C-MAX	2. 0L	PHEV	2014	FCIM	●	●	●	●	○
C-MAX	2. 0L	PHEV	2014	GPSM	●	●	●	○	○
C-MAX	2. 0L	PHEV	2014	RGTM	●	●	●	○	○
Cougar	2. 0L	Zetec	1998 - 2002	ABS/TCS	●	●	●	●	0x0008
Cougar	2. 0L	Zetec	1998 - 2002	CSM	●	●	●	●	○
Cougar	2. 0L	Zetec	1998 - 2002	HEC	●	●	●	●	○
Cougar	2. 0L	Zetec	1998 - 2002	IAB	●	●	●	●	○
Cougar	2. 0L	Zetec	1998 - 2002	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009
Cougar	2. 5L	Duratec-VE	1998 - 2002	ABS/TCS	●	●	●	●	0x0008
Cougar	2. 5L	Duratec-VE	1998 - 2002	CSM	●	●	●	●	○
Cougar	2. 5L	Duratec-VE	1998 - 2002	HEC	●	●	●	●	○
Cougar	2. 5L	Duratec-VE	1998 - 2002	IAB	●	●	●	●	○
Cougar	2. 5L	Duratec-VE	1998 - 2002	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009
Cougar	2. 5L	Duratec-VE	2001	ABS	●	●	●	●	○
Cougar	2. 5L	Duratec-VE	2001	IC	●	●	●	●	○
Cougar	2. 5L	Duratec-VE	2001	MC	●	●	●	●	○
Cougar	2. 5L	Duratec-VE	2001	REM	●	●	●	●	○
Cougar	3. 8L	Other	1996 - 1997	ABS/TCS	●	●	●	●	○
Cougar	3. 8L	Other	1996 - 1997	HEC	●	●	●	●	○
Cougar	3. 8L	Other	1996 - 1997	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Cougar	4. 6L	2V	1994 - 1997	ABS/TCS	●	●	●	●	○
Cougar	4. 6L	2V	1994 - 1997	HEC	●	●	●	●	○
Cougar	4. 6L	2V	1994 - 1997	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Crown Victoria	4. 6L	2V	1995 - 1997	DSM	●	●	●	●	○
Crown Victoria	4. 6L	2V	1995 - 2004	ABS/TCS	●	●	●	●	0x0008
Crown Victoria	4. 6L	2V	1995 - 2007	EATC	●	●	●	●	○
Crown Victoria	4. 6L	2V	1995 - 2011	DDM	●	●	●	●	0x000F 0x000A 0x0042 0x0005
Crown Victoria	4. 6L	2V	1995 - 2011	LCM	●	●	●	●	○
Crown Victoria	4. 6L	2V	1995 - 2011	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0009 0x00C5
Crown Victoria	4. 6L	2V	1996 - 1997	IAB	●	●	●	●	○
Crown Victoria	4. 6L	2V	1998 - 2000	ECS	●	●	●	●	○
Crown Victoria	4. 6L	2V	1998 - 2002	PATS	●	●	●	●	0x0009
Crown Victoria	4. 6L	2V	2000 - 2011	RCM	●	●	●	●	0x000C

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Crown Victoria	4. 6L	2V	2003 - 2006	RASM	●	●	●	●	0x0013
Crown Victoria	4. 6L	2V	2003 - 2006	VAPS	●	●	●	●	○
Crown Victoria	4. 6L	2V	2004 - 2010	MC	●	●	●	●	○
Crown Victoria	4. 6L	2V	2005 - 2011	ABS	●	●	●	●	0x0008
Crown Victoria	4. 6L	2V	2005 - 2011	FSSM	●	●	●	●	○
Crown Victoria	4. 6L	2V	2006 - 2011	IC	●	●	●	●	0x0005
Crown Victoria	4. 6L	2V	2007 - 2011	VDM	●	●	●	●	0x0005 0x0013 0x0014
Crown Victoria	4. 6L	2V	2008 - 2011	HVAC	●	●	●	●	○
Crown Victoria	4. 6L	2V_NGV	1996 - 1997	DSM	●	●	●	●	○
Crown Victoria	4. 6L	2V_NGV	1996 - 1997	IAB	●	●	●	●	○
Crown Victoria	4. 6L	2V_NGV	1996 - 2000	ABS/TCS	●	●	●	●	0x0008
Crown Victoria	4. 6L	2V_NGV	1996 - 2000	DDM	●	●	●	●	0x000F 0x000A
Crown Victoria	4. 6L	2V_NGV	1996 - 2000	FIM	●	●	●	●	○
Crown Victoria	4. 6L	2V_NGV	1996 - 2000	LCM	●	●	●	●	○
Crown Victoria	4. 6L	2V_NGV	1996 - 2000	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033
Crown Victoria	4. 6L	2V_NGV	1998 - 2000	EATC	●	●	●	●	○
Crown Victoria	4. 6L	2V_NGV	1998 - 2000	ECS	●	●	●	●	○
Crown Victoria	4. 6L	2V_NGV	1998 - 2000	PATS	●	●	●	●	0x0009
Crown Victoria	4. 6L	2V_NGV	2000	RCM	●	●	●	●	○
Crown Victoria	4. 6L	Other	1995	ABS/TCS	●	●	●	●	0x0008
Crown Victoria	4. 6L	Other	1995	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
E-Series	4. 2L	Other	1997 - 2003	ABS/TCS	●	●	●	●	0x0008
E-Series	4. 2L	Other	1997 - 2003	ECS	●	●	●	●	○
E-Series	4. 2L	Other	1997 - 2003	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033
E-Series	4. 6L	2V	2003	ECS	●	●	●	●	○
E-Series	4. 6L	2V	2003 - 2007	ABS/TCS	●	●	●	●	0x0008 0x001B
E-Series	4. 6L	2V	2003 - 2014	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083
E-Series	4. 6L	2V	2004 - 2006	RAP	●	●	●	●	0x000A 0x000F
E-Series	4. 6L	2V	2004 - 2008	IC	●	●	●	●	0x0005 0x0009
E-Series	4. 6L	2V	2004 - 2014	RCM	●	●	●	●	○
E-Series	4. 6L	2V	2006 - 2014	ABS	●	●	●	●	0x0008 0x0012
E-Series	4. 6L	2V	2007 - 2008	VSM	●	●	●	●	0x000A 0x0042
E-Series	4. 6L	2V	2007 - 2014	PAM	●	●	●	●	○
E-Series	4. 6L	2V	2009 - 2014	ACM	●	●	●	●	0x0017 0x0018

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
E-Series	4. 6L	2V	2009 - 2014	GEM /	●	●	●	●	0x000A 0x0042
E-Series	4. 6L	2V	2009 - 2014	IPC	●	●	●	●	○
E-Series	4. 6L	2V	2009 - 2014	TBC	●	●	●	●	○
E-Series	4. 6L	2V	2010 - 2013	SDARS	●	●	●	●	○
E-Series	4. 6L	2V	2010 - 2014	APIM	●	●	●	●	0x0019
E-Series	4. 6L	2V	2010 - 2014	GPSM	●	●	●	○	○
E-Series	4. 6L	Other	1997 - 2002	ABS/TCS	●	●	●	●	0x0008
E-Series	4. 6L	Other	1997 - 2002	ECS	●	●	●	●	○
E-Series	4. 6L	Other	1997 - 2002	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033
E-Series	4. 9L	GFP	1996	ABS/TCS	●	●	●	●	0x0008
E-Series	4. 9L	GFP	1996	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083
E-Series	4. 9L	Other	1996	ABS/TCS	●	●	●	●	0x0008
E-Series	4. 9L	Other	1996	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
E-Series	5. 0L	Other	1996	ABS/TCS	●	●	●	●	0x0008
E-Series	5. 0L	Other	1996	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
E-Series	5. 4L	2V	2004	AFCM	●	●	●	●	○
E-Series	5. 4L	2V	2004 - 2006	RAP	●	●	●	●	0x000A 0x000F
E-Series	5. 4L	2V	2004 - 2007	ABS/TCS	●	●	●	●	0x0008 0x001B
E-Series	5. 4L	2V	2004 - 2008	IC	●	●	●	●	0x0005 0x0009
E-Series	5. 4L	2V	2004 - 2014	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083
E-Series	5. 4L	2V	2004 - 2014	RCM	●	●	●	●	0x0005
E-Series	5. 4L	2V	2006 - 2014	ABS	●	●	●	●	0x0008 0x0012
E-Series	5. 4L	2V	2007 - 2008	VSM	●	●	●	●	0x000A 0x0042
E-Series	5. 4L	2V	2007 - 2014	PAM	●	●	●	●	○
E-Series	5. 4L	2V	2009 - 2014	ACM	●	●	●	●	0x0017 0x0018
E-Series	5. 4L	2V	2009 - 2014	GEM /	●	●	●	●	0x000A 0x0042
E-Series	5. 4L	2V	2009 - 2014	IPC	●	●	●	●	○
E-Series	5. 4L	2V	2009 - 2014	TBC	●	●	●	●	○
E-Series	5. 4L	2V	2010 - 2013	SDARS	●	●	●	●	○
E-Series	5. 4L	2V	2010 - 2014	APIM	●	●	●	●	0x0019
E-Series	5. 4L	2V	2010 - 2014	GPSM	●	●	●	○	○
E-Series	5. 4L	BIF	1999	ABS/TCS	●	●	●	●	0x0008
E-Series	5. 4L	BIF	1999	AFCM	●	●	●	●	○
E-Series	5. 4L	BIF	1999	ECS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
E-Series	5.4L	BIF	1999	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083
E-Series	5.4L	NGV	1997 - 2000	ABS/TCS	●	●	●	●	0x0008
E-Series	5.4L	NGV	1997 - 2000	ECS	●	●	●	●	○
E-Series	5.4L	NGV	1997 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033
E-Series	5.4L	NGV	1998 - 2000	FIM	●	●	●	●	○
E-Series	5.4L	Other	1997 - 2003	ABS/TCS	●	●	●	●	0x0008
E-Series	5.4L	Other	1997 - 2003	ECS	●	●	●	●	○
E-Series	5.4L	Other	1997 - 2003	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033
E-Series	5.8L	Other	1996	ABS/TCS	●	●	●	●	0x0008
E-Series	5.8L	Other	1996	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
E-Series	6.0L	Direct Injection - Turbo	2004 - 2006	RAP	●	●	●	●	0x000A 0x000F
E-Series	6.0L	Direct Injection - Turbo	2004 - 2007	ABS/TCS	●	●	●	●	0x0008 0x001B
E-Series	6.0L	Direct Injection - Turbo	2004 - 2008	IC	●	●	●	●	0x0005 0x0009
E-Series	6.0L	Direct Injection - Turbo	2004 - 2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
E-Series	6.0L	Direct Injection - Turbo	2004 - 2010	RCM	●	●	●	●	○
E-Series	6.0L	Direct Injection - Turbo	2004 - 2010	TCM	●	●	●	●	○
E-Series	6.0L	Direct Injection - Turbo	2006 - 2010	ABS	●	●	●	●	0x0008 0x0012 0x0005
E-Series	6.0L	Direct Injection - Turbo	2007 - 2008	VSM	●	●	●	●	0x000A 0x0042
E-Series	6.0L	Direct Injection - Turbo	2007 - 2010	PAM	●	●	●	●	○
E-Series	6.0L	Direct Injection - Turbo	2009 - 2010	ACM	●	●	●	●	0x0017 0x0018
E-Series	6.0L	Direct Injection - Turbo	2009 - 2010	GEM /	●	●	●	●	0x000A 0x0042
E-Series	6.0L	Direct Injection - Turbo	2009 - 2010	IPC	●	●	●	●	○
E-Series	6.0L	Direct Injection - Turbo	2009 - 2010	TBC	●	●	●	●	○
E-Series	6.0L	Direct Injection - Turbo	2010	APIM	●	●	●	●	0x0019
E-Series	6.0L	Direct Injection - Turbo	2010	GPSM	●	●	●	○	○
E-Series	6.0L	Direct Injection - Turbo	2010	SDARS	●	●	●	●	○
E-Series	6.8L	2V	2004 - 2006	RAP	●	●	●	●	0x000A 0x000F
E-Series	6.8L	2V	2004 - 2007	ABS/TCS	●	●	●	●	0x0008 0x001B
E-Series	6.8L	2V	2004 - 2008	IC	●	●	●	●	0x0009
E-Series	6.8L	2V	2004 - 2014	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083
E-Series	6.8L	2V	2004 - 2014	RCM	●	●	●	●	○
E-Series	6.8L	2V	2006 - 2014	ABS	●	●	●	●	0x0008 0x0012 0x0005
E-Series	6.8L	2V	2007 - 2008	VSM	●	●	●	●	0x000A 0x0042
E-Series	6.8L	2V	2007 - 2014	PAM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
E-Series	6. 8L	2V	2009 - 2014	ACM	●	●	●	●	0x0017 0x0018
E-Series	6. 8L	2V	2009 - 2014	GEM /	●	●	●	●	0x000A 0x0042
E-Series	6. 8L	2V	2009 - 2014	IPC	●	●	●	●	○
E-Series	6. 8L	2V	2009 - 2014	TBC	●	●	●	●	○
E-Series	6. 8L	2V	2010 - 2013	SDARS	●	●	●	●	○
E-Series	6. 8L	2V	2010 - 2014	APIM	●	●	●	●	0x0019
E-Series	6. 8L	2V	2010 - 2014	GPSM	●	●	●	○	○
E-Series	6. 8L	Other	1997 - 2003	ABS/TCS	●	●	●	●	0x0008
E-Series	6. 8L	Other	1997 - 2003	ECS	●	●	●	●	○
E-Series	6. 8L	Other	1997 - 2003	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033
E-Series	7. 3L	Direct Injection - Turbo	1995 - 2003	ABS/TCS	●	●	●	●	0x0008
E-Series	7. 3L	Direct Injection - Turbo	1995 - 2003	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x0083 0x0010 0x0028 0x0031 0x0033
E-Series	7. 3L	Direct Injection - Turbo	1997 - 2003	ECS	●	●	●	●	○
E-Series	7. 5L	Other	1996	ABS/TCS	●	●	●	●	0x0008
E-Series	7. 5L	Other	1996	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
E-Series	Other	Other	2012	ABS	●	●	●	●	○
E-Series	Other	Other	2012	ACM	●	●	●	●	○
E-Series	Other	Other	2012	APIM	●	●	●	●	○
E-Series	Other	Other	2012	GEM /	●	●	●	●	0x0042
E-Series	Other	Other	2012	GPSM	●	●	●	●	○
E-Series	Other	Other	2012	IPC	●	●	●	●	○
E-Series	Other	Other	2012	PAM	●	●	●	●	○
E-Series	Other	Other	2012	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
E-Series	Other	Other	2012	RCM	●	●	●	●	○
E-Series	Other	Other	2012	SDARS	●	●	●	●	○
E-Series	Other	Other	2012	TBC	●	●	●	●	○
E-Series Shuttle Bus	6. 8L	H2ICE	2006	ABS/TCS	●	●	●	●	○
E-Series Shuttle Bus	6. 8L	H2ICE	2006	AFCM	●	●	●	●	○
E-Series Shuttle Bus	6. 8L	H2ICE	2006	EMM	●	●	●	●	○
E-Series Shuttle Bus	6. 8L	H2ICE	2006	IC	●	●	●	●	○
E-Series Shuttle Bus	6. 8L	H2ICE	2006	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083
E-Series Shuttle Bus	6. 8L	H2ICE	2006	RCM	●	●	●	●	○
EcoSport	1. 0L	EcoBoost - Gas Turbocharged Direct Injection	2013	ABS	●	●	●	●	○
EcoSport	1. 0L	EcoBoost - Gas Turbocharged Direct Injection	2013	ACM	●	●	●	●	○
EcoSport	1. 0L	EcoBoost - Gas Turbocharged Direct Injection	2013	DDM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
EcoSport	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	HVAC	●	●	●	●	○
EcoSport	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	PSCM	●	●	●	○	○
EcoSport	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	RCM	●	●	●	○	○
EcoSport	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	APIM	●	●	●	●	○
EcoSport	1.0L	Zetec Rocam	2003	ABS/TCS	●	●	●	●	0x0008 0x000B
EcoSport	1.0L	Zetec Rocam	2003	GEM	●	●	●	●	○
EcoSport	1.0L	Zetec Rocam	2003	IC	●	●	●	●	○
EcoSport	1.0L	Zetec Rocam	2003	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
EcoSport	1.0L	Zetec Rocam	2003	RCM	●	●	●	●	○
EcoSport	1.0L	Zetec Rocam	2003	RKE	●	●	●	●	○
EcoSport	1.4L	Duratorq Turbo Diesel Common Rail Injection	2003	ABS/TCS	●	●	●	●	0x0008 0x000B
EcoSport	1.4L	Duratorq Turbo Diesel Common Rail Injection	2003	GEM	●	●	●	●	○
EcoSport	1.4L	Duratorq Turbo Diesel Common Rail Injection	2003	IC	●	●	●	●	○
EcoSport	1.4L	Duratorq Turbo Diesel Common Rail Injection	2003	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
EcoSport	1.4L	Duratorq Turbo Diesel Common Rail Injection	2003	RCM	●	●	●	●	○
EcoSport	1.4L	Duratorq Turbo Diesel Common Rail Injection	2003	RKE	●	●	●	●	○
EcoSport	1.5L	DURATEC VCT	2014	APIM	●	●	●	●	○
EcoSport	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	ABS	●	●	●	●	○
EcoSport	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	ACM	●	●	●	●	○
EcoSport	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	APIM	●	●	●	●	○
EcoSport	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	FCDIM	●	●	●	●	○
EcoSport	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	HVAC	●	●	●	●	○
EcoSport	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	PSCM	●	●	●	○	○
EcoSport	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	RCM	●	●	●	○	○
EcoSport	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	TBM	●	●	●	●	○
EcoSport	1.5L	Duratorq Turbo Diesel Common Rail Injection	2014	APIM	●	●	●	●	○
EcoSport	1.5L	TiVCT	2012	ABS	●	●	●	●	○
EcoSport	1.5L	TiVCT	2012	ACM	●	●	●	○	○
EcoSport	1.5L	TiVCT	2012	APIM	●	●	●	●	○
EcoSport	1.5L	TiVCT	2012	BCM#1	●	●	●	●	0x000A
EcoSport	1.5L	TiVCT	2012	DDM	●	●	●	○	○
EcoSport	1.5L	TiVCT	2012	FCDIM	●	●	●	●	○
EcoSport	1.5L	TiVCT	2012	HVAC	●	●	●	●	○
EcoSport	1.5L	TiVCT	2012	IPC	●	●	●	●	○
EcoSport	1.5L	TiVCT	2012	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083
EcoSport	1.5L	TiVCT	2012	PSCM	●	●	●	○	0x00CB 0x00CC
EcoSport	1.5L	TiVCT	2012	RCM	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
EcoSport	1.5L	TiVCT	2012	TCM	●	●	●	●	○
EcoSport	1.6L	FFV	2003 - 2006	GEM	●	●	●	●	○
EcoSport	1.6L	FFV	2003 - 2011	ABS/TCS	●	●	●	●	0x0008 0x000B
EcoSport	1.6L	FFV	2003 - 2011	IC	●	●	●	●	○
EcoSport	1.6L	FFV	2003 - 2011	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x012E
EcoSport	1.6L	FFV	2003 - 2011	RCM	●	●	●	●	○
EcoSport	1.6L	FFV	2003 - 2011	RKE	●	●	●	●	0x000A
EcoSport	1.6L	FFV	2011	TBM	●	●	●	●	○
EcoSport	1.6L	Sigma	2012	ABS	●	●	●	●	○
EcoSport	1.6L	Sigma	2012	ACM	●	●	●	●	○
EcoSport	1.6L	Sigma	2012	APIM	●	●	●	●	○
EcoSport	1.6L	Sigma	2012	BCM#1	●	●	●	●	○
EcoSport	1.6L	Sigma	2012	DDM	●	●	●	○	○
EcoSport	1.6L	Sigma	2012	FCDIM	●	●	●	●	○
EcoSport	1.6L	Sigma	2012	HVAC	●	●	●	●	○
EcoSport	1.6L	Sigma	2012	IPC	●	●	●	●	○
EcoSport	1.6L	Sigma	2012	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
EcoSport	1.6L	Sigma	2012	PSCM	●	●	●	○	○
EcoSport	1.6L	Sigma	2012	RCM	●	●	●	○	○
EcoSport	1.6L	Sigma	2012	RFA	●	●	●	○	○
EcoSport	1.6L	Sigma	2012	TBM	●	●	●	●	○
EcoSport	1.6L	Zetec Rocam	2003	GEM	●	●	●	●	○
EcoSport	1.6L	Zetec Rocam	2003 - 2009	ABS/TCS	●	●	●	●	0x0008 0x000B
EcoSport	1.6L	Zetec Rocam	2003 - 2009	IC	●	●	●	●	○
EcoSport	1.6L	Zetec Rocam	2003 - 2009	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
EcoSport	1.6L	Zetec Rocam	2003 - 2009	RCM	●	●	●	●	○
EcoSport	1.6L	Zetec Rocam	2003 - 2009	RKE	●	●	●	●	0x000A
EcoSport	2.0L	DURATEC	2013	ABS	●	●	●	●	○
EcoSport	2.0L	DURATEC	2013	ACM	●	●	●	●	○
EcoSport	2.0L	DURATEC	2013	APIM	●	●	●	●	○
EcoSport	2.0L	DURATEC	2013	DDM	●	●	●	●	○
EcoSport	2.0L	DURATEC	2013	HVAC	●	●	●	●	○
EcoSport	2.0L	DURATEC	2013	PSCM	●	●	●	○	○
EcoSport	2.0L	DURATEC	2013	RCM	●	●	●	○	○
EcoSport	2.0L	DURATEC	2013	TBM	●	●	●	●	○
EcoSport	2.0L	DURATEC-HE / I4	2003 - 2006	GEM	●	●	●	●	○
EcoSport	2.0L	DURATEC-HE / I4	2003 - 2007	ABS/TCS	●	●	●	●	0x0008 0x000B
EcoSport	2.0L	DURATEC-HE / I4	2003 - 2007	IC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
EcoSport	2.0L	DURATEC-HE / I4	2003 - 2007	RKE	●	●	●	●	0x000A
EcoSport	2.0L	DURATEC-HE / I4	2003 - 2012	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x0023
EcoSport	2.0L	DURATEC-HE / I4	2003 - 2012	RCM	●	●	●	●	○
EcoSport	2.0L	DURATEC-HE / I4	2012	ABS	●	●	●	●	○
EcoSport	2.0L	DURATEC-HE / I4	2012	ACM	●	●	●	●	○
EcoSport	2.0L	DURATEC-HE / I4	2012	APIM	●	●	●	●	○
EcoSport	2.0L	DURATEC-HE / I4	2012	BCM#1	●	●	●	●	○
EcoSport	2.0L	DURATEC-HE / I4	2012	DDM	●	●	●	○	○
EcoSport	2.0L	DURATEC-HE / I4	2012	FCDIM	●	●	●	●	○
EcoSport	2.0L	DURATEC-HE / I4	2012	HVAC	●	●	●	●	○
EcoSport	2.0L	DURATEC-HE / I4	2012	IPC	●	●	●	●	○
EcoSport	2.0L	DURATEC-HE / I4	2012	PSCM	●	●	●	○	○
EcoSport	2.0L	DURATEC-HE / I4	2012	RFA	●	●	●	○	○
EcoSport	2.0L	DURATEC-HE / I4	2012	TBM	●	●	●	●	○
EcoSport	2.0L	FFV	2009 - 2011	ABS/TCS	●	●	●	●	0x0008 0x000B
EcoSport	2.0L	FFV	2009 - 2011	IC	●	●	●	●	○
EcoSport	2.0L	FFV	2009 - 2011	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x00C5
EcoSport	2.0L	FFV	2009 - 2011	RCM	●	●	●	●	○
EcoSport	2.0L	FFV	2009 - 2011	RKE	●	●	●	●	0x000A
EcoSport	2.0L	FFV	2011	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
EcoSport	2.0L	Zetec Rocam	2009	ABS/TCS	●	●	●	●	○
EcoSport	2.0L	Zetec Rocam	2009	IC	●	●	●	●	○
EcoSport	2.0L	Zetec Rocam	2009	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
EcoSport	2.0L	Zetec Rocam	2009	RCM	●	●	●	●	○
EcoSport	2.0L	Zetec Rocam	2009	RKE	●	●	●	●	0x000A
EcoSport	Other	Other	2012	ABS	●	●	●	●	○
EcoSport	Other	Other	2012	ACM	●	●	●	○	○
EcoSport	Other	Other	2012	APIM	●	●	●	●	○
EcoSport	Other	Other	2012	BCM#1	●	●	●	●	0x000A
EcoSport	Other	Other	2012	DDM	●	●	●	○	○
EcoSport	Other	Other	2012	FCDIM	●	●	●	●	○
EcoSport	Other	Other	2012	HVAC	●	●	●	●	○
EcoSport	Other	Other	2012	IPC	●	●	●	●	○
EcoSport	Other	Other	2012	PSCM	●	●	●	○	○
EcoSport	Other	Other	2012	RCM	●	●	●	○	○
Escort	1.3L	Endura-E	1995 - 1998	ABS	●	●	●	●	○
Escort	1.3L	Endura-E	1995 - 1998	ABS/TCS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escort	1.3L	Endura-E	1995 - 1998	CSM	●	●	●	●	○
Escort	1.3L	Endura-E	1995 - 1998	HEC	●	●	●	●	○
Escort	1.3L	Endura-E	1995 - 1998	PATS	●	●	●	●	○
Escort	1.3L	Endura-E	1995 - 1998	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Escort	1.4L	1.4 PT-E SFI	1994 - 1998	ABS/TCS	●	●	●	●	○
Escort	1.4L	1.4 PT-E SFI	1994 - 1998	CSM	●	●	●	●	○
Escort	1.4L	1.4 PT-E SFI	1994 - 1998	HEC	●	●	●	●	○
Escort	1.4L	1.4 PT-E SFI	1994 - 1998	PATS	●	●	●	●	○
Escort	1.4L	1.4 PT-E SFI	1994 - 1998	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Escort	1.4L	1.4 PT-E SFI	1995 - 1998	ABS	●	●	●	●	○
Escort	1.6L	PT-E	Other	ABS/TCS	●	●	●	●	○
Escort	1.6L	PT-E	Other	CSM	●	●	●	●	○
Escort	1.6L	PT-E	Other	HEC	●	●	●	●	○
Escort	1.6L	PT-E	Other	PATS	●	●	●	●	○
Escort	1.6L	PT-E	Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Escort	1.6L	Zetec	1993 - 1997	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083
Escort	1.6L	Zetec	1993 - 1998	ABS/TCS	●	●	●	●	○
Escort	1.6L	Zetec	1993 - 1998	CSM	●	●	●	●	○
Escort	1.6L	Zetec	1993 - 1998	HEC	●	●	●	●	○
Escort	1.6L	Zetec	1993 - 1998	PATS	●	●	●	●	○
Escort	1.6L	Zetec	1995 - 1998	ABS	●	●	●	●	○
Escort	1.6L	Zetec Rocam	2000	ABS/TCS	●	●	●	●	○
Escort	1.6L	Zetec Rocam	2000	CSM	●	●	●	●	○
Escort	1.6L	Zetec Rocam	2000	HEC	●	●	●	●	○
Escort	1.6L	Zetec Rocam	2000	PATS	●	●	●	●	○
Escort	1.6L	Zetec Rocam	2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Escort	1.8L	Endura-DE	1996 -	ABS/TCS	●	●	●	●	○
Escort	1.8L	Endura-DE	1996 -	CSM	●	●	●	●	○
Escort	1.8L	Endura-DE	1996 -	HEC	●	●	●	●	○
Escort	1.8L	Endura-DE	1996 -	PATS	●	●	●	●	○
Escort	1.8L	Endura-DE	1996 -	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Escort	1.8L	Endura-DE	1997	ABS	●	●	●	●	○
Escort	1.8L	Other	1996	ABS/TCS	●	●	●	●	○
Escort	1.8L	Other	1996	CSM	●	●	●	●	○
Escort	1.8L	Other	1996	HEC	●	●	●	●	○
Escort	1.8L	Other	1996	PATS	●	●	●	●	○
Escort	1.8L	Other	1996	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escort	1.8L	Zetec	1992 - 1996	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083
Escort	1.8L	Zetec	1992 - 1998	ABS/TCS	●	●	●	●	○
Escort	1.8L	Zetec	1992 - 1998	CSM	●	●	●	●	○
Escort	1.8L	Zetec	1992 - 1998	HEC	●	●	●	●	○
Escort	1.8L	Zetec	1992 - 1998	PATS	●	●	●	●	○
Escort	1.8L	Zetec	1995 - 1998	ABS	●	●	●	●	○
Escort	1.9L	Other	1996	ABS/TCS	●	●	●	●	○
Escort	1.9L	Other	1996	PATS	●	●	●	●	○
Escort	1.9L	Other	1996	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Escort	2.0L	DOHC Cosworth	1994 - 1995	ABS/TCS	●	●	●	●	○
Escort	2.0L	DOHC Cosworth	1994 - 1995	PATS	●	●	●	●	○
Escort	2.0L	DOHC Cosworth	1994 - 1995	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Escort	2.0L	DOHC Cosworth	1995	ABS	●	●	●	●	○
Escort	2.0L	SPI	1997 - 2002	ABS/TCS	●	●	●	●	0x0008
Escort	2.0L	SPI	1997 - 2002	PATS	●	●	●	●	○
Escort	2.0L	SPI	1997 - 2002	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Escort	2.0L	SPI	1997 - 2002	RAP	●	●	●	●	0x000A
Escort	2.0L	SPI	1998 - 1999	ABS	●	●	●	●	0x0008
Escort	2.0L	SPI	1998 - 2002	ECS	●	●	●	●	○
Escort	2.0L	Zetec	1998 - 1999	ABS	●	●	●	●	0x0008
Escort	2.0L	Zetec	1998 - 2003	ABS/TCS	●	●	●	●	0x0008
Escort	2.0L	Zetec	1998 - 2003	ECS	●	●	●	●	○
Escort	2.0L	Zetec	1998 - 2003	PATS	●	●	●	●	○
Escort	2.0L	Zetec	1998 - 2003	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Escort	2.0L	Zetec	1998 - 2003	RAP	●	●	●	●	0x000A
Excursion	5.4L	2V	2004	ECS	●	●	●	●	○
Excursion	5.4L	2V	2004 - 2005	ABS/TCS	●	●	●	●	0x0008 0x001B
Excursion	5.4L	2V	2004 - 2005	DSM	●	●	●	●	○
Excursion	5.4L	2V	2004 - 2005	EATC	●	●	●	●	○
Excursion	5.4L	2V	2004 - 2005	GEM	●	●	●	●	○
Excursion	5.4L	2V	2004 - 2005	HEC	●	●	●	●	○
Excursion	5.4L	2V	2004 - 2005	OTC	●	●	●	●	○
Excursion	5.4L	2V	2004 - 2005	PAM	●	●	●	●	○
Excursion	5.4L	2V	2004 - 2005	PATS	●	●	●	●	0x0009
Excursion	5.4L	2V	2004 - 2005	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Excursion	5.4L	2V	2004 - 2005	VSM	●	●	●	●	0x000A 0x000F
Excursion	5.4L	2V	2005	RCM	●	●	●	●	○
Excursion	5.4L	Other	2000	MC	●	●	●	●	○
Excursion	5.4L	Other	2000 - 2003	ABS/TCS	●	●	●	●	0x0008
Excursion	5.4L	Other	2000 - 2003	ECS	●	●	●	●	○
Excursion	5.4L	Other	2000 - 2003	GEM	●	●	●	●	0x000F
Excursion	5.4L	Other	2000 - 2003	PAM	●	●	●	●	○
Excursion	5.4L	Other	2000 - 2003	PATS	●	●	●	●	0x0009
Excursion	5.4L	Other	2000 - 2003	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083
Excursion	5.4L	Other	2002	CSM	●	●	●	●	0x000A 0x000F
Excursion	5.4L	Other	2002 - 2003	DSM	●	●	●	●	○
Excursion	5.4L	Other	2002 - 2003	EATC	●	●	●	●	○
Excursion	5.4L	Other	2002 - 2003	HEC	●	●	●	●	○
Excursion	5.4L	Other	2002 - 2003	OTC	●	●	●	●	○
Excursion	5.4L	Other	2003	FOH	●	●	●	●	○
Excursion	5.4L	Other	2003	VSM	●	●	●	●	0x000A 0x000F
Excursion	6.0L	Direct Injection - Turbo	2003	FOH	●	●	●	●	○
Excursion	6.0L	Direct Injection - Turbo	2003 - 2004	ECS	●	●	●	●	○
Excursion	6.0L	Direct Injection - Turbo	2003 - 2005	ABS/TCS	●	●	●	●	0x0008 0x001B
Excursion	6.0L	Direct Injection - Turbo	2003 - 2005	DSM	●	●	●	●	○
Excursion	6.0L	Direct Injection - Turbo	2003 - 2005	EATC	●	●	●	●	○
Excursion	6.0L	Direct Injection - Turbo	2003 - 2005	GEM	●	●	●	●	○
Excursion	6.0L	Direct Injection - Turbo	2003 - 2005	HEC	●	●	●	●	○
Excursion	6.0L	Direct Injection - Turbo	2003 - 2005	OTC	●	●	●	●	○
Excursion	6.0L	Direct Injection - Turbo	2003 - 2005	PAM	●	●	●	●	○
Excursion	6.0L	Direct Injection - Turbo	2003 - 2005	PATS	●	●	●	●	0x0009
Excursion	6.0L	Direct Injection - Turbo	2003 - 2005	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x00C5
Excursion	6.0L	Direct Injection - Turbo	2003 - 2005	TCM	●	●	●	●	○
Excursion	6.0L	Direct Injection - Turbo	2003 - 2005	VSM	●	●	●	●	0x000A 0x000F
Excursion	6.0L	Direct Injection - Turbo	2005	RCM	●	●	●	●	○
Excursion	6.8L	2V	2004	ECS	●	●	●	●	○
Excursion	6.8L	2V	2004 - 2005	ABS/TCS	●	●	●	●	0x0008 0x001B
Excursion	6.8L	2V	2004 - 2005	DSM	●	●	●	●	○
Excursion	6.8L	2V	2004 - 2005	EATC	●	●	●	●	○
Excursion	6.8L	2V	2004 - 2005	GEM	●	●	●	●	○
Excursion	6.8L	2V	2004 - 2005	HEC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Excursion	6.8L	2V	2004 - 2005	OTC	●	●	●	●	○
Excursion	6.8L	2V	2004 - 2005	PAM	●	●	●	●	○
Excursion	6.8L	2V	2004 - 2005	PATS	●	●	●	●	0x0009
Excursion	6.8L	2V	2004 - 2005	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083
Excursion	6.8L	2V	2004 - 2005	VSM	●	●	●	●	0x000A 0x000F
Excursion	6.8L	2V	2005	RCM	●	●	●	●	○
Excursion	6.8L	Other	2000	MC	●	●	●	●	○
Excursion	6.8L	Other	2000 - 2003	ABS/TCS	●	●	●	●	0x0008
Excursion	6.8L	Other	2000 - 2003	ECS	●	●	●	●	○
Excursion	6.8L	Other	2000 - 2003	GEM	●	●	●	●	0x000F
Excursion	6.8L	Other	2000 - 2003	PAM	●	●	●	●	○
Excursion	6.8L	Other	2000 - 2003	PATS	●	●	●	●	0x0009
Excursion	6.8L	Other	2000 - 2003	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083
Excursion	6.8L	Other	2002	CSM	●	●	●	●	0x000A 0x000F
Excursion	6.8L	Other	2002 - 2003	DSM	●	●	●	●	○
Excursion	6.8L	Other	2002 - 2003	EATC	●	●	●	●	○
Excursion	6.8L	Other	2002 - 2003	HEC	●	●	●	●	○
Excursion	6.8L	Other	2002 - 2003	OTC	●	●	●	●	○
Excursion	6.8L	Other	2003	FOH	●	●	●	●	○
Excursion	6.8L	Other	2003	VSM	●	●	●	●	0x000A 0x000F
Excursion	7.3L	Direct Injection - Turbo	2000	MC	●	●	●	●	○
Excursion	7.3L	Direct Injection - Turbo	2000 - 2003	ABS/TCS	●	●	●	●	0x0008
Excursion	7.3L	Direct Injection - Turbo	2000 - 2003	ECS	●	●	●	●	○
Excursion	7.3L	Direct Injection - Turbo	2000 - 2003	GEM	●	●	●	●	0x000F
Excursion	7.3L	Direct Injection - Turbo	2000 - 2003	PAM	●	●	●	●	○
Excursion	7.3L	Direct Injection - Turbo	2000 - 2003	PATS	●	●	●	●	0x0009
Excursion	7.3L	Direct Injection - Turbo	2000 - 2003	PCM	●	●	●	●	0x0010 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083
Excursion	7.3L	Direct Injection - Turbo	2002	CSM	●	●	●	●	0x000A 0x000F
Excursion	7.3L	Direct Injection - Turbo	2002 - 2003	DSM	●	●	●	●	○
Excursion	7.3L	Direct Injection - Turbo	2002 - 2003	EATC	●	●	●	●	○
Excursion	7.3L	Direct Injection - Turbo	2002 - 2003	HEC	●	●	●	●	○
Excursion	7.3L	Direct Injection - Turbo	2002 - 2003	OTC	●	●	●	●	○
Excursion	7.3L	Direct Injection - Turbo	2003	FOH	●	●	●	●	○
Excursion	7.3L	Direct Injection - Turbo	2003	VSM	●	●	●	●	0x000A 0x000F
Expedition	4.6L	2V	2003 - 2004	4X4	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Expedition	4.6L	2V	2003 - 2004	ABS/TCS	●	●	●	●	0x0008 0x0012
Expedition	4.6L	2V	2003 - 2004	DCSM	●	●	●	●	○
Expedition	4.6L	2V	2003 - 2004	DSM	●	●	●	●	○
Expedition	4.6L	2V	2003 - 2004	EATC	●	●	●	●	○
Expedition	4.6L	2V	2003 - 2004	HEC	●	●	●	●	○
Expedition	4.6L	2V	2003 - 2004	PAM	●	●	●	●	○
Expedition	4.6L	2V	2003 - 2004	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0083
Expedition	4.6L	2V	2003 - 2004	PCSM	●	●	●	●	○
Expedition	4.6L	2V	2003 - 2004	RCM	●	●	●	●	0x000C
Expedition	4.6L	2V	2003 - 2004	TPM	●	●	●	●	○
Expedition	4.6L	2V	2003 - 2004	VDM	●	●	●	●	0x000E 0x0013 0x0014
Expedition	4.6L	2V	2003 - 2004	VSM	●	●	●	●	0x000A 0x000F
Expedition	4.6L	Other	1997 - 1998	IAB	●	●	●	●	○
Expedition	4.6L	Other	1997 - 1998	PATS	●	●	●	●	0x0009
Expedition	4.6L	Other	1997 - 2000	4WAS	●	●	●	●	0x000E
Expedition	4.6L	Other	1997 - 2000	ABS/TCS	●	●	●	●	0x0008
Expedition	4.6L	Other	1997 - 2000	GEM	●	●	●	●	○
Expedition	4.6L	Other	1997 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Expedition	4.6L	Other	1997 - 2000	RAP	●	●	●	●	0x000A 0x000F
Expedition	4.6L	Other	1998	RCC	●	●	●	●	○
Expedition	4.6L	Other	1999 - 2000	EATC	●	●	●	●	○
Expedition	4.6L	Other	1999 - 2000	HEC	●	●	●	●	0x0009
Expedition	4.6L	Other	1999 - 2000	RCM	●	●	●	●	○
Expedition	4.6L	Other	2000	DSM	●	●	●	●	○
Expedition	4.6L	Other	2000	PAM	●	●	●	●	○
Expedition	5.4L	2V	2003 - 2004	4X4	●	●	●	●	○
Expedition	5.4L	2V	2003 - 2004	ABS/TCS	●	●	●	●	0x0008 0x0012
Expedition	5.4L	2V	2003 - 2004	DCSM	●	●	●	●	○
Expedition	5.4L	2V	2003 - 2004	DSM	●	●	●	●	○
Expedition	5.4L	2V	2003 - 2004	EATC	●	●	●	●	○
Expedition	5.4L	2V	2003 - 2004	HEC	●	●	●	●	○
Expedition	5.4L	2V	2003 - 2004	PAM	●	●	●	●	○
Expedition	5.4L	2V	2003 - 2004	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0083
Expedition	5.4L	2V	2003 - 2004	PCSM	●	●	●	●	○
Expedition	5.4L	2V	2003 - 2004	RCM	●	●	●	●	0x000C
Expedition	5.4L	2V	2003 - 2004	TPM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Expedition	5. 4L	2V	2003 - 2004	VDM	●	●	●	●	0x000E 0x0013 0x0014
Expedition	5. 4L	2V	2003 - 2004	VSM	●	●	●	●	0x000A 0x000F
Expedition	5. 4L	3V	2005 - 2006	VSM	●	●	●	●	0x000A 0x000F
Expedition	5. 4L	3V	2005 - 2007	EATC	●	●	●	●	○
Expedition	5. 4L	3V	2005 - 2010	4X4	●	●	●	●	○
Expedition	5. 4L	3V	2005 - 2012	PAM	●	●	●	●	○
Expedition	5. 4L	3V	2005 - 2014	ABS	●	●	●	●	0x0012 0x0008
Expedition	5. 4L	3V	2005 - 2014	DCSM	●	●	●	●	○
Expedition	5. 4L	3V	2005 - 2014	DSM	●	●	●	●	○
Expedition	5. 4L	3V	2005 - 2014	IC	●	●	●	●	0x0009
Expedition	5. 4L	3V	2005 - 2014	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x00C5
Expedition	5. 4L	3V	2005 - 2014	RCM	●	●	●	●	0x000C
Expedition	5. 4L	3V	2005 - 2014	VDM	●	●	●	●	0x000E 0x0013 0x0014
Expedition	5. 4L	3V	2007	GEM	●	●	●	●	○
Expedition	5. 4L	3V	2007 - 2011	TCM	●	●	●	●	○
Expedition	5. 4L	3V	2007 - 2012	RETM	●	●	●	●	○
Expedition	5. 4L	3V	2007 - 2014	ACM	●	●	●	●	0x0016 0x0017 0x0018
Expedition	5. 4L	3V	2007 - 2014	DSP	●	●	●	●	○
Expedition	5. 4L	3V	2007 - 2014	LTM	●	●	●	●	○
Expedition	5. 4L	3V	2007 - 2014	RCU	●	●	●	●	○
Expedition	5. 4L	3V	2007 - 2014	SDARS	●	●	●	●	0x0019
Expedition	5. 4L	3V	2008 - 2014	GEM /	●	●	●	●	0x000A 0x000F 0x0042
Expedition	5. 4L	3V	2008 - 2014	HVAC	●	●	●	●	○
Expedition	5. 4L	3V	2008 - 2014	PRB	●	●	●	●	○
Expedition	5. 4L	3V	2009 - 2014	APIM	●	●	●	●	○
Expedition	5. 4L	3V	2010 - 2012	GPSM	●	●	●	○	○
Expedition	5. 4L	3V	2010 - 2014	TCCM	●	●	●	●	○
Expedition	5. 4L	3V	2013 - 2014	TBC	●	●	●	●	○
Expedition	5. 4L	Other	1997 - 1998	IAB	●	●	●	●	○
Expedition	5. 4L	Other	1997 - 1998	PATS	●	●	●	●	0x0009
Expedition	5. 4L	Other	1997 - 2000	4WAS	●	●	●	●	0x000E
Expedition	5. 4L	Other	1997 - 2000	ABS/TCS	●	●	●	●	0x0008
Expedition	5. 4L	Other	1997 - 2000	GEM	●	●	●	●	○
Expedition	5. 4L	Other	1997 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033
Expedition	5. 4L	Other	1997 - 2000	RAP	●	●	●	●	0x000A 0x000F
Expedition	5. 4L	Other	1998	RCC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Expedition	5.4L	Other	1999 - 2000	EATC	●	●	●	●	○
Expedition	5.4L	Other	1999 - 2000	HEC	●	●	●	●	0x0009
Expedition	5.4L	Other	1999 - 2000	RCM	●	●	●	●	○
Expedition	5.4L	Other	2000	DSM	●	●	●	●	○
Expedition	5.4L	Other	2000	PAM	●	●	●	●	○
Expedition	Other	Other	2013	ABS	●	●	●	●	○
Expedition	Other	Other	2013	ACM	●	●	●	●	○
Expedition	Other	Other	2013	APIM	●	●	●	●	○
Expedition	Other	Other	2013	DCSM	●	●	●	●	○
Expedition	Other	Other	2013	DSM	●	●	●	●	○
Expedition	Other	Other	2013	DSP	●	●	●	●	○
Expedition	Other	Other	2013	GEM /	●	●	●	●	○
Expedition	Other	Other	2013	HVAC	●	●	●	●	○
Expedition	Other	Other	2013	IC	●	●	●	●	○
Expedition	Other	Other	2013	LTM	●	●	●	●	○
Expedition	Other	Other	2013	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Expedition	Other	Other	2013	PRB	●	●	●	●	○
Expedition	Other	Other	2013	RCM	●	●	●	●	○
Expedition	Other	Other	2013	RCU	●	●	●	●	○
Expedition	Other	Other	2013	SDARS	●	●	●	●	○
Expedition	Other	Other	2013	TBC	●	●	●	●	○
Expedition	Other	Other	2013	TCCM	●	●	●	●	○
Expedition	Other	Other	2013	VDM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2012	TPM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	ABS	●	●	●	●	0x0008 0x0012
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	ACM	●	●	●	○	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	BCM#1	●	●	●	●	0x000A 0x000F 0x0042 0x00D5 0x00FE
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	C-CM	●	●	●	○	0x0046
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	FCDIM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	HVAC	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	IPC	●	●	●	●	0x00D0
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	OCSM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0095
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	SCCM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	TCM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	APIM	●	●	●	○	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	ATCM	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	CLM#1	●	●	●	○	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	DCSM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	DSM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	DSP	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	FCIM	●	●	●	○	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	FLM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	GPSM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	HSWM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	HUD	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	LTM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	PAM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	PSCM	●	●	●	○	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	RCM	●	●	●	○	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	RFA	●	●	●	●	0x0064
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	RLCM-A	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	SOD-L	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	SOD-R	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPM-A	●	●	●	○	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	GFM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RTM	●	●	●	○	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	ABS	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	ACM	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	BCM#1	●	●	●	○	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	C-CM	●	●	●	○	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	FCDIM	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	HVAC	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPC	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPM-A	●	●	●	○	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	OCSM	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	SCCM	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	APIM	●	●	●	○	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	ATCM	●	●	●	○	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	CLM#1	●	●	●	○	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DCSM	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DSM	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DSP	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	FCIM	●	●	●	○	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	FLM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	GFM	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	GPSM	●	●	●	○	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	HSWM	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	HUD	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	LTM	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	PAM	●	●	●	○	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	PSCM	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RCM	●	●	●	○	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RFA	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RLCM-A	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RTM	●	●	●	○	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SOD-L	●	●	●	○	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SOD-R	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2012	TPM	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2013	ABS	●	●	●	●	0x0008 0x0012
Explorer	3.5L	TiVCT	2011 - 2013	ACM	●	●	●	○	○
Explorer	3.5L	TiVCT	2011 - 2013	BCM#1	●	●	●	●	0x0009 0x000A 0x000F 0x0042 0x00D4 0x00D5 0x00FE
Explorer	3.5L	TiVCT	2011 - 2013	C-CM	●	●	●	○	0x0046
Explorer	3.5L	TiVCT	2011 - 2013	FCDIM	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2013	HVAC	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2013	IPC	●	●	●	●	0x00D0
Explorer	3.5L	TiVCT	2011 - 2013	OCSM	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2013	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0095 0x0108
Explorer	3.5L	TiVCT	2011 - 2013	SCCM	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2014	APIM	●	●	●	○	○
Explorer	3.5L	TiVCT	2011 - 2014	ATCM	●	●	●	○	○
Explorer	3.5L	TiVCT	2011 - 2014	CLM#1	●	●	●	○	○
Explorer	3.5L	TiVCT	2011 - 2014	DCSM	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2014	DSM	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2014	DSP	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2014	FCIM	●	●	●	○	○
Explorer	3.5L	TiVCT	2011 - 2014	FLM	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2014	GPSM	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2014	HSWM	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2014	HUD	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2014	LTM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Explorer	3.5L	TiVCT	2011 - 2014	PAM	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2014	PSCM	●	●	●	○	○
Explorer	3.5L	TiVCT	2011 - 2014	RCM	●	●	●	○	○
Explorer	3.5L	TiVCT	2011 - 2014	RFA	●	●	●	●	0x0064
Explorer	3.5L	TiVCT	2011 - 2014	RLCM-A	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2014	SOD-L	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2014	SOD-R	●	●	●	●	○
Explorer	3.5L	TiVCT	2013	IPM-A	●	●	●	○	○
Explorer	3.5L	TiVCT	2013 - 2014	GFM	●	●	●	●	○
Explorer	3.5L	TiVCT	2013 - 2014	RTM	●	●	●	○	○
Explorer	3.7L	TiVCT	2013	ABS	●	●	●	●	○
Explorer	3.7L	TiVCT	2013	ACM	●	●	●	●	○
Explorer	3.7L	TiVCT	2013	BCM#1	●	●	●	○	○
Explorer	3.7L	TiVCT	2013	C-CM	●	●	●	○	○
Explorer	3.7L	TiVCT	2013	FCDIM	●	●	●	●	○
Explorer	3.7L	TiVCT	2013	HVAC	●	●	●	●	○
Explorer	3.7L	TiVCT	2013	IPC	●	●	●	●	○
Explorer	3.7L	TiVCT	2013	IPM-A	●	●	●	○	○
Explorer	3.7L	TiVCT	2013	OCSM	●	●	●	●	○
Explorer	3.7L	TiVCT	2013	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Explorer	3.7L	TiVCT	2013	SCCM	●	●	●	●	○
Explorer	3.7L	TiVCT	2013 - 2014	APIM	●	●	●	○	○
Explorer	3.7L	TiVCT	2013 - 2014	ATCM	●	●	●	○	○
Explorer	3.7L	TiVCT	2013 - 2014	CLM#1	●	●	●	○	○
Explorer	3.7L	TiVCT	2013 - 2014	DCSM	●	●	●	●	○
Explorer	3.7L	TiVCT	2013 - 2014	DSM	●	●	●	●	○
Explorer	3.7L	TiVCT	2013 - 2014	DSP	●	●	●	●	○
Explorer	3.7L	TiVCT	2013 - 2014	FCIM	●	●	●	○	○
Explorer	3.7L	TiVCT	2013 - 2014	FLM	●	●	●	●	○
Explorer	3.7L	TiVCT	2013 - 2014	GFM	●	●	●	●	○
Explorer	3.7L	TiVCT	2013 - 2014	GPSM	●	●	●	○	○
Explorer	3.7L	TiVCT	2013 - 2014	HSWM	●	●	●	●	○
Explorer	3.7L	TiVCT	2013 - 2014	HUD	●	●	●	●	○
Explorer	3.7L	TiVCT	2013 - 2014	LTM	●	●	●	●	○
Explorer	3.7L	TiVCT	2013 - 2014	PAM	●	●	●	○	○
Explorer	3.7L	TiVCT	2013 - 2014	PSCM	●	●	●	●	○
Explorer	3.7L	TiVCT	2013 - 2014	RCM	●	●	●	○	○
Explorer	3.7L	TiVCT	2013 - 2014	RFA	●	●	●	●	○
Explorer	3.7L	TiVCT	2013 - 2014	RLCM-A	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Explorer	3. 7L	TiVCT	2013 - 2014	RTM	●	●	●	○	○
Explorer	3. 7L	TiVCT	2013 - 2014	SOD-L	●	●	●	○	○
Explorer	3. 7L	TiVCT	2013 - 2014	SOD-R	●	●	●	●	○
Explorer	4. 0L	2V	2006 - 2007	EATC	●	●	●	●	○
Explorer	4. 0L	2V	2006 - 2007	GEM	●	●	●	●	0x000A 0x000F
Explorer	4. 0L	2V	2006 - 2010	4X4	●	●	●	●	○
Explorer	4. 0L	2V	2006 - 2010	ABS	●	●	●	●	0x0008 0x0012 0x0005
Explorer	4. 0L	2V	2006 - 2010	ACM	●	●	●	●	0x0016 0x0017 0x0018 0x0005
Explorer	4. 0L	2V	2006 - 2010	DSM	●	●	●	●	0x0005
Explorer	4. 0L	2V	2006 - 2010	IC	●	●	●	●	0x0009 0x0005
Explorer	4. 0L	2V	2006 - 2010	OCSM	●	●	●	○	0x000C 0x0015 0x006D
Explorer	4. 0L	2V	2006 - 2010	PAM	●	●	●	●	○
Explorer	4. 0L	2V	2006 - 2010	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x00C5 0x00C6
Explorer	4. 0L	2V	2006 - 2010	PRB	●	●	●	●	○
Explorer	4. 0L	2V	2006 - 2010	RCM	●	●	●	●	0x0005
Explorer	4. 0L	2V	2006 - 2010	RETM	●	●	●	●	○
Explorer	4. 0L	2V	2006 - 2010	SDARS	●	●	●	●	0x0019 0x0005
Explorer	4. 0L	2V	2008 - 2010	APIM	●	●	●	●	0x0019 0x001C
Explorer	4. 0L	2V	2008 - 2010	GEM /	●	●	●	●	0x0005 0x000A 0x000F 0x0042
Explorer	4. 0L	2V	2008 - 2010	HVAC	●	●	●	●	0x0005
Explorer	4. 0L	2V	2010	GPSM	●	●	●	○	○
Explorer	4. 0L	Other	1996 - 1998	IAB	●	●	●	●	○
Explorer	4. 0L	Other	1996 - 2000	ABS/TCS	●	●	●	●	0x0008
Explorer	4. 0L	Other	1996 - 2000	ARC	●	●	●	●	0x000E
Explorer	4. 0L	Other	1996 - 2000	EATC	●	●	●	●	○
Explorer	4. 0L	Other	1996 - 2000	GEM	●	●	●	●	0x0203 0x0204
Explorer	4. 0L	Other	1996 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Explorer	4. 0L	Other	1996 - 2000	RAP	●	●	●	●	0x000F 0x000A
Explorer	4. 0L	Other	1998 - 2000	DSM	●	●	●	●	○
Explorer	4. 0L	Other	1998 - 2000	PAM	●	●	●	●	○
Explorer	4. 0L	Other	1998 - 2000	PATS	●	●	●	●	0x0009
Explorer	4. 0L	Other	1999 - 2000	RCM	●	●	●	●	○
Explorer	4. 0L	V6 OHV	1996 - 1998	IAB	●	●	●	●	○
Explorer	4. 0L	V6 OHV	1996 - 1999	ABS/TCS	●	●	●	●	0x0008
Explorer	4. 0L	V6 OHV	1996 - 1999	ARC	●	●	●	●	0x000E
Explorer	4. 0L	V6 OHV	1996 - 1999	EATC	●	●	●	●	○
Explorer	4. 0L	V6 OHV	1996 - 1999	GEM	●	●	●	●	0x0203

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Explorer	4.0L	V6 OHV	1996 - 1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Explorer	4.0L	V6 OHV	1996 - 1999	RAP	●	●	●	●	0x000F 0x000A
Explorer	4.0L	V6 OHV	1998 - 1999	DSM	●	●	●	●	○
Explorer	4.0L	V6 OHV	1998 - 1999	PAM	●	●	●	●	○
Explorer	4.0L	V6 OHV	1998 - 1999	PATS	●	●	●	●	0x0009
Explorer	4.0L	V6 OHV	1999	RCM	●	●	●	●	○
Explorer	4.0L	V6 SOHC	1997 - 1998	IAB	●	●	●	●	○
Explorer	4.0L	V6 SOHC	1997 - 2000	ARC	●	●	●	●	0x000E
Explorer	4.0L	V6 SOHC	1997 - 2000	RAP	●	●	●	●	0x000A 0x000F
Explorer	4.0L	V6 SOHC	1997 - 2002	GEM	●	●	●	●	0x0203 0x0204
Explorer	4.0L	V6 SOHC	1997 - 2003	ABS/TCS	●	●	●	●	0x0008 0x0012
Explorer	4.0L	V6 SOHC	1997 - 2005	EATC	●	●	●	●	0x0005
Explorer	4.0L	V6 SOHC	1997 - 2005	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0009 0x00C6
Explorer	4.0L	V6 SOHC	1998 - 2000	PATS	●	●	●	●	0x0009
Explorer	4.0L	V6 SOHC	1998 - 2005	DSM	●	●	●	●	○
Explorer	4.0L	V6 SOHC	1998 - 2005	PAM	●	●	●	●	○
Explorer	4.0L	V6 SOHC	1999	MC	●	●	●	●	○
Explorer	4.0L	V6 SOHC	1999 - 2005	RCM	●	●	●	●	0x000C 0x006D
Explorer	4.0L	V6 SOHC	2002	CSM	●	●	●	●	0x000F
Explorer	4.0L	V6 SOHC	2002 - 2003	HEC	●	●	●	●	○
Explorer	4.0L	V6 SOHC	2002 - 2005	4X4	●	●	●	●	0x0111
Explorer	4.0L	V6 SOHC	2002 - 2005	IC	●	●	●	●	0x0005
Explorer	4.0L	V6 SOHC	2002 - 2005	TPM	●	●	●	●	0x0005
Explorer	4.0L	V6 SOHC	2003 - 2005	VSM	●	●	●	●	0x000A 0x000F
Explorer	4.0L	V6 SOHC	2004 - 2005	ABS	●	●	●	●	0x0008 0x0012 0x0005
Explorer	4.6L	2V	2002	CSM	●	●	●	●	0x000F
Explorer	4.6L	2V	2002	GEM	●	●	●	●	0x0203 0x0204
Explorer	4.6L	2V	2002 - 2003	ABS/TCS	●	●	●	●	0x0008 0x0012
Explorer	4.6L	2V	2002 - 2003	HEC	●	●	●	●	○
Explorer	4.6L	2V	2002 - 2005	4X4	●	●	●	●	○
Explorer	4.6L	2V	2002 - 2005	DSM	●	●	●	●	○
Explorer	4.6L	2V	2002 - 2005	EATC	●	●	●	●	0x0005
Explorer	4.6L	2V	2002 - 2005	IC	●	●	●	●	0x0005
Explorer	4.6L	2V	2002 - 2005	PAM	●	●	●	●	○
Explorer	4.6L	2V	2002 - 2005	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x00C6
Explorer	4.6L	2V	2002 - 2005	RCM	●	●	●	●	0x000C

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Explorer	4. 6L	2V	2002 - 2005	TPM	●	●	●	●	0x0005
Explorer	4. 6L	2V	2003 - 2005	VSM	●	●	●	●	0x000A 0x000F
Explorer	4. 6L	2V	2004 - 2005	ABS	●	●	●	●	0x0008 0x0012
Explorer	4. 6L	3V	2006 - 2007	EATC	●	●	●	●	0x0005
Explorer	4. 6L	3V	2006 - 2007	GEM	●	●	●	●	0x0005 0x000A 0x000F
Explorer	4. 6L	3V	2006 - 2010	4X4	●	●	●	●	○
Explorer	4. 6L	3V	2006 - 2010	ABS	●	●	●	●	0x0005 0x0008 0x0012
Explorer	4. 6L	3V	2006 - 2010	ACM	●	●	●	●	0x0005 0x0017 0x0018 0x0016
Explorer	4. 6L	3V	2006 - 2010	DSM	●	●	●	●	0x0005
Explorer	4. 6L	3V	2006 - 2010	IC	●	●	●	●	0x0009 0x0005
Explorer	4. 6L	3V	2006 - 2010	OCSM	●	●	●	○	0x000C 0x0015 0x006D
Explorer	4. 6L	3V	2006 - 2010	PAM	●	●	●	●	0x0005
Explorer	4. 6L	3V	2006 - 2010	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x00C5 0x00C6
Explorer	4. 6L	3V	2006 - 2010	PRB	●	●	●	●	○
Explorer	4. 6L	3V	2006 - 2010	RCM	●	●	●	●	0x0005
Explorer	4. 6L	3V	2006 - 2010	RETM	●	●	●	●	0x0005
Explorer	4. 6L	3V	2006 - 2010	SDARS	●	●	●	●	0x0005 0x0019
Explorer	4. 6L	3V	2006 - 2010	TCM	●	●	●	●	0x00CE
Explorer	4. 6L	3V	2008 - 2010	APIM	●	●	●	●	0x0019 0x001C
Explorer	4. 6L	3V	2008 - 2010	GEM /	●	●	●	●	0x000A 0x000F 0x0042 0x0005
Explorer	4. 6L	3V	2008 - 2010	HVAC	●	●	●	●	0x0005
Explorer	4. 6L	3V	2010	GPSM	●	●	●	○	○
Explorer	5. 0L	Other	1996 - 1998	IAB	●	●	●	●	○
Explorer	5. 0L	Other	1996 - 2000	ABS/TCS	●	●	●	●	0x0008
Explorer	5. 0L	Other	1996 - 2000	EATC	●	●	●	●	○
Explorer	5. 0L	Other	1996 - 2000	GEM	●	●	●	●	0x0203 0x0204
Explorer	5. 0L	Other	1996 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033
Explorer	5. 0L	Other	1996 - 2000	RAP	●	●	●	●	0x000F 0x000A
Explorer	5. 0L	Other	1997 - 2000	ARC	●	●	●	●	0x000E
Explorer	5. 0L	Other	1998 - 2000	DSM	●	●	●	●	○
Explorer	5. 0L	Other	1998 - 2000	PAM	●	●	●	●	○
Explorer	5. 0L	Other	1998 - 2000	PATS	●	●	●	●	0x0009
Explorer	5. 0L	Other	1999 - 2000	RCM	●	●	●	●	○
Explorer	Other	Other	2014	APIM	●	●	●	○	○
Explorer	Other	Other	2014	ATCM	●	●	●	○	○
Explorer	Other	Other	2014	CLM#1	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Explorer	Other	Other	2014	DCSM	●	●	●	●	○
Explorer	Other	Other	2014	DSM	●	●	●	●	○
Explorer	Other	Other	2014	DSP	●	●	●	●	○
Explorer	Other	Other	2014	FCIM	●	●	●	○	○
Explorer	Other	Other	2014	FLM	●	●	●	●	○
Explorer	Other	Other	2014	GFM	●	●	●	●	○
Explorer	Other	Other	2014	GPSM	●	●	●	○	○
Explorer	Other	Other	2014	HSWM	●	●	●	●	○
Explorer	Other	Other	2014	HUD	●	●	●	●	○
Explorer	Other	Other	2014	LTM	●	●	●	●	○
Explorer	Other	Other	2014	PAM	●	●	●	○	○
Explorer	Other	Other	2014	PSCM	●	●	●	●	○
Explorer	Other	Other	2014	RCM	●	●	●	○	○
Explorer	Other	Other	2014	RFA	●	●	●	●	○
Explorer	Other	Other	2014	RLCM-A	●	●	●	●	○
Explorer	Other	Other	2014	RTM	●	●	●	○	○
Explorer	Other	Other	2014	SOD-L	●	●	●	○	○
Explorer	Other	Other	2014	SOD-R	●	●	●	●	○
Explorer Sport	4. 0L	V6 SOHC	2000	PATS	●	●	●	●	0x0009
Explorer Sport	4. 0L	V6 SOHC	2000 - 2003	4X4	●	●	●	●	○
Explorer Sport	4. 0L	V6 SOHC	2000 - 2003	ABS/TCS	●	●	●	●	0x0008
Explorer Sport	4. 0L	V6 SOHC	2000 - 2003	GEM	●	●	●	●	0x0203 0x0204
Explorer Sport	4. 0L	V6 SOHC	2000 - 2003	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083
Explorer Sport	4. 0L	V6 SOHC	2000 - 2003	RAP	●	●	●	●	0x000A 0x000F
Explorer Sport	4. 0L	V6 SOHC	2000 - 2003	RCM	●	●	●	●	0x000C
Explorer SportTrac	4. 0L	2V	2007	EATC	●	●	●	●	○
Explorer SportTrac	4. 0L	2V	2007	GEM	●	●	●	●	0x000A 0x000F
Explorer SportTrac	4. 0L	2V	2007 - 2010	4X4	●	●	●	●	○
Explorer SportTrac	4. 0L	2V	2007 - 2010	ABS	●	●	●	●	0x0008 0x0012
Explorer SportTrac	4. 0L	2V	2007 - 2010	ACM	●	●	●	●	0x0016 0x0017 0x0018
Explorer SportTrac	4. 0L	2V	2007 - 2010	IC	●	●	●	●	0x0009 0x0005
Explorer SportTrac	4. 0L	2V	2007 - 2010	OCMSM	●	●	●	○	0x000C 0x0015 0x006D
Explorer SportTrac	4. 0L	2V	2007 - 2010	PAM	●	●	●	●	○
Explorer SportTrac	4. 0L	2V	2007 - 2010	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x00C5 0x00C6
Explorer SportTrac	4. 0L	2V	2007 - 2010	RCM	●	●	●	●	0x0005
Explorer SportTrac	4. 0L	2V	2007 - 2010	RETM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Explorer SportTrac	4.0L	2V	2007 - 2010	SDARS	●	●	●	●	0x0019 0x0005
Explorer SportTrac	4.0L	2V	2008 - 2010	APIM	●	●	●	●	0x0019 0x001C
Explorer SportTrac	4.0L	2V	2008 - 2010	GEM /	●	●	●	●	0x0005 0x000A 0x000F 0x0042
Explorer SportTrac	4.0L	2V	2008 - 2010	HVAC	●	●	●	●	0x0005
Explorer SportTrac	4.0L	2V	2010	GPSM	●	●	●	○	○
Explorer SportTrac	4.0L	V6 SOHC	2000 - 2003	GEM	●	●	●	●	0x0203 0x0204
Explorer SportTrac	4.0L	V6 SOHC	2000 - 2005	4X4	●	●	●	●	○
Explorer SportTrac	4.0L	V6 SOHC	2000 - 2005	ABS/TCS	●	●	●	●	0x0008
Explorer SportTrac	4.0L	V6 SOHC	2000 - 2005	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083
Explorer SportTrac	4.0L	V6 SOHC	2000 - 2005	RAP	●	●	●	●	0x000A 0x000F
Explorer SportTrac	4.0L	V6 SOHC	2000 - 2005	RCM	●	●	●	●	0x000C
Explorer SportTrac	4.0L	V6 SOHC	2004 - 2005	HEC	●	●	●	●	○
Explorer SportTrac	4.6L	3V	2007	EATC	●	●	●	●	0x0005
Explorer SportTrac	4.6L	3V	2007	GEM	●	●	●	●	0x0005 0x000A 0x000F
Explorer SportTrac	4.6L	3V	2007 - 2010	4X4	●	●	●	●	○
Explorer SportTrac	4.6L	3V	2007 - 2010	ABS	●	●	●	●	0x0008 0x0012
Explorer SportTrac	4.6L	3V	2007 - 2010	ACM	●	●	●	●	0x0016 0x0017 0x0018 0x0005
Explorer SportTrac	4.6L	3V	2007 - 2010	IC	●	●	●	●	0x0009 0x0005
Explorer SportTrac	4.6L	3V	2007 - 2010	OCSM	●	●	●	○	0x000C 0x0015 0x006D
Explorer SportTrac	4.6L	3V	2007 - 2010	PAM	●	●	●	●	0x0005
Explorer SportTrac	4.6L	3V	2007 - 2010	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x00C5 0x00C6
Explorer SportTrac	4.6L	3V	2007 - 2010	RCM	●	●	●	●	0x0005
Explorer SportTrac	4.6L	3V	2007 - 2010	RETM	●	●	●	●	0x0005
Explorer SportTrac	4.6L	3V	2007 - 2010	SDARS	●	●	●	●	0x0005 0x0019
Explorer SportTrac	4.6L	3V	2007 - 2010	TCM	●	●	●	●	0x00CE
Explorer SportTrac	4.6L	3V	2008 - 2010	APIM	●	●	●	●	0x0019 0x001C
Explorer SportTrac	4.6L	3V	2008 - 2010	GEM /	●	●	●	●	0x000A 0x000F 0x0042 0x0005
Explorer SportTrac	4.6L	3V	2008 - 2010	HVAC	●	●	●	●	0x0005
Explorer SportTrac	4.6L	3V	2010	GPSM	●	●	●	○	○
F-250 Light Duty	4.2L	Other	1999	ABS/TCS	●	●	●	●	0x0008
F-250 Light Duty	4.2L	Other	1999	GEM	●	●	●	●	○
F-250 Light Duty	4.2L	Other	1999	IC	●	●	●	●	0x0009
F-250 Light Duty	4.2L	Other	1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
F-250 Light Duty	4.2L	Other	1999	RAP	●	●	●	●	0x000A 0x000F
F-250 Light Duty	4.2L	Other	1999	RCM	●	●	●	●	○
F-250 Light Duty	4.6L	Other	1997 - 1998	IAB	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
F-250 Light Duty	4.6L	Other	1997 - 2000	ABS/TCS	●	●	●	●	0x0008
F-250 Light Duty	4.6L	Other	1997 - 2000	GEM	●	●	●	●	○
F-250 Light Duty	4.6L	Other	1997 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
F-250 Light Duty	4.6L	Other	1997 - 2000	RAP	●	●	●	●	0x000A
F-250 Light Duty	4.6L	Other	1999 - 2000	IC	●	●	●	●	0x0009
F-250 Light Duty	4.6L	Other	1999 - 2000	RCM	●	●	●	●	○
F-250 Light Duty	5.4L	BIF	1998	IAB	●	●	●	●	○
F-250 Light Duty	5.4L	BIF	1998 - 1999	ABS/TCS	●	●	●	●	0x0008
F-250 Light Duty	5.4L	BIF	1998 - 1999	AFCM	●	●	●	●	○
F-250 Light Duty	5.4L	BIF	1998 - 1999	GEM	●	●	●	●	○
F-250 Light Duty	5.4L	BIF	1998 - 1999	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083
F-250 Light Duty	5.4L	BIF	1998 - 1999	RAP	●	●	●	●	0x000A 0x000F
F-250 Light Duty	5.4L	BIF	1999	IC	●	●	●	●	0x0009
F-250 Light Duty	5.4L	BIF	1999	RCM	●	●	●	●	○
F-250 Light Duty	5.4L	NGV	1997 - 1998	IAB	●	●	●	●	○
F-250 Light Duty	5.4L	NGV	1997 - 2000	ABS/TCS	●	●	●	●	0x0008
F-250 Light Duty	5.4L	NGV	1997 - 2000	FIM	●	●	●	●	○
F-250 Light Duty	5.4L	NGV	1997 - 2000	GEM	●	●	●	●	○
F-250 Light Duty	5.4L	NGV	1997 - 2000	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083
F-250 Light Duty	5.4L	NGV	1997 - 2000	RAP	●	●	●	●	0x000A 0x000F
F-250 Light Duty	5.4L	NGV	1999 - 2000	IC	●	●	●	●	0x0009
F-250 Light Duty	5.4L	NGV	1999 - 2000	RCM	●	●	●	●	○
F-250 Light Duty	5.4L	Other	1997 - 1998	IAB	●	●	●	●	○
F-250 Light Duty	5.4L	Other	1997 - 2000	ABS/TCS	●	●	●	●	0x0008
F-250 Light Duty	5.4L	Other	1997 - 2000	GEM	●	●	●	●	○
F-250 Light Duty	5.4L	Other	1997 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
F-250 Light Duty	5.4L	Other	1997 - 2000	RAP	●	●	●	●	0x000A 0x000F
F-250 Light Duty	5.4L	Other	1999 - 2000	IC	●	●	●	●	0x0009
F-250 Light Duty	5.4L	Other	1999 - 2000	RCM	●	●	●	●	○
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003	ABS/TCS	●	●	●	●	0x0008
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003	FOH	●	●	●	●	○
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003	GEM	●	●	●	●	○
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003	HEC	●	●	●	●	○
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003	OTC	●	●	●	●	○
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003	PAM	●	●	●	●	○
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003	PATS	●	●	●	●	0x0009
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003	RCM	●	●	●	●	○
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003	VSM	●	●	●	●	0x000A 0x000F
F-Series Super Duty	4.2L	Other	2001	ABS/TCS	●	●	●	●	0x0008
F-Series Super Duty	4.2L	Other	2001	ECS	●	●	●	●	○
F-Series Super Duty	4.2L	Other	2001	GEM	●	●	●	●	○
F-Series Super Duty	4.2L	Other	2001	OTC	●	●	●	●	○
F-Series Super Duty	4.2L	Other	2001	PAM	●	●	●	●	○
F-Series Super Duty	4.2L	Other	2001	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
F-Series Super Duty	4.2L	Other	2001	RCM	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2004	ABS/TCS	●	●	●	●	0x0008 0x001B
F-Series Super Duty	5.4L	2V	2004	HEC	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2004	OTC	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2004	PATS	●	●	●	●	0x0009
F-Series Super Duty	5.4L	2V	2004 - 2006	GEM	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2004 - 2006	VSM	●	●	●	●	0x000A 0x000F
F-Series Super Duty	5.4L	2V	2004 - 2008	PAM	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2004 - 2008	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083
F-Series Super Duty	5.4L	2V	2004 - 2008	RCM	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2005 - 2006	EATC	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2005 - 2008	ABS	●	●	●	●	0x0008
F-Series Super Duty	5.4L	2V	2005 - 2008	IC	●	●	●	●	0x0009
F-Series Super Duty	5.4L	2V	2005 - 2008	TBC	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2008	4X4	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2008	ACM	●	●	●	●	0x0016 0x0017 0x0018
F-Series Super Duty	5.4L	2V	2008	DSM	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2008	GEM /	●	●	●	●	0x000A 0x000F 0x0042
F-Series Super Duty	5.4L	2V	2008	HVAC	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2008	RETM	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2008	SDARS	●	●	●	●	0x0019
F-Series Super Duty	5.4L	3V	2005 - 2007	EATC	●	●	●	●	○
F-Series Super Duty	5.4L	3V	2005 - 2007	GEM	●	●	●	●	○
F-Series Super Duty	5.4L	3V	2005 - 2007	VSM	●	●	●	●	0x000A 0x000F
F-Series Super Duty	5.4L	3V	2005 - 2010	ABS	●	●	●	●	0x0008
F-Series Super Duty	5.4L	3V	2005 - 2010	IC	●	●	●	●	0x0009
F-Series Super Duty	5.4L	3V	2005 - 2010	PAM	●	●	●	●	○
F-Series Super Duty	5.4L	3V	2005 - 2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x00C5

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
F-Series Super Duty	5.4L	3V	2005 - 2010	RCM	●	●	●	●	○
F-Series Super Duty	5.4L	3V	2005 - 2010	TBC	●	●	●	●	○
F-Series Super Duty	5.4L	3V	2008 - 2010	4X4	●	●	●	●	○
F-Series Super Duty	5.4L	3V	2008 - 2010	ACM	●	●	●	●	0x0016 0x0017 0x0018
F-Series Super Duty	5.4L	3V	2008 - 2010	DSM	●	●	●	●	○
F-Series Super Duty	5.4L	3V	2008 - 2010	GEM /	●	●	●	●	0x000A 0x000F 0x0042
F-Series Super Duty	5.4L	3V	2008 - 2010	HVAC	●	●	●	●	○
F-Series Super Duty	5.4L	3V	2008 - 2010	RETM	●	●	●	●	○
F-Series Super Duty	5.4L	3V	2008 - 2010	SDARS	●	●	●	●	0x0019
F-Series Super Duty	5.4L	3V	2009 - 2010	APIM	●	●	●	●	0x0019 0x001C 0x001C
F-Series Super Duty	5.4L	3V	2010	GPSM	●	●	●	○	○
F-Series Super Duty	5.4L	BIF	1999	ABS/TCS	●	●	●	●	0x0008
F-Series Super Duty	5.4L	BIF	1999	AFCM	●	●	●	●	○
F-Series Super Duty	5.4L	BIF	1999	ECS	●	●	●	●	○
F-Series Super Duty	5.4L	BIF	1999	GEM	●	●	●	●	○
F-Series Super Duty	5.4L	BIF	1999	OTC	●	●	●	●	○
F-Series Super Duty	5.4L	BIF	1999	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083
F-Series Super Duty	5.4L	Other	1999 - 2001	ECS	●	●	●	●	○
F-Series Super Duty	5.4L	Other	1999 - 2003	ABS/TCS	●	●	●	●	0x0008
F-Series Super Duty	5.4L	Other	1999 - 2003	GEM	●	●	●	●	○
F-Series Super Duty	5.4L	Other	1999 - 2003	OTC	●	●	●	●	○
F-Series Super Duty	5.4L	Other	1999 - 2003	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033
F-Series Super Duty	5.4L	Other	2000 - 2003	PATS	●	●	●	●	0x0009
F-Series Super Duty	5.4L	Other	2001 - 2003	PAM	●	●	●	●	○
F-Series Super Duty	5.4L	Other	2001 - 2003	RCM	●	●	●	●	○
F-Series Super Duty	5.4L	Other	2002	CSM	●	●	●	●	0x000A 0x000F
F-Series Super Duty	5.4L	Other	2002 - 2003	HEC	●	●	●	●	○
F-Series Super Duty	5.4L	Other	2003	FOH	●	●	●	●	○
F-Series Super Duty	5.4L	Other	2003	VSM	●	●	●	●	0x000A 0x000F
F-Series Super Duty	6.0L	Direct Injection - Turbo	2003 - 2004	ABS/TCS	●	●	●	●	0x0008 0x001B
F-Series Super Duty	6.0L	Direct Injection - Turbo	2003 - 2004	FOH	●	●	●	●	○
F-Series Super Duty	6.0L	Direct Injection - Turbo	2003 - 2004	HEC	●	●	●	●	○
F-Series Super Duty	6.0L	Direct Injection - Turbo	2003 - 2004	OTC	●	●	●	●	○
F-Series Super Duty	6.0L	Direct Injection - Turbo	2003 - 2004	PATS	●	●	●	●	0x0009
F-Series Super Duty	6.0L	Direct Injection - Turbo	2003 - 2007	GEM	●	●	●	●	○
F-Series Super Duty	6.0L	Direct Injection - Turbo	2003 - 2007	PAM	●	●	●	●	○
F-Series Super Duty	6.0L	Direct Injection - Turbo	2003 - 2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
F-Series Super Duty	6.0L	Direct Injection - Turbo	2003 - 2007	RCM	●	●	●	●	○
F-Series Super Duty	6.0L	Direct Injection - Turbo	2003 - 2007	TCM	●	●	●	●	0x0010 0x0028 0x0031 0x0033 0x00C5
F-Series Super Duty	6.0L	Direct Injection - Turbo	2003 - 2007	VSM	●	●	●	●	0x000A 0x000F
F-Series Super Duty	6.0L	Direct Injection - Turbo	2005 - 2007	ABS	●	●	●	●	0x0008
F-Series Super Duty	6.0L	Direct Injection - Turbo	2005 - 2007	EATC	●	●	●	●	○
F-Series Super Duty	6.0L	Direct Injection - Turbo	2005 - 2007	IC	●	●	●	●	○
F-Series Super Duty	6.0L	Direct Injection - Turbo	2005 - 2007	TBC	●	●	●	●	○
F-Series Super Duty	6.2L	2V	2011 - 2012	ABS	●	●	●	●	0x0008
F-Series Super Duty	6.2L	2V	2011 - 2012	ACM	●	●	●	○	0x0017 0x0018
F-Series Super Duty	6.2L	2V	2011 - 2012	HVAC	●	●	●	●	○
F-Series Super Duty	6.2L	2V	2011 - 2012	IPC	●	●	●	●	0x00D0
F-Series Super Duty	6.2L	2V	2011 - 2012	PAM	●	●	●	●	○
F-Series Super Duty	6.2L	2V	2011 - 2012	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0095
F-Series Super Duty	6.2L	2V	2011 - 2012	SDARS	●	●	●	●	0x0019
F-Series Super Duty	6.2L	2V	2011 - 2012	TPM	●	●	●	●	○
F-Series Super Duty	6.2L	2V	2011 - 2014	APIM	●	●	●	●	0x0019
F-Series Super Duty	6.2L	2V	2011 - 2014	BCM#1	●	●	●	●	0x000A 0x000F 0x0042 0x00D4
F-Series Super Duty	6.2L	2V	2011 - 2014	DSCM	●	●	●	●	○
F-Series Super Duty	6.2L	2V	2011 - 2014	DSM	●	●	●	●	○
F-Series Super Duty	6.2L	2V	2011 - 2014	GPMS	●	●	●	●	○
F-Series Super Duty	6.2L	2V	2011 - 2014	RCM	●	●	●	●	○
F-Series Super Duty	6.2L	2V	2011 - 2014	SCCM	●	●	●	●	○
F-Series Super Duty	6.2L	2V	2011 - 2014	TBC	●	●	●	●	○
F-Series Super Duty	6.2L	2V	2011 - 2014	TCCM	●	●	●	●	○
F-Series Super Duty	6.2L	2V	2013 - 2014	FCIM	●	●	●	○	○
F-Series Super Duty	6.2L	2V	2013 - 2014	RTM	●	●	●	○	○
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	4X4	●	●	●	●	○
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	ABS	●	●	●	●	0x0005 0x0008
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	ACM	●	●	●	●	0x0005
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	AHCM	●	●	●	●	○
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	CDIM	●	●	●	●	○
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	DSM	●	●	●	●	0x0005
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	GEM /	●	●	●	●	0x0042
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	HVAC	●	●	●	●	○
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	IC	●	●	●	●	○
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	PAM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	PCM	●	●	●	●	0x0023 0x0025 0x0047 0x0048 0x0058 0x0080 0x0081 0x0082 0x0083 0x00A2 0x00A3
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	RCM	●	●	●	●	0x0005
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	RETM	●	●	●	●	0x0005
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	SDARS	●	●	●	●	0x0005
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	TBC	●	●	●	●	○
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	TCM	●	●	●	●	○
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2009 - 2010	APIM	●	●	●	●	○
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2010	GPSM	●	●	●	○	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011	GPCM	●	●	●	●	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011	NOx#1	●	●	●	○	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2012	ABS	●	●	●	●	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2012	ACM	●	●	●	○	0x0017 0x0018 0x0005
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2012	HVAC	●	●	●	●	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2012	IPC	●	●	●	●	0x00D0
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2012	PAM	●	●	●	●	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2012	SDARS	●	●	●	●	0x0005
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2012	TPM	●	●	●	●	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2013	PCM	●	●	●	●	0x0009 0x0058 0x0059 0x0080 0x0081 0x0082 0x0083 0x0091 0x0093 0x0095 0x009B 0x009C 0x009D 0x009E 0x009F 0x00A0
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2013	TCM	●	●	●	●	0x0038 0x00CE
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2014	AHCM	●	●	●	●	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2014	APIM	●	●	●	●	0x0019
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2014	BCM#1	●	●	●	●	0x000A 0x000F 0x0042 0x00D4
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2014	CDIM	●	●	●	●	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2014	DCSM	●	●	●	●	0x0005
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2014	DSM	●	●	●	●	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2014	GPSM	●	●	●	●	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2014	RCM	●	●	●	●	0x0005
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2014	SCCM	●	●	●	●	0x0005
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2014	TBC	●	●	●	●	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2014	TCCM	●	●	●	●	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2014	FCIM	●	●	●	○	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2014	RTM	●	●	●	○	○
F-Series Super Duty	6.8L	2V	2004	ABS/TCS	●	●	●	●	0x0008 0x001B
F-Series Super Duty	6.8L	2V	2004	HEC	●	●	●	●	○
F-Series Super Duty	6.8L	2V	2004	OTC	●	●	●	●	○
F-Series Super Duty	6.8L	2V	2004	PATS	●	●	●	●	0x0009

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
F-Series Super Duty	6.8L	2V	2004 - 2007	GEM	●	●	●	●	○
F-Series Super Duty	6.8L	2V	2004 - 2007	VSM	●	●	●	●	0x000A 0x000F
F-Series Super Duty	6.8L	2V	2004 - 2008	PAM	●	●	●	●	○
F-Series Super Duty	6.8L	2V	2004 - 2008	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083
F-Series Super Duty	6.8L	2V	2004 - 2008	RCM	●	●	●	●	○
F-Series Super Duty	6.8L	2V	2005 - 2007	EATC	●	●	●	●	○
F-Series Super Duty	6.8L	2V	2005 - 2008	ABS	●	●	●	●	0x0008
F-Series Super Duty	6.8L	2V	2005 - 2008	IC	●	●	●	●	0x0009
F-Series Super Duty	6.8L	2V	2005 - 2008	TBC	●	●	●	●	○
F-Series Super Duty	6.8L	2V	2008	4X4	●	●	●	●	○
F-Series Super Duty	6.8L	2V	2008	ACM	●	●	●	●	0x0016 0x0017 0x0018
F-Series Super Duty	6.8L	2V	2008	DSM	●	●	●	●	○
F-Series Super Duty	6.8L	2V	2008	GEM /	●	●	●	●	0x000A 0x000F 0x0042
F-Series Super Duty	6.8L	2V	2008	HVAC	●	●	●	●	○
F-Series Super Duty	6.8L	2V	2008	RETM	●	●	●	●	○
F-Series Super Duty	6.8L	2V	2008	SDARS	●	●	●	●	0x0019
F-Series Super Duty	6.8L	3V	2005 - 2007	EATC	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2005 - 2007	GEM	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2005 - 2007	VSM	●	●	●	●	0x000A 0x000F
F-Series Super Duty	6.8L	3V	2005 - 2010	IC	●	●	●	●	0x0009
F-Series Super Duty	6.8L	3V	2005 - 2012	ABS	●	●	●	●	0x0008
F-Series Super Duty	6.8L	3V	2005 - 2012	PAM	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2005 - 2012	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x00C5
F-Series Super Duty	6.8L	3V	2005 - 2014	RCM	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2005 - 2014	TBC	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2008 - 2010	4X4	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2008 - 2010	GEM /	●	●	●	●	0x000A 0x000F 0x0042
F-Series Super Duty	6.8L	3V	2008 - 2010	RETM	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2008 - 2011	SDARS	●	●	●	●	0x0019
F-Series Super Duty	6.8L	3V	2008 - 2012	ACM	●	●	●	●	0x0016 0x0017 0x0018
F-Series Super Duty	6.8L	3V	2008 - 2012	HVAC	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2008 - 2014	DSM	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2009 - 2014	APIM	●	●	●	●	0x0019 0x001C
F-Series Super Duty	6.8L	3V	2010 - 2014	GPSM	●	●	●	○	○
F-Series Super Duty	6.8L	3V	2011 - 2012	IPC	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2011 - 2012	TPM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
F-Series Super Duty	6.8L	3V	2011 - 2014	BCM#1	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2011 - 2014	DCSM	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2011 - 2014	SCCM	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2011 - 2014	TCCM	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2013 - 2014	FCIM	●	●	●	○	○
F-Series Super Duty	6.8L	3V	2013 - 2014	RTM	●	●	●	○	○
F-Series Super Duty	6.8L	Other	1999 - 2001	ECS	●	●	●	●	○
F-Series Super Duty	6.8L	Other	1999 - 2003	ABS/TCS	●	●	●	●	0x0008
F-Series Super Duty	6.8L	Other	1999 - 2003	GEM	●	●	●	●	○
F-Series Super Duty	6.8L	Other	1999 - 2003	OTC	●	●	●	●	○
F-Series Super Duty	6.8L	Other	1999 - 2003	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033
F-Series Super Duty	6.8L	Other	2000 - 2001	AFCM	●	●	●	●	○
F-Series Super Duty	6.8L	Other	2000 - 2003	PATS	●	●	●	●	0x0009
F-Series Super Duty	6.8L	Other	2001 - 2003	PAM	●	●	●	●	○
F-Series Super Duty	6.8L	Other	2001 - 2003	RCM	●	●	●	●	○
F-Series Super Duty	6.8L	Other	2002	CSM	●	●	●	●	0x000A 0x000F
F-Series Super Duty	6.8L	Other	2002 - 2003	HEC	●	●	●	●	○
F-Series Super Duty	6.8L	Other	2003	FOH	●	●	●	●	○
F-Series Super Duty	6.8L	Other	2003	VSM	●	●	●	●	0x000A 0x000F
F-Series Super Duty	7.3L	Direct Injection - Turbo	1999 - 2001	ECS	●	●	●	●	○
F-Series Super Duty	7.3L	Direct Injection - Turbo	1999 - 2003	ABS/TCS	●	●	●	●	0x0008
F-Series Super Duty	7.3L	Direct Injection - Turbo	1999 - 2003	GEM	●	●	●	●	○
F-Series Super Duty	7.3L	Direct Injection - Turbo	1999 - 2003	OTC	●	●	●	●	○
F-Series Super Duty	7.3L	Direct Injection - Turbo	1999 - 2003	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033
F-Series Super Duty	7.3L	Direct Injection - Turbo	2000 - 2003	PATS	●	●	●	●	0x0009
F-Series Super Duty	7.3L	Direct Injection - Turbo	2001 - 2003	PAM	●	●	●	●	○
F-Series Super Duty	7.3L	Direct Injection - Turbo	2001 - 2003	RCM	●	●	●	●	○
F-Series Super Duty	7.3L	Direct Injection - Turbo	2002	CSM	●	●	●	●	0x000A 0x000F
F-Series Super Duty	7.3L	Direct Injection - Turbo	2002 - 2003	HEC	●	●	●	●	○
F-Series Super Duty	7.3L	Direct Injection - Turbo	2003	FOH	●	●	●	●	○
F-Series Super Duty	7.3L	Direct Injection - Turbo	2003	VSM	●	●	●	●	0x000A 0x000F
FORD GT	5.4L	4V	2005 - 2006	ABS/TCS	●	●	●	●	0x0008
FORD GT	5.4L	4V	2005 - 2006	AFCM	●	●	●	●	○
FORD GT	5.4L	4V	2005 - 2006	GEM	●	●	●	●	0x000A
FORD GT	5.4L	4V	2005 - 2006	IC	●	●	●	●	○
FORD GT	5.4L	4V	2005 - 2006	PATS	●	●	●	●	0x0009

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
FORD GT	5. 4L	4V	2005 - 2006	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
FORD GT	5. 4L	4V	2005 - 2006	RCM	●	●	●	●	○
Fiesta	1. 0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	APIM	●	●	●	●	○
Fiesta	1. 0L	EcoBoost - Gas Turbocharged Direct Injection	2014	DDM	●	●	●	●	○
Fiesta	1. 0L	EcoBoost - Gas Turbocharged Direct Injection	2014	FCIM	●	●	●	○	○
Fiesta	1. 0L	EcoBoost - Gas Turbocharged Direct Injection	2014	GPSM	●	●	●	○	○
Fiesta	1. 0L	EcoBoost - Gas Turbocharged Direct Injection	2014	HVAC	●	●	●	●	○
Fiesta	1. 0L	EcoBoost - Gas Turbocharged Direct Injection	2014	RCM	●	●	●	○	○
Fiesta	1. 0L	EcoBoost - Gas Turbocharged Direct Injection	2014	RFA	●	●	●	○	○
Fiesta	1. 0L	GTDI FGEC	2013	APIM	●	●	●	●	○
Fiesta	1. 0L	GTDI FGEC	2013	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Fiesta	1. 0L	GTDI FGEC	2013	TCM	●	●	●	●	○
Fiesta	1. 0L	Gasoline_Direct_injection	2013	APIM	●	●	●	●	○
Fiesta	1. 25L	DURATEC 16V	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta	1. 25L	DURATEC 16V	2002 - 2006	GEM	●	●	●	●	○
Fiesta	1. 25L	DURATEC 16V	2002 - 2006	IC	●	●	●	●	○
Fiesta	1. 25L	DURATEC 16V	2002 - 2008	RCM	●	●	●	●	○
Fiesta	1. 25L	DURATEC 16V	2002 - 2013	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta	1. 25L	DURATEC 16V	2006	EATC	●	●	●	●	○
Fiesta	1. 25L	DURATEC 16V	2006 - 2008	ACM	●	●	●	●	○
Fiesta	1. 25L	DURATEC 16V	2006 - 2008	SRM	●	●	●	●	○
Fiesta	1. 25L	DURATEC 16V	2008	ABS	●	●	●	○	○
Fiesta	1. 25L	DURATEC 16V	2008	BCMii	●	●	●	●	○
Fiesta	1. 25L	DURATEC 16V	2008	FCDIM	●	●	●	●	○
Fiesta	1. 25L	DURATEC 16V	2008	HVAC	●	●	●	●	○
Fiesta	1. 25L	DURATEC 16V	2008	IPC	●	●	●	●	○
Fiesta	1. 25L	DURATEC 16V	2008	PSCM	●	●	●	○	○
Fiesta	1. 25L	DURATEC 16V	2008	RFA	●	●	●	○	○
Fiesta	1. 25L	DURATEC 16V	2013	APIM	●	●	●	●	○
Fiesta	1. 3L	BZ	2008	ABS	●	●	●	○	0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8
Fiesta	1. 3L	BZ	2008	ACM	●	●	●	●	○
Fiesta	1. 3L	BZ	2008	BCMii	●	●	●	●	○
Fiesta	1. 3L	BZ	2008	FCDIM	●	●	●	●	0x00E9
Fiesta	1. 3L	BZ	2008	HVAC	●	●	●	●	○
Fiesta	1. 3L	BZ	2008	IPC	●	●	●	●	0x0009
Fiesta	1. 3L	BZ	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Fiesta	1. 3L	BZ	2008	PSCM	●	●	●	○	0x00D7 0x00D8 0x00DA 0x00DC

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta	1.3L	BZ	2008	RCM	●	●	●	○	0x00F0 0x0102
Fiesta	1.3L	BZ	2008	RFA	●	●	●	○	○
Fiesta	1.3L	BZ	2008	SRM	●	●	●	○	○
Fiesta	1.3L	DURATEC 8V	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta	1.3L	DURATEC 8V	2002 - 2006	GEM	●	●	●	●	○
Fiesta	1.3L	DURATEC 8V	2002 - 2006	IC	●	●	●	●	○
Fiesta	1.3L	DURATEC 8V	2002 - 2006	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta	1.3L	DURATEC 8V	2002 - 2006	RCM	●	●	●	●	○
Fiesta	1.3L	DURATEC 8V	2006	ACM	●	●	●	●	○
Fiesta	1.3L	DURATEC 8V	2006	EATC	●	●	●	●	○
Fiesta	1.3L	DURATEC 8V	2006	SRM	●	●	●	●	○
Fiesta	1.4L	DURATEC 16V	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta	1.4L	DURATEC 16V	2002 - 2006	GEM	●	●	●	●	○
Fiesta	1.4L	DURATEC 16V	2002 - 2006	IC	●	●	●	●	○
Fiesta	1.4L	DURATEC 16V	2002 - 2006	TCM	●	●	●	●	0x003F
Fiesta	1.4L	DURATEC 16V	2002 - 2008	RCM	●	●	●	●	○
Fiesta	1.4L	DURATEC 16V	2002 - 2013	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta	1.4L	DURATEC 16V	2006	EATC	●	●	●	●	○
Fiesta	1.4L	DURATEC 16V	2006 - 2008	ACM	●	●	●	●	○
Fiesta	1.4L	DURATEC 16V	2006 - 2008	SRM	●	●	●	●	○
Fiesta	1.4L	DURATEC 16V	2008	ABS	●	●	●	○	○
Fiesta	1.4L	DURATEC 16V	2008	BCMii	●	●	●	●	○
Fiesta	1.4L	DURATEC 16V	2008	FCDIM	●	●	●	●	○
Fiesta	1.4L	DURATEC 16V	2008	HVAC	●	●	●	●	○
Fiesta	1.4L	DURATEC 16V	2008	IPC	●	●	●	●	○
Fiesta	1.4L	DURATEC 16V	2008	PSCM	●	●	●	○	○
Fiesta	1.4L	DURATEC 16V	2008	RFA	●	●	●	○	○
Fiesta	1.4L	DURATEC 16V	2013	APIM	●	●	●	●	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	GEM	●	●	●	●	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	IC	●	●	●	●	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	TCM	●	●	●	●	0x003F
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	RCM	●	●	●	●	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2006	EATC	●	●	●	●	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2008	ACM	●	●	●	●	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2008	SRM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	ABS	●	●	●	○	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	BCMii	●	●	●	●	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	FCDIM	●	●	●	●	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	HVAC	●	●	●	●	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	IPC	●	●	●	●	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	PSCM	●	●	●	○	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	RFA	●	●	●	○	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	ABS	●	●	●	○	0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	ACM	●	●	●	●	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	BCMii	●	●	●	●	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	FCDIM	●	●	●	●	0x00E9
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	HVAC	●	●	●	●	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	IPC	●	●	●	●	0x0009
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083 0x0092 0x0098 0x0099 0x009A
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	PSCM	●	●	●	○	0x00D7 0x00D8 0x00DA 0x00DC
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	RCM	●	●	●	○	0x00F0
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	RFA	●	●	●	○	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	SRM	●	●	●	○	○
Fiesta	1.5L	BZ	2008	ABS	●	●	●	○	0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8
Fiesta	1.5L	BZ	2008	ACM	●	●	●	●	○
Fiesta	1.5L	BZ	2008	BCMii	●	●	●	●	○
Fiesta	1.5L	BZ	2008	FCDIM	●	●	●	●	0x00E9
Fiesta	1.5L	BZ	2008	HVAC	●	●	●	●	○
Fiesta	1.5L	BZ	2008	IPC	●	●	●	●	0x0009
Fiesta	1.5L	BZ	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Fiesta	1.5L	BZ	2008	PSCM	●	●	●	○	0x00D7 0x00D8 0x00DA 0x00DC
Fiesta	1.5L	BZ	2008	RCM	●	●	●	○	0x00F0 0x0102
Fiesta	1.5L	BZ	2008	RFA	●	●	●	○	○
Fiesta	1.5L	BZ	2008	SRM	●	●	●	○	○
Fiesta	1.5L	DURATEC 16V	2013	APIM	●	●	●	●	○
Fiesta	1.5L	DURATEC 16V	2013	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection	2008	ABS	●	●	●	○	○
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection	2008	ACM	●	●	●	●	○
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection	2008	BCMii	●	●	●	●	○
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection	2008	FCDIM	●	●	●	●	○
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection	2008	HVAC	●	●	●	●	○
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection	2008	IPC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection	2008	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection	2008	PSCM	●	●	●	○	○
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection	2008	RCM	●	●	●	○	○
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection	2008	RFA	●	●	●	○	○
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection	2008	SRM	●	●	●	○	○
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection	2013	APIM	●	●	●	●	○
Fiesta	1.5L	TiVCT	2008	ABS	●	●	●	○	0x00E8
Fiesta	1.5L	TiVCT	2008	ACM	●	●	●	●	○
Fiesta	1.5L	TiVCT	2008	BCMii	●	●	●	●	○
Fiesta	1.5L	TiVCT	2008	FCDIM	●	●	●	●	0x00E9
Fiesta	1.5L	TiVCT	2008	HVAC	●	●	●	●	○
Fiesta	1.5L	TiVCT	2008	IPC	●	●	●	●	0x0009
Fiesta	1.5L	TiVCT	2008	PSCM	●	●	●	○	○
Fiesta	1.5L	TiVCT	2008	RCM	●	●	●	○	0x00F0 0x0102
Fiesta	1.5L	TiVCT	2008	RFA	●	●	●	○	○
Fiesta	1.5L	TiVCT	2008	SRM	●	●	●	○	○
Fiesta	1.5L	TiVCT	2008 - 2013	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Fiesta	1.5L	TiVCT	2013	APIM	●	●	●	●	○
Fiesta	1.5L	TiVCT	2013	TCM	●	●	●	●	○
Fiesta	1.5L	Zetec-SE	2013	APIM	●	●	●	●	○
Fiesta	1.6L	DURATEC 16V	2002	TCM	●	●	●	●	○
Fiesta	1.6L	DURATEC 16V	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta	1.6L	DURATEC 16V	2002 - 2006	GEM	●	●	●	●	○
Fiesta	1.6L	DURATEC 16V	2002 - 2006	IC	●	●	●	●	○
Fiesta	1.6L	DURATEC 16V	2002 - 2006	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta	1.6L	DURATEC 16V	2002 - 2006	RCM	●	●	●	●	○
Fiesta	1.6L	DURATEC 16V	2006	ACM	●	●	●	●	○
Fiesta	1.6L	DURATEC 16V	2006	EATC	●	●	●	●	○
Fiesta	1.6L	DURATEC 16V	2006	SRM	●	●	●	●	○
Fiesta	1.6L	DURATEC VCT	2008	ABS	●	●	●	○	0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8
Fiesta	1.6L	DURATEC VCT	2008	ACM	●	●	●	●	○
Fiesta	1.6L	DURATEC VCT	2008	BCMii	●	●	●	●	○
Fiesta	1.6L	DURATEC VCT	2008	FCDIM	●	●	●	●	0x00E9
Fiesta	1.6L	DURATEC VCT	2008	HVAC	●	●	●	●	○
Fiesta	1.6L	DURATEC VCT	2008	IPC	●	●	●	●	0x0009
Fiesta	1.6L	DURATEC VCT	2008	PSCM	●	●	●	○	0x00D7 0x00D8 0x00DA 0x00DC
Fiesta	1.6L	DURATEC VCT	2008	RCM	●	●	●	○	0x00F0
Fiesta	1.6L	DURATEC VCT	2008	RFA	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta	1.6L	DURATEC VCT	2008	SRM	●	●	●	○	○
Fiesta	1.6L	DURATEC VCT	2008 - 2013	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x00BC
Fiesta	1.6L	DURATEC VCT	2013	APIM	●	●	●	●	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	EPS	●	●	●	●	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	GEM	●	●	●	●	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	IC	●	●	●	●	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0092 0x0096 0x0097 0x0099 0x009A 0x00AD 0x00AE 0x0090 0x0098 0x00AA 0x00B0 0x00B1
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	RCM	●	●	●	●	0x00F0
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2006	EATC	●	●	●	●	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2008	ACM	●	●	●	●	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2008	SRM	●	●	●	●	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	ABS	●	●	●	○	0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	BCMii	●	●	●	●	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	FCDIM	●	●	●	●	0x00E9
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	HVAC	●	●	●	●	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	IPC	●	●	●	●	0x0009
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	PSCM	●	●	●	○	0x00D7 0x00D8 0x00DA 0x00DC
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	RFA	●	●	●	○	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	ABS	●	●	●	○	0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	ACM	●	●	●	●	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	BCMii	●	●	●	●	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	FCDIM	●	●	●	●	0x00E9
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	HVAC	●	●	●	●	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	IPC	●	●	●	●	0x0009
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00AF 0x00B0 0x00B1 0x00B2 0x00B8 0x00B9 0x00BD
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	PSCM	●	●	●	○	0x00D7 0x00D8 0x00DA 0x00DC
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	RCM	●	●	●	○	0x00F0
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	RFA	●	●	●	○	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	SRM	●	●	●	○	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2013	APIM	●	●	●	●	○
Fiesta	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	APIM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2014	DDM	●	●	●	●	○
Fiesta	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2014	FCIM	●	●	●	○	○
Fiesta	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2014	GPSM	●	●	●	○	○
Fiesta	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2014	HVAC	●	●	●	●	○
Fiesta	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2014	RCM	●	●	●	○	○
Fiesta	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2014	RFA	●	●	●	○	○
Fiesta	1.6L	Sigma	2011 - 2012	ABS	●	●	●	●	0x0008 0x0012
Fiesta	1.6L	Sigma	2011 - 2012	ACM	●	●	●	○	○
Fiesta	1.6L	Sigma	2011 - 2012	APIM	●	●	●	●	○
Fiesta	1.6L	Sigma	2011 - 2012	BCM#1	●	●	●	●	○
Fiesta	1.6L	Sigma	2011 - 2012	FCDIM	●	●	●	●	○
Fiesta	1.6L	Sigma	2011 - 2012	GPSM	●	●	●	○	○
Fiesta	1.6L	Sigma	2011 - 2012	IPC	●	●	●	●	○
Fiesta	1.6L	Sigma	2011 - 2012	OCSM	●	●	●	○	0x000C
Fiesta	1.6L	Sigma	2011 - 2012	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x0096 0x0097 0x012B
Fiesta	1.6L	Sigma	2011 - 2012	PSCM	●	●	●	○	0x00CB 0x00CC 0x011E
Fiesta	1.6L	Sigma	2011 - 2012	RCM	●	●	●	○	○
Fiesta	1.6L	Sigma	2011 - 2012	RFA	●	●	●	○	○
Fiesta	1.6L	Sigma	2011 - 2012	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
Fiesta	1.6L	Sigma	2011 - 2012	TCM	●	●	●	●	○
Fiesta	1.6L	Sigma	2011 - 2012	VSM	●	●	●	●	0x0042
Fiesta	1.6L	TDCi ECO II	2008	ABS	●	●	●	○	○
Fiesta	1.6L	TDCi ECO II	2008	ACM	●	●	●	●	○
Fiesta	1.6L	TDCi ECO II	2008	BCMii	●	●	●	●	○
Fiesta	1.6L	TDCi ECO II	2008	FCDIM	●	●	●	●	○
Fiesta	1.6L	TDCi ECO II	2008	HVAC	●	●	●	●	○
Fiesta	1.6L	TDCi ECO II	2008	IPC	●	●	●	●	○
Fiesta	1.6L	TDCi ECO II	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Fiesta	1.6L	TDCi ECO II	2008	PSCM	●	●	●	○	○
Fiesta	1.6L	TDCi ECO II	2008	RCM	●	●	●	○	○
Fiesta	1.6L	TDCi ECO II	2008	RFA	●	●	●	○	○
Fiesta	1.6L	TDCi ECO II	2008	SRM	●	●	●	○	○
Fiesta	1.6L	TDCi ECO II	2013	APIM	●	●	●	●	○
Fiesta	1.6L	TiVCT	2008	BCMii	●	●	●	●	○
Fiesta	1.6L	TiVCT	2008	SRM	●	●	●	○	○
Fiesta	1.6L	TiVCT	2008 - 2013	ABS	●	●	●	●	○
Fiesta	1.6L	TiVCT	2008 - 2013	ACM	●	●	●	○	○
Fiesta	1.6L	TiVCT	2008 - 2013	FCDIM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta	1.6L	TiVCT	2008 - 2013	IPC	●	●	●	●	○
Fiesta	1.6L	TiVCT	2008 - 2013	PCM	●	●	●	●	0x0009 0x0023 0x0080 0x0081 0x0082 0x0083
Fiesta	1.6L	TiVCT	2008 - 2013	PSCM	●	●	●	○	0x00CB 0x00CC
Fiesta	1.6L	TiVCT	2008 - 2013	TCM	●	●	●	●	○
Fiesta	1.6L	TiVCT	2008 - 2014	HVAC	●	●	●	●	○
Fiesta	1.6L	TiVCT	2008 - 2014	RCM	●	●	●	○	○
Fiesta	1.6L	TiVCT	2008 - 2014	RFA	●	●	●	○	○
Fiesta	1.6L	TiVCT	2011 - 2013	BCM#1	●	●	●	●	○
Fiesta	1.6L	TiVCT	2011 - 2013	OCSM	●	●	●	○	○
Fiesta	1.6L	TiVCT	2011 - 2013	VSM	●	●	●	●	0x0042
Fiesta	1.6L	TiVCT	2011 - 2014	APIM	●	●	●	●	○
Fiesta	1.6L	TiVCT	2011 - 2014	GPSM	●	●	●	○	○
Fiesta	1.6L	TiVCT	2014	DDM	●	●	●	●	○
Fiesta	1.6L	TiVCT	2014	FCIM	●	●	●	○	○
Fiesta / Ikon	1.4 DV4	Duratorq Turbo Diesel Common Rail Injection	2006	ABS/TCS	●	●	●	●	○
Fiesta / Ikon	1.4 DV4	Duratorq Turbo Diesel Common Rail Injection	2006	GEM	●	●	●	●	○
Fiesta / Ikon	1.4 DV4	Duratorq Turbo Diesel Common Rail Injection	2006	IC	●	●	●	●	○
Fiesta / Ikon	1.4 DV4	Duratorq Turbo Diesel Common Rail Injection	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Fiesta / Ikon	1.4 DV4	Duratorq Turbo Diesel Common Rail Injection	2006	RCM	●	●	●	●	○
Fiesta / Ikon	1.4L	DURATEC 16V	2006	ABS/TCS	●	●	●	●	0x0008
Fiesta / Ikon	1.4L	DURATEC 16V	2006	GEM	●	●	●	●	○
Fiesta / Ikon	1.4L	DURATEC 16V	2006	IC	●	●	●	●	○
Fiesta / Ikon	1.4L	DURATEC 16V	2006	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta / Ikon	1.4L	DURATEC 16V	2006	RCM	●	●	●	●	○
Fiesta / Ikon	1.6L	DURATEC 16V	2006	ABS/TCS	●	●	●	●	○
Fiesta / Ikon	1.6L	DURATEC 16V	2006	GEM	●	●	●	●	○
Fiesta / Ikon	1.6L	DURATEC 16V	2006	IC	●	●	●	●	○
Fiesta / Ikon	1.6L	DURATEC 16V	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Fiesta / Ikon	1.6L	DURATEC 16V	2006	RCM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.0L	HCS	1996 - 1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.0L	HCS	1996 - 1999	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.0L	HCS	1996 - 1999	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.0L	HCS	1996 - 1999	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x0023
Fiesta / Mazda 121 / Bantam	1.0L	HCS	1999	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999	ECS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1996 - 2000	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1996 - 2000	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1996 - 2000	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1996 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1999 - 2000	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1999 - 2000	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000	PATS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 - 1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 - 1999	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 - 1999	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 - 1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.4L	1.4 PT-E SFI	1994 - 1996	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.4L	1.4 PT-E SFI	1994 - 1996	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.4L	1.4 PT-E SFI	1994 - 1996	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.4L	PT-E	2000	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.4L	PT-E	2000	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.4L	PT-E	2000	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.4L	PT-E	2000	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.4L	PT-E	2000	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996 - 1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996 - 1999	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996 - 1999	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1996 - 1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1999	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.4L	Zetec-SE	1999	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001	PATS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Other	2001	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999	ABS/TCS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Zetec Rocam	1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1.6L	Zetec-SE	2000	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Zetec-SE	2000	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Zetec-SE	2000	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Zetec-SE	2000	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Zetec-SE	2000	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.6L	Zetec-SE	2000	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1.8L	Endura DI	2000	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura DI	2000	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura DI	2000	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura DI	2000	FIP	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura DI	2000	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura DI	2000	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura DI	2000	PATS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura DI	2000	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996 -	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996 -	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996 -	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996 -	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996 -	PATS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Endura-DE	1996 -	PCM	○	○	●	○	0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1.8L	Zetec	1992 - 1994	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Zetec	1992 - 1994	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.8L	Zetec	1992 - 1994	HEC	●	●	●	●	○
Fiesta 3-Door	1.25L	DURATEC 16V	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta 3-Door	1.25L	DURATEC 16V	2002 - 2006	GEM	●	●	●	●	○
Fiesta 3-Door	1.25L	DURATEC 16V	2002 - 2006	IC	●	●	●	●	○
Fiesta 3-Door	1.25L	DURATEC 16V	2002 - 2006	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta 3-Door	1.25L	DURATEC 16V	2002 - 2006	RCM	●	●	●	●	○
Fiesta 3-Door	1.25L	DURATEC 16V	2006	ACM	●	●	●	●	○
Fiesta 3-Door	1.25L	DURATEC 16V	2006	EATC	●	●	●	●	○
Fiesta 3-Door	1.25L	DURATEC 16V	2006	SRM	●	●	●	●	○
Fiesta 3-Door	1.3L	DURATEC 8V	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta 3-Door	1.3L	DURATEC 8V	2002 - 2006	GEM	●	●	●	●	○
Fiesta 3-Door	1.3L	DURATEC 8V	2002 - 2006	IC	●	●	●	●	○
Fiesta 3-Door	1.3L	DURATEC 8V	2002 - 2006	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta 3-Door	1.3L	DURATEC 8V	2002 - 2006	RCM	●	●	●	●	○
Fiesta 3-Door	1.3L	DURATEC 8V	2006	ACM	●	●	●	●	○
Fiesta 3-Door	1.3L	DURATEC 8V	2006	EATC	●	●	●	●	○
Fiesta 3-Door	1.3L	DURATEC 8V	2006	SRM	●	●	●	●	○
Fiesta 3-Door	1.4L	DURATEC 16V	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta 3-Door	1.4L	DURATEC 16V	2002 - 2006	GEM	●	●	●	●	○
Fiesta 3-Door	1.4L	DURATEC 16V	2002 - 2006	IC	●	●	●	●	○
Fiesta 3-Door	1.4L	DURATEC 16V	2002 - 2006	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta 3-Door	1.4L	DURATEC 16V	2002 - 2006	RCM	●	●	●	●	○
Fiesta 3-Door	1.4L	DURATEC 16V	2002 - 2006	TCM	●	●	●	●	0x003F
Fiesta 3-Door	1.4L	DURATEC 16V	2006	ACM	●	●	●	●	○
Fiesta 3-Door	1.4L	DURATEC 16V	2006	EATC	●	●	●	●	○
Fiesta 3-Door	1.4L	DURATEC 16V	2006	SRM	●	●	●	●	○
Fiesta 3-Door	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta 3-Door	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	GEM	●	●	●	●	○
Fiesta 3-Door	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	IC	●	●	●	●	○
Fiesta 3-Door	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Fiesta 3-Door	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	RCM	●	●	●	●	○
Fiesta 3-Door	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	TCM	●	●	●	●	0x003F
Fiesta 3-Door	1.4L	Duratorq Turbo Diesel Common Rail Injection	2006	ACM	●	●	●	●	○
Fiesta 3-Door	1.4L	Duratorq Turbo Diesel Common Rail Injection	2006	EATC	●	●	●	●	○
Fiesta 3-Door	1.4L	Duratorq Turbo Diesel Common Rail Injection	2006	SRM	●	●	●	●	○
Fiesta 3-Door	1.6L	DURATEC 16V	2002	TCM	●	●	●	●	○
Fiesta 3-Door	1.6L	DURATEC 16V	2002 - 2006	ABS/TCS	●	●	●	●	0x0008
Fiesta 3-Door	1.6L	DURATEC 16V	2002 - 2006	GEM	●	●	●	●	○
Fiesta 3-Door	1.6L	DURATEC 16V	2002 - 2006	IC	●	●	●	●	○
Fiesta 3-Door	1.6L	DURATEC 16V	2002 - 2006	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta 3-Door	1.6L	DURATEC 16V	2002 - 2006	RCM	●	●	●	●	○
Fiesta 3-Door	1.6L	DURATEC 16V	2006	ACM	●	●	●	●	○
Fiesta 3-Door	1.6L	DURATEC 16V	2006	EATC	●	●	●	●	○
Fiesta 3-Door	1.6L	DURATEC 16V	2006	SRM	●	●	●	●	○
Fiesta 3-Door	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta 3-Door	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	EPS	●	●	●	●	○
Fiesta 3-Door	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	GEM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta 3-Door	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	IC	●	●	●	●	○
Fiesta 3-Door	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0092 0x0096 0x0097 0x0099 0x009A 0x00AD 0x00AE
Fiesta 3-Door	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	RCM	●	●	●	●	○
Fiesta 3-Door	1.6L	Duratorq Turbo Diesel Common Rail Injection	2006	ACM	●	●	●	●	○
Fiesta 3-Door	1.6L	Duratorq Turbo Diesel Common Rail Injection	2006	EATC	●	●	●	●	○
Fiesta 3-Door	1.6L	Duratorq Turbo Diesel Common Rail Injection	2006	SRM	●	●	●	●	○
Fiesta 3-Door	2.0L	DURATEC-HE / I4	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta 3-Door	2.0L	DURATEC-HE / I4	2002 - 2006	GEM	●	●	●	●	○
Fiesta 3-Door	2.0L	DURATEC-HE / I4	2002 - 2006	IC	●	●	●	●	○
Fiesta 3-Door	2.0L	DURATEC-HE / I4	2002 - 2006	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta 3-Door	2.0L	DURATEC-HE / I4	2002 - 2006	RCM	●	●	●	●	○
Fiesta 3-Door	2.0L	DURATEC-HE / I4	2006	ACM	●	●	●	●	○
Fiesta 3-Door	2.0L	DURATEC-HE / I4	2006	EATC	●	●	●	●	○
Fiesta 3-Door	2.0L	DURATEC-HE / I4	2006	SRM	●	●	●	●	○
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	ABS	●	●	●	○	0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	ACM	●	●	●	●	○
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	AHCM	●	●	●	○	○
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	APIM	●	●	●	●	○
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	BCMii	●	●	●	●	0x0009 0x0101
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	CCMii	●	●	●	●	0x00F9
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	DDM	●	●	●	○	○
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	DSP	●	●	●	○	○
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	FCDIM	●	●	●	●	○
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	FCIM	●	●	●	●	○
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	FDSM	●	●	●	○	○
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	HCM	●	●	●	○	○
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	HVAC	●	●	●	○	○
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPC	●	●	●	●	○
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPM-A	●	●	●	○	0x00E5
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPM-B	●	●	●	○	○
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	PAM	●	●	●	○	○
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x00C3 0x0114
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	PDM	●	●	●	○	○
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	PSCM	●	●	●	○	0x00DC 0x00DF 0x00E0 0x00E1
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	RCM	●	●	●	●	0x0102
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	RFA	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	SASM	●	●	●	○	○
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	SOD-L	●	●	●	●	○
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	SOD-R	●	●	●	●	○
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	SRM	●	●	●	●	○
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	TRM	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2003	RL_DCU	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2003	RR_DCU	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2003 - 2007	GDM	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2003 - 2007	NAV	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2003 - 2008	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002C 0x00DD 0x00DE 0x0030 0x00E8 0x00EB 0x00EC
Focus	1.4L	DURATEC 16V	2003 - 2008	ACM	●	●	●	●	0x011A
Focus	1.4L	DURATEC 16V	2003 - 2008	CDP	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2003 - 2008	D_DCU	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2003 - 2008	EATC	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2003 - 2008	FFH	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2003 - 2008	GEM	●	●	●	●	0x00ED
Focus	1.4L	DURATEC 16V	2003 - 2008	HCM	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2003 - 2008	IC	●	●	●	●	0x0009
Focus	1.4L	DURATEC 16V	2003 - 2008	PAM	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2003 - 2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0025
Focus	1.4L	DURATEC 16V	2003 - 2008	P_DCU	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2003 - 2008	RCM	●	●	●	●	0x00EA
Focus	1.4L	DURATEC 16V	2003 - 2008	RETM	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2003 - 2008	RKE	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2003 - 2008	SRM	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2008	CMR	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2008	EPS	●	●	●	○	○
Focus	1.4L	Zetec-SE	1999	CSM	●	●	●	●	○
Focus	1.4L	Zetec-SE	1999	CTM	●	●	●	●	○
Focus	1.4L	Zetec-SE	1999 - 2002	ABS/TCS	●	●	●	●	0x00F1 0x0008 0x0012
Focus	1.4L	Zetec-SE	1999 - 2002	ECS	●	●	●	●	○
Focus	1.4L	Zetec-SE	1999 - 2002	HEC	●	●	●	●	○
Focus	1.4L	Zetec-SE	1999 - 2002	MC	●	●	●	●	○
Focus	1.4L	Zetec-SE	1999 - 2002	PATS	●	●	●	○	○
Focus	1.4L	Zetec-SE	1999 - 2002	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Focus	1.4L	Zetec-SE	2002	EATC	●	●	●	●	○
Focus	1.4L	Zetec-SE	2002	GEM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	1.4L	Zetec-SE	2002	HCM	●	●	●	●	○
Focus	1.4L	Zetec-SE	2002	RCM	●	●	●	●	○
Focus	1.6L	BZ	2005	ABS	●	●	●	●	0x0012 0x0029 0x002A 0x002C 0x0054
Focus	1.6L	BZ	2005	D_DCU	●	●	●	●	○
Focus	1.6L	BZ	2005	EATC	●	●	●	●	○
Focus	1.6L	BZ	2005	GEM	●	●	●	●	○
Focus	1.6L	BZ	2005	HCM	●	●	●	●	○
Focus	1.6L	BZ	2005	IC	●	●	●	●	0x0009
Focus	1.6L	BZ	2005	PAM	●	●	●	●	○
Focus	1.6L	BZ	2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Focus	1.6L	BZ	2005	P_DCU	●	●	●	●	○
Focus	1.6L	BZ	2005	RCM	●	●	●	●	○
Focus	1.6L	BZ	2005	RL_DCU	●	●	●	●	○
Focus	1.6L	BZ	2005	RR_DCU	●	●	●	●	○
Focus	1.6L	DURATEC 16V	2003	RL_DCU	●	●	●	●	○
Focus	1.6L	DURATEC 16V	2003	RR_DCU	●	●	●	●	○
Focus	1.6L	DURATEC 16V	2003 - 2007	GDM	●	●	●	●	0x0100
Focus	1.6L	DURATEC 16V	2003 - 2007	NAV	●	●	●	●	○
Focus	1.6L	DURATEC 16V	2003 - 2007	RETM	●	●	●	●	○
Focus	1.6L	DURATEC 16V	2003 - 2008	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002C 0x00DD 0x00DE 0x0030 0x00E8 0x002B 0x00EB 0x00EC
Focus	1.6L	DURATEC 16V	2003 - 2008	ACM	●	●	●	●	0x011A
Focus	1.6L	DURATEC 16V	2003 - 2008	CDP	●	●	●	●	○
Focus	1.6L	DURATEC 16V	2003 - 2008	D_DCU	●	●	●	●	○
Focus	1.6L	DURATEC 16V	2003 - 2008	EATC	●	●	●	●	○
Focus	1.6L	DURATEC 16V	2003 - 2008	FFH	●	●	●	●	○
Focus	1.6L	DURATEC 16V	2003 - 2008	GEM	●	●	●	●	0x00ED
Focus	1.6L	DURATEC 16V	2003 - 2008	HCM	●	●	●	●	○
Focus	1.6L	DURATEC 16V	2003 - 2008	IC	●	●	●	●	0x0009
Focus	1.6L	DURATEC 16V	2003 - 2008	PAM	●	●	●	●	○
Focus	1.6L	DURATEC 16V	2003 - 2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0025
Focus	1.6L	DURATEC 16V	2003 - 2008	P_DCU	●	●	●	●	○
Focus	1.6L	DURATEC 16V	2003 - 2008	RCM	●	●	●	●	○
Focus	1.6L	DURATEC 16V	2003 - 2008	RKE	●	●	●	●	○
Focus	1.6L	DURATEC 16V	2003 - 2008	SRM	●	●	●	●	○
Focus	1.6L	DURATEC 16V	2006 - 2008	FTCM	●	●	●	●	○
Focus	1.6L	DURATEC 16V	2007	TCM	●	●	●	●	○
Focus	1.6L	DURATEC 16V	2008	EPS	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	1.6L	DURATEC VCT	2003	RL_DCU	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2003	RR_DCU	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2003 - 2007	GDM	●	●	●	●	0x0100
Focus	1.6L	DURATEC VCT	2003 - 2007	NAV	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2003 - 2008	CDP	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2003 - 2008	D_DCU	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2003 - 2008	EATC	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2003 - 2008	FFH	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2003 - 2008	GEM	●	●	●	●	0x00ED
Focus	1.6L	DURATEC VCT	2003 - 2008	IC	●	●	●	●	0x0009
Focus	1.6L	DURATEC VCT	2003 - 2008	P_DCU	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2003 - 2008	RETM	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2003 - 2008	RKE	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2003 - 2011	ABS	●	●	●	○	0x0008 0x0029 0x002A 0x002C 0x0030 0x00E8 0x002B 0x00DD 0x00DE 0x00EB 0x00EC
Focus	1.6L	DURATEC VCT	2003 - 2011	ACM	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2003 - 2011	HCM	●	●	●	○	○
Focus	1.6L	DURATEC VCT	2003 - 2011	PAM	●	●	●	○	○
Focus	1.6L	DURATEC VCT	2003 - 2011	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083
Focus	1.6L	DURATEC VCT	2003 - 2011	RCM	●	●	●	●	0x00EA
Focus	1.6L	DURATEC VCT	2003 - 2011	SRM	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2008	CMR	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2008	EPS	●	●	●	○	○
Focus	1.6L	DURATEC VCT	2011	AHCM	●	●	●	○	○
Focus	1.6L	DURATEC VCT	2011	APIM	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2011	BCMii	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2011	CCMii	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2011	DDM	●	●	●	○	○
Focus	1.6L	DURATEC VCT	2011	DSP	●	●	●	○	○
Focus	1.6L	DURATEC VCT	2011	FCDIM	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2011	FCIM	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2011	FDSM	●	●	●	○	○
Focus	1.6L	DURATEC VCT	2011	HVAC	●	●	●	○	○
Focus	1.6L	DURATEC VCT	2011	IPC	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2011	IPM-A	●	●	●	○	○
Focus	1.6L	DURATEC VCT	2011	IPM-B	●	●	●	○	○
Focus	1.6L	DURATEC VCT	2011	PDM	●	●	●	○	○
Focus	1.6L	DURATEC VCT	2011	PSCM	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	1.6L	DURATEC VCT	2011	RFA	●	●	●	○	○
Focus	1.6L	DURATEC VCT	2011	SASM	●	●	●	○	○
Focus	1.6L	DURATEC VCT	2011	SOD-L	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2011	SOD-R	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2011	TCM	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2011	TRM	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003	RL_DCU	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003	RR_DCU	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2007	GDM	●	●	●	●	0x0100
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2007	NAV	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	CDP	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	D_DCU	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	EATC	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	EPS	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	FACM	●	●	●	●	0x006B 0x0094 0x00A1
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	FFH	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	GEM	●	●	●	●	0x00ED
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	IC	●	●	●	●	0x0009
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	P_DCU	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	RETM	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	RKE	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00E8 0x00DD 0x00DE 0x00EB 0x00EC
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	ACM	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	HCM	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	PAM	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0096 0x0097 0x0098 0x0099 0x009A
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	RCM	●	●	●	●	0x00EA
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	SRM	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	CMR	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	AHCM	●	●	●	○	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	APIM	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	CCMii	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	●	●	●	○	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	DSP	●	●	●	○	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	FCDIM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	FCIM	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	FDSM	●	●	●	○	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	●	●	●	○	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-A	●	●	●	○	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-B	●	●	●	○	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	●	●	●	○	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	PSCM	●	●	●	○	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	RFA	●	●	●	○	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	SASM	●	●	●	○	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-L	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-R	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002C 0x0030 0x00DD 0x00DE 0x00E8
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	ACM	●	●	●	●	0x011A
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	CDP	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	CMR	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	D_DCU	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	EATC	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	EPS	●	●	●	○	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	FFH	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	GEM	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	HCM	●	●	●	○	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	IC	●	●	●	●	0x0009
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	PAM	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	P_DCU	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	RCM	●	●	●	●	0x00EA
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	RETM	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	RKE	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	SRM	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	TCM	●	●	●	●	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	ABS	●	●	●	○	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	ACM	●	●	●	●	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	AHCM	●	●	●	○	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	APIM	●	●	●	●	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	BCMii	●	●	●	●	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	CCMii	●	●	●	●	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	DDM	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	DSP	●	●	●	○	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	FCDIM	●	●	●	●	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	FCIM	●	●	●	●	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	FDSM	●	●	●	○	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	HCM	●	●	●	○	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	HVAC	●	●	●	○	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPC	●	●	●	●	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPM-A	●	●	●	○	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPM-B	●	●	●	○	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PAM	●	●	●	○	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PDM	●	●	●	○	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PSCM	●	●	●	○	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	RCM	●	●	●	●	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	RFA	●	●	●	○	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SASM	●	●	●	○	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SOD-L	●	●	●	●	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SOD-R	●	●	●	●	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SRM	●	●	●	●	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	TRM	●	●	●	●	○
Focus	1.6L	FFV	2007 - 2009	ABS/TCS	●	●	●	●	0x0012 0x0008
Focus	1.6L	FFV	2007 - 2010	GEM	●	●	●	●	○
Focus	1.6L	FFV	2007 - 2010	IC	●	●	●	●	0x0009
Focus	1.6L	FFV	2007 - 2010	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x0096 0x0097 0x009A 0x00AB
Focus	1.6L	FFV	2007 - 2010	RCM	●	●	●	●	○
Focus	1.6L	FFV	2009	MC	●	●	●	●	○
Focus	1.6L	FFV	2009 - 2010	EATC	●	●	●	●	○
Focus	1.6L	FFV	2009 - 2010	HCM	●	●	●	●	○
Focus	1.6L	FFV	2010	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002C 0x0030 0x0053 0x00DD 0x00DE 0x00EB 0x00EC
Focus	1.6L	FFV	2010	ACM	●	●	●	●	○
Focus	1.6L	FFV	2010	D_DCU	●	●	●	●	○
Focus	1.6L	FFV	2010	EPS	●	●	●	○	○
Focus	1.6L	FFV	2010	PAM	●	●	●	●	○
Focus	1.6L	FFV	2010	P_DCU	●	●	●	●	○
Focus	1.6L	FFV	2010	RKE	●	●	●	●	○
Focus	1.6L	FFV	2010	SRM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	1.6L	FFV	2010	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
Focus	1.6L	FFV	2010	TCM	●	●	●	●	0x0070 0x00C5
Focus	1.6L	OHC	2009	ABS/TCS	●	●	●	●	0x0012
Focus	1.6L	OHC	2009	EATC	●	●	●	●	○
Focus	1.6L	OHC	2009	GEM	●	●	●	●	○
Focus	1.6L	OHC	2009	HCM	●	●	●	●	○
Focus	1.6L	OHC	2009	IC	●	●	●	●	○
Focus	1.6L	OHC	2009	MC	●	●	●	●	○
Focus	1.6L	OHC	2009	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Focus	1.6L	OHC	2009	RCM	●	●	●	●	○
Focus	1.6L	Sigma	2010	ABS	●	●	●	●	○
Focus	1.6L	Sigma	2010	ACM	●	●	●	●	○
Focus	1.6L	Sigma	2010	D_DCU	●	●	●	●	○
Focus	1.6L	Sigma	2010	EATC	●	●	●	●	○
Focus	1.6L	Sigma	2010	EPS	●	●	●	○	○
Focus	1.6L	Sigma	2010	GEM	●	●	●	●	○
Focus	1.6L	Sigma	2010	HCM	●	●	●	○	○
Focus	1.6L	Sigma	2010	IC	●	●	●	●	○
Focus	1.6L	Sigma	2010	PAM	●	●	●	●	○
Focus	1.6L	Sigma	2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Focus	1.6L	Sigma	2010	P_DCU	●	●	●	●	○
Focus	1.6L	Sigma	2010	RCM	●	●	●	●	○
Focus	1.6L	Sigma	2010	RKE	●	●	●	●	○
Focus	1.6L	Sigma	2010	SRM	●	●	●	●	○
Focus	1.6L	Sigma	2010	TBM	●	●	●	●	○
Focus	1.6L	Sigma	2010	TCM	●	●	●	●	○
Focus	1.6L	TDCi ECO III	2011	ABS	●	●	●	○	○
Focus	1.6L	TDCi ECO III	2011	ACM	●	●	●	●	○
Focus	1.6L	TDCi ECO III	2011	AHCM	●	●	●	○	○
Focus	1.6L	TDCi ECO III	2011	APIM	●	●	●	●	○
Focus	1.6L	TDCi ECO III	2011	BCMii	●	●	●	●	○
Focus	1.6L	TDCi ECO III	2011	CCMii	●	●	●	●	○
Focus	1.6L	TDCi ECO III	2011	DDM	●	●	●	○	○
Focus	1.6L	TDCi ECO III	2011	DSP	●	●	●	○	○
Focus	1.6L	TDCi ECO III	2011	FCDIM	●	●	●	●	○
Focus	1.6L	TDCi ECO III	2011	FCIM	●	●	●	●	○
Focus	1.6L	TDCi ECO III	2011	FDSM	●	●	●	○	○
Focus	1.6L	TDCi ECO III	2011	HCM	●	●	●	○	○
Focus	1.6L	TDCi ECO III	2011	HVAC	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	1.6L	TDCi ECO III	2011	IPC	●	●	●	●	○
Focus	1.6L	TDCi ECO III	2011	IPM-A	●	●	●	○	○
Focus	1.6L	TDCi ECO III	2011	IPM-B	●	●	●	○	○
Focus	1.6L	TDCi ECO III	2011	PAM	●	●	●	○	○
Focus	1.6L	TDCi ECO III	2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Focus	1.6L	TDCi ECO III	2011	PDM	●	●	●	○	○
Focus	1.6L	TDCi ECO III	2011	PSCM	●	●	●	○	○
Focus	1.6L	TDCi ECO III	2011	RCM	●	●	●	●	○
Focus	1.6L	TDCi ECO III	2011	RFA	●	●	●	○	○
Focus	1.6L	TDCi ECO III	2011	SASM	●	●	●	○	○
Focus	1.6L	TDCi ECO III	2011	SOD-L	●	●	●	●	○
Focus	1.6L	TDCi ECO III	2011	SOD-R	●	●	●	●	○
Focus	1.6L	TDCi ECO III	2011	SRM	●	●	●	●	○
Focus	1.6L	TDCi ECO III	2011	TRM	●	●	●	●	○
Focus	1.6L	Zetec	1999	CSM	●	●	●	●	○
Focus	1.6L	Zetec	1999	CTM	●	●	●	●	○
Focus	1.6L	Zetec	1999	PATS	●	●	●	○	○
Focus	1.6L	Zetec	1999 - 2002	ABS/TCS	●	●	●	●	0x00F1 0x0008 0x0012
Focus	1.6L	Zetec	1999 - 2002	ECS	●	●	●	●	○
Focus	1.6L	Zetec	1999 - 2002	HEC	●	●	●	●	○
Focus	1.6L	Zetec	1999 - 2002	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Focus	1.6L	Zetec	2002	EATC	●	●	●	●	○
Focus	1.6L	Zetec	2002	GEM	●	●	●	●	○
Focus	1.6L	Zetec	2002	HCM	●	●	●	●	○
Focus	1.6L	Zetec	2002	MC	●	●	●	●	○
Focus	1.6L	Zetec	2002	RCM	●	●	●	●	○
Focus	1.6L	Zetec Rocam	2002	ABS/TCS	●	●	●	●	0x0008 0x0012
Focus	1.6L	Zetec Rocam	2002	EATC	●	●	●	●	○
Focus	1.6L	Zetec Rocam	2002	ECS	●	●	●	●	○
Focus	1.6L	Zetec Rocam	2002	GEM	●	●	●	●	○
Focus	1.6L	Zetec Rocam	2002	HCM	●	●	●	●	○
Focus	1.6L	Zetec Rocam	2002	HEC	●	●	●	●	○
Focus	1.6L	Zetec Rocam	2002	MC	●	●	●	●	○
Focus	1.6L	Zetec Rocam	2002	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Focus	1.6L	Zetec Rocam	2002	RCM	●	●	●	●	○
Focus	1.6L	Zetec-SE	1999	CSM	●	●	●	●	○
Focus	1.6L	Zetec-SE	1999	CTM	●	●	●	●	○
Focus	1.6L	Zetec-SE	1999 - 2002	ABS/TCS	●	●	●	●	0x00F1 0x0008 0x0012

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	1.6L	Zetec-SE	1999 - 2002	ECS	●	●	●	●	○
Focus	1.6L	Zetec-SE	1999 - 2002	HEC	●	●	●	●	○
Focus	1.6L	Zetec-SE	1999 - 2002	MC	●	●	●	●	○
Focus	1.6L	Zetec-SE	1999 - 2002	PATS	●	●	●	○	○
Focus	1.6L	Zetec-SE	1999 - 2002	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009
Focus	1.6L	Zetec-SE	2002	EATC	●	●	●	●	○
Focus	1.6L	Zetec-SE	2002	GEM	●	●	●	●	○
Focus	1.6L	Zetec-SE	2002	HCM	●	●	●	●	○
Focus	1.6L	Zetec-SE	2002	RCM	●	●	●	●	○
Focus	1.8L	DURATEC-HE / I4	2003 - 2005	RL_DCU	●	●	●	●	0x0005
Focus	1.8L	DURATEC-HE / I4	2003 - 2005	RR_DCU	●	●	●	●	0x0005
Focus	1.8L	DURATEC-HE / I4	2003 - 2007	GDM	●	●	●	●	0x0100
Focus	1.8L	DURATEC-HE / I4	2003 - 2007	NAV	●	●	●	●	○
Focus	1.8L	DURATEC-HE / I4	2003 - 2007	TCM	●	●	●	●	○
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00E8 0x0005 0x0012 0x0054 0x00DD 0x00DE 0x00EB 0x00EC
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	ACM	●	●	●	●	0x0005
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	CDP	●	●	●	●	0x0005
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	D_DCU	●	●	●	●	0x0005
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	EATC	●	●	●	●	0x0005
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	EPS	●	●	●	●	0x0005
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	FFH	●	●	●	●	○
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	GEM	●	●	●	●	0x0005 0x00ED
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	HCM	●	●	●	●	0x0005
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	IC	●	●	●	●	0x0009 0x0005
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	PAM	●	●	●	●	○
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	P_DCU	●	●	●	●	0x0005
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	RCM	●	●	●	●	0x0005 0x00EA
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	RETM	●	●	●	●	0x0005
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	RKE	●	●	●	●	○
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	SRM	●	●	●	●	○
Focus	1.8L	DURATEC-HE / I4	2008	CMR	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001	CSM	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001	CTM	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2002	ABS/TCS	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2002	ECS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2002	HEC	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2002	ICU	○	○	●	○	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2002	MC	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2008	FFH	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2008	PCM	●	●	●	●	0x006F 0x0080 0x0081 0x0082 0x0083 0x00B4
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	EATC	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	GEM	●	●	●	●	0x00ED
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	HCM	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	RCM	●	●	●	●	0x00EA
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003	RL_DCU	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003	RR_DCU	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2007	GDM	●	●	●	●	0x0100
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2007	NAV	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00E8 0x00DD 0x00DE 0x00EB 0x00EC
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	ACM	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	CDP	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	D_DCU	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	EPS	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	IC	●	●	●	●	0x0009
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	PAM	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	P_DCU	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	RETM	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	RKE	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	SRM	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008	CMR	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008	FACM	●	●	●	●	0x006B
Focus	1.8L	Endura DI	1999	CSM	●	●	●	●	○
Focus	1.8L	Endura DI	1999	CTM	●	●	●	●	○
Focus	1.8L	Endura DI	1999 - 2002	ABS/TCS	●	●	●	●	0x00F1 0x0008 0x0012
Focus	1.8L	Endura DI	1999 - 2002	ECS	●	●	●	●	○
Focus	1.8L	Endura DI	1999 - 2002	FFH	●	●	●	●	○
Focus	1.8L	Endura DI	1999 - 2002	FIP	●	●	●	●	○
Focus	1.8L	Endura DI	1999 - 2002	HEC	●	●	●	●	○
Focus	1.8L	Endura DI	1999 - 2002	MC	●	●	●	●	○
Focus	1.8L	Endura DI	1999 - 2002	PATS	●	●	●	○	○
Focus	1.8L	Endura DI	1999 - 2002	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Focus	1.8L	Endura DI	2002	EATC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	1.8L	Endura DI	2002	GEM	●	●	●	●	○
Focus	1.8L	Endura DI	2002	HCM	●	●	●	●	○
Focus	1.8L	Endura DI	2002	RCM	●	●	●	●	○
Focus	1.8L	Zetec	1999	CSM	●	●	●	●	○
Focus	1.8L	Zetec	1999	CTM	●	●	●	●	○
Focus	1.8L	Zetec	1999	PATS	●	●	●	○	○
Focus	1.8L	Zetec	1999 - 2002	ABS/TCS	●	●	●	●	0x00F1
Focus	1.8L	Zetec	1999 - 2002	ECS	●	●	●	●	○
Focus	1.8L	Zetec	1999 - 2002	HEC	●	●	●	●	○
Focus	1.8L	Zetec	1999 - 2002	MC	●	●	●	●	○
Focus	1.8L	Zetec	1999 - 2002	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Focus	1.8L	Zetec	2002	AFCM	●	●	●	●	○
Focus	1.8L	Zetec	2002	EATC	●	●	●	●	○
Focus	1.8L	Zetec	2002	GEM	●	●	●	●	○
Focus	1.8L	Zetec	2002	HCM	●	●	●	●	○
Focus	1.8L	Zetec	2002	RCM	●	●	●	●	○
Focus	2.0L	DURATEC 16V	2005	ABS/TCS	●	●	●	●	0x0008 0x0012
Focus	2.0L	DURATEC 16V	2005	EATC	●	●	●	●	○
Focus	2.0L	DURATEC 16V	2005	GEM	●	●	●	●	○
Focus	2.0L	DURATEC 16V	2005	HCM	●	●	●	●	○
Focus	2.0L	DURATEC 16V	2005	IC	●	●	●	●	○
Focus	2.0L	DURATEC 16V	2005	MC	●	●	●	●	○
Focus	2.0L	DURATEC 16V	2005	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Focus	2.0L	DURATEC 16V	2005	RCM	●	●	●	●	○
Focus	2.0L	DURATEC-HE / I4	2003	RL_DCU	●	●	●	●	0x0005 0xF026
Focus	2.0L	DURATEC-HE / I4	2003	RR_DCU	●	●	●	●	0x0005 0xF026
Focus	2.0L	DURATEC-HE / I4	2003 - 2007	GDM	●	●	●	●	0x0100
Focus	2.0L	DURATEC-HE / I4	2003 - 2007	NAV	●	●	●	●	○
Focus	2.0L	DURATEC-HE / I4	2003 - 2007	RETM	●	●	●	●	○
Focus	2.0L	DURATEC-HE / I4	2003 - 2008	CDP	●	●	●	●	○
Focus	2.0L	DURATEC-HE / I4	2003 - 2008	D_DCU	●	●	●	●	0x0005 0xF026
Focus	2.0L	DURATEC-HE / I4	2003 - 2008	EATC	●	●	●	●	○
Focus	2.0L	DURATEC-HE / I4	2003 - 2008	EPS	●	●	●	●	○
Focus	2.0L	DURATEC-HE / I4	2003 - 2008	FFH	●	●	●	●	○
Focus	2.0L	DURATEC-HE / I4	2003 - 2008	GEM	●	●	●	●	0x000A 0x0005 0x00ED 0xF025 0xF026 0xF02A 0xF02B 0xF02C 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF035
Focus	2.0L	DURATEC-HE / I4	2003 - 2008	HCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	2.0L	DURATEC-HE / I4	2003 - 2008	PAM	●	●	●	●	○
Focus	2.0L	DURATEC-HE / I4	2003 - 2008	P_DCU	●	●	●	●	0x0005 0xF026
Focus	2.0L	DURATEC-HE / I4	2003 - 2008	RKE	●	●	●	●	○
Focus	2.0L	DURATEC-HE / I4	2003 - 2008	SRM	●	●	●	●	○
Focus	2.0L	DURATEC-HE / I4	2003 - 2011	ABS	●	●	●	●	0x0008 0x0012 0x0029 0x002A 0x002B 0x002C 0x0030 0x00DD 0x00DE 0x00E8 0x00EB 0x00EC 0x0005
Focus	2.0L	DURATEC-HE / I4	2003 - 2011	ACM	●	●	●	●	0x0005 0x0017 0x0018
Focus	2.0L	DURATEC-HE / I4	2003 - 2011	IC	●	●	●	●	0x0009 0x0005
Focus	2.0L	DURATEC-HE / I4	2003 - 2011	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x00C5
Focus	2.0L	DURATEC-HE / I4	2003 - 2011	RCM	●	●	●	●	0x000C 0x0005 0xF027 0xF031
Focus	2.0L	DURATEC-HE / I4	2006 - 2008	FTCM	●	●	●	●	○
Focus	2.0L	DURATEC-HE / I4	2008	SDARS	●	●	●	●	○
Focus	2.0L	DURATEC-HE / I4	2008 - 2011	APIM	●	●	●	○	0x0019 0x001C
Focus	2.0L	DURATEC-HE / I4	2008 - 2011	FCIM	●	●	●	●	○
Focus	2.0L	DURATEC-HE / I4	2008 - 2011	FDIM	●	●	●	●	0x0005
Focus	2.0L	DURATEC-HE / I4	2008 - 2011	GEM /	●	●	●	●	0x000A 0x000F 0x0042
Focus	2.0L	DURATEC-HE / I4	2008 - 2011	HVAC	●	●	●	●	○
Focus	2.0L	DURATEC-HE / I4	2008 - 2011	OCSM	●	●	●	○	0x000C 0x006D
Focus	2.0L	DURATEC-HE / I4	2010 - 2011	GPSM	●	●	●	○	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2005	RL_DCU	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2005	RR_DCU	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2007	GDM	●	●	●	●	0x0100
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2007	NAV	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2007	RETM	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	CDP	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	D_DCU	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	EATC	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	EPS	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	FACM	●	●	●	●	0x006B 0x0094 0x00A1
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	FFH	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	GEM	●	●	●	●	0x00ED
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	IC	●	●	●	●	0x0009
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	P_DCU	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	RKE	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	ABS	●	●	●	○	0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00E8 0x0012 0x0054 0x00DD 0x00DE 0x00EB 0x00EC

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	ACM	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	HCM	●	●	●	○	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	PAM	●	●	●	○	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	RCM	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	SRM	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2008	FTCM	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	AHCM	●	●	●	○	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	APIM	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	CCMii	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	●	●	●	○	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	DSP	●	●	●	○	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	FCDIM	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	FCIM	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	FDSM	●	●	●	○	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	●	●	●	○	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-A	●	●	●	○	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-B	●	●	●	○	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	●	●	●	○	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	PSCM	●	●	●	○	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	RFA	●	●	●	○	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	SASM	●	●	●	○	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-L	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-R	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	TCM	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	AHCM	●	●	●	○	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	BCMii	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	CCMii	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	FDSM	●	●	●	○	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPM-A	●	●	●	○	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	SOD-L	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	SOD-R	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	SRM	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	TRM	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	ACM	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	FCDIM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	IPC	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	IPM-B	●	●	●	○	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	PSCM	●	●	●	○	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	ABS	●	●	●	○	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	APIM	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	DDM	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	DSP	●	●	●	○	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	FCIM	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	HCM	●	●	●	○	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	HVAC	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	ICM#1	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	PAM	●	●	○	○	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	PDM	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	RCM	●	●	●	○	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	RFA	●	●	●	○	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	SASM	●	●	●	○	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	BCM#1	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	OCSM	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	GPSM	●	●	●	○	○
Focus	2.0L	FFV	2010	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002C 0x0030 0x0053 0x00DD 0x00DE 0x00EB 0x00EC
Focus	2.0L	FFV	2010	ACM	●	●	●	●	○
Focus	2.0L	FFV	2010	D_DCU	●	●	●	●	○
Focus	2.0L	FFV	2010	EATC	●	●	●	●	○
Focus	2.0L	FFV	2010	EPS	●	●	●	○	○
Focus	2.0L	FFV	2010	GEM	●	●	●	●	○
Focus	2.0L	FFV	2010	HCM	●	●	●	○	○
Focus	2.0L	FFV	2010	IC	●	●	●	●	0x0009
Focus	2.0L	FFV	2010	PAM	●	●	●	●	○
Focus	2.0L	FFV	2010	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x0096 0x0097 0x009A 0x00AB
Focus	2.0L	FFV	2010	P_DCU	●	●	●	●	○
Focus	2.0L	FFV	2010	RCM	●	●	●	●	○
Focus	2.0L	FFV	2010	RKE	●	●	●	●	○
Focus	2.0L	FFV	2010	SRM	●	●	●	●	○
Focus	2.0L	FFV	2010	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
Focus	2.0L	FFV	2010	TCM	●	●	●	●	0x0070 0x00C5

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	2.0L	Gasoline Direct injection	2011	ABS	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	AHCM	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	APIM	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	CCMii	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	DDM	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	DSP	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	FCDIM	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	FCIM	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	FDSM	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	HCM	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	HVAC	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	IPM-A	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	IPM-B	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	PAM	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Focus	2.0L	Gasoline Direct injection	2011	PDM	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	PSCM	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	RCM	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	RFA	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	SASM	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	SOD-L	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	SOD-R	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	SRM	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	TCM	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	TRM	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	ACM	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	AHCM	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	BCMii	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	CCMii	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	FCDIM	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	FDSM	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	HCM	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	IPM-A	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Focus	2.0L	Gasoline Direct injection	2011	SOD-L	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	SOD-R	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	SRM	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	TRM	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011 - 2012	IPC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	2.0L	Gasoline_Direct_injection	2011 - 2012	IPM-B	●	●	●	○	○
Focus	2.0L	Gasoline_Direct_injection	2011 - 2012	PSCM	●	●	●	○	○
Focus	2.0L	Gasoline_Direct_injection	2011 - 2012	TCM	●	●	●	●	○
Focus	2.0L	Gasoline_Direct_injection	2011 - 2014	ABS	●	●	●	○	○
Focus	2.0L	Gasoline_Direct_injection	2011 - 2014	APIM	●	●	●	●	○
Focus	2.0L	Gasoline_Direct_injection	2011 - 2014	DDM	●	●	●	○	○
Focus	2.0L	Gasoline_Direct_injection	2011 - 2014	DSP	●	●	●	○	○
Focus	2.0L	Gasoline_Direct_injection	2011 - 2014	FCIM	●	●	●	●	○
Focus	2.0L	Gasoline_Direct_injection	2011 - 2014	HVAC	●	●	●	○	○
Focus	2.0L	Gasoline_Direct_injection	2011 - 2014	PAM	●	●	●	○	○
Focus	2.0L	Gasoline_Direct_injection	2011 - 2014	PDM	●	●	●	○	○
Focus	2.0L	Gasoline_Direct_injection	2011 - 2014	RCM	●	●	●	●	○
Focus	2.0L	Gasoline_Direct_injection	2011 - 2014	RFA	●	●	●	○	○
Focus	2.0L	Gasoline_Direct_injection	2011 - 2014	SASM	●	●	●	○	○
Focus	2.0L	Gasoline_Direct_injection	2012 - 2014	GPSM	●	●	●	○	○
Focus	2.0L	SPI	2000	CSM	●	●	●	●	○
Focus	2.0L	SPI	2000	CTM	●	●	●	●	0x000A
Focus	2.0L	SPI	2000 - 2002	ECS	●	●	●	●	○
Focus	2.0L	SPI	2000 - 2004	ABS/TCS	●	●	●	●	0x0008 0x0012
Focus	2.0L	SPI	2000 - 2004	HEC	●	●	●	●	○
Focus	2.0L	SPI	2000 - 2004	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Focus	2.0L	SPI	2002	EATC	●	●	●	●	○
Focus	2.0L	SPI	2002	HCM	●	●	●	●	○
Focus	2.0L	SPI	2002	MC	●	●	●	●	○
Focus	2.0L	SPI	2002 - 2004	GEM	●	●	●	●	0x000A
Focus	2.0L	SPI	2002 - 2004	RCM	●	●	●	●	○
Focus	2.0L	ZETEC ST	2002	EATC	●	●	●	●	○
Focus	2.0L	ZETEC ST	2002	ECS	●	●	●	●	○
Focus	2.0L	ZETEC ST	2002	HCM	●	●	●	●	○
Focus	2.0L	ZETEC ST	2002	MC	●	●	●	●	○
Focus	2.0L	ZETEC ST	2002 - 2004	ABS/TCS	●	●	●	●	0x0008 0x0012
Focus	2.0L	ZETEC ST	2002 - 2004	GEM	●	●	●	●	0x000A
Focus	2.0L	ZETEC ST	2002 - 2004	HEC	●	●	●	●	○
Focus	2.0L	ZETEC ST	2002 - 2004	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Focus	2.0L	ZETEC ST	2002 - 2004	RCM	●	●	●	●	○
Focus	2.0L	Zetec	1999	PATS	●	●	●	○	○
Focus	2.0L	Zetec	1999 - 2000	CSM	●	●	●	●	○
Focus	2.0L	Zetec	1999 - 2000	CTM	●	●	●	●	0x000A

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	2.0L	Zetec	1999 - 2002	ECS	●	●	●	●	○
Focus	2.0L	Zetec	1999 - 2002	MC	●	●	●	●	○
Focus	2.0L	Zetec	1999 - 2004	ABS/TCS	●	●	●	●	0x00F1 0x0008 0x0012
Focus	2.0L	Zetec	1999 - 2004	HEC	●	●	●	●	○
Focus	2.0L	Zetec	1999 - 2004	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Focus	2.0L	Zetec	2002	EATC	●	●	●	●	○
Focus	2.0L	Zetec	2002	HCM	●	●	●	●	○
Focus	2.0L	Zetec	2002 - 2004	GEM	●	●	●	●	0x000A
Focus	2.0L	Zetec	2002 - 2004	RCM	●	●	●	●	○
Focus	2.3L	DURATEC-HE / I4	2003 - 2004	ABS/TCS	●	●	●	●	0x0008 0x0012
Focus	2.3L	DURATEC-HE / I4	2003 - 2007	GEM	●	●	●	●	0x000A
Focus	2.3L	DURATEC-HE / I4	2003 - 2007	IC	●	●	●	●	○
Focus	2.3L	DURATEC-HE / I4	2003 - 2007	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Focus	2.3L	DURATEC-HE / I4	2003 - 2007	RCM	●	●	●	●	0x000C
Focus	2.3L	DURATEC-HE / I4	2004	HEC	●	●	●	●	○
Focus	2.3L	DURATEC-HE / I4	2005 - 2007	ABS	●	●	●	●	0x0008 0x0012
Focus	2.5L	Duratec RS	2008	ABS	●	●	●	●	○
Focus	2.5L	Duratec RS	2008	ACM	●	●	●	●	○
Focus	2.5L	Duratec RS	2008	CDP	●	●	●	●	○
Focus	2.5L	Duratec RS	2008	CMR	●	●	●	●	○
Focus	2.5L	Duratec RS	2008	D_DCU	●	●	●	●	○
Focus	2.5L	Duratec RS	2008	EATC	●	●	●	●	○
Focus	2.5L	Duratec RS	2008	EPS	●	●	●	○	○
Focus	2.5L	Duratec RS	2008	FFH	●	●	●	●	○
Focus	2.5L	Duratec RS	2008	GEM	●	●	●	●	○
Focus	2.5L	Duratec RS	2008	HCM	●	●	●	○	○
Focus	2.5L	Duratec RS	2008	IC	●	●	●	●	○
Focus	2.5L	Duratec RS	2008	MC	●	●	●	●	○
Focus	2.5L	Duratec RS	2008	PAM	●	●	●	●	○
Focus	2.5L	Duratec RS	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Focus	2.5L	Duratec RS	2008	P_DCU	●	●	●	●	○
Focus	2.5L	Duratec RS	2008	RCM	●	●	●	●	○
Focus	2.5L	Duratec RS	2008	RETM	●	●	●	●	○
Focus	2.5L	Duratec RS	2008	RKE	●	●	●	●	○
Focus	2.5L	Duratec RS	2008	SRM	●	●	●	●	○
Focus	2.5L	I5	2003	RL_DCU	●	●	●	●	○
Focus	2.5L	I5	2003	RR_DCU	●	●	●	●	○
Focus	2.5L	I5	2003 - 2007	GDM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	2.5L	I5	2003 - 2007	NAV	●	●	●	●	○
Focus	2.5L	I5	2003 - 2008	ABS	●	●	●	●	0x0029 0x002A 0x002C 0x00DD 0x00DE 0x0008 0x0030 0x00E8 0x00EB
Focus	2.5L	I5	2003 - 2008	ACM	●	●	●	●	0x011A
Focus	2.5L	I5	2003 - 2008	CDP	●	●	●	●	○
Focus	2.5L	I5	2003 - 2008	D_DCU	●	●	●	●	○
Focus	2.5L	I5	2003 - 2008	EATC	●	●	●	●	○
Focus	2.5L	I5	2003 - 2008	EPS	●	●	●	○	○
Focus	2.5L	I5	2003 - 2008	FFH	●	●	●	●	○
Focus	2.5L	I5	2003 - 2008	GEM	●	●	●	●	0x00ED
Focus	2.5L	I5	2003 - 2008	HCM	●	●	●	○	○
Focus	2.5L	I5	2003 - 2008	IC	●	●	●	●	0x0009
Focus	2.5L	I5	2003 - 2008	MC	●	●	●	●	○
Focus	2.5L	I5	2003 - 2008	PAM	●	●	●	●	○
Focus	2.5L	I5	2003 - 2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Focus	2.5L	I5	2003 - 2008	P_DCU	●	●	●	●	○
Focus	2.5L	I5	2003 - 2008	RCM	●	●	●	●	0x00EA
Focus	2.5L	I5	2003 - 2008	RETM	●	●	●	●	○
Focus	2.5L	I5	2003 - 2008	RKE	●	●	●	●	○
Focus	2.5L	I5	2003 - 2008	SRM	●	●	●	●	○
Focus	2.5L	I5	2008	CMR	●	●	●	●	○
Focus	23kWh	Battery_Electric_Vehicle	2012	ACCM#2	●	●	●	○	○
Focus	23kWh	Battery_Electric_Vehicle	2012	BCCM	●	●	●	○	○
Focus	23kWh	Battery_Electric_Vehicle	2012	BCM#1	●	●	●	●	○
Focus	23kWh	Battery_Electric_Vehicle	2012	IPM-B	●	●	●	○	○
Focus	23kWh	Battery_Electric_Vehicle	2012	OCSM	●	●	●	●	○
Focus	23kWh	Battery_Electric_Vehicle	2012	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083
Focus	23kWh	Battery_Electric_Vehicle	2012	PSCM	●	●	●	●	○
Focus	23kWh	Battery_Electric_Vehicle	2012 - 2013	ACM	●	●	●	○	○
Focus	23kWh	Battery_Electric_Vehicle	2012 - 2013	FCDIM	●	●	●	●	○
Focus	23kWh	Battery_Electric_Vehicle	2012 - 2013	IPC	●	●	●	●	○
Focus	23kWh	Battery_Electric_Vehicle	2012 - 2013	TCM	●	●	●	○	○
Focus	23kWh	Battery_Electric_Vehicle	2012 - 2014	ABS	●	●	●	○	0x0012
Focus	23kWh	Battery_Electric_Vehicle	2012 - 2014	APIM	●	●	●	○	○
Focus	23kWh	Battery_Electric_Vehicle	2012 - 2014	BECM	●	●	●	●	○
Focus	23kWh	Battery_Electric_Vehicle	2012 - 2014	DCDC	●	●	●	●	○
Focus	23kWh	Battery_Electric_Vehicle	2012 - 2014	DDM	●	●	●	●	○
Focus	23kWh	Battery_Electric_Vehicle	2012 - 2014	DSP	●	●	●	○	○
Focus	23kWh	Battery_Electric_Vehicle	2012 - 2014	FCIM	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	23kWh	Battery_Electric_Vehicle	2012 - 2014	GFM	●	●	●	○	○
Focus	23kWh	Battery_Electric_Vehicle	2012 - 2014	GPSM	●	●	●	○	○
Focus	23kWh	Battery_Electric_Vehicle	2012 - 2014	GWM	●	●	●	○	○
Focus	23kWh	Battery_Electric_Vehicle	2012 - 2014	HVAC	●	●	●	●	○
Focus	23kWh	Battery_Electric_Vehicle	2012 - 2014	PAM	●	●	○	○	○
Focus	23kWh	Battery_Electric_Vehicle	2012 - 2014	PDM	●	●	●	●	○
Focus	23kWh	Battery_Electric_Vehicle	2012 - 2014	RCM	●	●	●	○	○
Focus	23kWh	Battery_Electric_Vehicle	2012 - 2014	RFA	●	●	●	○	○
Focus	23kWh	Battery_Electric_Vehicle	2012 - 2014	SASM	●	●	●	○	○
Focus	23kWh	Battery_Electric_Vehicle	2012 - 2014	TCU#1	●	●	●	○	○
Focus	23kWh	Battery_Electric_Vehicle	2013	BCMii	●	●	●	●	○
Focus	23kWh	Battery_Electric_Vehicle	2013 - 2014	SOBDM	●	●	●	●	○
Focus	23kWh	Battery_Electric_Vehicle	2014	HCM	●	●	●	●	○
Focus	Other	Other	2013	ABS	●	●	●	○	○
Focus	Other	Other	2013	ACM	●	●	●	●	○
Focus	Other	Other	2013	APIM	●	●	●	●	○
Focus	Other	Other	2013	BCM#1	●	●	●	●	0x00D5 0x0101
Focus	Other	Other	2013	DDM	●	●	●	●	○
Focus	Other	Other	2013	DSP	●	●	●	○	○
Focus	Other	Other	2013	FCDIM	●	●	●	●	○
Focus	Other	Other	2013	FCIM	●	●	●	●	○
Focus	Other	Other	2013	GPSM	●	●	●	○	○
Focus	Other	Other	2013	HVAC	●	●	●	●	○
Focus	Other	Other	2013	IPC	●	●	●	●	○
Focus	Other	Other	2013	IPM-B	●	●	●	○	○
Focus	Other	Other	2013	OCSM	●	●	●	●	○
Focus	Other	Other	2013	PAM	●	●	○	○	○
Focus	Other	Other	2013	PDM	●	●	●	●	○
Focus	Other	Other	2013	PSCM	●	●	●	○	0x00CB 0x00CC
Focus	Other	Other	2013	RCM	●	●	●	○	○
Focus	Other	Other	2013	RFA	●	●	●	○	○
Focus	Other	Other	2013	SASM	●	●	●	○	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	ABS	●	●	●	○	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	AHCM	●	●	●	○	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	DDM	●	●	●	○	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	FCDIM	●	●	●	●	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	FDSM	●	●	●	○	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	HCM	●	●	●	○	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	HVAC	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPC	●	●	●	●	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPM-A	●	●	●	○	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPM-B	●	●	●	○	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	PAM	●	●	●	○	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	PDM	●	●	●	○	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	PSCM	●	●	●	○	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	RCM	●	●	●	●	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	RFA	●	●	●	○	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	SASM	●	●	●	○	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	SOD-L	●	●	●	○	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	SOD-R	●	●	●	○	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	SRM	●	●	●	●	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	TRM	●	●	●	○	○
Focus C-MAX	1.4L	DURATEC 16V	2002	RL_DCU	●	●	●	●	○
Focus C-MAX	1.4L	DURATEC 16V	2002	RR_DCU	●	●	●	●	○
Focus C-MAX	1.4L	DURATEC 16V	2002 - 2007	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002C 0x00DD 0x00DE 0x002B 0x0030 0x00E8
Focus C-MAX	1.4L	DURATEC 16V	2002 - 2007	ACM	●	●	●	●	0x011A
Focus C-MAX	1.4L	DURATEC 16V	2002 - 2007	CDP	●	●	●	●	○
Focus C-MAX	1.4L	DURATEC 16V	2002 - 2007	D_DCU	●	●	●	●	○
Focus C-MAX	1.4L	DURATEC 16V	2002 - 2007	EATC	●	●	●	●	○
Focus C-MAX	1.4L	DURATEC 16V	2002 - 2007	EPB	●	●	●	●	0x001F
Focus C-MAX	1.4L	DURATEC 16V	2002 - 2007	FFH	●	●	●	●	○
Focus C-MAX	1.4L	DURATEC 16V	2002 - 2007	GDM	●	●	●	●	0x0100
Focus C-MAX	1.4L	DURATEC 16V	2002 - 2007	GEM	●	●	●	●	0x00ED
Focus C-MAX	1.4L	DURATEC 16V	2002 - 2007	HCM	●	●	●	●	○
Focus C-MAX	1.4L	DURATEC 16V	2002 - 2007	IC	●	●	●	●	0x0009
Focus C-MAX	1.4L	DURATEC 16V	2002 - 2007	NAV	●	●	●	●	○
Focus C-MAX	1.4L	DURATEC 16V	2002 - 2007	PAM	●	●	●	●	○
Focus C-MAX	1.4L	DURATEC 16V	2002 - 2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0025
Focus C-MAX	1.4L	DURATEC 16V	2002 - 2007	P_DCU	●	●	●	●	○
Focus C-MAX	1.4L	DURATEC 16V	2002 - 2007	RCM	●	●	●	●	○
Focus C-MAX	1.4L	DURATEC 16V	2002 - 2007	RETM	●	●	●	●	○
Focus C-MAX	1.4L	DURATEC 16V	2002 - 2007	RKE	●	●	●	●	○
Focus C-MAX	1.4L	DURATEC 16V	2002 - 2007	SRM	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC 16V	2002	RL_DCU	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC 16V	2002	RR_DCU	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus C-MAX	1.6L	DURATEC 16V	2002 - 2007	EPB	●	●	●	●	0x001F
Focus C-MAX	1.6L	DURATEC 16V	2002 - 2007	GDM	●	●	●	●	0x0100
Focus C-MAX	1.6L	DURATEC 16V	2002 - 2007	NAV	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC 16V	2002 - 2008	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002C 0x00DD 0x00DE 0x002B 0x0030 0x00E8 0x00EB 0x00EC
Focus C-MAX	1.6L	DURATEC 16V	2002 - 2008	ACM	●	●	●	●	0x011A
Focus C-MAX	1.6L	DURATEC 16V	2002 - 2008	CDP	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC 16V	2002 - 2008	D_DCU	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC 16V	2002 - 2008	EATC	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC 16V	2002 - 2008	FFH	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC 16V	2002 - 2008	GEM	●	●	●	●	0x00ED
Focus C-MAX	1.6L	DURATEC 16V	2002 - 2008	HCM	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC 16V	2002 - 2008	IC	●	●	●	●	0x0009
Focus C-MAX	1.6L	DURATEC 16V	2002 - 2008	PAM	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC 16V	2002 - 2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0025
Focus C-MAX	1.6L	DURATEC 16V	2002 - 2008	P_DCU	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC 16V	2002 - 2008	RCM	●	●	●	●	0x00EA
Focus C-MAX	1.6L	DURATEC 16V	2002 - 2008	RETM	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC 16V	2002 - 2008	RKE	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC 16V	2002 - 2008	SRM	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC 16V	2008	CMR	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC 16V	2008	EPS	●	●	●	○	○
Focus C-MAX	1.6L	DURATEC VCT	2002	RL_DCU	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2002	RR_DCU	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2007	EPB	●	●	●	●	0x001F
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2007	GDM	●	●	●	●	0x0100
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2007	NAV	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2008	CDP	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2008	D_DCU	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2008	EATC	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2008	FFH	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2008	GEM	●	●	●	●	0x00ED
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2008	IC	●	●	●	●	0x0009
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2008	P_DCU	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2008	RETM	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2008	RKE	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2011	ABS	●	●	●	○	0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00E8 0x00DD 0x00DE 0x00EB 0x00EC

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2011	ACM	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2011	HCM	●	●	●	○	○
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2011	PAM	●	●	●	○	○
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2011	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2011	RCM	●	●	●	●	0x00EA
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2011	SRM	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2008	CMR	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2008	EPS	●	●	●	○	○
Focus C-MAX	1.6L	DURATEC VCT	2011	AHCM	●	●	●	○	○
Focus C-MAX	1.6L	DURATEC VCT	2011	BCMii	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2011	DDM	●	●	●	○	○
Focus C-MAX	1.6L	DURATEC VCT	2011	FCDIM	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2011	HVAC	●	●	●	○	○
Focus C-MAX	1.6L	DURATEC VCT	2011	IPC	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2011	IPM-A	●	●	●	○	○
Focus C-MAX	1.6L	DURATEC VCT	2011	IPM-B	●	●	●	○	○
Focus C-MAX	1.6L	DURATEC VCT	2011	PDM	●	●	●	○	○
Focus C-MAX	1.6L	DURATEC VCT	2011	PSCM	●	●	●	○	○
Focus C-MAX	1.6L	DURATEC VCT	2011	RFA	●	●	●	○	○
Focus C-MAX	1.6L	DURATEC VCT	2011	RGTM	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2011	SASM	●	●	●	○	○
Focus C-MAX	1.6L	DURATEC VCT	2011	SOD-L	●	●	●	○	○
Focus C-MAX	1.6L	DURATEC VCT	2011	SOD-R	●	●	●	○	○
Focus C-MAX	1.6L	DURATEC VCT	2011	TRM	●	●	●	○	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002	RL_DCU	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002	RR_DCU	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	EPB	●	●	●	●	0x001F
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	GDM	●	●	●	●	0x0100
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	NAV	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	TCM	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	CDP	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	D_DCU	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	EATC	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	EPS	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	FACM	●	●	●	●	0x006B 0x0094 0x00A1
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	FFH	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	GEM	●	●	●	●	0x00ED
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	IC	●	●	●	●	0x0009
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	P_DCU	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	RETM	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	RKE	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00E8 0x00DD 0x00DE 0x00EB 0x00EC
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	ACM	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	HCM	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	PAM	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0096 0x0097 0x0098 0x0099 0x009A
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	RCM	●	●	●	●	0x00EA
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	SRM	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	CMR	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	AHCM	●	●	●	○	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	●	●	●	○	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	FCDIM	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	●	●	●	○	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-A	●	●	●	○	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-B	●	●	●	○	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	●	●	●	○	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	PSCM	●	●	●	○	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	RFA	●	●	●	○	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	RGTM	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	SASM	●	●	●	○	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-L	●	●	●	○	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-R	●	●	●	○	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	●	●	●	○	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	ABS	●	●	●	○	0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	ACM	●	●	●	●	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	AHCM	●	●	●	○	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	BCMii	●	●	●	●	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	DDM	●	●	●	○	0x00FB
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	FCDIM	●	●	●	●	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	HCM	●	●	●	○	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	HVAC	●	●	●	○	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPC	●	●	●	●	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPM-A	●	●	●	○	0x00E5

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPM-B	●	●	●	○	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PAM	●	●	●	○	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083 0x009A 0x00BC 0x00C3 0x0114
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PDM	●	●	●	○	0x00FC
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PSCM	●	●	●	○	0x00DC 0x00DF 0x00E0 0x00E1
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	RCM	●	●	●	●	0x0102
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	RFA	●	●	●	○	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	RGTM	●	●	●	●	0x00FD
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SASM	●	●	●	○	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SOD-L	●	●	●	○	0xF026
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SOD-R	●	●	●	○	0xF026
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SRM	●	●	●	●	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	TRM	●	●	●	○	○
Focus C-MAX	1.8L	DURATEC-HE / I4	2002	RL_DCU	●	●	●	●	○
Focus C-MAX	1.8L	DURATEC-HE / I4	2002	RR_DCU	●	●	●	●	○
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2007	EPB	●	●	●	●	0x001F
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2007	GDM	●	●	●	●	0x0100
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2007	NAV	●	●	●	●	○
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2007	TCM	●	●	●	●	○
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00E8 0x00DD 0x00DE 0x00EB 0x00EC
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	ACM	●	●	●	●	0x0005
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	CDP	●	●	●	●	0x0005
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	D_DCU	●	●	●	●	○
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	EATC	●	●	●	●	0x0005
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	EPS	●	●	●	●	0x0005
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	FFH	●	●	●	●	○
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	GEM	●	●	●	●	0x0005 0x00ED
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	HCM	●	●	●	●	○
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	IC	●	●	●	●	0x0009
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	PAM	●	●	●	●	○
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	P_DCU	●	●	●	●	○
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	RCM	●	●	●	●	0x0005 0x00EA
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	RETM	●	●	●	●	0x0005
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	RKE	●	●	●	●	○
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	SRM	●	●	●	●	○
Focus C-MAX	1.8L	DURATEC-HE / I4	2008	CMR	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002	RL_DCU	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002	RR_DCU	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	EPB	●	●	●	●	0x001F
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	GDM	●	●	●	●	0x0100
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	NAV	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00E8 0x00DD 0x00DE 0x00EB 0x00EC
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	ACM	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	CDP	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	D_DCU	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	EATC	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	EPS	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	FFH	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	GEM	●	●	●	●	0x00ED
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	HCM	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	IC	●	●	●	●	0x0009
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	PAM	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	PCM	●	●	●	●	0x006F 0x0080 0x0081 0x0082 0x0083 0x00B4
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	P_DCU	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	RCM	●	●	●	●	0x00EA
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	RETM	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	RKE	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	SRM	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008	CMR	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008	FACM	●	●	●	●	0x006B
Focus C-MAX	2.0L	DURATEC-HE / I4	2002	RL_DCU	●	●	●	●	○
Focus C-MAX	2.0L	DURATEC-HE / I4	2002	RR_DCU	●	●	●	●	○
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2007	EPB	●	●	●	●	0x001F
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2007	GDM	●	●	●	●	0x0100
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2007	NAV	●	●	●	●	○
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00DD 0x00DE 0x00E8 0x00EB 0x00EC
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	ACM	●	●	●	●	○
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	CDP	●	●	●	●	○
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	D_DCU	●	●	●	●	○
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	EATC	●	●	●	●	○
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	EPS	●	●	●	●	○
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	FFH	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	GEM	●	●	●	●	0x0005 0x00ED 0xF025 0xF026 0xF02A 0xF02B 0xF02C 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF035
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	HCM	●	●	●	●	○
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	IC	●	●	●	●	0x0009
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	PAM	●	●	●	●	○
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	P_DCU	●	●	●	●	○
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	RCM	●	●	●	●	0x0005 0xF027 0xF031 0x00EA
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	RETM	●	●	●	●	○
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	RKE	●	●	●	●	○
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	SRM	●	●	●	●	○
Focus C-MAX	2.0L	DURATEC-HE / I4	2008	CMR	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002	RL_DCU	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002	RR_DCU	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	EPB	●	●	●	●	0x001F
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	GDM	●	●	●	●	0x0100
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	NAV	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	CDP	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	D_DCU	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	EATC	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	EPS	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	FACM	●	●	●	●	0x006B 0x0094 0x00A1
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	FFH	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	GEM	●	●	●	●	0x00ED
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	IC	●	●	●	●	0x0009
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	P_DCU	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	RETM	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	RKE	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	ABS	●	●	●	○	0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00E8 0x00DD 0x00DE 0x00EB 0x00EC
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	ACM	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	HCM	●	●	●	○	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	PAM	●	●	●	○	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x00AB
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	RCM	●	●	●	●	0x00EA

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	SRM	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	CMR	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008 - 2011	TCM	●	●	●	○	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	AHCM	●	●	●	○	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	●	●	●	○	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	FCDIM	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	●	●	●	○	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-A	●	●	●	○	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-B	●	●	●	○	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	●	●	●	○	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	PSCM	●	●	●	○	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	RFA	●	●	●	○	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	RGTM	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	SASM	●	●	●	○	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-L	●	●	●	○	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-R	●	●	●	○	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	●	●	●	○	○
Fusion	1.25L	DURATEC 16V	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fusion	1.25L	DURATEC 16V	2002 - 2006	GEM	●	●	●	●	○
Fusion	1.25L	DURATEC 16V	2002 - 2006	IC	●	●	●	●	○
Fusion	1.25L	DURATEC 16V	2002 - 2006	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fusion	1.25L	DURATEC 16V	2002 - 2006	RCM	●	●	○	○	○
Fusion	1.25L	DURATEC 16V	2006	ACM	●	●	●	●	○
Fusion	1.25L	DURATEC 16V	2006	EATC	●	●	●	●	○
Fusion	1.25L	DURATEC 16V	2006	SRM	●	●	●	●	○
Fusion	1.4L	DURATEC 16V	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fusion	1.4L	DURATEC 16V	2002 - 2006	GEM	●	●	●	●	○
Fusion	1.4L	DURATEC 16V	2002 - 2006	IC	●	●	●	●	○
Fusion	1.4L	DURATEC 16V	2002 - 2006	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fusion	1.4L	DURATEC 16V	2002 - 2006	RCM	●	●	○	○	○
Fusion	1.4L	DURATEC 16V	2002 - 2006	TCM	●	●	●	●	0x003F
Fusion	1.4L	DURATEC 16V	2006	ACM	●	●	●	●	○
Fusion	1.4L	DURATEC 16V	2006	EATC	●	●	●	●	○
Fusion	1.4L	DURATEC 16V	2006	SRM	●	●	●	●	○
Fusion	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fusion	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	GEM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fusion	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	IC	●	●	●	●	○
Fusion	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Fusion	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	RCM	●	●	○	○	○
Fusion	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	TCM	●	●	●	●	0x003F
Fusion	1.4L	Duratorq Turbo Diesel Common Rail Injection	2006	ACM	●	●	●	●	○
Fusion	1.4L	Duratorq Turbo Diesel Common Rail Injection	2006	EATC	●	●	●	●	○
Fusion	1.4L	Duratorq Turbo Diesel Common Rail Injection	2006	SRM	●	●	●	●	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	APIM	●	●	●	●	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	DACM-C	●	●	●	○	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	DSM	●	●	●	●	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	DSP	●	●	●	○	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	FCDIM	●	●	●	●	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	FCIM	●	●	●	○	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	HUD	●	●	●	○	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	RACM	●	●	○	○	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	RCM	●	●	○	○	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	RTM	●	●	○	○	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	SCCM	●	●	○	○	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	SCM-E	●	●	○	○	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	SOD-L	●	●	○	○	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	SOD-R	●	●	○	○	○
Fusion	1.6L	DURATEC 16V	2002	TCM	●	●	●	●	○
Fusion	1.6L	DURATEC 16V	2002 - 2006	ABS/TCS	●	●	●	●	0x0008
Fusion	1.6L	DURATEC 16V	2002 - 2006	GEM	●	●	●	●	○
Fusion	1.6L	DURATEC 16V	2002 - 2006	IC	●	●	●	●	○
Fusion	1.6L	DURATEC 16V	2002 - 2006	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fusion	1.6L	DURATEC 16V	2002 - 2006	RCM	●	●	○	○	○
Fusion	1.6L	DURATEC 16V	2006	ACM	●	●	●	●	○
Fusion	1.6L	DURATEC 16V	2006	EATC	●	●	●	●	○
Fusion	1.6L	DURATEC 16V	2006	SRM	●	●	●	●	○
Fusion	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fusion	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	EPS	●	●	●	●	○
Fusion	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	GEM	●	●	●	●	○
Fusion	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	IC	●	●	●	●	○
Fusion	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0092 0x0096 0x0097 0x0099 0x009A 0x00AD 0x00AE
Fusion	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	RCM	●	●	○	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fusion	1.6L	Duratorq Turbo Diesel Common Rail Injection	2006	ACM	●	●	●	●	○
Fusion	1.6L	Duratorq Turbo Diesel Common Rail Injection	2006	EATC	●	●	●	●	○
Fusion	1.6L	Duratorq Turbo Diesel Common Rail Injection	2006	SRM	●	●	●	●	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	ABS	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	ACM	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	BCM#1	●	●	●	●	0x000F 0x00D4 0x00D5 0x00FE
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	C-CM	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	DDM	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	GFM	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	GPSM	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	GWM	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	HCM	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	HSWM	●	●	●	●	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPC	●	●	●	●	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPM-A	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	OCSM	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	PAM	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	PCM	●	●	●	●	0x0023 0x0025 0x0067 0x0080 0x0081 0x0082 0x0083 0x0108
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	PDM	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	PSCM	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	RGTM	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	SCM-G	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	SCM-H	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	VDM	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	APIM	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DACM-C	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DSM	●	●	●	●	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DSP	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	FCDIM	●	●	●	●	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	FCIM	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	HUD	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RACM	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RCM	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RTM	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SCCM	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SCM-E	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SOD-L	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SOD-R	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	ABS	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	ACM	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	BCM#1	●	●	●	●	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	C-CM	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	DDM	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	GFM	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	GPSM	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	GWM	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	HCM	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	HSWM	●	●	●	●	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPC	●	●	●	●	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPM-A	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	OCSM	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	PAM	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	PDM	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	PSCM	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	RGTM	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	SCM-G	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	SCM-H	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	VDM	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	APIM	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DACM-C	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DSM	●	●	●	●	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DSP	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	FCDIM	●	●	●	●	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	FCIM	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	HUD	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RACM	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RCM	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RTM	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SCCM	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SCM-E	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SOD-L	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SOD-R	●	●	○	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013	C-CM	●	●	●	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013	GWM	●	●	●	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	ACCM#2	●	●	●	●	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	APIM	●	●	●	●	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	DACM-C	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	DSM	●	●	●	●	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	DSP	●	●	●	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	FCDIM	●	●	●	●	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	HUD	●	●	●	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	RACM	●	●	○	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	RCM	●	●	○	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	SCCM	●	●	○	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	SCM-E	●	●	○	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	SOD-L	●	●	○	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	SOD-R	●	●	○	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2014	FCIM	●	●	●	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2014	RTM	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	ABS	●	●	●	○	0x0074
Fusion	2.0L	HEV / ATKINSON 4V	2013	ACCM#2	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	ACM	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	APIM	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	BCM#1	●	●	●	●	0x000F 0x00D4 0x00D5 0x00FE
Fusion	2.0L	HEV / ATKINSON 4V	2013	BECM	●	●	●	○	0x006E
Fusion	2.0L	HEV / ATKINSON 4V	2013	C-CM	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	DACM-C	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	DCDC	●	●	●	●	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	DDM	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	DSM	●	●	●	●	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	DSP	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	FCDIM	●	●	●	●	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	FCIM	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	GFM	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	GPSM	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	GWM	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	HCM	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	HSWM	●	●	●	●	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	HUD	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	IPC	●	●	●	●	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	IPM-A	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	OCSM	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	PAM	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x0108
Fusion	2.0L	HEV / ATKINSON 4V	2013	PDM	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	PSCM	●	●	○	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fusion	2.0L	HEV / ATKINSON 4V	2013	RACM	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	RCM	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	RGTM	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	RTM	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	SCCM	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	SCM-E	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	SCM-G	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	SCM-H	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	SOBDM-C	●	●	●	●	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	SOD-L	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	SOD-R	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	VDM	●	●	○	○	○
Fusion	2.0L	PHEV	2013	ABS	●	●	●	○	0x0074
Fusion	2.0L	PHEV	2013	ACM	●	●	●	○	○
Fusion	2.0L	PHEV	2013	BCM#1	●	●	●	●	0x000F 0x00D4 0x00D5 0x00FE 0x0112
Fusion	2.0L	PHEV	2013	C-CM	●	●	●	○	○
Fusion	2.0L	PHEV	2013	DDM	●	●	●	○	○
Fusion	2.0L	PHEV	2013	GPSM	●	●	●	○	○
Fusion	2.0L	PHEV	2013	GWM	●	●	●	○	○
Fusion	2.0L	PHEV	2013	HCM	●	●	●	○	○
Fusion	2.0L	PHEV	2013	HSWM	●	●	●	●	○
Fusion	2.0L	PHEV	2013	IPC	●	●	●	●	○
Fusion	2.0L	PHEV	2013	IPM-A	●	●	●	○	○
Fusion	2.0L	PHEV	2013	OCSM	●	●	●	○	○
Fusion	2.0L	PHEV	2013	PAM	●	●	○	○	○
Fusion	2.0L	PHEV	2013	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0108
Fusion	2.0L	PHEV	2013	PDM	●	●	○	○	○
Fusion	2.0L	PHEV	2013	PSCM	●	●	○	○	○
Fusion	2.0L	PHEV	2013	RGTM	●	●	○	○	○
Fusion	2.0L	PHEV	2013	SCM-G	●	●	○	○	○
Fusion	2.0L	PHEV	2013	SCM-H	●	●	○	○	○
Fusion	2.0L	PHEV	2013	SOBDM-C	●	●	○	○	○
Fusion	2.0L	PHEV	2013	VDM	●	●	○	○	○
Fusion	2.0L	PHEV	2013 - 2014	APIM	●	●	●	○	○
Fusion	2.0L	PHEV	2013 - 2014	DACM-C	●	●	●	○	○
Fusion	2.0L	PHEV	2013 - 2014	DSM	●	●	●	●	○
Fusion	2.0L	PHEV	2013 - 2014	DSP	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fusion	2.0L	PHEV	2013 - 2014	FCDIM	●	●	●	●	○
Fusion	2.0L	PHEV	2013 - 2014	FCIM	●	●	●	○	○
Fusion	2.0L	PHEV	2013 - 2014	GFM	●	●	●	○	○
Fusion	2.0L	PHEV	2013 - 2014	HUD	●	●	●	○	○
Fusion	2.0L	PHEV	2013 - 2014	RACM	●	●	○	○	○
Fusion	2.0L	PHEV	2013 - 2014	RCM	●	●	○	○	○
Fusion	2.0L	PHEV	2013 - 2014	RTM	●	●	○	○	○
Fusion	2.0L	PHEV	2013 - 2014	SCCM	●	●	○	○	○
Fusion	2.0L	PHEV	2013 - 2014	SCM-E	●	●	○	○	○
Fusion	2.0L	PHEV	2013 - 2014	SOD-L	●	●	○	○	○
Fusion	2.0L	PHEV	2013 - 2014	SOD-R	●	●	○	○	○
Fusion	2.0L	PHEV	2014	ACCM#2	●	●	●	●	○
Fusion	2.0L	PHEV	2014	BECM	●	●	●	●	○
Fusion	2.0L	PHEV	2014	SOBDM	●	●	●	●	○
Fusion	2.3L	DURATEC-HE / I4	2006 - 2007	EATC	●	●	●	●	○
Fusion	2.3L	DURATEC-HE / I4	2006 - 2007	GEM	●	●	●	●	○
Fusion	2.3L	DURATEC-HE / I4	2006 - 2009	ABS	●	●	●	●	○
Fusion	2.3L	DURATEC-HE / I4	2006 - 2009	ACM	●	●	●	●	○
Fusion	2.3L	DURATEC-HE / I4	2006 - 2009	IC	●	●	●	●	0x0005 0x0009
Fusion	2.3L	DURATEC-HE / I4	2006 - 2009	OCSM	●	●	●	○	0x006D
Fusion	2.3L	DURATEC-HE / I4	2006 - 2009	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083
Fusion	2.3L	DURATEC-HE / I4	2006 - 2009	RCM	●	●	●	●	0x0005
Fusion	2.3L	DURATEC-HE / I4	2006 - 2009	TBM	●	●	●	●	○
Fusion	2.3L	DURATEC-HE / I4	2006 - 2009	TCM	●	●	●	●	○
Fusion	2.3L	DURATEC-HE / I4	2007 - 2009	4X4	●	●	●	●	○
Fusion	2.3L	DURATEC-HE / I4	2007 - 2009	SDARS	●	●	●	●	○
Fusion	2.3L	DURATEC-HE / I4	2008 - 2009	APIM	●	●	●	●	○
Fusion	2.3L	DURATEC-HE / I4	2008 - 2009	GEM /	●	●	●	●	0x0042
Fusion	2.3L	DURATEC-HE / I4	2008 - 2009	HVAC	●	●	●	●	○
Fusion	2.3L	DURATEC-HE / I4	2008 - 2009	PAM	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	4X4	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	ABS	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	ACM	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	APIM	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	DSP	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	FCIM	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	FDIM	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	GEM /	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	GPSM	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	HVAC	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	IPC	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	OCSM	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	PAM	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	PSCM	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	RCM	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	SOD-L	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	SOD-R	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	TBM	●	●	●	○	○
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	4X4	●	●	●	●	○
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	ABS	●	●	●	●	0x0074
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	ACCM#2	●	●	●	●	○
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	ACM	●	●	●	●	0x0005 0x0017 0x0018
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	APIM	●	●	●	●	0x0019 0x001C
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	BECM	●	●	●	●	0x006E
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	DCDC	●	●	●	●	○
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	DSP	●	●	●	●	0x0005
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	FCIM	●	●	●	●	○
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	FDIM	●	●	●	●	0x0005
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	GEM /	●	●	●	●	0x000A 0x000F 0x0042
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	GPSM	●	●	●	○	○
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	HVAC	●	●	●	●	○
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	IPC	●	●	●	●	○
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	OCSM	●	●	●	●	0x000C 0x0015
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	PAM	●	●	●	●	0x0005
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	PSCM	●	●	●	●	0x0005
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	RCM	●	●	●	●	0x0005
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	SOD-L	●	●	●	●	○
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	SOD-R	●	●	●	●	○
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	TBM	●	●	●	○	0x00D1 0x00D2 0x00D3
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	TCM	●	●	●	●	○
Fusion	2.5L	IVCT	2013	ABS	●	●	●	○	○
Fusion	2.5L	IVCT	2013	ACM	●	●	●	○	○
Fusion	2.5L	IVCT	2013	BCM#1	●	●	●	●	0x00D4 0x00D5 0x0112
Fusion	2.5L	IVCT	2013	C-CM	●	●	●	○	○
Fusion	2.5L	IVCT	2013	DDM	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fusion	2.5L	IVCT	2013	GFM	●	●	●	○	○
Fusion	2.5L	IVCT	2013	GPSM	●	●	●	○	○
Fusion	2.5L	IVCT	2013	GWM	●	●	●	○	○
Fusion	2.5L	IVCT	2013	HCM	●	●	●	○	○
Fusion	2.5L	IVCT	2013	HSWM	●	●	●	●	○
Fusion	2.5L	IVCT	2013	IPC	●	●	●	●	○
Fusion	2.5L	IVCT	2013	IPM-A	●	●	●	○	○
Fusion	2.5L	IVCT	2013	OCSM	●	●	●	○	○
Fusion	2.5L	IVCT	2013	PAM	●	●	○	○	○
Fusion	2.5L	IVCT	2013	PDM	●	●	○	○	○
Fusion	2.5L	IVCT	2013	PSCM	●	●	○	○	○
Fusion	2.5L	IVCT	2013	RGTM	●	●	○	○	○
Fusion	2.5L	IVCT	2013	SCM-G	●	●	○	○	○
Fusion	2.5L	IVCT	2013	SCM-H	●	●	○	○	○
Fusion	2.5L	IVCT	2013	VDM	●	●	○	○	○
Fusion	2.5L	IVCT	2013 - 2014	APIM	●	●	●	○	○
Fusion	2.5L	IVCT	2013 - 2014	DACM-C	●	●	●	○	○
Fusion	2.5L	IVCT	2013 - 2014	DSM	●	●	●	●	○
Fusion	2.5L	IVCT	2013 - 2014	DSP	●	●	●	○	○
Fusion	2.5L	IVCT	2013 - 2014	FCDIM	●	●	●	●	○
Fusion	2.5L	IVCT	2013 - 2014	FCIM	●	●	●	○	○
Fusion	2.5L	IVCT	2013 - 2014	HUD	●	●	●	○	○
Fusion	2.5L	IVCT	2013 - 2014	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0108
Fusion	2.5L	IVCT	2013 - 2014	RACM	●	●	○	○	○
Fusion	2.5L	IVCT	2013 - 2014	RCM	●	●	○	○	○
Fusion	2.5L	IVCT	2013 - 2014	RTM	●	●	○	○	○
Fusion	2.5L	IVCT	2013 - 2014	SCCM	●	●	○	○	○
Fusion	2.5L	IVCT	2013 - 2014	SCM-E	●	●	○	○	○
Fusion	2.5L	IVCT	2013 - 2014	SOD-L	●	●	○	○	○
Fusion	2.5L	IVCT	2013 - 2014	SOD-R	●	●	○	○	○
Fusion	3.0L	4V	2006 - 2007	EATC	●	●	●	●	○
Fusion	3.0L	4V	2006 - 2007	GEM	●	●	●	●	○
Fusion	3.0L	4V	2006 - 2009	IC	●	●	●	●	0x0005
Fusion	3.0L	4V	2006 - 2009	TCM	●	●	●	●	○
Fusion	3.0L	4V	2006 - 2012	ABS	●	●	●	●	○
Fusion	3.0L	4V	2006 - 2012	ACM	●	●	●	●	○
Fusion	3.0L	4V	2006 - 2012	OCSM	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fusion	3.0L	4V	2006 - 2012	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083
Fusion	3.0L	4V	2006 - 2012	RCM	●	●	●	●	0x0005
Fusion	3.0L	4V	2006 - 2012	TBM	●	●	●	●	○
Fusion	3.0L	4V	2007 - 2009	SDARS	●	●	●	●	0x0005
Fusion	3.0L	4V	2007 - 2012	4X4	●	●	●	●	○
Fusion	3.0L	4V	2008 - 2012	APIM	●	●	●	●	○
Fusion	3.0L	4V	2008 - 2012	GEM /	●	●	●	●	0x0005
Fusion	3.0L	4V	2008 - 2012	HVAC	●	●	●	●	○
Fusion	3.0L	4V	2008 - 2012	PAM	●	●	●	●	0x0005
Fusion	3.0L	4V	2010 - 2012	DSP	●	●	●	●	○
Fusion	3.0L	4V	2010 - 2012	FCIM	●	●	●	●	○
Fusion	3.0L	4V	2010 - 2012	FDIM	●	●	●	●	○
Fusion	3.0L	4V	2010 - 2012	GPSM	●	●	●	○	○
Fusion	3.0L	4V	2010 - 2012	IPC	●	●	●	●	○
Fusion	3.0L	4V	2010 - 2012	PSCM	●	●	●	●	○
Fusion	3.0L	4V	2010 - 2012	SOD-L	●	●	●	●	○
Fusion	3.0L	4V	2010 - 2012	SOD-R	●	●	●	●	○
Fusion	3.5L	4V	2010 - 2012	4X4	●	●	●	●	○
Fusion	3.5L	4V	2010 - 2012	ABS	●	●	●	●	0x0005 0x0008 0x0012
Fusion	3.5L	4V	2010 - 2012	ACM	●	●	●	●	0x0017 0x0018 0x0018 0x0018
Fusion	3.5L	4V	2010 - 2012	APIM	●	●	●	●	0x0019 0x001C
Fusion	3.5L	4V	2010 - 2012	DSP	●	●	●	●	○
Fusion	3.5L	4V	2010 - 2012	FCIM	●	●	●	●	○
Fusion	3.5L	4V	2010 - 2012	FDIM	●	●	●	●	0x0005
Fusion	3.5L	4V	2010 - 2012	GEM /	●	●	●	●	0x000A 0x000F 0x0042
Fusion	3.5L	4V	2010 - 2012	GPSM	●	●	●	○	○
Fusion	3.5L	4V	2010 - 2012	HVAC	●	●	●	●	○
Fusion	3.5L	4V	2010 - 2012	IPC	●	●	●	●	○
Fusion	3.5L	4V	2010 - 2012	OCSM	●	●	●	●	0x000C 0x0015 0x006D
Fusion	3.5L	4V	2010 - 2012	PAM	●	●	●	●	0x0005
Fusion	3.5L	4V	2010 - 2012	PCM	●	●	●	●	0x0023 0x0025 0x0037 0x0080 0x0081 0x0082 0x0083
Fusion	3.5L	4V	2010 - 2012	PSCM	●	●	●	●	○
Fusion	3.5L	4V	2010 - 2012	RCM	●	●	●	●	0x0005
Fusion	3.5L	4V	2010 - 2012	SOD-L	●	●	●	●	○
Fusion	3.5L	4V	2010 - 2012	SOD-R	●	●	●	●	○
Fusion	3.5L	4V	2010 - 2012	TBM	●	●	●	○	0x00D1 0x00D2 0x00D3
Fusion	3.5L	4V	2010 - 2012	TCM	●	●	●	○	0x0038
Fusion	Other	Other	2012	4X4	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fusion	Other	Other	2012	ABS	●	●	●	●	○
Fusion	Other	Other	2012	ACM	●	●	●	○	○
Fusion	Other	Other	2012	APIM	●	●	●	●	○
Fusion	Other	Other	2012	DSP	●	●	●	●	○
Fusion	Other	Other	2012	FCIM	●	●	●	●	○
Fusion	Other	Other	2012	FDIM	●	●	●	●	○
Fusion	Other	Other	2012	GEM /	●	●	●	●	0x0042
Fusion	Other	Other	2012	GPSM	●	●	●	●	○
Fusion	Other	Other	2012	HVAC	●	●	●	●	○
Fusion	Other	Other	2012	IPC	●	●	●	●	0x0009
Fusion	Other	Other	2012	OCSM	●	●	●	●	○
Fusion	Other	Other	2012	PAM	●	●	●	●	○
Fusion	Other	Other	2012	PSCM	●	●	●	●	○
Fusion	Other	Other	2012	RCM	●	●	●	●	○
Fusion	Other	Other	2012	SOD-L	●	●	●	●	○
Fusion	Other	Other	2012	SOD-R	●	●	●	●	○
Fusion	Other	Other	2012	TBM	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	ABS	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	ACM	●	●	●	●	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	AHCM	●	●	●	●	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	BCMii	●	●	●	●	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	CCMii	●	●	●	●	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	CDP	●	●	●	●	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	CMR	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	DDM	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	DSM	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	HCM	●	●	●	●	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	HVAC	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	IPC	●	●	●	●	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	IPM-A	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	NAV	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	PAM	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	PBM	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	PDM	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	PSCM	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	RCM	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	RFA	●	●	●	●	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	RGTM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	RHVAC	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	SASM	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	SOD-L	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	SOD-R	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	SRM	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	TRM	●	●	●	●	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	VDM	●	●	●	○	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	ABS	●	●	●	○	0x00E8 0x0129
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	ACM	●	●	●	●	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	AHCM	●	●	●	●	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	BCMii	●	●	●	●	0x0009 0x011B 0x011C 0x0132
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	CCMii	●	●	●	●	0x00F9
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	CDP	●	●	●	●	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	CMR	●	●	●	○	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	DDM	●	●	●	○	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	DSM	●	●	●	○	0x00F2
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	HCM	●	●	●	●	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	HVAC	●	●	●	○	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	IPC	●	●	●	●	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	IPM-A	●	●	●	○	0x00E5
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	NAV	●	●	●	○	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	PAM	●	●	●	○	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	PBM	●	●	●	○	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083 0x00C3 0x0114
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	PDM	●	●	●	○	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	PSCM	●	●	●	○	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	RCM	●	●	●	○	0x00EF 0x0102 0x0102
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	RFA	●	●	●	●	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	RGTM	●	●	●	●	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	RHVAC	●	●	●	○	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	SASM	●	●	●	○	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	SOD-L	●	●	●	○	0xF026
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	SOD-R	●	●	●	○	0xF026
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	SRM	●	●	●	○	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	TRM	●	●	●	●	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	VDM	●	●	●	○	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	ABS	●	●	●	●	0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	ACM	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	AHCM	●	●	●	○	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	BCMii	●	●	●	●	0x0009 0x011B 0x011C 0x0132
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	CCMii	●	●	●	●	0x00F9
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	CDP	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	DDM	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	GDM	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	HCM	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	HVAC	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	IPC	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	NAV	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	PAM	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	PBM	●	●	●	●	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	PCM	●	●	●	●	0x006F 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00AB 0x00AC 0x00B4 0x00C1
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	PDM	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	PSCM	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	RCM	●	●	●	○	0x0102
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	RFA	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	RGTM	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	RHVAC	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	SASM	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	SRM	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	TRM	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	VDM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006	GDM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	ABS	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	ACM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	AHCM	●	●	●	○	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	BCMii	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	CCMii	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	CDP	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	DDM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	HCM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	HVAC	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	IPC	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	NAV	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	PAM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	PBM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	PDM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	PSCM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	RCM	●	●	●	○	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	RFA	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	RGTM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	RHVAC	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	SASM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	SRM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	TRM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	VDM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2010	CMR	●	●	●	○	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2010	DSM	●	●	●	○	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2010	IPM-A	●	●	●	○	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2010	SOD-L	●	●	●	○	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2010	SOD-R	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006	GDM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	ABS	●	●	●	●	0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	ACM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	AHCM	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	BCMii	●	●	●	●	0x0009 0x011B 0x011C 0x0132
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	CCMii	●	●	●	●	0x00F9
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	CDP	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	DDM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	HCM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	HVAC	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	IPC	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	NAV	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	PAM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	PBM	●	●	●	●	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	PCM	●	●	●	●	0x006F 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00AB 0x00AC 0x00B4 0x00C1
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	PDM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	PSCM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	RCM	●	●	●	○	0x0102 0x00EF

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	RFA	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	RGTM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	RHVAC	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	SASM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	SRM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	TCM	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	TRM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	VDM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	CMR	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	DABM	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	DSM	●	●	●	○	0x00F2
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	IPM-A	●	●	●	○	0x00E5
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	SOD-L	●	●	●	○	0xF026
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	SOD-R	●	●	●	○	0xF026
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	ABS	●	●	●	○	0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	ACM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	AHCM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	BCMii	●	●	●	●	0x0009 0x011B 0x011C
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	CCMi	●	●	●	●	0x00F9
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	CDP	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	CMR	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	DDM	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	DSM	●	●	●	○	0x00F2
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	HCM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	HVAC	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	IPC	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	IPM-A	●	●	●	○	0x00E5
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	NAV	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	PAM	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	PBM	●	●	●	○	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	PDM	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	PSCM	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	RCM	●	●	●	○	0x0102
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	RFA	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	RGTM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	RHVAC	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	SASM	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	SOD-L	●	●	●	○	0xF026
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	SOD-R	●	●	●	○	0xF026
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	SRM	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	TCM	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	TRM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	VDM	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	ABS	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	ACM	●	●	●	●	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	AHCM	●	●	●	●	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	BCMii	●	●	●	●	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	CCMii	●	●	●	●	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	CDP	●	●	●	●	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	CMR	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	DABM	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	DDM	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	DSM	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	HCM	●	●	●	●	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	HVAC	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	IPC	●	●	●	●	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	IPM-A	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	NAV	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	PBM	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	PDM	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	PSCM	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	RCM	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	RGTM	●	●	●	●	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	RHVAC	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	SASM	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	SOD-L	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	SOD-R	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	SRM	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	TCM	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	TRM	●	●	●	●	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	VDM	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	GDM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	PAM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	RFA	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	ABS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	ACM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	AHCM	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	BCMii	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	CCMii	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	CDP	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	DDM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	HCM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	HVAC	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	IPC	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	NAV	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	PBM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	PDM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	PSCM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	RCM	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	RGTM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	RHVAC	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	SASM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	SRM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	TRM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	VDM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	CMR	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	DABM	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	DSM	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	IPM-A	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	SOD-L	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	SOD-R	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	ABS	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	ACM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	AHCM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	BCMii	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	CCMii	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	CDP	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	CMR	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	DABM	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	DDM	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	DSM	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	HCM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	HVAC	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	IPC	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	IPM-A	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	NAV	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	PBM	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	PDM	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	PSCM	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	RCM	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	RGTM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	RHVAC	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	SASM	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	SOD-L	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	SOD-R	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	SRM	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	TCM	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	TRM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	VDM	●	●	●	○	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006	GDM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	ABS	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	ACM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	AHCM	●	●	●	○	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	BCMii	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	CCMii	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	CDP	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	DDM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	HCM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	HVAC	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	IPC	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	NAV	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	PAM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	PBM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	PDM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	PSCM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	RCM	●	●	●	○	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	RFA	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	RGTM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	RHVAC	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	SASM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	SRM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	TCM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	TRM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	VDM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2010	CMR	●	●	●	○	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2010	DABM	●	●	●	○	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2010	DSM	●	●	●	○	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2010	IPM-A	●	●	●	○	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2010	SOD-L	●	●	●	○	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2010	SOD-R	●	●	●	○	○
GALAXY\S-Max	2.5L	I5	2006	ABS	●	●	●	●	0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129
GALAXY\S-Max	2.5L	I5	2006	ACM	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	AHCM	●	●	●	○	○
GALAXY\S-Max	2.5L	I5	2006	BCM i	●	●	●	●	0x0009 0x011B 0x011C 0x0132
GALAXY\S-Max	2.5L	I5	2006	CCM i	●	●	●	●	0x00F9
GALAXY\S-Max	2.5L	I5	2006	CDP	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	DDM	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	GDM	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	HCM	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	HVAC	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	IPC	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	NAV	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	PAM	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	PBM	●	●	●	●	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
GALAXY\S-Max	2.5L	I5	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
GALAXY\S-Max	2.5L	I5	2006	PDM	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	PSCM	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	RCM	●	●	●	○	0x0102
GALAXY\S-Max	2.5L	I5	2006	RFA	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	RGTM	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	RHVAC	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	SASM	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	SRM	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	TRM	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	VDM	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001	FFH	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001	LHID	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001	MFSW	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Galaxy	1.9L	EDC 1.9	2001	PAM	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001	RADIO	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001	RCC	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001	RHID	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001	RNS	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001 -	ABS	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001 -	CCM	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001 -	CJB	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001 -	IC	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001 -	PATS	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001 -	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Galaxy	1.9L	EDC 1.9	2001 -	RCM	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001 -	TCM	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	1995 - 2000	ABS	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	1995 - 2000	CCM	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	1995 - 2000	CJB	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	1995 - 2000	IC	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	1995 - 2000	PATS	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	1995 - 2000	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x0009
Galaxy	2.0L	2.0 DOHC SFI (8V)	1995 - 2000	RCM	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	1995 - 2000	TCM	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	2000	LHID	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	2000	MFSW	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	2000	PAM	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	2000	RADIO	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	2000	RCC	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	2000	RHID	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	2000	RNS	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	1997 - 2000	ABS	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	1997 - 2000	CCM	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	1997 - 2000	CJB	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	1997 - 2000	IC	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	1997 - 2000	PATS	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	1997 - 2000	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x0009
Galaxy	2.3L	DOHC SFI (16V)	1997 - 2000	RCM	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	1997 - 2000	TCM	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	2000	LHID	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	2000	MFSW	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Galaxy	2.3L	DOHC SFI (16V)	2000	PAM	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	2000	RADIO	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	2000	RCC	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	2000	RHID	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	2000	RNS	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001	LHID	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001	MFSW	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001	PAM	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001	RADIO	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001	RCC	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001	RHID	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001	RNS	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001 -	ABS	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001 -	CCM	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001 -	CJB	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001 -	IC	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001 -	PATS	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001 -	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Galaxy	2.8L	2.8 CD-V6	2001 -	RCM	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001 -	TCM	●	●	●	●	○
KA	1.0L	HCS	1997	PATS	●	●	●	●	○
KA	1.0L	HCS	1997 - 1999	ABS/TCS	●	●	●	●	○
KA	1.0L	HCS	1997 - 1999	CSM	●	●	●	●	○
KA	1.0L	HCS	1997 - 1999	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x0009
KA	1.0L	HCS	1999	ECS	●	●	●	●	○
KA	1.0L	Zetec Rocam	1999	ABS/TCS	●	●	●	●	○
KA	1.0L	Zetec Rocam	1999	CSM	●	●	●	●	○
KA	1.0L	Zetec Rocam	1999	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
KA	1.2L	DURATEC 8V	2009	ABS	●	●	●	●	○
KA	1.2L	DURATEC 8V	2009	BCMii	●	●	●	●	○
KA	1.2L	DURATEC 8V	2009	EATC	●	●	●	●	○
KA	1.2L	DURATEC 8V	2009	EPS	●	●	●	●	○
KA	1.2L	DURATEC 8V	2009	IPC	●	●	●	●	○
KA	1.2L	DURATEC 8V	2009	PAM	●	●	●	○	○
KA	1.2L	DURATEC 8V	2009	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
KA	1.2L	DURATEC 8V	2009	RCM	●	●	●	●	○
KA	1.3L	DURATEC 8V	2000	ABS/TCS	●	●	●	●	○
KA	1.3L	DURATEC 8V	2000	CSM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
KA	1.3L	DURATEC 8V	2000	ECS	●	●	●	●	○
KA	1.3L	DURATEC 8V	2000	GEM	●	●	●	●	○
KA	1.3L	DURATEC 8V	2000	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
KA	1.3L	Duratorq-Turbo Diesel Common Rail Injection	2009	ABS	●	●	●	●	○
KA	1.3L	Duratorq-Turbo Diesel Common Rail Injection	2009	BCMii	●	●	●	●	○
KA	1.3L	Duratorq-Turbo Diesel Common Rail Injection	2009	EATC	●	●	●	●	○
KA	1.3L	Duratorq-Turbo Diesel Common Rail Injection	2009	EPS	●	●	●	●	○
KA	1.3L	Duratorq-Turbo Diesel Common Rail Injection	2009	IPC	●	●	●	●	○
KA	1.3L	Duratorq-Turbo Diesel Common Rail Injection	2009	PAM	●	●	●	○	○
KA	1.3L	Duratorq-Turbo Diesel Common Rail Injection	2009	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
KA	1.3L	Duratorq-Turbo Diesel Common Rail Injection	2009	RCM	●	●	●	●	○
KA	1.3L	Endura-E	1997 - 1998	PATS	●	●	●	●	○
KA	1.3L	Endura-E	1997 - 2000	ABS/TCS	●	●	●	●	○
KA	1.3L	Endura-E	1997 - 2000	CSM	●	●	●	●	○
KA	1.3L	Endura-E	1997 - 2000	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
KA	1.3L	Endura-E	1999 - 2000	ECS	●	●	●	●	○
KA	1.3L	Endura-E	2000	GEM	●	●	●	●	○
KA	1.6L	DURATEC 8V	2000	ABS/TCS	●	●	●	●	○
KA	1.6L	DURATEC 8V	2000	CSM	●	●	●	●	○
KA	1.6L	DURATEC 8V	2000	ECS	●	●	●	●	○
KA	1.6L	DURATEC 8V	2000	GEM	●	●	●	●	○
KA	1.6L	DURATEC 8V	2000	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x0083
KA	1.6L	Zetec Rocam	2001	ABS/TCS	●	●	●	●	○
KA	1.6L	Zetec Rocam	2001	CSM	●	●	●	●	○
KA	1.6L	Zetec Rocam	2001	ECS	●	●	●	●	○
KA	1.6L	Zetec Rocam	2001	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
KA	Other	Other	2009	ABS	●	●	●	●	○
KA	Other	Other	2009	BCMii	●	●	●	●	○
KA	Other	Other	2009	EATC	●	●	●	●	○
KA	Other	Other	2009	EPS	●	●	●	●	○
KA	Other	Other	2009	IPC	●	●	●	●	○
KA	Other	Other	2009	PAM	●	●	●	○	○
KA	Other	Other	2009	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
KA	Other	Other	2009	RCM	●	●	●	●	○
Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	ABS	●	●	●	●	○
Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	AHCM	●	●	●	○	○
Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	APIM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	HCM	●	●	●	○	○
Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	PDM	●	●	●	○	○
Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	SOD-L	●	●	●	○	○
Kuga	1.6L	GTDI FGEC	2013	ABS	●	●	●	●	○
Kuga	1.6L	GTDI FGEC	2013	AHCM	●	●	●	○	○
Kuga	1.6L	GTDI FGEC	2013	APIM	●	●	●	●	○
Kuga	1.6L	GTDI FGEC	2013	HCM	●	●	●	○	○
Kuga	1.6L	GTDI FGEC	2013	PDM	●	●	●	○	○
Kuga	1.6L	GTDI FGEC	2013	SOD-L	●	●	●	○	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00DD 0x00DE 0x00E8
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	ACM	●	●	●	●	0x011A
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	AWD	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	CMR	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	D_DCU	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	EATC	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	EPS	●	●	●	○	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	FFH	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	GEM	●	●	●	●	0x00ED
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	HCM	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	IC	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	PAM	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	PCM	●	●	●	●	0x006F 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x00AB 0x00AC 0x00B4 0x00C1
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	P_DCU	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	RCM	●	●	●	●	0x00EA
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	RETM	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	RKE	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	SRM	●	●	●	●	0x011D
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	ACM	●	●	●	●	0x011A
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	AWD	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	CMR	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	D_DCU	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	EATC	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	EPS	●	●	●	○	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	FFH	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	GEM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	IC	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	PAM	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	P_DCU	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	RCM	●	●	●	●	0x00EA
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	RETM	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	RKE	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	SRM	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	TCM	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008 - 2013	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00DD 0x00DE
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008 - 2013	HCM	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2013	AHCM	●	●	●	○	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2013	APIM	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2013	PDM	●	●	●	○	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2013	SOD-L	●	●	●	○	○
Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	ABS	●	●	●	●	○
Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	AHCM	●	●	●	○	○
Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	APIM	●	●	●	●	○
Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	HCM	●	●	●	○	○
Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	PDM	●	●	●	○	○
Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	SOD-L	●	●	●	○	○
Kuga	2.5L	I5	2008	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00DD 0x00DE 0x00E8
Kuga	2.5L	I5	2008	ACM	●	●	●	●	0x011A
Kuga	2.5L	I5	2008	AWD	●	●	●	●	○
Kuga	2.5L	I5	2008	CMR	●	●	●	●	○
Kuga	2.5L	I5	2008	D_DCU	●	●	●	●	○
Kuga	2.5L	I5	2008	EATC	●	●	●	●	○
Kuga	2.5L	I5	2008	EPS	●	●	●	○	○
Kuga	2.5L	I5	2008	FFH	●	●	●	●	○
Kuga	2.5L	I5	2008	GEM	●	●	●	●	0x00ED
Kuga	2.5L	I5	2008	HCM	●	●	●	●	○
Kuga	2.5L	I5	2008	IC	●	●	●	●	○
Kuga	2.5L	I5	2008	PAM	●	●	●	●	○
Kuga	2.5L	I5	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0126 0x0127
Kuga	2.5L	I5	2008	P_DCU	●	●	●	●	○
Kuga	2.5L	I5	2008	RCM	●	●	●	●	0x00EA

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Kuga	2.5L	I5	2008	RETM	●	●	●	●	○
Kuga	2.5L	I5	2008	RKE	●	●	●	●	○
Kuga	2.5L	I5	2008	SRM	●	●	●	●	0x011D
Kuga	2.5L	I5	2008	TCM	●	●	●	●	○
MONDEO	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	APIM	●	●	●	●	○
MONDEO	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	C-CM	●	●	●	○	○
MONDEO	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	DSP	●	●	●	○	○
MONDEO	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	FCIM	●	●	●	○	○
MONDEO	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	GPSM	●	●	●	○	○
MONDEO	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	GWM	●	●	●	○	○
MONDEO	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	HCM	●	●	●	○	○
MONDEO	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	HUD	●	●	●	○	○
MONDEO	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	RACM	●	●	○	○	○
MONDEO	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	RCM	●	●	○	○	○
MONDEO	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	RTM	●	●	○	○	○
MONDEO	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	SCCM	●	●	○	○	○
MONDEO	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	SCM-E	●	●	○	○	○
MONDEO	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	SOD-L	●	●	○	○	○
MONDEO	1.6L	DURATEC VCT	2007 - 2011	ABS	●	●	●	○	0x0008 0x002B 0x0053 0x00D9 0x00E2 0x00E8
MONDEO	1.6L	DURATEC VCT	2007 - 2011	ACM	●	●	●	○	○
MONDEO	1.6L	DURATEC VCT	2007 - 2011	AHCM	●	●	●	○	○
MONDEO	1.6L	DURATEC VCT	2007 - 2011	BCMii	●	●	●	●	0x011B 0x011C 0x0132
MONDEO	1.6L	DURATEC VCT	2007 - 2011	CCMii	●	●	●	●	0x00F9
MONDEO	1.6L	DURATEC VCT	2007 - 2011	CDP	●	●	●	○	○
MONDEO	1.6L	DURATEC VCT	2007 - 2011	CMR	●	●	●	○	○
MONDEO	1.6L	DURATEC VCT	2007 - 2011	DDM	●	●	●	○	○
MONDEO	1.6L	DURATEC VCT	2007 - 2011	DSM	●	●	●	○	0x00F2
MONDEO	1.6L	DURATEC VCT	2007 - 2011	HCM	●	●	●	○	○
MONDEO	1.6L	DURATEC VCT	2007 - 2011	HVAC	●	●	●	○	○
MONDEO	1.6L	DURATEC VCT	2007 - 2011	IPC	●	●	●	●	○
MONDEO	1.6L	DURATEC VCT	2007 - 2011	PAM	●	●	●	●	○
MONDEO	1.6L	DURATEC VCT	2007 - 2011	PBM	●	●	●	●	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
MONDEO	1.6L	DURATEC VCT	2007 - 2011	PCM	●	●	●	○	0x0025 0x0080 0x0081 0x0082 0x0083
MONDEO	1.6L	DURATEC VCT	2007 - 2011	PDM	●	●	●	○	○
MONDEO	1.6L	DURATEC VCT	2007 - 2011	PSCM	●	●	●	○	○
MONDEO	1.6L	DURATEC VCT	2007 - 2011	RCM	●	●	●	●	0x00EF 0x0102 0x0102
MONDEO	1.6L	DURATEC VCT	2007 - 2011	RFA	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	1. 6L	DURATEC VCT	2007 - 2011	SASM	●	●	●	○	○
MONDEO	1. 6L	DURATEC VCT	2007 - 2011	SRM	●	●	●	○	○
MONDEO	1. 6L	DURATEC VCT	2007 - 2011	TRM	●	●	●	●	○
MONDEO	1. 6L	DURATEC VCT	2007 - 2011	VDM	●	●	●	○	○
MONDEO	1. 6L	DURATEC VCT	2011	IPM-A	●	●	●	○	○
MONDEO	1. 6L	DURATEC VCT	2011	RGTM	●	●	●	●	○
MONDEO	1. 6L	DURATEC VCT	2011	RHVAC	●	●	●	○	○
MONDEO	1. 6L	DURATEC VCT	2011	SOD-L	●	●	●	○	○
MONDEO	1. 6L	DURATEC VCT	2011	SOD-R	●	●	●	○	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	ABS	●	●	●	○	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	ACM	●	●	●	○	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	AHCM	●	●	●	○	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	●	●	●	●	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	CCMii	●	●	●	●	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	CDP	●	●	●	○	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	CMR	●	●	●	○	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	●	●	●	○	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	DSM	●	●	●	○	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	HCM	●	●	●	○	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	●	●	●	○	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	●	●	●	●	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-A	●	●	●	○	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	PAM	●	●	●	●	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	PBM	●	●	●	●	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	●	●	●	○	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	PSCM	●	●	●	○	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	RCM	●	●	●	●	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	RFA	●	●	●	●	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	RGTM	●	●	●	●	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	RHVAC	●	●	●	○	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	SASM	●	●	●	○	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-L	●	●	●	○	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-R	●	●	●	○	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	SRM	●	●	●	○	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	●	●	●	●	○
MONDEO	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2011	VDM	●	●	●	○	○
MONDEO	1. 6L	EcoBoost - Gas Turbocharged Direct Injection	2011	ABS	●	●	●	○	0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8
MONDEO	1. 6L	EcoBoost - Gas Turbocharged Direct Injection	2011	ACM	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	AHCM	●	●	●	○	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	BCMii	●	●	●	●	0x011B 0x011C 0x0132
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	CCMii	●	●	●	●	0x00F9
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	CDP	●	●	●	○	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	CMR	●	●	●	○	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	DDM	●	●	●	○	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	DSM	●	●	●	○	0x00F2
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	HCM	●	●	●	○	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	HVAC	●	●	●	○	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPC	●	●	●	●	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPM-A	●	●	●	○	0x00E5
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PAM	●	●	●	●	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PBM	●	●	●	●	0x00F3 0x00F4 0x00F5 0x00F6 0x00F7
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083 0x00C3 0x0114
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PDM	●	●	●	○	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PSCM	●	●	●	○	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	RCM	●	●	●	●	0x00EF 0x0102 0x0102
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	RFA	●	●	●	●	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	RGTM	●	●	●	●	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	RHVAC	●	●	●	○	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SASM	●	●	●	○	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SOD-L	●	●	●	○	0xF026
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SOD-R	●	●	●	○	0xF026
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SRM	●	●	●	○	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	TRM	●	●	●	●	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	VDM	●	●	●	○	○
MONDEO	1.6L	Zetec	1993 - 1999	ABS	●	●	●	●	○
MONDEO	1.6L	Zetec	1993 - 1999	CSM	●	●	●	●	○
MONDEO	1.6L	Zetec	1993 - 1999	PATS	●	●	●	●	○
MONDEO	1.6L	Zetec	1997 - 1999	FFH	●	●	●	●	○
MONDEO	1.6L	Zetec	1997 - 1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
MONDEO	1.6L	Zetec	1998 - 1999	ABS/TCS	●	●	●	●	○
MONDEO	1.8L	DURATEC-HE / I4	2001	ABS	●	●	●	●	0x0008 0x00F1
MONDEO	1.8L	DURATEC-HE / I4	2001	ABS/TCS	●	●	●	●	0x0008 0x00F1
MONDEO	1.8L	DURATEC-HE / I4	2001	ACM	●	●	●	●	○
MONDEO	1.8L	DURATEC-HE / I4	2001	CDP	●	●	●	●	○
MONDEO	1.8L	DURATEC-HE / I4	2001	CSM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	1. 8L	DURATEC-HE / I4	2001	EATC	●	●	●	●	○
MONDEO	1. 8L	DURATEC-HE / I4	2001	GDM	●	●	●	●	○
MONDEO	1. 8L	DURATEC-HE / I4	2001	GEM	●	●	●	●	○
MONDEO	1. 8L	DURATEC-HE / I4	2001	HEC	●	●	●	●	○
MONDEO	1. 8L	DURATEC-HE / I4	2001	LHID	●	●	●	●	○
MONDEO	1. 8L	DURATEC-HE / I4	2001	NAV	●	●	●	●	○
MONDEO	1. 8L	DURATEC-HE / I4	2001	PATS	●	●	●	●	○
MONDEO	1. 8L	DURATEC-HE / I4	2001	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
MONDEO	1. 8L	DURATEC-HE / I4	2001	RCM	●	●	●	●	○
MONDEO	1. 8L	DURATEC-HE / I4	2001	RETM	●	●	●	●	○
MONDEO	1. 8L	DURATEC-HE / I4	2001	RHID	●	●	●	●	○
MONDEO	1. 8L	DURATEC-HE / I4	2001	SRM	●	●	●	●	○
MONDEO	1. 8L	DURATEC-SCi	2001	ABS	●	●	●	●	0x00F1
MONDEO	1. 8L	DURATEC-SCi	2001	ABS/TCS	●	●	●	●	0x0008 0x00F1
MONDEO	1. 8L	DURATEC-SCi	2001	ACM	●	●	●	●	○
MONDEO	1. 8L	DURATEC-SCi	2001	CDP	●	●	●	●	○
MONDEO	1. 8L	DURATEC-SCi	2001	CSM	●	●	●	●	○
MONDEO	1. 8L	DURATEC-SCi	2001	EATC	●	●	●	●	○
MONDEO	1. 8L	DURATEC-SCi	2001	GDM	●	●	●	●	○
MONDEO	1. 8L	DURATEC-SCi	2001	GEM	●	●	●	●	○
MONDEO	1. 8L	DURATEC-SCi	2001	HEC	●	●	●	●	○
MONDEO	1. 8L	DURATEC-SCi	2001	LHID	●	●	●	●	○
MONDEO	1. 8L	DURATEC-SCi	2001	NAV	●	●	●	●	○
MONDEO	1. 8L	DURATEC-SCi	2001	PATS	●	●	●	●	○
MONDEO	1. 8L	DURATEC-SCi	2001	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
MONDEO	1. 8L	DURATEC-SCi	2001	RCM	●	●	●	●	○
MONDEO	1. 8L	DURATEC-SCi	2001	RETM	●	●	●	●	○
MONDEO	1. 8L	DURATEC-SCi	2001	RHID	●	●	●	●	○
MONDEO	1. 8L	DURATEC-SCi	2001	SRM	●	●	●	●	○
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2007	ABS	●	●	●	○	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2007	ACM	●	●	○	○	○
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2007	AHCM	●	●	●	○	○
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2007	BCMii	●	●	●	●	0x011B 0x011C 0x0132
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2007	CCMii	●	●	●	●	0x00F9
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2007	CDP	●	●	●	●	○
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2007	CMR	●	●	●	●	○
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2007	DDM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2007	DSM	●	●	●	●	0x00F2
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2007	HCM	●	●	●	●	○
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2007	HVAC	●	●	●	●	○
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2007	IPC	●	●	●	●	○
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2007	PAM	●	●	●	●	○
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2007	PBM	●	●	●	●	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2007	PCM	●	●	●	●	0x006F 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00AB 0x00AC 0x00B4 0x00C1
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2007	PDM	●	●	●	●	○
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2007	PSCM	●	●	●	●	○
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2007	RCM	●	●	●	●	0x00EF 0x0102 0x0102
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2007	RFA	●	●	●	○	○
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2007	SASM	●	●	●	●	○
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2007	SRM	●	●	●	●	○
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2007	TRM	●	●	●	●	○
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2007	VDM	●	●	●	○	○
MONDEO	1. 8L	Endura-DE	1997	FFH	●	●	●	●	○
MONDEO	1. 8L	Endura-DE	1997	PCM	○	○	●	○	0x0080 0x0081 0x0082 0x0083
MONDEO	1. 8L	Endura-DE	1997 -	ABS	●	●	●	●	○
MONDEO	1. 8L	Endura-DE	1997 -	CSM	●	●	●	●	○
MONDEO	1. 8L	Endura-DE	1997 -	PATS	●	●	●	●	○
MONDEO	1. 8L	Zetec	1993 - 2000	ABS	●	●	●	●	○
MONDEO	1. 8L	Zetec	1993 - 2000	CSM	●	●	●	●	○
MONDEO	1. 8L	Zetec	1993 - 2000	PATS	●	●	●	●	○
MONDEO	1. 8L	Zetec	1997 - 1999	FFH	●	●	●	●	○
MONDEO	1. 8L	Zetec	1997 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009
MONDEO	1. 8L	Zetec	1998 - 2000	ABS/TCS	●	●	●	●	○
MONDEO	1. 8L	Zetec	2000	AFCM	●	●	●	●	○
MONDEO	2. 0L	DURATEC-HE / I4	2001	ABS/TCS	●	●	●	●	0x0008 0x00F1
MONDEO	2. 0L	DURATEC-HE / I4	2001	CSM	●	●	●	●	○
MONDEO	2. 0L	DURATEC-HE / I4	2001	EATC	●	●	●	●	○
MONDEO	2. 0L	DURATEC-HE / I4	2001	GDM	●	●	●	●	○
MONDEO	2. 0L	DURATEC-HE / I4	2001	GEM	●	●	●	●	0x0005
MONDEO	2. 0L	DURATEC-HE / I4	2001	HEC	●	●	●	●	0x0005
MONDEO	2. 0L	DURATEC-HE / I4	2001	LHID	●	●	●	●	0x0005
MONDEO	2. 0L	DURATEC-HE / I4	2001	NAV	●	●	●	●	○
MONDEO	2. 0L	DURATEC-HE / I4	2001	PATS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	2.0L	DURATEC-HE / I4	2001	RETM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2001	RHID	●	●	●	●	0x0005
MONDEO	2.0L	DURATEC-HE / I4	2001 - 2007	ABS	●	●	●	●	0x0008 0x00F1
MONDEO	2.0L	DURATEC-HE / I4	2001 - 2007	ACM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2001 - 2007	CDP	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2001 - 2007	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
MONDEO	2.0L	DURATEC-HE / I4	2001 - 2007	RCM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2001 - 2007	SRM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2007	AHCM	●	●	●	○	○
MONDEO	2.0L	DURATEC-HE / I4	2007	BCMii	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2007	CCMii	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2007	CMR	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2007	DDM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2007	DSM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2007	HCM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2007	HVAC	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2007	IPC	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2007	PAM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2007	PBM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2007	PDM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2007	PSCM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2007	RFA	●	●	●	○	○
MONDEO	2.0L	DURATEC-HE / I4	2007	SASM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2007	TRM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2007	VDM	●	●	●	○	○
MONDEO	2.0L	DURATORQ_DI	2001	ABS	●	●	●	○	0x0008 0x00F1
MONDEO	2.0L	DURATORQ_DI	2001	ABS/TCS	●	●	●	●	0x00F1
MONDEO	2.0L	DURATORQ_DI	2001	ACM	●	●	●	●	○
MONDEO	2.0L	DURATORQ_DI	2001	CDP	●	●	●	●	○
MONDEO	2.0L	DURATORQ_DI	2001	CSM	●	●	●	●	○
MONDEO	2.0L	DURATORQ_DI	2001	EATC	●	●	●	●	○
MONDEO	2.0L	DURATORQ_DI	2001	FFH	●	●	●	●	○
MONDEO	2.0L	DURATORQ_DI	2001	FIP	●	●	●	●	○
MONDEO	2.0L	DURATORQ_DI	2001	GDM	●	●	●	●	○
MONDEO	2.0L	DURATORQ_DI	2001	GEM	●	●	●	●	○
MONDEO	2.0L	DURATORQ_DI	2001	HEC	●	●	●	●	○
MONDEO	2.0L	DURATORQ_DI	2001	LHID	●	●	●	●	○
MONDEO	2.0L	DURATORQ_DI	2001	NAV	●	●	●	●	○
MONDEO	2.0L	DURATORQ_DI	2001	PATS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	2.0L	DURATORQ_DI	2001	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
MONDEO	2.0L	DURATORQ_DI	2001	RCM	●	●	●	●	○
MONDEO	2.0L	DURATORQ_DI	2001	RETM	●	●	●	●	○
MONDEO	2.0L	DURATORQ_DI	2001	RHID	●	●	●	●	○
MONDEO	2.0L	DURATORQ_DI	2001	SRM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	ABS/TCS	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	CSM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	EATC	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	FFH	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	GDM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	GEM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	HEC	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	ICU	○	○	●	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	LHID	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	NAV	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	PATS	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	RETM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	RHID	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	ABS	●	●	●	○	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	ACM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	CDP	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	PCM	●	●	●	●	0x006F 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00AB 0x00AC 0x00B4 0x00C1
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	RCM	●	●	●	●	0x00EF 0x0102 0x0102
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	SRM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	TCM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	AHCM	●	●	●	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	BCMii	●	●	●	●	0x011B 0x011C 0x0132
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	CCMii	●	●	●	●	0x00F9
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	CMR	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	DDM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	DSM	●	●	●	●	0x00F2
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	HCM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	HVAC	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	IPC	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	PAM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	PBM	●	●	●	●	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	PDM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	PSCM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	RFA	●	●	●	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	SASM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	TRM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	VDM	●	●	●	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	DABM	●	●	●	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-A	●	●	●	○	0x00E5
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	RGTM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	RHVAC	●	●	●	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-L	●	●	●	○	0xF026
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-R	●	●	●	○	0xF026
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007	PAM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007	RFA	●	●	●	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	ABS	●	●	●	○	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	ACM	●	●	○	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	AHCM	●	●	●	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	BCMii	●	●	●	●	0x0009 0x011C
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	CCMi	●	●	●	●	0x00F9
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	CDP	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	CMR	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	DDM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	DSM	●	●	●	●	0x00F2
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	HCM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	HVAC	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	IPC	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	PBM	●	●	●	●	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	PDM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	PSCM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	RCM	●	●	●	●	0x0102
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	SASM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	SRM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	TCM	●	●	●	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	TRM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	VDM	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	DABM	●	●	●	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-A	●	●	●	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	RGTM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	RHVAC	●	●	●	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-L	●	●	●	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-R	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007	PAM	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007	RFA	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007	TCM	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	ABS	●	●	●	○	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	ACM	●	●	○	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	AHCM	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	BCMii	●	●	●	●	0x0009 0x011C
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	CCMii	●	●	●	●	0x00F9
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	CDP	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	CMR	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	DDM	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	DSM	●	●	●	●	0x00F2
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	HVAC	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	IPC	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	PBM	●	●	●	●	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	PDM	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	PSCM	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	SASM	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	SRM	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	TRM	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	VDM	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2013	HCM	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2013	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2013	RCM	●	●	●	●	0x0102
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	DABM	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPM-A	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	RGTM	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	RHVAC	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	SOD-R	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	SOD-L	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	APIM	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	C-CM	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	DSP	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	FCIM	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	GPSM	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	GWM	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	HUD	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	RACM	●	●	○	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	RTM	●	●	○	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	SCCM	●	●	○	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	SCM-E	●	●	○	○	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007	PAM	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007	RFA	●	●	●	○	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007	TCM	●	●	●	○	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	ABS	●	●	●	○	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	ACM	●	●	○	○	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	AHCM	●	●	●	○	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	BCMii	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	CCMii	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	CDP	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	CMR	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	DDM	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	DSM	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	HCM	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	HVAC	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	IPC	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	PBM	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	PDM	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	PSCM	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	RCM	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	SASM	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	SRM	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	TRM	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	VDM	●	●	●	○	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2011	DABM	●	●	●	○	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2011	IPM-A	●	●	●	○	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2011	RGTM	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2011	RHVAC	●	●	●	○	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2011	SOD-L	●	●	●	○	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2011	SOD-R	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	2.0L	Zetec	1993 - 2000	ABS	●	●	●	●	○
MONDEO	2.0L	Zetec	1993 - 2000	CSM	●	●	●	●	○
MONDEO	2.0L	Zetec	1993 - 2000	PATS	●	●	●	●	○
MONDEO	2.0L	Zetec	1997 - 1999	FFH	●	●	●	●	○
MONDEO	2.0L	Zetec	1997 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009
MONDEO	2.0L	Zetec	1998 - 2000	ABS/TCS	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	ABS/TCS	●	●	●	●	0x00F1
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	CSM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	EATC	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	FFH	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	GDM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	GEM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	HEC	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	ICU	○	○	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	LHID	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	NAV	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	PATS	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	RETM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	RHID	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2007	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0092
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	ABS	●	●	●	○	0x0008 0x00F1
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	ACM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	CDP	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	RCM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	SRM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007	PAM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007	RFA	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	AHCM	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	BCMii	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	CCMii	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	CMR	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	DDM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	DSM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	HCM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	HVAC	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	IPC	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	PBM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	PDM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	PSCM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	SASM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	TRM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	VDM	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	DABM	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-A	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	RGTM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	RHVAC	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-L	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-R	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ABS	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ACM	●	●	○	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	AHCM	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	CCMii	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	CDP	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	CMR	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	DABM	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	DSM	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	HCM	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-A	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PBM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PSCM	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	RCM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	RGTM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	RHVAC	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	SASM	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-L	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-R	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	SRM	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TCM	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	VDM	●	●	●	○	○
MONDEO	2.3L	DURATEC-HE / I4	2007 - 2011	ABS	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	ACM	●	●	○	○	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	AHCM	●	●	●	○	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	BCMii	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	CCMii	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	CDP	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	CMR	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	DDM	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	DSM	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	HCM	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	HVAC	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	IPC	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	PAM	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	PBM	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	PDM	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	PSCM	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	RCM	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	RFA	●	●	●	○	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	SASM	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	SRM	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	TCM	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	TRM	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	VDM	●	●	●	○	○
MONDEO	2. 3L	DURATEC-HE / I4	2011	DABM	●	●	●	○	○
MONDEO	2. 3L	DURATEC-HE / I4	2011	IPM-A	●	●	●	○	○
MONDEO	2. 3L	DURATEC-HE / I4	2011	RGTM	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2011	RHVAC	●	●	●	○	○
MONDEO	2. 3L	DURATEC-HE / I4	2011	SOD-L	●	●	●	○	○
MONDEO	2. 3L	DURATEC-HE / I4	2011	SOD-R	●	●	●	○	○
MONDEO	2. 5L	Duratec-VE	1994 - 2001	ABS	●	●	●	●	0x0008 0x00F1
MONDEO	2. 5L	Duratec-VE	1994 - 2001	CSM	●	●	●	●	○
MONDEO	2. 5L	Duratec-VE	1994 - 2001	PATS	●	●	●	●	○
MONDEO	2. 5L	Duratec-VE	1997 - 1999	FFH	●	●	●	●	○
MONDEO	2. 5L	Duratec-VE	1997 - 2001	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0083 0x0009
MONDEO	2. 5L	Duratec-VE	1998 - 2001	ABS/TCS	●	●	●	●	0x0008 0x00F1
MONDEO	2. 5L	Duratec-VE	2001	ACM	●	●	●	●	○
MONDEO	2. 5L	Duratec-VE	2001	CDP	●	●	●	●	○
MONDEO	2. 5L	Duratec-VE	2001	EATC	●	●	●	●	○
MONDEO	2. 5L	Duratec-VE	2001	GDM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	2.5L	Duratec-VE	2001	GEM	●	●	●	●	○
MONDEO	2.5L	Duratec-VE	2001	HEC	●	●	●	●	○
MONDEO	2.5L	Duratec-VE	2001	LHID	●	●	●	●	○
MONDEO	2.5L	Duratec-VE	2001	NAV	●	●	●	●	○
MONDEO	2.5L	Duratec-VE	2001	RCM	●	●	●	●	○
MONDEO	2.5L	Duratec-VE	2001	RETM	●	●	●	●	○
MONDEO	2.5L	Duratec-VE	2001	RHID	●	●	●	●	○
MONDEO	2.5L	Duratec-VE	2001	SRM	●	●	●	●	○
MONDEO	2.5L	I5	2007	ABS	●	●	●	○	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8
MONDEO	2.5L	I5	2007	ACM	●	●	○	○	○
MONDEO	2.5L	I5	2007	AHCM	●	●	●	○	○
MONDEO	2.5L	I5	2007	BCMii	●	●	●	●	0x011B 0x011C 0x0132
MONDEO	2.5L	I5	2007	CCMii	●	●	●	●	0x00F9
MONDEO	2.5L	I5	2007	CDP	●	●	●	●	○
MONDEO	2.5L	I5	2007	CMR	●	●	●	●	○
MONDEO	2.5L	I5	2007	DDM	●	●	●	●	○
MONDEO	2.5L	I5	2007	DSM	●	●	●	●	0x00F2
MONDEO	2.5L	I5	2007	HCM	●	●	●	●	○
MONDEO	2.5L	I5	2007	HVAC	●	●	●	●	○
MONDEO	2.5L	I5	2007	IPC	●	●	●	●	○
MONDEO	2.5L	I5	2007	PAM	●	●	●	●	○
MONDEO	2.5L	I5	2007	PBM	●	●	●	●	0x00F3 0x00F4 0x00F5 0x00F6 0x00F7
MONDEO	2.5L	I5	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MONDEO	2.5L	I5	2007	PDM	●	●	●	●	○
MONDEO	2.5L	I5	2007	PSCM	●	●	●	●	○
MONDEO	2.5L	I5	2007	RCM	●	●	●	●	0x00EF 0x0102 0x0102
MONDEO	2.5L	I5	2007	RFA	●	●	●	○	○
MONDEO	2.5L	I5	2007	SASM	●	●	●	●	○
MONDEO	2.5L	I5	2007	SRM	●	●	●	●	○
MONDEO	2.5L	I5	2007	TRM	●	●	●	●	○
MONDEO	2.5L	I5	2007	VDM	●	●	●	○	○
MONDEO	3.0L	Duratec SE	2001	ABS	●	●	●	●	0x0008 0x00F1
MONDEO	3.0L	Duratec SE	2001	ABS/TCS	●	●	●	●	0x0008 0x00F1
MONDEO	3.0L	Duratec SE	2001	ACM	●	●	●	●	○
MONDEO	3.0L	Duratec SE	2001	CDP	●	●	●	●	○
MONDEO	3.0L	Duratec SE	2001	CSM	●	●	●	●	○
MONDEO	3.0L	Duratec SE	2001	EATC	●	●	●	●	○
MONDEO	3.0L	Duratec SE	2001	GDM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	3.0L	Duratec SE	2001	GEM	●	●	●	●	○
MONDEO	3.0L	Duratec SE	2001	HEC	●	●	●	●	○
MONDEO	3.0L	Duratec SE	2001	LHID	●	●	●	●	○
MONDEO	3.0L	Duratec SE	2001	NAV	●	●	●	●	○
MONDEO	3.0L	Duratec SE	2001	PATS	●	●	●	●	○
MONDEO	3.0L	Duratec SE	2001	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
MONDEO	3.0L	Duratec SE	2001	RCM	●	●	●	●	○
MONDEO	3.0L	Duratec SE	2001	RETM	●	●	●	●	○
MONDEO	3.0L	Duratec SE	2001	RHID	●	●	●	●	○
MONDEO	3.0L	Duratec SE	2001	SRM	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	ABS	●	●	●	●	0x0008 0x00F1
MONDEO	3.0L	Duratec-ST	2001	ABS/TCS	●	●	●	●	0x0008 0x00F1
MONDEO	3.0L	Duratec-ST	2001	ACM	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	CDP	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	CSM	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	EATC	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	GDM	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	GEM	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	HEC	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	LHID	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	NAV	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	PATS	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
MONDEO	3.0L	Duratec-ST	2001	RCM	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	RETM	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	RHID	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	SRM	●	●	●	●	○
Puma	1.4L	Zetec-SE	1998 - 1999	ABS/TCS	●	●	●	●	○
Puma	1.4L	Zetec-SE	1998 - 1999	HEC	●	●	●	●	○
Puma	1.4L	Zetec-SE	1998 - 1999	PATS	○	○	●	○	○
Puma	1.4L	Zetec-SE	1998 - 1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Puma	1.4L	Zetec-SE	1999	GEM	●	●	●	●	○
Puma	1.6L	Zetec-SE	2001	ABS/TCS	●	●	●	●	○
Puma	1.6L	Zetec-SE	2001	GEM	●	●	●	●	○
Puma	1.6L	Zetec-SE	2001	HEC	●	●	●	●	○
Puma	1.6L	Zetec-SE	2001	PATS	●	●	●	●	○
Puma	1.6L	Zetec-SE	2001	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Puma	1.7L	Zetec-SE	1997 - 2001	ABS/TCS	●	●	●	●	○
Puma	1.7L	Zetec-SE	1997 - 2001	HEC	●	●	●	●	○
Puma	1.7L	Zetec-SE	1997 - 2001	PATS	●	●	●	●	○
Puma	1.7L	Zetec-SE	1997 - 2001	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Puma	1.7L	Zetec-SE	1999 - 2001	GEM	●	●	●	●	○
Ranger	2.3L	DURATEC-HE / I4	2006 - 2009	4X4	●	●	●	●	○
Ranger	2.3L	DURATEC-HE / I4	2006 - 2009	ABS/TCS	●	●	●	●	0x0008
Ranger	2.3L	DURATEC-HE / I4	2006 - 2009	GEM	●	●	●	●	0x000A 0x0063
Ranger	2.3L	DURATEC-HE / I4	2006 - 2009	IC	●	●	●	●	0x0009
Ranger	2.3L	DURATEC-HE / I4	2006 - 2009	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Ranger	2.3L	DURATEC-HE / I4	2006 - 2009	RCM	●	●	●	●	0x000C
Ranger	2.3L	DURATEC-HE / I4	2009	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
Ranger	3.0L	I4 DSL Electronic	2005	4X4	●	●	●	●	○
Ranger	3.0L	I4 DSL Electronic	2005	ABS/TCS	●	●	●	●	○
Ranger	3.0L	I4 DSL Electronic	2005	GEM	●	●	●	●	0x0063
Ranger	3.0L	I4 DSL Electronic	2005	IC	●	●	●	●	○
Ranger	3.0L	I4 DSL Electronic	2005	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Ranger	3.0L	I4 DSL Electronic	2005	RCM	●	●	●	●	○
Ranger	3.0L	I4 DSL Electronic	2005	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
Ranger / Courier / Mazda B Series /Bravo	4.0L	V6 SOHC	2003	ABS/TCS	●	●	●	●	0x0008
Ranger / Courier / Mazda B Series /Bravo	4.0L	V6 SOHC	2003	ESOF	●	●	●	●	○
Ranger / Courier / Mazda B Series /Bravo	4.0L	V6 SOHC	2003	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ABS	●	●	●	●	0x00CA
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ACM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	FCDIM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PAM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x00B0 0x00B3 0x00B9 0x00C1 0x00E7
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	RCM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	SRM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TBM	●	●	●	○	0x00D1 0x00D2 0x00D3

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Ranger / Mazda B-Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	TCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2007	GEM	●	●	●	●	0x000A 0x0203
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2009	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2011	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2011	IC	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2011	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2004 - 2011	RCM	●	●	●	●	0x000C
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2005	TPM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2007 - 2011	OCSM	●	●	●	○	0x000C
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2007 - 2011	SDARS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2008 - 2011	GEM /	●	●	●	●	0x000A 0x0042
Ranger / Mazda B-Series / Courier	2. 3L	DURATEC-HE / I4	2010 - 2011	ABS	●	●	●	●	0x0008 0x0012
Ranger / Mazda B-Series / Courier	2. 3L	OHC	1995 - 1997	ABS/TCS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	OHC	1995 - 1997	GEM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	OHC	1995 - 1997	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Ranger / Mazda B-Series / Courier	2. 3L	OHC	1995 - 1997	RAP	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	OHC	1996 - 1997	IAB	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	Other	1996 - 2003	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	2. 3L	Other	1996 - 2003	GEM	●	●	●	●	0x0203
Ranger / Mazda B-Series / Courier	2. 3L	Other	1996 - 2003	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0010 0x0028 0x0031 0x0033
Ranger / Mazda B-Series / Courier	2. 3L	Other	2001	PATS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	Other	2001 - 2003	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 3L	Other	2001 - 2003	RAP	●	●	●	●	0x000A 0x000F
Ranger / Mazda B-Series / Courier	2. 3L	Other	2001 - 2003	RCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	ABS	●	●	●	●	0x00CA
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	ACM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	BCMii	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	DDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	FCDIM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	HVAC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	IPC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	PAM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083
Ranger / Mazda B-Series / Courier	2. 5L	DURATEC-HE / I4	2011	PDM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	RCM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	SRM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	TBM	●	●	●	○	0x00D1 0x00D2 0x00D3
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	TCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	TRM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.5L	Other	1998	IAB	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 - 2001	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 - 2001	GEM	●	●	●	●	0x0203
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 - 2001	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 - 2001	RAP	●	●	●	●	0x000A
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 - 2001	PATS	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 - 2001	RCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.5L	Other	2001	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.8L	Other	2001	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.8L	Other	2001	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	2.8L	Other	2001	GEM	●	●	●	●	0x0203
Ranger / Mazda B-Series / Courier	2.8L	Other	2001	PATS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.8L	Other	2001	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Ranger / Mazda B-Series / Courier	2.8L	Other	2001	RAP	●	●	●	●	0x000A
Ranger / Mazda B-Series / Courier	2.8L	Other	2001	RCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 - 2000	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 - 2000	GEM	●	●	●	●	0x0203
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 - 2000	PATS	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 - 2000	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 - 2000	RAP	●	●	●	●	0x000A
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 - 2000	RCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.0L	Other	1995 - 2003	RAP	●	●	●	●	0x000A
Ranger / Mazda B-Series / Courier	3.0L	Other	1995 - 2007	GEM	●	●	●	●	0x0203 0x000A
Ranger / Mazda B-Series / Courier	3.0L	Other	1995 - 2008	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	3.0L	Other	1995 - 2008	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0009
Ranger / Mazda B-Series / Courier	3.0L	Other	1996 - 1998	IAB	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.0L	Other	1999 - 2008	RCM	●	●	●	●	0x000C
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 - 2001	PATS	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 - 2008	4X4	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Ranger / Mazda B-Series / Courier	3.0L	Other	2004 - 2008	IC	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	3.0L	Other	2005	TPM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 - 2008	OCSM	●	●	●	○	0x000C
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 - 2008	SDARS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.0L	Other	2008	GEM /	●	●	●	●	0x000A 0x0042
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ABS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ACM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	FCDIM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PAM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	RCM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	SRM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TBM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4.0L	Other	1995 - 2002	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	4.0L	Other	1995 - 2002	GEM	●	●	●	●	0x0203
Ranger / Mazda B-Series / Courier	4.0L	Other	1995 - 2002	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0009
Ranger / Mazda B-Series / Courier	4.0L	Other	1995 - 2002	RAP	●	●	●	●	0x000A
Ranger / Mazda B-Series / Courier	4.0L	Other	1996 - 1998	IAB	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 - 2001	PATS	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 - 2002	RCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 - 2002	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003	RAP	●	●	●	●	0x000A 0x000F
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003 - 2007	GEM	●	●	●	●	0x0203 0x000A
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003 - 2009	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003 - 2011	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003 - 2011	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003 - 2011	RCM	●	●	●	●	0x000C
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2004 - 2011	IC	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2005	TPM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2007 - 2011	OCSM	●	●	●	○	0x000C
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2007 - 2011	SDARS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2008 - 2011	GEM /	●	●	●	●	0x000A 0x0042
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2010 - 2011	ABS	●	●	●	●	0x0008 0x0012
Ranger / Mazda B-Series / Courier	Other	Other	2004	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2004	ABS/TCS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2004	GEM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2004	IC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2004	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Ranger / Mazda B-Series / Courier	Other	Other	2004 - 2011	RCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	ABS	●	●	●	●	0x00CA
Ranger / Mazda B-Series / Courier	Other	Other	2011	ACM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	BCMii	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	DDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	FCDIM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	HVAC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	IPC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	PAM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	PDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	SRM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	TBM	●	●	●	○	0x00D1 0x00D2 0x00D3
Ranger / Mazda B-Series / Courier	Other	Other	2011	TCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	TRM	●	●	●	●	○
S. A. Fiesta	1.0L	FFV	2006 - 2010	ABS/TCS	●	●	●	●	0x0008 0x000B 0x000B
S. A. Fiesta	1.0L	FFV	2006 - 2010	IC	●	●	●	●	○
S. A. Fiesta	1.0L	FFV	2006 - 2010	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x012E
S. A. Fiesta	1.0L	FFV	2006 - 2010	RCM	●	●	●	●	○
S. A. Fiesta	1.0L	FFV	2006 - 2010	RKE	●	●	●	●	0x000A
S. A. Fiesta	1.0L	FFV	2010	TBM	●	●	●	○	○
S. A. Fiesta	1.0L	Zetec Rocam	2002	ABS/TCS	●	●	●	●	0x0008
S. A. Fiesta	1.0L	Zetec Rocam	2002	IC	●	●	●	●	○
S. A. Fiesta	1.0L	Zetec Rocam	2002	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
S. A. Fiesta	1.0L	Zetec Rocam	2002	RCM	●	●	●	●	○
S. A. Fiesta	1.0L	Zetec Rocam	2002	RKE	●	●	●	●	○
S. A. Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	ABS/TCS	●	●	●	●	0x0008
S. A. Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	IC	●	●	●	●	○
S. A. Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0025

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
S. A. Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	RCM	●	●	●	●	○
S. A. Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	RKE	●	●	●	●	○
S. A. Fiesta	1.6L	FFV	2002 - 2011	ABS/TCS	●	●	●	●	0x0008 0x000B 0x000B
S. A. Fiesta	1.6L	FFV	2002 - 2011	IC	●	●	●	●	○
S. A. Fiesta	1.6L	FFV	2002 - 2011	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x012E
S. A. Fiesta	1.6L	FFV	2002 - 2011	RCM	●	●	●	●	○
S. A. Fiesta	1.6L	FFV	2002 - 2011	RKE	●	●	●	●	0x000A
S. A. Fiesta	1.6L	FFV	2011	TBM	●	●	●	○	○
S. A. Fiesta	1.6L	Zetec Rocam	2002 - 2009	ABS/TCS	●	●	●	●	0x0008
S. A. Fiesta	1.6L	Zetec Rocam	2002 - 2009	IC	●	●	●	●	○
S. A. Fiesta	1.6L	Zetec Rocam	2002 - 2009	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
S. A. Fiesta	1.6L	Zetec Rocam	2002 - 2009	RCM	●	●	●	●	○
S. A. Fiesta	1.6L	Zetec Rocam	2002 - 2009	RKE	●	●	●	●	0x000A
Street Ka	1.6L	DURATEC 8V	2003	ABS/TCS	●	●	●	●	○
Street Ka	1.6L	DURATEC 8V	2003	CSM	●	●	●	●	○
Street Ka	1.6L	DURATEC 8V	2003	ECS	●	●	○	○	○
Street Ka	1.6L	DURATEC 8V	2003	GEM	●	●	●	●	○
Street Ka	1.6L	DURATEC 8V	2003	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Transit	2.2L	Duratorq Turbo Diesel Common Rail Injection	2014	APIM	●	●	●	●	○
Transit	2.2L	Duratorq Turbo Diesel Common Rail Injection	2014	AWD#1	●	●	●	●	○
Transit	2.2L	Duratorq Turbo Diesel Common Rail Injection	2014	CCMii	●	●	●	●	○
Transit	2.2L	Duratorq Turbo Diesel Common Rail Injection	2014	FCIM	●	●	●	●	○
Transit	2.2L	Duratorq Turbo Diesel Common Rail Injection	2014	HCM	●	●	●	○	○
Transit	2.2L	Duratorq Turbo Diesel Common Rail Injection	2014	PAM	●	●	●	○	○
Transit	2.2L	Duratorq Turbo Diesel Common Rail Injection	2014	SASM	●	●	●	○	○
Transit	2.2L	Duratorq Turbo Diesel Common Rail Injection	2014	TRM	●	●	●	●	○
Transit	2.2L	Duratorq Turbo Diesel Common Rail Injection	2014	APIM	●	●	●	●	○
Transit	2.2L	Duratorq Turbo Diesel Common Rail Injection	2014	AWD#1	●	●	●	●	○
Transit	2.2L	Duratorq Turbo Diesel Common Rail Injection	2014	CCMii	●	●	●	●	○
Transit	2.2L	Duratorq Turbo Diesel Common Rail Injection	2014	FCIM	●	●	●	●	○
Transit	2.2L	Duratorq Turbo Diesel Common Rail Injection	2014	HCM	●	●	●	○	○
Transit	2.2L	Duratorq Turbo Diesel Common Rail Injection	2014	PAM	●	●	●	○	○
Transit	2.2L	Duratorq Turbo Diesel Common Rail Injection	2014	SASM	●	●	●	○	○
Transit	2.2L	Duratorq Turbo Diesel Common Rail Injection	2014	TRM	●	●	●	●	○
Transit	2.2L	TDCi_StgVI	2014	APIM	●	●	●	●	○
Transit	2.2L	TDCi_StgVI	2014	AWD#1	●	●	●	●	○
Transit	2.2L	TDCi_StgVI	2014	CCMii	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Transit	2.2L	TDCi_StgVI	2014	FCIM	●	●	●	●	○
Transit	2.2L	TDCi_StgVI	2014	HCM	●	●	●	○	○
Transit	2.2L	TDCi_StgVI	2014	PAM	●	●	●	○	○
Transit	2.2L	TDCi_StgVI	2014	SASM	●	●	●	○	○
Transit	2.2L	TDCi_StgVI	2014	TRM	●	●	●	●	○
Transit	3.2L	Duratorq Turbo Diesel Common Rail Injection	2014	TCM	●	●	●	●	○
Transit Connect	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2014	AHCM	●	●	●	○	○
Transit Connect	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2014	APIM	●	●	●	●	○
Transit Connect	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2014	BCMii	●	●	●	●	○
Transit Connect	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2014	DDM	●	●	●	○	○
Transit Connect	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2014	GPSM	●	●	●	○	○
Transit Connect	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2014	HCM	●	●	●	○	○
Transit Connect	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2014	HVAC	●	●	●	○	○
Transit Connect	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2014	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Transit Connect	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2014	PDM	●	●	●	○	○
Transit Connect	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2014	TRM	●	●	●	●	○
Transit Connect	1.6L	Duratorq Turbo Diesel Common Rail Injection	2014	AHCM	●	●	●	○	○
Transit Connect	1.6L	Duratorq Turbo Diesel Common Rail Injection	2014	APIM	●	●	●	●	○
Transit Connect	1.6L	Duratorq Turbo Diesel Common Rail Injection	2014	BCMii	●	●	●	●	○
Transit Connect	1.6L	Duratorq Turbo Diesel Common Rail Injection	2014	DDM	●	●	●	○	○
Transit Connect	1.6L	Duratorq Turbo Diesel Common Rail Injection	2014	GPSM	●	●	●	○	○
Transit Connect	1.6L	Duratorq Turbo Diesel Common Rail Injection	2014	HCM	●	●	●	○	○
Transit Connect	1.6L	Duratorq Turbo Diesel Common Rail Injection	2014	HVAC	●	●	●	○	○
Transit Connect	1.6L	Duratorq Turbo Diesel Common Rail Injection	2014	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Transit Connect	1.6L	Duratorq Turbo Diesel Common Rail Injection	2014	PDM	●	●	●	○	○
Transit Connect	1.6L	Duratorq Turbo Diesel Common Rail Injection	2014	TRM	●	●	●	●	○
Transit Connect	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2014	AHCM	●	●	●	○	○
Transit Connect	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2014	APIM	●	●	●	●	○
Transit Connect	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2014	BCMii	●	●	●	●	○
Transit Connect	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2014	DDM	●	●	●	○	○
Transit Connect	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2014	GPSM	●	●	●	○	○
Transit Connect	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2014	HCM	●	●	●	○	○
Transit Connect	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2014	HVAC	●	●	●	○	○
Transit Connect	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2014	PDM	●	●	●	○	○
Transit Connect	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2014	TRM	●	●	●	●	○
Transit Connect	1.6L	TDCi ECO III	2014	AHCM	●	●	●	○	○
Transit Connect	1.6L	TDCi ECO III	2014	APIM	●	●	●	●	○
Transit Connect	1.6L	TDCi ECO III	2014	BCMii	●	●	●	●	○
Transit Connect	1.6L	TDCi ECO III	2014	DDM	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Transit Connect	1.6L	TDCi ECO III	2014	GPSM	●	●	●	○	○
Transit Connect	1.6L	TDCi ECO III	2014	HCM	●	●	●	○	○
Transit Connect	1.6L	TDCi ECO III	2014	HVAC	●	●	●	○	○
Transit Connect	1.6L	TDCi ECO III	2014	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083
Transit Connect	1.6L	TDCi ECO III	2014	PDM	●	●	●	○	○
Transit Connect	1.6L	TDCi ECO III	2014	TRM	●	●	●	●	○
Transit Connect	2.0L	2.0 DOHC SFI (8V)	1995 - 1997	PATS	●	●	●	●	○
Transit Connect	2.0L	2.0 DOHC SFI (8V)	1995 - 1999	ABS	●	●	●	●	○
Transit Connect	2.0L	2.0 DOHC SFI (8V)	1995 - 1999	ABS/TCS	●	●	●	●	○
Transit Connect	2.0L	2.0 DOHC SFI (8V)	1995 - 1999	CSM	●	●	●	●	○
Transit Connect	2.0L	2.0 DOHC SFI (8V)	1995 - 1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0083
Transit Connect	2.0L	2.0 DOHC SFI (8V)	1999	AFCM	●	●	●	●	○
Transit Connect	2.0L	DURATEC-HE / I4	2010 - 2012	ABS	●	●	●	●	○
Transit Connect	2.0L	DURATEC-HE / I4	2010 - 2012	ACM	●	●	●	●	○
Transit Connect	2.0L	DURATEC-HE / I4	2010 - 2012	GEM /	●	●	●	●	○
Transit Connect	2.0L	DURATEC-HE / I4	2010 - 2012	IC	●	●	●	●	○
Transit Connect	2.0L	DURATEC-HE / I4	2010 - 2012	OCSM	●	●	●	●	0x000C
Transit Connect	2.0L	DURATEC-HE / I4	2010 - 2012	PAM	●	●	●	●	○
Transit Connect	2.0L	DURATEC-HE / I4	2010 - 2012	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x0023
Transit Connect	2.0L	DURATEC-HE / I4	2010 - 2012	RCM	●	●	●	●	○
Transit Connect	2.0L	DURATEC-HE / I4	2010 - 2012	SRM	●	●	●	○	○
Transit Connect	2.0L	DURATEC-HE / I4	2010 - 2012	VSM	●	●	●	●	○
Transit Connect	2.0L	DURATEC-HE / I4	2012	APIM	●	●	●	●	○
Transit Connect	2.0L	DURATORQ_DI	2001	ABS/TCS	●	●	●	●	0x0008
Transit Connect	2.0L	DURATORQ_DI	2001	CSM	●	●	●	●	○
Transit Connect	2.0L	DURATORQ_DI	2001	EPB	●	●	●	●	○
Transit Connect	2.0L	DURATORQ_DI	2001	FFH	●	●	●	●	○
Transit Connect	2.0L	DURATORQ_DI	2001	FIP	●	●	●	●	○
Transit Connect	2.0L	DURATORQ_DI	2001	HEC	●	●	●	●	○
Transit Connect	2.0L	DURATORQ_DI	2001	PAM	●	●	●	●	○
Transit Connect	2.0L	DURATORQ_DI	2001	PATS	●	●	●	●	○
Transit Connect	2.0L	DURATORQ_DI	2001	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Transit Connect	2.0L	DURATORQ_DI	2001	RASM	●	●	●	●	○
Transit Connect	2.0L	DURATORQ_DI	2001	RCM	●	●	●	●	○
Transit Connect	2.0L	DURATORQ_DI	2001	TCM	●	●	●	●	○
Transit Connect	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	ABS/TCS	●	●	●	●	○
Transit Connect	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	CSM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Transit Connect	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	FFH	●	●	●	●	○
Transit Connect	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	FIP	●	●	●	●	○
Transit Connect	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	HEC	●	●	●	●	○
Transit Connect	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	ICU	○	○	●	○	○
Transit Connect	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	PAM	●	●	●	●	○
Transit Connect	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0092
Transit Connect	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	RASM	●	●	●	●	○
Transit Connect	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	RCM	●	●	●	●	○
Transit Connect	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	TCM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ABS	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ABS/TCS	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ACM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	BCMii	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	CSM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	FFH	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	IPC	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	PAM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	RCM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	SRM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Inj Stage V	2006	ABS	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Inj Stage V	2006	ABS/TCS	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Inj Stage V	2006	ACM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Inj Stage V	2006	BCMii	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Inj Stage V	2006	CSM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Inj Stage V	2006	FFH	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Inj Stage V	2006	IPC	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Inj Stage V	2006	PAM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Inj Stage V	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Inj Stage V	2006	RCM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Inj Stage V	2006	SRM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ABS	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ABS/TCS	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ACM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	BCMii	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	CSM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	FFH	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	IPC	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	PAM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Transit Connect	2. 2L	Duratorq_Turbo_Diesel_Common_Rail_Injection	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Transit Connect	2. 2L	Duratorq_Turbo_Diesel_Common_Rail_Injection	2006	RCM	●	●	●	●	○
Transit Connect	2. 2L	Duratorq_Turbo_Diesel_Common_Rail_Injection	2006	SRM	●	●	●	●	○
Transit Connect	2. 3L	DOHC SFI (16V)	2001	ABS/TCS	●	●	●	●	0x0008
Transit Connect	2. 3L	DOHC SFI (16V)	2001	CSM	●	●	●	●	○
Transit Connect	2. 3L	DOHC SFI (16V)	2001	HEC	●	●	●	●	○
Transit Connect	2. 3L	DOHC SFI (16V)	2001	PAM	●	●	●	●	○
Transit Connect	2. 3L	DOHC SFI (16V)	2001	PATS	●	●	●	●	○
Transit Connect	2. 3L	DOHC SFI (16V)	2001	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Transit Connect	2. 3L	DOHC SFI (16V)	2001	RASM	●	●	●	●	○
Transit Connect	2. 3L	DOHC SFI (16V)	2001	RCM	●	●	●	●	○
Transit Connect	2. 3L	DURATEC-HE / I4	2006	ABS	●	●	●	●	0x0053 0x00DD 0x00E3 0x00E4 0x00E8 0x011F 0x0135 0x0135
Transit Connect	2. 3L	DURATEC-HE / I4	2006	ABS/TCS	●	●	●	●	○
Transit Connect	2. 3L	DURATEC-HE / I4	2006	ACM	●	●	●	●	○
Transit Connect	2. 3L	DURATEC-HE / I4	2006	BCMii	●	●	●	●	0x0009 0x011C
Transit Connect	2. 3L	DURATEC-HE / I4	2006	CSM	●	●	●	●	○
Transit Connect	2. 3L	DURATEC-HE / I4	2006	FFH	●	●	●	●	○
Transit Connect	2. 3L	DURATEC-HE / I4	2006	IPC	●	●	●	●	○
Transit Connect	2. 3L	DURATEC-HE / I4	2006	PAM	●	●	●	●	○
Transit Connect	2. 3L	DURATEC-HE / I4	2006	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083
Transit Connect	2. 3L	DURATEC-HE / I4	2006	RCM	●	●	●	●	○
Transit Connect	2. 3L	DURATEC-HE / I4	2006	SRM	●	●	●	●	○
Transit Connect	2. 4L	DURATORQ_DI	2000	ABS/TCS	●	●	●	●	0x0008
Transit Connect	2. 4L	DURATORQ_DI	2000	CSM	●	●	●	●	○
Transit Connect	2. 4L	DURATORQ_DI	2000	EPB	●	●	●	●	○
Transit Connect	2. 4L	DURATORQ_DI	2000	FFH	●	●	●	●	○
Transit Connect	2. 4L	DURATORQ_DI	2000	FIP	●	●	●	●	○
Transit Connect	2. 4L	DURATORQ_DI	2000	HEC	●	●	●	●	○
Transit Connect	2. 4L	DURATORQ_DI	2000	PAM	●	●	●	●	○
Transit Connect	2. 4L	DURATORQ_DI	2000	PATS	●	●	●	●	○
Transit Connect	2. 4L	DURATORQ_DI	2000	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Transit Connect	2. 4L	DURATORQ_DI	2000	RASM	●	●	●	●	○
Transit Connect	2. 4L	DURATORQ_DI	2000	RCM	●	●	●	●	○
Transit Connect	2. 4L	DURATORQ_DI	2000	TCM	●	●	●	●	○
Transit Connect	2. 4L	Duratorq Turbo Diesel Common Rail Injection	2000	HEC	●	●	●	●	○
Transit Connect	2. 4L	Duratorq Turbo Diesel Common Rail Injection	2000	ICU	○	○	●	○	○
Transit Connect	2. 4L	Duratorq Turbo Diesel Common Rail Injection	2000 - 2006	ABS/TCS	●	●	●	●	0x0008

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2000 - 2006	CSM	●	●	●	●	○
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2000 - 2006	FFH	●	●	●	●	○
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2000 - 2006	PAM	●	●	●	●	○
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2000 - 2006	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0092
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2000 - 2006	RCM	●	●	●	●	○
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2006	ABS	●	●	●	●	○
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2006	ACM	●	●	●	●	○
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2006	BCMii	●	●	●	●	○
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2006	IPC	●	●	●	●	○
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2006	SRM	●	●	●	●	○
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2006	TBM	●	●	●	●	○
Transit Connect	2.5L	2.5 turbo diesel engines with EPIC	Other	ABS	●	●	●	●	○
Transit Connect	2.5L	2.5 turbo diesel engines with EPIC	Other	ABS/TCS	●	●	●	●	○
Transit Connect	2.5L	2.5 turbo diesel engines with EPIC	Other	CSM	●	●	●	●	○
Transit Connect	2.5L	2.5 turbo diesel engines with EPIC	Other	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x0083
Transit Connect	2.5L	IVCT	2014	DDM	●	●	●	●	○
Transit Connect	2.5L	IVCT	2014	FCIM	●	●	●	●	○
Transit Connect	2.5L	IVCT	2014	GPSM	●	●	●	○	○
Transit Connect	2.5L	IVCT	2014	HCM	●	●	●	●	○
Transit Connect	2.5L	IVCT	2014	HVAC	●	●	●	●	○
Transit Connect	2.5L	IVCT	2014	OCSM	●	●	●	●	○
Transit Connect	2.5L	IVCT	2014	PAM	●	●	○	○	○
Transit Connect	2.5L	IVCT	2014	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Transit Connect	2.5L	IVCT	2014	PDM	●	●	●	●	○
Transit Connect	2.5L	IVCT	2014	PSCM	●	●	●	●	○
Transit Connect	2.5L	IVCT	2014	TRM	●	●	●	●	○
Transit Connect	28kWh	Battery_Electric_Vehicle	2011	SRM	●	●	●	○	○
Transit Connect	28kWh	Battery_Electric_Vehicle	2011 - 2013	ABS	●	●	●	●	○
Transit Connect	28kWh	Battery_Electric_Vehicle	2011 - 2013	ACCM#2	●	●	●	●	○
Transit Connect	28kWh	Battery_Electric_Vehicle	2011 - 2013	ACM	●	●	●	●	○
Transit Connect	28kWh	Battery_Electric_Vehicle	2011 - 2013	GEM /	●	●	●	●	○
Transit Connect	28kWh	Battery_Electric_Vehicle	2011 - 2013	IC	●	●	●	●	○
Transit Connect	28kWh	Battery_Electric_Vehicle	2011 - 2013	OCSM	●	●	●	●	0x000C
Transit Connect	28kWh	Battery_Electric_Vehicle	2011 - 2013	PAM	●	●	●	●	○
Transit Connect	28kWh	Battery_Electric_Vehicle	2011 - 2013	PSCM	●	●	●	○	○
Transit Connect	28kWh	Battery_Electric_Vehicle	2011 - 2013	RCM	●	●	●	○	○
Transit Connect	28kWh	Battery_Electric_Vehicle	2011 - 2013	VSM	●	●	●	●	○
Transit Connect	28kWh	Battery_Electric_Vehicle	2013	APIM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ABS	●	●	●	●	0x00E4 0x00E8 0x011F 0x0135 0x0135
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ABS/TCS	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ACM	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	BCMii	●	●	●	●	0x0009 0x011C
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	CSM	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	FFH	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	IPC	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	PAM	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x00A6 0x00A7 0x00A8 0x00A9 0x00B0 0x00B1 0x00B5 0x00B6 0x00C0 0x00C1 0x00C2 0x00C4
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	RCM	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	SRM	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ABS	●	●	●	●	0x0053 0x00DD 0x00E3 0x00E4
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ABS/TCS	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ACM	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	BCMii	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	CSM	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	FFH	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	IPC	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	PAM	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	RCM	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	SRM	●	●	●	●	○
Transit Connect	Other	Other	2013	ABS	●	●	●	●	○
Transit Connect	Other	Other	2013	ACM	●	●	●	●	○
Transit Connect	Other	Other	2013	APIM	●	●	●	●	○
Transit Connect	Other	Other	2013	GEM /	●	●	●	●	○
Transit Connect	Other	Other	2013	IC	●	●	●	●	○
Transit Connect	Other	Other	2013	OCSM	●	●	●	●	○
Transit Connect	Other	Other	2013	PAM	●	●	●	●	○
Transit Connect	Other	Other	2013	RCM	●	●	●	○	○
Transit Connect	Other	Other	2013	VSM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002	HEC	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002	ICU	○	○	●	○	○
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	ABS/TCS	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	CSM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	ECS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2009	FFH	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2009	PAM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2009	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0009 0x0092 0x0092 0x006F 0x0090 0x0098 0x0099 0x00AB 0x00AC 0x00B4 0x00C1
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2009	ABS	●	●	●	●	0x00E8
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2009	ACM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2009	IC	●	●	●	●	0x0009
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2009	SRM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2009	GEM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2009	RCM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Endura DI	2002	ABS/TCS	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Endura DI	2002	CSM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Endura DI	2002	ECS	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Endura DI	2002	FFH	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Endura DI	2002	FIP	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Endura DI	2002	HEC	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Endura DI	2002	PAM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Endura DI	2002	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Transit Connect / Tourneo Connect	1.8L	Zetec	2002	ABS/TCS	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Zetec	2002	AFCM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Zetec	2002	CSM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Zetec	2002	ECS	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Zetec	2002	FFH	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Zetec	2002	HEC	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Zetec	2002	PAM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Zetec	2002	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Windstar	3.0L	V6 OHV	1995 - 1998	GEM	●	●	●	●	○
Windstar	3.0L	V6 OHV	1995 - 1999	ABS/TCS	●	●	●	●	0x0008
Windstar	3.0L	V6 OHV	1995 - 1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033
Windstar	3.0L	V6 OHV	1996 - 1998	IAB	●	●	●	●	○
Windstar	3.0L	V6 OHV	1996 - 1998	PATS	●	●	●	●	○
Windstar	3.0L	V6 OHV	1998	RAP	●	●	●	●	0x000A
Windstar	3.0L	V6 OHV	1999	DDM	●	●	●	●	0x000A
Windstar	3.0L	V6 OHV	1999	FEM	●	●	●	●	○
Windstar	3.0L	V6 OHV	1999	IC	●	●	●	●	0x0009
Windstar	3.0L	V6 OHV	1999	MC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Windstar	3.0L	V6 OHV	1999	NGSC	●	●	●	●	○
Windstar	3.0L	V6 OHV	1999	PAM	●	●	●	●	○
Windstar	3.0L	V6 OHV	1999	RCM	●	●	●	●	○
Windstar	3.0L	V6 OHV	1999	REM	●	●	●	●	○
Windstar	3.8L	V6 OHV	1995 - 1998	GEM	●	●	●	●	○
Windstar	3.8L	V6 OHV	1995 - 2003	ABS/TCS	●	●	●	●	0x0008 0x0005 0x0012
Windstar	3.8L	V6 OHV	1995 - 2003	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0009
Windstar	3.8L	V6 OHV	1996 - 1998	IAB	●	●	●	●	○
Windstar	3.8L	V6 OHV	1996 - 1998	PATS	●	●	●	●	○
Windstar	3.8L	V6 OHV	1998	RAP	●	●	●	●	0x000A
Windstar	3.8L	V6 OHV	1999 - 2003	DDM	●	●	●	●	0x000A 0x0005
Windstar	3.8L	V6 OHV	1999 - 2003	FEM	●	●	●	●	0x0005
Windstar	3.8L	V6 OHV	1999 - 2003	IC	●	●	●	●	0x0009
Windstar	3.8L	V6 OHV	1999 - 2003	LPSDM	●	●	●	●	○
Windstar	3.8L	V6 OHV	1999 - 2003	MC	●	●	●	●	○
Windstar	3.8L	V6 OHV	1999 - 2003	NGSC	●	●	●	●	○
Windstar	3.8L	V6 OHV	1999 - 2003	PAM	●	●	●	●	○
Windstar	3.8L	V6 OHV	1999 - 2003	RCM	●	●	●	●	0x000C
Windstar	3.8L	V6 OHV	1999 - 2003	REM	●	●	●	●	0x000F
Windstar	3.8L	V6 OHV	1999 - 2003	RPSDM	●	●	●	●	○
Windstar	3.8L	V6 OHV	2000 - 2003	DSM	●	●	●	●	○

Special Function

Index	Specil Function Name	Index	Specil Function Name
0005	Programmable Module Installation	0006	Module Reprogramming
0007	Programmable Parameters	0008	ABS Service Bleed
0009	PATS Functions	000A	Remote Keyless Entry
000B	G Sensor Calibration	000C	Passenger System Reset
000D	Neutral Position Setting	000E	Ride Height Calibration
000F	Factory Keyless Entry Code	0010	Stop Use of Transmission Adaptive
0011	Power Seat Calibration	0012	IVD Initialization Sequence
0013	Pneumatic Test	0014	Accurate Trim Test
0015	Passenger Zero Seat Weight Test	0016	Microphone Test
0017	Audio Speaker Walkaround Test	0018	Infotainment Display Test
0019	Tones Test	001A	TPMS Functions
001B	Zero Speed Test	001C	Rear Tones Test
001D	Monotones Test	001E	Sensor Initialization
001F	EPB calibration.	0020	EATC Operation Check
0021	Rain Sensor Reset	0022	LPSDM and RPSDM Service Function
0023	Power Balance	0024	EVAP Test
0025	Reset PCM KAM	0026	OBDII Modes
0027	Clear Transmission Adaptive Learning	0028	Clear Transmission Adaptive Tables
0029	Configure All Three Sensors Together.	002A	Configure Both the Yaw Rate Sensor and the Lateral Acceleration Sensors.
002B	Configure the lateral acceleration sensor.	002C	Configure the pressure sensor.
002D	FFH SelfTest and Prefill Utility	002E	FFH Start Heater Utility
002F	FFH Unlock Utility	0030	Auxiliary vehicle ID reset
0031	Halt Transmission Adaptive Learning	0032	Headlamp Alignment
0033	Resume Transmission Adaptive Learning	0034	Resume Transmission Adaptive Tables
0035	Keyfob Training	0036	Transmission
0037	Transmission Learning	0038	Transmission Solenoid Body IDN
0039	VSM Service Functions	003A	A/C Test
003B	ACM	003C	ACM Security Bypass Test
003D	Air/Fuel Learning	003E	AM Antenna Reception Sensitivity Test
003F	ASM Service Functions	0040	audio configuration
0041	Auto Leveling Sensor Re-zero Procedure	0042	Tire Pressure Monitoring System
0043	BSM Radar Test	0044	Button Test
0045	CAN Bus Fault Test	0046	CCM Calibration
0047	Clear EGR Adaptive Tables	0048	Clear Fuel Injector&HP Pump Adaptive Table
0050	Clearing of Learning Value	0051	Component/Parameter Reset
0053	Configure the steering angle sensor	0054	Configure the yaw rate sensor
0055	DATA Reset	0056	DPF
0057	DPF Component Parameter	0058	DPF Manual Regeneration
0059	DPF Parameter Reset	005A	Electronic Throttle Control
005B	EPS Steering Angle Calibration	005C	ETB/EGR Initialization
005D	FACM	005E	FFH Operation Check
005F	Gauge Test	0060	ICCM Aiming Adjustment
0061	Illumination Test	0062	Input and Data Test
0063	Interior Scan Test	0064	Keyless Entry Keypad Code Reset
0065	Learning	0066	Misfire Check
0067	Misfire Monitor Neutral Profile Correction	0068	Module Identification
0069	Multifunction Output Test	006A	Network Test
006B	New FACM	006C	Parking Aid Switch Test
006D	Passenger Seat Weight Sensor ReZero	006E	Rebalance
006F	Reset the Knock Sensor Learned Values	0070	Reset Transmission Tables
0071	Resetting adaptive values	0072	RVM Aiming
0074	Service Routine	0075	Specil Ignition ON
0076	Steering angle sensor calibration	0077	Supplemental Heater test

Index	Specil Function Name	Index	Specil Function Name
0080	Mode 1 Powertrain Data	0081	Mode 6 On-Board Test Results
0082	Mode 8 - On-Board device control	0083	Mode 9 - Vehicle Information
0084	OBD Drive Cycle	0090	Diesel Particulate Filter Static Regeneration
0091	DPF Regeneration Suspension	0092	Fuel Injector Correction Factors
0093	IQA	0094	Refill the FAT.
0095	Relearn Vehicle Data	0096	Reset Charge Air Cooler Bypass Valve Position Offset.
0097	Reset the Cooling Fan Motor Learned Values	0098	Reset the Diesel Particulate Filter Learned Values
0099	Reset the Exhaust Gas Recirculation Valve Learned Values	009A	Reset the Intake Air Throttle Valve Learned Values
009B	Reset / Clear Specified Function	009C	SCR Dosing Measurement Test
009D	SCR Parameter Reset	009E	SCR System Emptying
009F	SCR System Refill Activation	00A0	SCR Visual Leak Check
00A1	System Prime	00A2	WIF Reset
00A3	DPF Reset	00A4	Enter the Fuel Injector Default Count Value
00A5	Clutch Switch Learn	00A6	Engine Oil Quality History
00A7	Fuel Injection Pump Learn	00A8	Fuel Injector Pilot Correction Learn
00A9	Fuel System Leak Test	00AA	Initialize the Exhaust Gas Related Component.
00AB	Reset Differential Pressure Sensor Learned	00AC	Reset KAM
00AD	Reset MAF Sensor Drift.	00AE	Reset MAF Sensor Offset.
00AF	Reset the air conditioning compressor learned values.	00B0	Reset the Diesel Particulate Filter Differential Pressure Sensor Learned Values
00B1	Reset the Exhaust Gas Temperature Value	00B2	Reset the Fuel Injection Pump Learned Values
00B3	Reset the Fuel Injector Learned Values	00B4	Reset the Fuel Metering Valve Learned Values
00B5	Reset the Fuel Pressure Relief Valve Open Count Learned Value	00B6	Reset the Fuel Pressure Relief Valve Open Duration Learned Value
00B7	Reset the Fuel Rail Pressure Sensor Learned	00B8	Reset the Heated Exhaust Gas Oxygen Sensor Learned
00B9	Reset the Mass Air Flow Sensor Learned Values	00BA	Reset the Neutral Gear Position Learned Value
00BB	Reset the oil change indicator.	00BC	Reset the Powertrain Control Module Learned Values
00BD	Reset the Turbocharger Learned Values.	00BE	Reset the Turbocharger Variable Vane Actuator Learned
00BF	Reset the Turbocharger Variable Vane Position Sensor Learned Values	00C0	Reset the Vehicle Speed Limit
00C1	Reset the water in fuel Warning Indicator.	00C2	rpm Controller
00C3	Stop-Start Activation	00C4	Speed Limiting
00C5	TR sensor	00C6	Transmission Fluid Level Test
00C7	Automatic Transmission PRNDL Display Test	00C8	BSI Solenoid Test
00C9	Automatic Transmission Park Switch Test	00CA	ABS reset and configuration.
00CB	PDC Reset	00CC	Steering Wheel Position Sensor Calibration
00CD	Preliminary Checks	00CE	Reset TCM KAM
00CF	Fuel System Prime	00D0	Remote Start
00D1	TBM SIM RAV_ID	00D2	Reset TBM Password
00D3	TBM Transit Mode	00D4	CEI Lock Configuration
00D5	BMS Reset	00D6	Navigation
00D7	Calibrate Steering Angle Sensor	00D8	Configure the steering column assembly.
00D9	Configure the longitudinal acceleration sensor.	00DA	Configure the intermediate shaft.
00DB	Module Initialization	00DC	Pull Drift Compensation
00DD	Calibrate Longitudinal Acceleration Sensor	00DE	Inhibit longitudinal accelerometer monitoring
00DF	Pull Drift Compensation enable/disable	00E0	Straight Ahead Adaption Angle Reset
00E1	Steering Rack Limiter Configuration	00E2	Pressure Sensor Calibration
00E3	Reset Pressure Sensor Offset	00E4	Enable/Disable hill launch assist .
00E5	Camera Alignment	00E6	Shift fork system learn.
00E7	Reset the High Pressure Fuel System Learned	00E8	BleedMASTER
00E9	FCDIM Keycode Reset	00EA	Beltminder Enable/Disable
00EB	TPMS reset.	00EC	TPMS reset after ABS module replacement
00ED	Show GEM configuration	00EE	EPB
00EF	Clear crash data memory.	00F0	Passenger Airbag Deactivation Switch
00F1	Component checks	00F2	Driver's Seat Module
00F3	Assembly Check	00F4	Inclination Sensor Calibration
00F5	Maintenance mode	00F6	Static Apply

Index	Specil Function Name	Index	Specil Function Name
00F7	Clear stored clutch engagement point	00F8	Module Configuration
00F9	CCMii Sensor Alignment	00FA	Track Key Configuration
00FB	Driver Window Motor Test.	00FC	Passenger Window Motor Test
00FD	Clear Self-learning Data	00FE	RVC Configuration
0100	Disable GDM VIN	0101	WMM Calibration
0102	RCM	0103	Cooling Fan Test
0104	IAC System Test	0105	VCT System Test
0107	MAF Sensor / TP Sensor Dynamic Test	0108	ATC Barcode Entry
0109	ISM Configuration	010A	Valve Calibration
010B	TP Sweep Test	010C	ICP Sensor Test
010D	Oil Aeration Test	010E	Exhaust System Test
010F	MAF Sensor Contamination Test	0110	EGR System Flow Test
0111	Neutral Tow Function	0112	LIN New Module Initialization
0113	Tachometer	0114	Camshaft Position Reference Adaption Learn
0115	Powertrain Control Module Central Car Configuration Update	0116	Powertrain Control Module (PCM) One Touch Start Configuration
0117	TCM Adaptive Learning	0118	On-demand lock test routine
0119	Rear Brake Adjustment	011A	ACM Configuration
011B	BCMii	011C	Car Mod
011D	SPRM Configuration	011E	EPAS Configuration
011F	Learn the vehicle variant and VIN data	0120	Burglar Service Functions
0121	The removal and installation of the selector lever or the selector lever cable.	0122	Transmission fluid drain and refill.
0123	The installation of a new TCM.	0124	The installation of a new automatic transmission with a new TCM.
0125	The installation of a new automatic transmission with the original TCM.	0126	Reset the Transmission Control Module Learned Values
0127	Reset the Transmission Oil learned Values	0128	Transmission Range Sensor Learn
0129	Read the ECU serial number.	012A	RCM Calibration
012B	Reset maintenance lamp	012C	Special Ignition ON
012D	IC Service Functions	012E	A/F (Fuel Ratio)
012F	Reset Expansion ID	0130	Reset security ID
0131	Lockout Mode Reset	0132	Sensor Learn Routine
0133	Ambient Air Temp Sensor Configuration	0134	Touchscreen
0135	Variant and VIN Data Learning Procedure	0136	Neutral Position Learning
0137	Clear Grade Sensor Learning Value	0138	Clear Oil Pressure Sensor Learning Value
0139	Grade Sensor Learning	013A	Oil Pressure Sensor Learning
013B	Fuel System Vaporizer Prime	0201	Mazda Vehicle Check-up
0202	Spark Duration PIDs	0203	Windshield Wiper Test
0204	Rear Window Wiper Test	0205	Cooling System Degas
F001	Audio	F002	Battery saver
F003	Body Type	F004	Courtesy Lamp
F005	Door Trigger Disable Mode	F006	Body and Fuel Type
F007	Hazard Warning	F008	Horn Warning
F009	Master Door Trigger Disable Mode	F00A	Panic Alarm
F00B	Police Mode	F00C	Traction control system
F00D	Autolamp Off Setting	F00E	Autolamp On Setting
F00F	Police Speedometer Offset	F010	Cabin Temperature Sensor Calibration Factor
F011	Taxi Mode	F012	Low Coolant Warning
F013	Parking Brake Warning	F014	Headlamp Delay Door Open
F015	Headlamp Delay Ignition Off	F016	Headlamp Delay Remote Lock Pressed
F017	Dynamic Stability Control	F018	Hill Descent Control LED
F019	Brake System Configuration	F01A	BPM fitted
F01B	Camera fitted	F01C	Audio Interface Module
F01D	Sonar fitted	F01E	Navigation System
F01F	Parking Aid Module	F020	Odometer Write
F021	Subwoofer	F022	Driver Beltminder Status
F023	Alarm	F024	Audio Configure

Index	Specil Function Name	Index	Specil Function Name
F025	Autolocking While The Vehicle Is Moving	F026	Module Reset
F027	BeltMinder	F028	Electrical Auxiliary Heater Chimes
F029	Power Steering Status	F02A	Repeat flasher
F02B	Autolock/Relock Configuration Status	F02C	Autolocking Customer setting
F02D	Double Locking With REMOTE	F02E	Power Lock Configuration
F02F	Single Door Unlocking Using The REMOTE	F030	Tailgate Release REMOTE Button
F031	PAD Switch	F032	Speed Control
F033	Ambient Temperature Sensor Conformation	F034	Heated Screen(s) active during warm up
F035	Power Sunroof Or Taxi Meter Fitted	F036	Deflation Detection System
F037	Baseplate	F038	Select seat trim type.
F039	Select Vehicle Type	F03A	Repeat flasher
F03B	Internal Remote Receiver	F03C	Lock confirmation flash
F03D	Alarm system	F03E	Wash Fluid Sensor
F03F	Select Engine Type	F040	Reverse Warning Chime
F041	Easy Entry / Exit	F042	Daytime Running Lamps
F043	Turn Signal Warning Chime	F044	Autolock
F045	Horn Chirp	F046	Tire Size (rev / mile)
F047	TBM Transit Mode	F048	Perimeter Lighting
F049	Stop and taillamp outage configuration	F04A	Overspeed Warning Indicator
F04B	Autolock Configuration Status	F04C	Auto unlock
F04D	Language	F04E	Headlight Battery Saver Timeout
F04F	Heated Backlight	F050	Front Foglamps
F051	Headlamp Type	F052	Button Press Chime
F053	Not in Park Chime	F054	Oil Life
F055	Parking Brake Chime	F056	Central Unlock via Key Cylinder
F057	Two Stage Unlocking	F058	Power Door Lock Inhibit
F059	Perimeter Alarm	F05A	Satellite Digital Audio Receiver System
F05B	Autolamp	F05C	Fog Lamp
F05D	Passenger Beltminder Status	F05E	Keypad Configure
F05F	Remote Panic	F060	Remote Keyless Entry
F061	Remote open/close signal	F062	Cellular Phone Module
F063	Radio Clock	F064	Divider Bar\$I
F065	Welcome illumination	F066	Battery saver function
F067	Speedometer Accuracy Bias	F068	Dark car
F069	Horn Chirp Configuration Status	F06A	Smart Unlock
F06B	Fuel Economy Display Mode	F06C	Power Adjustable Pedals
F06D	Power Seat Recline	F06E	Fuel Gallon Configuration
F06F	Power Mirrors	F070	High cool blower voltage
F071	Outside Air Temperature	F072	Oil Life Status and Warning
F073	Telephone	F074	Driver Seat Recline Memory Function
F075	Pedal Memory Function	F076	Screen Display-Brand
F077	Flex Fuel	F078	APIM
F079	Steering wheel control	F07A	Auxiliary Jack
F07B	SWC POD type	F07C	Two-way front speakers
F07D	Two-way rear speakers	F07E	Trailer Brake Control Module
F07F	Family Entertainment System	F080	Mirror Turn Signals
F081	Vehicle Door Configuration	F082	Fuel Tank Configuration
F083	Fuel Tank Size	F084	Rear Tire Size (Rev/Mile)
F085	Trim Switch Inhibit	F086	Fob panic activation
F087	Tilt-Telescope Steering Wheel	F088	Autolamp Delay Time
F089	Global Close	F08A	Global Open
F08B	Auto Lock	F08C	Security Horn Alarm
F08D	Illuminated Exit	F08E	ABS Tire Warning
F08F	Sliding Door Caution	F090	Smart Lock
F091	Horn	F092	Outside Air Temperature Display
F093	Answer Back Buzzer	F094	Automatic Locks
F095	Card Key Battery Low Warning	F096	Two(2) stage door unlocking by request switch.

Index	Specil Function Name	Index	Specil Function Name
F097	Two(2) stage door unlocking by transmitter.	F098	Auto relock timer (with AKE)
F099	(PCM) Oil Life Used	F09A	GCC vehicle
F09B	Accessory Protocol Interface Module	F09C	Tuner setting
F09D	Smart Rear Wipe	F09E	Drip Wipe
F09F	Safety Belt Warning	FOA0	Hazzard Warning Switch
FOA1	Global Closing With REMOTE	FOA2	Tailgate release available when ignition on
FOA3	Select the type of liftgate striker plate fitted	FOA4	Reset Alarm System Via Key
FOA5	One-touch-up window function fitted	FOA6	Auto high beam sensitivity
FOA7	Unlock sequence	FOA8	Daytime dimming rate setting
FOA9	Fuel logic	FOAA	Fuel Meter Response Setting
FOAB	Voice Recognition Module	FOAC	Door ajar
FOAD	Cargo Unlock Setting	FOAE	General Unlock Setting
FOAF	Rear Door Reverse Cycling	FOB0	Mirror Puddle Lamps
FOB1	RHT Buzzer		