

MaxiDAS_Nissan_V6.00 Function List (Note:For reference only)

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
 - ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
(TBD)L59	L59	ALL	ENGINE	●	●	●	○	●	●	001
(TBD)L59	L59	ALL	ABS	●	●	●	○	●	●	001
(TBD)L59	L59	ALL	METER	○	●	●	○	●	○	002
(TBD)L59	L59	ALL	BCM	○	●	●	○	●	●	001, 002
(TBD)L59	L59	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
(TBD)L59	L59	ALL	EPS	●	●	●	○	●	○	002
(TBD)L59	L59	ALL	IPDM_ER	○	●	●	○	●	●	002
*MURANO Camp:P8201	Z51	2009	AIRBAG	●	●	●	●	●	○	003, 005, 008
*MURANO Camp:P8201	Z51	2009	TRANSMISSION	●	●	●	○	●	●	001, 002
350Z	Z33	2002-2009	ABS	●	●	●	○	●	●	001
350Z	Z33	2002-2009	ACM	●	●	●	○	●	○	○
350Z	Z33	2002-2009	ACTIVE_SUS	●	●	●	●	●	●	001
350Z	Z33	2002-2009	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
350Z	Z33	2002-2009	AIRBAG	●	●	●	●	●	○	003, 005, 008
350Z	Z33	2002-2009	AIR_LEVELIZER	●	●	●	○	●	●	001
350Z	Z33	2002-2009	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
350Z	Z33	2002-2009	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
350Z	Z33	2002-2009	ASCD	○	●	●	○	●	○	○
350Z	Z33	2002-2009	AUTO_DRIVE_POS	●	●	●	○	●	●	001
350Z	Z33	2002-2009	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
350Z	Z33	2002-2009	BCM	●	●	●	○	●	●	001, 002
350Z	Z33	2002-2009	DIFF_LOCK	●	●	●	○	●	○	○
350Z	Z33	2002-2009	DISTANCE_CONTROL	●	●	●	○	●	○	○
350Z	Z33	2002-2009	DIU	●	●	●	○	●	○	○
350Z	Z33	2002-2009	ENGINE	●	●	●	※	●	●	001
350Z	Z33	2002-2009	EPS	●	●	●	○	●	○	002
350Z	Z33	2002-2009	E_4WD	●	●	●	○	●	●	002
350Z	Z33	2002-2009	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
350Z	Z33	2002-2009	HVAC	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
350Z	Z33	2002-2009	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
350Z	Z33	2002-2009	IPDM_ER	○	●	●	○	●	●	002
350Z	Z33	2002-2009	IVMS	●	●	●	○	●	○	○
350Z	Z33	2002-2009	LDW	●	●	●	○	●	●	001
350Z	Z33	2002-2009	METER	○	●	●	○	●	○	002
350Z	Z33	2002-2009	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
350Z	Z33	2002-2009	MOTOR_ASSIST	○	●	●	○	●	○	001
350Z	Z33	2002-2009	MULTI_AV	○	●	●	○	●	○	○
350Z	Z33	2002-2009	NATS_IMM	○	●	●	○	○	○	004, 006
350Z	Z33	2002-2009	RASHICAS	●	●	●	○	●	●	○
350Z	Z33	2002-2009	REARVIEW_CAMERA	●	○	○	○	●	○	001
350Z	Z33	2002-2009	S/BLIND_CAMERA	●	○	○	○	●	○	001
350Z	Z33	2002-2009	SMART_ENTRANCE	○	●	●	○	●	●	002
350Z	Z33	2002-2009	SONAR	●	●	●	○	●	●	○
350Z	Z33	2002-2009	TBDADAS_ICC	●	●	●	○	●	●	001, 002
350Z	Z33	2002-2009	TBDAVM	●	●	●	○	●	●	001
350Z	Z33	2002-2009	TCS	●	●	●	●	●	●	001
350Z	Z33	2002-2009	TRANSMISSION	●	●	●	○	●	○	001, 002
370Z	Z34	2008-2013	ABS	●	●	●	※	●	●	001
370Z	Z34	2008-2013	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
370Z	Z34	2008-2013	AIRBAG	●	●	●	●	●	○	003, 005, 008
370Z	Z34	2008-2013	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
370Z	Z34	2008-2013	AUTO_DRIVE_POS	●	●	●	○	●	●	001
370Z	Z34	2008-2013	BCM	※	●	●	○	●	●	001, 002
370Z	Z34	2008-2013	ENGINE	●	●	●	※	●	●	001
370Z	Z34	2008-2013	EPS	●	●	●	○	●	○	002
370Z	Z34	2008-2013	E_4WD	●	●	●	※	●	●	002
370Z	Z34	2008-2013	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
370Z	Z34	2008-2013	HVAC	●	●	●	○	●	●	001
370Z	Z34	2008-2013	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
370Z	Z34	2008-2013	IPDM_ER	○	●	●	○	●	●	002
370Z	Z34	2008-2013	METER	※	●	●	○	●	○	002
370Z	Z34	2008-2013	MULTI_AV	※	●	●	○	●	○	○
370Z	Z34	2008-2013	POP_UP_HOOD	●	●	●	○	●	○	008
370Z	Z34	2008-2013	REARVIEW_CAMERA	●	○	○	○	●	○	001
370Z	Z34	2008-2013	SBLIND_CAMERA	●	○	○	○	●	○	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
370Z	Z34	2008-2013	TRANSMISSION	●	●	●	※	●	※	001, 002
370Z Convertible	HZ34	2009-2013	ABS	●	●	●	※	●	●	001
370Z Convertible	HZ34	2009-2013	AIRBAG	●	●	●	●	●	○	003, 005, 008
370Z Convertible	HZ34	2009-2013	BCM	※	●	●	○	●	●	001, 002
370Z Convertible	HZ34	2009-2013	CONVERTIBLE_ROOF	●	●	●	○	●	●	001
370Z Convertible	HZ34	2009-2013	ENGINE	●	●	●	※	●	●	001
370Z Convertible	HZ34	2009-2013	E_SUS	●	●	●	○	●	●	001
370Z Convertible	HZ34	2009-2013	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
370Z Convertible	HZ34	2009-2013	HVAC	●	●	●	○	●	●	001
370Z Convertible	HZ34	2009-2013	IPDM_ER	○	●	●	○	●	●	002
370Z Convertible	HZ34	2009-2013	METER	※	●	●	○	●	○	002
370Z Convertible	HZ34	2009-2013	MULTI_AV	※	●	●	○	●	○	○
370Z Convertible	HZ34	2009-2013	POP_UP_HOOD	●	●	●	○	●	○	008
370Z Convertible	HZ34	2009-2013	TRANSMISSION	●	●	●	※	●	※	001, 002
AD VAN	VY12	2010	ABS	●	●	●	※	●	●	001
AD VAN	VY12	2010	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
AD VAN	VY12	2010	AIRBAG	●	●	●	●	●	○	003, 005, 008
AD VAN	VY12	2010	BCM	●	●	●	○	●	●	001
AD VAN	VY12	2010	ENGINE	●	●	●	○	●	●	001
AD VAN	VY12	2010	EPS	●	●	●	○	●	○	002
AD VAN	VY12	2010	E_4WD	●	●	●	※	●	●	002
AD VAN	VY12	2010	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
AD VAN	VY12	2010	IPDM_ER	○	●	●	○	●	●	002
AD VAN	VY12	2010	METER	※	●	●	○	●	○	002
AD VAN	VY12	2010	REARVIEW_CAMERA	●	○	○	○	●	○	001
AD VAN	VY12	2010	SBLIND_CAMERA	●	○	○	○	●	○	001
AD VAN	VY12	2010	TRANSMISSION	●	●	●	※	●	※	001, 002
ALMERA	N15	ALL	ABS	●	●	●	○	●	●	001
ALMERA	N15	ALL	ACM	●	●	●	○	●	○	○
ALMERA	N15	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
ALMERA	N15	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
ALMERA	N15	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
ALMERA	N15	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
ALMERA	N15	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
ALMERA	N15	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
ALMERA	N15	ALL	ASCD	○	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
ALMERA	N15	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
ALMERA	N15	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
ALMERA	N15	ALL	BCM	※	●	●	○	●	●	001, 002
ALMERA	N15	ALL	DIFF_LOCK	●	●	●	○	●	○	○
ALMERA	N15	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
ALMERA	N15	ALL	DIU	○	●	●	○	●	○	○
ALMERA	N15	ALL	ENGINE	●	●	●	※	●	●	001
ALMERA	N15	ALL	EPS	●	●	●	○	●	○	002
ALMERA	N15	ALL	E_4WD	●	●	●	※	●	●	002
ALMERA	N15	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
ALMERA	N15	ALL	HVAC	●	●	●	○	●	○	002
ALMERA	N15	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
ALMERA	N15	ALL	IPDM_ER	○	●	●	○	●	●	002
ALMERA	N15	ALL	IVMS	●	●	●	○	●	○	○
ALMERA	N15	ALL	LANE_CAMERA	●	●	●	○	●	●	001
ALMERA	N15	ALL	METER	※	●	●	○	●	○	002
ALMERA	N15	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
ALMERA	N15	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
ALMERA	N15	ALL	MULTI_AV	※	●	●	○	●	○	○
ALMERA	N15	ALL	NATS_IMMUI	○	●	●	○	○	○	004, 006
ALMERA	N15	ALL	RASHICAS	●	●	●	○	●	●	○
ALMERA	N15	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
ALMERA	N15	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
ALMERA	N15	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
ALMERA	N15	ALL	SONAR	●	●	●	○	●	●	○
ALMERA	N15	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
ALMERA	N15	ALL	TBDAVM	●	●	●	○	●	●	001
ALMERA	N15	ALL	TCS	●	●	●	●	●	●	001
ALMERA	N15	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
ALMERA	N16	ALL	ABS	●	●	●	○	●	●	001
ALMERA	N16	ALL	ACM	●	●	●	○	●	○	○
ALMERA	N16	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
ALMERA	N16	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
ALMERA	N16	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
ALMERA	N16	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
ALMERA	N16	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
ALMERA	N16	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
ALMERA	N16	ALL	ASCD	○	●	●	○	●	○	○
ALMERA	N16	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
ALMERA	N16	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
ALMERA	N16	ALL	BCM	※	●	●	○	●	●	001, 002
ALMERA	N16	ALL	DIFF_LOCK	●	●	●	○	●	○	○
ALMERA	N16	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
ALMERA	N16	ALL	DIU	○	●	●	○	●	○	○
ALMERA	N16	ALL	ENGINE	●	●	●	※	●	●	001
ALMERA	N16	ALL	EPS	●	●	●	○	●	○	002
ALMERA	N16	ALL	E_4WD	●	●	●	※	●	●	002
ALMERA	N16	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
ALMERA	N16	ALL	HVAC	●	●	●	○	●	○	002
ALMERA	N16	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
ALMERA	N16	ALL	IPDM_ER	○	●	●	○	●	●	002
ALMERA	N16	ALL	IVMS	●	●	●	○	●	○	○
ALMERA	N16	ALL	LANE_CAMERA	●	●	●	○	●	●	001
ALMERA	N16	ALL	METER	※	●	●	○	●	○	002
ALMERA	N16	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
ALMERA	N16	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
ALMERA	N16	ALL	MULTI_AV	※	●	●	○	●	○	○
ALMERA	N16	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
ALMERA	N16	ALL	RASHICAS	●	●	●	○	●	●	○
ALMERA	N16	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
ALMERA	N16	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
ALMERA	N16	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
ALMERA	N16	ALL	SONAR	●	●	●	○	●	●	○
ALMERA	N16	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
ALMERA	N16	ALL	TBDAVM	●	●	●	○	●	●	001
ALMERA	N16	ALL	TCS	●	●	●	●	●	●	001
ALMERA	N16	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
ALMERA	N17	2011	ABS	●	●	●	○	●	●	001
ALMERA	N17	2011	AIRBAG	●	●	●	●	●	○	003, 005, 008
ALMERA	N17	2011	BCM	※	●	●	○	●	●	001, 002
ALMERA	N17	2011	ENGINE	●	●	●	※	●	●	001
ALMERA	N17	2011	EPS	●	●	●	○	●	○	002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
ALMERA	N17	2011	IPDM_ER	○	●	●	○	●	●	002
ALMERA	N17	2011	METER	※	●	●	○	●	○	002
ALMERA	N17	2011	TRANSMISSION	●	●	●	○	●	○	001, 002
ALMERA CLASSIC	B10	2006	ABS	●	●	●	○	●	●	001
ALMERA CLASSIC	B10	2006	AIRBAG	●	●	●	●	●	○	003, 005, 008
ALMERA CLASSIC	B10	2006	ALL_MODE_AWD/4WD	●	●	●	○	●	●	001
ALMERA CLASSIC	B10	2006	BCM	※	●	●	○	●	●	001, 002
ALMERA CLASSIC	B10	2006	ENGINE	●	●	●	※	●	●	001
ALMERA CLASSIC	B10	2006	EPS	●	●	●	○	●	○	002
ALMERA CLASSIC	B10	2006	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
ALMERA CLASSIC	B10	2006	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
ALMERA CLASSIC	B10	2006	IPDM_ER	○	●	●	○	●	●	002
ALMERA CLASSIC	B10	2006	METER	※	●	●	○	●	○	002
ALMERA CLASSIC	B10	2006	MULTI_AV	※	●	●	○	●	○	○
ALMERA CLASSIC	B10	2006	REARVIEW_CAMERA	●	○	○	○	●	○	001
ALMERA CLASSIC	B10	2006	SBLIND_CAMERA	●	○	○	○	●	○	001
ALMERA CLASSIC	B10	2006	TRANSMISSION	●	●	●	○	●	○	001, 002
ALTIMA	L30	ALL	ABS	●	●	●	○	●	●	001
ALTIMA	L30	ALL	ACM	●	●	●	○	●	○	○
ALTIMA	L30	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
ALTIMA	L30	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
ALTIMA	L30	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
ALTIMA	L30	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
ALTIMA	L30	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
ALTIMA	L30	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
ALTIMA	L30	ALL	ASCD	○	●	●	○	●	○	○
ALTIMA	L30	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
ALTIMA	L30	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
ALTIMA	L30	ALL	BCM	※	●	●	○	●	●	001, 002
ALTIMA	L30	ALL	DIFF_LOCK	●	●	●	○	●	○	○
ALTIMA	L30	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
ALTIMA	L30	ALL	DIU	○	●	●	○	●	○	○
ALTIMA	L30	ALL	ENGINE	●	●	●	※	●	●	001
ALTIMA	L30	ALL	EPS	●	●	●	○	●	○	002
ALTIMA	L30	ALL	E_4WD	●	●	●	※	●	●	002
ALTIMA	L30	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
ALTIMA	L30	ALL	HVAC	●	●	●	○	●	○	002
ALTIMA	L30	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
ALTIMA	L30	ALL	IPDM_ER	○	●	●	○	●	●	002
ALTIMA	L30	ALL	IVMS	●	●	●	○	●	○	○
ALTIMA	L30	ALL	LANE_CAMERA	●	●	●	○	●	●	001
ALTIMA	L30	ALL	METER	※	●	●	○	●	○	002
ALTIMA	L30	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
ALTIMA	L30	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
ALTIMA	L30	ALL	MULTI_AV	※	●	●	○	●	○	○
ALTIMA	L30	ALL	NATS_IMMUE	○	●	●	○	○	○	004, 006
ALTIMA	L30	ALL	RASHICAS	●	●	●	○	●	●	○
ALTIMA	L30	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
ALTIMA	L30	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
ALTIMA	L30	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
ALTIMA	L30	ALL	SONAR	●	●	●	○	●	●	○
ALTIMA	L30	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
ALTIMA	L30	ALL	TBDAVM	●	●	●	○	●	●	001
ALTIMA	L30	ALL	TCS	●	●	●	●	●	●	001
ALTIMA	L30	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
ALTIMA	L31	ALL	ABS	●	●	●	○	●	●	001
ALTIMA	L31	ALL	ACM	●	●	●	○	●	○	○
ALTIMA	L31	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
ALTIMA	L31	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
ALTIMA	L31	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
ALTIMA	L31	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
ALTIMA	L31	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
ALTIMA	L31	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
ALTIMA	L31	ALL	ASCD	○	●	●	○	●	○	○
ALTIMA	L31	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
ALTIMA	L31	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
ALTIMA	L31	ALL	BCM	※	●	●	○	●	●	001, 002
ALTIMA	L31	ALL	DIFF_LOCK	●	●	●	○	●	○	○
ALTIMA	L31	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
ALTIMA	L31	ALL	DIU	○	●	●	○	●	○	○
ALTIMA	L31	ALL	ENGINE	●	●	●	※	●	●	001
ALTIMA	L31	ALL	EPS	●	●	●	○	●	○	002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
ALTIMA	L31	ALL	E_4WD	●	●	●	※	●	●	002
ALTIMA	L31	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
ALTIMA	L31	ALL	HVAC	●	●	●	○	●	○	002
ALTIMA	L31	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
ALTIMA	L31	ALL	IPDM_ER	○	●	●	○	●	●	002
ALTIMA	L31	ALL	IVMS	●	●	●	○	●	○	○
ALTIMA	L31	ALL	LANE_CAMERA	●	●	●	○	●	●	001
ALTIMA	L31	ALL	METER	※	●	●	○	●	○	002
ALTIMA	L31	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
ALTIMA	L31	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
ALTIMA	L31	ALL	MULTI_AV	※	●	●	○	●	○	○
ALTIMA	L31	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
ALTIMA	L31	ALL	RASHICAS	●	●	●	○	●	●	○
ALTIMA	L31	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
ALTIMA	L31	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
ALTIMA	L31	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
ALTIMA	L31	ALL	SONAR	●	●	●	○	●	●	○
ALTIMA	L31	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
ALTIMA	L31	ALL	TBDAVM	●	●	●	○	●	●	001
ALTIMA	L31	ALL	TCS	●	●	●	●	●	●	001
ALTIMA	L31	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
ALTIMA	L32	2006-2012	ABS	●	●	●	○	●	●	001
ALTIMA	L32	2006-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
ALTIMA	L32	2006-2012	BCM	※	●	●	○	●	●	001, 002
ALTIMA	L32	2006-2012	ENGINE	●	●	●	※	●	●	001
ALTIMA	L32	2006-2012	EPS	●	●	●	○	●	○	002
ALTIMA	L32	2006-2012	EV/HEV	●	●	●	●	●	●	001
ALTIMA	L32	2006-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
ALTIMA	L32	2006-2012	HVAC	●	●	●	○	●	●	001
ALTIMA	L32	2006-2012	IPDM_ER	○	●	●	○	●	●	002
ALTIMA	L32	2006-2012	METER	※	●	●	○	●	○	002
ALTIMA	L32	2006-2012	MULTI_AV	※	●	●	○	●	○	○
ALTIMA	L32	2006-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001
ALTIMA	L32	2006-2012	SBLIND_CAMERA	●	○	○	○	●	○	001
ALTIMA	L32	2006-2012	SONAR	●	●	●	○	●	●	○
ALTIMA	L32	2006-2012	TRANSMISSION	●	●	●	○	●	○	001, 002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
ALTIMA	L33	2012-2013	ABS	●	●	●	○	●	●	001
ALTIMA	L33	2012-2013	AIRBAG	●	●	●	●	●	○	003, 005, 008
ALTIMA	L33	2012-2013	AUTO_DRIVE_POS	●	●	●	○	●	●	001
ALTIMA	L33	2012-2013	BCM	※	●	●	○	●	●	001, 002
ALTIMA	L33	2012-2013	ENGINE	●	●	●	※	●	●	001
ALTIMA	L33	2012-2013	EPS	●	●	●	○	●	○	002
ALTIMA	L33	2012-2013	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
ALTIMA	L33	2012-2013	HVAC	●	●	●	○	●	●	001
ALTIMA	L33	2012-2013	IPDM_ER	○	●	●	○	●	●	002
ALTIMA	L33	2012-2013	METER	※	●	●	○	●	○	002
ALTIMA	L33	2012-2013	MULTI_AV	※	●	●	○	●	○	○
ALTIMA	L33	2012-2013	SONAR	●	●	●	○	●	●	○
ALTIMA	L33	2012-2013	TBDAVM	●	●	●	○	●	●	001
ALTIMA	L33	2012-2013	TRANSMISSION	●	●	●	○	●	○	001, 002
ALTIMA Hybrid	HL32	2007-2011	ABS	●	●	●	○	●	●	001
ALTIMA Hybrid	HL32	2007-2011	AIRBAG	●	●	●	●	●	○	003, 005, 008
ALTIMA Hybrid	HL32	2007-2011	BCM	※	●	●	○	●	●	001, 002
ALTIMA Hybrid	HL32	2007-2011	ENGINE	●	●	●	※	●	●	001
ALTIMA Hybrid	HL32	2007-2011	EPS	●	●	●	○	●	○	002
ALTIMA Hybrid	HL32	2007-2011	HCM	●	●	●	●	●	●	001
ALTIMA Hybrid	HL32	2007-2011	HVAC	●	●	●	○	●	●	001
ALTIMA Hybrid	HL32	2007-2011	IPDM_ER	○	●	●	○	●	●	002
ALTIMA Hybrid	HL32	2007-2011	METER	※	●	●	○	●	○	002
ALTIMA Hybrid	HL32	2007-2011	MULTI_AV	※	●	●	○	●	○	○
ALTIMA Hybrid	HL32	2007-2011	REARVIEW_CAMERA	●	○	○	○	●	○	001
ALTIMA Hybrid	HL32	2007-2011	TRANSMISSION	●	●	●	※	●	※	001, 002
ARMADA	TA60	2003-2011	ABS	●	●	●	○	●	●	001
ARMADA	TA60	2003-2011	ACM	●	●	●	○	●	○	○
ARMADA	TA60	2003-2011	ACTIVE_SUS	●	●	●	●	●	●	001
ARMADA	TA60	2003-2011	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
ARMADA	TA60	2003-2011	AIRBAG	●	●	●	●	●	○	003, 005, 008
ARMADA	TA60	2003-2011	AIR_LEVELIZER	●	●	●	○	●	●	001
ARMADA	TA60	2003-2011	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
ARMADA	TA60	2003-2011	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
ARMADA	TA60	2003-2011	ASCD	○	●	●	○	●	○	○
ARMADA	TA60	2003-2011	AUTO_DRIVE_POS	●	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
ARMADA	TA60	2003-2011	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
ARMADA	TA60	2003-2011	BCM	※	●	●	○	●	●	001, 002
ARMADA	TA60	2003-2011	DIFF_LOCK	●	●	●	○	●	○	○
ARMADA	TA60	2003-2011	DISTANCE_CONTROL	●	●	●	○	●	○	○
ARMADA	TA60	2003-2011	DIU	○	●	●	○	●	○	○
ARMADA	TA60	2003-2011	ENGINE	●	●	●	※	●	●	001
ARMADA	TA60	2003-2011	EPS	●	●	●	○	●	○	002
ARMADA	TA60	2003-2011	E_4WD	●	●	●	※	●	●	002
ARMADA	TA60	2003-2011	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
ARMADA	TA60	2003-2011	HVAC	●	●	●	○	●	○	002
ARMADA	TA60	2003-2011	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
ARMADA	TA60	2003-2011	IPDM_ER	○	●	●	○	●	●	002
ARMADA	TA60	2003-2011	IVMS	●	●	●	○	●	○	○
ARMADA	TA60	2003-2011	LANE_CAMERA	●	●	●	○	●	●	001
ARMADA	TA60	2003-2011	METER	※	●	●	○	●	○	002
ARMADA	TA60	2003-2011	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
ARMADA	TA60	2003-2011	MOTOR_ASSIST	○	●	●	○	●	○	001
ARMADA	TA60	2003-2011	MULTI_AV	※	●	●	○	●	○	○
ARMADA	TA60	2003-2011	NATS_IMMUE	○	●	●	○	○	○	004, 006
ARMADA	TA60	2003-2011	RASHICAS	●	●	●	○	●	●	○
ARMADA	TA60	2003-2011	REARVIEW_CAMERA	●	○	○	○	●	○	001
ARMADA	TA60	2003-2011	S/BLIND_CAMERA	●	○	○	○	●	○	001
ARMADA	TA60	2003-2011	SMART_ENTRANCE	○	●	●	○	●	●	002
ARMADA	TA60	2003-2011	SONAR	●	●	●	○	●	●	○
ARMADA	TA60	2003-2011	TBDADAS_ICC	●	●	●	○	●	●	001, 002
ARMADA	TA60	2003-2011	TBDAVM	●	●	●	○	●	●	001
ARMADA	TA60	2003-2011	TCS	●	●	●	●	●	●	001
ARMADA	TA60	2003-2011	TRANSMISSION	●	●	●	○	●	○	001, 002
ATLAS	F24	2007-2011	ABS	●	●	●	○	●	●	001
ATLAS	F24	2007-2011	AIRBAG	●	●	●	●	●	○	003, 005, 008
ATLAS	F24	2007-2011	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
ATLAS	F24	2007-2011	BCM	※	●	●	○	●	●	001, 002
ATLAS	F24	2007-2011	ENGINE	●	●	●	※	●	●	001
ATLAS	F24	2007-2011	IPDM_ER	○	●	●	○	●	●	002
ATLAS	F24	2007-2011	METER	※	●	●	○	●	○	002
ATLAS	F24	2007-2011	TRANSMISSION	●	●	●	○	●	○	001, 002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
ATLEON	TK0	ALL	ABS	●	●	●	○	●	●	001
ATLEON	TK0	ALL	ACM	●	●	●	○	●	○	○
ATLEON	TK0	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
ATLEON	TK0	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
ATLEON	TK0	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
ATLEON	TK0	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
ATLEON	TK0	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
ATLEON	TK0	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
ATLEON	TK0	ALL	ASCD	○	●	●	○	●	○	○
ATLEON	TK0	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
ATLEON	TK0	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
ATLEON	TK0	ALL	BCM	※	●	●	○	●	●	001, 002
ATLEON	TK0	ALL	DIFF_LOCK	●	●	●	○	●	○	○
ATLEON	TK0	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
ATLEON	TK0	ALL	DIU	○	●	●	○	●	○	○
ATLEON	TK0	ALL	ENGINE	●	●	●	※	●	●	001
ATLEON	TK0	ALL	EPS	●	●	●	○	●	○	002
ATLEON	TK0	ALL	E_4WD	●	●	●	※	●	●	002
ATLEON	TK0	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
ATLEON	TK0	ALL	HVAC	●	●	●	○	●	○	002
ATLEON	TK0	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
ATLEON	TK0	ALL	IPDM_ER	○	●	●	○	●	●	002
ATLEON	TK0	ALL	IVMS	●	●	●	○	●	○	○
ATLEON	TK0	ALL	LANE_CAMERA	●	●	●	○	●	●	001
ATLEON	TK0	ALL	METER	※	●	●	○	●	○	002
ATLEON	TK0	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
ATLEON	TK0	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
ATLEON	TK0	ALL	MULTI_AV	※	●	●	○	●	○	○
ATLEON	TK0	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
ATLEON	TK0	ALL	RASHICAS	●	●	●	○	●	●	○
ATLEON	TK0	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
ATLEON	TK0	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
ATLEON	TK0	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
ATLEON	TK0	ALL	SONAR	●	●	●	○	●	●	○
ATLEON	TK0	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
ATLEON	TK0	ALL	TBDAVM	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
ATLEON	TK0	ALL	TCS	●	●	●	●	●	●	001
ATLEON	TK0	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
ATLEON(except for ZD30)	TK0	2006-2012	ABS	●	●	●	○	●	●	001
ATLEON(except for ZD30)	TK0	2006-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
ATLEON(except for ZD30)	TK0	2006-2012	ENGINE	●	●	●	※	●	●	001
ATLEON(except for ZD30)	TK0	2006-2012	METER	※	●	●	○	●	○	002
ATLEON(except for ZD30)	TK0	2006-2012	SMART_ENTRANCE	○	●	●	○	●	●	002
ATLEON(except for ZD30)	TK0	2006-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
ATLEON(ZD30)	TK0	2006-2012	ABS	●	●	●	○	●	●	001
ATLEON(ZD30)	TK0	2006-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
ATLEON(ZD30)	TK0	2006-2012	ENGINE	●	●	●	※	●	●	001
ATLEON(ZD30)	TK0	2006-2012	METER	※	●	●	○	●	○	002
ATLEON(ZD30)	TK0	2006-2012	SMART_ENTRANCE	○	●	●	○	●	●	002
ATLEON(ZD30)	TK0	2006-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
AVENIR	W11	ALL	ABS	●	●	●	○	●	●	001
AVENIR	W11	ALL	ACM	●	●	●	○	●	○	○
AVENIR	W11	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
AVENIR	W11	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
AVENIR	W11	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
AVENIR	W11	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
AVENIR	W11	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
AVENIR	W11	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
AVENIR	W11	ALL	ASCD	○	●	●	○	●	○	○
AVENIR	W11	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
AVENIR	W11	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
AVENIR	W11	ALL	BCM	※	●	●	○	●	●	001, 002
AVENIR	W11	ALL	DIFF_LOCK	●	●	●	○	●	○	○
AVENIR	W11	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
AVENIR	W11	ALL	DIU	○	●	●	○	●	○	○
AVENIR	W11	ALL	ENGINE	●	●	●	※	●	●	001
AVENIR	W11	ALL	EPS	●	●	●	○	●	○	002
AVENIR	W11	ALL	E_4WD	●	●	●	※	●	●	002
AVENIR	W11	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
AVENIR	W11	ALL	HVAC	●	●	●	○	●	○	002
AVENIR	W11	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
AVENIR	W11	ALL	IPDM_ER	○	●	●	○	●	●	002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
AVENIR	W11	ALL	IVMS	●	●	●	○	●	○	○
AVENIR	W11	ALL	LANE_CAMERA	●	●	●	○	●	●	001
AVENIR	W11	ALL	METER	※	●	●	○	●	○	002
AVENIR	W11	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
AVENIR	W11	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
AVENIR	W11	ALL	MULTI_AV	※	●	●	○	●	○	○
AVENIR	W11	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
AVENIR	W11	ALL	RASHICAS	●	●	●	○	●	●	○
AVENIR	W11	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
AVENIR	W11	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
AVENIR	W11	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
AVENIR	W11	ALL	SONAR	●	●	●	○	●	●	○
AVENIR	W11	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
AVENIR	W11	ALL	TBDAVM	●	●	●	○	●	●	001
AVENIR	W11	ALL	TCS	●	●	●	●	●	●	001
AVENIR	W11	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
BASSARA	JU30	ALL	ABS	●	●	●	○	●	●	001
BASSARA	JU30	ALL	ACM	●	●	●	○	●	○	○
BASSARA	JU30	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
BASSARA	JU30	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
BASSARA	JU30	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
BASSARA	JU30	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
BASSARA	JU30	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
BASSARA	JU30	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
BASSARA	JU30	ALL	ASCD	○	●	●	○	●	○	○
BASSARA	JU30	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
BASSARA	JU30	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
BASSARA	JU30	ALL	BCM	※	●	●	○	●	●	001, 002
BASSARA	JU30	ALL	DIFF_LOCK	●	●	●	○	●	○	○
BASSARA	JU30	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
BASSARA	JU30	ALL	DIU	○	●	●	○	●	○	○
BASSARA	JU30	ALL	ENGINE	●	●	●	※	●	●	001
BASSARA	JU30	ALL	EPS	●	●	●	○	●	○	002
BASSARA	JU30	ALL	E_4WD	●	●	●	※	●	●	002
BASSARA	JU30	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
BASSARA	JU30	ALL	HVAC	●	●	●	○	●	○	002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
BASSARA	JU30	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
BASSARA	JU30	ALL	IPDM_ER	○	●	●	○	●	●	002
BASSARA	JU30	ALL	IVMS	●	●	●	○	●	○	○
BASSARA	JU30	ALL	LANE_CAMERA	●	●	●	○	●	●	001
BASSARA	JU30	ALL	METER	※	●	●	○	●	○	002
BASSARA	JU30	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
BASSARA	JU30	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
BASSARA	JU30	ALL	MULTI_AV	※	●	●	○	●	○	○
BASSARA	JU30	ALL	NATS_IMMUE	○	●	●	○	○	○	004, 006
BASSARA	JU30	ALL	RASHICAS	●	●	●	○	●	●	○
BASSARA	JU30	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
BASSARA	JU30	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
BASSARA	JU30	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
BASSARA	JU30	ALL	SONAR	●	●	●	○	●	●	○
BASSARA	JU30	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
BASSARA	JU30	ALL	TBDAVM	●	●	●	○	●	●	001
BASSARA	JU30	ALL	TCS	●	●	●	●	●	●	001
BASSARA	JU30	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
BLUEBIRD	U13	ALL	ABS	●	●	●	○	●	●	001
BLUEBIRD	U13	ALL	ACM	●	●	●	○	●	○	○
BLUEBIRD	U13	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
BLUEBIRD	U13	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
BLUEBIRD	U13	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
BLUEBIRD	U13	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
BLUEBIRD	U13	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
BLUEBIRD	U13	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
BLUEBIRD	U13	ALL	ASCD	○	●	●	○	●	○	○
BLUEBIRD	U13	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
BLUEBIRD	U13	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
BLUEBIRD	U13	ALL	BCM	※	●	●	○	●	●	001, 002
BLUEBIRD	U13	ALL	DIFF_LOCK	●	●	●	○	●	○	○
BLUEBIRD	U13	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
BLUEBIRD	U13	ALL	DIU	○	●	●	○	●	○	○
BLUEBIRD	U13	ALL	ENGINE	●	●	●	※	●	●	001
BLUEBIRD	U13	ALL	EPS	●	●	●	○	●	○	002
BLUEBIRD	U13	ALL	E_4WD	●	●	●	※	●	●	002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
BLUEBIRD	U13	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
BLUEBIRD	U13	ALL	HVAC	●	●	●	○	●	○	002
BLUEBIRD	U13	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
BLUEBIRD	U13	ALL	IPDM_ER	○	●	●	○	●	●	002
BLUEBIRD	U13	ALL	IVMS	●	●	●	○	●	○	○
BLUEBIRD	U13	ALL	LANE_CAMERA	●	●	●	○	●	●	001
BLUEBIRD	U13	ALL	METER	※	●	●	○	●	○	002
BLUEBIRD	U13	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
BLUEBIRD	U13	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
BLUEBIRD	U13	ALL	MULTI_AV	※	●	●	○	●	○	○
BLUEBIRD	U13	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
BLUEBIRD	U13	ALL	RASHICAS	●	●	●	○	●	●	○
BLUEBIRD	U13	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
BLUEBIRD	U13	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
BLUEBIRD	U13	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
BLUEBIRD	U13	ALL	SONAR	●	●	●	○	●	●	○
BLUEBIRD	U13	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
BLUEBIRD	U13	ALL	TBDAVM	●	●	●	○	●	●	001
BLUEBIRD	U13	ALL	TCS	●	●	●	●	●	●	001
BLUEBIRD	U13	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
BASSARA	U14	ALL	ABS	●	●	●	○	●	●	001
BASSARA	U14	ALL	ACM	●	●	●	○	●	○	○
BASSARA	U14	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
BASSARA	U14	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
BASSARA	U14	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
BASSARA	U14	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
BASSARA	U14	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
BASSARA	U14	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
BASSARA	U14	ALL	ASCD	○	●	●	○	●	○	○
BASSARA	U14	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
BASSARA	U14	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
BASSARA	U14	ALL	BCM	※	●	●	○	●	●	001, 002
BASSARA	U14	ALL	DIFF_LOCK	●	●	●	○	●	○	○
BASSARA	U14	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
BASSARA	U14	ALL	DIU	○	●	●	○	●	○	○
BASSARA	U14	ALL	ENGINE	●	●	●	※	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
BASSARA	U14	ALL	EPS	●	●	●	○	●	○	002
BASSARA	U14	ALL	E_4WD	●	●	●	※	●	●	002
BASSARA	U14	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
BASSARA	U14	ALL	HVAC	●	●	●	○	●	○	002
BASSARA	U14	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
BASSARA	U14	ALL	IPDM_ER	○	●	●	○	●	●	002
BASSARA	U14	ALL	IVMS	●	●	●	○	●	○	○
BASSARA	U14	ALL	LANE_CAMERA	●	●	●	○	●	●	001
BASSARA	U14	ALL	METER	※	●	●	○	●	○	002
BASSARA	U14	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
BASSARA	U14	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
BASSARA	U14	ALL	MULTI_AV	※	●	●	○	●	○	○
BASSARA	U14	ALL	NATS_IMMUN	○	●	●	○	○	○	004, 006
BASSARA	U14	ALL	RASHICAS	●	●	●	○	●	●	○
BASSARA	U14	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
BASSARA	U14	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
BASSARA	U14	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
BASSARA	U14	ALL	SONAR	●	●	●	○	●	●	○
BASSARA	U14	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
BASSARA	U14	ALL	TBDAVM	●	●	●	○	●	●	001
BASSARA	U14	ALL	TCS	●	●	●	●	●	●	001
BASSARA	U14	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
CABSTAR	TL0	2003	ABS	●	●	●	○	●	●	001
CABSTAR	TL0	2003	ACM	●	●	●	○	●	○	○
CABSTAR	TL0	2003	ACTIVE_SUS	●	●	●	●	●	●	001
CABSTAR	TL0	2003	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
CABSTAR	TL0	2003	AIRBAG	●	●	●	●	●	○	003, 005, 008
CABSTAR	TL0	2003	AIR_LEVELIZER	●	●	●	○	●	●	001
CABSTAR	TL0	2003	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
CABSTAR	TL0	2003	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
CABSTAR	TL0	2003	ASCD	○	●	●	○	●	○	○
CABSTAR	TL0	2003	AUTO_DRIVE_POS	●	●	●	○	●	○	○
CABSTAR	TL0	2003	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
CABSTAR	TL0	2003	BCM	※	●	●	○	●	●	001, 002
CABSTAR	TL0	2003	DIFF_LOCK	●	●	●	○	●	○	○
CABSTAR	TL0	2003	DISTANCE_CONTROL	●	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
CABSTAR	TL0	2003	DIU	○	●	●	○	●	○	○
CABSTAR	TL0	2003	ENGINE	●	●	●	※	●	●	001
CABSTAR	TL0	2003	EPS	●	●	●	○	●	○	002
CABSTAR	TL0	2003	E_4WD	●	●	●	※	●	●	002
CABSTAR	TL0	2003	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
CABSTAR	TL0	2003	HVAC	●	●	●	○	●	○	002
CABSTAR	TL0	2003	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
CABSTAR	TL0	2003	IPDM_ER	○	●	●	○	●	●	002
CABSTAR	TL0	2003	IVMS	●	●	●	○	●	○	○
CABSTAR	TL0	2003	LANE_CAMERA	●	●	●	○	●	●	001
CABSTAR	TL0	2003	METER	※	●	●	○	●	○	002
CABSTAR	TL0	2003	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
CABSTAR	TL0	2003	MOTOR_ASSIST	○	●	●	○	●	○	001
CABSTAR	TL0	2003	MULTI_AV	※	●	●	○	●	○	○
CABSTAR	TL0	2003	NATS_IMMUN	○	●	●	○	○	○	004, 006
CABSTAR	TL0	2003	RASHICAS	●	●	●	○	●	●	○
CABSTAR	TL0	2003	REARVIEW_CAMERA	●	○	○	○	●	○	001
CABSTAR	TL0	2003	S/BLIND_CAMERA	●	○	○	○	●	○	001
CABSTAR	TL0	2003	SMART_ENTRANCE	○	●	●	○	●	●	002
CABSTAR	TL0	2003	SONAR	●	●	●	○	●	●	○
CABSTAR	TL0	2003	TBDADAS_ICC	●	●	●	○	●	●	001, 002
CABSTAR	TL0	2003	TBDAVM	●	●	●	○	●	●	001
CABSTAR	TL0	2003	TCS	●	●	●	●	●	●	001
CABSTAR	TL0	2003	TRANSMISSION	●	●	●	○	●	○	001, 002
CABSTAR	F24	2006-2012	ABS	●	●	●	※	●	●	001
CABSTAR	F24	2006-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
CABSTAR	F24	2006-2012	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
CABSTAR	F24	2006-2012	BCM	※	●	●	○	●	●	001, 002
CABSTAR	F24	2006-2012	ENGINE	●	●	●	※	●	●	001
CABSTAR	F24	2006-2012	IPDM_ER	○	●	●	○	●	●	002
CABSTAR	F24	2006-2012	METER	※	●	●	○	●	○	002
CABSTAR	F24	2006-2012	TRANSMISSION	●	●	●	※	●	※	001, 002
CABSTAR E	TL0	ALL	ABS	●	●	●	○	●	●	001
CABSTAR E	TL0	ALL	ACM	●	●	●	○	●	○	○
CABSTAR E	TL0	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
CABSTAR E	TL0	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
CABSTAR E	TL0	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
CABSTAR E	TL0	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
CABSTAR E	TL0	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
CABSTAR E	TL0	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
CABSTAR E	TL0	ALL	ASCD	○	●	●	○	●	○	○
CABSTAR E	TL0	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
CABSTAR E	TL0	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
CABSTAR E	TL0	ALL	BCM	※	●	●	○	●	●	001, 002
CABSTAR E	TL0	ALL	DIFF_LOCK	●	●	●	○	●	○	○
CABSTAR E	TL0	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
CABSTAR E	TL0	ALL	DIU	○	●	●	○	●	○	○
CABSTAR E	TL0	ALL	ENGINE	●	●	●	※	●	●	001
CABSTAR E	TL0	ALL	EPS	●	●	●	○	●	○	002
CABSTAR E	TL0	ALL	E_4WD	●	●	●	※	●	●	002
CABSTAR E	TL0	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
CABSTAR E	TL0	ALL	HVAC	●	●	●	○	●	○	002
CABSTAR E	TL0	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
CABSTAR E	TL0	ALL	IPDM_ER	○	●	●	○	●	●	002
CABSTAR E	TL0	ALL	IVMS	●	●	●	○	●	○	○
CABSTAR E	TL0	ALL	LANE_CAMERA	●	●	●	○	●	●	001
CABSTAR E	TL0	ALL	METER	※	●	●	○	●	○	002
CABSTAR E	TL0	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
CABSTAR E	TL0	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
CABSTAR E	TL0	ALL	MULTI_AV	※	●	●	○	●	○	○
CABSTAR E	TL0	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
CABSTAR E	TL0	ALL	RASHICAS	●	●	●	○	●	●	○
CABSTAR E	TL0	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
CABSTAR E	TL0	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
CABSTAR E	TL0	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
CABSTAR E	TL0	ALL	SONAR	●	●	●	○	●	●	○
CABSTAR E	TL0	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
CABSTAR E	TL0	ALL	TBDAVM	●	●	●	○	●	●	001
CABSTAR E	TL0	ALL	TCS	●	●	●	●	●	●	001
CABSTAR E	TL0	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
CARAVAN	E25	2001-2010	ABS	●	●	●	○	●	●	001
CARAVAN	E25	2001-2010	ACM	●	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
CARAVAN	E25	2001-2010	ACTIVE_SUS	●	●	●	●	●	●	001
CARAVAN	E25	2001-2010	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
CARAVAN	E25	2001-2010	AIRBAG	●	●	●	●	●	○	003, 005, 008
CARAVAN	E25	2001-2010	AIR_LEVELIZER	●	●	●	○	●	●	001
CARAVAN	E25	2001-2010	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
CARAVAN	E25	2001-2010	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
CARAVAN	E25	2001-2010	ASCD	○	●	●	○	●	○	○
CARAVAN	E25	2001-2010	AUTO_DRIVE_POS	●	●	●	○	●	○	○
CARAVAN	E25	2001-2010	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
CARAVAN	E25	2001-2010	BCM	※	●	●	○	●	●	001, 002
CARAVAN	E25	2001-2010	DIFF_LOCK	●	●	●	○	●	○	○
CARAVAN	E25	2001-2010	DISTANCE_CONTROL	●	●	●	○	●	○	○
CARAVAN	E25	2001-2010	DIU	○	●	●	○	●	○	○
CARAVAN	E25	2001-2010	ENGINE	●	●	●	※	●	●	001
CARAVAN	E25	2001-2010	EPS	●	●	●	○	●	○	002
CARAVAN	E25	2001-2010	E_4WD	●	●	●	※	●	●	002
CARAVAN	E25	2001-2010	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
CARAVAN	E25	2001-2010	HVAC	●	●	●	○	●	○	002
CARAVAN	E25	2001-2010	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
CARAVAN	E25	2001-2010	IPDM_ER	○	●	●	○	●	●	002
CARAVAN	E25	2001-2010	IVMS	●	●	●	○	●	○	○
CARAVAN	E25	2001-2010	LANE_CAMERA	●	●	●	○	●	●	001
CARAVAN	E25	2001-2010	METER	※	●	●	○	●	○	002
CARAVAN	E25	2001-2010	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
CARAVAN	E25	2001-2010	MOTOR_ASSIST	○	●	●	○	●	○	001
CARAVAN	E25	2001-2010	MULTI_AV	※	●	●	○	●	○	○
CARAVAN	E25	2001-2010	NATS_IMMU	○	●	●	○	○	○	004, 006
CARAVAN	E25	2001-2010	RASHICAS	●	●	●	○	●	●	○
CARAVAN	E25	2001-2010	REARVIEW_CAMERA	●	○	○	○	●	○	001
CARAVAN	E25	2001-2010	S/BLIND_CAMERA	●	○	○	○	●	○	001
CARAVAN	E25	2001-2010	SMART_ENTRANCE	○	●	●	○	●	●	002
CARAVAN	E25	2001-2010	SONAR	●	●	●	○	●	●	○
CARAVAN	E25	2001-2010	TBDADAS_ICC	●	●	●	○	●	●	001, 002
CARAVAN	E25	2001-2010	TBDAVM	●	●	●	○	●	●	001
CARAVAN	E25	2001-2010	TCS	●	●	●	●	●	●	001
CARAVAN	E25	2001-2010	TRANSMISSION	●	●	●	○	●	○	001, 002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
CEDRIC	Y31	1996-2012	ABS	●	●	●	○	●	●	001
CEDRIC	Y31	1996-2012	ACM	●	●	●	○	●	○	○
CEDRIC	Y31	1996-2012	ACTIVE_SUS	●	●	●	●	●	●	001
CEDRIC	Y31	1996-2012	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
CEDRIC	Y31	1996-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
CEDRIC	Y31	1996-2012	AIR_LEVELIZER	●	●	●	○	●	●	001
CEDRIC	Y31	1996-2012	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
CEDRIC	Y31	1996-2012	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
CEDRIC	Y31	1996-2012	ASCD	○	●	●	○	●	○	○
CEDRIC	Y31	1996-2012	AUTO_DRIVE_POS	●	●	●	○	●	○	○
CEDRIC	Y31	1996-2012	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
CEDRIC	Y31	1996-2012	BCM	※	●	●	○	●	●	001, 002
CEDRIC	Y31	1996-2012	DIFF_LOCK	●	●	●	○	●	○	○
CEDRIC	Y31	1996-2012	DISTANCE_CONTROL	●	●	●	○	●	○	○
CEDRIC	Y31	1996-2012	DIU	○	●	●	○	●	○	○
CEDRIC	Y31	1996-2012	ENGINE	●	●	●	※	●	●	001
CEDRIC	Y31	1996-2012	EPS	●	●	●	○	●	○	002
CEDRIC	Y31	1996-2012	E_4WD	●	●	●	※	●	●	002
CEDRIC	Y31	1996-2012	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
CEDRIC	Y31	1996-2012	HVAC	●	●	●	○	●	○	002
CEDRIC	Y31	1996-2012	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
CEDRIC	Y31	1996-2012	IPDM_ER	○	●	●	○	●	●	002
CEDRIC	Y31	1996-2012	IVMS	●	●	●	○	●	○	○
CEDRIC	Y31	1996-2012	LANE_CAMERA	●	●	●	○	●	●	001
CEDRIC	Y31	1996-2012	METER	※	●	●	○	●	○	002
CEDRIC	Y31	1996-2012	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
CEDRIC	Y31	1996-2012	MOTOR_ASSIST	○	●	●	○	●	○	001
CEDRIC	Y31	1996-2012	MULTI_AV	※	●	●	○	●	○	○
CEDRIC	Y31	1996-2012	NATS_IMMU	○	●	●	○	○	○	004, 006
CEDRIC	Y31	1996-2012	RASHICAS	●	●	●	○	●	●	○
CEDRIC	Y31	1996-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001
CEDRIC	Y31	1996-2012	S/BLIND_CAMERA	●	○	○	○	●	○	001
CEDRIC	Y31	1996-2012	SMART_ENTRANCE	○	●	●	○	●	●	002
CEDRIC	Y31	1996-2012	SONAR	●	●	●	○	●	●	○
CEDRIC	Y31	1996-2012	TBDADAS_ICC	●	●	●	○	●	●	001, 002
CEDRIC	Y31	1996-2012	TBDAVM	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
CEDRIC	Y31	1996-2012	TCS	●	●	●	●	●	●	001
CEDRIC	Y31	1996-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
CEDRIC TAXI	Y31	ALL	ABS	●	●	●	○	●	●	001
CEDRIC TAXI	Y31	ALL	ACM	●	●	●	○	●	○	○
CEDRIC TAXI	Y31	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
CEDRIC TAXI	Y31	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
CEDRIC TAXI	Y31	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
CEDRIC TAXI	Y31	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
CEDRIC TAXI	Y31	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
CEDRIC TAXI	Y31	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
CEDRIC TAXI	Y31	ALL	ASCD	○	●	●	○	●	○	○
CEDRIC TAXI	Y31	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
CEDRIC TAXI	Y31	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
CEDRIC TAXI	Y31	ALL	BCM	※	●	●	○	●	●	001, 002
CEDRIC TAXI	Y31	ALL	DIFF_LOCK	●	●	●	○	●	○	○
CEDRIC TAXI	Y31	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
CEDRIC TAXI	Y31	ALL	DIU	○	●	●	○	●	○	○
CEDRIC TAXI	Y31	ALL	ENGINE	●	●	●	※	●	●	001
CEDRIC TAXI	Y31	ALL	EPS	●	●	●	○	●	○	002
CEDRIC TAXI	Y31	ALL	E_4WD	●	●	●	※	●	●	002
CEDRIC TAXI	Y31	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
CEDRIC TAXI	Y31	ALL	HVAC	●	●	●	○	●	○	002
CEDRIC TAXI	Y31	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
CEDRIC TAXI	Y31	ALL	IPDM_ER	○	●	●	○	●	●	002
CEDRIC TAXI	Y31	ALL	IVMS	●	●	●	○	●	○	○
CEDRIC TAXI	Y31	ALL	LANE_CAMERA	●	●	●	○	●	●	001
CEDRIC TAXI	Y31	ALL	METER	※	●	●	○	●	○	002
CEDRIC TAXI	Y31	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
CEDRIC TAXI	Y31	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
CEDRIC TAXI	Y31	ALL	MULTI_AV	※	●	●	○	●	○	○
CEDRIC TAXI	Y31	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
CEDRIC TAXI	Y31	ALL	RASHICAS	●	●	●	○	●	●	○
CEDRIC TAXI	Y31	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
CEDRIC TAXI	Y31	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
CEDRIC TAXI	Y31	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
CEDRIC TAXI	Y31	ALL	SONAR	●	●	●	○	●	●	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
CEDRIC TAXI	Y31	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
CEDRIC TAXI	Y31	ALL	TBDAVM	●	●	●	○	●	●	001
CEDRIC TAXI	Y31	ALL	TCS	●	●	●	●	●	●	001
CEDRIC TAXI	Y31	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
CEDRIC/GLORIA	Y34	ALL	ABS	●	●	●	○	●	●	001
CEDRIC/GLORIA	Y34	ALL	ACM	●	●	●	○	●	○	○
CEDRIC/GLORIA	Y34	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
CEDRIC/GLORIA	Y34	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
CEDRIC/GLORIA	Y34	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
CEDRIC/GLORIA	Y34	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
CEDRIC/GLORIA	Y34	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
CEDRIC/GLORIA	Y34	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
CEDRIC/GLORIA	Y34	ALL	ASCD	○	●	●	○	●	○	○
CEDRIC/GLORIA	Y34	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
CEDRIC/GLORIA	Y34	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
CEDRIC/GLORIA	Y34	ALL	BCM	※	●	●	○	●	●	001, 002
CEDRIC/GLORIA	Y34	ALL	DIFF_LOCK	●	●	●	○	●	○	○
CEDRIC/GLORIA	Y34	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
CEDRIC/GLORIA	Y34	ALL	DIU	○	●	●	○	●	○	○
CEDRIC/GLORIA	Y34	ALL	ENGINE	●	●	●	※	●	●	001
CEDRIC/GLORIA	Y34	ALL	EPS	●	●	●	○	●	○	002
CEDRIC/GLORIA	Y34	ALL	E_4WD	●	●	●	※	●	●	002
CEDRIC/GLORIA	Y34	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
CEDRIC/GLORIA	Y34	ALL	HVAC	●	●	●	○	●	○	002
CEDRIC/GLORIA	Y34	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
CEDRIC/GLORIA	Y34	ALL	IPDM_ER	○	●	●	○	●	●	002
CEDRIC/GLORIA	Y34	ALL	IVMS	●	●	●	○	●	○	○
CEDRIC/GLORIA	Y34	ALL	LANE_CAMERA	●	●	●	○	●	●	001
CEDRIC/GLORIA	Y34	ALL	METER	※	●	●	○	●	○	002
CEDRIC/GLORIA	Y34	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
CEDRIC/GLORIA	Y34	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
CEDRIC/GLORIA	Y34	ALL	MULTI_AV	※	●	●	○	●	○	○
CEDRIC/GLORIA	Y34	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
CEDRIC/GLORIA	Y34	ALL	RASHICAS	●	●	●	○	●	●	○
CEDRIC/GLORIA	Y34	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
CEDRIC/GLORIA	Y34	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
CEDRIC/GLORIA	Y34	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
CEDRIC/GLORIA	Y34	ALL	SONAR	●	●	●	○	●	●	○
CEDRIC/GLORIA	Y34	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
CEDRIC/GLORIA	Y34	ALL	TBDAVM	●	●	●	○	●	●	001
CEDRIC/GLORIA	Y34	ALL	TCS	●	●	●	●	●	●	001
CEDRIC/GLORIA	Y34	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
CEFIRO	A33	ALL	ABS	●	●	●	○	●	●	001
CEFIRO	A33	ALL	ACM	●	●	●	○	●	○	○
CEFIRO	A33	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
CEFIRO	A33	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
CEFIRO	A33	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
CEFIRO	A33	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
CEFIRO	A33	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
CEFIRO	A33	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
CEFIRO	A33	ALL	ASCD	○	●	●	○	●	○	○
CEFIRO	A33	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
CEFIRO	A33	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
CEFIRO	A33	ALL	BCM	※	●	●	○	●	●	001, 002
CEFIRO	A33	ALL	DIFF_LOCK	●	●	●	○	●	○	○
CEFIRO	A33	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
CEFIRO	A33	ALL	DIU	○	●	●	○	●	○	○
CEFIRO	A33	ALL	ENGINE	●	●	●	※	●	●	001
CEFIRO	A33	ALL	EPS	●	●	●	○	●	○	002
CEFIRO	A33	ALL	E_4WD	●	●	●	※	●	●	002
CEFIRO	A33	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
CEFIRO	A33	ALL	HVAC	●	●	●	○	●	○	002
CEFIRO	A33	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
CEFIRO	A33	ALL	IPDM_ER	○	●	●	○	●	●	002
CEFIRO	A33	ALL	IVMS	●	●	●	○	●	○	○
CEFIRO	A33	ALL	LANE_CAMERA	●	●	●	○	●	●	001
CEFIRO	A33	ALL	METER	※	●	●	○	●	○	002
CEFIRO	A33	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
CEFIRO	A33	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
CEFIRO	A33	ALL	MULTI_AV	※	●	●	○	●	○	○
CEFIRO	A33	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
CEFIRO	A33	ALL	RASHICAS	●	●	●	○	●	●	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
CEFIRO	A33	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
CEFIRO	A33	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
CEFIRO	A33	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
CEFIRO	A33	ALL	SONAR	●	●	●	○	●	●	○
CEFIRO	A33	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
CEFIRO	A33	ALL	TBDAVM	●	●	●	○	●	●	001
CEFIRO	A33	ALL	TCS	●	●	●	●	●	●	001
CEFIRO	A33	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
CEFIRO	A32	ALL	ABS	●	●	●	○	●	●	001
CEFIRO	A32	ALL	ACM	●	●	●	○	●	○	○
CEFIRO	A32	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
CEFIRO	A32	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
CEFIRO	A32	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
CEFIRO	A32	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
CEFIRO	A32	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
CEFIRO	A32	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
CEFIRO	A32	ALL	ASCD	○	●	●	○	●	○	○
CEFIRO	A32	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
CEFIRO	A32	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
CEFIRO	A32	ALL	BCM	※	●	●	○	●	●	001, 002
CEFIRO	A32	ALL	DIFF_LOCK	●	●	●	○	●	○	○
CEFIRO	A32	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
CEFIRO	A32	ALL	DIU	○	●	●	○	●	○	○
CEFIRO	A32	ALL	ENGINE	●	●	●	※	●	●	001
CEFIRO	A32	ALL	EPS	●	●	●	○	●	○	002
CEFIRO	A32	ALL	E_4WD	●	●	●	※	●	●	002
CEFIRO	A32	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
CEFIRO	A32	ALL	HVAC	●	●	●	○	●	○	002
CEFIRO	A32	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
CEFIRO	A32	ALL	IPDM_ER	○	●	●	○	●	●	002
CEFIRO	A32	ALL	IVMS	●	●	●	○	●	○	○
CEFIRO	A32	ALL	LANE_CAMERA	●	●	●	○	●	●	001
CEFIRO	A32	ALL	METER	※	●	●	○	●	○	002
CEFIRO	A32	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
CEFIRO	A32	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
CEFIRO	A32	ALL	MULTI_AV	※	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
CEFIRO	A32	ALL	NATS_IMM	○	●	●	○	○	○	004, 006
CEFIRO	A32	ALL	RASHICAS	●	●	●	○	●	●	○
CEFIRO	A32	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
CEFIRO	A32	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
CEFIRO	A32	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
CEFIRO	A32	ALL	SONAR	●	●	●	○	●	●	○
CEFIRO	A32	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
CEFIRO	A32	ALL	TBDAVM	●	●	●	○	●	●	001
CEFIRO	A32	ALL	TCS	●	●	●	●	●	●	001
CEFIRO	A32	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
CEFIRO	J31	ALL	ABS	●	●	●	○	●	●	001
CEFIRO	J31	ALL	ACM	●	●	●	○	●	○	○
CEFIRO	J31	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
CEFIRO	J31	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
CEFIRO	J31	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
CEFIRO	J31	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
CEFIRO	J31	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
CEFIRO	J31	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
CEFIRO	J31	ALL	ASCD	○	●	●	○	●	○	○
CEFIRO	J31	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
CEFIRO	J31	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
CEFIRO	J31	ALL	BCM	※	●	●	○	●	●	001, 002
CEFIRO	J31	ALL	DIFF_LOCK	●	●	●	○	●	○	○
CEFIRO	J31	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
CEFIRO	J31	ALL	DIU	○	●	●	○	●	○	○
CEFIRO	J31	ALL	ENGINE	●	●	●	※	●	●	001
CEFIRO	J31	ALL	EPS	●	●	●	○	●	○	002
CEFIRO	J31	ALL	E_4WD	●	●	●	※	●	●	002
CEFIRO	J31	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
CEFIRO	J31	ALL	HVAC	●	●	●	○	●	○	002
CEFIRO	J31	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
CEFIRO	J31	ALL	IPDM_ER	○	●	●	○	●	●	002
CEFIRO	J31	ALL	IVMS	●	●	●	○	●	○	○
CEFIRO	J31	ALL	LANE_CAMERA	●	●	●	○	●	●	001
CEFIRO	J31	ALL	METER	※	●	●	○	●	○	002
CEFIRO	J31	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
CEFIRO	J31	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
CEFIRO	J31	ALL	MULTI_AV	※	●	●	○	●	○	○
CEFIRO	J31	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
CEFIRO	J31	ALL	RASHICAS	●	●	●	○	●	●	○
CEFIRO	J31	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
CEFIRO	J31	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
CEFIRO	J31	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
CEFIRO	J31	ALL	SONAR	●	●	●	○	●	●	○
CEFIRO	J31	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
CEFIRO	J31	ALL	TBDAVM	●	●	●	○	●	●	001
CEFIRO	J31	ALL	TCS	●	●	●	●	●	●	001
CEFIRO	J31	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
CIMA	F50	ALL	ABS	●	●	●	○	●	●	001
CIMA	F50	ALL	ACM	●	●	●	○	●	○	○
CIMA	F50	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
CIMA	F50	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
CIMA	F50	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
CIMA	F50	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
CIMA	F50	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
CIMA	F50	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
CIMA	F50	ALL	ASCD	○	●	●	○	●	○	○
CIMA	F50	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
CIMA	F50	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
CIMA	F50	ALL	BCM	※	●	●	○	●	●	001, 002
CIMA	F50	ALL	DIFF_LOCK	●	●	●	○	●	○	○
CIMA	F50	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
CIMA	F50	ALL	DIU	○	●	●	○	●	○	○
CIMA	F50	ALL	ENGINE	●	●	●	※	●	●	001
CIMA	F50	ALL	EPS	●	●	●	○	●	○	002
CIMA	F50	ALL	E_4WD	●	●	●	※	●	●	002
CIMA	F50	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
CIMA	F50	ALL	HVAC	●	●	●	○	●	○	002
CIMA	F50	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
CIMA	F50	ALL	IPDM_ER	○	●	●	○	●	●	002
CIMA	F50	ALL	IVMS	●	●	●	○	●	○	○
CIMA	F50	ALL	LANE_CAMERA	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
CIMA	F50	ALL	METER	※	●	●	○	●	○	002
CIMA	F50	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
CIMA	F50	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
CIMA	F50	ALL	MULTI_AV	※	●	●	○	●	○	○
CIMA	F50	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
CIMA	F50	ALL	RASHICAS	●	●	●	○	●	●	○
CIMA	F50	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
CIMA	F50	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
CIMA	F50	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
CIMA	F50	ALL	SONAR	●	●	●	○	●	●	○
CIMA	F50	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
CIMA	F50	ALL	TBDAVM	●	●	●	○	●	●	001
CIMA	F50	ALL	TCS	●	●	●	●	●	●	001
CIMA	F50	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
CIMA	FY33	ALL	ABS	●	●	●	○	●	●	001
CIMA	FY33	ALL	ACM	●	●	●	○	●	○	○
CIMA	FY33	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
CIMA	FY33	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
CIMA	FY33	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
CIMA	FY33	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
CIMA	FY33	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
CIMA	FY33	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
CIMA	FY33	ALL	ASCD	○	●	●	○	●	○	○
CIMA	FY33	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
CIMA	FY33	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
CIMA	FY33	ALL	BCM	※	●	●	○	●	●	001, 002
CIMA	FY33	ALL	DIFF_LOCK	●	●	●	○	●	○	○
CIMA	FY33	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
CIMA	FY33	ALL	DIU	○	●	●	○	●	○	○
CIMA	FY33	ALL	ENGINE	●	●	●	※	●	●	001
CIMA	FY33	ALL	EPS	●	●	●	○	●	○	002
CIMA	FY33	ALL	E_4WD	●	●	●	※	●	●	002
CIMA	FY33	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
CIMA	FY33	ALL	HVAC	●	●	●	○	●	○	002
CIMA	FY33	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
CIMA	FY33	ALL	IPDM_ER	○	●	●	○	●	●	002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
CIMA	FY33	ALL	IVMS	●	●	●	○	●	○	○
CIMA	FY33	ALL	LANE CAMERA	●	●	●	○	●	●	001
CIMA	FY33	ALL	METER	※	●	●	○	●	○	002
CIMA	FY33	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
CIMA	FY33	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
CIMA	FY33	ALL	MULTI_AV	※	●	●	○	●	○	○
CIMA	FY33	ALL	NATS_IMMUE	○	●	●	○	○	○	004, 006
CIMA	FY33	ALL	RASHICAS	●	●	●	○	●	●	○
CIMA	FY33	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
CIMA	FY33	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
CIMA	FY33	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
CIMA	FY33	ALL	SONAR	●	●	●	○	●	●	○
CIMA	FY33	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
CIMA	FY33	ALL	TBDAVM	●	●	●	○	●	●	001
CIMA	FY33	ALL	TCS	●	●	●	●	●	●	001
CIMA	FY33	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
CIMA	HGY51	2012	ABS	●	●	●	※	●	●	001
CIMA	HGY51	2012	ACCELE_PEDAL_ACT	●	●	●	○	●	●	○
CIMA	HGY51	2012	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
CIMA	HGY51	2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
CIMA	HGY51	2012	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
CIMA	HGY51	2012	AUTO_DRIVE_POS	●	●	●	○	●	●	001
CIMA	HGY51	2012	BCM	※	●	●	○	●	●	001, 002
CIMA	HGY51	2012	DIGITAL_SOUND_CONTROLLER	○	○	○	○	○	○	001
CIMA	HGY51	2012	ENGINE	●	●	●	※	●	●	001
CIMA	HGY51	2012	EPS	●	●	●	○	●	○	002
CIMA	HGY51	2012	EV/HEV	●	●	●	●	●	●	001
CIMA	HGY51	2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
CIMA	HGY51	2012	HVAC	●	●	●	○	●	●	001
CIMA	HGY51	2012	IPDM_ER	○	●	●	○	●	●	002
CIMA	HGY51	2012	LASER	●	●	●	○	●	○	001
CIMA	HGY51	2012	LANE CAMERA	●	●	●	○	●	●	001
CIMA	HGY51	2012	HV BATTERY	●	●	●	●	●	●	001
CIMA	HGY51	2012	METER	※	●	●	○	●	○	002
CIMA	HGY51	2012	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
CIMA	HGY51	2012	MULTI_AV	※	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
CIMA	HGY51	2012	POP_UP_HOOD	●	●	●	○	●	○	008
CIMA	HGY51	2012	PRECRASH_SEATBELT	●	●	●	○	●	○	001
CIMA	HGY51	2012	ICC	●	●	●	※	●	●	001, 002
CIMA	HGY51	2012	TRANSMISSION	●	●	●	※	●	※	001, 002
CIVILIAN	W41	ALL	ABS	●	●	●	○	●	●	001
CIVILIAN	W41	ALL	ACM	●	●	●	○	●	○	○
CIVILIAN	W41	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
CIVILIAN	W41	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
CIVILIAN	W41	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
CIVILIAN	W41	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
CIVILIAN	W41	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
CIVILIAN	W41	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
CIVILIAN	W41	ALL	ASCD	○	●	●	○	●	○	○
CIVILIAN	W41	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
CIVILIAN	W41	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
CIVILIAN	W41	ALL	BCM	※	●	●	○	●	●	001, 002
CIVILIAN	W41	ALL	DIFF_LOCK	●	●	●	○	●	○	○
CIVILIAN	W41	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
CIVILIAN	W41	ALL	DIU	○	●	●	○	●	○	○
CIVILIAN	W41	ALL	ENGINE	●	●	●	※	●	●	001
CIVILIAN	W41	ALL	EPS	●	●	●	○	●	○	002
CIVILIAN	W41	ALL	E_4WD	●	●	●	※	●	●	002
CIVILIAN	W41	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
CIVILIAN	W41	ALL	HVAC	●	●	●	○	●	○	002
CIVILIAN	W41	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
CIVILIAN	W41	ALL	IPDM_ER	○	●	●	○	●	●	002
CIVILIAN	W41	ALL	IVMS	●	●	●	○	●	○	○
CIVILIAN	W41	ALL	LANE_CAMERA	●	●	●	○	●	●	001
CIVILIAN	W41	ALL	METER	※	●	●	○	●	○	002
CIVILIAN	W41	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
CIVILIAN	W41	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
CIVILIAN	W41	ALL	MULTI_AV	※	●	●	○	●	○	○
CIVILIAN	W41	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
CIVILIAN	W41	ALL	RASHICAS	●	●	●	○	●	●	○
CIVILIAN	W41	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
CIVILIAN	W41	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
CIVILIAN	W41	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
CIVILIAN	W41	ALL	SONAR	●	●	●	○	●	●	○
CIVILIAN	W41	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
CIVILIAN	W41	ALL	TBDAVM	●	●	●	○	●	●	001
CIVILIAN	W41	ALL	TCS	●	●	●	●	●	●	001
CIVILIAN	W41	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
CREW	K30	ALL	ABS	●	●	●	○	●	●	001
CREW	K30	ALL	ACM	●	●	●	○	●	○	○
CREW	K30	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
CREW	K30	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
CREW	K30	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
CREW	K30	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
CREW	K30	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
CREW	K30	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
CREW	K30	ALL	ASCD	○	●	●	○	●	○	○
CREW	K30	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
CREW	K30	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
CREW	K30	ALL	BCM	※	●	●	○	●	●	001, 002
CREW	K30	ALL	DIFF_LOCK	●	●	●	○	●	○	○
CREW	K30	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
CREW	K30	ALL	DIU	○	●	●	○	●	○	○
CREW	K30	ALL	ENGINE	●	●	●	※	●	●	001
CREW	K30	ALL	EPS	●	●	●	○	●	○	002
CREW	K30	ALL	E_4WD	●	●	●	※	●	●	002
CREW	K30	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
CREW	K30	ALL	HVAC	●	●	●	○	●	○	002
CREW	K30	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
CREW	K30	ALL	IPDM_ER	○	●	●	○	●	●	002
CREW	K30	ALL	IVMS	●	●	●	○	●	○	○
CREW	K30	ALL	LANE_CAMERA	●	●	●	○	●	●	001
CREW	K30	ALL	METER	※	●	●	○	●	○	002
CREW	K30	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
CREW	K30	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
CREW	K30	ALL	MULTI_AV	※	●	●	○	●	○	○
CREW	K30	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
CREW	K30	ALL	RASHICAS	●	●	●	○	●	●	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
CREW	K30	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
CREW	K30	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
CREW	K30	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
CREW	K30	ALL	SONAR	●	●	●	○	●	●	○
CREW	K30	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
CREW	K30	ALL	TBDAVM	●	●	●	○	●	●	001
CREW	K30	ALL	TCS	●	●	●	●	●	●	001
CREW	K30	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
CUBE	Z12	2008-2012	ABS	●	●	●	○	●	●	001
CUBE	Z12	2008-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
CUBE	Z12	2008-2012	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
CUBE	Z12	2008-2012	BCM	※	●	●	○	●	●	001, 002
CUBE	Z12	2008-2012	ENGINE	●	●	●	※	●	●	001
CUBE	Z12	2008-2012	EPS	●	●	●	○	●	○	002
CUBE	Z12	2008-2012	E_4WD	●	●	●	※	●	●	002
CUBE	Z12	2008-2012	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
CUBE	Z12	2008-2012	IPDM_ER	○	●	●	○	●	●	002
CUBE	Z12	2008-2012	METER	※	●	●	○	●	○	002
CUBE	Z12	2008-2012	MULTI_AV	※	●	●	○	●	○	○
CUBE	Z12	2008-2012	SONAR	●	●	●	○	●	●	○
CUBE	Z12	2008-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
cube3	GZ11	ALL	ABS	●	●	●	○	●	●	001
cube3	GZ11	ALL	ACM	●	●	●	○	●	○	○
cube3	GZ11	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
cube3	GZ11	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
cube3	GZ11	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
cube3	GZ11	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
cube3	GZ11	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
cube3	GZ11	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
cube3	GZ11	ALL	ASCD	○	●	●	○	●	○	○
cube3	GZ11	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
cube3	GZ11	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
cube3	GZ11	ALL	BCM	※	●	●	○	●	●	001, 002
cube3	GZ11	ALL	DIFF_LOCK	●	●	●	○	●	○	○
cube3	GZ11	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
cube3	GZ11	ALL	DIU	○	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
cube3	GZ11	ALL	ENGINE	●	●	●	※	●	●	001
cube3	GZ11	ALL	EPS	●	●	●	○	●	○	002
cube3	GZ11	ALL	E_4WD	●	●	●	※	●	●	002
cube3	GZ11	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
cube3	GZ11	ALL	HVAC	●	●	●	○	●	○	002
cube3	GZ11	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
cube3	GZ11	ALL	IPDM_ER	○	●	●	○	●	●	002
cube3	GZ11	ALL	IVMS	●	●	●	○	●	○	○
cube3	GZ11	ALL	LANE_CAMERA	●	●	●	○	●	●	001
cube3	GZ11	ALL	METER	※	●	●	○	●	○	002
cube3	GZ11	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
cube3	GZ11	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
cube3	GZ11	ALL	MULTI_AV	※	●	●	○	●	○	○
cube3	GZ11	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
cube3	GZ11	ALL	RASHICAS	●	●	●	○	●	●	○
cube3	GZ11	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
cube3	GZ11	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
cube3	GZ11	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
cube3	GZ11	ALL	SONAR	●	●	●	○	●	●	○
cube3	GZ11	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
cube3	GZ11	ALL	TBDAVM	●	●	●	○	●	●	001
cube3	GZ11	ALL	TCS	●	●	●	●	●	●	001
cube3	GZ11	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
DATSUN TRACK	D22	ALL	ABS	●	●	●	○	●	●	001
DATSUN TRACK	D22	ALL	ACM	●	●	●	○	●	○	○
DATSUN TRACK	D22	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
DATSUN TRACK	D22	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
DATSUN TRACK	D22	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
DATSUN TRACK	D22	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
DATSUN TRACK	D22	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
DATSUN TRACK	D22	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
DATSUN TRACK	D22	ALL	ASCD	○	●	●	○	●	○	○
DATSUN TRACK	D22	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
DATSUN TRACK	D22	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
DATSUN TRACK	D22	ALL	BCM	※	●	●	○	●	●	001, 002
DATSUN TRACK	D22	ALL	DIFF_LOCK	●	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
DATSUN TRACK	D22	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
DATSUN TRACK	D22	ALL	DIU	○	●	●	○	●	○	○
DATSUN TRACK	D22	ALL	ENGINE	●	●	●	※	●	●	001
DATSUN TRACK	D22	ALL	EPS	●	●	●	○	●	○	002
DATSUN TRACK	D22	ALL	E_4WD	●	●	●	※	●	●	002
DATSUN TRACK	D22	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
DATSUN TRACK	D22	ALL	HVAC	●	●	●	○	●	○	002
DATSUN TRACK	D22	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
DATSUN TRACK	D22	ALL	IPDM_ER	○	●	●	○	●	●	002
DATSUN TRACK	D22	ALL	IVMS	●	●	●	○	●	○	○
DATSUN TRACK	D22	ALL	LANE_CAMERA	●	●	●	○	●	●	001
DATSUN TRACK	D22	ALL	METER	※	●	●	○	●	○	002
DATSUN TRACK	D22	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
DATSUN TRACK	D22	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
DATSUN TRACK	D22	ALL	MULTI_AV	※	●	●	○	●	○	○
DATSUN TRACK	D22	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
DATSUN TRACK	D22	ALL	RASHICAS	●	●	●	○	●	●	○
DATSUN TRACK	D22	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
DATSUN TRACK	D22	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
DATSUN TRACK	D22	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
DATSUN TRACK	D22	ALL	SONAR	●	●	●	○	●	●	○
DATSUN TRACK	D22	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
DATSUN TRACK	D22	ALL	TBDAVM	●	●	●	○	●	●	001
DATSUN TRACK	D22	ALL	TCS	●	●	●	●	●	●	001
DATSUN TRACK	D22	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
DATSUN TRACK	D22	2012	ENGINE	●	●	●	※	●	●	001
DATSUN TRACK	D22	2012	ABS	●	●	●	○	●	●	001
DATSUN TRACK	D22	2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
DATSUN TRACK	D22	2012	SVT	●	●	●	○	●	○	001
DUALIS	J10	2007-2012	ABS	●	●	●	※	●	●	001
DUALIS	J10	2007-2012	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
DUALIS	J10	2007-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
DUALIS	J10	2007-2012	ALL MODE AWD/4WD	●	●	●	○	●	●	001
DUALIS	J10	2007-2012	BCM	※	●	●	○	●	●	001, 002
DUALIS	J10	2007-2012	ENGINE	●	●	●	※	●	●	001
DUALIS	J10	2007-2012	EPS	●	●	●	○	●	○	002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
DUALIS	J10	2007-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
DUALIS	J10	2007-2012	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
DUALIS	J10	2007-2012	IPDM_ER	○	●	●	○	●	●	002
DUALIS	J10	2007-2012	METER	※	●	●	○	●	○	002
DUALIS	J10	2007-2012	MULTI_AV	※	●	●	○	●	○	○
DUALIS	J10	2007-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001
DUALIS	J10	2007-2012	TRANSMISSION	●	●	●	※	●	※	001, 002
ELGRAND	E50	ALL	ABS	●	●	●	○	●	●	001
ELGRAND	E50	ALL	ACM	●	●	●	○	●	○	○
ELGRAND	E50	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
ELGRAND	E50	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
ELGRAND	E50	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
ELGRAND	E50	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
ELGRAND	E50	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
ELGRAND	E50	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
ELGRAND	E50	ALL	ASCD	○	●	●	○	●	○	○
ELGRAND	E50	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
ELGRAND	E50	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
ELGRAND	E50	ALL	BCM	※	●	●	○	●	●	001, 002
ELGRAND	E50	ALL	DIFF_LOCK	●	●	●	○	●	○	○
ELGRAND	E50	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
ELGRAND	E50	ALL	DIU	○	●	●	○	●	○	○
ELGRAND	E50	ALL	ENGINE	●	●	●	※	●	●	001
ELGRAND	E50	ALL	EPS	●	●	●	○	●	○	002
ELGRAND	E50	ALL	E_4WD	●	●	●	※	●	●	002
ELGRAND	E50	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
ELGRAND	E50	ALL	HVAC	●	●	●	○	●	○	002
ELGRAND	E50	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
ELGRAND	E50	ALL	IPDM_ER	○	●	●	○	●	●	002
ELGRAND	E50	ALL	IVMS	●	●	●	○	●	○	○
ELGRAND	E50	ALL	LANE_CAMERA	●	●	●	○	●	●	001
ELGRAND	E50	ALL	METER	※	●	●	○	●	○	002
ELGRAND	E50	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
ELGRAND	E50	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
ELGRAND	E50	ALL	MULTI_AV	※	●	●	○	●	○	○
ELGRAND	E50	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
ELGRAND	E50	ALL	RASHICAS	●	●	●	○	●	●	○
ELGRAND	E50	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
ELGRAND	E50	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
ELGRAND	E50	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
ELGRAND	E50	ALL	SONAR	●	●	●	○	●	●	○
ELGRAND	E50	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
ELGRAND	E50	ALL	TBDAVM	●	●	●	○	●	●	001
ELGRAND	E50	ALL	TCS	●	●	●	●	●	●	001
ELGRAND	E50	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
ELGRAND	E52	2010-2011	4WAS	●	●	●	○	●	●	○
ELGRAND	E52	2010-2011	ABS	●	●	●	※	●	●	001
ELGRAND	E52	2010-2011	ACCELE_PEDAL_ACT	●	●	●	○	●	●	○
ELGRAND	E52	2010-2011	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
ELGRAND	E52	2010-2011	AIRBAG	●	●	●	●	●	○	003, 005, 008
ELGRAND	E52	2010-2011	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
ELGRAND	E52	2010-2011	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
ELGRAND	E52	2010-2011	AUTO_DRIVE_POS	●	●	●	○	●	●	001
ELGRAND	E52	2010-2011	AUTO_SLIDE_DOOR	●	●	●	○	●	※	○
ELGRAND	E52	2010-2011	AUTO_SLIDE_DOOR_RIGHT	●	●	●	○	●	●	○
ELGRAND	E52	2010-2011	BCM	※	●	●	○	●	●	001, 002
ELGRAND	E52	2010-2011	ENGINE	●	●	●	※	●	●	001
ELGRAND	E52	2010-2011	EPS	●	●	●	○	●	○	002
ELGRAND	E52	2010-2011	E_SUS	●	●	●	○	●	●	001
ELGRAND	E52	2010-2011	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
ELGRAND	E52	2010-2011	HVAC	●	●	●	○	●	●	001
ELGRAND	E52	2010-2011	IPDM_ER	○	●	●	○	●	●	002
ELGRAND	E52	2010-2011	LASER	●	●	●	○	●	○	001
ELGRAND	E52	2010-2011	LANE_CAMERA	●	●	●	○	●	●	001
ELGRAND	E52	2010-2011	METER	※	●	●	○	●	○	002
ELGRAND	E52	2010-2011	MULTI_AV	※	●	●	○	●	○	○
ELGRAND	E52	2010-2011	POP_UP_HOOD	●	●	●	○	●	○	008
ELGRAND	E52	2010-2011	PRECRASH_SEATBELT	●	●	●	○	●	○	001
ELGRAND	E52	2010-2011	REARVIEW_CAMERA	●	○	○	○	●	○	001
ELGRAND	E52	2010-2011	SONAR	●	●	●	○	●	●	○
ELGRAND	E52	2010-2011	ICC	●	●	●	※	●	●	001, 002
ELGRAND	E52	2010-2011	TRANSMISSION	●	●	●	※	●	※	001, 002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
FAIRLADY Z	Z34	2008-2012	CONVERTIBLE_ROOF	●	●	●	○	●	●	001
FAIRLADY Z	Z34	2008-2012	ABS	●	●	●	※	●	●	001
FAIRLADY Z	Z34	2008-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
FAIRLADY Z	Z34	2008-2012	BCM	※	●	●	○	●	●	001, 002
FAIRLADY Z	Z34	2008-2012	ENGINE	●	●	●	※	●	●	001
FAIRLADY Z	Z34	2008-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
FAIRLADY Z	Z34	2008-2012	HVAC	●	●	●	○	●	●	001
FAIRLADY Z	Z34	2008-2012	IPDM_ER	○	●	●	○	●	●	002
FAIRLADY Z	Z34	2008-2012	METER	※	●	●	○	●	○	002
FAIRLADY Z	Z34	2008-2012	MULTI_AV	※	●	●	○	●	○	○
FAIRLADY Z	Z34	2008-2012	POP_UP_HOOD	●	●	●	○	●	○	008
FAIRLADY Z	Z34	2008-2012	TRANSMISSION	●	●	●	※	●	※	001, 002
FRONTIER	D22	ALL	ABS	●	●	●	○	●	●	001
FRONTIER	D22	ALL	ACM	●	●	●	○	●	○	○
FRONTIER	D22	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
FRONTIER	D22	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
FRONTIER	D22	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
FRONTIER	D22	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
FRONTIER	D22	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
FRONTIER	D22	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
FRONTIER	D22	ALL	ASCD	○	●	●	○	●	○	○
FRONTIER	D22	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
FRONTIER	D22	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
FRONTIER	D22	ALL	BCM	※	●	●	○	●	●	001, 002
FRONTIER	D22	ALL	DIFF_LOCK	●	●	●	○	●	○	○
FRONTIER	D22	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
FRONTIER	D22	ALL	DIU	○	●	●	○	●	○	○
FRONTIER	D22	ALL	ENGINE	●	●	●	※	●	●	001
FRONTIER	D22	ALL	EPS	●	●	●	○	●	○	002
FRONTIER	D22	ALL	E_4WD	●	●	●	※	●	●	002
FRONTIER	D22	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
FRONTIER	D22	ALL	HVAC	●	●	●	○	●	○	002
FRONTIER	D22	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
FRONTIER	D22	ALL	IPDM_ER	○	●	●	○	●	●	002
FRONTIER	D22	ALL	IVMS	●	●	●	○	●	○	○
FRONTIER	D22	ALL	LANE_CAMERA	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
FRONTIER	D22	ALL	METER	※	●	●	○	●	○	002
FRONTIER	D22	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
FRONTIER	D22	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
FRONTIER	D22	ALL	MULTI_AV	※	●	●	○	●	○	○
FRONTIER	D22	ALL	NATS_IMMUE	○	●	●	○	○	○	004, 006
FRONTIER	D22	ALL	RASHICAS	●	●	●	○	●	●	○
FRONTIER	D22	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
FRONTIER	D22	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
FRONTIER	D22	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
FRONTIER	D22	ALL	SONAR	●	●	●	○	●	●	○
FRONTIER	D22	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
FRONTIER	D22	ALL	TBDAVM	●	●	●	○	●	●	001
FRONTIER	D22	ALL	TCS	●	●	●	●	●	●	001
FRONTIER	D22	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
FRONTIER	D40	2007-2012	ABS	●	●	●	○	●	●	001
FRONTIER	D40	2007-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
FRONTIER	D40	2007-2012	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
FRONTIER	D40	2007-2012	AUTO_DRIVE_POS	●	●	●	○	●	●	001
FRONTIER	D40	2007-2012	BCM	※	●	●	○	●	●	001, 002
FRONTIER	D40	2007-2012	DIFF_LOCK	●	●	●	○	●	○	○
FRONTIER	D40	2007-2012	ENGINE	●	●	●	※	●	●	001
FRONTIER	D40	2007-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
FRONTIER	D40	2007-2012	HVAC	●	●	●	○	●	●	001
FRONTIER	D40	2007-2012	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
FRONTIER	D40	2007-2012	IPDM_ER	○	●	●	○	●	●	002
FRONTIER	D40	2007-2012	METER	※	●	●	○	●	○	002
FRONTIER	D40	2007-2012	MULTI_AV	※	●	●	○	●	○	○
FRONTIER	D40	2007-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001
FRONTIER	D40	2007-2012	SVT	●	●	●	○	●	○	001
FRONTIER	D40	2007-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
FRONTIER/NAVARA	D40	2007-2012	ABS	●	●	●	○	●	●	001
FRONTIER/NAVARA	D40	2007-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
FRONTIER/NAVARA	D40	2007-2012	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
FRONTIER/NAVARA	D40	2007-2012	AUTO_DRIVE_POS	●	●	●	○	●	●	001
FRONTIER/NAVARA	D40	2007-2012	BCM	※	●	●	○	●	●	001, 002
FRONTIER/NAVARA	D40	2007-2012	DIFF_LOCK	●	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
FRONTIER/NAVARA	D40	2007-2012	ENGINE	●	●	●	※	●	●	001
FRONTIER/NAVARA	D40	2007-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
FRONTIER/NAVARA	D40	2007-2012	HVAC	●	●	●	○	●	●	001
FRONTIER/NAVARA	D40	2007-2012	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
FRONTIER/NAVARA	D40	2007-2012	IPDM_ER	○	●	●	○	●	●	002
FRONTIER/NAVARA	D40	2007-2012	METER	※	●	●	○	●	○	002
FRONTIER/NAVARA	D40	2007-2012	MULTI_AV	※	●	●	○	●	○	○
FRONTIER/NAVARA	D40	2007-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001
FRONTIER/NAVARA	D40	2007-2012	SVT	●	●	●	○	●	○	001
FRONTIER/NAVARA	D40	2007-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
FRONTIER/PICKUP	D22	ALL	ABS	●	●	●	○	●	●	001
FRONTIER/PICKUP	D22	ALL	ACM	●	●	●	○	●	○	○
FRONTIER/PICKUP	D22	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
FRONTIER/PICKUP	D22	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
FRONTIER/PICKUP	D22	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
FRONTIER/PICKUP	D22	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
FRONTIER/PICKUP	D22	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
FRONTIER/PICKUP	D22	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
FRONTIER/PICKUP	D22	ALL	ASCD	○	●	●	○	●	○	○
FRONTIER/PICKUP	D22	ALL	AUTO_DRIVE_POS	●	●	●	○	●	○	○
FRONTIER/PICKUP	D22	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	●	001
FRONTIER/PICKUP	D22	ALL	BCM	※	●	●	○	●	●	001, 002
FRONTIER/PICKUP	D22	ALL	DIFF_LOCK	●	●	●	○	●	○	○
FRONTIER/PICKUP	D22	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
FRONTIER/PICKUP	D22	ALL	DIU	○	●	●	○	●	○	○
FRONTIER/PICKUP	D22	ALL	ENGINE	●	●	●	※	●	●	001
FRONTIER/PICKUP	D22	ALL	EPS	●	●	●	○	●	○	002
FRONTIER/PICKUP	D22	ALL	E_4WD	●	●	●	※	●	●	002
FRONTIER/PICKUP	D22	ALL	HEAD_LAMP_LEVELIZER	●	●	●	※	●	●	001
FRONTIER/PICKUP	D22	ALL	HVAC	●	●	●	○	●	○	002
FRONTIER/PICKUP	D22	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
FRONTIER/PICKUP	D22	ALL	IPDM_ER	○	●	●	○	●	●	002
FRONTIER/PICKUP	D22	ALL	IVMS	●	●	●	○	●	○	○
FRONTIER/PICKUP	D22	ALL	LANE_CAMERA	●	●	●	○	●	●	001
FRONTIER/PICKUP	D22	ALL	METER	※	●	●	○	●	○	002
FRONTIER/PICKUP	D22	ALL	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
FRONTIER/PICKUP	D22	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
FRONTIER/PICKUP	D22	ALL	MULTI_AV	※	●	●	○	●	○	○
FRONTIER/PICKUP	D22	ALL	NATS_IMM	○	●	●	○	○	○	004, 006
FRONTIER/PICKUP	D22	ALL	RASHICAS	●	●	●	○	●	●	○
FRONTIER/PICKUP	D22	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
FRONTIER/PICKUP	D22	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
FRONTIER/PICKUP	D22	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
FRONTIER/PICKUP	D22	ALL	SONAR	●	●	●	○	●	●	○
FRONTIER/PICKUP	D22	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
FRONTIER/PICKUP	D22	ALL	TBDAVM	●	●	●	○	●	●	001
FRONTIER/PICKUP	D22	ALL	TCS	●	●	●	●	●	●	001
FRONTIER/PICKUP	D22	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
FUGA	Y50	2004-2012	ABS	●	●	●	○	●	●	001
FUGA	Y50	2004-2012	ACCELE_PEDAL_ACT	●	●	●	○	●	●	○
FUGA	Y50	2004-2012	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
FUGA	Y50	2004-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
FUGA	Y50	2004-2012	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
FUGA	Y50	2004-2012	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
FUGA	Y50	2004-2012	AUTO_DRIVE_POS	●	●	●	○	●	●	001
FUGA	Y50	2004-2012	BCM	●	●	●	○	●	●	001, 002
FUGA	Y50	2004-2012	ENGINE	●	●	●	※	●	●	001
FUGA	Y50	2004-2012	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
FUGA	Y50	2004-2012	IPDM_ER	○	●	●	○	●	●	002
FUGA	Y50	2004-2012	METER	○	●	●	○	●	○	002
FUGA	Y50	2004-2012	MULTI_AV	※	●	●	○	●	○	○
FUGA	Y50	2004-2012	PRECRASH_SEATBELT	●	●	●	○	●	○	001
FUGA	Y50	2004-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001
FUGA	Y50	2004-2012	SBLIND_CAMERA	●	○	○	○	●	○	001
FUGA	Y50	2004-2012	SONAR	●	●	●	○	●	●	○
FUGA	Y50	2004-2012	ICC	●	●	●	※	●	●	001, 002
FUGA	Y50	2004-2012	TRANSMISSION	●	●	●	※	●	●	001, 002
FUGA HYBRID	HY51	2011-2013	ABS	●	●	●	○	●	●	001
FUGA HYBRID	HY51	2011-2013	ACCELE_PEDAL_ACT	●	●	●	○	●	●	○
FUGA HYBRID	HY51	2011-2013	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
FUGA HYBRID	HY51	2011-2013	AIRBAG	●	●	●	●	●	○	003, 005, 008
FUGA HYBRID	HY51	2011-2013	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
FUGA HYBRID	HY51	2011-2013	AUTO_DRIVE_POS	●	●	●	○	●	●	001
FUGA HYBRID	HY51	2011-2013	BCM	●	●	●	○	●	●	001, 002
FUGA HYBRID	HY51	2011-2013	DIAG_DATA_RECORDER	○	○	○	○	○	○	001
FUGA HYBRID	HY51	2011-2013	DIGITAL_SOUND_CONTROLLER	●	●	●	○	●	○	○
FUGA HYBRID	HY51	2011-2013	EMCM	●	●	●	○	●	●	001
FUGA HYBRID	HY51	2011-2013	ENGINE	●	●	●	※	●	●	001
FUGA HYBRID	HY51	2011-2013	EPS	●	●	●	○	●	○	002
FUGA HYBRID	HY51	2011-2013	EV/HEV	●	●	●	●	●	●	001
FUGA HYBRID	HY51	2011-2013	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
FUGA HYBRID	HY51	2011-2013	HVAC	●	●	●	○	●	●	001
FUGA HYBRID	HY51	2011-2013	IPDM_ER	○	●	●	○	●	●	002
FUGA HYBRID	HY51	2011-2013	LASER	●	●	●	○	●	●	001
FUGA HYBRID	HY51	2011-2013	HV BATTERY	●	●	●	●	●	●	001
FUGA HYBRID	HY51	2011-2013	METER	※	●	●	○	●	○	002
FUGA HYBRID	HY51	2011-2013	MOTORO_CONTROL_UNIT	●	●	●	※	●	○	001
FUGA HYBRID	HY51	2011-2013	MULTI_AV	※	●	●	○	●	○	○
FUGA HYBRID	HY51	2011-2013	POP_UP_HOOD	●	●	●	○	●	○	008
FUGA HYBRID	HY51	2011-2013	PRECRASH_SEATBELT	●	●	●	○	●	○	001
FUGA HYBRID	HY51	2011-2013	SIDE_RADAR_LEFT	●	●	●	○	●	●	001
FUGA HYBRID	HY51	2011-2013	SIDE_RADAR_RIGHT	●	●	●	○	●	●	001
FUGA HYBRID	HY51	2011-2013	SONAR	●	●	●	○	●	●	○
FUGA HYBRID	HY51	2011-2013	ICC	●	●	●	※	●	●	001, 002
FUGA HYBRID	HY51	2011-2013	TRANSMISSION	●	●	●	※	●	※	001, 002
GRAND LIVINA	L10	2011	ABS	●	●	●	○	●	●	001
GRAND LIVINA	L10	2011	AIRBAG	●	●	●	●	●	○	003, 005, 008
GRAND LIVINA	L10	2011	BCM	●	●	●	○	●	●	001, 002
GRAND LIVINA	L10	2011	ENGINE	●	●	●	※	●	●	001
GRAND LIVINA	L10	2011	EPS	●	●	●	○	●	○	002
GRAND LIVINA	L10	2011	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
GRAND LIVINA	L10	2011	IPDM_ER	○	●	●	○	●	●	002
GRAND LIVINA	L10	2011	METER	※	●	●	○	●	○	002
GRAND LIVINA	L10	2011	TRANSMISSION	●	●	●	※	●	※	001, 002
JUKE	F15	2010-2012	ABS	●	●	●	※	●	●	001
JUKE	F15	2010-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
JUKE	F15	2010-2012	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
JUKE	F15	2010-2012	BCM	※	●	●	○	●	●	001, 002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
JUKE	F15	2010-2012	ENGINE	●	●	●	※	●	●	001
JUKE	F15	2010-2012	EPS	●	●	●	○	●	○	002
JUKE	F15	2010-2012	E_4WD	●	●	●	※	●	●	002
JUKE	F15	2010-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
JUKE	F15	2010-2012	HVAC	●	●	●	○	●	●	001
JUKE	F15	2010-2012	IPDM_ER	○	●	●	○	●	●	002
JUKE	F15	2010-2012	METER	※	●	●	○	●	○	002
JUKE	F15	2010-2012	MULTI_AV	※	●	●	○	●	○	○
JUKE	F15	2010-2012	PTC_HEATER	●	●	●	○	●	○	○
JUKE	F15	2010-2012	SONAR	●	●	●	○	●	●	○
JUKE	F15	2010-2012	TRANSMISSION	●	●	●	※	●	※	001, 002
JUKE (4WD)	F15	2010-2011	ABS	●	●	●	※	●	●	001
JUKE (4WD)	F15	2010-2011	AIRBAG	●	●	●	●	●	○	003, 005, 008
JUKE (4WD)	F15	2010-2011	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
JUKE (4WD)	F15	2010-2011	BCM	※	●	●	○	●	●	001, 002
JUKE (4WD)	F15	2010-2011	ENGINE	●	●	●	※	●	●	001
JUKE (4WD)	F15	2010-2011	EPS	●	●	●	○	●	○	002
JUKE (4WD)	F15	2010-2011	HVAC	●	●	●	○	●	●	001
JUKE (4WD)	F15	2010-2011	IPDM_ER	○	●	●	○	●	●	002
JUKE (4WD)	F15	2010-2011	METER	※	●	●	○	●	○	002
JUKE (4WD)	F15	2010-2011	PTC_HEATER	●	●	●	○	●	○	○
JUKE (4WD)	F15	2010-2011	TRANSMISSION	●	●	●	※	●	※	001, 002
JUKE (2WD)	F15	2010-2012	ABS	●	●	●	※	●	●	001
JUKE (2WD)	F15	2010-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
JUKE (2WD)	F15	2010-2012	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
JUKE (2WD)	F15	2010-2012	BCM	※	●	●	○	●	●	001, 002
JUKE (2WD)	F15	2010-2012	ENGINE	●	●	●	※	●	●	001
JUKE (2WD)	F15	2010-2012	EPS	●	●	●	○	●	○	002
JUKE (2WD)	F15	2010-2012	E_4WD	●	●	●	※	●	●	002
JUKE (2WD)	F15	2010-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
JUKE (2WD)	F15	2010-2012	HVAC	●	●	●	○	●	●	001
JUKE (2WD)	F15	2010-2012	IPDM_ER	○	●	●	○	●	●	002
JUKE (2WD)	F15	2010-2012	METER	※	●	●	○	●	○	002
JUKE (2WD)	F15	2010-2012	MULTI_AV	※	●	●	○	●	○	○
JUKE (2WD)	F15	2010-2012	PTC_HEATER	●	●	●	○	●	○	○
JUKE (2WD)	F15	2010-2012	SONAR	●	●	●	○	●	●	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
JUKE (2WD)	F15	2010-2012	TRANSMISSION	●	●	●	※	●	※	001, 002
LAFESTA	B30	2004-2010	ABS	●	●	●	※	●	●	001
LAFESTA	B30	2004-2010	AIRBAG	●	●	●	●	●	○	003, 005, 008
LAFESTA	B30	2004-2010	AUTO_SLIDE_DOOR	●	●	●	○	●	※	○
LAFESTA	B30	2004-2010	BCM	※	●	●	○	●	●	001, 002
LAFESTA	B30	2004-2010	ENGINE	●	●	●	※	●	●	001
LAFESTA	B30	2004-2010	EPS	●	●	●	○	●	○	002
LAFESTA	B30	2004-2010	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
LAFESTA	B30	2004-2010	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
LAFESTA	B30	2004-2010	IPDM_ER	○	●	●	○	●	●	002
LAFESTA	B30	2004-2010	METER	※	●	●	○	●	○	002
LAFESTA	B30	2004-2010	MOTOR_ASSIST	○	●	●	○	●	○	001
LAFESTA	B30	2004-2010	MULTI_AV	※	●	●	○	●	○	○
LAFESTA	B30	2004-2010	REARVIEW_CAMERA	●	○	○	○	●	○	001
LAFESTA	B30	2004-2010	SBLIND_CAMERA	●	○	○	○	●	○	001
LAFESTA	B30	2004-2010	TRANSMISSION	●	●	●	※	●	※	001, 002
LAUREL	C35	ALL	ABS	●	●	●	○	●	●	001
LAUREL	C35	ALL	ACM	●	●	●	○	●	○	○
LAUREL	C35	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
LAUREL	C35	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
LAUREL	C35	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
LAUREL	C35	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
LAUREL	C35	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
LAUREL	C35	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
LAUREL	C35	ALL	ASCD	○	●	●	○	●	○	○
LAUREL	C35	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
LAUREL	C35	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
LAUREL	C35	ALL	BCM	●	●	●	○	●	●	001, 002
LAUREL	C35	ALL	DIFF_LOCK	●	●	●	○	●	○	○
LAUREL	C35	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
LAUREL	C35	ALL	DIU	●	●	●	○	●	○	○
LAUREL	C35	ALL	ENGINE	●	●	●	※	●	●	001
LAUREL	C35	ALL	EPS	●	●	●	○	●	○	002
LAUREL	C35	ALL	E_4WD	●	●	●	○	●	●	002
LAUREL	C35	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
LAUREL	C35	ALL	HVAC	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
LAUREL	C35	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
LAUREL	C35	ALL	IPDM_ER	○	●	●	○	●	●	002
LAUREL	C35	ALL	IVMS	●	●	●	○	●	○	○
LAUREL	C35	ALL	LDW	●	●	●	○	●	●	001
LAUREL	C35	ALL	METER	○	●	●	○	●	○	002
LAUREL	C35	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
LAUREL	C35	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
LAUREL	C35	ALL	MULTI_AV	○	●	●	○	●	○	○
LAUREL	C35	ALL	NATS_IMM	○	●	●	○	○	○	004, 006
LAUREL	C35	ALL	RASHICAS	●	●	●	○	●	●	○
LAUREL	C35	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
LAUREL	C35	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
LAUREL	C35	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
LAUREL	C35	ALL	SONAR	●	●	●	○	●	●	○
LAUREL	C35	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
LAUREL	C35	ALL	TBDAVM	●	●	●	○	●	●	001
LAUREL	C35	ALL	TCS	●	●	●	●	●	●	001
LAUREL	C35	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
LEAF	ZE0	2010-2012	ABS	●	●	●	※	●	●	001
LEAF	ZE0	2010-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
LEAF	ZE0	2010-2012	BCM	※	●	●	○	●	●	001, 002
LEAF	ZE0	2010-2012	DIGITAL_SOUND_CONTROLLER	●	●	●	○	●	○	○
LEAF	ZE0	2010-2012	EMCM	●	●	●	○	●	●	001
LEAF	ZE0	2010-2012	EPS	●	●	●	○	●	○	002
LEAF	ZE0	2010-2012	EV/HEV	●	●	●	●	●	●	001
LEAF	ZE0	2010-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
LEAF	ZE0	2010-2012	HVAC	●	●	●	○	●	●	001
LEAF	ZE0	2010-2012	IPDM_ER	○	●	●	○	●	●	002
LEAF	ZE0	2010-2012	HV BATTERY	●	●	●	●	●	●	001
LEAF	ZE0	2010-2012	METER	○	●	●	○	●	○	002
LEAF	ZE0	2010-2012	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
LEAF	ZE0	2010-2012	MULTI_AV	○	●	●	○	●	○	○
LEAF	ZE0	2010-2012	SUB METER	○	●	●	○	○	○	○
LEAF	ZE0	2010-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
LEAF (Pilot)	ZE0 (P)	2011	ABS	●	●	●	※	●	●	001
LEAF (Pilot)	ZE0 (P)	2011	AIRBAG	●	●	●	●	●	○	003, 005, 008

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
LEAF (Pilot)	ZE0(P)	2011	AUTO_DRIVE_POS	●	●	●	○	●	●	001
LEAF (Pilot)	ZE0(P)	2011	DIGITAL_SOUND_CONTROLLER	●	●	●	○	●	○	○
LEAF (Pilot)	ZE0(P)	2011	EMCM	●	●	●	○	●	●	001
LEAF (Pilot)	ZE0(P)	2011	EPS	●	●	●	○	●	○	002
LEAF (Pilot)	ZE0(P)	2011	EV/HEV	●	●	●	●	●	●	001
LEAF (Pilot)	ZE0(P)	2011	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
LEAF (Pilot)	ZE0(P)	2011	HVAC	●	●	●	○	●	●	001
LEAF (Pilot)	ZE0(P)	2011	IPDM_ER	○	●	●	○	●	●	002
LEAF (Pilot)	ZE0(P)	2011	HV BATTERY	●	●	●	●	●	●	001
LEAF (Pilot)	ZE0(P)	2011	METER	○	●	●	○	●	○	002
LEAF (Pilot)	ZE0(P)	2011	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
LEAF (Pilot)	ZE0(P)	2011	MULTI_AV	○	●	●	○	●	○	○
LEAF (Pilot)	ZE0(P)	2011	SUB METER	○	●	●	○	○	○	○
LEOPARD	JY33	ALL	ABS	●	●	●	○	●	●	001
LEOPARD	JY33	ALL	ACM	●	●	●	○	●	○	○
LEOPARD	JY33	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
LEOPARD	JY33	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
LEOPARD	JY33	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
LEOPARD	JY33	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
LEOPARD	JY33	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
LEOPARD	JY33	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
LEOPARD	JY33	ALL	ASCD	○	●	●	○	●	○	○
LEOPARD	JY33	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
LEOPARD	JY33	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
LEOPARD	JY33	ALL	BCM	●	●	●	○	●	●	001, 002
LEOPARD	JY33	ALL	DIFF_LOCK	●	●	●	○	●	○	○
LEOPARD	JY33	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
LEOPARD	JY33	ALL	DIU	●	●	●	○	●	○	○
LEOPARD	JY33	ALL	ENGINE	●	●	●	※	●	●	001
LEOPARD	JY33	ALL	EPS	●	●	●	○	●	○	002
LEOPARD	JY33	ALL	E_4WD	●	●	●	○	●	●	002
LEOPARD	JY33	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
LEOPARD	JY33	ALL	HVAC	●	●	●	○	●	●	001
LEOPARD	JY33	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
LEOPARD	JY33	ALL	IPDM_ER	○	●	●	○	●	●	002
LEOPARD	JY33	ALL	IVMS	●	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
LEOPARD	JY33	ALL	LDW	●	●	●	○	●	●	001
LEOPARD	JY33	ALL	METER	○	●	●	○	●	○	002
LEOPARD	JY33	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
LEOPARD	JY33	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
LEOPARD	JY33	ALL	MULTI_AV	○	●	●	○	●	○	○
LEOPARD	JY33	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
LEOPARD	JY33	ALL	RASHICAS	●	●	●	○	●	●	○
LEOPARD	JY33	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
LEOPARD	JY33	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
LEOPARD	JY33	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
LEOPARD	JY33	ALL	SONAR	●	●	●	○	●	●	○
LEOPARD	JY33	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
LEOPARD	JY33	ALL	TBDAVM	●	●	●	○	●	●	001
LEOPARD	JY33	ALL	TCS	●	●	●	●	●	●	001
LEOPARD	JY33	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
LIBERTY	M12	ALL	ABS	●	●	●	○	●	●	001
LIBERTY	M12	ALL	ACM	●	●	●	○	●	○	○
LIBERTY	M12	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
LIBERTY	M12	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
LIBERTY	M12	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
LIBERTY	M12	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
LIBERTY	M12	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
LIBERTY	M12	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
LIBERTY	M12	ALL	ASCD	○	●	●	○	●	○	○
LIBERTY	M12	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
LIBERTY	M12	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
LIBERTY	M12	ALL	BCM	●	●	●	○	●	●	001, 002
LIBERTY	M12	ALL	DIFF_LOCK	●	●	●	○	●	○	○
LIBERTY	M12	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
LIBERTY	M12	ALL	DIU	●	●	●	○	●	○	○
LIBERTY	M12	ALL	ENGINE	●	●	●	※	●	●	001
LIBERTY	M12	ALL	EPS	●	●	●	○	●	○	002
LIBERTY	M12	ALL	E_4WD	●	●	●	○	●	●	002
LIBERTY	M12	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
LIBERTY	M12	ALL	HVAC	●	●	●	○	●	●	001
LIBERTY	M12	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
LIBERTY	M12	ALL	IPDM_ER	○	●	●	○	●	●	002
LIBERTY	M12	ALL	IVMS	●	●	●	○	●	○	○
LIBERTY	M12	ALL	LDW	●	●	●	○	●	●	001
LIBERTY	M12	ALL	METER	○	●	●	○	●	○	002
LIBERTY	M12	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
LIBERTY	M12	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
LIBERTY	M12	ALL	MULTI_AV	○	●	●	○	●	○	○
LIBERTY	M12	ALL	NATS_IMMUN	○	●	●	○	○	○	004, 006
LIBERTY	M12	ALL	RASHICAS	●	●	●	○	●	●	○
LIBERTY	M12	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
LIBERTY	M12	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
LIBERTY	M12	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
LIBERTY	M12	ALL	SONAR	●	●	●	○	●	●	○
LIBERTY	M12	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
LIBERTY	M12	ALL	TBDAVM	●	●	●	○	●	●	001
LIBERTY	M12	ALL	TCS	●	●	●	●	●	●	001
LIBERTY	M12	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
LIVINA	L10	2011	ABS	●	●	●	○	●	●	001
LIVINA	L10	2011	AIRBAG	●	●	●	●	●	○	003, 005, 008
LIVINA	L10	2011	BCM	●	●	●	○	●	●	001, 002
LIVINA	L10	2011	ENGINE	●	●	●	※	●	●	001
LIVINA	L10	2011	EPS	●	●	●	○	●	○	002
LIVINA	L10	2011	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
LIVINA	L10	2011	IPDM_ER	○	●	●	○	●	●	002
LIVINA	L10	2011	METER	○	●	●	○	●	○	002
LIVINA	L10	2011	TRANSMISSION	●	●	●	○	●	○	001, 002
LIVINA GENISS	L10	2006-2010	ABS	●	●	●	○	●	●	001
LIVINA GENISS	L10	2006-2010	AIRBAG	●	●	●	●	●	○	003, 005, 008
LIVINA GENISS	L10	2006-2010	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
LIVINA GENISS	L10	2006-2010	AUTO_DRIVE_POS	●	●	●	○	●	●	001
LIVINA GENISS	L10	2006-2010	BCM	●	●	●	○	●	●	001, 002
LIVINA GENISS	L10	2006-2010	DIFF_LOCK	●	●	●	○	●	○	○
LIVINA GENISS	L10	2006-2010	ENGINE	●	●	●	※	●	●	001
LIVINA GENISS	L10	2006-2010	EPS	●	●	●	○	●	○	002
LIVINA GENISS	L10	2006-2010	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
LIVINA GENISS	L10	2006-2010	HVAC	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
LIVINA GENISS	L10	2006-2010	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
LIVINA GENISS	L10	2006-2010	IPDM_ER	○	●	●	○	●	●	002
LIVINA GENISS	L10	2006-2010	METER	○	●	●	○	●	○	002
LIVINA GENISS	L10	2006-2010	MULTI_AV	○	●	●	○	●	○	○
LIVINA GENISS	L10	2006-2010	REARVIEW_CAMERA	●	○	○	○	●	○	001
LIVINA GENISS	L10	2006-2010	SBLIND_CAMERA	●	○	○	○	●	○	001
LIVINA GENISS	L10	2006-2010	SVT	●	●	●	○	●	○	001
LIVINA GENISS	L10	2006-2010	TRANSMISSION	●	●	●	○	●	○	001, 002
LIVINA/GRAND LIVINA	L10	2007-2012	ABS	●	●	●	○	●	●	001
LIVINA/GRAND LIVINA	L10	2007-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
LIVINA/GRAND LIVINA	L10	2007-2012	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
LIVINA/GRAND LIVINA	L10	2007-2012	AUTO_DRIVE_POS	●	●	●	○	●	●	001
LIVINA/GRAND LIVINA	L10	2007-2012	BCM	●	●	●	○	●	●	001, 002
LIVINA/GRAND LIVINA	L10	2007-2012	DIFF_LOCK	●	●	●	○	●	○	○
LIVINA/GRAND LIVINA	L10	2007-2012	ENGINE	●	●	●	※	●	●	001
LIVINA/GRAND LIVINA	L10	2007-2012	EPS	●	●	●	○	●	○	002
LIVINA/GRAND LIVINA	L10	2007-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
LIVINA/GRAND LIVINA	L10	2007-2012	HVAC	●	●	●	○	●	●	001
LIVINA/GRAND LIVINA	L10	2007-2012	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
LIVINA/GRAND LIVINA	L10	2007-2012	IPDM_ER	○	●	●	○	●	●	002
LIVINA/GRAND LIVINA	L10	2007-2012	METER	○	●	●	○	●	○	002
LIVINA/GRAND LIVINA	L10	2007-2012	MULTI_AV	○	●	●	○	●	○	○
LIVINA/GRAND LIVINA	L10	2007-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001
LIVINA/GRAND LIVINA	L10	2007-2012	SBLIND_CAMERA	●	○	○	○	●	○	001
LIVINA/GRAND LIVINA	L10	2007-2012	SVT	●	●	●	○	●	○	001
LIVINA/GRAND LIVINA	L10	2007-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
MARCH	K12	2002-2008	ABS	●	●	●	○	●	●	001
MARCH	K12	2002-2008	ACM	●	●	●	○	●	○	○
MARCH	K12	2002-2008	ACTIVE_SUS	●	●	●	●	●	●	001
MARCH	K12	2002-2008	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
MARCH	K12	2002-2008	AIRBAG	●	●	●	●	●	○	003, 005, 008
MARCH	K12	2002-2008	AIR_LEVELIZER	●	●	●	○	●	●	001
MARCH	K12	2002-2008	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
MARCH	K12	2002-2008	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
MARCH	K12	2002-2008	ASCD	○	●	●	○	●	○	○
MARCH	K12	2002-2008	AUTO_DRIVE_POS	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
MARCH	K12	2002-2008	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
MARCH	K12	2002-2008	BCM	●	●	●	○	●	●	001, 002
MARCH	K12	2002-2008	DIFF_LOCK	●	●	●	○	●	○	○
MARCH	K12	2002-2008	DISTANCE_CONTROL	●	●	●	○	●	○	○
MARCH	K12	2002-2008	DIU	●	●	●	○	●	○	○
MARCH	K12	2002-2008	ENGINE	●	●	●	※	●	●	001
MARCH	K12	2002-2008	EPS	●	●	●	○	●	○	002
MARCH	K12	2002-2008	E_4WD	●	●	●	○	●	●	002
MARCH	K12	2002-2008	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
MARCH	K12	2002-2008	HVAC	●	●	●	○	●	●	001
MARCH	K12	2002-2008	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
MARCH	K12	2002-2008	IPDM_ER	○	●	●	○	●	●	002
MARCH	K12	2002-2008	IVMS	●	●	●	○	●	○	○
MARCH	K12	2002-2008	LDW	●	●	●	○	●	●	001
MARCH	K12	2002-2008	METER	○	●	●	○	●	○	002
MARCH	K12	2002-2008	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
MARCH	K12	2002-2008	MOTOR_ASSIST	○	●	●	○	●	○	001
MARCH	K12	2002-2008	MULTI_AV	○	●	●	○	●	○	○
MARCH	K12	2002-2008	NATS_IMMU	○	●	●	○	○	○	004, 006
MARCH	K12	2002-2008	RASHICAS	●	●	●	○	●	●	○
MARCH	K12	2002-2008	REARVIEW_CAMERA	●	○	○	○	●	○	001
MARCH	K12	2002-2008	S/BLIND_CAMERA	●	○	○	○	●	○	001
MARCH	K12	2002-2008	SMART_ENTRANCE	○	●	●	○	●	●	002
MARCH	K12	2002-2008	SONAR	●	●	●	○	●	●	○
MARCH	K12	2002-2008	TBDADAS_ICC	●	●	●	○	●	●	001, 002
MARCH	K12	2002-2008	TBDAVM	●	●	●	○	●	●	001
MARCH	K12	2002-2008	TCS	●	●	●	●	●	●	001
MARCH	K12	2002-2008	TRANSMISSION	●	●	●	○	●	○	001, 002
MARCH	K11	ALL	ABS	●	●	●	○	●	●	001
MARCH	K11	ALL	ACM	●	●	●	○	●	○	○
MARCH	K11	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
MARCH	K11	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
MARCH	K11	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
MARCH	K11	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
MARCH	K11	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
MARCH	K11	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
MARCH	K11	ALL	ASCD	○	●	●	○	●	○	○
MARCH	K11	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
MARCH	K11	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
MARCH	K11	ALL	BCM	●	●	●	○	●	●	001, 002
MARCH	K11	ALL	DIFF_LOCK	●	●	●	○	●	○	○
MARCH	K11	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
MARCH	K11	ALL	DIU	●	●	●	○	●	○	○
MARCH	K11	ALL	ENGINE	●	●	●	※	●	●	001
MARCH	K11	ALL	EPS	●	●	●	○	●	○	002
MARCH	K11	ALL	E_4WD	●	●	●	○	●	●	002
MARCH	K11	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
MARCH	K11	ALL	HVAC	●	●	●	○	●	●	001
MARCH	K11	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
MARCH	K11	ALL	IPDM_ER	○	●	●	○	●	●	002
MARCH	K11	ALL	IVMS	●	●	●	○	●	○	○
MARCH	K11	ALL	LDW	●	●	●	○	●	●	001
MARCH	K11	ALL	METER	○	●	●	○	●	○	002
MARCH	K11	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
MARCH	K11	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
MARCH	K11	ALL	MULTI_AV	○	●	●	○	●	○	○
MARCH	K11	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
MARCH	K11	ALL	RASHICAS	●	●	●	○	●	●	○
MARCH	K11	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
MARCH	K11	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
MARCH	K11	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
MARCH	K11	ALL	SONAR	●	●	●	○	●	●	○
MARCH	K11	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
MARCH	K11	ALL	TBDAVM	●	●	●	○	●	●	001
MARCH	K11	ALL	TCS	●	●	●	●	●	●	001
MARCH	K11	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
MARCH	K13	2010-2011	ABS	●	●	●	○	●	●	001
MARCH	K13	2010-2011	AIRBAG	●	●	●	●	●	○	003, 005, 008
MARCH	K13	2010-2011	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
MARCH	K13	2010-2011	BCM	●	●	●	○	●	●	001, 002
MARCH	K13	2010-2011	ENGINE	●	●	●	※	●	●	001
MARCH	K13	2010-2011	EPS	●	●	●	○	●	○	002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
MARCH	K13	2010-2011	E_4WD	●	●	●	○	●	●	002
MARCH	K13	2010-2011	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
MARCH	K13	2010-2011	IPDM_ER	○	●	●	○	●	●	002
MARCH	K13	2010-2011	METER	○	●	●	○	●	○	002
MARCH	K13	2010-2011	MULTI_AV	○	●	●	○	●	○	○
MARCH	K13	2010-2011	SONAR	●	●	●	○	●	●	○
MARCH	K13	2010-2011	TRANSMISSION	●	●	●	○	●	○	001, 002
MARCH/MICRA	K12	2002-2008	ABS	●	●	●	○	●	●	001
MARCH/MICRA	K12	2002-2008	ACM	●	●	●	○	●	○	○
MARCH/MICRA	K12	2002-2008	ACTIVE_SUS	●	●	●	●	●	●	001
MARCH/MICRA	K12	2002-2008	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
MARCH/MICRA	K12	2002-2008	AIRBAG	●	●	●	●	●	○	003, 005, 008
MARCH/MICRA	K12	2002-2008	AIR_LEVELIZER	●	●	●	○	●	●	001
MARCH/MICRA	K12	2002-2008	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
MARCH/MICRA	K12	2002-2008	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
MARCH/MICRA	K12	2002-2008	ASCD	○	●	●	○	●	○	○
MARCH/MICRA	K12	2002-2008	AUTO_DRIVE_POS	●	●	●	○	●	●	001
MARCH/MICRA	K12	2002-2008	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
MARCH/MICRA	K12	2002-2008	BCM	●	●	●	○	●	●	001, 002
MARCH/MICRA	K12	2002-2008	DIFF_LOCK	●	●	●	○	●	○	○
MARCH/MICRA	K12	2002-2008	DISTANCE_CONTROL	●	●	●	○	●	○	○
MARCH/MICRA	K12	2002-2008	DIU	●	●	●	○	●	○	○
MARCH/MICRA	K12	2002-2008	ENGINE	●	●	●	※	●	●	001
MARCH/MICRA	K12	2002-2008	EPS	●	●	●	○	●	○	002
MARCH/MICRA	K12	2002-2008	E_4WD	●	●	●	○	●	●	002
MARCH/MICRA	K12	2002-2008	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
MARCH/MICRA	K12	2002-2008	HVAC	●	●	●	○	●	●	001
MARCH/MICRA	K12	2002-2008	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
MARCH/MICRA	K12	2002-2008	IPDM_ER	○	●	●	○	●	●	002
MARCH/MICRA	K12	2002-2008	IVMS	●	●	●	○	●	○	○
MARCH/MICRA	K12	2002-2008	LDW	●	●	●	○	●	●	001
MARCH/MICRA	K12	2002-2008	METER	○	●	●	○	●	○	002
MARCH/MICRA	K12	2002-2008	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
MARCH/MICRA	K12	2002-2008	MOTOR_ASSIST	○	●	●	○	●	○	001
MARCH/MICRA	K12	2002-2008	MULTI_AV	○	●	●	○	●	○	○
MARCH/MICRA	K12	2002-2008	NATS_IMMU	○	●	●	○	○	○	004, 006

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
MARCH/MICRA	K12	2002-2008	RASHICAS	●	●	●	○	●	●	○
MARCH/MICRA	K12	2002-2008	REARVIEW_CAMERA	●	○	○	○	●	○	001
MARCH/MICRA	K12	2002-2008	S/BLIND_CAMERA	●	○	○	○	●	○	001
MARCH/MICRA	K12	2002-2008	SMART_ENTRANCE	○	●	●	○	●	●	002
MARCH/MICRA	K12	2002-2008	SONAR	●	●	●	○	●	●	○
MARCH/MICRA	K12	2002-2008	TBDADAS_ICC	●	●	●	○	●	●	001, 002
MARCH/MICRA	K12	2002-2008	TBDAVM	●	●	●	○	●	●	001
MARCH/MICRA	K12	2002-2008	TCS	●	●	●	●	●	●	001
MARCH/MICRA	K12	2002-2008	TRANSMISSION	●	●	●	○	●	○	001, 002
MARCH/MICRA	K11	ALL	ABS	●	●	●	○	●	●	001
MARCH/MICRA	K11	ALL	ACM	●	●	●	○	●	○	○
MARCH/MICRA	K11	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
MARCH/MICRA	K11	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
MARCH/MICRA	K11	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
MARCH/MICRA	K11	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
MARCH/MICRA	K11	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
MARCH/MICRA	K11	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
MARCH/MICRA	K11	ALL	ASCD	○	●	●	○	●	○	○
MARCH/MICRA	K11	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
MARCH/MICRA	K11	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
MARCH/MICRA	K11	ALL	BCM	●	●	●	○	●	●	001, 002
MARCH/MICRA	K11	ALL	DIFF_LOCK	●	●	●	○	●	○	○
MARCH/MICRA	K11	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
MARCH/MICRA	K11	ALL	DIU	●	●	●	○	●	○	○
MARCH/MICRA	K11	ALL	ENGINE	●	●	●	※	●	●	001
MARCH/MICRA	K11	ALL	EPS	●	●	●	○	●	○	002
MARCH/MICRA	K11	ALL	E_4WD	●	●	●	○	●	●	002
MARCH/MICRA	K11	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
MARCH/MICRA	K11	ALL	HVAC	●	●	●	○	●	●	001
MARCH/MICRA	K11	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
MARCH/MICRA	K11	ALL	IPDM_ER	○	●	●	○	●	●	002
MARCH/MICRA	K11	ALL	IVMS	●	●	●	○	●	○	○
MARCH/MICRA	K11	ALL	LDW	●	●	●	○	●	●	001
MARCH/MICRA	K11	ALL	METER	○	●	●	○	●	○	002
MARCH/MICRA	K11	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
MARCH/MICRA	K11	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
MARCH/MICRA	K11	ALL	MULTI_AV	○	●	●	○	●	○	○
MARCH/MICRA	K11	ALL	NATS_IMM	○	●	●	○	○	○	004, 006
MARCH/MICRA	K11	ALL	RASHICAS	●	●	●	○	●	●	○
MARCH/MICRA	K11	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
MARCH/MICRA	K11	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
MARCH/MICRA	K11	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
MARCH/MICRA	K11	ALL	SONAR	●	●	●	○	●	●	○
MARCH/MICRA	K11	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
MARCH/MICRA	K11	ALL	TBDAVM	●	●	●	○	●	●	001
MARCH/MICRA	K11	ALL	TCS	●	●	●	●	●	●	001
MARCH/MICRA	K11	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
MARCH/MICRA	K13	2010-2011	ABS	●	●	●	○	●	●	001
MARCH/MICRA	K13	2010-2011	AIRBAG	●	●	●	●	●	○	003, 005, 008
MARCH/MICRA	K13	2010-2011	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
MARCH/MICRA	K13	2010-2011	BCM	●	●	●	○	●	●	001, 002
MARCH/MICRA	K13	2010-2011	ENGINE	●	●	●	※	●	●	001
MARCH/MICRA	K13	2010-2011	EPS	●	●	●	○	●	○	002
MARCH/MICRA	K13	2010-2011	E_4WD	●	●	●	○	●	●	002
MARCH/MICRA	K13	2010-2011	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
MARCH/MICRA	K13	2010-2011	IPDM_ER	○	●	●	○	●	●	002
MARCH/MICRA	K13	2010-2011	METER	○	●	●	○	●	○	002
MARCH/MICRA	K13	2010-2011	MULTI_AV	○	●	●	○	●	○	○
MARCH/MICRA	K13	2010-2011	SONAR	●	●	●	○	●	●	○
MARCH/MICRA	K13	2010-2011	TRANSMISSION	●	●	●	○	●	○	001, 002
MAXIMA	A33	ALL	ABS	●	●	●	○	●	●	001
MAXIMA	A33	ALL	ACM	●	●	●	○	●	○	○
MAXIMA	A33	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
MAXIMA	A33	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
MAXIMA	A33	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
MAXIMA	A33	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
MAXIMA	A33	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
MAXIMA	A33	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
MAXIMA	A33	ALL	ASCD	○	●	●	○	●	○	○
MAXIMA	A33	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
MAXIMA	A33	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
MAXIMA	A33	ALL	BCM	●	●	●	○	●	●	001, 002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
MAXIMA	A33	ALL	DIFF_LOCK	●	●	●	○	●	○	○
MAXIMA	A33	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
MAXIMA	A33	ALL	DIU	●	●	●	○	●	○	○
MAXIMA	A33	ALL	ENGINE	●	●	●	※	●	●	001
MAXIMA	A33	ALL	EPS	●	●	●	○	●	○	002
MAXIMA	A33	ALL	E_4WD	●	●	●	○	●	●	002
MAXIMA	A33	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
MAXIMA	A33	ALL	HVAC	●	●	●	○	●	●	001
MAXIMA	A33	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
MAXIMA	A33	ALL	IPDM_ER	○	●	●	○	●	●	002
MAXIMA	A33	ALL	IVMS	●	●	●	○	●	○	○
MAXIMA	A33	ALL	LDW	●	●	●	○	●	●	001
MAXIMA	A33	ALL	METER	○	●	●	○	●	○	002
MAXIMA	A33	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
MAXIMA	A33	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
MAXIMA	A33	ALL	MULTI_AV	○	●	●	○	●	○	○
MAXIMA	A33	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
MAXIMA	A33	ALL	RASHICAS	●	●	●	○	●	●	○
MAXIMA	A33	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
MAXIMA	A33	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
MAXIMA	A33	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
MAXIMA	A33	ALL	SONAR	●	●	●	○	●	●	○
MAXIMA	A33	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
MAXIMA	A33	ALL	TBDAVM	●	●	●	○	●	●	001
MAXIMA	A33	ALL	TCS	●	●	●	●	●	●	001
MAXIMA	A33	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
MAXIMA	A34	2003-2008	ABS	●	●	●	○	●	●	001
MAXIMA	A34	2003-2008	ACM	●	●	●	○	●	○	○
MAXIMA	A34	2003-2008	ACTIVE_SUS	●	●	●	●	●	●	001
MAXIMA	A34	2003-2008	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
MAXIMA	A34	2003-2008	AIRBAG	●	●	●	●	●	○	003, 005, 008
MAXIMA	A34	2003-2008	AIR_LEVELIZER	●	●	●	○	●	●	001
MAXIMA	A34	2003-2008	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
MAXIMA	A34	2003-2008	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
MAXIMA	A34	2003-2008	ASCD	○	●	●	○	●	○	○
MAXIMA	A34	2003-2008	AUTO_DRIVE_POS	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
MAXIMA	A34	2003-2008	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
MAXIMA	A34	2003-2008	BCM	●	●	●	○	●	●	001, 002
MAXIMA	A34	2003-2008	DIFF_LOCK	●	●	●	○	●	○	○
MAXIMA	A34	2003-2008	DISTANCE_CONTROL	●	●	●	○	●	○	○
MAXIMA	A34	2003-2008	DIU	●	●	●	○	●	○	○
MAXIMA	A34	2003-2008	ENGINE	●	●	●	※	●	●	001
MAXIMA	A34	2003-2008	EPS	●	●	●	○	●	○	002
MAXIMA	A34	2003-2008	E_4WD	●	●	●	○	●	●	002
MAXIMA	A34	2003-2008	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
MAXIMA	A34	2003-2008	HVAC	●	●	●	○	●	●	001
MAXIMA	A34	2003-2008	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
MAXIMA	A34	2003-2008	IPDM_ER	○	●	●	○	●	●	002
MAXIMA	A34	2003-2008	IVMS	●	●	●	○	●	○	○
MAXIMA	A34	2003-2008	LDW	●	●	●	○	●	●	001
MAXIMA	A34	2003-2008	METER	○	●	●	○	●	○	002
MAXIMA	A34	2003-2008	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
MAXIMA	A34	2003-2008	MOTOR_ASSIST	○	●	●	○	●	○	001
MAXIMA	A34	2003-2008	MULTI_AV	○	●	●	○	●	○	○
MAXIMA	A34	2003-2008	NATS_IMMUE	○	●	●	○	○	○	004, 006
MAXIMA	A34	2003-2008	RASHICAS	●	●	●	○	●	●	○
MAXIMA	A34	2003-2008	REARVIEW_CAMERA	●	○	○	○	●	○	001
MAXIMA	A34	2003-2008	S/BLIND_CAMERA	●	○	○	○	●	○	001
MAXIMA	A34	2003-2008	SMART_ENTRANCE	○	●	●	○	●	●	002
MAXIMA	A34	2003-2008	SONAR	●	●	●	○	●	●	○
MAXIMA	A34	2003-2008	TBDADAS_ICC	●	●	●	○	●	●	001, 002
MAXIMA	A34	2003-2008	TBDAVM	●	●	●	○	●	●	001
MAXIMA	A34	2003-2008	TCS	●	●	●	●	●	●	001
MAXIMA	A34	2003-2008	TRANSMISSION	●	●	●	○	●	○	001, 002
MAXIMA	A35	2008-2012	ABS	●	●	●	○	●	●	001
MAXIMA	A35	2008-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
MAXIMA	A35	2008-2012	AUTO_DRIVE_POS	●	●	●	○	●	●	001
MAXIMA	A35	2008-2012	BCM	●	●	●	○	●	●	001, 002
MAXIMA	A35	2008-2012	ENGINE	●	●	●	※	●	●	001
MAXIMA	A35	2008-2012	HVAC	●	●	●	○	●	●	001
MAXIMA	A35	2008-2012	IPDM_ER	○	●	●	○	●	●	002
MAXIMA	A35	2008-2012	METER	○	●	●	○	●	○	002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
MAXIMA	A35	2008-2012	MULTI_AV	○	●	●	○	●	○	○
MAXIMA	A35	2008-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001
MAXIMA	A35	2008-2012	SONAR	●	●	●	○	●	●	○
MAXIMA	A35	2008-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
MAXIMA QX	A32	ALL	ABS	●	●	●	○	●	●	001
MAXIMA QX	A32	ALL	ACM	●	●	●	○	●	○	○
MAXIMA QX	A32	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
MAXIMA QX	A32	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
MAXIMA QX	A32	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
MAXIMA QX	A32	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
MAXIMA QX	A32	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
MAXIMA QX	A32	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
MAXIMA QX	A32	ALL	ASCD	○	●	●	○	●	○	○
MAXIMA QX	A32	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
MAXIMA QX	A32	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
MAXIMA QX	A32	ALL	BCM	●	●	●	○	●	●	001, 002
MAXIMA QX	A32	ALL	DIFF_LOCK	●	●	●	○	●	○	○
MAXIMA QX	A32	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
MAXIMA QX	A32	ALL	DIU	●	●	●	○	●	○	○
MAXIMA QX	A32	ALL	ENGINE	●	●	●	※	●	●	001
MAXIMA QX	A32	ALL	EPS	●	●	●	○	●	○	002
MAXIMA QX	A32	ALL	E_4WD	●	●	●	○	●	●	002
MAXIMA QX	A32	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
MAXIMA QX	A32	ALL	HVAC	●	●	●	○	●	●	001
MAXIMA QX	A32	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
MAXIMA QX	A32	ALL	IPDM_ER	○	●	●	○	●	●	002
MAXIMA QX	A32	ALL	IVMS	●	●	●	○	●	○	○
MAXIMA QX	A32	ALL	LDW	●	●	●	○	●	●	001
MAXIMA QX	A32	ALL	METER	○	●	●	○	●	○	002
MAXIMA QX	A32	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
MAXIMA QX	A32	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
MAXIMA QX	A32	ALL	MULTI_AV	○	●	●	○	●	○	○
MAXIMA QX	A32	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
MAXIMA QX	A32	ALL	RASHICAS	●	●	●	○	●	●	○
MAXIMA QX	A32	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
MAXIMA QX	A32	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
MAXIMA QX	A32	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
MAXIMA QX	A32	ALL	SONAR	●	●	●	○	●	●	○
MAXIMA QX	A32	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
MAXIMA QX	A32	ALL	TBDAVM	●	●	●	○	●	●	001
MAXIMA QX	A32	ALL	TCS	●	●	●	●	●	●	001
MAXIMA QX	A32	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
MAXIMA QX	A33	ALL	ABS	●	●	●	○	●	●	001
MAXIMA QX	A33	ALL	ACM	●	●	●	○	●	○	○
MAXIMA QX	A33	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
MAXIMA QX	A33	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
MAXIMA QX	A33	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
MAXIMA QX	A33	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
MAXIMA QX	A33	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
MAXIMA QX	A33	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
MAXIMA QX	A33	ALL	ASCD	○	●	●	○	●	○	○
MAXIMA QX	A33	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
MAXIMA QX	A33	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
MAXIMA QX	A33	ALL	BCM	●	●	●	○	●	●	001, 002
MAXIMA QX	A33	ALL	DIFF_LOCK	●	●	●	○	●	○	○
MAXIMA QX	A33	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
MAXIMA QX	A33	ALL	DIU	●	●	●	○	●	○	○
MAXIMA QX	A33	ALL	ENGINE	●	●	●	※	●	●	001
MAXIMA QX	A33	ALL	EPS	●	●	●	○	●	○	002
MAXIMA QX	A33	ALL	E_4WD	●	●	●	○	●	●	002
MAXIMA QX	A33	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
MAXIMA QX	A33	ALL	HVAC	●	●	●	○	●	●	001
MAXIMA QX	A33	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
MAXIMA QX	A33	ALL	IPDM_ER	○	●	●	○	●	●	002
MAXIMA QX	A33	ALL	IVMS	●	●	●	○	●	○	○
MAXIMA QX	A33	ALL	LDW	●	●	●	○	●	●	001
MAXIMA QX	A33	ALL	METER	○	●	●	○	●	○	002
MAXIMA QX	A33	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
MAXIMA QX	A33	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
MAXIMA QX	A33	ALL	MULTI_AV	○	●	●	○	●	○	○
MAXIMA QX	A33	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
MAXIMA QX	A33	ALL	RASHICAS	●	●	●	○	●	●	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
MAXIMA QX	A33	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
MAXIMA QX	A33	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
MAXIMA QX	A33	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
MAXIMA QX	A33	ALL	SONAR	●	●	●	○	●	●	○
MAXIMA QX	A33	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
MAXIMA QX	A33	ALL	TBDAVM	●	●	●	○	●	●	001
MAXIMA QX	A33	ALL	TCS	●	●	●	●	●	●	001
MAXIMA QX	A33	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
MAXIMA/CEFIRO	A33	ALL	ABS	●	●	●	○	●	●	001
MAXIMA/CEFIRO	A33	ALL	ACM	●	●	●	○	●	○	○
MAXIMA/CEFIRO	A33	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
MAXIMA/CEFIRO	A33	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
MAXIMA/CEFIRO	A33	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
MAXIMA/CEFIRO	A33	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
MAXIMA/CEFIRO	A33	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
MAXIMA/CEFIRO	A33	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
MAXIMA/CEFIRO	A33	ALL	ASCD	○	●	●	○	●	○	○
MAXIMA/CEFIRO	A33	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
MAXIMA/CEFIRO	A33	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
MAXIMA/CEFIRO	A33	ALL	BCM	●	●	●	○	●	●	001, 002
MAXIMA/CEFIRO	A33	ALL	DIFF_LOCK	●	●	●	○	●	○	○
MAXIMA/CEFIRO	A33	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
MAXIMA/CEFIRO	A33	ALL	DIU	●	●	●	○	●	○	○
MAXIMA/CEFIRO	A33	ALL	ENGINE	●	●	●	※	●	●	001
MAXIMA/CEFIRO	A33	ALL	EPS	●	●	●	○	●	○	002
MAXIMA/CEFIRO	A33	ALL	E_4WD	●	●	●	○	●	●	002
MAXIMA/CEFIRO	A33	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
MAXIMA/CEFIRO	A33	ALL	HVAC	●	●	●	○	●	●	001
MAXIMA/CEFIRO	A33	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
MAXIMA/CEFIRO	A33	ALL	IPDM_ER	○	●	●	○	●	●	002
MAXIMA/CEFIRO	A33	ALL	IVMS	●	●	●	○	●	○	○
MAXIMA/CEFIRO	A33	ALL	LDW	●	●	●	○	●	●	001
MAXIMA/CEFIRO	A33	ALL	METER	○	●	●	○	●	○	002
MAXIMA/CEFIRO	A33	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
MAXIMA/CEFIRO	A33	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
MAXIMA/CEFIRO	A33	ALL	MULTI_AV	○	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
MAXIMA/CEFIRO	A33	ALL	NATS_IMM	○	●	●	○	○	○	004, 006
MAXIMA/CEFIRO	A33	ALL	RASHICAS	●	●	●	○	●	●	○
MAXIMA/CEFIRO	A33	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
MAXIMA/CEFIRO	A33	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
MAXIMA/CEFIRO	A33	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
MAXIMA/CEFIRO	A33	ALL	SONAR	●	●	●	○	●	●	○
MAXIMA/CEFIRO	A33	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
MAXIMA/CEFIRO	A33	ALL	TBDAVM	●	●	●	○	●	●	001
MAXIMA/CEFIRO	A33	ALL	TCS	●	●	●	●	●	●	001
MAXIMA/CEFIRO	A33	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
MAXIMA/CEFIRO	J31	ALL	ABS	●	●	●	○	●	●	001
MAXIMA/CEFIRO	J31	ALL	ACM	●	●	●	○	●	○	○
MAXIMA/CEFIRO	J31	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
MAXIMA/CEFIRO	J31	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
MAXIMA/CEFIRO	J31	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
MAXIMA/CEFIRO	J31	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
MAXIMA/CEFIRO	J31	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
MAXIMA/CEFIRO	J31	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
MAXIMA/CEFIRO	J31	ALL	ASCD	○	●	●	○	●	○	○
MAXIMA/CEFIRO	J31	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
MAXIMA/CEFIRO	J31	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
MAXIMA/CEFIRO	J31	ALL	BCM	●	●	●	○	●	●	001, 002
MAXIMA/CEFIRO	J31	ALL	DIFF_LOCK	●	●	●	○	●	○	○
MAXIMA/CEFIRO	J31	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
MAXIMA/CEFIRO	J31	ALL	DIU	●	●	●	○	●	○	○
MAXIMA/CEFIRO	J31	ALL	ENGINE	●	●	●	※	●	●	001
MAXIMA/CEFIRO	J31	ALL	EPS	●	●	●	○	●	○	002
MAXIMA/CEFIRO	J31	ALL	E_4WD	●	●	●	○	●	●	002
MAXIMA/CEFIRO	J31	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
MAXIMA/CEFIRO	J31	ALL	HVAC	●	●	●	○	●	●	001
MAXIMA/CEFIRO	J31	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
MAXIMA/CEFIRO	J31	ALL	IPDM_ER	○	●	●	○	●	●	002
MAXIMA/CEFIRO	J31	ALL	IVMS	●	●	●	○	●	○	○
MAXIMA/CEFIRO	J31	ALL	LDW	●	●	●	○	●	●	001
MAXIMA/CEFIRO	J31	ALL	METER	○	●	●	○	●	○	002
MAXIMA/CEFIRO	J31	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
MAXIMA/CEFIRO	J31	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
MAXIMA/CEFIRO	J31	ALL	MULTI_AV	○	●	●	○	●	○	○
MAXIMA/CEFIRO	J31	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
MAXIMA/CEFIRO	J31	ALL	RASHICAS	●	●	●	○	●	●	○
MAXIMA/CEFIRO	J31	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
MAXIMA/CEFIRO	J31	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
MAXIMA/CEFIRO	J31	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
MAXIMA/CEFIRO	J31	ALL	SONAR	●	●	●	○	●	●	○
MAXIMA/CEFIRO	J31	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
MAXIMA/CEFIRO	J31	ALL	TBDAVM	●	●	●	○	●	●	001
MAXIMA/CEFIRO	J31	ALL	TCS	●	●	●	●	●	●	001
MAXIMA/CEFIRO	J31	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
MAXIMA/CEFIRO	J32	2008-2011	ABS	●	●	●	○	●	●	001
MAXIMA/CEFIRO	J32	2008-2011	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
MAXIMA/CEFIRO	J32	2008-2011	AIRBAG	●	●	●	●	●	○	003, 005, 008
MAXIMA/CEFIRO	J32	2008-2011	AUTO_DRIVE_POS	●	●	●	○	●	●	001
MAXIMA/CEFIRO	J32	2008-2011	BCM	●	●	●	○	●	●	001, 002
MAXIMA/CEFIRO	J32	2008-2011	ENGINE	●	●	●	※	●	●	001
MAXIMA/CEFIRO	J32	2008-2011	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
MAXIMA/CEFIRO	J32	2008-2011	HVAC	●	●	●	○	●	●	001
MAXIMA/CEFIRO	J32	2008-2011	IPDM_ER	○	●	●	○	●	●	002
MAXIMA/CEFIRO	J32	2008-2011	METER	○	●	●	○	●	○	002
MAXIMA/CEFIRO	J32	2008-2011	MULTI_AV	○	●	●	○	●	○	○
MAXIMA/CEFIRO	J32	2008-2011	REARVIEW_CAMERA	●	○	○	○	●	○	001
MAXIMA/CEFIRO	J32	2008-2011	SBLIND_CAMERA	●	○	○	○	●	○	001
MAXIMA/CEFIRO	J32	2008-2011	SONAR	●	●	●	○	●	●	○
MAXIMA/CEFIRO	J32	2008-2011	TRANSMISSION	●	●	●	○	●	○	001, 002
MICRA	K11	ALL	ABS	●	●	●	○	●	●	001
MICRA	K11	ALL	ACM	●	●	●	○	●	○	○
MICRA	K11	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
MICRA	K11	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
MICRA	K11	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
MICRA	K11	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
MICRA	K11	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
MICRA	K11	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
MICRA	K11	ALL	ASCD	○	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
MICRA	K11	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
MICRA	K11	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
MICRA	K11	ALL	BCM	●	●	●	○	●	●	001, 002
MICRA	K11	ALL	DIFF_LOCK	●	●	●	○	●	○	○
MICRA	K11	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
MICRA	K11	ALL	DIU	●	●	●	○	●	○	○
MICRA	K11	ALL	ENGINE	●	●	●	※	●	●	001
MICRA	K11	ALL	EPS	●	●	●	○	●	○	002
MICRA	K11	ALL	E_4WD	●	●	●	○	●	●	002
MICRA	K11	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
MICRA	K11	ALL	HVAC	●	●	●	○	●	●	001
MICRA	K11	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
MICRA	K11	ALL	IPDM_ER	○	●	●	○	●	●	002
MICRA	K11	ALL	IVMS	●	●	●	○	●	○	○
MICRA	K11	ALL	LDW	●	●	●	○	●	●	001
MICRA	K11	ALL	METER	○	●	●	○	●	○	002
MICRA	K11	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
MICRA	K11	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
MICRA	K11	ALL	MULTI_AV	○	●	●	○	●	○	○
MICRA	K11	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
MICRA	K11	ALL	RASHICAS	●	●	●	○	●	●	○
MICRA	K11	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
MICRA	K11	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
MICRA	K11	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
MICRA	K11	ALL	SONAR	●	●	●	○	●	●	○
MICRA	K11	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
MICRA	K11	ALL	TBDAVM	●	●	●	○	●	●	001
MICRA	K11	ALL	TCS	●	●	●	●	●	●	001
MICRA	K11	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
MICRA	K12	ALL	ABS	●	●	●	○	●	●	001
MICRA	K12	ALL	ACM	●	●	●	○	●	○	○
MICRA	K12	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
MICRA	K12	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
MICRA	K12	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
MICRA	K12	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
MICRA	K12	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
MICRA	K12	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
MICRA	K12	ALL	ASCD	○	●	●	○	●	○	○
MICRA	K12	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
MICRA	K12	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
MICRA	K12	ALL	BCM	●	●	●	○	●	●	001, 002
MICRA	K12	ALL	DIFF_LOCK	●	●	●	○	●	○	○
MICRA	K12	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
MICRA	K12	ALL	DIU	●	●	●	○	●	○	○
MICRA	K12	ALL	ENGINE	●	●	●	※	●	●	001
MICRA	K12	ALL	EPS	●	●	●	○	●	○	002
MICRA	K12	ALL	E_4WD	●	●	●	○	●	●	002
MICRA	K12	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
MICRA	K12	ALL	HVAC	●	●	●	○	●	●	001
MICRA	K12	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
MICRA	K12	ALL	IPDM_ER	○	●	●	○	●	●	002
MICRA	K12	ALL	IVMS	●	●	●	○	●	○	○
MICRA	K12	ALL	LDW	●	●	●	○	●	●	001
MICRA	K12	ALL	METER	○	●	●	○	●	○	002
MICRA	K12	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
MICRA	K12	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
MICRA	K12	ALL	MULTI_AV	○	●	●	○	●	○	○
MICRA	K12	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
MICRA	K12	ALL	RASHICAS	●	●	●	○	●	●	○
MICRA	K12	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
MICRA	K12	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
MICRA	K12	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
MICRA	K12	ALL	SONAR	●	●	●	○	●	●	○
MICRA	K12	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
MICRA	K12	ALL	TBDAVM	●	●	●	○	●	●	001
MICRA	K12	ALL	TCS	●	●	●	●	●	●	001
MICRA	K12	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
MICRA	K13	2010	ABS	●	●	●	○	●	●	001
MICRA	K13	2010	AIRBAG	●	●	●	●	●	○	003, 005, 008
MICRA	K13	2010	BCM	●	●	●	○	●	●	001, 002
MICRA	K13	2010	ENGINE	●	●	●	※	●	●	001
MICRA	K13	2010	EPS	●	●	●	○	●	○	002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
MICRA	K13	2010	IPDM_ER	○	●	●	○	●	●	002
MICRA	K13	2010	METER	○	●	●	○	●	○	002
MICRA	K13	2010	SONAR	●	●	●	○	●	●	○
MICRA	K13	2010	TRANSMISSION	●	●	●	○	●	○	001, 002
MICRA C+C	FK12	2005-2007	ABS	●	●	●	○	●	●	001
MICRA C+C	FK12	2005-2007	AIRBAG	●	●	●	●	●	○	003, 005, 008
MICRA C+C	FK12	2005-2007	BCM	●	●	●	○	●	●	001, 002
MICRA C+C	FK12	2005-2007	ENGINE	●	●	●	※	●	●	001
MICRA C+C	FK12	2005-2007	EPS	●	●	●	○	●	○	002
MICRA C+C	FK12	2005-2007	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
MICRA C+C	FK12	2005-2007	IPDM_ER	○	●	●	○	●	●	002
MICRA C+C	FK12	2005-2007	METER	○	●	●	○	●	○	002
MICRA C+C	FK12	2005-2007	TRANSMISSION	●	●	●	○	●	○	001, 002
MISTRAL	R20	ALL	ABS	●	●	●	○	●	●	001
MISTRAL	R20	ALL	ACM	●	●	●	○	●	○	○
MISTRAL	R20	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
MISTRAL	R20	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
MISTRAL	R20	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
MISTRAL	R20	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
MISTRAL	R20	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
MISTRAL	R20	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
MISTRAL	R20	ALL	ASCD	○	●	●	○	●	○	○
MISTRAL	R20	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
MISTRAL	R20	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
MISTRAL	R20	ALL	BCM	●	●	●	○	●	●	001, 002
MISTRAL	R20	ALL	DIFF_LOCK	●	●	●	○	●	○	○
MISTRAL	R20	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
MISTRAL	R20	ALL	DIU	●	●	●	○	●	○	○
MISTRAL	R20	ALL	ENGINE	●	●	●	※	●	●	001
MISTRAL	R20	ALL	EPS	●	●	●	○	●	○	002
MISTRAL	R20	ALL	E_4WD	●	●	●	○	●	●	002
MISTRAL	R20	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
MISTRAL	R20	ALL	HVAC	●	●	●	○	●	●	001
MISTRAL	R20	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
MISTRAL	R20	ALL	IPDM_ER	○	●	●	○	●	●	002
MISTRAL	R20	ALL	IVMS	●	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
MISTRAL	R20	ALL	LDW	●	●	●	○	●	●	001
MISTRAL	R20	ALL	METER	○	●	●	○	●	○	002
MISTRAL	R20	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
MISTRAL	R20	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
MISTRAL	R20	ALL	MULTI_AV	○	●	●	○	●	○	○
MISTRAL	R20	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
MISTRAL	R20	ALL	RASHICAS	●	●	●	○	●	●	○
MISTRAL	R20	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
MISTRAL	R20	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
MISTRAL	R20	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
MISTRAL	R20	ALL	SONAR	●	●	●	○	●	●	○
MISTRAL	R20	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
MISTRAL	R20	ALL	TBDAVM	●	●	●	○	●	●	001
MISTRAL	R20	ALL	TCS	●	●	●	●	●	●	001
MISTRAL	R20	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
MURANO	Z50	ALL	ABS	●	●	●	○	●	●	001
MURANO	Z50	ALL	ACM	●	●	●	○	●	○	○
MURANO	Z50	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
MURANO	Z50	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
MURANO	Z50	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
MURANO	Z50	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
MURANO	Z50	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
MURANO	Z50	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
MURANO	Z50	ALL	ASCD	○	●	●	○	●	○	○
MURANO	Z50	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
MURANO	Z50	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
MURANO	Z50	ALL	BCM	●	●	●	○	●	●	001, 002
MURANO	Z50	ALL	DIFF_LOCK	●	●	●	○	●	○	○
MURANO	Z50	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
MURANO	Z50	ALL	DIU	●	●	●	○	●	○	○
MURANO	Z50	ALL	ENGINE	●	●	●	※	●	●	001
MURANO	Z50	ALL	EPS	●	●	●	○	●	○	002
MURANO	Z50	ALL	E_4WD	●	●	●	○	●	●	002
MURANO	Z50	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
MURANO	Z50	ALL	HVAC	●	●	●	○	●	●	001
MURANO	Z50	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
MURANO	Z50	ALL	IPDM_ER	○	●	●	○	●	●	002
MURANO	Z50	ALL	IVMS	●	●	●	○	●	○	○
MURANO	Z50	ALL	LDW	●	●	●	○	●	●	001
MURANO	Z50	ALL	METER	○	●	●	○	●	○	002
MURANO	Z50	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
MURANO	Z50	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
MURANO	Z50	ALL	MULTI_AV	○	●	●	○	●	○	○
MURANO	Z50	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
MURANO	Z50	ALL	RASHICAS	●	●	●	○	●	●	○
MURANO	Z50	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
MURANO	Z50	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
MURANO	Z50	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
MURANO	Z50	ALL	SONAR	●	●	●	○	●	●	○
MURANO	Z50	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
MURANO	Z50	ALL	TBDAVM	●	●	●	○	●	●	001
MURANO	Z50	ALL	TCS	●	●	●	●	●	●	001
MURANO	Z50	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
MURANO	Z51	2007-2012	ABS	●	●	●	○	●	●	001
MURANO	Z51	2007-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
MURANO	Z51	2007-2012	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
MURANO	Z51	2007-2012	AUTO_DRIVE_POS	●	●	●	○	●	●	001
MURANO	Z51	2007-2012	BCM	●	●	●	○	●	●	001, 002
MURANO	Z51	2007-2012	ENGINE	●	●	●	※	●	●	001
MURANO	Z51	2007-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
MURANO	Z51	2007-2012	HVAC	●	●	●	○	●	●	001
MURANO	Z51	2007-2012	IPDM_ER	○	●	●	○	●	●	002
MURANO	Z51	2007-2012	METER	○	●	●	○	●	○	002
MURANO	Z51	2007-2012	MULTI_AV	○	●	●	○	●	○	○
MURANO	Z51	2007-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001
MURANO	Z51	2007-2012	SONAR	●	●	●	○	●	●	○
MURANO	Z51	2007-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
MURANO (ZD Engine)	Z51	2010	ABS	●	●	●	○	●	●	001
MURANO (ZD Engine)	Z51	2010	AIRBAG	●	●	●	●	●	○	003, 005, 008
MURANO (ZD Engine)	Z51	2010	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
MURANO (ZD Engine)	Z51	2010	AUTO_DRIVE_POS	●	●	●	○	●	●	001
MURANO (ZD Engine)	Z51	2010	BCM	●	●	●	○	●	●	001, 002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
MURANO (ZD Engine)	Z51	2010	ENGINE	●	●	●	※	●	●	001
MURANO (ZD Engine)	Z51	2010	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
MURANO (ZD Engine)	Z51	2010	HVAC	●	●	●	○	●	●	001
MURANO (ZD Engine)	Z51	2010	IPDM_ER	○	●	●	○	●	●	002
MURANO (ZD Engine)	Z51	2010	METER	○	●	●	○	●	○	002
MURANO (ZD Engine)	Z51	2010	MULTI_AV	○	●	●	○	●	○	○
MURANO (ZD Engine)	Z51	2010	REARVIEW_CAMERA	●	○	○	○	●	○	001
MURANO (ZD Engine)	Z51	2010	SBLIND_CAMERA	●	●	●	○	●	●	○
MURANO (ZD Engine)	Z51	2010	TRANSMISSION	●	●	●	○	●	○	001, 002
MURANO Cross Cabriolet	Z51	2011-2012	ABS	●	●	●	○	●	●	001
MURANO Cross Cabriolet	Z51	2011-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
MURANO Cross Cabriolet	Z51	2011-2012	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
MURANO Cross Cabriolet	Z51	2011-2012	AUTO_DRIVE_POS	●	●	●	○	●	●	001
MURANO Cross Cabriolet	Z51	2011-2012	BCM	●	●	●	○	●	●	001, 002
MURANO Cross Cabriolet	Z51	2011-2012	CONVERTIBLE_ROOF	●	●	●	○	●	●	001
MURANO Cross Cabriolet	Z51	2011-2012	ENGINE	●	●	●	※	●	●	001
MURANO Cross Cabriolet	Z51	2011-2012	HVAC	●	●	●	○	●	●	001
MURANO Cross Cabriolet	Z51	2011-2012	IPDM_ER	○	●	●	○	●	●	002
MURANO Cross Cabriolet	Z51	2011-2012	METER	○	●	●	○	●	○	002
MURANO Cross Cabriolet	Z51	2011-2012	MULTI_AV	○	●	●	○	●	○	○
MURANO Cross Cabriolet	Z51	2011-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
NAVARA	D40	2005-2012	ABS	●	●	●	○	●	●	001
NAVARA	D40	2005-2012	ACM	●	●	●	○	●	○	○
NAVARA	D40	2005-2012	ACTIVE_SUS	●	●	●	●	●	●	001
NAVARA	D40	2005-2012	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
NAVARA	D40	2005-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
NAVARA	D40	2005-2012	AIR_LEVELIZER	●	●	●	○	●	●	001
NAVARA	D40	2005-2012	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
NAVARA	D40	2005-2012	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
NAVARA	D40	2005-2012	ASCD	○	●	●	○	●	○	○
NAVARA	D40	2005-2012	AUTO_DRIVE_POS	●	●	●	○	●	●	001
NAVARA	D40	2005-2012	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
NAVARA	D40	2005-2012	BCM	●	●	●	○	●	●	001, 002
NAVARA	D40	2005-2012	DIFF_LOCK	●	●	●	○	●	○	○
NAVARA	D40	2005-2012	DISTANCE_CONTROL	●	●	●	○	●	○	○
NAVARA	D40	2005-2012	DIU	●	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
NAVARA	D40	2005-2012	ENGINE	●	●	●	※	●	●	001
NAVARA	D40	2005-2012	EPS	●	●	●	○	●	○	002
NAVARA	D40	2005-2012	E_4WD	●	●	●	○	●	●	002
NAVARA	D40	2005-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
NAVARA	D40	2005-2012	HVAC	●	●	●	○	●	●	001
NAVARA	D40	2005-2012	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
NAVARA	D40	2005-2012	IPDM_ER	○	●	●	○	●	●	002
NAVARA	D40	2005-2012	IVMS	●	●	●	○	●	○	○
NAVARA	D40	2005-2012	LDW	●	●	●	○	●	●	001
NAVARA	D40	2005-2012	METER	○	●	●	○	●	○	002
NAVARA	D40	2005-2012	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
NAVARA	D40	2005-2012	MOTOR_ASSIST	○	●	●	○	●	○	001
NAVARA	D40	2005-2012	MULTI_AV	○	●	●	○	●	○	○
NAVARA	D40	2005-2012	NATS_IMMUI	○	●	●	○	○	○	004, 006
NAVARA	D40	2005-2012	RASHICAS	●	●	●	○	●	●	○
NAVARA	D40	2005-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001
NAVARA	D40	2005-2012	S/BLIND_CAMERA	●	○	○	○	●	○	001
NAVARA	D40	2005-2012	SMART_ENTRANCE	○	●	●	○	●	●	002
NAVARA	D40	2005-2012	SONAR	●	●	●	○	●	●	○
NAVARA	D40	2005-2012	TBDADAS_ICC	●	●	●	○	●	●	001, 002
NAVARA	D40	2005-2012	TBDADM	●	●	●	○	●	●	001
NAVARA	D40	2005-2012	TCS	●	●	●	●	●	●	001
NAVARA	D40	2005-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
NAVARA Camp:P7266	D40	ALL	ABS	●	●	●	○	●	●	001
NAVARA Camp:P7266	D40	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
NAVARA (SPA)	D40	2005-2011	ABS	●	●	●	○	●	●	001
NAVARA (SPA)	D40	2005-2011	ACM	●	●	●	○	●	○	○
NAVARA (SPA)	D40	2005-2011	ACTIVE_SUS	●	●	●	●	●	●	001
NAVARA (SPA)	D40	2005-2011	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
NAVARA (SPA)	D40	2005-2011	AIRBAG	●	●	●	●	●	○	003, 005, 008
NAVARA (SPA)	D40	2005-2011	AIR_LEVELIZER	●	●	●	○	●	●	001
NAVARA (SPA)	D40	2005-2011	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
NAVARA (SPA)	D40	2005-2011	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
NAVARA (SPA)	D40	2005-2011	ASCD	○	●	●	○	●	○	○
NAVARA (SPA)	D40	2005-2011	AUTO_DRIVE_POS	●	●	●	○	●	●	001
NAVARA (SPA)	D40	2005-2011	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
NAVARA (SPA)	D40	2005-2011	BCM	●	●	●	○	●	●	001, 002
NAVARA (SPA)	D40	2005-2011	DIFF_LOCK	●	●	●	○	●	○	○
NAVARA (SPA)	D40	2005-2011	DISTANCE_CONTROL	●	●	●	○	●	○	○
NAVARA (SPA)	D40	2005-2011	DIU	●	●	●	○	●	○	○
NAVARA (SPA)	D40	2005-2011	ENGINE	●	●	●	※	●	●	001
NAVARA (SPA)	D40	2005-2011	EPS	●	●	●	○	●	○	002
NAVARA (SPA)	D40	2005-2011	E_4WD	●	●	●	○	●	●	002
NAVARA (SPA)	D40	2005-2011	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
NAVARA (SPA)	D40	2005-2011	HVAC	●	●	●	○	●	●	001
NAVARA (SPA)	D40	2005-2011	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
NAVARA (SPA)	D40	2005-2011	IPDM_ER	○	●	●	○	●	●	002
NAVARA (SPA)	D40	2005-2011	IVMS	●	●	●	○	●	○	○
NAVARA (SPA)	D40	2005-2011	LDW	●	●	●	○	●	●	001
NAVARA (SPA)	D40	2005-2011	METER	○	●	●	○	●	○	002
NAVARA (SPA)	D40	2005-2011	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
NAVARA (SPA)	D40	2005-2011	MOTOR_ASSIST	○	●	●	○	●	○	001
NAVARA (SPA)	D40	2005-2011	MULTI_AV	○	●	●	○	●	○	○
NAVARA (SPA)	D40	2005-2011	NATS_IMMU	○	●	●	○	○	○	004, 006
NAVARA (SPA)	D40	2005-2011	RASHICAS	●	●	●	○	●	●	○
NAVARA (SPA)	D40	2005-2011	REARVIEW_CAMERA	●	○	○	○	●	○	001
NAVARA (SPA)	D40	2005-2011	S/BLIND_CAMERA	●	○	○	○	●	○	001
NAVARA (SPA)	D40	2005-2011	SMART_ENTRANCE	○	●	●	○	●	●	002
NAVARA (SPA)	D40	2005-2011	SONAR	●	●	●	○	●	●	○
NAVARA (SPA)	D40	2005-2011	TBDADAS_ICC	●	●	●	○	●	●	001, 002
NAVARA (SPA)	D40	2005-2011	TBDAVM	●	●	●	○	●	●	001
NAVARA (SPA)	D40	2005-2011	TCS	●	●	●	●	●	●	001
NAVARA (SPA)	D40	2005-2011	TRANSMISSION	●	●	●	○	●	○	001, 002
NAVARA (THI)	D40	2007-2012	ABS	●	●	●	○	●	●	001
NAVARA (THI)	D40	2007-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
NAVARA (THI)	D40	2007-2012	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
NAVARA (THI)	D40	2007-2012	AUTO_DRIVE_POS	●	●	●	○	●	●	001
NAVARA (THI)	D40	2007-2012	BCM	※	●	●	○	●	●	001, 002
NAVARA (THI)	D40	2007-2012	DIFF_LOCK	●	●	●	○	●	○	○
NAVARA (THI)	D40	2007-2012	ENGINE	●	●	●	※	●	●	001
NAVARA (THI)	D40	2007-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
NAVARA (THI)	D40	2007-2012	HVAC	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
NAVARA (THI)	D40	2007-2012	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
NAVARA (THI)	D40	2007-2012	IPDM_ER	○	●	●	○	●	●	002
NAVARA (THI)	D40	2007-2012	METER	○	●	●	○	●	○	002
NAVARA (THI)	D40	2007-2012	PRECRASH_SEATBELT	●	●	●	○	●	○	001
NAVARA (THI)	D40	2007-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001
NAVARA (THI)	D40	2007-2012	SBLIND_CAMERA	●	○	○	○	●	○	001
NAVARA (THI)	D40	2007-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
NISSAN GT-R	R35	2007-2013	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
NISSAN GT-R	R35	2007-2013	BCM	※	●	●	○	●	●	001, 002
NISSAN GT-R	R35	2007-2013	ENGINE	●	●	●	※	●	●	001
NISSAN GT-R	R35	2007-2013	E_SUS	●	●	●	○	●	●	001
NISSAN GT-R	R35	2007-2013	MULTI_AV	※	●	●	○	●	○	○
NISSAN GT-R (GCC)	R35	2007	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
NISSAN GT-R (GCC)	R35	2007	BCM	※	●	●	○	●	●	001, 002
NISSAN GT-R (GCC)	R35	2007	ENGINE	●	●	●	※	●	●	001
NISSAN GT-R (GCC)	R35	2007	E_SUS	●	●	●	○	●	●	001
NISSAN GT-R (GCC)	R35	2007	MULTI_AV	※	●	●	○	●	○	○
NISSAN GT-R (US)	R35	2008	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
NISSAN GT-R (US)	R35	2008	BCM	※	●	●	○	●	●	001, 002
NISSAN GT-R (US)	R35	2008	ENGINE	●	●	●	※	●	●	001
NISSAN GT-R (US)	R35	2008	E_SUS	●	●	●	○	●	●	001
NISSAN GT-R (US)	R35	2008	MULTI_AV	※	●	●	○	●	○	○
NOTE	E11	2005-2012	ABS	●	●	●	※	●	●	001
NOTE	E11	2005-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
NOTE	E11	2005-2012	BCM	※	●	●	○	●	●	001, 002
NOTE	E11	2005-2012	ENGINE	●	●	●	※	●	●	001
NOTE	E11	2005-2012	EPS	●	●	●	○	●	○	002
NOTE	E11	2005-2012	E_4WD	●	●	●	※	●	●	002
NOTE	E11	2005-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
NOTE	E11	2005-2012	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
NOTE	E11	2005-2012	IPDM_ER	○	●	●	○	●	●	002
NOTE	E11	2005-2012	METER	※	●	●	○	●	○	002
NOTE	E11	2005-2012	MULTI_AV	※	●	●	○	●	○	○
NOTE	E11	2005-2012	SONAR	●	●	●	○	●	●	○
NOTE	E11	2005-2012	TRANSMISSION	●	●	●	※	●	※	001, 002
NOTE	E12	2012	ABS	●	●	●	※	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
NOTE	E12	2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
NOTE	E12	2012	BCM	※	●	●	○	●	●	001, 002
NOTE	E12	2012	ENGINE	●	●	●	※	●	●	001
NOTE	E12	2012	EPS	●	●	●	○	●	○	002
NOTE	E12	2012	E_4WD	●	●	●	※	●	●	002
NOTE	E12	2012	IPDM_ER	○	●	●	○	●	●	002
NOTE	E12	2012	METER	※	●	●	○	●	○	002
NOTE	E12	2012	AVM	●	●	●	○	●	●	001
NOTE	E12	2012	TRANSMISSION	●	●	●	※	●	※	001, 002
NP200	U90	2008	ABS	●	●	●	※	●	●	001
NP200	U90	2008	AIRBAG	●	●	●	●	●	○	003, 005, 008
NP200	U90	2008	BCM	※	●	●	○	●	●	001, 002
NP200	U90	2008	ENGINE	●	●	●	※	●	●	001
NP200	U90	2008	TRANSMISSION	●	●	●	※	●	※	001, 002
NV	F80	2012	ABS	●	●	●	※	●	●	001
NV	F80	2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
NV	F80	2012	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
NV	F80	2012	AUTO_DRIVE_POS	●	●	●	○	●	●	001
NV	F80	2012	BCM	※	●	●	○	●	●	001, 002
NV	F80	2012	ENGINE	●	●	●	※	●	●	001
NV	F80	2012	HVAC	●	●	●	○	●	●	001
NV	F80	2012	IPDM_ER	○	●	●	○	●	●	002
NV	F80	2012	METER	※	●	●	○	●	○	002
NV	F80	2012	REARVIEW_CAMERA	●	○	○	○	●	○	001
NV	F80	2012	SBLIND_CAMERA	●	○	○	○	●	○	001
NV	F80	2012	SONAR	●	●	●	○	●	●	○
NV	F80	2012	TRANSMISSION	●	●	●	※	●	※	001, 002
NV200	M20 (VM20)	2010-2012	ABS	●	●	●	※	●	●	001
NV200	M20 (VM20)	2010-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
NV200	M20 (VM20)	2010-2012	BCM	※	●	●	○	●	●	001, 002
NV200	M20 (VM20)	2010-2012	ENGINE	●	●	●	※	●	●	001
NV200	M20 (VM20)	2010-2012	EPS	●	●	●	○	●	○	002
NV200	M20 (VM20)	2010-2012	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
NV200	M20 (VM20)	2010-2012	IPDM_ER	○	●	●	○	●	●	002
NV200	M20 (VM20)	2010-2012	METER	※	●	●	○	●	○	002
NV200	M20 (VM20)	2010-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
NV200	M20 (VM20)	2010-2012	SBLIND_CAMERA	●	○	○	○	●	○	001
NV200	M20 (VM20)	2010-2012	TRANSMISSION	●	●	●	※	●	※	001, 002
NV200 (EURO product)	M20 (VM20)	2010-2011	ABS	●	●	●	※	●	●	001
NV200 (EURO product)	M20 (VM20)	2010-2011	AIRBAG	●	●	●	●	●	○	003, 005, 008
NV200 (EURO product)	M20 (VM20)	2010-2011	BCM	※	●	●	○	●	●	001, 002
NV200 (EURO product)	M20 (VM20)	2010-2011	ENGINE	●	●	●	※	●	●	001
NV200 (EURO product)	M20 (VM20)	2010-2011	EPS	●	●	●	○	●	○	002
NV200 (EURO product)	M20 (VM20)	2010-2011	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
NV200 (EURO product)	M20 (VM20)	2010-2011	IPDM_ER	○	●	●	○	●	●	002
NV200 (EURO product)	M20 (VM20)	2010-2011	METER	※	●	●	○	●	○	002
NV200 (EURO product)	M20 (VM20)	2010-2011	TRANSMISSION	●	●	●	※	●	※	001, 002
NV200 (JPN product)	M20 (VM20)	2009	ABS	●	●	●	※	●	●	001
NV200 (JPN product)	M20 (VM20)	2009	AIRBAG	●	●	●	●	●	○	003, 005, 008
NV200 (JPN product)	M20 (VM20)	2009	BCM	※	●	●	○	●	●	001, 002
NV200 (JPN product)	M20 (VM20)	2009	ENGINE	●	●	●	※	●	●	001
NV200 (JPN product)	M20 (VM20)	2009	EPS	●	●	●	○	●	○	002
NV200 (JPN product)	M20 (VM20)	2009	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
NV200 (JPN product)	M20 (VM20)	2009	IPDM_ER	○	●	●	○	●	●	002
NV200 (JPN product)	M20 (VM20)	2009	METER	※	●	●	○	●	○	002
NV200 (JPN product)	M20 (VM20)	2009	REARVIEW_CAMERA	●	○	○	○	●	○	001
NV200 (JPN product)	M20 (VM20)	2009	SBLIND_CAMERA	●	○	○	○	●	○	001
NV200 (JPN product)	M20 (VM20)	2009	TRANSMISSION	●	●	●	※	●	※	001, 002
NV200 VANETTE	M20	2009-2012	ABS	●	●	●	※	●	●	001
NV200 VANETTE	M20	2009-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
NV200 VANETTE	M20	2009-2012	BCM	※	●	●	○	●	●	001, 002
NV200 VANETTE	M20	2009-2012	ENGINE	●	●	●	※	●	●	001
NV200 VANETTE	M20	2009-2012	EPS	●	●	●	○	●	○	002
NV200 VANETTE	M20	2009-2012	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
NV200 VANETTE	M20	2009-2012	IPDM_ER	○	●	●	○	●	●	002
NV200 VANETTE	M20	2009-2012	METER	※	●	●	○	●	○	002
NV200 VANETTE	M20	2009-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001
NV200 VANETTE	M20	2009-2012	SBLIND_CAMERA	●	○	○	○	●	○	001
NV200 VANETTE	M20	2009-2012	TRANSMISSION	●	●	●	※	●	※	001, 002
NV200 VANETTE	VM20	2009	ABS	●	●	●	※	●	●	001
NV200 VANETTE	VM20	2009	AIRBAG	●	●	●	●	●	○	003, 005, 008
NV200 VANETTE	VM20	2009	BCM	※	●	●	○	●	●	001, 002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
NV200 VANETTE	VM20	2009	ENGINE	●	●	●	※	●	●	001
NV200 VANETTE	VM20	2009	EPS	●	●	●	○	●	○	002
NV200 VANETTE	VM20	2009	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
NV200 VANETTE	VM20	2009	IPDM_ER	○	●	●	○	●	●	002
NV200 VANETTE	VM20	2009	METER	※	●	●	○	●	○	002
NV200 VANETTE	VM20	2009	REARVIEW_CAMERA	●	○	○	○	●	○	001
NV200 VANETTE	VM20	2009	SBLIND_CAMERA	●	○	○	○	●	○	001
NV200 VANETTE	VM20	2009	TRANSMISSION	●	●	●	※	●	※	001, 002
NV350 Caravan	E26	2012	ABS	●	●	●	※	●	●	001
NV350 Caravan	E26	2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
NV350 Caravan	E26	2012	BCM	※	●	●	○	●	●	001, 002
NV350 Caravan	E26	2012	ENGINE	●	●	●	※	●	●	001
NV350 Caravan	E26	2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
NV350 Caravan	E26	2012	IPDM_ER	○	●	●	○	●	●	002
NV350 Caravan	E26	2012	METER	※	●	●	○	●	○	002
NV350 Caravan	E26	2012	PTC_HEATER	●	●	●	○	●	○	○
NV350 Caravan	E26	2012	TRANSMISSION	●	●	●	※	●	※	001, 002
NV350 URVAN	E26	2012	ABS	●	●	●	※	●	●	001
NV350 URVAN	E26	2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
NV350 URVAN	E26	2012	BCM	※	●	●	○	●	●	001, 002
NV350 URVAN	E26	2012	ENGINE	●	●	●	※	●	●	001
NV350 URVAN	E26	2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
NV350 URVAN	E26	2012	IPDM_ER	○	●	●	○	●	●	002
NV350 URVAN	E26	2012	METER	※	●	●	○	●	○	002
NV350 URVAN	E26	2012	PTC_HEATER	●	●	●	○	●	○	○
NV350 URVAN	E26	2012	TRANSMISSION	●	●	●	※	●	※	001, 002
NV350 URVAN/NV350	E26	2012	ABS	●	●	●	※	●	●	001
NV350 URVAN/NV350	E26	2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
NV350 URVAN/NV350	E26	2012	BCM	※	●	●	○	●	●	001, 002
NV350 URVAN/NV350	E26	2012	ENGINE	●	●	●	※	●	●	001
NV350 URVAN/NV350	E26	2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
NV350 URVAN/NV350	E26	2012	IPDM_ER	○	●	●	○	●	●	002
NV350 URVAN/NV350	E26	2012	METER	※	●	●	○	●	○	002
NV350 URVAN/NV350	E26	2012	PTC_HEATER	●	●	●	○	●	○	○
NV350 URVAN/NV350	E26	2012	TRANSMISSION	●	●	●	※	●	※	001, 002
NV400	X62	2011	ABS	●	●	●	※	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
NV400	X62	2011	AIRBAG	●	●	●	●	●	○	003, 005, 008
NV400	X62	2011	BAC	●	●	●	○	●	○	○
NV400	X62	2011	BCM	※	●	●	○	●	●	001, 002
NV400	X62	2011	CHA	●	●	●	○	●	●	001
NV400	X62	2011	CLUSTER	●	●	●	○	●	●	001
NV400	X62	2011	ENGINE	●	●	●	※	●	●	001
NV400	X62	2011	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
NV400	X62	2011	IPDM_ER	○	●	●	○	●	●	002
NV400	X62	2011	MULTI_AV	※	●	●	○	●	○	○
NV400	X62	2011	RADIO	●	●	●	○	●	※	001
NV400	X62	2011	SONAR	●	●	●	○	●	●	○
NV400	X62	2011	TRANSMISSION	●	●	●	※	●	※	001, 002
PALADIN	D22W	2003	ABS	●	●	●	○	●	●	001
PALADIN	D22W	2003	ACM	●	●	●	○	●	○	○
PALADIN	D22W	2003	ACTIVE_SUS	●	●	●	●	●	●	001
PALADIN	D22W	2003	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
PALADIN	D22W	2003	AIRBAG	●	●	●	●	●	○	003, 005, 008
PALADIN	D22W	2003	AIR_LEVELIZER	●	●	●	○	●	●	001
PALADIN	D22W	2003	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PALADIN	D22W	2003	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
PALADIN	D22W	2003	ASCD	○	●	●	○	●	○	○
PALADIN	D22W	2003	AUTO_DRIVE_POS	●	●	●	○	●	●	001
PALADIN	D22W	2003	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
PALADIN	D22W	2003	BCM	●	●	●	○	●	●	001, 002
PALADIN	D22W	2003	DIFF_LOCK	●	●	●	○	●	○	○
PALADIN	D22W	2003	DISTANCE_CONTROL	●	●	●	○	●	○	○
PALADIN	D22W	2003	DIU	●	●	●	○	●	○	○
PALADIN	D22W	2003	ENGINE	●	●	●	※	●	●	001
PALADIN	D22W	2003	EPS	●	●	●	○	●	○	002
PALADIN	D22W	2003	E_4WD	●	●	●	○	●	●	002
PALADIN	D22W	2003	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
PALADIN	D22W	2003	HVAC	●	●	●	○	●	●	001
PALADIN	D22W	2003	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
PALADIN	D22W	2003	IPDM_ER	○	●	●	○	●	●	002
PALADIN	D22W	2003	IVMS	●	●	●	○	●	○	○
PALADIN	D22W	2003	LDW	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PALADIN	D22W	2003	METER	○	●	●	○	●	○	002
PALADIN	D22W	2003	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
PALADIN	D22W	2003	MOTOR_ASSIST	○	●	●	○	●	○	001
PALADIN	D22W	2003	MULTI_AV	○	●	●	○	●	○	○
PALADIN	D22W	2003	NATS_IMMU	○	●	●	○	○	○	004, 006
PALADIN	D22W	2003	RASHICAS	●	●	●	○	●	●	○
PALADIN	D22W	2003	REARVIEW_CAMERA	●	○	○	○	●	○	001
PALADIN	D22W	2003	S/BLIND_CAMERA	●	○	○	○	●	○	001
PALADIN	D22W	2003	SMART_ENTRANCE	○	●	●	○	●	●	002
PALADIN	D22W	2003	SONAR	●	●	●	○	●	●	○
PALADIN	D22W	2003	TBDADAS_ICC	●	●	●	○	●	●	001, 002
PALADIN	D22W	2003	TBDAVM	●	●	●	○	●	●	001
PALADIN	D22W	2003	TCS	●	●	●	●	●	●	001
PALADIN	D22W	2003	TRANSMISSION	●	●	●	○	●	○	001, 002
PARAMEDIC	E50	1998-2012	ABS	●	●	●	○	●	●	001
PARAMEDIC	E50	1998-2012	ACM	●	●	●	○	●	○	○
PARAMEDIC	E50	1998-2012	ACTIVE_SUS	●	●	●	●	●	●	001
PARAMEDIC	E50	1998-2012	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
PARAMEDIC	E50	1998-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
PARAMEDIC	E50	1998-2012	AIR_LEVELIZER	●	●	●	○	●	●	001
PARAMEDIC	E50	1998-2012	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PARAMEDIC	E50	1998-2012	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
PARAMEDIC	E50	1998-2012	ASCD	○	●	●	○	●	○	○
PARAMEDIC	E50	1998-2012	AUTO_DRIVE_POS	●	●	●	○	●	●	001
PARAMEDIC	E50	1998-2012	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
PARAMEDIC	E50	1998-2012	BCM	●	●	●	○	●	●	001, 002
PARAMEDIC	E50	1998-2012	DIFF_LOCK	●	●	●	○	●	○	○
PARAMEDIC	E50	1998-2012	DISTANCE_CONTROL	●	●	●	○	●	○	○
PARAMEDIC	E50	1998-2012	DIU	●	●	●	○	●	○	○
PARAMEDIC	E50	1998-2012	ENGINE	●	●	●	※	●	●	001
PARAMEDIC	E50	1998-2012	EPS	●	●	●	○	●	○	002
PARAMEDIC	E50	1998-2012	E_4WD	●	●	●	○	●	●	002
PARAMEDIC	E50	1998-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
PARAMEDIC	E50	1998-2012	HVAC	●	●	●	○	●	●	001
PARAMEDIC	E50	1998-2012	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
PARAMEDIC	E50	1998-2012	IPDM_ER	○	●	●	○	●	●	002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PARAMEDIC	E50	1998-2012	IVMS	●	●	●	○	●	○	○
PARAMEDIC	E50	1998-2012	LDW	●	●	●	○	●	●	001
PARAMEDIC	E50	1998-2012	METER	○	●	●	○	●	○	002
PARAMEDIC	E50	1998-2012	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
PARAMEDIC	E50	1998-2012	MOTOR_ASSIST	○	●	●	○	●	○	001
PARAMEDIC	E50	1998-2012	MULTI_AV	○	●	●	○	●	○	○
PARAMEDIC	E50	1998-2012	NATS_IMMUE	○	●	●	○	○	○	004, 006
PARAMEDIC	E50	1998-2012	RASHICAS	●	●	●	○	●	●	○
PARAMEDIC	E50	1998-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001
PARAMEDIC	E50	1998-2012	S/BLIND_CAMERA	●	○	○	○	●	○	001
PARAMEDIC	E50	1998-2012	SMART_ENTRANCE	○	●	●	○	●	●	002
PARAMEDIC	E50	1998-2012	SONAR	●	●	●	○	●	●	○
PARAMEDIC	E50	1998-2012	TBDADAS_ICC	●	●	●	○	●	●	001, 002
PARAMEDIC	E50	1998-2012	TBDAVM	●	●	●	○	●	●	001
PARAMEDIC	E50	1998-2012	TCS	●	●	●	●	●	●	001
PARAMEDIC	E50	1998-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
PATHFINDER	R50	ALL	ABS	●	●	●	○	●	●	001
PATHFINDER	R50	ALL	ACM	●	●	●	○	●	○	○
PATHFINDER	R50	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
PATHFINDER	R50	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
PATHFINDER	R50	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
PATHFINDER	R50	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
PATHFINDER	R50	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PATHFINDER	R50	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
PATHFINDER	R50	ALL	ASCD	○	●	●	○	●	○	○
PATHFINDER	R50	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
PATHFINDER	R50	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
PATHFINDER	R50	ALL	BCM	●	●	●	○	●	●	001, 002
PATHFINDER	R50	ALL	DIFF_LOCK	●	●	●	○	●	○	○
PATHFINDER	R50	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
PATHFINDER	R50	ALL	DIU	●	●	●	○	●	○	○
PATHFINDER	R50	ALL	ENGINE	●	●	●	※	●	●	001
PATHFINDER	R50	ALL	EPS	●	●	●	○	●	○	002
PATHFINDER	R50	ALL	E_4WD	●	●	●	○	●	●	002
PATHFINDER	R50	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
PATHFINDER	R50	ALL	HVAC	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PATHFINDER	R50	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
PATHFINDER	R50	ALL	IPDM_ER	○	●	●	○	●	●	002
PATHFINDER	R50	ALL	IVMS	●	●	●	○	●	○	○
PATHFINDER	R50	ALL	LDW	●	●	●	○	●	●	001
PATHFINDER	R50	ALL	METER	○	●	●	○	●	○	002
PATHFINDER	R50	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
PATHFINDER	R50	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
PATHFINDER	R50	ALL	MULTI_AV	○	●	●	○	●	○	○
PATHFINDER	R50	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
PATHFINDER	R50	ALL	RASHICAS	●	●	●	○	●	●	○
PATHFINDER	R50	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
PATHFINDER	R50	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
PATHFINDER	R50	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
PATHFINDER	R50	ALL	SONAR	●	●	●	○	●	●	○
PATHFINDER	R50	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
PATHFINDER	R50	ALL	TBDAVM	●	●	●	○	●	●	001
PATHFINDER	R50	ALL	TCS	●	●	●	●	●	●	001
PATHFINDER	R50	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
PATHFINDER	R51	ALL	ABS	●	●	●	○	●	●	001
PATHFINDER	R51	ALL	ACM	●	●	●	○	●	○	○
PATHFINDER	R51	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
PATHFINDER	R51	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
PATHFINDER	R51	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
PATHFINDER	R51	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
PATHFINDER	R51	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PATHFINDER	R51	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
PATHFINDER	R51	ALL	ASCD	○	●	●	○	●	○	○
PATHFINDER	R51	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
PATHFINDER	R51	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
PATHFINDER	R51	ALL	BCM	●	●	●	○	●	●	001, 002
PATHFINDER	R51	ALL	DIFF_LOCK	●	●	●	○	●	○	○
PATHFINDER	R51	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
PATHFINDER	R51	ALL	DIU	●	●	●	○	●	○	○
PATHFINDER	R51	ALL	ENGINE	●	●	●	※	●	●	001
PATHFINDER	R51	ALL	EPS	●	●	●	○	●	○	002
PATHFINDER	R51	ALL	E_4WD	●	●	●	○	●	●	002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PATHFINDER	R51	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
PATHFINDER	R51	ALL	HVAC	●	●	●	○	●	●	001
PATHFINDER	R51	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
PATHFINDER	R51	ALL	IPDM_ER	○	●	●	○	●	●	002
PATHFINDER	R51	ALL	IVMS	●	●	●	○	●	○	○
PATHFINDER	R51	ALL	LDW	●	●	●	○	●	●	001
PATHFINDER	R51	ALL	METER	○	●	●	○	●	○	002
PATHFINDER	R51	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
PATHFINDER	R51	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
PATHFINDER	R51	ALL	MULTI_AV	○	●	●	○	●	○	○
PATHFINDER	R51	ALL	NATS_IMMUN	○	●	●	○	○	○	004, 006
PATHFINDER	R51	ALL	RASHICAS	●	●	●	○	●	●	○
PATHFINDER	R51	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
PATHFINDER	R51	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
PATHFINDER	R51	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
PATHFINDER	R51	ALL	SONAR	●	●	●	○	●	●	○
PATHFINDER	R51	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
PATHFINDER	R51	ALL	TBDAVM	●	●	●	○	●	●	001
PATHFINDER	R51	ALL	TCS	●	●	●	●	●	●	001
PATHFINDER	R51	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
PATHFINDER	WD21	ALL	ABS	●	●	●	○	●	●	001
PATHFINDER	WD21	ALL	ACM	●	●	●	○	●	○	○
PATHFINDER	WD21	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
PATHFINDER	WD21	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
PATHFINDER	WD21	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
PATHFINDER	WD21	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
PATHFINDER	WD21	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PATHFINDER	WD21	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
PATHFINDER	WD21	ALL	ASCD	○	●	●	○	●	○	○
PATHFINDER	WD21	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
PATHFINDER	WD21	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
PATHFINDER	WD21	ALL	BCM	●	●	●	○	●	●	001, 002
PATHFINDER	WD21	ALL	DIFF_LOCK	●	●	●	○	●	○	○
PATHFINDER	WD21	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
PATHFINDER	WD21	ALL	DIU	●	●	●	○	●	○	○
PATHFINDER	WD21	ALL	ENGINE	●	●	●	※	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PATHFINDER	WD21	ALL	EPS	●	●	●	○	●	○	002
PATHFINDER	WD21	ALL	E_4WD	●	●	●	○	●	●	002
PATHFINDER	WD21	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
PATHFINDER	WD21	ALL	HVAC	●	●	●	○	●	●	001
PATHFINDER	WD21	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
PATHFINDER	WD21	ALL	IPDM_ER	○	●	●	○	●	●	002
PATHFINDER	WD21	ALL	IVMS	●	●	●	○	●	○	○
PATHFINDER	WD21	ALL	LDW	●	●	●	○	●	●	001
PATHFINDER	WD21	ALL	METER	○	●	●	○	●	○	002
PATHFINDER	WD21	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
PATHFINDER	WD21	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
PATHFINDER	WD21	ALL	MULTI_AV	○	●	●	○	●	○	○
PATHFINDER	WD21	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
PATHFINDER	WD21	ALL	RASHICAS	●	●	●	○	●	●	○
PATHFINDER	WD21	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
PATHFINDER	WD21	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
PATHFINDER	WD21	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
PATHFINDER	WD21	ALL	SONAR	●	●	●	○	●	●	○
PATHFINDER	WD21	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
PATHFINDER	WD21	ALL	TBDAVM	●	●	●	○	●	●	001
PATHFINDER	WD21	ALL	TCS	●	●	●	●	●	●	001
PATHFINDER	WD21	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
PATHFINDER ARMADA	TA60	2004	ABS	●	●	●	○	●	●	001
PATHFINDER ARMADA	TA60	2004	ACM	●	●	●	○	●	○	○
PATHFINDER ARMADA	TA60	2004	ACTIVE_SUS	●	●	●	●	●	●	001
PATHFINDER ARMADA	TA60	2004	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
PATHFINDER ARMADA	TA60	2004	AIRBAG	●	●	●	●	●	○	003, 005, 008
PATHFINDER ARMADA	TA60	2004	AIR_LEVELIZER	●	●	●	○	●	●	001
PATHFINDER ARMADA	TA60	2004	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PATHFINDER ARMADA	TA60	2004	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
PATHFINDER ARMADA	TA60	2004	ASCD	○	●	●	○	●	○	○
PATHFINDER ARMADA	TA60	2004	AUTO_DRIVE_POS	●	●	●	○	●	●	001
PATHFINDER ARMADA	TA60	2004	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
PATHFINDER ARMADA	TA60	2004	BCM	●	●	●	○	●	●	001, 002
PATHFINDER ARMADA	TA60	2004	DIFF_LOCK	●	●	●	○	●	○	○
PATHFINDER ARMADA	TA60	2004	DISTANCE_CONTROL	●	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PATHFINDER ARMADA	TA60	2004	DIU	●	●	●	○	●	○	○
PATHFINDER ARMADA	TA60	2004	ENGINE	●	●	●	※	●	●	001
PATHFINDER ARMADA	TA60	2004	EPS	●	●	●	○	●	○	002
PATHFINDER ARMADA	TA60	2004	E_4WD	●	●	●	○	●	●	002
PATHFINDER ARMADA	TA60	2004	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
PATHFINDER ARMADA	TA60	2004	HVAC	●	●	●	○	●	●	001
PATHFINDER ARMADA	TA60	2004	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
PATHFINDER ARMADA	TA60	2004	IPDM_ER	○	●	●	○	●	●	002
PATHFINDER ARMADA	TA60	2004	IVMS	●	●	●	○	●	○	○
PATHFINDER ARMADA	TA60	2004	LDW	●	●	●	○	●	●	001
PATHFINDER ARMADA	TA60	2004	METER	○	●	●	○	●	○	002
PATHFINDER ARMADA	TA60	2004	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
PATHFINDER ARMADA	TA60	2004	MOTOR_ASSIST	○	●	●	○	●	○	001
PATHFINDER ARMADA	TA60	2004	MULTI_AV	○	●	●	○	●	○	○
PATHFINDER ARMADA	TA60	2004	NATS_IMMU	○	●	●	○	○	○	004, 006
PATHFINDER ARMADA	TA60	2004	RASHICAS	●	●	●	○	●	●	○
PATHFINDER ARMADA	TA60	2004	REARVIEW_CAMERA	●	○	○	○	●	○	001
PATHFINDER ARMADA	TA60	2004	S/BLIND_CAMERA	●	○	○	○	●	○	001
PATHFINDER ARMADA	TA60	2004	SMART_ENTRANCE	○	●	●	○	●	●	002
PATHFINDER ARMADA	TA60	2004	SONAR	●	●	●	○	●	●	○
PATHFINDER ARMADA	TA60	2004	TBDADAS_ICC	●	●	●	○	●	●	001, 002
PATHFINDER ARMADA	TA60	2004	TBDAVM	●	●	●	○	●	●	001
PATHFINDER ARMADA	TA60	2004	TCS	●	●	●	●	●	●	001
PATHFINDER ARMADA	TA60	2004	TRANSMISSION	●	●	●	○	●	○	001, 002
PATROL	Y61	1997-2011	ABS	●	●	●	○	●	●	001
PATROL	Y61	1997-2011	ACM	●	●	●	○	●	○	○
PATROL	Y61	1997-2011	ACTIVE_SUS	●	●	●	●	●	●	001
PATROL	Y61	1997-2011	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
PATROL	Y61	1997-2011	AIRBAG	●	●	●	●	●	○	003, 005, 008
PATROL	Y61	1997-2011	AIR_LEVELIZER	●	●	●	○	●	●	001
PATROL	Y61	1997-2011	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PATROL	Y61	1997-2011	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
PATROL	Y61	1997-2011	ASCD	○	●	●	○	●	○	○
PATROL	Y61	1997-2011	AUTO_DRIVE_POS	●	●	●	○	●	●	001
PATROL	Y61	1997-2011	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
PATROL	Y61	1997-2011	BCM	●	●	●	○	●	●	001, 002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PATROL	Y61	1997-2011	DIFF_LOCK	●	●	●	○	●	○	○
PATROL	Y61	1997-2011	DISTANCE_CONTROL	●	●	●	○	●	○	○
PATROL	Y61	1997-2011	DIU	●	●	●	○	●	○	○
PATROL	Y61	1997-2011	ENGINE	●	●	●	※	●	●	001
PATROL	Y61	1997-2011	EPS	●	●	●	○	●	○	002
PATROL	Y61	1997-2011	E_4WD	●	●	●	○	●	●	002
PATROL	Y61	1997-2011	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
PATROL	Y61	1997-2011	HVAC	●	●	●	○	●	●	001
PATROL	Y61	1997-2011	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
PATROL	Y61	1997-2011	IPDM_ER	○	●	●	○	●	●	002
PATROL	Y61	1997-2011	IVMS	●	●	●	○	●	○	○
PATROL	Y61	1997-2011	LDW	●	●	●	○	●	●	001
PATROL	Y61	1997-2011	METER	○	●	●	○	●	○	002
PATROL	Y61	1997-2011	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
PATROL	Y61	1997-2011	MOTOR_ASSIST	○	●	●	○	●	○	001
PATROL	Y61	1997-2011	MULTI_AV	○	●	●	○	●	○	○
PATROL	Y61	1997-2011	NATS_IMMU	○	●	●	○	○	○	004, 006
PATROL	Y61	1997-2011	RASHICAS	●	●	●	○	●	●	○
PATROL	Y61	1997-2011	REARVIEW_CAMERA	●	○	○	○	●	○	001
PATROL	Y61	1997-2011	S/BLIND_CAMERA	●	○	○	○	●	○	001
PATROL	Y61	1997-2011	SMART_ENTRANCE	○	●	●	○	●	●	002
PATROL	Y61	1997-2011	SONAR	●	●	●	○	●	●	○
PATROL	Y61	1997-2011	TBDADAS_ICC	●	●	●	○	●	●	001, 002
PATROL	Y61	1997-2011	TBDAVM	●	●	●	○	●	●	001
PATROL	Y61	1997-2011	TCS	●	●	●	●	●	●	001
PATROL	Y61	1997-2011	TRANSMISSION	●	●	●	○	●	○	001, 002
PATROL	Y62	2010-2011	ABS	●	●	●	※	●	●	001
PATROL	Y62	2010-2011	ACCELE_PEDAL_ACT	●	●	●	○	●	●	○
PATROL	Y62	2010-2011	AIRBAG	●	●	●	○	●	●	001
PATROL	Y62	2010-2011	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PATROL	Y62	2010-2011	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
PATROL	Y62	2010-2011	AUTO_DRIVE_POS	●	●	●	○	●	●	001
PATROL	Y62	2010-2011	BCM	※	●	●	○	●	●	001, 002
PATROL	Y62	2010-2011	DIFF_LOCK	●	●	●	○	●	○	○
PATROL	Y62	2010-2011	ENGINE	●	●	●	※	●	●	001
PATROL	Y62	2010-2011	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PATROL	Y62	2010-2011	HVAC	●	●	●	●	●	●	001
PATROL	Y62	2010-2011	IPDM_ER	○	●	●	○	●	●	002
PATROL	Y62	2010-2011	LANE CAMERA	●	●	●	○	●	●	001
PATROL	Y62	2010-2011	LASER/RADAR	●	●	●	○	●	○	001
PATROL	Y62	2010-2011	METER	※	●	●	○	●	○	002
PATROL	Y62	2010-2011	MULTI_AV	※	●	●	○	●	○	○
PATROL	Y62	2010-2011	PRECRASH_SEATBELT	●	●	●	○	●	○	001
PATROL	Y62	2010-2011	SIDE_RADAR_LEFT	●	○	○	○	●	○	001
PATROL	Y62	2010-2011	SIDE_RADAR_RIGHT	●	○	○	○	●	○	001
PATROL	Y62	2010-2011	SONAR	●	●	●	○	●	●	○
PATROL	Y62	2010-2011	ICC/ADAS	●	●	●	※	●	●	001, 002
PATROL	Y62	2010-2011	TRANSMISSION	●	●	●	※	●	※	001, 002
PATROL (AT)	Y62	2011	ABS	●	●	●	※	●	●	001
PATROL (AT)	Y62	2011	ACCELE_PEDAL_ACT	●	●	●	○	●	●	○
PATROL (AT)	Y62	2011	AIRBAG	●	●	●	○	●	●	001
PATROL (AT)	Y62	2011	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PATROL (AT)	Y62	2011	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
PATROL (AT)	Y62	2011	AUTO_DRIVE_POS	●	●	●	○	●	●	001
PATROL (AT)	Y62	2011	BCM	※	●	●	○	●	●	001, 002
PATROL (AT)	Y62	2011	DIFF_LOCK	●	●	●	○	●	○	○
PATROL (AT)	Y62	2011	ENGINE	●	●	●	※	●	●	001
PATROL (AT)	Y62	2011	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
PATROL (AT)	Y62	2011	HVAC	●	●	●	●	●	●	001
PATROL (AT)	Y62	2011	IPDM_ER	○	●	●	○	●	●	002
PATROL (AT)	Y62	2011	LANE CAMERA	●	●	●	○	●	●	001
PATROL (AT)	Y62	2011	LASER/RADAR	●	●	●	○	●	○	001
PATROL (AT)	Y62	2011	METER	※	●	●	○	●	○	002
PATROL (AT)	Y62	2011	MULTI_AV	※	●	●	○	●	○	○
PATROL (AT)	Y62	2011	PRECRASH_SEATBELT	●	●	●	○	●	○	001
PATROL (AT)	Y62	2011	SIDE_RADAR_LEFT	●	○	○	○	●	○	001
PATROL (AT)	Y62	2011	SIDE_RADAR_RIGHT	●	○	○	○	●	○	001
PATROL (AT)	Y62	2011	SONAR	●	●	●	○	●	●	○
PATROL (AT)	Y62	2011	ICC/ADAS	●	●	●	※	●	●	001, 002
PATROL (AT)	Y62	2011	TRANSMISSION	●	●	●	※	●	※	001, 002
PATROL (MT)	Y62	2011	ABS	●	●	●	※	●	●	001
PATROL (MT)	Y62	2011	ACCELE_PEDAL_ACT	●	●	●	○	●	●	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PATROL (MT)	Y62	2011	AIRBAG	●	●	●	○	●	●	001
PATROL (MT)	Y62	2011	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PATROL (MT)	Y62	2011	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
PATROL (MT)	Y62	2011	AUTO_DRIVE_POS	●	●	●	○	●	●	001
PATROL (MT)	Y62	2011	BCM	※	●	●	○	●	●	001, 002
PATROL (MT)	Y62	2011	DIFF_LOCK	●	●	●	○	●	○	○
PATROL (MT)	Y62	2011	ENGINE	●	●	●	※	●	●	001
PATROL (MT)	Y62	2011	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
PATROL (MT)	Y62	2011	HVAC	●	●	●	●	●	●	001
PATROL (MT)	Y62	2011	IPDM_ER	○	●	●	○	●	●	002
PATROL (MT)	Y62	2011	LANE_CAMERA	●	●	●	○	●	●	001
PATROL (MT)	Y62	2011	LASER/RADAR	●	●	●	○	●	○	001
PATROL (MT)	Y62	2011	METER	※	●	●	○	●	○	002
PATROL (MT)	Y62	2011	MULTI_AV	※	●	●	○	●	○	○
PATROL (MT)	Y62	2011	PRECRASH_SEATBELT	●	●	●	○	●	○	001
PATROL (MT)	Y62	2011	SIDE_RADAR_LEFT	●	○	○	○	●	○	001
PATROL (MT)	Y62	2011	SIDE_RADAR_RIGHT	●	○	○	○	●	○	001
PATROL (MT)	Y62	2011	SONAR	●	●	●	○	●	●	○
PATROL (MT)	Y62	2011	ICC/ADAS	●	●	●	※	●	●	001, 002
PATROL (MT)	Y62	2011	TRANSMISSION	●	●	●	※	●	※	001, 002
PATROL Pickup	UY61	2002-2009	ABS	●	●	●	○	●	●	001
PATROL Pickup	UY61	2002-2009	ACM	●	●	●	○	●	○	○
PATROL Pickup	UY61	2002-2009	ACTIVE_SUS	●	●	●	●	●	●	001
PATROL Pickup	UY61	2002-2009	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
PATROL Pickup	UY61	2002-2009	AIRBAG	●	●	●	●	●	○	003, 005, 008
PATROL Pickup	UY61	2002-2009	AIR_LEVELIZER	●	●	●	○	●	●	001
PATROL Pickup	UY61	2002-2009	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PATROL Pickup	UY61	2002-2009	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
PATROL Pickup	UY61	2002-2009	ASCD	○	●	●	○	●	○	○
PATROL Pickup	UY61	2002-2009	AUTO_DRIVE_POS	●	●	●	○	●	●	001
PATROL Pickup	UY61	2002-2009	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
PATROL Pickup	UY61	2002-2009	BCM	●	●	●	○	●	●	001, 002
PATROL Pickup	UY61	2002-2009	DIFF_LOCK	●	●	●	○	●	○	○
PATROL Pickup	UY61	2002-2009	DISTANCE_CONTROL	●	●	●	○	●	○	○
PATROL Pickup	UY61	2002-2009	DIU	●	●	●	○	●	○	○
PATROL Pickup	UY61	2002-2009	ENGINE	●	●	●	※	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PATROL Pickup	UY61	2002-2009	EPS	●	●	●	○	●	○	002
PATROL Pickup	UY61	2002-2009	E_4WD	●	●	●	○	●	●	002
PATROL Pickup	UY61	2002-2009	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
PATROL Pickup	UY61	2002-2009	HVAC	●	●	●	○	●	●	001
PATROL Pickup	UY61	2002-2009	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
PATROL Pickup	UY61	2002-2009	IPDM_ER	○	●	●	○	●	●	002
PATROL Pickup	UY61	2002-2009	IVMS	●	●	●	○	●	○	○
PATROL Pickup	UY61	2002-2009	LDW	●	●	●	○	●	●	001
PATROL Pickup	UY61	2002-2009	METER	○	●	●	○	●	○	002
PATROL Pickup	UY61	2002-2009	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
PATROL Pickup	UY61	2002-2009	MOTOR_ASSIST	○	●	●	○	●	○	001
PATROL Pickup	UY61	2002-2009	MULTI_AV	○	●	●	○	●	○	○
PATROL Pickup	UY61	2002-2009	NATS_IMMU	○	●	●	○	○	○	004, 006
PATROL Pickup	UY61	2002-2009	RASHICAS	●	●	●	○	●	●	○
PATROL Pickup	UY61	2002-2009	REARVIEW_CAMERA	●	○	○	○	●	○	001
PATROL Pickup	UY61	2002-2009	S/BLIND_CAMERA	●	○	○	○	●	○	001
PATROL Pickup	UY61	2002-2009	SMART_ENTRANCE	○	●	●	○	●	●	002
PATROL Pickup	UY61	2002-2009	SONAR	●	●	●	○	●	●	○
PATROL Pickup	UY61	2002-2009	TBDADAS_ICC	●	●	●	○	●	●	001, 002
PATROL Pickup	UY61	2002-2009	TBDAVM	●	●	●	○	●	●	001
PATROL Pickup	UY61	2002-2009	TCS	●	●	●	●	●	●	001
PATROL Pickup	UY61	2002-2009	TRANSMISSION	●	●	●	○	●	○	001, 002
PICKUP	D21	ALL	ABS	●	●	●	○	●	●	001
PICKUP	D21	ALL	ACM	●	●	●	○	●	○	○
PICKUP	D21	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
PICKUP	D21	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
PICKUP	D21	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
PICKUP	D21	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
PICKUP	D21	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PICKUP	D21	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
PICKUP	D21	ALL	ASCD	○	●	●	○	●	○	○
PICKUP	D21	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
PICKUP	D21	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
PICKUP	D21	ALL	BCM	●	●	●	○	●	●	001, 002
PICKUP	D21	ALL	DIFF_LOCK	●	●	●	○	●	○	○
PICKUP	D21	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PICKUP	D21	ALL	DIU	●	●	●	○	●	○	○
PICKUP	D21	ALL	ENGINE	●	●	●	※	●	●	001
PICKUP	D21	ALL	EPS	●	●	●	○	●	○	002
PICKUP	D21	ALL	E_4WD	●	●	●	○	●	●	002
PICKUP	D21	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
PICKUP	D21	ALL	HVAC	●	●	●	○	●	●	001
PICKUP	D21	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
PICKUP	D21	ALL	IPDM_ER	○	●	●	○	●	●	002
PICKUP	D21	ALL	IVMS	●	●	●	○	●	○	○
PICKUP	D21	ALL	LDW	●	●	●	○	●	●	001
PICKUP	D21	ALL	METER	○	●	●	○	●	○	002
PICKUP	D21	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
PICKUP	D21	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
PICKUP	D21	ALL	MULTI_AV	○	●	●	○	●	○	○
PICKUP	D21	ALL	NATS_IMMUN	○	●	●	○	○	○	004, 006
PICKUP	D21	ALL	RASHICAS	●	●	●	○	●	●	○
PICKUP	D21	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
PICKUP	D21	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
PICKUP	D21	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
PICKUP	D21	ALL	SONAR	●	●	●	○	●	●	○
PICKUP	D21	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
PICKUP	D21	ALL	TBDAVM	●	●	●	○	●	●	001
PICKUP	D21	ALL	TCS	●	●	●	●	●	●	001
PICKUP	D21	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
PICKUP	D22	ALL	ABS	●	●	●	○	●	●	001
PICKUP	D22	ALL	ACM	●	●	●	○	●	○	○
PICKUP	D22	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
PICKUP	D22	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
PICKUP	D22	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
PICKUP	D22	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
PICKUP	D22	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PICKUP	D22	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
PICKUP	D22	ALL	ASCD	○	●	●	○	●	○	○
PICKUP	D22	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
PICKUP	D22	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
PICKUP	D22	ALL	BCM	●	●	●	○	●	●	001, 002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PICKUP	D22	ALL	DIFF_LOCK	●	●	●	○	●	○	○
PICKUP	D22	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
PICKUP	D22	ALL	DIU	●	●	●	○	●	○	○
PICKUP	D22	ALL	ENGINE	●	●	●	※	●	●	001
PICKUP	D22	ALL	EPS	●	●	●	○	●	○	002
PICKUP	D22	ALL	E_4WD	●	●	●	○	●	●	002
PICKUP	D22	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
PICKUP	D22	ALL	HVAC	●	●	●	○	●	●	001
PICKUP	D22	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
PICKUP	D22	ALL	IPDM_ER	○	●	●	○	●	●	002
PICKUP	D22	ALL	IVMS	●	●	●	○	●	○	○
PICKUP	D22	ALL	LDW	●	●	●	○	●	●	001
PICKUP	D22	ALL	METER	○	●	●	○	●	○	002
PICKUP	D22	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
PICKUP	D22	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
PICKUP	D22	ALL	MULTI_AV	○	●	●	○	●	○	○
PICKUP	D22	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
PICKUP	D22	ALL	RASHICAS	●	●	●	○	●	●	○
PICKUP	D22	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
PICKUP	D22	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
PICKUP	D22	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
PICKUP	D22	ALL	SONAR	●	●	●	○	●	●	○
PICKUP	D22	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
PICKUP	D22	ALL	TBDAVM	●	●	●	○	●	●	001
PICKUP	D22	ALL	TCS	●	●	●	●	●	●	001
PICKUP	D22	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
PICKUP/NAVARA	D22	ALL	ABS	●	●	●	○	●	●	001
PICKUP/NAVARA	D22	ALL	ACM	●	●	●	○	●	○	○
PICKUP/NAVARA	D22	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
PICKUP/NAVARA	D22	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
PICKUP/NAVARA	D22	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
PICKUP/NAVARA	D22	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
PICKUP/NAVARA	D22	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PICKUP/NAVARA	D22	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
PICKUP/NAVARA	D22	ALL	ASCD	○	●	●	○	●	○	○
PICKUP/NAVARA	D22	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PICKUP/NAVARA	D22	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
PICKUP/NAVARA	D22	ALL	BCM	●	●	●	○	●	●	001, 002
PICKUP/NAVARA	D22	ALL	DIFF_LOCK	●	●	●	○	●	○	○
PICKUP/NAVARA	D22	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
PICKUP/NAVARA	D22	ALL	DIU	●	●	●	○	●	○	○
PICKUP/NAVARA	D22	ALL	ENGINE	●	●	●	※	●	●	001
PICKUP/NAVARA	D22	ALL	EPS	●	●	●	○	●	○	002
PICKUP/NAVARA	D22	ALL	E_4WD	●	●	●	○	●	●	002
PICKUP/NAVARA	D22	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
PICKUP/NAVARA	D22	ALL	HVAC	●	●	●	○	●	●	001
PICKUP/NAVARA	D22	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
PICKUP/NAVARA	D22	ALL	IPDM_ER	○	●	●	○	●	●	002
PICKUP/NAVARA	D22	ALL	IVMS	●	●	●	○	●	○	○
PICKUP/NAVARA	D22	ALL	LDW	●	●	●	○	●	●	001
PICKUP/NAVARA	D22	ALL	METER	○	●	●	○	●	○	002
PICKUP/NAVARA	D22	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
PICKUP/NAVARA	D22	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
PICKUP/NAVARA	D22	ALL	MULTI_AV	○	●	●	○	●	○	○
PICKUP/NAVARA	D22	ALL	NATS_IMMUE	○	●	●	○	○	○	004, 006
PICKUP/NAVARA	D22	ALL	RASHICAS	●	●	●	○	●	●	○
PICKUP/NAVARA	D22	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
PICKUP/NAVARA	D22	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
PICKUP/NAVARA	D22	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
PICKUP/NAVARA	D22	ALL	SONAR	●	●	●	○	●	●	○
PICKUP/NAVARA	D22	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
PICKUP/NAVARA	D22	ALL	TBDADM	●	●	●	○	●	●	001
PICKUP/NAVARA	D22	ALL	TCS	●	●	●	●	●	●	001
PICKUP/NAVARA	D22	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
PRAIRIE	M12	ALL	ABS	●	●	●	○	●	●	001
PRAIRIE	M12	ALL	ACM	●	●	●	○	●	○	○
PRAIRIE	M12	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
PRAIRIE	M12	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
PRAIRIE	M12	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
PRAIRIE	M12	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
PRAIRIE	M12	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PRAIRIE	M12	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PRAIRIE	M12	ALL	ASCD	○	●	●	○	●	○	○
PRAIRIE	M12	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
PRAIRIE	M12	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
PRAIRIE	M12	ALL	BCM	●	●	●	○	●	●	001, 002
PRAIRIE	M12	ALL	DIFF_LOCK	●	●	●	○	●	○	○
PRAIRIE	M12	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
PRAIRIE	M12	ALL	DIU	●	●	●	○	●	○	○
PRAIRIE	M12	ALL	ENGINE	●	●	●	※	●	●	001
PRAIRIE	M12	ALL	EPS	●	●	●	○	●	○	002
PRAIRIE	M12	ALL	E_4WD	●	●	●	○	●	●	002
PRAIRIE	M12	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
PRAIRIE	M12	ALL	HVAC	●	●	●	○	●	●	001
PRAIRIE	M12	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
PRAIRIE	M12	ALL	IPDM_ER	○	●	●	○	●	●	002
PRAIRIE	M12	ALL	IVMS	●	●	●	○	●	○	○
PRAIRIE	M12	ALL	LDW	●	●	●	○	●	●	001
PRAIRIE	M12	ALL	METER	○	●	●	○	●	○	002
PRAIRIE	M12	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
PRAIRIE	M12	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
PRAIRIE	M12	ALL	MULTI_AV	○	●	●	○	●	○	○
PRAIRIE	M12	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
PRAIRIE	M12	ALL	RASHICAS	●	●	●	○	●	●	○
PRAIRIE	M12	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
PRAIRIE	M12	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
PRAIRIE	M12	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
PRAIRIE	M12	ALL	SONAR	●	●	●	○	●	●	○
PRAIRIE	M12	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
PRAIRIE	M12	ALL	TBDAVM	●	●	●	○	●	●	001
PRAIRIE	M12	ALL	TCS	●	●	●	●	●	●	001
PRAIRIE	M12	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
PRESAGE	U30	ALL	ABS	●	●	●	○	●	●	001
PRESAGE	U30	ALL	ACM	●	●	●	○	●	○	○
PRESAGE	U30	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
PRESAGE	U30	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
PRESAGE	U30	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
PRESAGE	U30	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PRESAGE	U30	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PRESAGE	U30	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
PRESAGE	U30	ALL	ASCD	○	●	●	○	●	○	○
PRESAGE	U30	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
PRESAGE	U30	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
PRESAGE	U30	ALL	BCM	●	●	●	○	●	●	001, 002
PRESAGE	U30	ALL	DIFF_LOCK	●	●	●	○	●	○	○
PRESAGE	U30	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
PRESAGE	U30	ALL	DIU	●	●	●	○	●	○	○
PRESAGE	U30	ALL	ENGINE	●	●	●	※	●	●	001
PRESAGE	U30	ALL	EPS	●	●	●	○	●	○	002
PRESAGE	U30	ALL	E_4WD	●	●	●	○	●	●	002
PRESAGE	U30	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
PRESAGE	U30	ALL	HVAC	●	●	●	○	●	●	001
PRESAGE	U30	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
PRESAGE	U30	ALL	IPDM_ER	○	●	●	○	●	●	002
PRESAGE	U30	ALL	IVMS	●	●	●	○	●	○	○
PRESAGE	U30	ALL	LDW	●	●	●	○	●	●	001
PRESAGE	U30	ALL	METER	○	●	●	○	●	○	002
PRESAGE	U30	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
PRESAGE	U30	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
PRESAGE	U30	ALL	MULTI_AV	○	●	●	○	●	○	○
PRESAGE	U30	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
PRESAGE	U30	ALL	RASHICAS	●	●	●	○	●	●	○
PRESAGE	U30	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
PRESAGE	U30	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
PRESAGE	U30	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
PRESAGE	U30	ALL	SONAR	●	●	●	○	●	●	○
PRESAGE	U30	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
PRESAGE	U30	ALL	TBDAVM	●	●	●	○	●	●	001
PRESAGE	U30	ALL	TCS	●	●	●	●	●	●	001
PRESAGE	U30	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
PRESAGE	U31	2003-2007	ABS	●	●	●	○	●	●	001
PRESAGE	U31	2003-2007	ACM	●	●	●	○	●	○	○
PRESAGE	U31	2003-2007	ACTIVE_SUS	●	●	●	●	●	●	001
PRESAGE	U31	2003-2007	ADAPTIVE_LIGHT	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PRESAGE	U31	2003-2007	AIRBAG	●	●	●	●	●	○	003, 005, 008
PRESAGE	U31	2003-2007	AIR_LEVELIZER	●	●	●	○	●	●	001
PRESAGE	U31	2003-2007	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PRESAGE	U31	2003-2007	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
PRESAGE	U31	2003-2007	ASCD	○	●	●	○	●	○	○
PRESAGE	U31	2003-2007	AUTO_DRIVE_POS	●	●	●	○	●	●	001
PRESAGE	U31	2003-2007	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
PRESAGE	U31	2003-2007	BCM	●	●	●	○	●	●	001, 002
PRESAGE	U31	2003-2007	DIFF_LOCK	●	●	●	○	●	○	○
PRESAGE	U31	2003-2007	DISTANCE_CONTROL	●	●	●	○	●	○	○
PRESAGE	U31	2003-2007	DIU	●	●	●	○	●	○	○
PRESAGE	U31	2003-2007	ENGINE	●	●	●	※	●	●	001
PRESAGE	U31	2003-2007	EPS	●	●	●	○	●	○	002
PRESAGE	U31	2003-2007	E_4WD	●	●	●	○	●	●	002
PRESAGE	U31	2003-2007	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
PRESAGE	U31	2003-2007	HVAC	●	●	●	○	●	●	001
PRESAGE	U31	2003-2007	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
PRESAGE	U31	2003-2007	IPDM_ER	○	●	●	○	●	●	002
PRESAGE	U31	2003-2007	IVMS	●	●	●	○	●	○	○
PRESAGE	U31	2003-2007	LDW	●	●	●	○	●	●	001
PRESAGE	U31	2003-2007	METER	○	●	●	○	●	○	002
PRESAGE	U31	2003-2007	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
PRESAGE	U31	2003-2007	MOTOR_ASSIST	○	●	●	○	●	○	001
PRESAGE	U31	2003-2007	MULTI_AV	○	●	●	○	●	○	○
PRESAGE	U31	2003-2007	NATS_IMMUN	○	●	●	○	○	○	004, 006
PRESAGE	U31	2003-2007	RASHICAS	●	●	●	○	●	●	○
PRESAGE	U31	2003-2007	REARVIEW_CAMERA	●	○	○	○	●	○	001
PRESAGE	U31	2003-2007	S/BLIND_CAMERA	●	○	○	○	●	○	001
PRESAGE	U31	2003-2007	SMART_ENTRANCE	○	●	●	○	●	●	002
PRESAGE	U31	2003-2007	SONAR	●	●	●	○	●	●	○
PRESAGE	U31	2003-2007	TBDADAS_ICC	●	●	●	○	●	●	001, 002
PRESAGE	U31	2003-2007	TBDAVM	●	●	●	○	●	●	001
PRESAGE	U31	2003-2007	TCS	●	●	●	●	●	●	001
PRESAGE	U31	2003-2007	TRANSMISSION	●	●	●	○	●	○	001, 002
PRESEA	R11	ALL	ABS	●	●	●	○	●	●	001
PRESEA	R11	ALL	ACM	●	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PRESEA	R11	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
PRESEA	R11	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
PRESEA	R11	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
PRESEA	R11	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
PRESEA	R11	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PRESEA	R11	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
PRESEA	R11	ALL	ASCD	○	●	●	○	●	○	○
PRESEA	R11	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
PRESEA	R11	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
PRESEA	R11	ALL	BCM	●	●	●	○	●	●	001, 002
PRESEA	R11	ALL	DIFF_LOCK	●	●	●	○	●	○	○
PRESEA	R11	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
PRESEA	R11	ALL	DIU	●	●	●	○	●	○	○
PRESEA	R11	ALL	ENGINE	●	●	●	※	●	●	001
PRESEA	R11	ALL	EPS	●	●	●	○	●	○	002
PRESEA	R11	ALL	E_4WD	●	●	●	○	●	●	002
PRESEA	R11	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
PRESEA	R11	ALL	HVAC	●	●	●	○	●	●	001
PRESEA	R11	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
PRESEA	R11	ALL	IPDM_ER	○	●	●	○	●	●	002
PRESEA	R11	ALL	IVMS	●	●	●	○	●	○	○
PRESEA	R11	ALL	LDW	●	●	●	○	●	●	001
PRESEA	R11	ALL	METER	○	●	●	○	●	○	002
PRESEA	R11	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
PRESEA	R11	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
PRESEA	R11	ALL	MULTI_AV	○	●	●	○	●	○	○
PRESEA	R11	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
PRESEA	R11	ALL	RASHICAS	●	●	●	○	●	●	○
PRESEA	R11	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
PRESEA	R11	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
PRESEA	R11	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
PRESEA	R11	ALL	SONAR	●	●	●	○	●	●	○
PRESEA	R11	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
PRESEA	R11	ALL	TBDAVM	●	●	●	○	●	●	001
PRESEA	R11	ALL	TCS	●	●	●	●	●	●	001
PRESEA	R11	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PRESIDENT	PF50	2003-2005	ABS	●	●	●	○	●	●	001
PRESIDENT	PF50	2003-2005	ACM	●	●	●	○	●	○	○
PRESIDENT	PF50	2003-2005	ACTIVE_SUS	●	●	●	●	●	●	001
PRESIDENT	PF50	2003-2005	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
PRESIDENT	PF50	2003-2005	AIRBAG	●	●	●	●	●	○	003, 005, 008
PRESIDENT	PF50	2003-2005	AIR_LEVELIZER	●	●	●	○	●	●	001
PRESIDENT	PF50	2003-2005	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PRESIDENT	PF50	2003-2005	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
PRESIDENT	PF50	2003-2005	ASCD	○	●	●	○	●	○	○
PRESIDENT	PF50	2003-2005	AUTO_DRIVE_POS	●	●	●	○	●	●	001
PRESIDENT	PF50	2003-2005	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
PRESIDENT	PF50	2003-2005	BCM	●	●	●	○	●	●	001, 002
PRESIDENT	PF50	2003-2005	DIFF_LOCK	●	●	●	○	●	○	○
PRESIDENT	PF50	2003-2005	DISTANCE_CONTROL	●	●	●	○	●	○	○
PRESIDENT	PF50	2003-2005	DIU	●	●	●	○	●	○	○
PRESIDENT	PF50	2003-2005	ENGINE	●	●	●	※	●	●	001
PRESIDENT	PF50	2003-2005	EPS	●	●	●	○	●	○	002
PRESIDENT	PF50	2003-2005	E_4WD	●	●	●	○	●	●	002
PRESIDENT	PF50	2003-2005	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
PRESIDENT	PF50	2003-2005	HVAC	●	●	●	○	●	●	001
PRESIDENT	PF50	2003-2005	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
PRESIDENT	PF50	2003-2005	IPDM_ER	○	●	●	○	●	●	002
PRESIDENT	PF50	2003-2005	IVMS	●	●	●	○	●	○	○
PRESIDENT	PF50	2003-2005	LDW	●	●	●	○	●	●	001
PRESIDENT	PF50	2003-2005	METER	○	●	●	○	●	○	002
PRESIDENT	PF50	2003-2005	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
PRESIDENT	PF50	2003-2005	MOTOR_ASSIST	○	●	●	○	●	○	001
PRESIDENT	PF50	2003-2005	MULTI_AV	○	●	●	○	●	○	○
PRESIDENT	PF50	2003-2005	NATS_IMMU	○	●	●	○	○	○	004, 006
PRESIDENT	PF50	2003-2005	RASHICAS	●	●	●	○	●	●	○
PRESIDENT	PF50	2003-2005	REARVIEW_CAMERA	●	○	○	○	●	○	001
PRESIDENT	PF50	2003-2005	S/BLIND_CAMERA	●	○	○	○	●	○	001
PRESIDENT	PF50	2003-2005	SMART_ENTRANCE	○	●	●	○	●	●	002
PRESIDENT	PF50	2003-2005	SONAR	●	●	●	○	●	●	○
PRESIDENT	PF50	2003-2005	TBDADAS_ICC	●	●	●	○	●	●	001, 002
PRESIDENT	PF50	2003-2005	TBDAVM	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PRESIDENT	PF50	2003-2005	TCS	●	●	●	●	●	●	001
PRESIDENT	PF50	2003-2005	TRANSMISSION	●	●	●	○	●	○	001, 002
PRIMASTAR	X83	2006-2009	ABS	●	●	●	※	●	●	001
PRIMASTAR	X83	2006-2009	AIRBAG	●	●	●	●	●	○	003, 005, 008
PRIMASTAR	X83	2006-2009	BCM	※	●	●	○	●	●	001, 002
PRIMASTAR	X83	2006-2009	CHA	●	●	●	○	●	●	001
PRIMASTAR	X83	2006-2009	CLUSTER	●	●	●	○	●	●	001
PRIMASTAR	X83	2006-2009	ENGINE	●	●	●	※	●	●	001
PRIMASTAR	X83	2006-2009	MULTI_AV	※	●	●	○	●	○	○
PRIMASTAR	X83	2006-2009	RADIO	●	●	●	○	●	※	001
PRIMASTAR	X83	2006-2009	SONAR	●	●	●	○	●	●	○
PRIMASTAR	X83	2006-2009	TRANSMISSION	●	●	●	※	●	※	001, 002
PRIMERA	P11	ALL	ABS	●	●	●	○	●	●	001
PRIMERA	P11	ALL	ACM	●	●	●	○	●	○	○
PRIMERA	P11	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
PRIMERA	P11	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
PRIMERA	P11	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
PRIMERA	P11	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
PRIMERA	P11	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PRIMERA	P11	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
PRIMERA	P11	ALL	ASCD	○	●	●	○	●	○	○
PRIMERA	P11	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
PRIMERA	P11	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
PRIMERA	P11	ALL	BCM	●	●	●	○	●	●	001, 002
PRIMERA	P11	ALL	DIFF_LOCK	●	●	●	○	●	○	○
PRIMERA	P11	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
PRIMERA	P11	ALL	DIU	●	●	●	○	●	○	○
PRIMERA	P11	ALL	ENGINE	●	●	●	※	●	●	001
PRIMERA	P11	ALL	EPS	●	●	●	○	●	○	002
PRIMERA	P11	ALL	E_4WD	●	●	●	○	●	●	002
PRIMERA	P11	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
PRIMERA	P11	ALL	HVAC	●	●	●	○	●	●	001
PRIMERA	P11	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
PRIMERA	P11	ALL	IPDM_ER	○	●	●	○	●	●	002
PRIMERA	P11	ALL	IVMS	●	●	●	○	●	○	○
PRIMERA	P11	ALL	LDW	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PRIMERA	P11	ALL	METER	○	●	●	○	●	○	002
PRIMERA	P11	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
PRIMERA	P11	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
PRIMERA	P11	ALL	MULTI_AV	○	●	●	○	●	○	○
PRIMERA	P11	ALL	NATS_IMM	○	●	●	○	○	○	004, 006
PRIMERA	P11	ALL	RASHICAS	●	●	●	○	●	●	○
PRIMERA	P11	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
PRIMERA	P11	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
PRIMERA	P11	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
PRIMERA	P11	ALL	SONAR	●	●	●	○	●	●	○
PRIMERA	P11	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
PRIMERA	P11	ALL	TBDAVM	●	●	●	○	●	●	001
PRIMERA	P11	ALL	TCS	●	●	●	●	●	●	001
PRIMERA	P11	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
PRIMERA	P12	ALL	ABS	●	●	●	○	●	●	001
PRIMERA	P12	ALL	ACM	●	●	●	○	●	○	○
PRIMERA	P12	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
PRIMERA	P12	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
PRIMERA	P12	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
PRIMERA	P12	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
PRIMERA	P12	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PRIMERA	P12	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
PRIMERA	P12	ALL	ASCD	○	●	●	○	●	○	○
PRIMERA	P12	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
PRIMERA	P12	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
PRIMERA	P12	ALL	BCM	●	●	●	○	●	●	001, 002
PRIMERA	P12	ALL	DIFF_LOCK	●	●	●	○	●	○	○
PRIMERA	P12	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
PRIMERA	P12	ALL	DIU	●	●	●	○	●	○	○
PRIMERA	P12	ALL	ENGINE	●	●	●	※	●	●	001
PRIMERA	P12	ALL	EPS	●	●	●	○	●	○	002
PRIMERA	P12	ALL	E_4WD	●	●	●	○	●	●	002
PRIMERA	P12	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
PRIMERA	P12	ALL	HVAC	●	●	●	○	●	●	001
PRIMERA	P12	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
PRIMERA	P12	ALL	IPDM_ER	○	●	●	○	●	●	002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PRIMERA	P12	ALL	IVMS	●	●	●	○	●	○	○
PRIMERA	P12	ALL	LDW	●	●	●	○	●	●	001
PRIMERA	P12	ALL	METER	○	●	●	○	●	○	002
PRIMERA	P12	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
PRIMERA	P12	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
PRIMERA	P12	ALL	MULTI_AV	○	●	●	○	●	○	○
PRIMERA	P12	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
PRIMERA	P12	ALL	RASHICAS	●	●	●	○	●	●	○
PRIMERA	P12	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
PRIMERA	P12	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
PRIMERA	P12	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
PRIMERA	P12	ALL	SONAR	●	●	●	○	●	●	○
PRIMERA	P12	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
PRIMERA	P12	ALL	TBDAVM	●	●	●	○	●	●	001
PRIMERA	P12	ALL	TCS	●	●	●	●	●	●	001
PRIMERA	P12	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
PULSAR	N15	ALL	ABS	●	●	●	○	●	●	001
PULSAR	N15	ALL	ACM	●	●	●	○	●	○	○
PULSAR	N15	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
PULSAR	N15	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
PULSAR	N15	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
PULSAR	N15	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
PULSAR	N15	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PULSAR	N15	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
PULSAR	N15	ALL	ASCD	○	●	●	○	●	○	○
PULSAR	N15	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
PULSAR	N15	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
PULSAR	N15	ALL	BCM	●	●	●	○	●	●	001, 002
PULSAR	N15	ALL	DIFF_LOCK	●	●	●	○	●	○	○
PULSAR	N15	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
PULSAR	N15	ALL	DIU	●	●	●	○	●	○	○
PULSAR	N15	ALL	ENGINE	●	●	●	※	●	●	001
PULSAR	N15	ALL	EPS	●	●	●	○	●	○	002
PULSAR	N15	ALL	E_4WD	●	●	●	○	●	●	002
PULSAR	N15	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
PULSAR	N15	ALL	HVAC	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PULSAR	N15	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
PULSAR	N15	ALL	IPDM_ER	○	●	●	○	●	●	002
PULSAR	N15	ALL	IVMS	●	●	●	○	●	○	○
PULSAR	N15	ALL	LDW	●	●	●	○	●	●	001
PULSAR	N15	ALL	METER	○	●	●	○	●	○	002
PULSAR	N15	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
PULSAR	N15	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
PULSAR	N15	ALL	MULTI_AV	○	●	●	○	●	○	○
PULSAR	N15	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
PULSAR	N15	ALL	RASHICAS	●	●	●	○	●	●	○
PULSAR	N15	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
PULSAR	N15	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
PULSAR	N15	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
PULSAR	N15	ALL	SONAR	●	●	●	○	●	●	○
PULSAR	N15	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
PULSAR	N15	ALL	TBDAVM	●	●	●	○	●	●	001
PULSAR	N15	ALL	TCS	●	●	●	●	●	●	001
PULSAR	N15	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
PULSAR	N16	2000	ABS	●	●	●	○	●	●	001
PULSAR	N16	2000	ACM	●	●	●	○	●	○	○
PULSAR	N16	2000	ACTIVE_SUS	●	●	●	●	●	●	001
PULSAR	N16	2000	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
PULSAR	N16	2000	AIRBAG	●	●	●	●	●	○	003, 005, 008
PULSAR	N16	2000	AIR_LEVELIZER	●	●	●	○	●	●	001
PULSAR	N16	2000	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PULSAR	N16	2000	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
PULSAR	N16	2000	ASCD	○	●	●	○	●	○	○
PULSAR	N16	2000	AUTO_DRIVE_POS	●	●	●	○	●	●	001
PULSAR	N16	2000	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
PULSAR	N16	2000	BCM	●	●	●	○	●	●	001, 002
PULSAR	N16	2000	DIFF_LOCK	●	●	●	○	●	○	○
PULSAR	N16	2000	DISTANCE_CONTROL	●	●	●	○	●	○	○
PULSAR	N16	2000	DIU	●	●	●	○	●	○	○
PULSAR	N16	2000	ENGINE	●	●	●	※	●	●	001
PULSAR	N16	2000	EPS	●	●	●	○	●	○	002
PULSAR	N16	2000	E_4WD	●	●	●	○	●	●	002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PULSAR	N16	2000	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
PULSAR	N16	2000	HVAC	●	●	●	○	●	●	001
PULSAR	N16	2000	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
PULSAR	N16	2000	IPDM_ER	○	●	●	○	●	●	002
PULSAR	N16	2000	IVMS	●	●	●	○	●	○	○
PULSAR	N16	2000	LDW	●	●	●	○	●	●	001
PULSAR	N16	2000	METER	○	●	●	○	●	○	002
PULSAR	N16	2000	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
PULSAR	N16	2000	MOTOR_ASSIST	○	●	●	○	●	○	001
PULSAR	N16	2000	MULTI_AV	○	●	●	○	●	○	○
PULSAR	N16	2000	NATS_IMMUE	○	●	●	○	○	○	004, 006
PULSAR	N16	2000	RASHICAS	●	●	●	○	●	●	○
PULSAR	N16	2000	REARVIEW_CAMERA	●	○	○	○	●	○	001
PULSAR	N16	2000	S/BLIND_CAMERA	●	○	○	○	●	○	001
PULSAR	N16	2000	SMART_ENTRANCE	○	●	●	○	●	●	002
PULSAR	N16	2000	SONAR	●	●	●	○	●	●	○
PULSAR	N16	2000	TBDADAS_ICC	●	●	●	○	●	●	001, 002
PULSAR	N16	2000	TBDAVM	●	●	●	○	●	●	001
PULSAR	N16	2000	TCS	●	●	●	●	●	●	001
PULSAR	N16	2000	TRANSMISSION	●	●	●	○	●	○	001, 002
PULSAR WAGON	Y11	ALL	ABS	●	●	●	○	●	●	001
PULSAR WAGON	Y11	ALL	ACM	●	●	●	○	●	○	○
PULSAR WAGON	Y11	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
PULSAR WAGON	Y11	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
PULSAR WAGON	Y11	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
PULSAR WAGON	Y11	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
PULSAR WAGON	Y11	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
PULSAR WAGON	Y11	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
PULSAR WAGON	Y11	ALL	ASCD	○	●	●	○	●	○	○
PULSAR WAGON	Y11	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
PULSAR WAGON	Y11	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
PULSAR WAGON	Y11	ALL	BCM	●	●	●	○	●	●	001, 002
PULSAR WAGON	Y11	ALL	DIFF_LOCK	●	●	●	○	●	○	○
PULSAR WAGON	Y11	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
PULSAR WAGON	Y11	ALL	DIU	●	●	●	○	●	○	○
PULSAR WAGON	Y11	ALL	ENGINE	●	●	●	※	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
PULSAR WAGON	Y11	ALL	EPS	●	●	●	○	●	○	002
PULSAR WAGON	Y11	ALL	E_4WD	●	●	●	○	●	●	002
PULSAR WAGON	Y11	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
PULSAR WAGON	Y11	ALL	HVAC	●	●	●	○	●	●	001
PULSAR WAGON	Y11	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
PULSAR WAGON	Y11	ALL	IPDM_ER	○	●	●	○	●	●	002
PULSAR WAGON	Y11	ALL	IVMS	●	●	●	○	●	○	○
PULSAR WAGON	Y11	ALL	LDW	●	●	●	○	●	●	001
PULSAR WAGON	Y11	ALL	METER	○	●	●	○	●	○	002
PULSAR WAGON	Y11	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
PULSAR WAGON	Y11	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
PULSAR WAGON	Y11	ALL	MULTI_AV	○	●	●	○	●	○	○
PULSAR WAGON	Y11	ALL	NATS_IMMUN	○	●	●	○	○	○	004, 006
PULSAR WAGON	Y11	ALL	RASHICAS	●	●	●	○	●	●	○
PULSAR WAGON	Y11	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
PULSAR WAGON	Y11	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
PULSAR WAGON	Y11	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
PULSAR WAGON	Y11	ALL	SONAR	●	●	●	○	●	●	○
PULSAR WAGON	Y11	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
PULSAR WAGON	Y11	ALL	TBDAVM	●	●	●	○	●	●	001
PULSAR WAGON	Y11	ALL	TCS	●	●	●	●	●	●	001
PULSAR WAGON	Y11	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
Pulse	B58	ALL	ABS	●	●	●	○	●	●	001
Pulse	B58	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
Pulse	B58	ALL	BCM	●	●	●	○	●	●	001, 002
Pulse	B58	ALL	ENGINE	●	●	●	※	●	●	001
Pulse	B58	ALL	EPS	●	●	●	○	●	○	002
Pulse	B58	ALL	IPDM_ER	○	●	●	○	●	●	002
Pulse	B58	ALL	METER	○	●	●	○	●	○	002
Pulse	B58	ALL	TRANSMISSION	●	●	●	○	●	●	001
QASHQAI	J10	2008-2011	ABS	●	●	●	●	●	○	003, 005, 008
QASHQAI	J10	2008-2011	AIRBAG	●	●	●	●	●	○	003, 005, 008
QASHQAI	J10	2008-2011	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
QASHQAI	J10	2008-2011	BCM	●	●	●	○	●	●	001, 002
QASHQAI	J10	2008-2011	ENGINE	●	●	●	※	●	●	001
QASHQAI	J10	2008-2011	EPS	●	●	●	○	●	○	002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
QASHQAI	J10	2008-2011	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
QASHQAI	J10	2008-2011	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
QASHQAI	J10	2008-2011	IPDM_ER	○	●	●	○	●	●	002
QASHQAI	J10	2008-2011	METER	○	●	●	○	●	○	002
QASHQAI	J10	2008-2011	MULTI_AV	○	●	●	○	●	○	○
QASHQAI	J10	2008-2011	REARVIEW_CAMERA	●	○	○	○	●	○	001
QASHQAI	J10	2008-2011	SBLIND_CAMERA	●	○	○	○	●	○	001
QASHQAI	J10	2008-2011	SONAR	●	●	●	○	●	●	○
QASHQAI	J10	2008-2011	TRANSMISSION	●	●	●	○	●	○	001, 002
Qashqai+2	J10	2008-2012	ABS	●	●	●	●	●	○	003, 005, 008
Qashqai+2	J10	2008-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
Qashqai+2	J10	2008-2012	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
Qashqai+2	J10	2008-2012	BCM	●	●	●	○	●	●	001, 002
Qashqai+2	J10	2008-2012	EMCU	●	●	●	○	●	●	001
Qashqai+2	J10	2008-2012	ENGINE	●	●	●	※	●	●	001
Qashqai+2	J10	2008-2012	EPS	●	●	●	○	●	○	002
Qashqai+2	J10	2008-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
Qashqai+2	J10	2008-2012	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
Qashqai+2	J10	2008-2012	IPDM_ER	○	●	●	○	●	●	002
Qashqai+2	J10	2008-2012	METER	○	●	●	○	●	○	002
Qashqai+2	J10	2008-2012	MULTI_AV	○	●	●	○	●	○	○
Qashqai+2	J10	2008-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001
Qashqai+2	J10	2008-2012	SBLIND_CAMERA	●	○	○	○	●	○	001
Qashqai+2	J10	2008-2012	AVM	●	●	●	○	●	●	001
Qashqai+2	J10	2008-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
QUEST	V41	ALL	ABS	●	●	●	○	●	●	001
QUEST	V41	ALL	ACM	●	●	●	○	●	○	○
QUEST	V41	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
QUEST	V41	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
QUEST	V41	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
QUEST	V41	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
QUEST	V41	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
QUEST	V41	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
QUEST	V41	ALL	ASCD	○	●	●	○	●	○	○
QUEST	V41	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
QUEST	V41	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
QUEST	V41	ALL	BCM	●	●	●	○	●	●	001, 002
QUEST	V41	ALL	DIFF_LOCK	●	●	●	○	●	○	○
QUEST	V41	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
QUEST	V41	ALL	DIU	●	●	●	○	●	○	○
QUEST	V41	ALL	ENGINE	●	●	●	※	●	●	001
QUEST	V41	ALL	EPS	●	●	●	○	●	○	002
QUEST	V41	ALL	E_4WD	●	●	●	○	●	●	002
QUEST	V41	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
QUEST	V41	ALL	HVAC	●	●	●	○	●	●	001
QUEST	V41	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
QUEST	V41	ALL	IPDM_ER	○	●	●	○	●	●	002
QUEST	V41	ALL	IVMS	●	●	●	○	●	○	○
QUEST	V41	ALL	LDW	●	●	●	○	●	●	001
QUEST	V41	ALL	METER	○	●	●	○	●	○	002
QUEST	V41	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
QUEST	V41	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
QUEST	V41	ALL	MULTI_AV	○	●	●	○	●	○	○
QUEST	V41	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
QUEST	V41	ALL	RASHICAS	●	●	●	○	●	●	○
QUEST	V41	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
QUEST	V41	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
QUEST	V41	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
QUEST	V41	ALL	SONAR	●	●	●	○	●	●	○
QUEST	V41	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
QUEST	V41	ALL	TBDAVM	●	●	●	○	●	●	001
QUEST	V41	ALL	TCS	●	●	●	●	●	●	001
QUEST	V41	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
QUEST	V42	2003-2009	ABS	●	●	●	○	●	●	001
QUEST	V42	2003-2009	ACM	●	●	●	○	●	○	○
QUEST	V42	2003-2009	ACTIVE_SUS	●	●	●	●	●	●	001
QUEST	V42	2003-2009	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
QUEST	V42	2003-2009	AIRBAG	●	●	●	●	●	○	003, 005, 008
QUEST	V42	2003-2009	AIR_LEVELIZER	●	●	●	○	●	●	001
QUEST	V42	2003-2009	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
QUEST	V42	2003-2009	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
QUEST	V42	2003-2009	ASCD	○	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
QUEST	V42	2003-2009	AUTO_DRIVE_POS	●	●	●	○	●	●	001
QUEST	V42	2003-2009	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
QUEST	V42	2003-2009	BCM	●	●	●	○	●	●	001, 002
QUEST	V42	2003-2009	DIFF_LOCK	●	●	●	○	●	○	○
QUEST	V42	2003-2009	DISTANCE_CONTROL	●	●	●	○	●	○	○
QUEST	V42	2003-2009	DIU	●	●	●	○	●	○	○
QUEST	V42	2003-2009	ENGINE	●	●	●	※	●	●	001
QUEST	V42	2003-2009	EPS	●	●	●	○	●	○	002
QUEST	V42	2003-2009	E_4WD	●	●	●	○	●	●	002
QUEST	V42	2003-2009	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
QUEST	V42	2003-2009	HVAC	●	●	●	○	●	●	001
QUEST	V42	2003-2009	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
QUEST	V42	2003-2009	IPDM_ER	○	●	●	○	●	●	002
QUEST	V42	2003-2009	IVMS	●	●	●	○	●	○	○
QUEST	V42	2003-2009	LDW	●	●	●	○	●	●	001
QUEST	V42	2003-2009	METER	○	●	●	○	●	○	002
QUEST	V42	2003-2009	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
QUEST	V42	2003-2009	MOTOR_ASSIST	○	●	●	○	●	○	001
QUEST	V42	2003-2009	MULTI_AV	○	●	●	○	●	○	○
QUEST	V42	2003-2009	NATS_IMMUI	○	●	●	○	○	○	004, 006
QUEST	V42	2003-2009	RASHICAS	●	●	●	○	●	●	○
QUEST	V42	2003-2009	REARVIEW_CAMERA	●	○	○	○	●	○	001
QUEST	V42	2003-2009	S/BLIND_CAMERA	●	○	○	○	●	○	001
QUEST	V42	2003-2009	SMART_ENTRANCE	○	●	●	○	●	●	002
QUEST	V42	2003-2009	SONAR	●	●	●	○	●	●	○
QUEST	V42	2003-2009	TBDADAS_ICC	●	●	●	○	●	●	001, 002
QUEST	V42	2003-2009	TBDADM	●	●	●	○	●	●	001
QUEST	V42	2003-2009	TCS	●	●	●	●	●	●	001
QUEST	V42	2003-2009	TRANSMISSION	●	●	●	○	●	○	001, 002
QUEST	E52	2011-2012	ABS	●	●	●	※	●	●	001
QUEST	E52	2011-2012	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
QUEST	E52	2011-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
QUEST	E52	2011-2012	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
QUEST	E52	2011-2012	AUTO_DRIVE_POS	●	●	●	○	●	●	001
QUEST	E52	2011-2012	AUTO_SLIDE_DOOR	●	●	●	○	●	※	○
QUEST	E52	2011-2012	AUTO_SLIDE_DOOR_RIGHT	●	●	●	○	●	●	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
QUEST	E52	2011-2012	BCM	※	●	●	○	●	●	001, 002
QUEST	E52	2011-2012	BSW	●	●	●	○	●	●	○
QUEST	E52	2011-2012	ENGINE	●	●	●	※	●	●	001
QUEST	E52	2011-2012	EPS	●	●	●	○	●	○	002
QUEST	E52	2011-2012	IPDM_ER	○	●	●	○	●	●	002
QUEST	E52	2011-2012	METER	※	●	●	○	●	○	002
QUEST	E52	2011-2012	MULTI_AV	※	●	●	○	●	○	○
QUEST	E52	2011-2012	SIDE_RADAR_LEFT	●	●	●	○	●	●	001
QUEST	E52	2011-2012	SIDE_RADAR_RIGHT	●	●	●	○	●	●	001
QUEST	E52	2011-2012	SONAR	●	●	●	○	●	●	○
QUEST	E52	2011-2012	TRANSMISSION	●	●	●	※	●	※	001, 002
RASHEEN	RB14	ALL	ABS	●	●	●	○	●	●	001
RASHEEN	RB14	ALL	ACM	●	●	●	○	●	○	○
RASHEEN	RB14	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
RASHEEN	RB14	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
RASHEEN	RB14	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
RASHEEN	RB14	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
RASHEEN	RB14	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
RASHEEN	RB14	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
RASHEEN	RB14	ALL	ASCD	○	●	●	○	●	○	○
RASHEEN	RB14	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
RASHEEN	RB14	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
RASHEEN	RB14	ALL	BCM	●	●	●	○	●	●	001, 002
RASHEEN	RB14	ALL	DIFF_LOCK	●	●	●	○	●	○	○
RASHEEN	RB14	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
RASHEEN	RB14	ALL	DIU	●	●	●	○	●	○	○
RASHEEN	RB14	ALL	ENGINE	●	●	●	※	●	●	001
RASHEEN	RB14	ALL	EPS	●	●	●	○	●	○	002
RASHEEN	RB14	ALL	E_4WD	●	●	●	○	●	●	002
RASHEEN	RB14	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
RASHEEN	RB14	ALL	HVAC	●	●	●	○	●	●	001
RASHEEN	RB14	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
RASHEEN	RB14	ALL	IPDM_ER	○	●	●	○	●	●	002
RASHEEN	RB14	ALL	IVMS	●	●	●	○	●	○	○
RASHEEN	RB14	ALL	LDW	●	●	●	○	●	●	001
RASHEEN	RB14	ALL	METER	○	●	●	○	●	○	002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
RASHEEN	RB14	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
RASHEEN	RB14	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
RASHEEN	RB14	ALL	MULTI_AV	○	●	●	○	●	○	○
RASHEEN	RB14	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
RASHEEN	RB14	ALL	RASHICAS	●	●	●	○	●	●	○
RASHEEN	RB14	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
RASHEEN	RB14	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
RASHEEN	RB14	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
RASHEEN	RB14	ALL	SONAR	●	●	●	○	●	●	○
RASHEEN	RB14	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
RASHEEN	RB14	ALL	TBDAVM	●	●	●	○	●	●	001
RASHEEN	RB14	ALL	TCS	●	●	●	●	●	●	001
RASHEEN	RB14	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
RNESSA	N30	ALL	ABS	●	●	●	○	●	●	001
RNESSA	N30	ALL	ACM	●	●	●	○	●	○	○
RNESSA	N30	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
RNESSA	N30	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
RNESSA	N30	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
RNESSA	N30	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
RNESSA	N30	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
RNESSA	N30	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
RNESSA	N30	ALL	ASCD	○	●	●	○	●	○	○
RNESSA	N30	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
RNESSA	N30	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
RNESSA	N30	ALL	BCM	●	●	●	○	●	●	001, 002
RNESSA	N30	ALL	DIFF_LOCK	●	●	●	○	●	○	○
RNESSA	N30	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
RNESSA	N30	ALL	DIU	●	●	●	○	●	○	○
RNESSA	N30	ALL	ENGINE	●	●	●	※	●	●	001
RNESSA	N30	ALL	EPS	●	●	●	○	●	○	002
RNESSA	N30	ALL	E_4WD	●	●	●	○	●	●	002
RNESSA	N30	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
RNESSA	N30	ALL	HVAC	●	●	●	○	●	●	001
RNESSA	N30	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
RNESSA	N30	ALL	IPDM_ER	○	●	●	○	●	●	002
RNESSA	N30	ALL	IVMS	●	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
RNESSA	N30	ALL	LDW	●	●	●	○	●	●	001
RNESSA	N30	ALL	METER	○	●	●	○	●	○	002
RNESSA	N30	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
RNESSA	N30	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
RNESSA	N30	ALL	MULTI_AV	○	●	●	○	●	○	○
RNESSA	N30	ALL	NATS_IMMUE	○	●	●	○	○	○	004, 006
RNESSA	N30	ALL	RASHICAS	●	●	●	○	●	●	○
RNESSA	N30	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
RNESSA	N30	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
RNESSA	N30	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
RNESSA	N30	ALL	SONAR	●	●	●	○	●	●	○
RNESSA	N30	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
RNESSA	N30	ALL	TBDAVM	●	●	●	○	●	●	001
RNESSA	N30	ALL	TCS	●	●	●	●	●	●	001
RNESSA	N30	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
ROGUE	S35	2007-2013	ABS	●	●	●	○	●	●	001
ROGUE	S35	2007-2013	AIRBAG	●	●	●	●	●	○	003, 005, 008
ROGUE	S35	2007-2013	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
ROGUE	S35	2007-2013	BCM	●	●	●	○	●	●	001, 002
ROGUE	S35	2007-2013	ENGINE	●	●	●	※	●	●	001
ROGUE	S35	2007-2013	EPS	●	●	●	○	●	○	002
ROGUE	S35	2007-2013	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
ROGUE	S35	2007-2013	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
ROGUE	S35	2007-2013	IPDM_ER	○	●	●	○	●	●	002
ROGUE	S35	2007-2013	METER	○	●	●	○	●	○	002
ROGUE	S35	2007-2013	REARVIEW_CAMERA	●	○	○	○	●	○	001
ROGUE	S35	2007-2013	SBLIND_CAMERA	●	○	○	○	●	○	001
ROGUE	S35	2007-2013	SONAR	●	●	●	○	●	●	○
ROGUE	S35	2007-2013	TRANSMISSION	●	●	●	○	●	○	001, 002
SAFARI	Y61	ALL	ABS	●	●	●	○	●	●	001
SAFARI	Y61	ALL	ACM	●	●	●	○	●	○	○
SAFARI	Y61	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
SAFARI	Y61	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
SAFARI	Y61	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
SAFARI	Y61	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
SAFARI	Y61	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
SAFARI	Y61	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
SAFARI	Y61	ALL	ASCD	○	●	●	○	●	○	○
SAFARI	Y61	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
SAFARI	Y61	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
SAFARI	Y61	ALL	BCM	●	●	●	○	●	●	001, 002
SAFARI	Y61	ALL	DIFF_LOCK	●	●	●	○	●	○	○
SAFARI	Y61	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
SAFARI	Y61	ALL	DIU	●	●	●	○	●	○	○
SAFARI	Y61	ALL	ENGINE	●	●	●	※	●	●	001
SAFARI	Y61	ALL	EPS	●	●	●	○	●	○	002
SAFARI	Y61	ALL	E_4WD	●	●	●	○	●	●	002
SAFARI	Y61	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
SAFARI	Y61	ALL	HVAC	●	●	●	○	●	●	001
SAFARI	Y61	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
SAFARI	Y61	ALL	IPDM_ER	○	●	●	○	●	●	002
SAFARI	Y61	ALL	IVMS	●	●	●	○	●	○	○
SAFARI	Y61	ALL	LDW	●	●	●	○	●	●	001
SAFARI	Y61	ALL	METER	○	●	●	○	●	○	002
SAFARI	Y61	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
SAFARI	Y61	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
SAFARI	Y61	ALL	MULTI_AV	○	●	●	○	●	○	○
SAFARI	Y61	ALL	NATS_IMMUN	○	●	●	○	○	○	004, 006
SAFARI	Y61	ALL	RASHICAS	●	●	●	○	●	●	○
SAFARI	Y61	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
SAFARI	Y61	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
SAFARI	Y61	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
SAFARI	Y61	ALL	SONAR	●	●	●	○	●	●	○
SAFARI	Y61	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
SAFARI	Y61	ALL	TBDAVM	●	●	●	○	●	●	001
SAFARI	Y61	ALL	TCS	●	●	●	●	●	●	001
SAFARI	Y61	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
SENTRA	B14	ALL	ABS	●	●	●	○	●	●	001
SENTRA	B14	ALL	ACM	●	●	●	○	●	○	○
SENTRA	B14	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
SENTRA	B14	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
SENTRA	B14	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
SENTRA	B14	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
SENTRA	B14	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
SENTRA	B14	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
SENTRA	B14	ALL	ASCD	○	●	●	○	●	○	○
SENTRA	B14	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
SENTRA	B14	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
SENTRA	B14	ALL	BCM	●	●	●	○	●	●	001, 002
SENTRA	B14	ALL	DIFF_LOCK	●	●	●	○	●	○	○
SENTRA	B14	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
SENTRA	B14	ALL	DIU	●	●	●	○	●	○	○
SENTRA	B14	ALL	ENGINE	●	●	●	※	●	●	001
SENTRA	B14	ALL	EPS	●	●	●	○	●	○	002
SENTRA	B14	ALL	E_4WD	●	●	●	○	●	●	002
SENTRA	B14	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
SENTRA	B14	ALL	HVAC	●	●	●	○	●	●	001
SENTRA	B14	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
SENTRA	B14	ALL	IPDM_ER	○	●	●	○	●	●	002
SENTRA	B14	ALL	IVMS	●	●	●	○	●	○	○
SENTRA	B14	ALL	LDW	●	●	●	○	●	●	001
SENTRA	B14	ALL	METER	○	●	●	○	●	○	002
SENTRA	B14	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
SENTRA	B14	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
SENTRA	B14	ALL	MULTI_AV	○	●	●	○	●	○	○
SENTRA	B14	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
SENTRA	B14	ALL	RASHICAS	●	●	●	○	●	●	○
SENTRA	B14	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
SENTRA	B14	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
SENTRA	B14	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
SENTRA	B14	ALL	SONAR	●	●	●	○	●	●	○
SENTRA	B14	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
SENTRA	B14	ALL	TBDAVM	●	●	●	○	●	●	001
SENTRA	B14	ALL	TCS	●	●	●	●	●	●	001
SENTRA	B14	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
SENTRA	B15	ALL	ABS	●	●	●	○	●	●	001
SENTRA	B15	ALL	ACM	●	●	●	○	●	○	○
SENTRA	B15	ALL	ACTIVE_SUS	●	●	●	●	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
SENTRA	B15	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
SENTRA	B15	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
SENTRA	B15	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
SENTRA	B15	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
SENTRA	B15	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
SENTRA	B15	ALL	ASCD	○	●	●	○	●	○	○
SENTRA	B15	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
SENTRA	B15	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
SENTRA	B15	ALL	BCM	●	●	●	○	●	●	001, 002
SENTRA	B15	ALL	DIFF_LOCK	●	●	●	○	●	○	○
SENTRA	B15	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
SENTRA	B15	ALL	DIU	●	●	●	○	●	○	○
SENTRA	B15	ALL	ENGINE	●	●	●	※	●	●	001
SENTRA	B15	ALL	EPS	●	●	●	○	●	○	002
SENTRA	B15	ALL	E_4WD	●	●	●	○	●	●	002
SENTRA	B15	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
SENTRA	B15	ALL	HVAC	●	●	●	○	●	●	001
SENTRA	B15	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
SENTRA	B15	ALL	IPDM_ER	○	●	●	○	●	●	002
SENTRA	B15	ALL	IVMS	●	●	●	○	●	○	○
SENTRA	B15	ALL	LDW	●	●	●	○	●	●	001
SENTRA	B15	ALL	METER	○	●	●	○	●	○	002
SENTRA	B15	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
SENTRA	B15	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
SENTRA	B15	ALL	MULTI_AV	○	●	●	○	●	○	○
SENTRA	B15	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
SENTRA	B15	ALL	RASHICAS	●	●	●	○	●	●	○
SENTRA	B15	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
SENTRA	B15	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
SENTRA	B15	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
SENTRA	B15	ALL	SONAR	●	●	●	○	●	●	○
SENTRA	B15	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
SENTRA	B15	ALL	TBDAVM	●	●	●	○	●	●	001
SENTRA	B15	ALL	TCS	●	●	●	●	●	●	001
SENTRA	B15	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
SENTRA	B16	2006-2012	ABS	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
SENTRA	B16	2006-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
SENTRA	B16	2006-2012	BCM	●	●	●	○	●	●	001, 002
SENTRA	B16	2006-2012	ENGINE	●	●	●	※	●	●	001
SENTRA	B16	2006-2012	EPS	●	●	●	○	●	○	002
SENTRA	B16	2006-2012	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
SENTRA	B16	2006-2012	IPDM_ER	○	●	●	○	●	●	002
SENTRA	B16	2006-2012	METER	○	●	●	○	●	○	002
SENTRA	B16	2006-2012	SVT	●	●	●	○	●	○	001
SENTRA	B16	2006-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
SERENA	C24	ALL	ABS	●	●	●	○	●	●	001
SERENA	C24	ALL	ACM	●	●	●	○	●	○	○
SERENA	C24	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
SERENA	C24	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
SERENA	C24	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
SERENA	C24	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
SERENA	C24	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
SERENA	C24	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
SERENA	C24	ALL	ASCD	○	●	●	○	●	○	○
SERENA	C24	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
SERENA	C24	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
SERENA	C24	ALL	BCM	●	●	●	○	●	●	001, 002
SERENA	C24	ALL	DIFF_LOCK	●	●	●	○	●	○	○
SERENA	C24	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
SERENA	C24	ALL	DIU	●	●	●	○	●	○	○
SERENA	C24	ALL	ENGINE	●	●	●	※	●	●	001
SERENA	C24	ALL	EPS	●	●	●	○	●	○	002
SERENA	C24	ALL	E_4WD	●	●	●	○	●	●	002
SERENA	C24	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
SERENA	C24	ALL	HVAC	●	●	●	○	●	●	001
SERENA	C24	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
SERENA	C24	ALL	IPDM_ER	○	●	●	○	●	●	002
SERENA	C24	ALL	IVMS	●	●	●	○	●	○	○
SERENA	C24	ALL	LDW	●	●	●	○	●	●	001
SERENA	C24	ALL	METER	○	●	●	○	●	○	002
SERENA	C24	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
SERENA	C24	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
SERENA	C24	ALL	MULTI_AV	○	●	●	○	●	○	○
SERENA	C24	ALL	NATS_IMM	○	●	●	○	○	○	004, 006
SERENA	C24	ALL	RASHICAS	●	●	●	○	●	●	○
SERENA	C24	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
SERENA	C24	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
SERENA	C24	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
SERENA	C24	ALL	SONAR	●	●	●	○	●	●	○
SERENA	C24	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
SERENA	C24	ALL	TBDAVM	●	●	●	○	●	●	001
SERENA	C24	ALL	TCS	●	●	●	●	●	●	001
SERENA	C24	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
SERENA	C25	2005-2009	ABS	●	●	●	※	●	●	001
SERENA	C25	2005-2009	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
SERENA	C25	2005-2009	AIRBAG	●	●	●	●	●	○	003, 005, 008
SERENA	C25	2005-2009	AUTO_SLIDE_DOOR	●	●	●	○	●	※	○
SERENA	C25	2005-2009	AUTO_SLIDE_DOOR_RIGHT	●	●	●	○	●	●	○
SERENA	C25	2005-2009	BCM	※	●	●	○	●	●	001, 002
SERENA	C25	2005-2009	ENGINE	●	●	●	※	●	●	001
SERENA	C25	2005-2009	EPS	●	●	●	○	●	○	002
SERENA	C25	2005-2009	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
SERENA	C25	2005-2009	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
SERENA	C25	2005-2009	IPDM_ER	○	●	●	○	●	●	002
SERENA	C25	2005-2009	METER	※	●	●	○	●	○	002
SERENA	C25	2005-2009	MOTOR_ASSIST	●	●	●	※	●	○	001
SERENA	C25	2005-2009	MULTI_AV	※	●	●	○	●	○	○
SERENA	C25	2005-2009	REARVIEW_CAMERA	●	○	○	○	●	○	001
SERENA	C25	2005-2009	SBLIND_CAMERA	●	○	○	○	●	○	001
SERENA	C25	2005-2009	SONAR	●	●	●	○	●	●	○
SERENA	C25	2005-2009	TRANSMISSION	●	●	●	※	●	※	001, 002
SERENA	C26	2010-2012	ABS	●	●	●	※	●	●	001
SERENA	C26	2010-2012	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
SERENA	C26	2010-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
SERENA	C26	2010-2012	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
SERENA	C26	2010-2012	AUTO_SLIDE_DOOR	●	●	●	○	●	※	○
SERENA	C26	2010-2012	AUTO_SLIDE_DOOR_RIGHT	●	●	●	○	●	●	○
SERENA	C26	2010-2012	BCM	※	●	●	○	●	●	001, 002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
SERENA	C26	2010-2012	ENGINE	●	●	●	※	●	●	001
SERENA	C26	2010-2012	EPS	●	●	●	○	●	○	002
SERENA	C26	2010-2012	E_4WD	●	●	●	○	●	●	002
SERENA	C26	2010-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
SERENA	C26	2010-2012	HVAC	●	●	●	○	●	●	001
SERENA	C26	2010-2012	IPDM_ER	○	●	●	○	●	●	002
SERENA	C26	2010-2012	METER	※	●	●	○	●	○	002
SERENA	C26	2010-2012	MULTI_AV	○	●	●	○	●	○	○
SERENA	C26	2010-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001
SERENA	C26	2010-2012	SBLIND_CAMERA	●	○	○	○	●	○	001
SERENA	C26	2010-2012	SONAR	●	●	●	○	●	●	○
SERENA	C26	2010-2012	TRANSMISSION	●	●	●	※	●	※	001, 002
SILVIA	S15	ALL	ABS	●	●	●	○	●	●	001
SILVIA	S15	ALL	ACM	●	●	●	○	●	○	○
SILVIA	S15	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
SILVIA	S15	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
SILVIA	S15	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
SILVIA	S15	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
SILVIA	S15	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
SILVIA	S15	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
SILVIA	S15	ALL	ASCD	○	●	●	○	●	○	○
SILVIA	S15	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
SILVIA	S15	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
SILVIA	S15	ALL	BCM	●	●	●	○	●	●	001, 002
SILVIA	S15	ALL	DIFF_LOCK	●	●	●	○	●	○	○
SILVIA	S15	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
SILVIA	S15	ALL	DIU	●	●	●	○	●	○	○
SILVIA	S15	ALL	ENGINE	●	●	●	※	●	●	001
SILVIA	S15	ALL	EPS	●	●	●	○	●	○	002
SILVIA	S15	ALL	E_4WD	●	●	●	○	●	●	002
SILVIA	S15	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
SILVIA	S15	ALL	HVAC	●	●	●	○	●	●	001
SILVIA	S15	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
SILVIA	S15	ALL	IPDM_ER	○	●	●	○	●	●	002
SILVIA	S15	ALL	IVMS	●	●	●	○	●	○	○
SILVIA	S15	ALL	LDW	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
SILVIA	S15	ALL	METER	○	●	●	○	●	○	002
SILVIA	S15	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
SILVIA	S15	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
SILVIA	S15	ALL	MULTI_AV	○	●	●	○	●	○	○
SILVIA	S15	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
SILVIA	S15	ALL	RASHICAS	●	●	●	○	●	●	○
SILVIA	S15	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
SILVIA	S15	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
SILVIA	S15	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
SILVIA	S15	ALL	SONAR	●	●	●	○	●	●	○
SILVIA	S15	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
SILVIA	S15	ALL	TBDAVM	●	●	●	○	●	●	001
SILVIA	S15	ALL	TCS	●	●	●	●	●	●	001
SILVIA	S15	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
SKYLINE	R34	ALL	ABS	●	●	●	○	●	●	001
SKYLINE	R34	ALL	ACM	●	●	●	○	●	○	○
SKYLINE	R34	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
SKYLINE	R34	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
SKYLINE	R34	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
SKYLINE	R34	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
SKYLINE	R34	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
SKYLINE	R34	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
SKYLINE	R34	ALL	ASCD	○	●	●	○	●	○	○
SKYLINE	R34	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
SKYLINE	R34	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
SKYLINE	R34	ALL	BCM	●	●	●	○	●	●	001, 002
SKYLINE	R34	ALL	DIFF_LOCK	●	●	●	○	●	○	○
SKYLINE	R34	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
SKYLINE	R34	ALL	DIU	●	●	●	○	●	○	○
SKYLINE	R34	ALL	ENGINE	●	●	●	※	●	●	001
SKYLINE	R34	ALL	EPS	●	●	●	○	●	○	002
SKYLINE	R34	ALL	E_4WD	●	●	●	○	●	●	002
SKYLINE	R34	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
SKYLINE	R34	ALL	HVAC	●	●	●	○	●	●	001
SKYLINE	R34	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
SKYLINE	R34	ALL	IPDM_ER	○	●	●	○	●	●	002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
SKYLINE	R34	ALL	IVMS	●	●	●	○	●	○	○
SKYLINE	R34	ALL	LDW	●	●	●	○	●	●	001
SKYLINE	R34	ALL	METER	○	●	●	○	●	○	002
SKYLINE	R34	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
SKYLINE	R34	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
SKYLINE	R34	ALL	MULTI_AV	○	●	●	○	●	○	○
SKYLINE	R34	ALL	NATS_IMMUE	○	●	●	○	○	○	004, 006
SKYLINE	R34	ALL	RASHICAS	●	●	●	○	●	●	○
SKYLINE	R34	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
SKYLINE	R34	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
SKYLINE	R34	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
SKYLINE	R34	ALL	SONAR	●	●	●	○	●	●	○
SKYLINE	R34	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
SKYLINE	R34	ALL	TBDAVM	●	●	●	○	●	●	001
SKYLINE	R34	ALL	TCS	●	●	●	●	●	●	001
SKYLINE	R34	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
SKYLINE	V35	ALL	ABS	●	●	●	○	●	●	001
SKYLINE	V35	ALL	ACM	●	●	●	○	●	○	○
SKYLINE	V35	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
SKYLINE	V35	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
SKYLINE	V35	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
SKYLINE	V35	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
SKYLINE	V35	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
SKYLINE	V35	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
SKYLINE	V35	ALL	ASCD	○	●	●	○	●	○	○
SKYLINE	V35	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
SKYLINE	V35	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
SKYLINE	V35	ALL	BCM	●	●	●	○	●	●	001, 002
SKYLINE	V35	ALL	DIFF_LOCK	●	●	●	○	●	○	○
SKYLINE	V35	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
SKYLINE	V35	ALL	DIU	●	●	●	○	●	○	○
SKYLINE	V35	ALL	ENGINE	●	●	●	※	●	●	001
SKYLINE	V35	ALL	EPS	●	●	●	○	●	○	002
SKYLINE	V35	ALL	E_4WD	●	●	●	○	●	●	002
SKYLINE	V35	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
SKYLINE	V35	ALL	HVAC	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
SKYLINE	V35	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
SKYLINE	V35	ALL	IPDM_ER	○	●	●	○	●	●	002
SKYLINE	V35	ALL	IVMS	●	●	●	○	●	○	○
SKYLINE	V35	ALL	LDW	●	●	●	○	●	●	001
SKYLINE	V35	ALL	METER	○	●	●	○	●	○	002
SKYLINE	V35	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
SKYLINE	V35	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
SKYLINE	V35	ALL	MULTI_AV	○	●	●	○	●	○	○
SKYLINE	V35	ALL	NATS_IMMUE	○	●	●	○	○	○	004, 006
SKYLINE	V35	ALL	RASHICAS	●	●	●	○	●	●	○
SKYLINE	V35	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
SKYLINE	V35	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
SKYLINE	V35	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
SKYLINE	V35	ALL	SONAR	●	●	●	○	●	●	○
SKYLINE	V35	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
SKYLINE	V35	ALL	TBDAVM	●	●	●	○	●	●	001
SKYLINE	V35	ALL	TCS	●	●	●	●	●	●	001
SKYLINE	V35	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
SKYLINE	V36	2006-2011	4WASCAN	●	●	●	○	●	●	○
SKYLINE	V36	2006-2011	ABS	●	●	●	※	●	●	001
SKYLINE	V36	2006-2011	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
SKYLINE	V36	2006-2011	AIRBAG	●	●	●	●	●	○	003, 005, 008
SKYLINE	V36	2006-2011	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
SKYLINE	V36	2006-2011	AUTO_DRIVE_POS	●	●	●	○	●	●	001
SKYLINE	V36	2006-2011	BCM	※	●	●	○	●	●	001, 002
SKYLINE	V36	2006-2011	ENGINE	●	●	●	※	●	●	001
SKYLINE	V36	2006-2011	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
SKYLINE	V36	2006-2011	IPDM_ER	○	●	●	○	●	●	002
SKYLINE	V36	2006-2011	METER	※	●	●	○	●	○	002
SKYLINE	V36	2006-2011	MULTI_AV	※	●	●	○	●	○	○
SKYLINE	V36	2006-2011	POP_UP_HOOD	●	●	●	○	●	○	008
SKYLINE	V36	2006-2011	PRECRASH_SEATBELT	●	●	●	○	●	○	001
SKYLINE	V36	2006-2011	ICC/ADAS	●	●	●	※	●	●	001, 002
SKYLINE	V36	2006-2011	TRANSMISSION	●	●	●	※	●	※	001, 002
SKYLINE Coupe	V35	ALL	ABS	●	●	●	○	●	●	001
SKYLINE Coupe	V35	ALL	ACM	●	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
SKYLINE Coupe	V35	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
SKYLINE Coupe	V35	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
SKYLINE Coupe	V35	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
SKYLINE Coupe	V35	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
SKYLINE Coupe	V35	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
SKYLINE Coupe	V35	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
SKYLINE Coupe	V35	ALL	ASCD	○	●	●	○	●	○	○
SKYLINE Coupe	V35	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
SKYLINE Coupe	V35	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
SKYLINE Coupe	V35	ALL	BCM	●	●	●	○	●	●	001, 002
SKYLINE Coupe	V35	ALL	DIFF_LOCK	●	●	●	○	●	○	○
SKYLINE Coupe	V35	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
SKYLINE Coupe	V35	ALL	DIU	●	●	●	○	●	○	○
SKYLINE Coupe	V35	ALL	ENGINE	●	●	●	※	●	●	001
SKYLINE Coupe	V35	ALL	EPS	●	●	●	○	●	○	002
SKYLINE Coupe	V35	ALL	E_4WD	●	●	●	○	●	●	002
SKYLINE Coupe	V35	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
SKYLINE Coupe	V35	ALL	HVAC	●	●	●	○	●	●	001
SKYLINE Coupe	V35	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
SKYLINE Coupe	V35	ALL	IPDM_ER	○	●	●	○	●	●	002
SKYLINE Coupe	V35	ALL	IVMS	●	●	●	○	●	○	○
SKYLINE Coupe	V35	ALL	LDW	●	●	●	○	●	●	001
SKYLINE Coupe	V35	ALL	METER	○	●	●	○	●	○	002
SKYLINE Coupe	V35	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
SKYLINE Coupe	V35	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
SKYLINE Coupe	V35	ALL	MULTI_AV	○	●	●	○	●	○	○
SKYLINE Coupe	V35	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
SKYLINE Coupe	V35	ALL	RASHICAS	●	●	●	○	●	●	○
SKYLINE Coupe	V35	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
SKYLINE Coupe	V35	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
SKYLINE Coupe	V35	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
SKYLINE Coupe	V35	ALL	SONAR	●	●	●	○	●	●	○
SKYLINE Coupe	V35	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
SKYLINE Coupe	V35	ALL	TBDAVM	●	●	●	○	●	●	001
SKYLINE Coupe	V35	ALL	TCS	●	●	●	●	●	●	001
SKYLINE Coupe	V35	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
SKYLINE Coupe	V36	2006-2011	4WASCAN	●	●	●	○	●	●	○
SKYLINE Coupe	V36	2006-2011	ABS	●	●	●	※	●	●	001
SKYLINE Coupe	V36	2006-2011	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
SKYLINE Coupe	V36	2006-2011	AIRBAG	●	●	●	●	●	○	003, 005, 008
SKYLINE Coupe	V36	2006-2011	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
SKYLINE Coupe	V36	2006-2011	AUTO_DRIVE_POS	●	●	●	○	●	●	001
SKYLINE Coupe	V36	2006-2011	BCM	※	●	●	○	●	●	001, 002
SKYLINE Coupe	V36	2006-2011	ENGINE	●	●	●	※	●	●	001
SKYLINE Coupe	V36	2006-2011	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
SKYLINE Coupe	V36	2006-2011	IPDM_ER	○	●	●	○	●	●	002
SKYLINE Coupe	V36	2006-2011	METER	※	●	●	○	●	○	002
SKYLINE Coupe	V36	2006-2011	MULTI_AV	※	●	●	○	●	○	○
SKYLINE Coupe	V36	2006-2011	POP_UP_HOOD	●	●	●	○	●	○	008
SKYLINE Coupe	V36	2006-2011	PRECRASH_SEATBELT	●	●	●	○	●	○	001
SKYLINE Coupe	V36	2006-2011	ICC/ADAS	●	●	●	※	●	●	001, 002
SKYLINE Coupe	V36	2006-2011	TRANSMISSION	●	●	●	※	●	※	001, 002
SKYLINE GT-R	R34	ALL	ABS	●	●	●	○	●	●	001
SKYLINE GT-R	R34	ALL	ACM	●	●	●	○	●	○	○
SKYLINE GT-R	R34	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
SKYLINE GT-R	R34	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
SKYLINE GT-R	R34	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
SKYLINE GT-R	R34	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
SKYLINE GT-R	R34	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
SKYLINE GT-R	R34	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
SKYLINE GT-R	R34	ALL	ASCD	○	●	●	○	●	○	○
SKYLINE GT-R	R34	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
SKYLINE GT-R	R34	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
SKYLINE GT-R	R34	ALL	BCM	●	●	●	○	●	●	001, 002
SKYLINE GT-R	R34	ALL	DIFF_LOCK	●	●	●	○	●	○	○
SKYLINE GT-R	R34	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
SKYLINE GT-R	R34	ALL	DIU	●	●	●	○	●	○	○
SKYLINE GT-R	R34	ALL	ENGINE	●	●	●	※	●	●	001
SKYLINE GT-R	R34	ALL	EPS	●	●	●	○	●	○	002
SKYLINE GT-R	R34	ALL	E_4WD	●	●	●	○	●	●	002
SKYLINE GT-R	R34	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
SKYLINE GT-R	R34	ALL	HVAC	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
SKYLINE GT-R	R34	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
SKYLINE GT-R	R34	ALL	IPDM_ER	○	●	●	○	●	●	002
SKYLINE GT-R	R34	ALL	IVMS	●	●	●	○	●	○	○
SKYLINE GT-R	R34	ALL	LDW	●	●	●	○	●	●	001
SKYLINE GT-R	R34	ALL	METER	○	●	●	○	●	○	002
SKYLINE GT-R	R34	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
SKYLINE GT-R	R34	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
SKYLINE GT-R	R34	ALL	MULTI_AV	○	●	●	○	●	○	○
SKYLINE GT-R	R34	ALL	NATS_IMMUE	○	●	●	○	○	○	004, 006
SKYLINE GT-R	R34	ALL	RASHICAS	●	●	●	○	●	●	○
SKYLINE GT-R	R34	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
SKYLINE GT-R	R34	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
SKYLINE GT-R	R34	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
SKYLINE GT-R	R34	ALL	SONAR	●	●	●	○	●	●	○
SKYLINE GT-R	R34	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
SKYLINE GT-R	R34	ALL	TBDAVM	●	●	●	○	●	●	001
SKYLINE GT-R	R34	ALL	TCS	●	●	●	●	●	●	001
SKYLINE GT-R	R34	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
STAGEA	WC34	ALL	ABS	●	●	●	○	●	●	001
STAGEA	WC34	ALL	ACM	●	●	●	○	●	○	○
STAGEA	WC34	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
STAGEA	WC34	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
STAGEA	WC34	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
STAGEA	WC34	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
STAGEA	WC34	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
STAGEA	WC34	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
STAGEA	WC34	ALL	ASCD	○	●	●	○	●	○	○
STAGEA	WC34	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
STAGEA	WC34	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
STAGEA	WC34	ALL	BCM	●	●	●	○	●	●	001, 002
STAGEA	WC34	ALL	DIFF_LOCK	●	●	●	○	●	○	○
STAGEA	WC34	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
STAGEA	WC34	ALL	DIU	●	●	●	○	●	○	○
STAGEA	WC34	ALL	ENGINE	●	●	●	※	●	●	001
STAGEA	WC34	ALL	EPS	●	●	●	○	●	○	002
STAGEA	WC34	ALL	E_4WD	●	●	●	○	●	●	002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
STAGEA	WC34	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
STAGEA	WC34	ALL	HVAC	●	●	●	○	●	●	001
STAGEA	WC34	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
STAGEA	WC34	ALL	IPDM_ER	○	●	●	○	●	●	002
STAGEA	WC34	ALL	IVMS	●	●	●	○	●	○	○
STAGEA	WC34	ALL	LDW	●	●	●	○	●	●	001
STAGEA	WC34	ALL	METER	○	●	●	○	●	○	002
STAGEA	WC34	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
STAGEA	WC34	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
STAGEA	WC34	ALL	MULTI_AV	○	●	●	○	●	○	○
STAGEA	WC34	ALL	NATS_IMMUN	○	●	●	○	○	○	004, 006
STAGEA	WC34	ALL	RASHICAS	●	●	●	○	●	●	○
STAGEA	WC34	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
STAGEA	WC34	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
STAGEA	WC34	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
STAGEA	WC34	ALL	SONAR	●	●	●	○	●	●	○
STAGEA	WC34	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
STAGEA	WC34	ALL	TBDAVM	●	●	●	○	●	●	001
STAGEA	WC34	ALL	TCS	●	●	●	●	●	●	001
STAGEA	WC34	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
STAGEA	M35	ALL	ABS	●	●	●	○	●	●	001
STAGEA	M35	ALL	ACM	●	●	●	○	●	○	○
STAGEA	M35	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
STAGEA	M35	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
STAGEA	M35	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
STAGEA	M35	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
STAGEA	M35	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
STAGEA	M35	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
STAGEA	M35	ALL	ASCD	○	●	●	○	●	○	○
STAGEA	M35	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
STAGEA	M35	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
STAGEA	M35	ALL	BCM	●	●	●	○	●	●	001, 002
STAGEA	M35	ALL	DIFF_LOCK	●	●	●	○	●	○	○
STAGEA	M35	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
STAGEA	M35	ALL	DIU	●	●	●	○	●	○	○
STAGEA	M35	ALL	ENGINE	●	●	●	※	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
STAGEA	M35	ALL	EPS	●	●	●	○	●	○	002
STAGEA	M35	ALL	E_4WD	●	●	●	○	●	●	002
STAGEA	M35	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
STAGEA	M35	ALL	HVAC	●	●	●	○	●	●	001
STAGEA	M35	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
STAGEA	M35	ALL	IPDM_ER	○	●	●	○	●	●	002
STAGEA	M35	ALL	IVMS	●	●	●	○	●	○	○
STAGEA	M35	ALL	LDW	●	●	●	○	●	●	001
STAGEA	M35	ALL	METER	○	●	●	○	●	○	002
STAGEA	M35	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
STAGEA	M35	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
STAGEA	M35	ALL	MULTI_AV	○	●	●	○	●	○	○
STAGEA	M35	ALL	NATS_IMMUN	○	●	●	○	○	○	004, 006
STAGEA	M35	ALL	RASHICAS	●	●	●	○	●	●	○
STAGEA	M35	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
STAGEA	M35	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
STAGEA	M35	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
STAGEA	M35	ALL	SONAR	●	●	●	○	●	●	○
STAGEA	M35	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
STAGEA	M35	ALL	TBDAVM	●	●	●	○	●	●	001
STAGEA	M35	ALL	TCS	●	●	●	●	●	●	001
STAGEA	M35	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
SUNNY	B10	2006	ABS	●	●	●	○	●	●	001
SUNNY	B10	2006	AIRBAG	●	●	●	●	●	○	003, 005, 008
SUNNY	B10	2006	ENGINE	●	●	●	※	●	●	001
SUNNY	B10	2006	METER	○	●	●	○	●	○	002
SUNNY	B10	2006	TRANSMISSION	●	●	●	○	●	○	001, 002
SUNNY	B14	ALL	ABS	●	●	●	○	●	●	001
SUNNY	B14	ALL	ACM	●	●	●	○	●	○	○
SUNNY	B14	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
SUNNY	B14	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
SUNNY	B14	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
SUNNY	B14	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
SUNNY	B14	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
SUNNY	B14	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
SUNNY	B14	ALL	ASCD	○	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
SUNNY	B14	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
SUNNY	B14	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
SUNNY	B14	ALL	BCM	●	●	●	○	●	●	001, 002
SUNNY	B14	ALL	DIFF_LOCK	●	●	●	○	●	○	○
SUNNY	B14	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
SUNNY	B14	ALL	DIU	●	●	●	○	●	○	○
SUNNY	B14	ALL	ENGINE	●	●	●	※	●	●	001
SUNNY	B14	ALL	EPS	●	●	●	○	●	○	002
SUNNY	B14	ALL	E_4WD	●	●	●	○	●	●	002
SUNNY	B14	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
SUNNY	B14	ALL	HVAC	●	●	●	○	●	●	001
SUNNY	B14	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
SUNNY	B14	ALL	IPDM_ER	○	●	●	○	●	●	002
SUNNY	B14	ALL	IVMS	●	●	●	○	●	○	○
SUNNY	B14	ALL	LDW	●	●	●	○	●	●	001
SUNNY	B14	ALL	METER	○	●	●	○	●	○	002
SUNNY	B14	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
SUNNY	B14	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
SUNNY	B14	ALL	MULTI_AV	○	●	●	○	●	○	○
SUNNY	B14	ALL	NATS_IMMUI	○	●	●	○	○	○	004, 006
SUNNY	B14	ALL	RASHICAS	●	●	●	○	●	●	○
SUNNY	B14	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
SUNNY	B14	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
SUNNY	B14	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
SUNNY	B14	ALL	SONAR	●	●	●	○	●	●	○
SUNNY	B14	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
SUNNY	B14	ALL	TBDAVM	●	●	●	○	●	●	001
SUNNY	B14	ALL	TCS	●	●	●	●	●	●	001
SUNNY	B14	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
SUNNY	B15	ALL	ABS	●	●	●	○	●	●	001
SUNNY	B15	ALL	ACM	●	●	●	○	●	○	○
SUNNY	B15	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
SUNNY	B15	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
SUNNY	B15	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
SUNNY	B15	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
SUNNY	B15	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
SUNNY	B15	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
SUNNY	B15	ALL	ASCD	○	●	●	○	●	○	○
SUNNY	B15	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
SUNNY	B15	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
SUNNY	B15	ALL	BCM	●	●	●	○	●	●	001, 002
SUNNY	B15	ALL	DIFF_LOCK	●	●	●	○	●	○	○
SUNNY	B15	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
SUNNY	B15	ALL	DIU	●	●	●	○	●	○	○
SUNNY	B15	ALL	ENGINE	●	●	●	※	●	●	001
SUNNY	B15	ALL	EPS	●	●	●	○	●	○	002
SUNNY	B15	ALL	E_4WD	●	●	●	○	●	●	002
SUNNY	B15	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
SUNNY	B15	ALL	HVAC	●	●	●	○	●	●	001
SUNNY	B15	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
SUNNY	B15	ALL	IPDM_ER	○	●	●	○	●	●	002
SUNNY	B15	ALL	IVMS	●	●	●	○	●	○	○
SUNNY	B15	ALL	LDW	●	●	●	○	●	●	001
SUNNY	B15	ALL	METER	○	●	●	○	●	○	002
SUNNY	B15	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
SUNNY	B15	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
SUNNY	B15	ALL	MULTI_AV	○	●	●	○	●	○	○
SUNNY	B15	ALL	NATS_IMMUN	○	●	●	○	○	○	004, 006
SUNNY	B15	ALL	RASHICAS	●	●	●	○	●	●	○
SUNNY	B15	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
SUNNY	B15	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
SUNNY	B15	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
SUNNY	B15	ALL	SONAR	●	●	●	○	●	●	○
SUNNY	B15	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
SUNNY	B15	ALL	TBDAVM	●	●	●	○	●	●	001
SUNNY	B15	ALL	TCS	●	●	●	●	●	●	001
SUNNY	B15	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
SUNNY	N15	ALL	ABS	●	●	●	○	●	●	001
SUNNY	N15	ALL	ACM	●	●	●	○	●	○	○
SUNNY	N15	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
SUNNY	N15	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
SUNNY	N15	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
SUNNY	N15	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
SUNNY	N15	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
SUNNY	N15	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
SUNNY	N15	ALL	ASCD	○	●	●	○	●	○	○
SUNNY	N15	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
SUNNY	N15	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
SUNNY	N15	ALL	BCM	●	●	●	○	●	●	001, 002
SUNNY	N15	ALL	DIFF_LOCK	●	●	●	○	●	○	○
SUNNY	N15	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
SUNNY	N15	ALL	DIU	●	●	●	○	●	○	○
SUNNY	N15	ALL	ENGINE	●	●	●	※	●	●	001
SUNNY	N15	ALL	EPS	●	●	●	○	●	○	002
SUNNY	N15	ALL	E_4WD	●	●	●	○	●	●	002
SUNNY	N15	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
SUNNY	N15	ALL	HVAC	●	●	●	○	●	●	001
SUNNY	N15	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
SUNNY	N15	ALL	IPDM_ER	○	●	●	○	●	●	002
SUNNY	N15	ALL	IVMS	●	●	●	○	●	○	○
SUNNY	N15	ALL	LDW	●	●	●	○	●	●	001
SUNNY	N15	ALL	METER	○	●	●	○	●	○	002
SUNNY	N15	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
SUNNY	N15	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
SUNNY	N15	ALL	MULTI_AV	○	●	●	○	●	○	○
SUNNY	N15	ALL	NATS_IMMUN	○	●	●	○	○	○	004, 006
SUNNY	N15	ALL	RASHICAS	●	●	●	○	●	●	○
SUNNY	N15	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
SUNNY	N15	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
SUNNY	N15	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
SUNNY	N15	ALL	SONAR	●	●	●	○	●	●	○
SUNNY	N15	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
SUNNY	N15	ALL	TBDAVM	●	●	●	○	●	●	001
SUNNY	N15	ALL	TCS	●	●	●	●	●	●	001
SUNNY	N15	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
SUNNY	N16	ALL	ABS	●	●	●	○	●	●	001
SUNNY	N16	ALL	ACM	●	●	●	○	●	○	○
SUNNY	N16	ALL	ACTIVE_SUS	●	●	●	●	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
SUNNY	N16	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
SUNNY	N16	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
SUNNY	N16	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
SUNNY	N16	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
SUNNY	N16	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
SUNNY	N16	ALL	ASCD	○	●	●	○	●	○	○
SUNNY	N16	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
SUNNY	N16	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
SUNNY	N16	ALL	BCM	●	●	●	○	●	●	001, 002
SUNNY	N16	ALL	DIFF_LOCK	●	●	●	○	●	○	○
SUNNY	N16	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
SUNNY	N16	ALL	DIU	●	●	●	○	●	○	○
SUNNY	N16	ALL	ENGINE	●	●	●	※	●	●	001
SUNNY	N16	ALL	EPS	●	●	●	○	●	○	002
SUNNY	N16	ALL	E_4WD	●	●	●	○	●	●	002
SUNNY	N16	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
SUNNY	N16	ALL	HVAC	●	●	●	○	●	●	001
SUNNY	N16	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
SUNNY	N16	ALL	IPDM_ER	○	●	●	○	●	●	002
SUNNY	N16	ALL	IVMS	●	●	●	○	●	○	○
SUNNY	N16	ALL	LDW	●	●	●	○	●	●	001
SUNNY	N16	ALL	METER	○	●	●	○	●	○	002
SUNNY	N16	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
SUNNY	N16	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
SUNNY	N16	ALL	MULTI_AV	○	●	●	○	●	○	○
SUNNY	N16	ALL	NATS_IMMUN	○	●	●	○	○	○	004, 006
SUNNY	N16	ALL	RASHICAS	●	●	●	○	●	●	○
SUNNY	N16	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
SUNNY	N16	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
SUNNY	N16	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
SUNNY	N16	ALL	SONAR	●	●	●	○	●	●	○
SUNNY	N16	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
SUNNY	N16	ALL	TBDAVM	●	●	●	○	●	●	001
SUNNY	N16	ALL	TCS	●	●	●	●	●	●	001
SUNNY	N16	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
SUNNY	N17	2010-2012	ABS	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
SUNNY	N17	2010-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
SUNNY	N17	2010-2012	BCM	●	●	●	○	●	●	001, 002
SUNNY	N17	2010-2012	ENGINE	●	●	●	※	●	●	001
SUNNY	N17	2010-2012	EPS	●	●	●	○	●	○	002
SUNNY	N17	2010-2012	IPDM_ER	○	●	●	○	●	●	002
SUNNY	N17	2010-2012	METER	○	●	●	○	●	○	002
SUNNY	N17	2010-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
SUNNY/ALMERA	N15	ALL	ABS	●	●	●	○	●	●	001
SUNNY/ALMERA	N15	ALL	ACM	●	●	●	○	●	○	○
SUNNY/ALMERA	N15	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
SUNNY/ALMERA	N15	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
SUNNY/ALMERA	N15	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
SUNNY/ALMERA	N15	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
SUNNY/ALMERA	N15	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
SUNNY/ALMERA	N15	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
SUNNY/ALMERA	N15	ALL	ASCD	○	●	●	○	●	○	○
SUNNY/ALMERA	N15	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
SUNNY/ALMERA	N15	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
SUNNY/ALMERA	N15	ALL	BCM	●	●	●	○	●	●	001, 002
SUNNY/ALMERA	N15	ALL	DIFF_LOCK	●	●	●	○	●	○	○
SUNNY/ALMERA	N15	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
SUNNY/ALMERA	N15	ALL	DIU	●	●	●	○	●	○	○
SUNNY/ALMERA	N15	ALL	ENGINE	●	●	●	※	●	●	001
SUNNY/ALMERA	N15	ALL	EPS	●	●	●	○	●	○	002
SUNNY/ALMERA	N15	ALL	E_4WD	●	●	●	○	●	●	002
SUNNY/ALMERA	N15	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
SUNNY/ALMERA	N15	ALL	HVAC	●	●	●	○	●	●	001
SUNNY/ALMERA	N15	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
SUNNY/ALMERA	N15	ALL	IPDM_ER	○	●	●	○	●	●	002
SUNNY/ALMERA	N15	ALL	IVMS	●	●	●	○	●	○	○
SUNNY/ALMERA	N15	ALL	LDW	●	●	●	○	●	●	001
SUNNY/ALMERA	N15	ALL	METER	○	●	●	○	●	○	002
SUNNY/ALMERA	N15	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
SUNNY/ALMERA	N15	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
SUNNY/ALMERA	N15	ALL	MULTI_AV	○	●	●	○	●	○	○
SUNNY/ALMERA	N15	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
SUNNY/ALMERA	N15	ALL	RASHICAS	●	●	●	○	●	●	○
SUNNY/ALMERA	N15	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
SUNNY/ALMERA	N15	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
SUNNY/ALMERA	N15	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
SUNNY/ALMERA	N15	ALL	SONAR	●	●	●	○	●	●	○
SUNNY/ALMERA	N15	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
SUNNY/ALMERA	N15	ALL	TBDAVM	●	●	●	○	●	●	001
SUNNY/ALMERA	N15	ALL	TCS	●	●	●	●	●	●	001
SUNNY/ALMERA	N15	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
SUNNY/ALMERA	N16	ALL	ABS	●	●	●	○	●	●	001
SUNNY/ALMERA	N16	ALL	ACM	●	●	●	○	●	○	○
SUNNY/ALMERA	N16	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
SUNNY/ALMERA	N16	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
SUNNY/ALMERA	N16	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
SUNNY/ALMERA	N16	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
SUNNY/ALMERA	N16	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
SUNNY/ALMERA	N16	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
SUNNY/ALMERA	N16	ALL	ASCD	○	●	●	○	●	○	○
SUNNY/ALMERA	N16	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
SUNNY/ALMERA	N16	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
SUNNY/ALMERA	N16	ALL	BCM	●	●	●	○	●	●	001, 002
SUNNY/ALMERA	N16	ALL	DIFF_LOCK	●	●	●	○	●	○	○
SUNNY/ALMERA	N16	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
SUNNY/ALMERA	N16	ALL	DIU	●	●	●	○	●	○	○
SUNNY/ALMERA	N16	ALL	ENGINE	●	●	●	※	●	●	001
SUNNY/ALMERA	N16	ALL	EPS	●	●	●	○	●	○	002
SUNNY/ALMERA	N16	ALL	E_4WD	●	●	●	○	●	●	002
SUNNY/ALMERA	N16	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
SUNNY/ALMERA	N16	ALL	HVAC	●	●	●	○	●	●	001
SUNNY/ALMERA	N16	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
SUNNY/ALMERA	N16	ALL	IPDM_ER	○	●	●	○	●	●	002
SUNNY/ALMERA	N16	ALL	IVMS	●	●	●	○	●	○	○
SUNNY/ALMERA	N16	ALL	LDW	●	●	●	○	●	●	001
SUNNY/ALMERA	N16	ALL	METER	○	●	●	○	●	○	002
SUNNY/ALMERA	N16	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
SUNNY/ALMERA	N16	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
SUNNY/ALMERA	N16	ALL	MULTI_AV	○	●	●	○	●	○	○
SUNNY/ALMERA	N16	ALL	NATS_IMM	○	●	●	○	○	○	004, 006
SUNNY/ALMERA	N16	ALL	RASHICAS	●	●	●	○	●	●	○
SUNNY/ALMERA	N16	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
SUNNY/ALMERA	N16	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
SUNNY/ALMERA	N16	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
SUNNY/ALMERA	N16	ALL	SONAR	●	●	●	○	●	●	○
SUNNY/ALMERA	N16	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
SUNNY/ALMERA	N16	ALL	TBDAVM	●	●	●	○	●	●	001
SUNNY/ALMERA	N16	ALL	TCS	●	●	●	●	●	●	001
SUNNY/ALMERA	N16	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
SUNNY/ALMERA	N17	2010-2012	ABS	●	●	●	○	●	●	001
SUNNY/ALMERA	N17	2010-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
SUNNY/ALMERA	N17	2010-2012	BCM	●	●	●	○	●	●	001, 002
SUNNY/ALMERA	N17	2010-2012	ENGINE	●	●	●	※	●	●	001
SUNNY/ALMERA	N17	2010-2012	EPS	●	●	●	○	●	○	002
SUNNY/ALMERA	N17	2010-2012	IPDM_ER	○	●	●	○	●	●	002
SUNNY/ALMERA	N17	2010-2012	METER	○	●	●	○	●	○	002
SUNNY/ALMERA	N17	2010-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
SUNNY/SENTRA	N16	ALL	ABS	●	●	●	○	●	●	001
SUNNY/SENTRA	N16	ALL	ACM	●	●	●	○	●	○	○
SUNNY/SENTRA	N16	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
SUNNY/SENTRA	N16	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
SUNNY/SENTRA	N16	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
SUNNY/SENTRA	N16	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
SUNNY/SENTRA	N16	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
SUNNY/SENTRA	N16	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
SUNNY/SENTRA	N16	ALL	ASCD	○	●	●	○	●	○	○
SUNNY/SENTRA	N16	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
SUNNY/SENTRA	N16	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
SUNNY/SENTRA	N16	ALL	BCM	●	●	●	○	●	●	001, 002
SUNNY/SENTRA	N16	ALL	DIFF_LOCK	●	●	●	○	●	○	○
SUNNY/SENTRA	N16	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
SUNNY/SENTRA	N16	ALL	DIU	●	●	●	○	●	○	○
SUNNY/SENTRA	N16	ALL	ENGINE	●	●	●	※	●	●	001
SUNNY/SENTRA	N16	ALL	EPS	●	●	●	○	●	○	002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
SUNNY/SENTRA	N16	ALL	E_4WD	●	●	●	○	●	●	002
SUNNY/SENTRA	N16	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
SUNNY/SENTRA	N16	ALL	HVAC	●	●	●	○	●	●	001
SUNNY/SENTRA	N16	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
SUNNY/SENTRA	N16	ALL	IPDM_ER	○	●	●	○	●	●	002
SUNNY/SENTRA	N16	ALL	IVMS	●	●	●	○	●	○	○
SUNNY/SENTRA	N16	ALL	LDW	●	●	●	○	●	●	001
SUNNY/SENTRA	N16	ALL	METER	○	●	●	○	●	○	002
SUNNY/SENTRA	N16	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
SUNNY/SENTRA	N16	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
SUNNY/SENTRA	N16	ALL	MULTI_AV	○	●	●	○	●	○	○
SUNNY/SENTRA	N16	ALL	NATS_IMMUN	○	●	●	○	○	○	004, 006
SUNNY/SENTRA	N16	ALL	RASHICAS	●	●	●	○	●	●	○
SUNNY/SENTRA	N16	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
SUNNY/SENTRA	N16	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
SUNNY/SENTRA	N16	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
SUNNY/SENTRA	N16	ALL	SONAR	●	●	●	○	●	●	○
SUNNY/SENTRA	N16	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
SUNNY/SENTRA	N16	ALL	TBDAVM	●	●	●	○	●	●	001
SUNNY/SENTRA	N16	ALL	TCS	●	●	●	●	●	●	001
SUNNY/SENTRA	N16	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
SYLPHY	G10	ALL	ABS	●	●	●	○	●	●	001
SYLPHY	G10	ALL	ACM	●	●	●	○	●	○	○
SYLPHY	G10	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
SYLPHY	G10	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
SYLPHY	G10	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
SYLPHY	G10	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
SYLPHY	G10	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
SYLPHY	G10	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
SYLPHY	G10	ALL	ASCD	○	●	●	○	●	○	○
SYLPHY	G10	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
SYLPHY	G10	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
SYLPHY	G10	ALL	BCM	●	●	●	○	●	●	001, 002
SYLPHY	G10	ALL	DIFF_LOCK	●	●	●	○	●	○	○
SYLPHY	G10	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
SYLPHY	G10	ALL	DIU	●	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
SYLPHY	G10	ALL	ENGINE	●	●	●	※	●	●	001
SYLPHY	G10	ALL	EPS	●	●	●	○	●	○	002
SYLPHY	G10	ALL	E_4WD	●	●	●	○	●	●	002
SYLPHY	G10	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
SYLPHY	G10	ALL	HVAC	●	●	●	○	●	●	001
SYLPHY	G10	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
SYLPHY	G10	ALL	IPDM_ER	○	●	●	○	●	●	002
SYLPHY	G10	ALL	IVMS	●	●	●	○	●	○	○
SYLPHY	G10	ALL	LDW	●	●	●	○	●	●	001
SYLPHY	G10	ALL	METER	○	●	●	○	●	○	002
SYLPHY	G10	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
SYLPHY	G10	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
SYLPHY	G10	ALL	MULTI_AV	○	●	●	○	●	○	○
SYLPHY	G10	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
SYLPHY	G10	ALL	RASHICAS	●	●	●	○	●	●	○
SYLPHY	G10	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
SYLPHY	G10	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
SYLPHY	G10	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
SYLPHY	G10	ALL	SONAR	●	●	●	○	●	●	○
SYLPHY	G10	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
SYLPHY	G10	ALL	TBDAVM	●	●	●	○	●	●	001
SYLPHY	G10	ALL	TCS	●	●	●	●	●	●	001
SYLPHY	G10	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
SYLPHY	G11	2005-2011	ABS	●	●	●	○	●	●	001
SYLPHY	G11	2005-2011	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
SYLPHY	G11	2005-2011	AIRBAG	●	●	●	●	●	○	003, 005, 008
SYLPHY	G11	2005-2011	AUTO_DRIVE_POS	●	●	●	○	●	●	001
SYLPHY	G11	2005-2011	BCM	●	●	●	○	●	●	001, 002
SYLPHY	G11	2005-2011	ENGINE	●	●	●	※	●	●	001
SYLPHY	G11	2005-2011	EPS	●	●	●	○	●	○	002
SYLPHY	G11	2005-2011	E_4WD	●	●	●	○	●	●	002
SYLPHY	G11	2005-2011	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
SYLPHY	G11	2005-2011	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
SYLPHY	G11	2005-2011	IPDM_ER	○	●	●	○	●	●	002
SYLPHY	G11	2005-2011	METER	○	●	●	○	●	○	002
SYLPHY	G11	2005-2011	MULTI_AV	○	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
SYLPHY	G11	2005-2011	REARVIEW_CAMERA	●	○	○	○	●	○	001
SYLPHY	G11	2005-2011	SBLIND_CAMERA	●	○	○	○	●	○	001
SYLPHY	G11	2005-2011	TRANSMISSION	●	●	●	○	●	○	001, 002
SYLPHY	B17	2012	ABS	●	●	●	○	●	●	001
SYLPHY	B17	2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
SYLPHY	B17	2012	BCM	●	●	●	○	●	●	001, 002
SYLPHY	B17	2012	ENGINE	●	●	●	※	●	●	001
SYLPHY	B17	2012	EPS	●	●	●	○	●	○	002
SYLPHY	B17	2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
SYLPHY	B17	2012	HVAC	●	●	●	○	●	●	001
SYLPHY	B17	2012	IPDM_ER	○	●	●	○	●	●	002
SYLPHY	B17	2012	METER	○	●	●	○	●	○	002
SYLPHY	B17	2012	MULTI_AV	○	●	●	○	●	○	○
SYLPHY	B17	2012	SONAR	●	●	●	○	●	●	○
SYLPHY	B17	2012	TRANSMISSION	●	●	●	○	●	○	001, 002
SYLPHY	F24	2011	ABS	●	●	●	○	●	●	001
SYLPHY	F24	2011	AIRBAG	●	●	●	●	●	○	003, 005, 008
SYLPHY	F24	2011	BCM	●	●	●	○	●	●	001, 002
SYLPHY	F24	2011	ENGINE	●	●	●	※	●	●	001
SYLPHY	F24	2011	IPDM_ER	○	●	●	○	●	●	002
SYLPHY	F24	2011	METER	○	●	●	○	●	○	002
TEANA	J31	2003-2007	ABS	●	●	●	○	●	●	001
TEANA	J31	2003-2007	ACM	●	●	●	○	●	○	○
TEANA	J31	2003-2007	ACTIVE_SUS	●	●	●	●	●	●	001
TEANA	J31	2003-2007	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
TEANA	J31	2003-2007	AIRBAG	●	●	●	●	●	○	003, 005, 008
TEANA	J31	2003-2007	AIR_LEVELIZER	●	●	●	○	●	●	001
TEANA	J31	2003-2007	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
TEANA	J31	2003-2007	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
TEANA	J31	2003-2007	ASCD	○	●	●	○	●	○	○
TEANA	J31	2003-2007	AUTO_DRIVE_POS	●	●	●	○	●	●	001
TEANA	J31	2003-2007	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
TEANA	J31	2003-2007	BCM	●	●	●	○	●	●	001, 002
TEANA	J31	2003-2007	DIFF_LOCK	●	●	●	○	●	○	○
TEANA	J31	2003-2007	DISTANCE_CONTROL	●	●	●	○	●	○	○
TEANA	J31	2003-2007	DIU	●	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
TEANA	J31	2003-2007	ENGINE	●	●	●	※	●	●	001
TEANA	J31	2003-2007	EPS	●	●	●	○	●	○	002
TEANA	J31	2003-2007	E_4WD	●	●	●	○	●	●	002
TEANA	J31	2003-2007	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
TEANA	J31	2003-2007	HVAC	●	●	●	○	●	●	001
TEANA	J31	2003-2007	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
TEANA	J31	2003-2007	IPDM_ER	○	●	●	○	●	●	002
TEANA	J31	2003-2007	IVMS	●	●	●	○	●	○	○
TEANA	J31	2003-2007	LDW	●	●	●	○	●	●	001
TEANA	J31	2003-2007	METER	○	●	●	○	●	○	002
TEANA	J31	2003-2007	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
TEANA	J31	2003-2007	MOTOR_ASSIST	○	●	●	○	●	○	001
TEANA	J31	2003-2007	MULTI_AV	○	●	●	○	●	○	○
TEANA	J31	2003-2007	NATS_IMMUE	○	●	●	○	○	○	004, 006
TEANA	J31	2003-2007	RASHICAS	●	●	●	○	●	●	○
TEANA	J31	2003-2007	REARVIEW_CAMERA	●	○	○	○	●	○	001
TEANA	J31	2003-2007	S/BLIND_CAMERA	●	○	○	○	●	○	001
TEANA	J31	2003-2007	SMART_ENTRANCE	○	●	●	○	●	●	002
TEANA	J31	2003-2007	SONAR	●	●	●	○	●	●	○
TEANA	J31	2003-2007	TBDADAS_ICC	●	●	●	○	●	●	001, 002
TEANA	J31	2003-2007	TBDAVM	●	●	●	○	●	●	001
TEANA	J31	2003-2007	TCS	●	●	●	●	●	●	001
TEANA	J31	2003-2007	TRANSMISSION	●	●	●	○	●	○	001, 002
TEANA	J32	2008-2012	ABS	●	●	●	○	●	●	001
TEANA	J32	2008-2012	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
TEANA	J32	2008-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
TEANA	J32	2008-2012	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
TEANA	J32	2008-2012	AUTO_DRIVE_POS	●	●	●	○	●	●	001
TEANA	J32	2008-2012	BCM	●	●	●	○	●	●	001, 002
TEANA	J32	2008-2012	ENGINE	●	●	●	※	●	●	001
TEANA	J32	2008-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
TEANA	J32	2008-2012	HVAC	●	●	●	○	●	●	001
TEANA	J32	2008-2012	IPDM_ER	○	●	●	○	●	●	002
TEANA	J32	2008-2012	METER	○	●	●	○	●	○	002
TEANA	J32	2008-2012	MULTI_AV	○	●	●	○	●	○	○
TEANA	J32	2008-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
TEANA	J32	2008-2012	SONAR	●	●	●	○	●	●	○
TEANA	J32	2008-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
TERRANO	R20	ALL	ABS	●	●	●	○	●	●	001
TERRANO	R20	ALL	ACM	●	●	●	○	●	○	○
TERRANO	R20	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
TERRANO	R20	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
TERRANO	R20	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
TERRANO	R20	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
TERRANO	R20	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
TERRANO	R20	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
TERRANO	R20	ALL	ASCD	○	●	●	○	●	○	○
TERRANO	R20	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
TERRANO	R20	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
TERRANO	R20	ALL	BCM	●	●	●	○	●	●	001, 002
TERRANO	R20	ALL	DIFF_LOCK	●	●	●	○	●	○	○
TERRANO	R20	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
TERRANO	R20	ALL	DIU	●	●	●	○	●	○	○
TERRANO	R20	ALL	ENGINE	●	●	●	※	●	●	001
TERRANO	R20	ALL	EPS	●	●	●	○	●	○	002
TERRANO	R20	ALL	E_4WD	●	●	●	○	●	●	002
TERRANO	R20	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
TERRANO	R20	ALL	HVAC	●	●	●	○	●	●	001
TERRANO	R20	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
TERRANO	R20	ALL	IPDM_ER	○	●	●	○	●	●	002
TERRANO	R20	ALL	IVMS	●	●	●	○	●	○	○
TERRANO	R20	ALL	LDW	●	●	●	○	●	●	001
TERRANO	R20	ALL	METER	○	●	●	○	●	○	002
TERRANO	R20	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
TERRANO	R20	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
TERRANO	R20	ALL	MULTI_AV	○	●	●	○	●	○	○
TERRANO	R20	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
TERRANO	R20	ALL	RASHICAS	●	●	●	○	●	●	○
TERRANO	R20	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
TERRANO	R20	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
TERRANO	R20	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
TERRANO	R20	ALL	SONAR	●	●	●	○	●	●	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
TERRANO	R20	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
TERRANO	R20	ALL	TBDAVM	●	●	●	○	●	●	001
TERRANO	R20	ALL	TCS	●	●	●	●	●	●	001
TERRANO	R20	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
TERRANO	R50	ALL	ABS	●	●	●	○	●	●	001
TERRANO	R50	ALL	ACM	●	●	●	○	●	○	○
TERRANO	R50	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
TERRANO	R50	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
TERRANO	R50	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
TERRANO	R50	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
TERRANO	R50	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
TERRANO	R50	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
TERRANO	R50	ALL	ASCD	○	●	●	○	●	○	○
TERRANO	R50	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
TERRANO	R50	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
TERRANO	R50	ALL	BCM	●	●	●	○	●	●	001, 002
TERRANO	R50	ALL	DIFF_LOCK	●	●	●	○	●	○	○
TERRANO	R50	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
TERRANO	R50	ALL	DIU	●	●	●	○	●	○	○
TERRANO	R50	ALL	ENGINE	●	●	●	※	●	●	001
TERRANO	R50	ALL	EPS	●	●	●	○	●	○	002
TERRANO	R50	ALL	E_4WD	●	●	●	○	●	●	002
TERRANO	R50	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
TERRANO	R50	ALL	HVAC	●	●	●	○	●	●	001
TERRANO	R50	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
TERRANO	R50	ALL	IPDM_ER	○	●	●	○	●	●	002
TERRANO	R50	ALL	IVMS	●	●	●	○	●	○	○
TERRANO	R50	ALL	LDW	●	●	●	○	●	●	001
TERRANO	R50	ALL	METER	○	●	●	○	●	○	002
TERRANO	R50	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
TERRANO	R50	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
TERRANO	R50	ALL	MULTI_AV	○	●	●	○	●	○	○
TERRANO	R50	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
TERRANO	R50	ALL	RASHICAS	●	●	●	○	●	●	○
TERRANO	R50	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
TERRANO	R50	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
TERRANO	R50	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
TERRANO	R50	ALL	SONAR	●	●	●	○	●	●	○
TERRANO	R50	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
TERRANO	R50	ALL	TBDAVM	●	●	●	○	●	●	001
TERRANO	R50	ALL	TCS	●	●	●	●	●	●	001
TERRANO	R50	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
TERRANO/REGULUS	JR50	ALL	ABS	●	●	●	○	●	●	001
TERRANO/REGULUS	JR50	ALL	ACM	●	●	●	○	●	○	○
TERRANO/REGULUS	JR50	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
TERRANO/REGULUS	JR50	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
TERRANO/REGULUS	JR50	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
TERRANO/REGULUS	JR50	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
TERRANO/REGULUS	JR50	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
TERRANO/REGULUS	JR50	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
TERRANO/REGULUS	JR50	ALL	ASCD	○	●	●	○	●	○	○
TERRANO/REGULUS	JR50	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
TERRANO/REGULUS	JR50	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
TERRANO/REGULUS	JR50	ALL	BCM	●	●	●	○	●	●	001, 002
TERRANO/REGULUS	JR50	ALL	DIFF_LOCK	●	●	●	○	●	○	○
TERRANO/REGULUS	JR50	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
TERRANO/REGULUS	JR50	ALL	DIU	●	●	●	○	●	○	○
TERRANO/REGULUS	JR50	ALL	ENGINE	●	●	●	※	●	●	001
TERRANO/REGULUS	JR50	ALL	EPS	●	●	●	○	●	○	002
TERRANO/REGULUS	JR50	ALL	E_4WD	●	●	●	○	●	●	002
TERRANO/REGULUS	JR50	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
TERRANO/REGULUS	JR50	ALL	HVAC	●	●	●	○	●	●	001
TERRANO/REGULUS	JR50	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
TERRANO/REGULUS	JR50	ALL	IPDM_ER	○	●	●	○	●	●	002
TERRANO/REGULUS	JR50	ALL	IVMS	●	●	●	○	●	○	○
TERRANO/REGULUS	JR50	ALL	LDW	●	●	●	○	●	●	001
TERRANO/REGULUS	JR50	ALL	METER	○	●	●	○	●	○	002
TERRANO/REGULUS	JR50	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
TERRANO/REGULUS	JR50	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
TERRANO/REGULUS	JR50	ALL	MULTI_AV	○	●	●	○	●	○	○
TERRANO/REGULUS	JR50	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
TERRANO/REGULUS	JR50	ALL	RASHICAS	●	●	●	○	●	●	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
TERRANO/REGULUS	JR50	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
TERRANO/REGULUS	JR50	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
TERRANO/REGULUS	JR50	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
TERRANO/REGULUS	JR50	ALL	SONAR	●	●	●	○	●	●	○
TERRANO/REGULUS	JR50	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
TERRANO/REGULUS	JR50	ALL	TBDAVM	●	●	●	○	●	●	001
TERRANO/REGULUS	JR50	ALL	TCS	●	●	●	●	●	●	001
TERRANO/REGULUS	JR50	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
TIIDA	C11	2004-2010	ABS	●	●	●	○	●	●	001
TIIDA	C11	2004-2010	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
TIIDA	C11	2004-2010	AIRBAG	●	●	●	●	●	○	003, 005, 008
TIIDA	C11	2004-2010	AUTO_DRIVE_POS	●	●	●	○	●	●	001
TIIDA	C11	2004-2010	BCM	●	●	●	○	●	●	001, 002
TIIDA	C11	2004-2010	ENGINE	●	●	●	※	●	●	001
TIIDA	C11	2004-2010	EPS	●	●	●	○	●	○	002
TIIDA	C11	2004-2010	E_4WD	●	●	●	○	●	●	002
TIIDA	C11	2004-2010	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
TIIDA	C11	2004-2010	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
TIIDA	C11	2004-2010	IPDM_ER	○	●	●	○	●	●	002
TIIDA	C11	2004-2010	METER	○	●	●	○	●	○	002
TIIDA	C11	2004-2010	MULTI_AV	○	●	●	○	●	○	○
TIIDA	C11	2004-2010	REARVIEW_CAMERA	●	○	○	○	●	○	001
TIIDA	C11	2004-2010	SBLIND_CAMERA	○	●	●	○	●	●	002
TIIDA	C11	2004-2010	TRANSMISSION	●	●	●	○	●	○	001, 002
TIIDA	C12	2011-2012	ABS	●	●	●	○	●	●	001
TIIDA	C12	2011-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
TIIDA	C12	2011-2012	BCM	●	●	●	○	●	●	001, 002
TIIDA	C12	2011-2012	ENGINE	●	●	●	※	●	●	001
TIIDA	C12	2011-2012	EPS	●	●	●	○	●	○	002
TIIDA	C12	2011-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
TIIDA	C12	2011-2012	HVAC	●	●	●	○	●	●	001
TIIDA	C12	2011-2012	IPDM_ER	○	●	●	○	●	●	002
TIIDA	C12	2011-2012	METER	○	●	●	○	●	○	002
TIIDA	C12	2011-2012	SONAR	●	●	●	○	●	●	○
TIIDA	C12	2011-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
TIIDA Hatchback	C11	2005-2012	ABS	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
TIIDA Hatchback	C11	2005-2012	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
TIIDA Hatchback	C11	2005-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
TIIDA Hatchback	C11	2005-2012	AUTO_DRIVE_POS	●	●	●	○	●	●	001
TIIDA Hatchback	C11	2005-2012	BCM	●	●	●	○	●	●	001, 002
TIIDA Hatchback	C11	2005-2012	ENGINE	●	●	●	※	●	●	001
TIIDA Hatchback	C11	2005-2012	EPS	●	●	●	○	●	○	002
TIIDA Hatchback	C11	2005-2012	E_4WD	●	●	●	○	●	●	002
TIIDA Hatchback	C11	2005-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
TIIDA Hatchback	C11	2005-2012	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
TIIDA Hatchback	C11	2005-2012	IPDM_ER	○	●	●	○	●	●	002
TIIDA Hatchback	C11	2005-2012	METER	○	●	●	○	●	○	002
TIIDA Hatchback	C11	2005-2012	MULTI_AV	○	●	●	○	●	○	○
TIIDA Hatchback	C11	2005-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001
TIIDA Hatchback	C11	2005-2012	SBLIND_CAMERA	○	●	●	○	●	●	002
TIIDA Hatchback	C11	2005-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
TIIDA LATIO	SC11	2004-2010	ABS	●	●	●	○	●	●	001
TIIDA LATIO	SC11	2004-2010	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
TIIDA LATIO	SC11	2004-2010	AIRBAG	●	●	●	●	●	○	003, 005, 008
TIIDA LATIO	SC11	2004-2010	AUTO_DRIVE_POS	●	●	●	○	●	●	001
TIIDA LATIO	SC11	2004-2010	BCM	●	●	●	○	●	●	001, 002
TIIDA LATIO	SC11	2004-2010	ENGINE	●	●	●	※	●	●	001
TIIDA LATIO	SC11	2004-2010	EPS	●	●	●	○	●	○	002
TIIDA LATIO	SC11	2004-2010	E_4WD	●	●	●	○	●	●	002
TIIDA LATIO	SC11	2004-2010	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
TIIDA LATIO	SC11	2004-2010	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
TIIDA LATIO	SC11	2004-2010	IPDM_ER	○	●	●	○	●	●	002
TIIDA LATIO	SC11	2004-2010	METER	○	●	●	○	●	○	002
TIIDA LATIO	SC11	2004-2010	MULTI_AV	○	●	●	○	●	○	○
TIIDA LATIO	SC11	2004-2010	REARVIEW_CAMERA	●	○	○	○	●	○	001
TIIDA LATIO	SC11	2004-2010	SBLIND_CAMERA	○	●	●	○	●	●	002
TIIDA LATIO	SC11	2004-2010	TRANSMISSION	●	●	●	○	●	○	001, 002
TIIDA LATIO	N17	2012	ABS	●	●	●	○	●	●	001
TIIDA LATIO	N17	2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
TIIDA LATIO	N17	2012	BCM	●	●	●	○	●	●	001, 002
TIIDA LATIO	N17	2012	ENGINE	●	●	●	※	●	●	001
TIIDA LATIO	N17	2012	EPS	●	●	●	○	●	○	002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
TIIDA LATIO	N17	2012	IPDM_ER	○	●	●	○	●	●	002
TIIDA LATIO	N17	2012	METER	○	●	●	○	●	○	002
TIIDA LATIO	N17	2012	TRANSMISSION	●	●	●	○	●	○	001, 002
TIIDA Sedan	SC11	2005-2012	ABS	●	●	●	○	●	●	001
TIIDA Sedan	SC11	2005-2012	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
TIIDA Sedan	SC11	2005-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
TIIDA Sedan	SC11	2005-2012	AUTO_DRIVE_POS	●	●	●	○	●	●	001
TIIDA Sedan	SC11	2005-2012	BCM	●	●	●	○	●	●	001, 002
TIIDA Sedan	SC11	2005-2012	ENGINE	●	●	●	※	●	●	001
TIIDA Sedan	SC11	2005-2012	EPS	●	●	●	○	●	○	002
TIIDA Sedan	SC11	2005-2012	E_4WD	●	●	●	○	●	●	002
TIIDA Sedan	SC11	2005-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
TIIDA Sedan	SC11	2005-2012	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
TIIDA Sedan	SC11	2005-2012	IPDM_ER	○	●	●	○	●	●	002
TIIDA Sedan	SC11	2005-2012	METER	○	●	●	○	●	○	002
TIIDA Sedan	SC11	2005-2012	MULTI_AV	○	●	●	○	●	○	○
TIIDA Sedan	SC11	2005-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001
TIIDA Sedan	SC11	2005-2012	SBLIND_CAMERA	○	●	●	○	●	●	002
TIIDA Sedan	SC11	2005-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
TINO	V10	ALL	ABS	●	●	●	○	●	●	001
TINO	V10	ALL	ACM	●	●	●	○	●	○	○
TINO	V10	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
TINO	V10	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
TINO	V10	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
TINO	V10	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
TINO	V10	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
TINO	V10	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
TINO	V10	ALL	ASCD	○	●	●	○	●	○	○
TINO	V10	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
TINO	V10	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
TINO	V10	ALL	BCM	●	●	●	○	●	●	001, 002
TINO	V10	ALL	DIFF_LOCK	●	●	●	○	●	○	○
TINO	V10	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
TINO	V10	ALL	DIU	●	●	●	○	●	○	○
TINO	V10	ALL	ENGINE	●	●	●	※	●	●	001
TINO	V10	ALL	EPS	●	●	●	○	●	○	002

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
TINO	V10	ALL	E_4WD	●	●	●	○	●	●	002
TINO	V10	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
TINO	V10	ALL	HVAC	●	●	●	○	●	●	001
TINO	V10	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
TINO	V10	ALL	IPDM_ER	○	●	●	○	●	●	002
TINO	V10	ALL	IVMS	●	●	●	○	●	○	○
TINO	V10	ALL	LDW	●	●	●	○	●	●	001
TINO	V10	ALL	METER	○	●	●	○	●	○	002
TINO	V10	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
TINO	V10	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
TINO	V10	ALL	MULTI_AV	○	●	●	○	●	○	○
TINO	V10	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
TINO	V10	ALL	RASHICAS	●	●	●	○	●	●	○
TINO	V10	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
TINO	V10	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
TINO	V10	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
TINO	V10	ALL	SONAR	●	●	●	○	●	●	○
TINO	V10	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
TINO	V10	ALL	TBDAVM	●	●	●	○	●	●	001
TINO	V10	ALL	TCS	●	●	●	●	●	●	001
TINO	V10	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
TITAN	A60	2003-2012	ABS	●	●	●	○	●	●	001
TITAN	A60	2003-2012	ACM	●	●	●	○	●	○	○
TITAN	A60	2003-2012	ACTIVE_SUS	●	●	●	●	●	●	001
TITAN	A60	2003-2012	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
TITAN	A60	2003-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
TITAN	A60	2003-2012	AIR_LEVELIZER	●	●	●	○	●	●	001
TITAN	A60	2003-2012	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
TITAN	A60	2003-2012	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
TITAN	A60	2003-2012	ASCD	○	●	●	○	●	○	○
TITAN	A60	2003-2012	AUTO_DRIVE_POS	●	●	●	○	●	●	001
TITAN	A60	2003-2012	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
TITAN	A60	2003-2012	BCM	●	●	●	○	●	●	001, 002
TITAN	A60	2003-2012	DIFF_LOCK	●	●	●	○	●	○	○
TITAN	A60	2003-2012	DISTANCE_CONTROL	●	●	●	○	●	○	○
TITAN	A60	2003-2012	DIU	●	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
TITAN	A60	2003-2012	ENGINE	●	●	●	※	●	●	001
TITAN	A60	2003-2012	EPS	●	●	●	○	●	○	002
TITAN	A60	2003-2012	E_4WD	●	●	●	○	●	●	002
TITAN	A60	2003-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
TITAN	A60	2003-2012	HVAC	●	●	●	○	●	●	001
TITAN	A60	2003-2012	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
TITAN	A60	2003-2012	IPDM_ER	○	●	●	○	●	●	002
TITAN	A60	2003-2012	IVMS	●	●	●	○	●	○	○
TITAN	A60	2003-2012	LDW	●	●	●	○	●	●	001
TITAN	A60	2003-2012	METER	○	●	●	○	●	○	002
TITAN	A60	2003-2012	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
TITAN	A60	2003-2012	MOTOR_ASSIST	○	●	●	○	●	○	001
TITAN	A60	2003-2012	MULTI_AV	○	●	●	○	●	○	○
TITAN	A60	2003-2012	NATS_IMMUI	○	●	●	○	○	○	004, 006
TITAN	A60	2003-2012	RASHICAS	●	●	●	○	●	●	○
TITAN	A60	2003-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001
TITAN	A60	2003-2012	S/BLIND_CAMERA	●	○	○	○	●	○	001
TITAN	A60	2003-2012	SMART_ENTRANCE	○	●	●	○	●	●	002
TITAN	A60	2003-2012	SONAR	●	●	●	○	●	●	○
TITAN	A60	2003-2012	TBDADAS_ICC	●	●	●	○	●	●	001, 002
TITAN	A60	2003-2012	TBDAVM	●	●	●	○	●	●	001
TITAN	A60	2003-2012	TCS	●	●	●	●	●	●	001
TITAN	A60	2003-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
TSURU/SENTRA	B13	ALL	ABS	●	●	●	○	●	●	001
TSURU/SENTRA	B13	ALL	ACM	●	●	●	○	●	○	○
TSURU/SENTRA	B13	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
TSURU/SENTRA	B13	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
TSURU/SENTRA	B13	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
TSURU/SENTRA	B13	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
TSURU/SENTRA	B13	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
TSURU/SENTRA	B13	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
TSURU/SENTRA	B13	ALL	ASCD	○	●	●	○	●	○	○
TSURU/SENTRA	B13	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
TSURU/SENTRA	B13	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
TSURU/SENTRA	B13	ALL	BCM	●	●	●	○	●	●	001, 002
TSURU/SENTRA	B13	ALL	DIFF_LOCK	●	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
TSURU/SENTRA	B13	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
TSURU/SENTRA	B13	ALL	DIU	●	●	●	○	●	○	○
TSURU/SENTRA	B13	ALL	ENGINE	●	●	●	※	●	●	001
TSURU/SENTRA	B13	ALL	EPS	●	●	●	○	●	○	002
TSURU/SENTRA	B13	ALL	E_4WD	●	●	●	○	●	●	002
TSURU/SENTRA	B13	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
TSURU/SENTRA	B13	ALL	HVAC	●	●	●	○	●	●	001
TSURU/SENTRA	B13	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
TSURU/SENTRA	B13	ALL	IPDM_ER	○	●	●	○	●	●	002
TSURU/SENTRA	B13	ALL	IVMS	●	●	●	○	●	○	○
TSURU/SENTRA	B13	ALL	LDW	●	●	●	○	●	●	001
TSURU/SENTRA	B13	ALL	METER	○	●	●	○	●	○	002
TSURU/SENTRA	B13	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
TSURU/SENTRA	B13	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
TSURU/SENTRA	B13	ALL	MULTI_AV	○	●	●	○	●	○	○
TSURU/SENTRA	B13	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
TSURU/SENTRA	B13	ALL	RASHICAS	●	●	●	○	●	●	○
TSURU/SENTRA	B13	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
TSURU/SENTRA	B13	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
TSURU/SENTRA	B13	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
TSURU/SENTRA	B13	ALL	SONAR	●	●	●	○	●	●	○
TSURU/SENTRA	B13	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
TSURU/SENTRA	B13	ALL	TBDAVM	●	●	●	○	●	●	001
TSURU/SENTRA	B13	ALL	TCS	●	●	●	●	●	●	001
TSURU/SENTRA	B13	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
URVAN	E25	2001-2011	ABS	●	●	●	○	●	●	001
URVAN	E25	2001-2011	ACM	●	●	●	○	●	○	○
URVAN	E25	2001-2011	ACTIVE_SUS	●	●	●	●	●	●	001
URVAN	E25	2001-2011	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
URVAN	E25	2001-2011	AIRBAG	●	●	●	●	●	○	003, 005, 008
URVAN	E25	2001-2011	AIR_LEVELIZER	●	●	●	○	●	●	001
URVAN	E25	2001-2011	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
URVAN	E25	2001-2011	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
URVAN	E25	2001-2011	ASCD	○	●	●	○	●	○	○
URVAN	E25	2001-2011	AUTO_DRIVE_POS	●	●	●	○	●	●	001
URVAN	E25	2001-2011	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
URVAN	E25	2001-2011	BCM	●	●	●	○	●	●	001, 002
URVAN	E25	2001-2011	DIFF_LOCK	●	●	●	○	●	○	○
URVAN	E25	2001-2011	DISTANCE_CONTROL	●	●	●	○	●	○	○
URVAN	E25	2001-2011	DIU	●	●	●	○	●	○	○
URVAN	E25	2001-2011	ENGINE	●	●	●	※	●	●	001
URVAN	E25	2001-2011	EPS	●	●	●	○	●	○	002
URVAN	E25	2001-2011	E_4WD	●	●	●	○	●	●	002
URVAN	E25	2001-2011	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
URVAN	E25	2001-2011	HVAC	●	●	●	○	●	●	001
URVAN	E25	2001-2011	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
URVAN	E25	2001-2011	IPDM_ER	○	●	●	○	●	●	002
URVAN	E25	2001-2011	IVMS	●	●	●	○	●	○	○
URVAN	E25	2001-2011	LDW	●	●	●	○	●	●	001
URVAN	E25	2001-2011	METER	○	●	●	○	●	○	002
URVAN	E25	2001-2011	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
URVAN	E25	2001-2011	MOTOR_ASSIST	○	●	●	○	●	○	001
URVAN	E25	2001-2011	MULTI_AV	○	●	●	○	●	○	○
URVAN	E25	2001-2011	NATS_IMMU	○	●	●	○	○	○	004, 006
URVAN	E25	2001-2011	RASHICAS	●	●	●	○	●	●	○
URVAN	E25	2001-2011	REARVIEW_CAMERA	●	○	○	○	●	○	001
URVAN	E25	2001-2011	S/BLIND_CAMERA	●	○	○	○	●	○	001
URVAN	E25	2001-2011	SMART_ENTRANCE	○	●	●	○	●	●	002
URVAN	E25	2001-2011	SONAR	●	●	●	○	●	●	○
URVAN	E25	2001-2011	TBDADAS_ICC	●	●	●	○	●	●	001, 002
URVAN	E25	2001-2011	TBDAVM	●	●	●	○	●	●	001
URVAN	E25	2001-2011	TCS	●	●	●	●	●	●	001
URVAN	E25	2001-2011	TRANSMISSION	●	●	●	○	●	○	001, 002
Venucia D50	S10C	2012	ABS	●	●	●	○	●	●	001
Venucia D50	S10C	2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
Venucia D50	S10C	2012	BCM	●	●	●	○	●	●	001, 002
Venucia D50	S10C	2012	ENGINE	●	●	●	※	●	●	001
Venucia D50	S10C	2012	EPS	●	●	●	○	●	○	002
Venucia D50	S10C	2012	IPDM_ER	○	●	●	○	●	●	002
Venucia D50	S10C	2012	METER	○	●	●	○	●	○	002
Venucia D50	S10C	2012	TRANSMISSION	●	●	●	○	●	○	001, 002
VERSA Hatchback	C11	2007-2012	ABS	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
VERSA Hatchback	C11	2007-2012	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
VERSA Hatchback	C11	2007-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
VERSA Hatchback	C11	2007-2012	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
VERSA Hatchback	C11	2007-2012	AUTO_DRIVE_POS	●	●	●	○	●	●	001
VERSA Hatchback	C11	2007-2012	BCM	●	●	●	○	●	●	001, 002
VERSA Hatchback	C11	2007-2012	ENGINE	●	●	●	※	●	●	001
VERSA Hatchback	C11	2007-2012	EPS	●	●	●	○	●	○	002
VERSA Hatchback	C11	2007-2012	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
VERSA Hatchback	C11	2007-2012	IPDM_ER	○	●	●	○	●	●	002
VERSA Hatchback	C11	2007-2012	METER	○	●	●	○	●	○	002
VERSA Hatchback	C11	2007-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001
VERSA Hatchback	C11	2007-2012	SBLIND_CAMERA	●	○	○	○	●	○	001
VERSA Hatchback	C11	2007-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
VERSA Sedan	SC11	2007-2011	ABS	●	●	●	○	●	●	001
VERSA Sedan	SC11	2007-2011	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
VERSA Sedan	SC11	2007-2011	AIRBAG	●	●	●	●	●	○	003, 005, 008
VERSA Sedan	SC11	2007-2011	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
VERSA Sedan	SC11	2007-2011	AUTO_DRIVE_POS	●	●	●	○	●	●	001
VERSA Sedan	SC11	2007-2011	BCM	●	●	●	○	●	●	001, 002
VERSA Sedan	SC11	2007-2011	ENGINE	●	●	●	※	●	●	001
VERSA Sedan	SC11	2007-2011	EPS	●	●	●	○	●	○	002
VERSA Sedan	SC11	2007-2011	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
VERSA Sedan	SC11	2007-2011	IPDM_ER	○	●	●	○	●	●	002
VERSA Sedan	SC11	2007-2011	METER	○	●	●	○	●	○	002
VERSA Sedan	SC11	2007-2011	REARVIEW_CAMERA	●	○	○	○	●	○	001
VERSA Sedan	SC11	2007-2011	SBLIND_CAMERA	●	○	○	○	●	○	001
VERSA Sedan	SC11	2007-2011	TRANSMISSION	●	●	●	○	●	○	001, 002
VERSA Sedan	N17	2012	ABS	●	●	●	○	●	●	001
VERSA Sedan	N17	2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
VERSA Sedan	N17	2012	BCM	●	●	●	○	●	●	001, 002
VERSA Sedan	N17	2012	ENGINE	●	●	●	※	●	●	001
VERSA Sedan	N17	2012	EPS	●	●	●	○	●	○	002
VERSA Sedan	N17	2012	IPDM_ER	○	●	●	○	●	●	002
VERSA Sedan	N17	2012	METER	○	●	●	○	●	○	002
VERSA Sedan	N17	2012	TRANSMISSION	●	●	●	○	●	○	001, 002
Versa/TIIDA Sedan	N17	2011	ABS	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
Versa/TIIDA Sedan	N17	2011	AIRBAG	●	●	●	●	●	○	003, 005, 008
Versa/TIIDA Sedan	N17	2011	BCM	●	●	●	○	●	●	001, 002
Versa/TIIDA Sedan	N17	2011	ENGINE	●	●	●	※	●	●	001
Versa/TIIDA Sedan	N17	2011	EPS	●	●	●	○	●	○	002
Versa/TIIDA Sedan	N17	2011	IPDM_ER	○	●	●	○	●	●	002
Versa/TIIDA Sedan	N17	2011	METER	○	●	●	○	●	○	002
Versa/TIIDA Sedan	N17	2011	SONAR	●	●	●	○	●	●	○
Versa/TIIDA Sedan	N17	2011	TRANSMISSION	●	●	●	○	●	○	001, 002
WINGROAD	Y10	ALL	ABS	●	●	●	○	●	●	001
WINGROAD	Y10	ALL	ACM	●	●	●	○	●	○	○
WINGROAD	Y10	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
WINGROAD	Y10	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
WINGROAD	Y10	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
WINGROAD	Y10	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
WINGROAD	Y10	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
WINGROAD	Y10	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
WINGROAD	Y10	ALL	ASCD	○	●	●	○	●	○	○
WINGROAD	Y10	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
WINGROAD	Y10	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
WINGROAD	Y10	ALL	BCM	●	●	●	○	●	●	001, 002
WINGROAD	Y10	ALL	DIFF_LOCK	●	●	●	○	●	○	○
WINGROAD	Y10	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
WINGROAD	Y10	ALL	DIU	●	●	●	○	●	○	○
WINGROAD	Y10	ALL	ENGINE	●	●	●	※	●	●	001
WINGROAD	Y10	ALL	EPS	●	●	●	○	●	○	002
WINGROAD	Y10	ALL	E_4WD	●	●	●	○	●	●	002
WINGROAD	Y10	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
WINGROAD	Y10	ALL	HVAC	●	●	●	○	●	●	001
WINGROAD	Y10	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
WINGROAD	Y10	ALL	IPDM_ER	○	●	●	○	●	●	002
WINGROAD	Y10	ALL	IVMS	●	●	●	○	●	○	○
WINGROAD	Y10	ALL	LDW	●	●	●	○	●	●	001
WINGROAD	Y10	ALL	METER	○	●	●	○	●	○	002
WINGROAD	Y10	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
WINGROAD	Y10	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
WINGROAD	Y10	ALL	MULTI_AV	○	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
WINGROAD	Y10	ALL	NATS_IMM	○	●	●	○	○	○	004, 006
WINGROAD	Y10	ALL	RASHICAS	●	●	●	○	●	●	○
WINGROAD	Y10	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
WINGROAD	Y10	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
WINGROAD	Y10	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
WINGROAD	Y10	ALL	SONAR	●	●	●	○	●	●	○
WINGROAD	Y10	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
WINGROAD	Y10	ALL	TBDAVM	●	●	●	○	●	●	001
WINGROAD	Y10	ALL	TCS	●	●	●	●	●	●	001
WINGROAD	Y10	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
WINGROAD	Y11	ALL	ABS	●	●	●	○	●	●	001
WINGROAD	Y11	ALL	ACM	●	●	●	○	●	○	○
WINGROAD	Y11	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
WINGROAD	Y11	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
WINGROAD	Y11	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
WINGROAD	Y11	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
WINGROAD	Y11	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
WINGROAD	Y11	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
WINGROAD	Y11	ALL	ASCD	○	●	●	○	●	○	○
WINGROAD	Y11	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
WINGROAD	Y11	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
WINGROAD	Y11	ALL	BCM	●	●	●	○	●	●	001, 002
WINGROAD	Y11	ALL	DIFF_LOCK	●	●	●	○	●	○	○
WINGROAD	Y11	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
WINGROAD	Y11	ALL	DIU	●	●	●	○	●	○	○
WINGROAD	Y11	ALL	ENGINE	●	●	●	※	●	●	001
WINGROAD	Y11	ALL	EPS	●	●	●	○	●	○	002
WINGROAD	Y11	ALL	E_4WD	●	●	●	○	●	●	002
WINGROAD	Y11	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
WINGROAD	Y11	ALL	HVAC	●	●	●	○	●	●	001
WINGROAD	Y11	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
WINGROAD	Y11	ALL	IPDM_ER	○	●	●	○	●	●	002
WINGROAD	Y11	ALL	IVMS	●	●	●	○	●	○	○
WINGROAD	Y11	ALL	LDW	●	●	●	○	●	●	001
WINGROAD	Y11	ALL	METER	○	●	●	○	●	○	002
WINGROAD	Y11	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
WINGROAD	Y11	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
WINGROAD	Y11	ALL	MULTI_AV	○	●	●	○	●	○	○
WINGROAD	Y11	ALL	NATS_IMM	○	●	●	○	○	○	004, 006
WINGROAD	Y11	ALL	RASHICAS	●	●	●	○	●	●	○
WINGROAD	Y11	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
WINGROAD	Y11	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
WINGROAD	Y11	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
WINGROAD	Y11	ALL	SONAR	●	●	●	○	●	●	○
WINGROAD	Y11	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
WINGROAD	Y11	ALL	TBDAVM	●	●	●	○	●	●	001
WINGROAD	Y11	ALL	TCS	●	●	●	●	●	●	001
WINGROAD	Y11	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
WINGROAD	Y12	2005-2012	ABS	●	●	●	○	●	●	001
WINGROAD	Y12	2005-2012	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
WINGROAD	Y12	2005-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
WINGROAD	Y12	2005-2012	BCM	●	●	●	○	●	●	001, 002
WINGROAD	Y12	2005-2012	ENGINE	●	●	●	※	●	●	001
WINGROAD	Y12	2005-2012	EPS	●	●	●	○	●	○	002
WINGROAD	Y12	2005-2012	E_4WD	●	●	●	○	●	●	002
WINGROAD	Y12	2005-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
WINGROAD	Y12	2005-2012	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
WINGROAD	Y12	2005-2012	IPDM_ER	○	●	●	○	●	●	002
WINGROAD	Y12	2005-2012	METER	○	●	●	○	●	○	002
WINGROAD	Y12	2005-2012	MULTI_AV	○	●	●	○	●	○	○
WINGROAD	Y12	2005-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001
WINGROAD	Y12	2005-2012	SBLIND_CAMERA	●	○	○	○	●	○	001
WINGROAD	Y12	2005-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
XTERRA	WD22	ALL	ABS	●	●	●	○	●	●	001
XTERRA	WD22	ALL	ACM	●	●	●	○	●	○	○
XTERRA	WD22	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
XTERRA	WD22	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
XTERRA	WD22	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008
XTERRA	WD22	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
XTERRA	WD22	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
XTERRA	WD22	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
XTERRA	WD22	ALL	ASCD	○	●	●	○	●	○	○

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
XTERRA	WD22	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
XTERRA	WD22	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
XTERRA	WD22	ALL	BCM	●	●	●	○	●	●	001, 002
XTERRA	WD22	ALL	DIFF_LOCK	●	●	●	○	●	○	○
XTERRA	WD22	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
XTERRA	WD22	ALL	DIU	●	●	●	○	●	○	○
XTERRA	WD22	ALL	ENGINE	●	●	●	※	●	●	001
XTERRA	WD22	ALL	EPS	●	●	●	○	●	○	002
XTERRA	WD22	ALL	E_4WD	●	●	●	○	●	●	002
XTERRA	WD22	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
XTERRA	WD22	ALL	HVAC	●	●	●	○	●	●	001
XTERRA	WD22	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
XTERRA	WD22	ALL	IPDM_ER	○	●	●	○	●	●	002
XTERRA	WD22	ALL	IVMS	●	●	●	○	●	○	○
XTERRA	WD22	ALL	LDW	●	●	●	○	●	●	001
XTERRA	WD22	ALL	METER	○	●	●	○	●	○	002
XTERRA	WD22	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
XTERRA	WD22	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
XTERRA	WD22	ALL	MULTI_AV	○	●	●	○	●	○	○
XTERRA	WD22	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
XTERRA	WD22	ALL	RASHICAS	●	●	●	○	●	●	○
XTERRA	WD22	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
XTERRA	WD22	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
XTERRA	WD22	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
XTERRA	WD22	ALL	SONAR	●	●	●	○	●	●	○
XTERRA	WD22	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
XTERRA	WD22	ALL	TBDAVM	●	●	●	○	●	●	001
XTERRA	WD22	ALL	TCS	●	●	●	●	●	●	001
XTERRA	WD22	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
XTERRA	N50	2005-2012	ABS	●	●	●	○	●	●	001
XTERRA	N50	2005-2012	ACM	●	●	●	○	●	○	○
XTERRA	N50	2005-2012	ACTIVE_SUS	●	●	●	●	●	●	001
XTERRA	N50	2005-2012	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
XTERRA	N50	2005-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008
XTERRA	N50	2005-2012	AIR_LEVELIZER	●	●	●	○	●	●	001
XTERRA	N50	2005-2012	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
XTERRA	N50	2005-2012	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
XTERRA	N50	2005-2012	ASCD	○	●	●	○	●	○	○
XTERRA	N50	2005-2012	AUTO_DRIVE_POS	●	●	●	○	●	●	001
XTERRA	N50	2005-2012	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
XTERRA	N50	2005-2012	BCM	●	●	●	○	●	●	001, 002
XTERRA	N50	2005-2012	DIFF_LOCK	●	●	●	○	●	○	○
XTERRA	N50	2005-2012	DISTANCE_CONTROL	●	●	●	○	●	○	○
XTERRA	N50	2005-2012	DIU	●	●	●	○	●	○	○
XTERRA	N50	2005-2012	ENGINE	●	●	●	※	●	●	001
XTERRA	N50	2005-2012	EPS	●	●	●	○	●	○	002
XTERRA	N50	2005-2012	E_4WD	●	●	●	○	●	●	002
XTERRA	N50	2005-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
XTERRA	N50	2005-2012	HVAC	●	●	●	○	●	●	001
XTERRA	N50	2005-2012	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
XTERRA	N50	2005-2012	IPDM_ER	○	●	●	○	●	●	002
XTERRA	N50	2005-2012	IVMS	●	●	●	○	●	○	○
XTERRA	N50	2005-2012	LDW	●	●	●	○	●	●	001
XTERRA	N50	2005-2012	METER	○	●	●	○	●	○	002
XTERRA	N50	2005-2012	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
XTERRA	N50	2005-2012	MOTOR_ASSIST	○	●	●	○	●	○	001
XTERRA	N50	2005-2012	MULTI_AV	○	●	●	○	●	○	○
XTERRA	N50	2005-2012	NATS_IMMU	○	●	●	○	○	○	004, 006
XTERRA	N50	2005-2012	RASHICAS	●	●	●	○	●	●	○
XTERRA	N50	2005-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001
XTERRA	N50	2005-2012	S/BLIND_CAMERA	●	○	○	○	●	○	001
XTERRA	N50	2005-2012	SMART_ENTRANCE	○	●	●	○	●	●	002
XTERRA	N50	2005-2012	SONAR	●	●	●	○	●	●	○
XTERRA	N50	2005-2012	TBDADAS_ICC	●	●	●	○	●	●	001, 002
XTERRA	N50	2005-2012	TBDAVM	●	●	●	○	●	●	001
XTERRA	N50	2005-2012	TCS	●	●	●	●	●	●	001
XTERRA	N50	2005-2012	TRANSMISSION	●	●	●	○	●	○	001, 002
X-TRAIL	T30	ALL	ABS	●	●	●	○	●	●	001
X-TRAIL	T30	ALL	ACM	●	●	●	○	●	○	○
X-TRAIL	T30	ALL	ACTIVE_SUS	●	●	●	●	●	●	001
X-TRAIL	T30	ALL	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
X-TRAIL	T30	ALL	AIRBAG	●	●	●	●	●	○	003, 005, 008

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
X-TRAIL	T30	ALL	AIR_LEVELIZER	●	●	●	○	●	●	001
X-TRAIL	T30	ALL	AIR_PRESSURE_MONITOR	●	●	●	○	●	●	001
X-TRAIL	T30	ALL	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
X-TRAIL	T30	ALL	ASCD	○	●	●	○	●	○	○
X-TRAIL	T30	ALL	AUTO_DRIVE_POS	●	●	●	○	●	●	001
X-TRAIL	T30	ALL	AUTO_SLIDE_DOOR	●	●	●	○	●	○	○
X-TRAIL	T30	ALL	BCM	●	●	●	○	●	●	001, 002
X-TRAIL	T30	ALL	DIFF_LOCK	●	●	●	○	●	○	○
X-TRAIL	T30	ALL	DISTANCE_CONTROL	●	●	●	○	●	○	○
X-TRAIL	T30	ALL	DIU	●	●	●	○	●	○	○
X-TRAIL	T30	ALL	ENGINE	●	●	●	※	●	●	001
X-TRAIL	T30	ALL	EPS	●	●	●	○	●	○	002
X-TRAIL	T30	ALL	E_4WD	●	●	●	○	●	●	002
X-TRAIL	T30	ALL	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
X-TRAIL	T30	ALL	HVAC	●	●	●	○	●	●	001
X-TRAIL	T30	ALL	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
X-TRAIL	T30	ALL	IPDM_ER	○	●	●	○	●	●	002
X-TRAIL	T30	ALL	IVMS	●	●	●	○	●	○	○
X-TRAIL	T30	ALL	LDW	●	●	●	○	●	●	001
X-TRAIL	T30	ALL	METER	○	●	●	○	●	○	002
X-TRAIL	T30	ALL	MOTORO_CONTROL_UNIT	●	●	●	○	●	○	001
X-TRAIL	T30	ALL	MOTOR_ASSIST	○	●	●	○	●	○	001
X-TRAIL	T30	ALL	MULTI_AV	○	●	●	○	●	○	○
X-TRAIL	T30	ALL	NATS_IMMU	○	●	●	○	○	○	004, 006
X-TRAIL	T30	ALL	RASHICAS	●	●	●	○	●	●	○
X-TRAIL	T30	ALL	REARVIEW_CAMERA	●	○	○	○	●	○	001
X-TRAIL	T30	ALL	S/BLIND_CAMERA	●	○	○	○	●	○	001
X-TRAIL	T30	ALL	SMART_ENTRANCE	○	●	●	○	●	●	002
X-TRAIL	T30	ALL	SONAR	●	●	●	○	●	●	○
X-TRAIL	T30	ALL	TBDADAS_ICC	●	●	●	○	●	●	001, 002
X-TRAIL	T30	ALL	TBDAVM	●	●	●	○	●	●	001
X-TRAIL	T30	ALL	TCS	●	●	●	●	●	●	001
X-TRAIL	T30	ALL	TRANSMISSION	●	●	●	○	●	○	001, 002
X-TRAIL	T31	2007-2012	ABS	●	●	●	○	●	●	001
X-TRAIL	T31	2007-2012	ADAPTIVE_LIGHT	●	●	●	○	●	●	001
X-TRAIL	T31	2007-2012	AIRBAG	●	●	●	●	●	○	003, 005, 008

Vehicle Name	Type	YEAR	System Name	Ecu Info.	Read Codes	Erase Codes	Freeze Data	Live Data	Active Test	Special Function
X-TRAIL	T31	2007-2012	ALL_MODE_AWD4WD	●	●	●	○	●	●	001
X-TRAIL	T31	2007-2012	AUTO_DRIVE_POS	●	●	●	○	●	●	001
X-TRAIL	T31	2007-2012	BCM	●	●	●	○	●	●	001, 002
X-TRAIL	T31	2007-2012	ENGINE	●	●	●	※	●	●	001
X-TRAIL	T31	2007-2012	EPS	●	●	●	○	●	○	002
X-TRAIL	T31	2007-2012	HEAD_LAMP_LEVELIZER	●	●	●	○	●	●	001
X-TRAIL	T31	2007-2012	INTELLIGENT_KEY	●	●	●	○	●	●	001, 002
X-TRAIL	T31	2007-2012	IPDM_ER	○	●	●	○	●	●	002
X-TRAIL	T31	2007-2012	METER	○	●	●	○	●	○	002
X-TRAIL	T31	2007-2012	MULTI_AV	○	●	●	○	●	○	○
X-TRAIL	T31	2007-2012	REARVIEW_CAMERA	●	○	○	○	●	○	001
X-TRAIL	T31	2007-2012	SBLIND_CAMERA	●	○	○	○	●	○	001
X-TRAIL	T31	2007-2012	AVM	●	●	●	○	●	●	001
X-TRAIL	T31	2007-2012	TRANSMISSION	●	●	●	○	●	○	001, 002

Special_Function

Index	Special Function Name	Index	Special Function Name
0001	work support	0002	CAN DIAG SUPPORT MNTR
0003	ECU DISCRIMINATED NO	0004	C/U INITIALIZATION
0005	READ CODES [PAST]	0006	SELF FOUNCTION CHECK
0007	CALIBRATION DATA	0008	TROUBLE DIAG RECORD