

How to read this list:	
Mark	Description
X	Function is supported.
*	Function is added or developed newly

Function List													
Automaker:				HONDA									
Software Version:				V6.2									
Automaker	Region	Year	Model	Vehicle Type	ECU Type	System	ECU Supplier	Sys. Info.	Read Code	Clear Code	Data Stream	Actuations	Special Functions
HONDA	CANADA	1996-2011	All	All	All	PGM FI		X	X	X	X	X	1.TP sensor reset 2.REPLACE ECM/PCM
HONDA	CANADA	1996-2011	All	All	All	AT		X	X	X	X		
HONDA	CANADA	1996-2011	All	All	All	ABS TCS VSA		X	X	X	X	X	All sensor calibration
HONDA	CANADA	1996-2011	All	All	All	SRS		X	X	X	X	X	OPDS init
HONDA	CANADA	1996-2011	All	All	All	EPS		X	X	X	X		
HONDA	CANADA	1996-2011	All	All	All	BODY(Gauges)		X	X	X	X	X	Gauge Control Module Replacement
HONDA	CANADA	1996-2011	All	All	All	BODY(Lighting)		X	X	X	X	X	
HONDA	CANADA	1996-2011	All	All	All	BODY(Door Locks)		X	X	X	X	X	
HONDA	CANADA	1996-2011	All	All	All	BODY(Keyless)		X	X	X	X	X	Keyless Check
HONDA	CANADA	1996-2011	All	All	All	BODY(Power Windows)		X	X	X	X	X	1.Power Window Reset for Driver side 2.Power Window Reset for Passenger side 3.Power Window Reset for Left side 4.Power Window Reset for Right side
HONDA	CANADA	1996-2011	All	All	All	BODY(Wiper)		X	X	X	X	X	
HONDA	CANADA	1996-2011	All	All	All	BODY(Security)		X	X	X	X	X	
HONDA	CANADA	1996-2011	All	All	All	BODY(HVAC/Climate control)		X	X	X	X	X	
HONDA	CANADA	1996-2011	All	All	All	BODY(Power Sliding Door)		X	X	X	X	X	
HONDA	CANADA	1996-2011	All	All	All	BODY(Power Tailgate)		X	X	X	X	X	
HONDA	CANADA	1996-2011	All	All	All	BODY(Auto Light Leveling)		X	X	X	X	X	
HONDA	CANADA	1996-2011	All	All	All	BODY(Power Seat/Power Mirror)		X	X	X	X	X	
HONDA	CANADA	1996-2011	All	All	All	BODY(Adaptive Front Lighting)		X	X	X	X	X	
HONDA	CANADA	1996-2011	All	All	All	BODY(YOP Security)		X	X	X	X		

HONDA	CANADA	1996-2011	All	All	All	BODY(YOP ECU)		X	X	X	X		
HONDA	CANADA	1996-2011	All	All	All	BODY(Front Panel)		X	X	X	X		Front Panel Check
HONDA	CANADA	1996-2011	All	All	All	BODY(HF LINK/TEL)		X	X	X			Passcode clear
HONDA	CANADA	1996-2011	All	All	All	BODY(OnStar)		X	X	X	X	X	
HONDA	CANADA	1996-2011	All	All	All	BODY(Power Trunk Lid)		X	X	X	X	X	
HONDA	CANADA	1996-2011	All	All	All	BODY(YOP R/C ENG Starter)		X	X	X	X		
HONDA	CANADA	1996-2011	All	All	All	BODY(Parking Sensor)		X	X	X	X		
HONDA	CANADA	1996-2011	All	All	All	BODY(Auto AC Sub display)		X	X	X			
HONDA	CANADA	1996-2011	All	All	All	IMMOBI							1.Add one key 2.Rewrite keys 3.All keys lost 4.Add Keys 5.Delete Keys 6.Replace ECM/PCM
HONDA	CANADA	1996-2011	All	All	All	IMA		X	X	X	X	X	
HONDA	CANADA	1996-2011	All	All	All	TPMS		X	X	X	X		
HONDA	CANADA	1996-2011	All	All	All	SH-AWD		X	X	X	X		
HONDA	CANADA	1996-2011	All	All	All	SMART KEY		X	X	X	X		
HONDA	CANADA	2009-2011	All	All	All	ONE-PUSH START		X	X	X	X	X	
HONDA	CANADA	1996-2011	All	All	All	ATTS		X	X	X	X		
HONDA	CANADA	1996-2011	All	All	All	VTM 4		X	X	X	X		
HONDA	CANADA	1996-2011	All	All	All	BRAKE SYSTEM		X	X	X	X		
HONDA	CANADA	1996-2011	All	All	All	Active Damper System		X	X	X	X		
HONDA	EUROPE	1996-2011	All	All	All	PGM FI		X	X	X	X	X	1.TP sensor reset 2.REPLACE ECM/PCM
HONDA	EUROPE	1996-2011	All	All	All	AT		X	X	X	X		
HONDA	EUROPE	1996-2011	All	All	All	ABS TCS VSA		X	X	X	X	*	All sensor calibration
HONDA	EUROPE	1996-2011	All	All	All	SRS		X	X	X	X	*	OPDS init
HONDA	EUROPE	1996-2011	All	All	All	EPS		X	X	X	X		
HONDA	EUROPE	1996-2011	All	All	All	BODY(Gauges)		X	X	X	X	X	Gauge Control Module Replacement
HONDA	EUROPE	1996-2011	All	All	All	BODY(Lighting)		X	X	X	X	X	
HONDA	EUROPE	1996-2011	All	All	All	BODY(Door Locks)		X	X	X	X	X	
HONDA	EUROPE	1996-2011	All	All	All	BODY(Keyless)		X	X	X	X	X	Keyless Check

													1.Power Window Reset for Driver side 2.Power Window Reset for Passenger side 3.Power Window Reset for Left side 4.Power Window Reset for Right side
HONDA	EUROPE	1996-2011	All	All	All	BODY(Power Windows)		X	X	X	X	X	
HONDA	EUROPE	1996-2011	All	All	All	BODY(Wiper)		X	X	X	X	X	
HONDA	EUROPE	1996-2011	All	All	All	BODY(Security)		X	X	X	X	X	
HONDA	EUROPE	1996-2011	All	All	All	BODY(HVAC/Climate control)		X	X	X	X	X	
HONDA	EUROPE	1996-2011	All	All	All	BODY(Power Sliding Door)		X	X	X	X	X	
HONDA	EUROPE	1996-2011	All	All	All	BODY(Power Tailgate)		X	X	X	X	X	
HONDA	EUROPE	1996-2011	All	All	All	BODY(Auto Light Leveling)		X	X	X	X	X	
HONDA	EUROPE	1996-2011	All	All	All	BODY(Power Seat/Power Mirror)		X	X	X	X	X	
HONDA	EUROPE	1996-2011	All	All	All	BODY(Adaptive Front Lighting)		X	X	X	X	X	
HONDA	EUROPE	1996-2011	All	All	All	BODY(YOP Security)		X	X	X	X		
HONDA	EUROPE	1996-2011	All	All	All	BODY(YOP ECU)		X	X	X	X		
HONDA	EUROPE	1996-2011	All	All	All	BODY(Front Panel)		X	X	X	X		Front Panel Check
HONDA	EUROPE	1996-2011	All	All	All	BODY(HF LINK/TEL)		X	X	X			Passcode clear
HONDA	EUROPE	1996-2011	All	All	All	BODY(OnStar)		X	X	X	X	X	
HONDA	EUROPE	1996-2011	All	All	All	BODY(Power Trunk Lid)		X	X	X	X	X	
HONDA	EUROPE	1996-2011	All	All	All	BODY(YOP R/C ENG Starter)		X	X	X	X		
HONDA	EUROPE	1996-2011	All	All	All	BODY(Parking Sensor)		X	X	X	X		
HONDA	EUROPE	1996-2011	All	All	All	BODY(Auto AC Sub display)		X	X	X			
HONDA	EUROPE	1996-2011	All	All	All	IMMOBI							1.Add one key 2.Rewrite keys 3.All keys lost 4.Add Keys 5.Delete Keys 6.Replace ECM/PCM
HONDA	EUROPE	1996-2011	All	All	All	IMA		X	X	X	X	X	
HONDA	EUROPE	1996-2011	All	All	All	DIESEL		X	X	X	X		ECM Reset
HONDA	EUROPE	1996-2011	All	All	All	SH-AWD		X	X	X	X		
HONDA	EUROPE	1996-2011	All	All	All	4WS		X	X	X	X		
HONDA	EUROPE	1996-2011	All	All	All	ATTS		X	X	X	X		
HONDA	EUROPE	1996-2011	All	All	All	DRIVING SUPPORT		X	X	X	X		
HONDA	EUROPE	1996-2011	All	All	All	i-SHIFT		X	X	X	X		
HONDA	EUROPE	1996-2011	All	All	All	BRAKE SYSTEM		X	X	X	X		
HONDA	EUROPE	1996-2011	All	All	All	POP-UP HOOD		X	X	X	X		

HONDA	GENERAL	1996-2011	All	All	All	PGM FI		X	X	X	X	X	1.TP sensor reset 2.REPLACE ECM/PCM
HONDA	GENERAL	1996-2011	All	All	All	AT		X	X	X	X		
HONDA	GENERAL	1996-2011	All	All	All	ABS TCS VSA		X	X	X	X	X	All sensor calibration
HONDA	GENERAL	1996-2011	All	All	All	SRS		X	X	X	X	X	OPDS init
HONDA	GENERAL	1996-2011	All	All	All	EPS		X	X	X	X		
HONDA	GENERAL	1996-2011	All	All	All	BODY(Gauges)		X	X	X	X	X	Gauge Control Module Replacement
HONDA	GENERAL	1996-2011	All	All	All	BODY(Lighting)		X	X	X	X	X	
HONDA	GENERAL	1996-2011	All	All	All	BODY(Door Locks)		X	X	X	X	X	
HONDA	GENERAL	1996-2011	All	All	All	BODY(Keyless)		X	X	X	X	X	Keyless Check
HONDA	GENERAL	1996-2011	All	All	All	BODY(Power Windows)		X	X	X	X	X	1.Power Window Reset for Driver side 2.Power Window Reset for Passenger side 3.Power Window Reset for Left side 4.Power Window Reset for Right side
HONDA	GENERAL	1996-2011	All	All	All	BODY(Wiper)		X	X	X	X	X	
HONDA	GENERAL	1996-2011	All	All	All	BODY(Security)		X	X	X	X	X	
HONDA	GENERAL	1996-2011	All	All	All	BODY(HVAC/Climate control)		X	X	X	X	X	
HONDA	GENERAL	1996-2011	All	All	All	BODY(Power Sliding Door)		X	X	X	X	X	
HONDA	GENERAL	1996-2011	All	All	All	BODY(Power Tailgate)		X	X	X	X	X	
HONDA	GENERAL	1996-2011	All	All	All	BODY(Auto Light Leveling)		X	X	X	X	X	
HONDA	GENERAL	1996-2011	All	All	All	BODY(Power Seat/Power Mirror)		X	X	X	X	X	
HONDA	GENERAL	1996-2011	All	All	All	BODY(Adaptive Front Lighting)		X	X	X	X	X	
HONDA	GENERAL	1996-2011	All	All	All	BODY(YOP Security)		X	X	X	X		
HONDA	GENERAL	1996-2011	All	All	All	BODY(YOP ECU)		X	X	X	X		
HONDA	GENERAL	1996-2011	All	All	All	BODY(Front Panel)		X	X	X	X		Front Panel Check
HONDA	GENERAL	1996-2011	All	All	All	BODY(HF LINK/TEL)		X	X	X			Passcode clear
HONDA	GENERAL	1996-2011	All	All	All	BODY(OnStar)		X	X	X	X	X	
HONDA	GENERAL	1996-2011	All	All	All	BODY(Power Trunk Lid)		X	X	X	X	X	
HONDA	GENERAL	1996-2011	All	All	All	BODY(YOP R/C ENG Starter)		X	X	X	X		
HONDA	GENERAL	1996-2011	All	All	All	BODY(Parking Sensor)		X	X	X	X		
HONDA	GENERAL	1996-2011	All	All	All	BODY(Auto AC Sub display)		X	X	X			

													1.Add one key 2.Rewrite keys 3.All keys lost 4.Add Keys 5.Delete Keys 6.Replace ECM/PCM
HONDA	GENERAL	1996-2011	All	All	All	IMMOBI							
HONDA	GENERAL	1996-2011	All	All	All	IMA		X	X	X	X	X	
HONDA	GENERAL	1996-2011	All	All	All	DIESEL		X	X	X	X		ECM Reset
HONDA	GENERAL	1996-2011	All	All	All	TPMS		X	X	X	X		
HONDA	GENERAL	1996-2011	All	All	All	SH-AWD		X	X	X	X		
HONDA	GENERAL	1996-2011	All	All	All	SMART KEY		X	X	X	X		
HONDA	GENERAL	2009-2011	All	All	All	ONE-PUSH START		X	X	X	X	X	
HONDA	GENERAL	1996-2011	All	All	All	4WS		X	X	X	X		
HONDA	GENERAL	1996-2011	All	All	All	ATTS		X	X	X	X		
HONDA	GENERAL	1996-2011	All	All	All	VTM 4		X	X	X	X		
HONDA	GENERAL	1996-2011	All	All	All	BRAKE SYSTEM		X	X	X	X		
HONDA	GENERAL	1996-2011	All	All	All	POP-UP HOOD		X	X	X	X		
HONDA	GENERAL	1996-2011	All	All	All	Active Damper System		X	X	X	X		
HONDA	JAPAN	1996-2011	All	All	All	PGM FI		X	X	X	X	X	1.TP sensor reset 2.REPLACE ECM/PCM
HONDA	JAPAN	1996-2011	All	All	All	AT		X	X	X	X		
HONDA	JAPAN	1996-2011	All	All	All	ABS TCS VSA		X	X	X	X	X	All sensor calibration
HONDA	JAPAN	1996-2011	All	All	All	SRS		X	X	X	X	X	OPDS init
HONDA	JAPAN	1996-2011	All	All	All	EPS		X	X	X	X		
HONDA	JAPAN	1996-2011	All	All	All	BODY(Gauges)		X	X	X	X	X	Gauge Control Module Replacement
HONDA	JAPAN	1996-2011	All	All	All	BODY(Lighting)		X	X	X	X	X	
HONDA	JAPAN	1996-2011	All	All	All	BODY(Door Locks)		X	X	X	X	X	
HONDA	JAPAN	1996-2011	All	All	All	BODY(Keyless)		X	X	X	X	X	Keyless Check
HONDA	JAPAN	1996-2011	All	All	All	BODY(Power Windows)		X	X	X	X	X	1.Power Window Reset for Driver side 2.Power Window Reset for Passenger side 3.Power Window Reset for Left side 4.Power Window Reset for Right side
HONDA	JAPAN	1996-2011	All	All	All	BODY(Wiper)		X	X	X	X	X	
HONDA	JAPAN	1996-2011	All	All	All	BODY(Security)		X	X	X	X	X	
HONDA	JAPAN	1996-2011	All	All	All	BODY(HVAC/Climate control)		X	X	X	X	X	
HONDA	JAPAN	1996-2011	All	All	All	BODY(Power Sliding Door)		X	X	X	X	X	

HONDA	JAPAN	1996-2011	All	All	All	BODY(Power Tailgate)		X	X	X	X	X	
HONDA	JAPAN	1996-2011	All	All	All	BODY(Auto Light Leveling)		X	X	X	X	X	
HONDA	JAPAN	1996-2011	All	All	All	BODY(Power Seat/Power Mirror)		X	X	X	X	X	
HONDA	JAPAN	1996-2011	All	All	All	BODY(Adaptive Front Lighting)		X	X	X	X	X	
HONDA	JAPAN	1996-2011	All	All	All	BODY(YOP Security)		X	X	X	X		
HONDA	JAPAN	1996-2011	All	All	All	BODY(YOP ECU)		X	X	X	X		
HONDA	JAPAN	1996-2011	All	All	All	BODY(Front Panel)		X	X	X	X		Front Panel Check
HONDA	JAPAN	1996-2011	All	All	All	BODY(HF LINK/TEL)		X	X	X			Passcode clear
HONDA	JAPAN	1996-2011	All	All	All	BODY(OnStar)		X	X	X	X	X	
HONDA	JAPAN	1996-2011	All	All	All	BODY(Power Trunk Lid)		X	X	X	X	X	
HONDA	JAPAN	1996-2011	All	All	All	BODY(YOP R/C ENG Starter)		X	X	X	X		
HONDA	JAPAN	1996-2011	All	All	All	BODY(Parking Sensor)		X	X	X	X		
HONDA	JAPAN	1996-2011	All	All	All	BODY(Auto AC Sub display)		X	X	X			
HONDA	JAPAN	1996-2011	All	All	All	IMMOBI							1.Add one key 2.Rewrite keys 3.All keys lost 4.Add Keys 5.Delete Keys 6.Replace ECM/PCM
HONDA	JAPAN	1996-2011	All	All	All	IMA		X	X	X	X	X	
HONDA	JAPAN	1996-2011	All	All	All	SH-AWD		X	X	X	X		
HONDA	JAPAN	1996-2011	All	All	All	SMART KEY		X	X	X	X		
HONDA	JAPAN	1996-2011	All	All	All	4WS		X	X	X	X		
HONDA	JAPAN	1996-2011	All	All	All	ATTS		X	X	X	X		
HONDA	JAPAN	1996-2011	All	All	All	VTM 4		X	X	X	X		
HONDA	JAPAN	1996-2011	All	All	All	DRIVING SUPPORT		X	X	X	X		
HONDA	JAPAN	1996-2011	All	All	All	BRAKE SYSTEM		X	X	X	X		
HONDA	JAPAN	1996-2011	All	All	All	POP-UP HOOD		X	X	X	X		
HONDA	USA	1996-2011	All	All	All	PGM FI		X	X	X	X	X	1.TP sensor reset 2.REPLACE ECM/PCM
HONDA	USA	1996-2011	All	All	All	AT		X	X	X	X		
HONDA	USA	1996-2011	All	All	All	ABS TCS VSA		X	X	X	X	X	All sensor calibration
HONDA	USA	1996-2011	All	All	All	SRS		X	X	X	X	X	OPDS init
HONDA	USA	1996-2011	All	All	All	EPS		X	X	X	X		
HONDA	USA	1996-2011	All	All	All	BODY(Gauges)		X	X	X	X	X	Gauge Control Module Replacement

HONDA	USA	1996-2011	All	All	All	BODY(Lighting)		X	X	X	X	X	
HONDA	USA	1996-2011	All	All	All	BODY(Door Locks)		X	X	X	X	X	
HONDA	USA	1996-2011	All	All	All	BODY(Keyless)		X	X	X	X	X	Keyless Check
HONDA	USA	1996-2011	All	All	All	BODY(Power Windows)		X	X	X	X	X	1.Power Window Reset for Driver side 2.Power Window Reset for Passenger side 3.Power Window Reset for Left side 4.Power Window Reset for Right side
HONDA	USA	1996-2011	All	All	All	BODY(Wiper)		X	X	X	X	X	
HONDA	USA	1996-2011	All	All	All	BODY(Security)		X	X	X	X	X	
HONDA	USA	1996-2011	All	All	All	BODY(HVAC/Climate control)		X	X	X	X	X	
HONDA	USA	1996-2011	All	All	All	BODY(Power Sliding Door)		X	X	X	X	X	
HONDA	USA	1996-2011	All	All	All	BODY(Power Tailgate)		X	X	X	X	X	
HONDA	USA	1996-2011	All	All	All	BODY(Auto Light Leveling)		X	X	X	X	X	
HONDA	USA	1996-2011	All	All	All	BODY(Power Seat/Power Mirror)		X	X	X	X	X	
HONDA	USA	1996-2011	All	All	All	BODY(Adaptive Front Lighting)		X	X	X	X	X	
HONDA	USA	1996-2011	All	All	All	BODY(YOP Security)		X	X	X	X		
HONDA	USA	1996-2011	All	All	All	BODY(YOP ECU)		X	X	X	X		
HONDA	USA	1996-2011	All	All	All	BODY(Front Panel)		X	X	X	X		Front Panel Check
HONDA	USA	1996-2011	All	All	All	BODY(HF LINK/TEL)		X	X	X			Passcode clear
HONDA	USA	1996-2011	All	All	All	BODY(OnStar)		X	X	X	X	X	
HONDA	USA	1996-2011	All	All	All	BODY(Power Trunk Lid)		X	X	X	X	X	
HONDA	USA	1996-2011	All	All	All	BODY(YOP R/C ENG Starter)		X	X	X	X		
HONDA	USA	1996-2011	All	All	All	BODY(Parking Sensor)		X	X	X	X		
HONDA	USA	1996-2011	All	All	All	BODY(Auto AC Sub display)		X	X	X			
HONDA	USA	1996-2011	All	All	All	IMMOBI							1.Add one key 2.Rewrite keys 3.All keys lost 4.Add Keys 5.Delete Keys 6.Replace ECM/PCM
HONDA	USA	1996-2011	All	All	All	IMA		X	X	X	X	X	
HONDA	USA	1996-2011	All	All	All	TPMS		X	X	X	X		
HONDA	USA	1996-2011	All	All	All	SH-AWD		X	X	X	X		
HONDA	USA	1996-2011	All	All	All	SMART KEY		X	X	X	X		
HONDA	USA	1996-2011	All	All	All	ONE-PUSH START		X	X	X	X	X	
HONDA	USA	1996-2011	All	All	All	ATTS		X	X	X	X		

HONDA	USA	1996-2011	All	All	All	VTM 4		X	X	X	X		
HONDA	USA	1996-2011	All	All	All	BRAKE SYSTEM		X	X	X	X		
HONDA	USA	1996-2011	All	All	All	Active Damper System		X	X	X	X		