

How to read this list:	
Mark	Description
×	Function is supported.
*	Function is added or developed newly

Function List													
Automaker:				LEXUS									
Software Version:				V5.51									
Automaker	Region	Year	Model	Vehicle Type	ECU Type	System	ECU Supplier	Sys. Info.	Read Code	Clear Code	Data Stream	Actuations	Special Functions
LEXUS	All	All	17Pin			Engine			×	×	×		
LEXUS	All	All	17Pin			AT			×	×			
LEXUS	All	All	17Pin			ABS			×	×			
LEXUS	All	All	17Pin			SRS			×	×			
LEXUS	All	All	17Pin			CC			×	×			
LEXUS	All	All	22Pin			Engine			×	×	×		
LEXUS	All	All	22Pin			AT			×	×			
LEXUS	All	All	22Pin			ABS			×	×			
LEXUS	All	All	22Pin			SRS			×	×			
LEXUS	All	All	22Pin			CC			×	×			
LEXUS	All	-0107	IS200			Engine and ECT			×	×	×	×	1. Check Mode 2. Reset Memory
LEXUS	All	-0107	IS200			ABS/VSC/TRC			×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)

SERVICE SOLUTIONS

LEXUS	A11	-0107	IS200			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	-0107	IS200			Immobiliser			×	×	×	×	1. Key Code Registration 2. Key Code Erasure 3. Auto Registration Closure
LEXUS	A11	-0107	IS200			Theft Deterrent			×	×	×	×	
LEXUS	A11	-0107	IS200			SRS Airbag			×	×			
LEXUS	A11	-0107	IS200			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	-0107	IS200			Combination Meter					×	×	
LEXUS	A11	0107-	IS200			Engine and ECT			×	×	×	×	1. Check Mode 2. Reset Memory
LEXUS	A11	0107-	IS200			ABS/VSC/TRC			×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	0107-	IS200			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	0107-	IS200			Immobiliser			×	×	×	×	1. Key Code Registration 2. Key Code Erasure 3. Auto Registration Closure
LEXUS	A11	0107-	IS200			Theft Deterrent			×	×	×	×	
LEXUS	A11	0107-	IS200			SRS Airbag			×	×			
LEXUS	A11	0107-	IS200			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	0107-	IS200			Combination Meter					×	×	

LEXUS	A11	A11	ARISTO			Engine and ECT			×	×	×	×	1. Check Mode 2. Reset Memory
LEXUS	A11	A11	ARISTO			ABS/VSC/TRC			×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	A11	ARISTO			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	A11	ARISTO			Immobiliser			×	×	×	×	1. Key Code Registration 2. Key Code Erasure 3. Auto Registration Closure
LEXUS	A11	A11	ARISTO			SRS Airbag			×	×			
LEXUS	A11	A11	ARISTO			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	A11	ARISTO			Body No. 2					×	×	
LEXUS	A11	A11	ARISTO			Driver Door			×	×	×	×	
LEXUS	A11	A11	ARISTO			Passenger Door			×	×	×	×	
LEXUS	A11	A11	ARISTO			Rear Left Door			×	×	×	×	
LEXUS	A11	A11	ARISTO			Rear Right Door			×	×	×	×	
LEXUS	A11	A11	ARISTO			Driver Seat					×	×	
LEXUS	A11	A11	ARISTO			Sliding Roof					×	×	
LEXUS	A11	A11	ARISTO			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	A11	ARISTO			Combination Meter					×	×	
LEXUS	A11	-0007	GS300			Engine and ECT			×	×	×	×	1. Check Mode 2. Reset Memory

SERVICE SOLUTIONS

LEXUS	A11	-0007	GS300			ABS/VSC/TRC			×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	-0007	GS300			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	-0007	GS300			Immobiliser			×	×	×	×	1. Key Code Registration 2. Key Code Erasure 3. Auto Registration Closure
LEXUS	A11	-0007	GS300			SRS Airbag			×	×			
LEXUS	A11	-0007	GS300			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	-0007	GS300			Body No. 2					×	×	
LEXUS	A11	-0007	GS300			Driver Door			×	×	×	×	
LEXUS	A11	-0007	GS300			Passenger Door			×	×	×	×	
LEXUS	A11	-0007	GS300			Rear Left Door			×	×	×	×	
LEXUS	A11	-0007	GS300			Rear Right Door			×	×	×	×	
LEXUS	A11	-0007	GS300			Driver Seat					×	×	
LEXUS	A11	-0007	GS300			Sliding Roof					×	×	
LEXUS	A11	-0007	GS300			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	-0007	GS300			Combination Meter					×	×	
LEXUS	A11	0007-0108	GS300			Engine and ECT			×	×	×	×	1. Check Mode 2. Reset Memory

SERVICE SOLUTIONS

LEXUS	A11	0007-0108	GS300			ABS/VSC/TRC			×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	0007-0108	GS300			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	0007-0108	GS300			Immobiliser			×	×	×	×	1. Key Code Registration 2. Key Code Erasure 3. Auto Registration Closure
LEXUS	A11	0007-0108	GS300			SRS Airbag			×	×			
LEXUS	A11	0007-0108	GS300			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	0007-0108	GS300			Body No. 2					×	×	
LEXUS	A11	0007-0108	GS300			Driver Door			×	×	×	×	
LEXUS	A11	0007-0108	GS300			Passenger Door			×	×	×	×	
LEXUS	A11	0007-0108	GS300			Rear Left Door			×	×	×	×	
LEXUS	A11	0007-0108	GS300			Rear Right Door			×	×	×	×	
LEXUS	A11	0007-0108	GS300			Driver Seat					×	×	
LEXUS	A11	0007-0108	GS300			Sliding Roof					×	×	
LEXUS	A11	0007-0108	GS300			Tilt&Telescopic			×	×	×	×	

LEXUS	A11	0007-0108	GS300			Combination Meter					×	×	
LEXUS	A11	0108-	GS300			Engine and ECT			×	×	×	×	1. Check Mode 2. Reset Memory
LEXUS	A11	0108-	GS300			ABS/VSC/TRC			×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	0108-	GS300			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	0108-	GS300			Immobiliser			×	×	×	×	1. Key Code Registration 2. Key Code Erasure 3. Auto Registration Closure
LEXUS	A11	0108-	GS300			SRS Airbag			×	×			
LEXUS	A11	0108-	GS300			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	0108-	GS300			Body No. 2					×	×	
LEXUS	A11	0108-	GS300			Driver Door			×	×	×	×	
LEXUS	A11	0108-	GS300			Passenger Door			×	×	×	×	
LEXUS	A11	0108-	GS300			Rear Left Door			×	×	×	×	
LEXUS	A11	0108-	GS300			Rear Right Door			×	×	×	×	
LEXUS	A11	0108-	GS300			Driver Seat					×	×	
LEXUS	A11	0108-	GS300			Sliding Roof					×	×	
LEXUS	A11	0108-	GS300			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	0108-	GS300			Combination Meter					×	×	
LEXUS	A11	A11	ES300			Engine and ECT			×	×	×	×	1. Check Mode 2. Reset Memory
LEXUS	A11	A11	ES300			EMS			×	×	×	×	

SERVICE SOLUTIONS

LEXUS	A11	A11	ES300			ABS/VSC/TRC			×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	A11	ES300			Immobiliser			×	×	×	×	1. Key Code Registration 2. Key Code Erasure 3. Auto Registration Closure
LEXUS	A11	A11	ES300			Theft Deterrent			×	×	×	×	
LEXUS	A11	A11	ES300			SRS Airbag			×	×			
LEXUS	A11	A11	ES300			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	A11	ES300			Driver Door			×	×	×	×	
LEXUS	A11	A11	ES300			Passenger Door			×	×	×	×	
LEXUS	A11	-0009	ES300			Engine and ECT			×	×	×	×	1. Check Mode 2. Reset Memory
LEXUS	A11	-0009	ES300			ABS/VSC/TRC			×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	-0009	ES300			SRS Airbag			×	×			
LEXUS	A11	0009-	ES300			Engine and ECT			×	×	×	×	1. Check Mode 2. Reset Memory

SERVICE SOLUTIONS

													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	0009-	ES300			ABS/VSC/TRC			×	×	×	×	
LEXUS	A11	0009-	ES300			SRS Airbag			×	×			
LEXUS	A11	-0008	LX470			Engine and ECT			×	×	×	×	1. Check Mode 2. Reset Memory
LEXUS	A11	-0008	LX470			Cruise Control			×	×	×		
LEXUS	A11	-0008	LX470			AHC			×	×	×	×	
LEXUS	A11	-0008	LX470			ABS/VSC/TRC			×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	-0008	LX470			Immobiliser			×	×	×	×	1. Key Code Registration 2. Key Code Erasure 3. Auto Registration Closure
LEXUS	A11	-0008	LX470			SRS Airbag			×	×			
LEXUS	A11	-0008	LX470			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	-0008	LX470			Driver Seat					×	×	
LEXUS	A11	-0008	LX470			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	-0008	LX470			Mirror					×	×	
LEXUS	A11	0008-	LX470			Engine and ECT			×	×	×	×	1. Check Mode 2. Reset Memory
LEXUS	A11	0008-	LX470			Cruise Control			×	×	×		

LEXUS	A11	0008-0208	LX470			AHC			×	×	×	×	
LEXUS	A11	0008-0208	LX470			ABS/VSC/TRC			×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	0008-0208	LX470			Immobiliser			×	×	×	×	1. Key Code Registration 2. Key Code Erasure 3. Auto Registration Closure
LEXUS	A11	0008-0208	LX470			SRS Airbag			×	×			
LEXUS	A11	0008-0208	LX470			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	0008-0208	LX470			Driver Seat					×	×	
LEXUS	A11	0008-0208	LX470			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	0008-0208	LX470			Mirror					×	×	
LEXUS	A11	0208-0408	LX470			Engine and ECT			×	×	×	×	1. Check Mode 2. Reset Memory
LEXUS	A11	0208-0408	LX470			Cruise Control			×	×	×		
LEXUS	A11	0208-0408	LX470			AHC			×	×	×	×	

SERVICE SOLUTIONS

LEXUS	A11	0208-0408	LX470			ABS/VSC/TRC			×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	0208-0408	LX470			VGRS			×	×	×		1. Steering Angle Adjust
LEXUS	A11	0208-0408	LX470			Immobiliser			×	×	×	×	1. Transponder Code Registration 2. Transponder Code Erasure
LEXUS	A11	0208-0408	LX470			Theft Deterrent			×	×	×	×	
LEXUS	A11	0208-0408	LX470			SRS Airbag			×	×			
LEXUS	A11	0208-0408	LX470			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	0208-0408	LX470			Body No. 2					×	×	
LEXUS	A11	0208-0408	LX470			Driver Door			×	×	×	×	
LEXUS	A11	0208-0408	LX470			Driver Seat					×	×	
LEXUS	A11	0208-0408	LX470			Sliding Roof					×	×	
LEXUS	A11	0208-0408	LX470			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	0208-0408	LX470			Mirror					×	×	
LEXUS	A11	0208-0408	LX470			Rain Sensor					×		

LEXUS	A11	0208-0408	LX470			Wiper					×	×	
LEXUS	A11	0408-	LX470			Engine and ECT			×	×	×	×	1. Check Mode 2. Reset Memory
LEXUS	A11	0408-	LX470			Cruise Control			×	×	×		
LEXUS	A11	0408-	LX470			AHC			×	×	×	×	
LEXUS	A11	0408-	LX470			ABS/VSC/TRC			×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	0408-	LX470			VGRS			×	×	×		1. Steering Angle Adjust
LEXUS	A11	0408-	LX470			Immobiliser			×	×	×	×	1. Transponder Code Registration 2. Transponder Code Erasure
LEXUS	A11	0408-	LX470			Theft Deterrent			×	×	×	×	
LEXUS	A11	0408-	LX470			SRS Airbag			×	×			
LEXUS	A11	0408-	LX470			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	0408-	LX470			Body No. 2					×	×	
LEXUS	A11	0408-	LX470			Driver Door			×	×	×	×	
LEXUS	A11	0408-	LX470			Driver Seat					×	×	
LEXUS	A11	0408-	LX470			Sliding Roof					×	×	
LEXUS	A11	0408-	LX470			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	0408-	LX470			Mirror					×	×	
LEXUS	A11	0408-	LX470			Rain Sensor					×		
LEXUS	A11	0408-	LX470			Wiper					×	×	
LEXUS	A11	A11	SC430			Engine and ECT			×	×	×	×	1. Check Mode 2. Reset Memory

LEXUS	A11	A11	SC430			ABS/VSC/TRC			×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	A11	SC430			Tire Pressure Monitor			×	×	×		
LEXUS	A11	A11	SC430			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	A11	SC430			Immobiliser			×	×	×	×	1. Transponder Code Registration 2. Transponder Code Erasure
LEXUS	A11	A11	SC430			Theft Deterrent			×	×	×	×	
LEXUS	A11	A11	SC430			SRS Airbag			×	×			
LEXUS	A11	A11	SC430			Gateway			×	×			
LEXUS	A11	A11	SC430			Body No. 2					×	×	
LEXUS	A11	A11	SC430			Body No. 3					×	×	
LEXUS	A11	A11	SC430			Body No. 4			×	×	×	×	
LEXUS	A11	A11	SC430			Body No. 5			×	×	×	×	
LEXUS	A11	A11	SC430			Driver Door			×	×	×	×	
LEXUS	A11	A11	SC430			Passenger Door			×	×	×	×	
LEXUS	A11	A11	SC430			Driver Seat					×	×	
LEXUS	A11	A11	SC430			Passenger Seat					×	×	
LEXUS	A11	A11	SC430			Retractable Hardtop			×	×	×		
LEXUS	A11	A11	SC430			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	A11	SC430			Combination Meter					×	×	
LEXUS	A11	A11	SC430			Combination Switch					×		

LEXUS	All	All	SC430			Steering Pad Switch					×		
													1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data
LEXUS	Others	All	GS300, - 0608			Engine			×	×	×	×	
													1. Check Mode 2. Reset Memory 3. A/T Code Reset 4. A/T Code Registration 5. Read Freeze Frame Data
LEXUS	Others	All	GS300, - 0608			ECT			×	×	×	×	
LEXUS	Others	All	GS300, - 0608			Cruise Control			×	×	×		
LEXUS	Others	All	GS300, - 0608			EMS			×	×	×	×	
													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	Others	All	GS300, - 0608			ABS/VSC/TRC			×	×	×	×	
LEXUS	Others	All	GS300, - 0608			Tire Pressure Monitor			×	×	×		
LEXUS	Others	All	GS300, - 0608			EMPS			×	×	×		1. Torque Sensor Adjustment

LEXUS	Others	All	GS300, - 0608			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	Others	All	GS300, - 0608			SRS Airbag			×	×			
LEXUS	Others	All	GS300, - 0608			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	Others	All	GS300, - 0608			Gateway			×	×			
LEXUS	Others	All	GS300, - 0608			Body No. 3					×	×	
LEXUS	Others	All	GS300, - 0608			Body No. 4			×	×	×	×	
LEXUS	Others	All	GS300, - 0608			Body No. 5			×	×	×	×	
LEXUS	Others	All	GS300, - 0608			Driver Door			×	×	×	×	
LEXUS	Others	All	GS300, - 0608			Passenger Door			×	×	×	×	
LEXUS	Others	All	GS300, - 0608			Rear Left Door			×	×	×	×	
LEXUS	Others	All	GS300, - 0608			Rear Right Door			×	×	×	×	
LEXUS	Others	All	GS300, - 0608			Driver Seat					×	×	
LEXUS	Others	All	GS300, - 0608			Passenger Seat					×	×	
LEXUS	Others	All	GS300, - 0608			Master Switch					×	×	
LEXUS	Others	All	GS300, - 0608			D-SEAT SW					×		

LEXUS	Others	All	GS300, - 0608			Sliding Roof					×	×	
LEXUS	Others	All	GS300, - 0608			Tilt&Telescopic			×	×	×	×	
LEXUS	Others	All	GS300, - 0608			Combination Meter					×	×	
LEXUS	Others	All	GS300, - 0608			Combination Switch					×		
LEXUS	Others	All	GS300, - 0608			Clearance Sonar			×	×			
LEXUS	Others	All	GS300, - 0608			Rain Sensor					×		
LEXUS	Others	All	GS300, - 0608			AFS			×	×	×	×	
LEXUS	Others	All	GS300, - 0608			Entry&Start			×	×	×	×	1.Key Code Erasure. 2.Key Code Registration. 3.Communication Check(Key Diagnosis Mode).
LEXUS	Others	All	GS300, - 0608			Power Source Control			×	×	×	×	
LEXUS	Others	All	GS300, - 0608			Pre-Crash			×	×	×	×	
LEXUS	MIDDLE EAST	All	GS300, - 0608			Engine			×	×	×	×	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode 7.Read Freeze Frame Data

SERVICE SOLUTIONS

LEXUS	MIDDLE EAST	A11	GS300, - 0608			ECT				×	×	×	×	1. Check Mode 2. Reset Memory 3. A/T Code Reset 4. A/T Code Registration 5. Read Freeze Frame Data
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Cruise Control				×	×	×		
LEXUS	MIDDLE EAST	A11	GS300, - 0608			EMS				×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			ABS/VSC/TRC				×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Tire Pressure Monitor				×	×	×		
LEXUS	MIDDLE EAST	A11	GS300, - 0608			EMPS				×	×	×		1. Torque Sensor Adjustment
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Air Conditioner				×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	MIDDLE EAST	A11	GS300, - 0608			SRS Airbag				×	×			
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Body				×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Gateway				×	×			
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Body No. 3						×	×	

LEXUS	MIDDLE EAST	A11	GS300, - 0608			Body No. 4			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Body No. 5			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Driver Door			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Passenger Door			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Rear Left Door			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Rear Right Door			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Driver Seat					×	×	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Passenger Seat					×	×	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Master Switch					×	×	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			D-SEAT SW					×		
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Sliding Roof					×	×	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Tilt&Telescopic			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Combination Meter					×	×	
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Combination Switch					×		
LEXUS	MIDDLE EAST	A11	GS300, - 0608			Clearance Sonar			×	×			

LEXUS	MIDDLE EAST	All	GS300, - 0608			Rain Sensor					×		
LEXUS	MIDDLE EAST	All	GS300, - 0608			AFS			×	×	×	×	
LEXUS	MIDDLE EAST	All	GS300, - 0608			Entry&Start			×	×	×	×	1.Key Code Erasure. 2.Key Code Registration. 3.Communication Check(Key Diagnosis Mode).
LEXUS	MIDDLE EAST	All	GS300, - 0608			Power Source Control			×	×	×	×	
LEXUS	Others	All	GS300, 06 08-0709			Engine			×	×	×	×	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode 7.Read Freeze Frame Data
LEXUS	Others	All	GS300, 06 08-0709			ECT			×	×	×	×	1.Check Mode 2.Reset Memory 3.A/T Code Reset 4.A/T Code Registration 5.Read Freeze Frame Data
LEXUS	Others	All	GS300, 06 08-0709			Cruise Control			×	×	×		
LEXUS	Others	All	GS300, 06 08-0709			EMS			×	×	×	×	
LEXUS	Others	All	GS300, 06 08-0709			Stabilizer			×	×	×		

													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	Others	All	GS300, 06 08-0709			ABS/VSC/TRC			×	×	×	×	
LEXUS	Others	All	GS300, 06 08-0709			Tire Pressure Monitor			×	×	×		
LEXUS	Others	All	GS300, 06 08-0709			EMPS			×	×	×		1. Torque Sensor Adjustment
LEXUS	Others	All	GS300, 06 08-0709			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	Others	All	GS300, 06 08-0709			SRS Airbag			×	×			
LEXUS	Others	All	GS300, 06 08-0709			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	Others	All	GS300, 06 08-0709			Gateway BEAN			×	×			
LEXUS	Others	All	GS300, 06 08-0709			Gateway CAN			×	×			1. Initialization
LEXUS	Others	All	GS300, 06 08-0709			Body No. 3					×	×	
LEXUS	Others	All	GS300, 06 08-0709			Body No. 4			×	×	×	×	
LEXUS	Others	All	GS300, 06 08-0709			Body No. 5			×	×	×	×	
LEXUS	Others	All	GS300, 06 08-0709			Driver Door			×	×	×	×	
LEXUS	Others	All	GS300, 06 08-0709			Passenger Door			×	×	×	×	

LEXUS	Others	All	GS300, 06 08-0709			Rear Left Door			×	×	×	×	
LEXUS	Others	All	GS300, 06 08-0709			Rear Right Door			×	×	×	×	
LEXUS	Others	All	GS300, 06 08-0709			Driver Seat					×	×	
LEXUS	Others	All	GS300, 06 08-0709			Passenger Seat					×	×	
LEXUS	Others	All	GS300, 06 08-0709			Master Switch					×	×	
LEXUS	Others	All	GS300, 06 08-0709			D-SEAT SW					×		
LEXUS	Others	All	GS300, 06 08-0709			Sliding Roof					×	×	
LEXUS	Others	All	GS300, 06 08-0709			Tilt&Telescopic			×	×	×	×	
LEXUS	Others	All	GS300, 06 08-0709			Combination Meter					×	×	
LEXUS	Others	All	GS300, 06 08-0709			Combination Switch					×		
LEXUS	Others	All	GS300, 06 08-0709			Clearance Sonar			×	×			
LEXUS	Others	All	GS300, 06 08-0709			Rain Sensor					×		
LEXUS	Others	All	GS300, 06 08-0709			AFS			×	×	×	×	
LEXUS	Others	All	GS300, 06 08-0709			Entry&Start			×	×	×	×	1.Key Code Erasure. 2.Key Code Registration. 3.Communication Check(Key Diagnosis Mode).

LEXUS	Others	All	GS300, 06 08-0709			Power Source Control			×	×	×	×	
LEXUS	Others	All	GS300, 06 08-0709			Occupant Detection			×	×	×		
LEXUS	Others	All	GS300, 06 08-0709			Pre-Crash			×	×	×	×	
LEXUS	Others	All	GS300, 06 08-0709			Gateway CAN			×	×			1. Initialization
LEXUS	MIDDLE EAST	All	GS300, 06 08-0709			Engine			×	×	×	×	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data
LEXUS	MIDDLE EAST	All	GS300, 06 08-0709			ECT			×	×	×	×	1. Check Mode 2. Reset Memory 3. A/T Code Reset 4. A/T Code Registration 5. Read Freeze Frame Data
LEXUS	MIDDLE EAST	All	GS300, 06 08-0709			Cruise Control			×	×	×		
LEXUS	MIDDLE EAST	All	GS300, 06 08-0709			EMS			×	×	×	×	
LEXUS	MIDDLE EAST	All	GS300, 06 08-0709			Stabilizer			×	×	×		

													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			ABS/VSC/TRC			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			Tire Pressure Monitor			×	×	×		
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			EMPS			×	×	×		1. Torque Sensor Adjustment
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			SRS Airbag			×	×			
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			Gateway BEAN			×	×			
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			Gateway CAN			×	×			1. Initialization
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			Body No. 3					×	×	
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			Body No. 4			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			Body No. 5			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			Driver Door			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			Passenger Door			×	×	×	×	

LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			Rear Left Door			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			Rear Right Door			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			Driver Seat					×	×	
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			Passenger Seat					×	×	
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			Master Switch					×	×	
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			D-SEAT SW					×		
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			Sliding Roof					×	×	
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			Tilt&Telescopic			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			Combination Meter					×	×	
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			Combination Switch					×		
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			Clearance Sonar			×	×			
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			Rain Sensor					×		
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			AFS			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 06 08-0709			Entry&Start			×	×	×	×	1.Key Code Erasure. 2.Key Code Registration. 3.Communication Check(Key Diagnosis Mode).

LEXUS	MIDDLE EAST	All	GS300, 06 08-0709			Power Source Control			×	×	×	×	
LEXUS	Others	All	GS300, 07 09-0808			Engine			×	×	×	×	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data
LEXUS	Others	All	GS300, 07 09-0808			ECT			×	×	×	×	1. Check Mode 2. Reset Memory 3. A/T Code Reset 4. A/T Code Registration 5. Read Freeze Frame Data
LEXUS	Others	All	GS300, 07 09-0808			Cruise Control			×	×	×		
LEXUS	Others	All	GS300, 07 09-0808			EMS			×	×	×	×	
LEXUS	Others	All	GS300, 07 09-0808			Stabilizer			×	×	×		
LEXUS	Others	All	GS300, 07 09-0808			ABS/VSC/TRC			×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	Others	All	GS300, 07 09-0808			Four Wheel Drive			×	×	×	×	1. Reset Memory

LEXUS	Others	All	GS300, 07 09-0808			Tire Pressure Monitor			×	×	×		
LEXUS	Others	All	GS300, 07 09-0808			EMPS			×	×	×		1. Torque Sensor Adjustment
LEXUS	Others	All	GS300, 07 09-0808			VGRS			×	×	×		1. Steering Angle Adjust
LEXUS	Others	All	GS300, 07 09-0808			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	Others	All	GS300, 07 09-0808			SRS Airbag			×	×			
LEXUS	Others	All	GS300, 07 09-0808			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	Others	All	GS300, 07 09-0808			Gateway BEAN			×	×			
LEXUS	Others	All	GS300, 07 09-0808			Gateway CAN			×	×			1. Initialization
LEXUS	Others	All	GS300, 07 09-0808			Body No. 3					×	×	
LEXUS	Others	All	GS300, 07 09-0808			Body No. 4			×	×	×	×	
LEXUS	Others	All	GS300, 07 09-0808			Body No. 5			×	×	×	×	
LEXUS	Others	All	GS300, 07 09-0808			Driver Door			×	×	×	×	
LEXUS	Others	All	GS300, 07 09-0808			Passenger Door			×	×	×	×	
LEXUS	Others	All	GS300, 07 09-0808			Rear Left Door			×	×	×	×	
LEXUS	Others	All	GS300, 07 09-0808			Rear Right Door			×	×	×	×	

LEXUS	Others	All	GS300, 07 09-0808			Driver Seat					×	×	
LEXUS	Others	All	GS300, 07 09-0808			Passenger Seat					×	×	
LEXUS	Others	All	GS300, 07 09-0808			Master Switch					×	×	
LEXUS	Others	All	GS300, 07 09-0808			D-SEAT SW					×		
LEXUS	Others	All	GS300, 07 09-0808			Sliding Roof					×	×	
LEXUS	Others	All	GS300, 07 09-0808			Tilt&Telescopic			×	×	×	×	
LEXUS	Others	All	GS300, 07 09-0808			Combination Meter					×	×	
LEXUS	Others	All	GS300, 07 09-0808			Combination Switch					×		
LEXUS	Others	All	GS300, 07 09-0808			Clearance Sonar			×	×			
LEXUS	Others	All	GS300, 07 09-0808			Rain Sensor					×		
LEXUS	Others	All	GS300, 07 09-0808			AFS			×	×	×	×	
LEXUS	Others	All	GS300, 07 09-0808			Entry&Start			×	×	×	×	1.Key Code Erasure. 2.Key Code Registration. 3.Communication Check(Key Diagnosis Mode).
LEXUS	Others	All	GS300, 07 09-0808			Power Source Control			×	×	×	×	
LEXUS	Others	All	GS300, 07 09-0808			Occupant Detection			×	×	×		

SERVICE SOLUTIONS

LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Engine				×	×	×	×	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			ECT				×	×	×	×	1. Check Mode 2. Reset Memory 3. A/T Code Reset 4. A/T Code Registration 5. Read Freeze Frame Data
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Cruise Control				×	×	×		
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			EMS				×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Stabilizer				×	×	×		
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			ABS/VSC/TRC				×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Tire Pressure Monitor				×	×	×		
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			EMPS				×	×	×		1. Torque Sensor Adjustment

LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			VGRS			×	×	×		1. Steering Angle Adjust
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			SRS Airbag			×	×			
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Gateway BEAN			×	×			
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Gateway CAN			×	×			1. Initialization
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Body No. 3					×	×	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Body No. 4			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Body No. 5			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Driver Door			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Passenger Door			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Rear Left Door			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Rear Right Door			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Driver Seat					×	×	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Passenger Seat					×	×	

LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Master Switch					×	×	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			D-SEAT SW					×		
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Sliding Roof					×	×	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Tilt&Telescopic			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Combination Meter					×	×	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Combination Switch					×		
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Clearance Sonar			×	×			
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Rain Sensor					×		
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			AFS			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Entry&Start			×	×	×	×	1.Key Code Erasure. 2.Key Code Registration. 3.Communication Check(Key Diagnosis Mode).
LEXUS	MIDDLE EAST	A11	GS300, 07 09-0808			Power Source Control			×	×	×	×	

SERVICE SOLUTIONS

													1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data
LEXUS	Others	All	GS300, 08 08-			Engine			×	×	×	×	
LEXUS	Others	All	GS300, 08 08-			ECT			×	×	×	×	1. Check Mode 2. Reset Memory 3. A/T Code Reset 4. A/T Code Registration 5. Read Freeze Frame Data
LEXUS	Others	All	GS300, 08 08-			Cruise Control			×	×	×		
LEXUS	Others	All	GS300, 08 08-			EMS			×	×	×	×	
LEXUS	Others	All	GS300, 08 08-			Stabilizer			×	×	×		
LEXUS	Others	All	GS300, 08 08-			ABS/VSC/TRC			×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	Others	All	GS300, 08 08-			Tire Pressure Monitor			×	×	×		
LEXUS	Others	All	GS300, 08 08-			EMPS			×	×	×		1. Torque Sensor Adjustment

LEXUS	Others	All	GS300, 08 08-			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	Others	All	GS300, 08 08-			SRS Airbag			×	×			
LEXUS	Others	All	GS300, 08 08-			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	Others	All	GS300, 08 08-			Gateway BEAN			×	×			
LEXUS	Others	All	GS300, 08 08-			Gateway CAN			×	×			1. Initialization
LEXUS	Others	All	GS300, 08 08-			Body No. 3					×	×	
LEXUS	Others	All	GS300, 08 08-			Body No. 4			×	×	×	×	
LEXUS	Others	All	GS300, 08 08-			Body No. 5			×	×	×	×	
LEXUS	Others	All	GS300, 08 08-			Driver Door			×	×	×	×	
LEXUS	Others	All	GS300, 08 08-			Passenger Door			×	×	×	×	
LEXUS	Others	All	GS300, 08 08-			Rear Left Door			×	×	×	×	
LEXUS	Others	All	GS300, 08 08-			Rear Right Door			×	×	×	×	
LEXUS	Others	All	GS300, 08 08-			Driver Seat					×	×	
LEXUS	Others	All	GS300, 08 08-			Passenger Seat					×	×	
LEXUS	Others	All	GS300, 08 08-			Master Switch					×	×	

LEXUS	Others	All	GS300, 08 08-			D-SEAT SW					×		
LEXUS	Others	All	GS300, 08 08-			Sliding Roof					×	×	
LEXUS	Others	All	GS300, 08 08-			Tilt&Telescopic			×	×	×	×	
LEXUS	Others	All	GS300, 08 08-			Combination Meter					×	×	
LEXUS	Others	All	GS300, 08 08-			Combination Switch					×		
LEXUS	Others	All	GS300, 08 08-			Clearance Sonar			×	×			
LEXUS	Others	All	GS300, 08 08-			Rain Sensor					×		
LEXUS	Others	All	GS300, 08 08-			AFS			×	×	×	×	
LEXUS	Others	All	GS300, 08 08-			Entry&Start			×	×	×	×	1. Key Code Erasure. 2. Key Code Registration. 3. Communication Check (Key Diagnosis Mode).
LEXUS	Others	All	GS300, 08 08-			Power Source Control			×	×	×	×	
LEXUS	MIDDLE EAST	All	GS300, 08 08-			Engine			×	×	×	×	1. VIN (VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data

SERVICE SOLUTIONS

LEXUS	MIDDLE EAST	A11	GS300, 08-08-			ECT				×	×	×	×	1. Check Mode 2. Reset Memory 3. A/T Code Reset 4. A/T Code Registration 5. Read Freeze Frame Data
LEXUS	MIDDLE EAST	A11	GS300, 08-08-			Cruise Control				×	×	×		
LEXUS	MIDDLE EAST	A11	GS300, 08-08-			EMS				×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 08-08-			Stabilizer				×	×	×		
LEXUS	MIDDLE EAST	A11	GS300, 08-08-			ABS/VSC/TRC				×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	MIDDLE EAST	A11	GS300, 08-08-			Tire Pressure Monitor				×	×	×		
LEXUS	MIDDLE EAST	A11	GS300, 08-08-			EMPS				×	×	×		1. Torque Sensor Adjustment
LEXUS	MIDDLE EAST	A11	GS300, 08-08-			Air Conditioner				×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	MIDDLE EAST	A11	GS300, 08-08-			SRS Airbag				×	×			
LEXUS	MIDDLE EAST	A11	GS300, 08-08-			Body				×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	MIDDLE EAST	A11	GS300, 08-08-			Gateway BEAN				×	×			

LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Gateway CAN			×	×			1. Initialization
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Body No. 3					×	×	
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Body No. 4			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Body No. 5			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Driver Door			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Passenger Door			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Rear Left Door			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Rear Right Door			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Driver Seat					×	×	
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Passenger Seat					×	×	
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Master Switch					×	×	
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			D-SEAT SW					×		
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Sliding Roof					×	×	
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Tilt&Telescopic			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Combination Meter					×	×	

LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Combination Switch					×		
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Clearance Sonar			×	×			
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Rain Sensor					×		
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			AFS			×	×	×	×	
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Entry&Start			×	×	×	×	1.Key Code Erasure. 2.Key Code Registration. 3.Communication Check(Key Diagnosis Mode).
LEXUS	MIDDLE EAST	A11	GS300, 08 08-			Power Source Control			×	×	×	×	
LEXUS	A11	A11	GS350, - 0808			Engine			×	×	×	×	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode 7.Read Freeze Frame Data
LEXUS	A11	A11	GS350, - 0808			ECT			×	×	×	×	1.Check Mode 2.Reset Memory 3.A/T Code Reset 4.A/T Code Registration 5.Read Freeze Frame Data
LEXUS	A11	A11	GS350, - 0808			Cruise Control			×	×	×		

LEXUS	A11	A11	GS350, - 0808			EMS			×	×	×	×	
LEXUS	A11	A11	GS350, - 0808			Stabilizer			×	×	×		
LEXUS	A11	A11	GS350, - 0808			ABS/VSC/TRC			×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	A11	A11	GS350, - 0808			Four Wheel Drive			×	×	×	×	1. Reset Memory
LEXUS	A11	A11	GS350, - 0808			Tire Pressure Monitor			×	×	×		
LEXUS	A11	A11	GS350, - 0808			EMPS			×	×	×		1. Torque Sensor Adjustment
LEXUS	A11	A11	GS350, - 0808			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	A11	GS350, - 0808			SRS Airbag			×	×			
LEXUS	A11	A11	GS350, - 0808			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	A11	GS350, - 0808			Gateway BEAN			×	×			
LEXUS	A11	A11	GS350, - 0808			Gateway CAN			×	×			1. Initialization
LEXUS	A11	A11	GS350, - 0808			Body No. 3					×	×	
LEXUS	A11	A11	GS350, - 0808			Body No. 4			×	×	×	×	

LEXUS	A11	A11	GS350, - 0808			Body No. 5			×	×	×	×	
LEXUS	A11	A11	GS350, - 0808			Driver Door			×	×	×	×	
LEXUS	A11	A11	GS350, - 0808			Passenger Door			×	×	×	×	
LEXUS	A11	A11	GS350, - 0808			Rear Left Door			×	×	×	×	
LEXUS	A11	A11	GS350, - 0808			Rear Right Door			×	×	×	×	
LEXUS	A11	A11	GS350, - 0808			Driver Seat					×	×	
LEXUS	A11	A11	GS350, - 0808			Passenger Seat					×	×	
LEXUS	A11	A11	GS350, - 0808			Master Switch					×	×	
LEXUS	A11	A11	GS350, - 0808			D-SEAT SW					×		
LEXUS	A11	A11	GS350, - 0808			Sliding Roof					×	×	
LEXUS	A11	A11	GS350, - 0808			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	A11	GS350, - 0808			Combination Meter					×	×	
LEXUS	A11	A11	GS350, - 0808			Combination Switch					×		
LEXUS	A11	A11	GS350, - 0808			Clearance Sonar			×	×			
LEXUS	A11	A11	GS350, - 0808			Rain Sensor					×		

LEXUS	A11	A11	GS350, - 0808			AFS			×	×	×	×	
LEXUS	A11	A11	GS350, - 0808			Entry&Start			×	×	×	×	1.Key Code Erasure. 2.Key Code Registration. 3.Communication Check(Key Diagnosis Mode).
LEXUS	A11	A11	GS350, - 0808			Power Source Control			×	×	×	×	
LEXUS	A11	A11	GS350, - 0808			Occupant Detection			×	×	×		
LEXUS	A11	A11	ES240			Engine and ECT			×	×	×	×	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode 7.Read Freeze Frame Data
LEXUS	A11	A11	ES240			Cruise Control			×	×	×		
LEXUS	A11	A11	ES240			ABS/VSC/TRC			×	×	×	×	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid,Zero Down,Linear Valve Offset) 5.Read Freeze Frame Data
LEXUS	A11	A11	ES240			Air Conditioner			×	×	×	×	1.Servomotor Initialization
LEXUS	A11	A11	ES240			SRS Airbag			×	×	×		

													1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
LEXUS	A11	A11	ES240			Main Body			×	×	×	×	
LEXUS	A11	A11	ES240			Gateway			×	×			1. Initialization
LEXUS	A11	A11	ES240			D-Door Motor			×	×	×	×	
LEXUS	A11	A11	ES240			P-Door Motor			×	×	×	×	
LEXUS	A11	A11	ES240			RL-Door Motor			×	×	×	×	
LEXUS	A11	A11	ES240			RR-Door Motor			×	×	×	×	
LEXUS	A11	A11	ES240			Driver Seat			×	×	×	×	
LEXUS	A11	A11	ES240			Passenger Seat			×	×	×	×	
LEXUS	A11	A11	ES240			Master Switch			×	×	×		
LEXUS	A11	A11	ES240			Sliding Roof			×	×	×	×	
LEXUS	A11	A11	ES240			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	A11	ES240			Combination Meter			×	×	×	×	
LEXUS	A11	A11	ES240			Mirror					×	×	
LEXUS	A11	A11	ES240			Clearance Sonar			×	×	×	×	
LEXUS	A11	A11	ES240			AFS			×	×	×	×	1. ECU Information Synchronize
LEXUS	A11	A11	ES240			Entry&Start			×	×	×	×	1. Key Code Erasure. 2. Key Code Registration. 3. ECU Communication ID Registration. 4. Communication Check(Key Diagnosis Mode).
LEXUS	A11	A11	ES240			Navigation System			×	×			

SERVICE SOLUTIONS

													1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data
LEXUS	A11	A11	CELSIOR			Engine			×	×	×	×	
													1. Check Mode 2. Reset Memory 3. A/T Code Reset 4. A/T Code Registration 5. Read Freeze Frame Data
LEXUS	A11	A11	CELSIOR			ECT			×	×	×	×	
LEXUS	A11	A11	CELSIOR			Radar Cruise			×	×	×		1. Beam Axis Adjustment
LEXUS	A11	A11	CELSIOR			Air suspension			×	×	×	×	
													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	A11	CELSIOR			ABS/VSC/TRC			×	×	×	×	
LEXUS	A11	A11	CELSIOR			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
													1. Transponder Code Registration 2. Transponder Code Erasure
LEXUS	A11	A11	CELSIOR			Steering Lock			×	×	×	×	
LEXUS	A11	A11	CELSIOR			Theft Deterrent			×	×	×	×	
LEXUS	A11	A11	CELSIOR			SRS Airbag			×	×			
LEXUS	A11	A11	CELSIOR			Pre-Crash			×	×	×	×	
LEXUS	A11	A11	CELSIOR			Gateway			×	×			

LEXUS	A11	A11	CELSIOR			Body No. 2			×	×	×	×	
LEXUS	A11	A11	CELSIOR			Body No. 3					×	×	
LEXUS	A11	A11	CELSIOR			Body No. 4			×	×	×	×	
LEXUS	A11	A11	CELSIOR			Body No. 5			×	×	×	×	
LEXUS	A11	A11	CELSIOR			Driver Door			×	×	×	×	
LEXUS	A11	A11	CELSIOR			Passenger Door			×	×	×	×	
LEXUS	A11	A11	CELSIOR			Rear Left Door			×	×	×	×	
LEXUS	A11	A11	CELSIOR			Rear Right Door			×	×	×	×	
LEXUS	A11	A11	CELSIOR			Driver Seat					×	×	
LEXUS	A11	A11	CELSIOR			Rear Left Seat			×	×	×	×	
LEXUS	A11	A11	CELSIOR			Rear Right Seat					×	×	
LEXUS	A11	A11	CELSIOR			Rear Seat Switch					×		
LEXUS	A11	A11	CELSIOR			Sliding Roof					×	×	
LEXUS	A11	A11	CELSIOR			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	A11	CELSIOR			Combination Meter					×	×	
LEXUS	A11	A11	CELSIOR			Combination Switch					×		
LEXUS	A11	A11	CELSIOR			Steering Pad Switch					×		
LEXUS	A11	A11	CELSIOR			Clearance Sonar			×	×			
LEXUS	A11	A11	CELSIOR			Rain Sensor					×		
LEXUS	A11	A11	CELSIOR			AFS			×	×	×	×	

SERVICE SOLUTIONS

													1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data
LEXUS	A11	A11	LS430			Engine			×	×	×	×	
													1. Check Mode 2. Reset Memory 3. A/T Code Reset 4. A/T Code Registration 5. Read Freeze Frame Data
LEXUS	A11	A11	LS430			ECT			×	×	×	×	
LEXUS	A11	A11	LS430			Radar Cruise			×	×	×		1. Beam Axis Adjustment
LEXUS	A11	A11	LS430			Air suspension			×	×	×	×	
													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	A11	LS430			ABS/VSC/TRC			×	×	×	×	
LEXUS	A11	A11	LS430			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
													1. Transponder Code Registration 2. Transponder Code Erasure
LEXUS	A11	A11	LS430			Steering Lock			×	×	×	×	
LEXUS	A11	A11	LS430			Theft Deterrent			×	×	×	×	
LEXUS	A11	A11	LS430			SRS Airbag			×	×			
LEXUS	A11	A11	LS430			Pre-Crash			×	×	×	×	
LEXUS	A11	A11	LS430			Gateway			×	×	×	×	

LEXUS	A11	A11	LS430			Body No. 2			×	×	×	×	
LEXUS	A11	A11	LS430			Body No. 3					×	×	
LEXUS	A11	A11	LS430			Body No. 4			×	×	×	×	
LEXUS	A11	A11	LS430			Body No. 5			×	×	×	×	
LEXUS	A11	A11	LS430			Driver Door			×	×	×	×	
LEXUS	A11	A11	LS430			Passenger Door			×	×	×	×	
LEXUS	A11	A11	LS430			Rear Left Door			×	×	×	×	
LEXUS	A11	A11	LS430			Rear Right Door			×	×	×	×	
LEXUS	A11	A11	LS430			Driver Seat					×	×	
LEXUS	A11	A11	LS430			Rear Left Seat			×	×	×	×	
LEXUS	A11	A11	LS430			Rear Right Seat					×	×	
LEXUS	A11	A11	LS430			Rear Seat Switch					×		
LEXUS	A11	A11	LS430			Sliding Roof					×	×	
LEXUS	A11	A11	LS430			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	A11	LS430			Combination Meter					×	×	
LEXUS	A11	A11	LS430			Combination Switch					×		
LEXUS	A11	A11	LS430			Steering Pad Switch					×		
LEXUS	A11	A11	LS430			Clearance Sonar			×	×			
LEXUS	A11	A11	LS430			Rain Sensor					×		
LEXUS	A11	A11	LS430			AFS			×	×	×	×	

SERVICE SOLUTIONS

													1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data
LEXUS	A11	A11	LX470			Engine and ECT			×	×	×	×	
LEXUS	A11	A11	LX470			Cruise Control			×	×	×		
LEXUS	A11	A11	LX470			AHC			×	×	×	×	
													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	A11	LX470			ABS/VSC/TRC			×	×	×	×	
LEXUS	A11	A11	LX470			VGRS			×	×	×		1. Steering Angle Adjust
													1. Transponder Code Registration 2. Transponder Code Erasure
LEXUS	A11	A11	LX470			Immobiliser			×	×	×	×	
LEXUS	A11	A11	LX470			Theft Deterrent			×	×	×	×	
LEXUS	A11	A11	LX470			SRS Airbag			×	×			
													1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	A11	LX470			Body			×	×	×	×	
LEXUS	A11	A11	LX470			Body No. 2			×	×	×	×	
LEXUS	A11	A11	LX470			Driver Door			×	×	×	×	
LEXUS	A11	A11	LX470			Driver Seat					×	×	
LEXUS	A11	A11	LX470			Sliding Roof					×	×	
LEXUS	A11	A11	LX470			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	A11	LX470			Mirror					×	×	

LEXUS	A11	A11	LX470			Rain Sensor					×		
LEXUS	A11	A11	LX470			Wiper					×	×	
													1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode 7.Read Freeze Frame Data
LEXUS	A11	-0608	SC430			Engine			×	×	×	×	
													1.Check Mode 2.Reset Memory 3.A/T Code Reset 4.A/T Code Registration 5.Read Freeze Frame Data
LEXUS	A11	-0608	SC430			ECT			×	×	×	×	
LEXUS	A11	-0608	SC430			Cruise Control			×	×	×		
													1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid,Zero Down,Linear Valve Offset)
LEXUS	A11	-0608	SC430			ABS/VSC/TRC			×	×	×	×	
LEXUS	A11	-0608	SC430			Tire Pressure Monitor			×	×	×		
LEXUS	A11	-0608	SC430			Air Conditioner			×	×	×	×	1.Compass calibration 2.Servomotor Initialization
													1.Transponder Code Registration 2.Transponder Code Erasure
LEXUS	A11	-0608	SC430			Immobiliser			×	×	×	×	
LEXUS	A11	-0608	SC430			Theft Deterrent			×	×	×	×	

LEXUS	A11	-0608	SC430			SRS Airbag			×	×			
LEXUS	A11	-0608	SC430			Gateway			×	×	×	×	
LEXUS	A11	-0608	SC430			Body No. 2			×	×	×	×	
LEXUS	A11	-0608	SC430			Body No. 3					×	×	
LEXUS	A11	-0608	SC430			Body No. 4			×	×	×	×	
LEXUS	A11	-0608	SC430			Body No. 5			×	×	×	×	
LEXUS	A11	-0608	SC430			Driver Door			×	×	×	×	
LEXUS	A11	-0608	SC430			Passenger Door			×	×	×	×	
LEXUS	A11	-0608	SC430			Driver Seat					×	×	
LEXUS	A11	-0608	SC430			Passenger Seat					×	×	
LEXUS	A11	-0608	SC430			Retractable Hardtop			×	×	×		
LEXUS	A11	-0608	SC430			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	-0608	SC430			Combination Meter					×	×	
LEXUS	A11	-0608	SC430			Combination Switch					×		
LEXUS	A11	-0608	SC430			Steering Pad Switch					×		
LEXUS	A11	-0608	SC430			AFS			×	×	×	×	
LEXUS	A11	0608-	SC430			Engine			×	×	×	×	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data

													1. Check Mode 2. Reset Memory 3. A/T Code Reset 4. A/T Code Registration 5. Read Freeze Frame Data
LEXUS	A11	0608-	SC430			ECT			×	×	×	×	
LEXUS	A11	0608-	SC430			Cruise Control			×	×	×		
													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	0608-	SC430			ABS/VSC/TRC			×	×	×	×	
LEXUS	A11	0608-	SC430			Tire Pressure Monitor			×	×	×		
LEXUS	A11	0608-	SC430			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	0608-	SC430			Immobiliser			×	×	×	×	1. Transponder Code Registration 2. Transponder Code Erasure
LEXUS	A11	0608-	SC430			Theft Deterrent			×	×	×	×	
LEXUS	A11	0608-	SC430			SRS Airbag			×	×			
LEXUS	A11	0608-	SC430			Gateway			×	×	×	×	
LEXUS	A11	0608-	SC430			Body No. 2			×	×	×	×	
LEXUS	A11	0608-	SC430			Body No. 3					×	×	
LEXUS	A11	0608-	SC430			Body No. 4			×	×	×	×	
LEXUS	A11	0608-	SC430			Body No. 5			×	×	×	×	
LEXUS	A11	0608-	SC430			Driver Door			×	×	×	×	
LEXUS	A11	0608-	SC430			Passenger Door			×	×	×	×	
LEXUS	A11	0608-	SC430			Driver Seat					×	×	
LEXUS	A11	0608-	SC430			Passenger Seat					×	×	

LEXUS	A11	0608-	SC430			Retractable Hardtop			×	×	×		
LEXUS	A11	0608-	SC430			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	0608-	SC430			Combination Meter					×	×	
LEXUS	A11	0608-	SC430			Combination Switch					×		
LEXUS	A11	0608-	SC430			Steering Pad Switch					×		
LEXUS	A11	0608-	SC430			AFS			×	×	×	×	
LEXUS	A11	0608-	SC430			Occupant Detection			×	×	×		
													1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data
LEXUS	A11	A11	IS220D			Engine and ECT			×	×	×	×	
LEXUS	A11	A11	IS220D			Cruise Control			×	×	×		
													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	A11	A11	IS220D			ABS/VSC/TRC			×	×	×	×	
LEXUS	A11	A11	IS220D			EMPS			×	×	×		1. Torque Sensor Adjustment

SERVICE SOLUTIONS

LEXUS	A11	A11	IS220D			Air Conditioner			×	×	×	×	1.Compass calibration 2.Servomotor Initialization
LEXUS	A11	A11	IS220D			SRS Airbag			×	×			
LEXUS	A11	A11	IS220D			Body			×	×	×	×	1.Wireless Code Erasure 2.Wireless Code Registration
LEXUS	A11	A11	IS220D			Gateway			×	×			
LEXUS	A11	A11	IS220D			Body No.3					×	×	
LEXUS	A11	A11	IS220D			Body No.5			×	×	×	×	
LEXUS	A11	A11	IS220D			Driver Seat					×	×	
LEXUS	A11	A11	IS220D			Passenger Seat					×	×	
LEXUS	A11	A11	IS220D			Master Switch					×	×	
LEXUS	A11	A11	IS220D			Sliding Roof					×	×	
LEXUS	A11	A11	IS220D			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	A11	IS220D			Combination Meter					×	×	
LEXUS	A11	A11	IS220D			Combination Switch					×		
LEXUS	A11	A11	IS220D			Clearance Sonar			×	×			
LEXUS	A11	A11	IS220D			Rain Sensor					×		
LEXUS	A11	A11	IS220D			AFS			×	×	×	×	
LEXUS	A11	A11	IS220D			Entry&Start			×	×	×	×	1.Key Code Erasure. 2.Key Code Registration. 3.Communication Check(Key Diagnosis Mode).
LEXUS	A11	A11	IS220D			Power Source Control			×	×	×	×	

SERVICE SOLUTIONS

													1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode 7.Read Freeze Frame Data
LEXUS	A11	A11	IS300			Engine			×	×	×	×	
													1.Check Mode 2.Reset Memory 3.A/T Code Reset 4.A/T Code Registration 5.Read Freeze Frame Data
LEXUS	A11	A11	IS300			ECT			×	×	×	×	
LEXUS	A11	A11	IS300			Cruise Control			×	×	×		
													1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid,Zero Down,Linear Valve Offset) 5.Read Freeze Frame Data
LEXUS	A11	A11	IS300			ABS/VSC/TRC			×	×	×	×	
LEXUS	A11	A11	IS300			EMPS			×	×	×		1.Torque Sensor Adjustment
LEXUS	A11	A11	IS300			Air Conditioner			×	×	×	×	1.Compass calibration 2.Servomotor Initialization
LEXUS	A11	A11	IS300			SRS Airbag			×	×			
													1.Wireless Code Erasure 2.Wireless Code Registration
LEXUS	A11	A11	IS300			Body			×	×	×	×	
LEXUS	A11	A11	IS300			Gateway			×	×			
LEXUS	A11	A11	IS300			Body No. 3					×	×	
LEXUS	A11	A11	IS300			Body No. 5			×	×	×	×	

LEXUS	A11	A11	IS300			Driver Seat					×	×	
LEXUS	A11	A11	IS300			Passenger Seat					×	×	
LEXUS	A11	A11	IS300			Master Switch					×	×	
LEXUS	A11	A11	IS300			Sliding Roof					×	×	
LEXUS	A11	A11	IS300			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	A11	IS300			Combination Meter					×	×	
LEXUS	A11	A11	IS300			Combination Switch					×		
LEXUS	A11	A11	IS300			Clearance Sonar			×	×			
LEXUS	A11	A11	IS300			Rain Sensor					×		
LEXUS	A11	A11	IS300			AFS			×	×	×	×	
LEXUS	A11	A11	IS300			Entry&Start			×	×	×	×	1. Key Code Erasure. 2. Key Code Registration. 3. Communication Check (Key Diagnosis Mode).
LEXUS	A11	A11	IS300			Power Source Control			×	×	×	×	
LEXUS	A11	A11	IS250			Engine			×	×	×	×	1. VIN (VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data

													1. Check Mode 2. Reset Memory 3. A/T Code Reset 4. A/T Code Registration 5. Read Freeze Frame Data
LEXUS	A11	A11	IS250			ECT			×	×	×	×	
LEXUS	A11	A11	IS250			Radar Cruise			×	×	×		1. Beam Axis Adjustment
													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	A11	A11	IS250			ABS/VSC/TRC			×	×	×	×	
LEXUS	A11	A11	IS250			EMPS			×	×	×		1. Torque Sensor Adjustment
LEXUS	A11	A11	IS250			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	A11	IS250			SRS Airbag			×	×			
LEXUS	A11	A11	IS250			Pre-Crash			×	×	×	×	
LEXUS	A11	A11	IS250			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	A11	IS250			Gateway			×	×			
LEXUS	A11	A11	IS250			Body No. 3					×	×	
LEXUS	A11	A11	IS250			Body No. 5			×	×	×	×	
LEXUS	A11	A11	IS250			Driver Seat					×	×	
LEXUS	A11	A11	IS250			Passenger Seat					×	×	
LEXUS	A11	A11	IS250			Master Switch					×	×	
LEXUS	A11	A11	IS250			Sliding Roof					×	×	
LEXUS	A11	A11	IS250			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	A11	IS250			Combination Meter					×	×	

LEXUS	A11	A11	IS250			Combination Switch					×		
LEXUS	A11	A11	IS250			Clearance Sonar			×	×			
LEXUS	A11	A11	IS250			Rain Sensor					×		
LEXUS	A11	A11	IS250			AFS			×	×	×	×	
LEXUS	A11	A11	IS250			Entry&Start			×	×	×	×	1. Key Code Erasure. 2. Key Code Registration. 3. Communication Check (Key Diagnosis Mode).
LEXUS	A11	A11	IS250			Power Source Control			×	×	×	×	
LEXUS	A11	-0702	RX350			Engine and ECT			×	×	×	×	1. VIN (VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data
LEXUS	A11	-0702	RX350			Cruise Control			×	×	×		
LEXUS	A11	-0702	RX350			Air suspension			×	×	×	×	
LEXUS	A11	-0702	RX350			ABS/VSC/TRC			×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	-0702	RX350			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization

													1. Transponder Code Registration 2. Transponder Code Erasure
LEXUS	A11	-0702	RX350			Immobiliser			×	×	×	×	
LEXUS	A11	-0702	RX350			SRS Airbag			×	×			
LEXUS	A11	-0702	RX350			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	-0702	RX350			Back Door			×	×	×	×	
LEXUS	A11	-0702	RX350			Driver Seat					×	×	
LEXUS	A11	-0702	RX350			Master Switch					×	×	
LEXUS	A11	-0702	RX350			Sliding Roof					×	×	
LEXUS	A11	-0702	RX350			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	-0702	RX350			Combination Meter					×	×	
LEXUS	A11	-0702	RX350			Rain Sensor					×		
LEXUS	A11	-0702	RX350			Wiper					×	×	
LEXUS	A11	-0702	RX350			AFS			×	×	×	×	
LEXUS	A11	0702-	RX350			Engine and ECT			×	×	×	×	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data
LEXUS	A11	0702-	RX350			Cruise Control			×	×	×		
LEXUS	A11	0702-	RX350			Air suspension			×	×	×	×	

													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	0702-	RX350			ABS/VSC/TRC			×	×	×	×	
LEXUS	A11	0702-	RX350			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	0702-	RX350			Immobiliser			×	×	×	×	1. Transponder Code Registration 2. Transponder Code Erasure
LEXUS	A11	0702-	RX350			SRS Airbag			×	×			
LEXUS	A11	0702-	RX350			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	0702-	RX350			Back Door			×	×	×	×	
LEXUS	A11	0702-	RX350			Driver Seat					×	×	
LEXUS	A11	0702-	RX350			Master Switch					×	×	
LEXUS	A11	0702-	RX350			Sliding Roof					×	×	
LEXUS	A11	0702-	RX350			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	0702-	RX350			Combination Meter					×	×	
LEXUS	A11	0702-	RX350			Rain Sensor					×		
LEXUS	A11	0702-	RX350			Wiper					×	×	
LEXUS	A11	0702-	RX350			AFS			×	×	×	×	

SERVICE SOLUTIONS

LEXUS	Taiwan , Korea or Brazil	All	ES350			Engine				×	×	×	×	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data
LEXUS	Taiwan , Korea or Brazil	All	ES350			ECT				×	×	×	×	1. Check Mode 2. Reset Memory 3. A/T Code Reset 4. A/T Code Registration 5. Read Freeze Frame Data
LEXUS	Taiwan , Korea or Brazil	All	ES350			Radar Cruise				×	×	×		1. Beam Axis Adjustment
LEXUS	Taiwan , Korea or Brazil	All	ES350			E-ACM				×	×	×	×	
LEXUS	Taiwan , Korea or Brazil	All	ES350			ABS/VSC/TRC				×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data

LEXUS	Taiwan , Korea or Brazil	All	ES350			Tire Pressure Monitor			×	×	×		
LEXUS	Taiwan , Korea or Brazil	All	ES350			Air Conditioner			×	×	×	×	1. Servomotor Initialization
LEXUS	Taiwan , Korea or Brazil	All	ES350			SRS Airbag			×	×			
LEXUS	Taiwan , Korea or Brazil	All	ES350			Pre-Crash			×	×	×	×	
LEXUS	Taiwan , Korea or Brazil	All	ES350			Main Body			×	×	×	×	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
LEXUS	Taiwan , Korea or Brazil	All	ES350			Gateway			×	×			1. Initialization
LEXUS	Taiwan , Korea or Brazil	All	ES350			D-Door Motor			×	×	×	×	

LEXUS	Taiwan , Korea or Brazil	All	ES350			P-Door Motor			×	×	×	×	
LEXUS	Taiwan , Korea or Brazil	All	ES350			RL-Door Motor			×	×	×	×	
LEXUS	Taiwan , Korea or Brazil	All	ES350			RR-Door Motor			×	×	×	×	
LEXUS	Taiwan , Korea or Brazil	All	ES350			Driver Seat					×	×	
LEXUS	Taiwan , Korea or Brazil	All	ES350			Passenger Seat			×	×	×	×	
LEXUS	Taiwan , Korea or Brazil	All	ES350			Master Switch			×	×	×		
LEXUS	Taiwan , Korea or Brazil	All	ES350			Sliding Roof			×	×	×	×	

LEXUS	Taiwan , Korea or Brazil	All	ES350			Tilt&Telescopic			×	×	×	×	
LEXUS	Taiwan , Korea or Brazil	All	ES350			Combination Meter			×	×	×	×	
LEXUS	Taiwan , Korea or Brazil	All	ES350			Mirror					×	×	
LEXUS	Taiwan , Korea or Brazil	All	ES350			Clearance Sonar			×	×	×	×	
LEXUS	Taiwan , Korea or Brazil	All	ES350			AFS			×	×	×	×	1. ECU Information Synchronize
LEXUS	Taiwan , Korea or Brazil	All	ES350			Entry&Start			×	×	×	×	1. Key Code Erasure. 2. Key Code Registration. 3. ECU Communication ID Registration. 4. Communication Check(Key Diagnosis Mode).
LEXUS	Taiwan , Korea or Brazil	All	ES350			Occupant Detection			×	×	×		

SERVICE SOLUTIONS

													1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data
LEXUS	Others	All	ES350			Engine			×	×	×	×	
													1. Check Mode 2. Reset Memory 3. A/T Code Reset 4. A/T Code Registration 5. Read Freeze Frame Data
LEXUS	Others	All	ES350			ECT			×	×	×	×	
LEXUS	Others	All	ES350			Cruise Control			×	×	×		
LEXUS	Others	All	ES350			E-ACM			×	×	×	×	
													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	Others	All	ES350			ABS/VSC/TRC			×	×	×	×	
LEXUS	Others	All	ES350			Air Conditioner			×	×	×	×	1. Servomotor Initialization
LEXUS	Others	All	ES350			SRS Airbag			×	×			
													1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
LEXUS	Others	All	ES350			Main Body			×	×	×	×	
LEXUS	Others	All	ES350			Gateway			×	×			1. Initialization
LEXUS	Others	All	ES350			D-Door Motor			×	×	×	×	
LEXUS	Others	All	ES350			P-Door Motor			×	×	×	×	

LEXUS	Others	All	ES350			RL-Door Motor			×	×	×	×	
LEXUS	Others	All	ES350			RR-Door Motor			×	×	×	×	
LEXUS	Others	All	ES350			Driver Seat					×	×	
LEXUS	Others	All	ES350			Passenger Seat			×	×	×	×	
LEXUS	Others	All	ES350			Master Switch			×	×	×		
LEXUS	Others	All	ES350			Sliding Roof			×	×	×	×	
LEXUS	Others	All	ES350			Tilt&Telescopic			×	×	×	×	
LEXUS	Others	All	ES350			Combination Meter			×	×	×	×	
LEXUS	Others	All	ES350			Mirror					×	×	
LEXUS	Others	All	ES350			Clearance Sonar			×	×	×	×	
LEXUS	Others	All	ES350			AFS			×	×	×	×	1. ECU Information Synchronize
LEXUS	Others	All	ES350			Entry&Start			×	×	×	×	1. Key Code Erasure. 2. Key Code Registration. 3. ECU Communication ID Registration. 4. Communication Check(Key Diagnosis Mode).
LEXUS	All	-0709	GS450H			Engine and ECT			×	×	×	×	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data
LEXUS	All	-0709	GS450H			Hybrid Control			×	×	×	×	1. VIN Read
LEXUS	All	-0709	GS450H			EMS			×	×	×	×	
LEXUS	All	-0709	GS450H			Stabilizer			×	×	×		

SERVICE SOLUTIONS

													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	A11	-0709	GS450H			ABS/VSC/TRC			×	×	×	×	
LEXUS	A11	-0709	GS450H			Tire Pressure Monitor			×	×	×		
LEXUS	A11	-0709	GS450H			EMPS			×	×	×		1. Torque Sensor Adjustment
LEXUS	A11	-0709	GS450H			VGRS			×	×	×		1. Steering Angle Adjust
LEXUS	A11	-0709	GS450H			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	-0709	GS450H			SRS Airbag			×	×			
LEXUS	A11	-0709	GS450H			Pre-Crash			×	×	×	×	
LEXUS	A11	-0709	GS450H			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	-0709	GS450H			Gateway			×	×			
LEXUS	A11	-0709	GS450H			HV Gateway			×	×	×		1. Initialization
LEXUS	A11	-0709	GS450H			Body No. 3					×	×	
LEXUS	A11	-0709	GS450H			Body No. 4			×	×	×	×	
LEXUS	A11	-0709	GS450H			Body No. 5			×	×	×	×	
LEXUS	A11	-0709	GS450H			Driver Door			×	×	×	×	
LEXUS	A11	-0709	GS450H			Passenger Door			×	×	×	×	
LEXUS	A11	-0709	GS450H			Rear Left Door			×	×	×	×	
LEXUS	A11	-0709	GS450H			Rear Right Door			×	×	×	×	
LEXUS	A11	-0709	GS450H			Driver Seat					×	×	
LEXUS	A11	-0709	GS450H			Passenger Seat					×	×	
LEXUS	A11	-0709	GS450H			Master Switch					×	×	
LEXUS	A11	-0709	GS450H			D-SEAT SW					×		
LEXUS	A11	-0709	GS450H			Sliding Roof					×	×	

LEXUS	A11	-0709	GS450H			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	-0709	GS450H			Combination Meter					×	×	
LEXUS	A11	-0709	GS450H			Combination Switch					×		
LEXUS	A11	-0709	GS450H			Clearance Sonar			×	×			
LEXUS	A11	-0709	GS450H			Rain Sensor					×		
LEXUS	A11	-0709	GS450H			AFS			×	×	×	×	
LEXUS	A11	-0709	GS450H			Entry&Start			×	×	×	×	1.Key Code Erasure. 2.Key Code Registration. 3.Communication Check(Key Diagnosis Mode).
LEXUS	A11	-0709	GS450H			Power Source Control			×	×	×	×	
LEXUS	A11	0709-0808	GS450H			Engine and ECT			×	×	×	×	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode 7.Read Freeze Frame Data
LEXUS	A11	0709-0808	GS450H			Hybrid Control			×	×	×	×	1.VIN Read
LEXUS	A11	0709-0808	GS450H			EMS			×	×	×	×	
LEXUS	A11	0709-0808	GS450H			Stabilizer			×	×	×		

													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	A11	0709-0808	GS450H			ABS/VSC/TRC			×	×	×	×	
LEXUS	A11	0709-0808	GS450H			Tire Pressure Monitor			×	×	×		
LEXUS	A11	0709-0808	GS450H			EMPS			×	×	×		1. Torque Sensor Adjustment
LEXUS	A11	0709-0808	GS450H			VGRS			×	×	×		1. Steering Angle Adjust
LEXUS	A11	0709-0808	GS450H			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	0709-0808	GS450H			SRS Airbag			×	×			
LEXUS	A11	0709-0808	GS450H			Pre-Crash			×	×	×	×	
LEXUS	A11	0709-0808	GS450H			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	0709-0808	GS450H			Gateway			×	×			
LEXUS	A11	0709-0808	GS450H			HV Gateway			×	×	×		1. Initialization
LEXUS	A11	0709-0808	GS450H			Body No. 3					×	×	
LEXUS	A11	0709-0808	GS450H			Body No. 4			×	×	×	×	
LEXUS	A11	0709-0808	GS450H			Body No. 5			×	×	×	×	

LEXUS	A11	0709-0808	GS450H			Driver Door			×	×	×	×	
LEXUS	A11	0709-0808	GS450H			Passenger Door			×	×	×	×	
LEXUS	A11	0709-0808	GS450H			Rear Left Door			×	×	×	×	
LEXUS	A11	0709-0808	GS450H			Rear Right Door			×	×	×	×	
LEXUS	A11	0709-0808	GS450H			Driver Seat					×	×	
LEXUS	A11	0709-0808	GS450H			Passenger Seat					×	×	
LEXUS	A11	0709-0808	GS450H			Master Switch					×	×	
LEXUS	A11	0709-0808	GS450H			D-SEAT SW					×		
LEXUS	A11	0709-0808	GS450H			Sliding Roof					×	×	
LEXUS	A11	0709-0808	GS450H			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	0709-0808	GS450H			Combination Meter					×	×	
LEXUS	A11	0709-0808	GS450H			Combination Switch					×		
LEXUS	A11	0709-0808	GS450H			Clearance Sonar			×	×			
LEXUS	A11	0709-0808	GS450H			Rain Sensor					×		
LEXUS	A11	0709-0808	GS450H			AFS			×	×	×	×	

SERVICE SOLUTIONS

LEXUS	A11	0709-0808	GS450H			Entry&Start			×	×	×	×	1.Key Code Erasure. 2.Key Code Registration. 3.Communication Check(Key Diagnosis Mode).
LEXUS	A11	0709-0808	GS450H			Power Source Control			×	×	×	×	
LEXUS	A11	0808-	GS450H			Engine and ECT			×	×	×	×	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode 7.Read Freeze Frame Data
LEXUS	A11	0808-	GS450H			Hybrid Control			×	×	×	×	1.VIN Read
LEXUS	A11	0808-	GS450H			EMS			×	×	×	×	
LEXUS	A11	0808-	GS450H			Stabilizer			×	×	×		
LEXUS	A11	0808-	GS450H			ABS/VSC/TRC			×	×	×	×	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid,Zero Down,Linear Valve Offset) 5.Read Freeze Frame Data
LEXUS	A11	0808-	GS450H			Tire Pressure Monitor			×	×	×		
LEXUS	A11	0808-	GS450H			EMPS			×	×	×		1.Torque Sensor Adjustment
LEXUS	A11	0808-	GS450H			VGRS			×	×	×		1.Steering Angle Adjust
LEXUS	A11	0808-	GS450H			Air Conditioner			×	×	×	×	1.Compass calibration 2.Servomotor Initialization

LEXUS	A11	0808-	GS450H			SRS Airbag			×	×			
LEXUS	A11	0808-	GS450H			Pre-Crash			×	×	×	×	
LEXUS	A11	0808-	GS450H			Body			×	×	×	×	1.Wireless Code Erasure 2.Wireless Code Registration
LEXUS	A11	0808-	GS450H			Gateway			×	×			
LEXUS	A11	0808-	GS450H			HV Gateway			×	×	×		1. Initialization
LEXUS	A11	0808-	GS450H			Body No. 3					×	×	
LEXUS	A11	0808-	GS450H			Body No. 4			×	×	×	×	
LEXUS	A11	0808-	GS450H			Body No. 5			×	×	×	×	
LEXUS	A11	0808-	GS450H			Driver Door			×	×	×	×	
LEXUS	A11	0808-	GS450H			Passenger Door			×	×	×	×	
LEXUS	A11	0808-	GS450H			Rear Left Door			×	×	×	×	
LEXUS	A11	0808-	GS450H			Rear Right Door			×	×	×	×	
LEXUS	A11	0808-	GS450H			Driver Seat					×	×	
LEXUS	A11	0808-	GS450H			Passenger Seat					×	×	
LEXUS	A11	0808-	GS450H			Master Switch					×	×	
LEXUS	A11	0808-	GS450H			D-SEAT SW					×		
LEXUS	A11	0808-	GS450H			Sliding Roof					×	×	
LEXUS	A11	0808-	GS450H			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	0808-	GS450H			Combination Meter					×	×	
LEXUS	A11	0808-	GS450H			Combination Switch					×		
LEXUS	A11	0808-	GS450H			Clearance Sonar			×	×			
LEXUS	A11	0808-	GS450H			Rain Sensor					×		
LEXUS	A11	0808-	GS450H			AFS			×	×	×	×	
LEXUS	A11	0808-	GS450H			Entry&Start			×	×	×	×	1.Key Code Erasure. 2.Key Code Registration. 3.Communication Check(Key Diagnosis Mode).

LEXUS	A11	0808-	GS450H			Power Source Control			×	×	×	×	
													1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode 7.Read Freeze Frame Data
LEXUS	A11	A11	RX400H			Engine and ECT			×	×	×	×	
LEXUS	A11	A11	RX400H			Hybrid Control			×	×	×	×	1.VIN Read
LEXUS	A11	A11	RX400H			Cruise Control			×	×	×		
													1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid,Zero Down,Linear Valve Offset) 5.Read Freeze Frame Data
LEXUS	A11	A11	RX400H			ABS/VSC/TRC			×	×	×	×	
LEXUS	A11	A11	RX400H			EMPS			×	×	×		1.Torque Sensor Adjustment
LEXUS	A11	A11	RX400H			Air Conditioner			×	×	×	×	1.Compass calibration 2.Servomotor Initialization
LEXUS	A11	A11	RX400H			Immobiliser			×	×	×	×	1.Transponder Code Registration 2.Transponder Code Erasure
LEXUS	A11	A11	RX400H			SRS Airbag			×	×			
LEXUS	A11	A11	RX400H			Body			×	×	×	×	1.Wireless Code Erasure 2.Wireless Code Registration
LEXUS	A11	A11	RX400H			Gateway			×	×			
LEXUS	A11	A11	RX400H			Back Door			×	×	×	×	

LEXUS	A11	A11	RX400H			Driver Seat					×	×	
LEXUS	A11	A11	RX400H			Master Switch					×	×	
LEXUS	A11	A11	RX400H			Sliding Roof					×	×	
LEXUS	A11	A11	RX400H			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	A11	RX400H			Combination Meter					×	×	
LEXUS	A11	A11	RX400H			Rain Sensor					×		
LEXUS	A11	A11	RX400H			Wiper					×	×	
LEXUS	A11	A11	RX400H			AFS			×	×	×	×	
LEXUS	A11	A11	HARRIER HYBRID			Engine and ECT			×	×	×	×	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data
LEXUS	A11	A11	HARRIER HYBRID			Hybrid Control			×	×	×	×	1. VIN Read
LEXUS	A11	A11	HARRIER HYBRID			Cruise Control			×	×	×		
LEXUS	A11	A11	HARRIER HYBRID			ABS/VSC/TRC			×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	A11	A11	HARRIER HYBRID			EMPS			×	×	×		1. Torque Sensor Adjustment

LEXUS	A11	A11	HARRIER HYBRID			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	A11	HARRIER HYBRID			Immobiliser			×	×	×	×	1. Transponder Code Registration 2. Transponder Code Erasure
LEXUS	A11	A11	HARRIER HYBRID			SRS Airbag			×	×			
LEXUS	A11	A11	HARRIER HYBRID			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	A11	HARRIER HYBRID			Gateway			×	×			
LEXUS	A11	A11	HARRIER HYBRID			Back Door			×	×	×	×	
LEXUS	A11	A11	HARRIER HYBRID			Driver Seat					×	×	
LEXUS	A11	A11	HARRIER HYBRID			Master Switch					×	×	
LEXUS	A11	A11	HARRIER HYBRID			Sliding Roof					×	×	
LEXUS	A11	A11	HARRIER HYBRID			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	A11	HARRIER HYBRID			Combination Meter					×	×	
LEXUS	A11	A11	HARRIER HYBRID			Rain Sensor					×		
LEXUS	A11	A11	HARRIER HYBRID			Wiper					×	×	
LEXUS	A11	A11	HARRIER HYBRID			AFS			×	×	×	×	

SERVICE SOLUTIONS

													1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data
LEXUS	A11	A11	LX570			Engine and ECT			×	×	×	×	
LEXUS	A11	A11	LX570			Radar Cruise			×	×	×		1. Beam Axis Adjustment
LEXUS	A11	A11	LX570			AHC			×	×	×	×	
													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	A11	A11	LX570			ABS/VSC/TRC			×	×	×	×	
LEXUS	A11	A11	LX570			VGRS			×	×	×		1. Steering Angle Adjust
LEXUS	A11	A11	LX570			Air Conditioner			×	×	×	×	1. Servomotor Initialization
LEXUS	A11	A11	LX570			SRS Airbag			×	×	×		
LEXUS	A11	A11	LX570			Pre-Crash			×	×	×	×	
													1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
LEXUS	A11	A11	LX570			Main Body			×	×	×	×	
LEXUS	A11	A11	LX570			Gateway			×	×			1. Initialization
LEXUS	A11	A11	LX570			Accessory Gateway			×	×	×		
LEXUS	A11	A11	LX570			Body No. 4			×	×	×	×	
LEXUS	A11	A11	LX570			Body No. 5					×	×	
LEXUS	A11	A11	LX570			Back Door			×	×	×	×	

LEXUS	A11	A11	LX570			D-Door Motor			×	×	×	×	
LEXUS	A11	A11	LX570			P-Door Motor			×	×	×	×	
LEXUS	A11	A11	LX570			RL-Door Motor			×	×	×	×	
LEXUS	A11	A11	LX570			RR-Door Motor			×	×	×	×	
LEXUS	A11	A11	LX570			Driver Seat					×	×	
LEXUS	A11	A11	LX570			Master Switch			×	×	×		
LEXUS	A11	A11	LX570			Front Left Seat A/C			×		×	×	
LEXUS	A11	A11	LX570			Front Right Seat A/C			×		×	×	
LEXUS	A11	A11	LX570			Sliding Roof			×	×	×	×	
LEXUS	A11	A11	LX570			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	A11	LX570			Combination Meter			×	×	×	×	
LEXUS	A11	A11	LX570			Mirror					×	×	
LEXUS	A11	A11	LX570			Clearance Sonar			×	×	×	×	
LEXUS	A11	A11	LX570			Rain Sensor			×	×	×		
LEXUS	A11	A11	LX570			AFS			×	×	×	×	1. ECU Information Synchronize
LEXUS	A11	A11	LX570			Entry&Start			×	×	×	×	1. Key Code Erasure. 2. Key Code Registration. 3. ECU Communication ID Registration. 4. Communication Check(Key Diagnosis Mode).

SERVICE SOLUTIONS

													1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data
LEXUS	A11	A11	GX460			Engine and ECT			×	×	×	×	
LEXUS	A11	A11	GX460			Radar Cruise			×	×	×		1. Beam Axis Adjustment
LEXUS	A11	A11	GX460			Air suspension			×	×	×	×	
LEXUS	A11	A11	GX460			KDSS			×	×	×	×	
													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	A11	A11	GX460			ABS/VSC/TRC			×	×	×	×	
LEXUS	A11	A11	GX460			Air Conditioner			×	×	×	×	1. Servomotor Initialization
LEXUS	A11	A11	GX460			SRS Airbag			×	×	×		
LEXUS	A11	A11	GX460			Pre-Crash			×	×	×	×	
													1. Recognition ECU High Temp History Reset 2. Camera/Target Position Memory 3. Camera Axis Adjust 4. Rear Beam Axis Adjustment
LEXUS	A11	A11	GX460			Pre-Crash 2			×	×	×	×	
													1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
LEXUS	A11	A11	GX460			Main Body			×	×	×	×	

LEXUS	A11	A11	GX460			PM1 Gateway			×	×	×		1. Initialization
LEXUS	A11	A11	GX460			PM2 Gateway			×	×	×		1. Initialization
LEXUS	A11	A11	GX460			D-Door Motor			×	×	×	×	
LEXUS	A11	A11	GX460			P-Door Motor			×	×	×	×	
LEXUS	A11	A11	GX460			RL-Door Motor			×	×	×	×	
LEXUS	A11	A11	GX460			RR-Door Motor			×	×	×	×	
LEXUS	A11	A11	GX460			Driver Seat					×	×	
LEXUS	A11	A11	GX460			Master Switch			×	×	×		
LEXUS	A11	A11	GX460			Sliding Roof			×	×	×	×	
LEXUS	A11	A11	GX460			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	A11	GX460			Combination Meter			×	×	×	×	
LEXUS	A11	A11	GX460			Mirror L			×	×	×	×	
LEXUS	A11	A11	GX460			Mirror R			×	×	×	×	
LEXUS	A11	A11	GX460			Clearance Sonar			×	×	×	×	
LEXUS	A11	A11	GX460			AFS			×	×	×	×	1. ECU Information Synchronize
LEXUS	A11	A11	GX460			Entry&Start			×	×	×	×	1. Key Code Erasure. 2. Key Code Registration. 3. ECU Communication ID Registration. 4. Communication Check(Key Diagnosis Mode).
LEXUS	A11	A11	GX460			Power Source Control			×	×	×	×	
LEXUS	A11	A11	GX460			Starting Control			×	×	×	×	
LEXUS	A11	A11	GX460			Navigation System			×	×			

SERVICE SOLUTIONS

													1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data
LEXUS	A11	-0808	GS460			Engine			×	×	×	×	
LEXUS	A11	-0808	GS460			ECT			×	×	×	×	1. Check Mode 2. Reset Memory 3. A/T Code Reset 4. A/T Code Registration 5. Read Freeze Frame Data
LEXUS	A11	-0808	GS460			Radar Cruise			×	×	×		1. Beam Axis Adjustment
LEXUS	A11	-0808	GS460			EMS			×	×	×	×	
LEXUS	A11	-0808	GS460			Stabilizer			×	×	×		
LEXUS	A11	-0808	GS460			ABS/VSC/TRC			×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	A11	-0808	GS460			Four Wheel Drive			×	×	×	×	1. Reset Memory
LEXUS	A11	-0808	GS460			Tire Pressure Monitor			×	×	×		
LEXUS	A11	-0808	GS460			EMPS			×	×	×		1. Torque Sensor Adjustment
LEXUS	A11	-0808	GS460			VGRS			×	×	×		1. Steering Angle Adjust

LEXUS	A11	-0808	GS460			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	-0808	GS460			SRS Airbag			×	×			
LEXUS	A11	-0808	GS460			Pre-Crash			×	×	×	×	
LEXUS	A11	-0808	GS460			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	-0808	GS460			Gateway BEAN			×	×			
LEXUS	A11	-0808	GS460			Gateway CAN			×	×			1. Initialization
LEXUS	A11	-0808	GS460			Body No. 3					×	×	
LEXUS	A11	-0808	GS460			Body No. 4			×	×	×	×	
LEXUS	A11	-0808	GS460			Body No. 5			×	×	×	×	
LEXUS	A11	-0808	GS460			Driver Door			×	×	×	×	
LEXUS	A11	-0808	GS460			Passenger Door			×	×	×	×	
LEXUS	A11	-0808	GS460			Rear Left Door			×	×	×	×	
LEXUS	A11	-0808	GS460			Rear Right Door			×	×	×	×	
LEXUS	A11	-0808	GS460			Driver Seat					×	×	
LEXUS	A11	-0808	GS460			Passenger Seat					×	×	
LEXUS	A11	-0808	GS460			Master Switch					×	×	
LEXUS	A11	-0808	GS460			D-SEAT SW					×		
LEXUS	A11	-0808	GS460			Sliding Roof					×	×	
LEXUS	A11	-0808	GS460			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	-0808	GS460			Combination Meter					×	×	
LEXUS	A11	-0808	GS460			Combination Switch					×		
LEXUS	A11	-0808	GS460			Clearance Sonar			×	×			
LEXUS	A11	-0808	GS460			Rain Sensor					×		
LEXUS	A11	-0808	GS460			AFS			×	×	×	×	

SERVICE SOLUTIONS

LEXUS	A11	-0808	GS460			Entry&Start			×	×	×	×	1.Key Code Erasure. 2.Key Code Registration. 3.Communication Check(Key Diagnosis Mode).
LEXUS	A11	-0808	GS460			Power Source Control			×	×	×	×	
LEXUS	A11	-0808	GS460			Occupant Detection			×	×	×		
LEXUS	A11	0808-	GS460			Engine			×	×	×	×	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode 7.Read Freeze Frame Data
LEXUS	A11	0808-	GS460			ECT			×	×	×	×	1.Check Mode 2.Reset Memory 3.A/T Code Reset 4.A/T Code Registration 5.Read Freeze Frame Data
LEXUS	A11	0808-	GS460			Radar Cruise			×	×	×		1.Beam Axis Adjustment
LEXUS	A11	0808-	GS460			EMS			×	×	×	×	
LEXUS	A11	0808-	GS460			Stabilizer			×	×	×		

													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	A11	0808-	GS460			ABS/VSC/TRC			×	×	×	×	
LEXUS	A11	0808-	GS460			Four Wheel Drive			×	×	×	×	1. Reset Memory
LEXUS	A11	0808-	GS460			Tire Pressure Monitor			×	×	×		
LEXUS	A11	0808-	GS460			EMPS			×	×	×		1. Torque Sensor Adjustment
LEXUS	A11	0808-	GS460			VGRS			×	×	×		1. Steering Angle Adjust
LEXUS	A11	0808-	GS460			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	0808-	GS460			SRS Airbag			×	×			
LEXUS	A11	0808-	GS460			Pre-Crash			×	×	×	×	
LEXUS	A11	0808-	GS460			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	0808-	GS460			Gateway BEAN			×	×			
LEXUS	A11	0808-	GS460			Gateway CAN			×	×			1. Initialization
LEXUS	A11	0808-	GS460			Body No. 3					×	×	
LEXUS	A11	0808-	GS460			Body No. 4			×	×	×	×	
LEXUS	A11	0808-	GS460			Body No. 5			×	×	×	×	
LEXUS	A11	0808-	GS460			Driver Door			×	×	×	×	
LEXUS	A11	0808-	GS460			Passenger Door			×	×	×	×	
LEXUS	A11	0808-	GS460			Rear Left Door			×	×	×	×	
LEXUS	A11	0808-	GS460			Rear Right Door			×	×	×	×	
LEXUS	A11	0808-	GS460			Driver Seat					×	×	
LEXUS	A11	0808-	GS460			Passenger Seat					×	×	
LEXUS	A11	0808-	GS460			Master Switch					×	×	

LEXUS	A11	0808-	GS460			D-SEAT SW					×		
LEXUS	A11	0808-	GS460			Sliding Roof					×	×	
LEXUS	A11	0808-	GS460			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	0808-	GS460			Combination Meter					×	×	
LEXUS	A11	0808-	GS460			Combination Switch					×		
LEXUS	A11	0808-	GS460			Clearance Sonar			×	×			
LEXUS	A11	0808-	GS460			Rain Sensor					×		
LEXUS	A11	0808-	GS460			AFS			×	×	×	×	
LEXUS	A11	0808-	GS460			Entry&Start			×	×	×	×	1.Key Code Erasure. 2.Key Code Registration. 3.Communication Check(Key Diagnosis Mode).
LEXUS	A11	0808-	GS460			Power Source Control			×	×	×	×	
LEXUS	A11	0808-	GS460			Occupant Detection			×	×	×		
LEXUS	A11	-0808	IS-F			Engine			×	×	×	×	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode 7.Read Freeze Frame Data

													1. Check Mode 2. Reset Memory 3. A/T Code Reset 4. A/T Code Registration 5. Read Freeze Frame Data
LEXUS	A11	-0808	IS-F			ECT			×	×	×	×	
LEXUS	A11	-0808	IS-F			Radar Cruise			×	×	×		1. Beam Axis Adjustment
													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	A11	-0808	IS-F			ABS/VSC/TRC			×	×	×	×	
LEXUS	A11	-0808	IS-F			EMPS			×	×	×		1. Torque Sensor Adjustment
LEXUS	A11	-0808	IS-F			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	-0808	IS-F			SRS Airbag			×	×			
LEXUS	A11	-0808	IS-F			Pre-Crash			×	×	×	×	
LEXUS	A11	-0808	IS-F			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	-0808	IS-F			Gateway			×	×			
LEXUS	A11	-0808	IS-F			Body No. 3					×	×	
LEXUS	A11	-0808	IS-F			Body No. 5			×	×	×	×	
LEXUS	A11	-0808	IS-F			Driver Seat					×	×	
LEXUS	A11	-0808	IS-F			Passenger Seat					×	×	
LEXUS	A11	-0808	IS-F			Master Switch					×	×	
LEXUS	A11	-0808	IS-F			Sliding Roof					×	×	
LEXUS	A11	-0808	IS-F			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	-0808	IS-F			Combination Meter					×	×	

LEXUS	A11	-0808	IS-F			Combination Switch					×		
LEXUS	A11	-0808	IS-F			Clearance Sonar			×	×			
LEXUS	A11	-0808	IS-F			Rain Sensor					×		
LEXUS	A11	-0808	IS-F			AFS			×	×	×	×	
LEXUS	A11	-0808	IS-F			Entry&Start			×	×	×	×	1. Key Code Erasure. 2. Key Code Registration. 3. Communication Check (Key Diagnosis Mode).
LEXUS	A11	-0808	IS-F			Power Source Control			×	×	×	×	
LEXUS	A11	0808-	IS-F			Engine			×	×	×	×	1. VIN (VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data
LEXUS	A11	0808-	IS-F			ECT			×	×	×	×	1. Check Mode 2. Reset Memory 3. A/T Code Reset 4. A/T Code Registration 5. Read Freeze Frame Data
LEXUS	A11	0808-	IS-F			Radar Cruise			×	×	×		1. Beam Axis Adjustment

													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	A11	0808-	IS-F			ABS/VSC/TRC			×	×	×	×	
LEXUS	A11	0808-	IS-F			EMPS			×	×	×		1. Torque Sensor Adjustment
LEXUS	A11	0808-	IS-F			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	A11	0808-	IS-F			SRS Airbag			×	×			
LEXUS	A11	0808-	IS-F			Pre-Crash			×	×	×	×	
LEXUS	A11	0808-	IS-F			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	0808-	IS-F			Gateway			×	×			
LEXUS	A11	0808-	IS-F			Body No. 3					×	×	
LEXUS	A11	0808-	IS-F			Body No. 5			×	×	×	×	
LEXUS	A11	0808-	IS-F			Driver Seat					×	×	
LEXUS	A11	0808-	IS-F			Passenger Seat					×	×	
LEXUS	A11	0808-	IS-F			Master Switch					×	×	
LEXUS	A11	0808-	IS-F			Sliding Roof					×	×	
LEXUS	A11	0808-	IS-F			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	0808-	IS-F			Combination Meter					×	×	
LEXUS	A11	0808-	IS-F			Combination Switch					×		
LEXUS	A11	0808-	IS-F			Clearance Sonar			×	×			
LEXUS	A11	0808-	IS-F			Rain Sensor					×		
LEXUS	A11	0808-	IS-F			AFS			×	×	×	×	

SERVICE SOLUTIONS

LEXUS	A11	0808-	IS-F			Entry&Start			×	×	×	×	1.Key Code Erasure. 2.Key Code Registration. 3.Communication Check(Key Diagnosis Mode).
LEXUS	A11	0808-	IS-F			Power Source Control			×	×	×	×	
LEXUS	A11	A11	LS460			Engine			×	×	×	×	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode 7.Read Freeze Frame Data
LEXUS	A11	A11	LS460			ECT			×	×	×	×	1.Check Mode 2.Reset Memory 3.A/T Code Reset 4.A/T Code Registration 5.Read Freeze Frame Data
LEXUS	A11	A11	LS460			Radar Cruise			×	×	×		1.Beam Axis Adjustment
LEXUS	A11	A11	LS460			Air suspension			×	×	×	×	
LEXUS	A11	A11	LS460			ABS/VSC/TRC			×	×	×	×	1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid,Zero Down,Linear Valve Offset) 5.Read Freeze Frame Data
LEXUS	A11	A11	LS460			Tire Pressure Monitor			×	×	×		1.ID Registration(Main Set,2nd Set)

SERVICE SOLUTIONS

LEXUS	A11	A11	LS460			EMPS			×	×	×		1. Torque Sensor Adjustment
LEXUS	A11	A11	LS460			VGRS			×	×	×		1. Steering Angle Adjust
LEXUS	A11	A11	LS460			Electric Parking Brake			×	×	×	×	1. Reset Memory
LEXUS	A11	A11	LS460			Intelligent Parking Assist			×	×	×		
LEXUS	A11	A11	LS460			Air Conditioner			×	×	×	×	1. Servomotor Initialization
LEXUS	A11	A11	LS460			SRS Airbag			×	×	×		
LEXUS	A11	A11	LS460			Pre-Crash			×	×	×	×	
LEXUS	A11	A11	LS460			Main Body			×	×	×	×	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
LEXUS	A11	A11	LS460			ECM Gateway			×	×	×		1. Initialization
LEXUS	A11	A11	LS460			ECB Gateway			×	×	×		1. Initialization
LEXUS	A11	A11	LS460			WIL Gateway			×	×	×		1. Initialization
LEXUS	A11	A11	LS460			Accessory Gateway			×	×	×		
LEXUS	A11	A11	LS460			Body No. 4			×	×	×	×	
LEXUS	A11	A11	LS460			Body No. 5			×	×	×	×	
LEXUS	A11	A11	LS460			Driver Door					×	×	
LEXUS	A11	A11	LS460			Passenger Door					×	×	
LEXUS	A11	A11	LS460			Rear Left Door					×	×	
LEXUS	A11	A11	LS460			Rear Right Door					×	×	
LEXUS	A11	A11	LS460			Back Door			×	×	×	×	
LEXUS	A11	A11	LS460			D-Door Motor			×	×	×	×	
LEXUS	A11	A11	LS460			P-Door Motor			×	×	×	×	
LEXUS	A11	A11	LS460			RL-Door Motor			×	×	×	×	
LEXUS	A11	A11	LS460			RR-Door Motor			×	×	×	×	
LEXUS	A11	A11	LS460			Driver Seat			×	×	×	×	
LEXUS	A11	A11	LS460			Passenger Seat			×	×	×	×	

LEXUS	A11	A11	LS460			Rear Left Seat			×	×	×	×	
LEXUS	A11	A11	LS460			Rear Right Seat			×	×	×	×	
LEXUS	A11	A11	LS460			Master Switch			×	×	×		
LEXUS	A11	A11	LS460			D-SEAT SW			×	×	×	×	
LEXUS	A11	A11	LS460			Center Console Switch					×	×	
LEXUS	A11	A11	LS460			Rear Console Switch			×	×	×	×	
LEXUS	A11	A11	LS460			Front Left Seat A/C			×		×	×	
LEXUS	A11	A11	LS460			Front Right Seat A/C			×		×	×	
LEXUS	A11	A11	LS460			Rear Left Seat A/C			×		×	×	
LEXUS	A11	A11	LS460			Rear Right Seat A/C			×		×	×	
LEXUS	A11	A11	LS460			Sliding Roof			×	×	×	×	
LEXUS	A11	A11	LS460			Combination Meter			×	×	×	×	
LEXUS	A11	A11	LS460			Combination Switch					×		
LEXUS	A11	A11	LS460			Steering Pad Switch					×		
LEXUS	A11	A11	LS460			Rain Sensor			×	×	×		
LEXUS	A11	A11	LS460			AFS			×	×	×	×	1. ECU Information Synchronize

													1.Key Code Erasure. 2.Key Code Registration. 3.ECU Communication ID Registration. 4.Communication Check(Key Diagnosis Mode).
LEXUS	A11	A11	LS460			Entry&Start			×	×	×	×	
LEXUS	A11	A11	LS460			Electric Power Control			×	×	×	×	
LEXUS	A11	A11	LS460			Occupant Detection			×	×	×		
LEXUS	A11	A11	LS460			Active Headrest R			×	×	×	×	
LEXUS	A11	A11	LS460			Active Headrest L			×	×	×	×	
LEXUS	A11	A11	LS460			Navigation System			×	×			
LEXUS	A11	A11	LS600H			Engine and ECT			×	×	×	×	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode 7.Read Freeze Frame Data
LEXUS	A11	A11	LS600H			Hybrid Control			×	×	×	×	1.VIN Read
LEXUS	A11	A11	LS600H			Radar Cruise			×	×	×		1.Beam Axis Adjustment
LEXUS	A11	A11	LS600H			Air suspension			×	×	×	×	
LEXUS	A11	A11	LS600H			Front Stabilizer			×	×	×	×	

LEXUS	A11	A11	LS600H			Rear Stabilizer			×	×	×	×	
													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	A11	A11	LS600H			ABS/VSC/TRC			×	×	×	×	
LEXUS	A11	A11	LS600H			Tire Pressure Monitor			×	×	×		1. ID Registration (Main Set, 2nd Set)
LEXUS	A11	A11	LS600H			EMPS			×	×	×		1. Torque Sensor Adjustment
LEXUS	A11	A11	LS600H			VGRS			×	×	×		1. Steering Angle Adjust
LEXUS	A11	A11	LS600H			Electric Parking Brake			×	×	×	×	1. Reset Memory
LEXUS	A11	A11	LS600H			Intelligent Parking Assist			×	×	×		
LEXUS	A11	A11	LS600H			Air Conditioner			×	×	×	×	1. Servomotor Initialization
LEXUS	A11	A11	LS600H			SRS Airbag			×	×	×		
LEXUS	A11	A11	LS600H			Pre-Crash			×	×	×	×	
													1. Recognition ECU High Temp History Reset 2. Camera/Target Position Memory 3. Camera Axis Adjust 4. Rear Beam Axis Adjustment
LEXUS	A11	A11	LS600H			Pre-Crash 2			×	×	×	×	
													1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
LEXUS	A11	A11	LS600H			Main Body			×	×	×	×	
LEXUS	A11	A11	LS600H			ECM Gateway			×	×	×		1. Initialization
LEXUS	A11	A11	LS600H			ECB Gateway			×	×	×		1. Initialization

LEXUS	A11	A11	LS600H			WIL Gateway			×	×	×		1. Initialization
LEXUS	A11	A11	LS600H			Body No. 4			×	×	×	×	
LEXUS	A11	A11	LS600H			Body No. 5					×	×	
LEXUS	A11	A11	LS600H			Driver Door					×	×	
LEXUS	A11	A11	LS600H			Passenger Door					×	×	
LEXUS	A11	A11	LS600H			Rear Left Door			×	×	×	×	
LEXUS	A11	A11	LS600H			Rear Right Door			×	×	×	×	
LEXUS	A11	A11	LS600H			Back Door			×	×	×	×	
LEXUS	A11	A11	LS600H			D-Door Motor			×	×	×	×	
LEXUS	A11	A11	LS600H			P-Door Motor			×	×	×	×	
LEXUS	A11	A11	LS600H			RL-Door Motor			×	×	×	×	
LEXUS	A11	A11	LS600H			RR-Door Motor			×	×	×	×	
LEXUS	A11	A11	LS600H			Driver Seat					×	×	
LEXUS	A11	A11	LS600H			Passenger Seat			×	×	×	×	
LEXUS	A11	A11	LS600H			Rear Left Seat			×	×	×	×	
LEXUS	A11	A11	LS600H			Rear Right Seat			×	×	×	×	
LEXUS	A11	A11	LS600H			Master Switch			×	×	×		
LEXUS	A11	A11	LS600H			D-SEAT SW			×	×	×	×	
LEXUS	A11	A11	LS600H			Center Console Switch					×	×	
LEXUS	A11	A11	LS600H			Rear Console Switch			×	×	×	×	
LEXUS	A11	A11	LS600H			Front Left Seat A/C			×		×	×	
LEXUS	A11	A11	LS600H			Front Right Seat A/C			×		×	×	
LEXUS	A11	A11	LS600H			Rear Left Seat A/C			×		×	×	
LEXUS	A11	A11	LS600H			Rear Right Seat A/C			×		×	×	

LEXUS	A11	A11	LS600H			Sliding Roof			×	×	×	×	
LEXUS	A11	A11	LS600H			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	A11	LS600H			Combination Meter			×	×	×	×	
LEXUS	A11	A11	LS600H			Combination Switch					×		
LEXUS	A11	A11	LS600H			Steering Pad Switch					×		
LEXUS	A11	A11	LS600H			Clearance Sonar			×	×	×	×	
LEXUS	A11	A11	LS600H			Rain Sensor			×	×	×		
LEXUS	A11	A11	LS600H			AFS			×	×	×	×	1. ECU Information Synchronize
LEXUS	A11	A11	LS600H			Entry&Start			×	×	×	×	1. Key Code Erasure. 2. Key Code Registration. 3. ECU Communication ID Registration. 4. Communication Check(Key Diagnosis Mode).
LEXUS	A11	A11	LS600H			Occupant Detection			×	×	×		
LEXUS	A11	A11	LS600H			Active Headrest R			×	×	×	×	
LEXUS	A11	A11	LS600H			Active Headrest L			×	×	×	×	

SERVICE SOLUTIONS

LEXUS	MIDDLE EAST	-0608	GS430			Engine				×	×	×	×	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data
LEXUS	MIDDLE EAST	-0608	GS430			ECT				×	×	×	×	1. Check Mode 2. Reset Memory 3. A/T Code Reset 4. A/T Code Registration 5. Read Freeze Frame Data
LEXUS	MIDDLE EAST	-0608	GS430			Cruise Control				×	×	×		
LEXUS	MIDDLE EAST	-0608	GS430			EMS				×	×	×	×	
LEXUS	MIDDLE EAST	-0608	GS430			ABS/VSC/TRC				×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	MIDDLE EAST	-0608	GS430			Tire Pressure Monitor				×	×	×		
LEXUS	MIDDLE EAST	-0608	GS430			EMPS				×	×	×		1. Torque Sensor Adjustment
LEXUS	MIDDLE EAST	-0608	GS430			VGRS				×	×	×		1. Steering Angle Adjust

LEXUS	MIDDLE EAST	-0608	GS430			Air Conditioner			×	×	×	×	1.Compass calibration 2.Servomotor Initialization
LEXUS	MIDDLE EAST	-0608	GS430			SRS Airbag			×	×			
LEXUS	MIDDLE EAST	-0608	GS430			Body			×	×	×	×	1.Wireless Code Erasure 2.Wireless Code Registration
LEXUS	MIDDLE EAST	-0608	GS430			Gateway			×	×			
LEXUS	MIDDLE EAST	-0608	GS430			Body No. 3					×	×	
LEXUS	MIDDLE EAST	-0608	GS430			Body No. 4			×	×	×	×	
LEXUS	MIDDLE EAST	-0608	GS430			Body No. 5			×	×	×	×	
LEXUS	MIDDLE EAST	-0608	GS430			Driver Door			×	×	×	×	
LEXUS	MIDDLE EAST	-0608	GS430			Passenger Door			×	×	×	×	
LEXUS	MIDDLE EAST	-0608	GS430			Rear Left Door			×	×	×	×	
LEXUS	MIDDLE EAST	-0608	GS430			Rear Right Door			×	×	×	×	
LEXUS	MIDDLE EAST	-0608	GS430			Driver Seat					×	×	
LEXUS	MIDDLE EAST	-0608	GS430			Passenger Seat					×	×	
LEXUS	MIDDLE EAST	-0608	GS430			Master Switch					×	×	
LEXUS	MIDDLE EAST	-0608	GS430			D-SEAT SW					×		

LEXUS	MIDDLE EAST	-0608	GS430			Sliding Roof					×	×	
LEXUS	MIDDLE EAST	-0608	GS430			Tilt&Telescopic			×	×	×	×	
LEXUS	MIDDLE EAST	-0608	GS430			Combination Meter					×	×	
LEXUS	MIDDLE EAST	-0608	GS430			Combination Switch					×		
LEXUS	MIDDLE EAST	-0608	GS430			Clearance Sonar			×	×			
LEXUS	MIDDLE EAST	-0608	GS430			Rain Sensor					×		
LEXUS	MIDDLE EAST	-0608	GS430			AFS			×	×	×	×	
LEXUS	MIDDLE EAST	-0608	GS430			Entry&Start			×	×	×	×	1. Key Code Erasure. 2. Key Code Registration. 3. Communication Check (Key Diagnosis Mode).
LEXUS	MIDDLE EAST	-0608	GS430			Power Source Control			×	×	×	×	
LEXUS	Others	-0608	GS430			Engine			×	×	×	×	1. VIN (VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data

													1. Check Mode 2. Reset Memory 3. A/T Code Reset 4. A/T Code Registration 5. Read Freeze Frame Data
LEXUS	Others	-0608	GS430			ECT			×	×	×	×	
LEXUS	Others	-0608	GS430			Radar Cruise			×	×	×		1. Beam Axis Adjustment
LEXUS	Others	-0608	GS430			EMS			×	×	×	×	
													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	Others	-0608	GS430			ABS/VSC/TRC			×	×	×	×	
LEXUS	Others	-0608	GS430			Tire Pressure Monitor			×	×	×		
LEXUS	Others	-0608	GS430			EMPS			×	×	×		1. Torque Sensor Adjustment
LEXUS	Others	-0608	GS430			VGRS			×	×	×		1. Steering Angle Adjust
LEXUS	Others	-0608	GS430			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	Others	-0608	GS430			SRS Airbag			×	×			
LEXUS	Others	-0608	GS430			Pre-Crash			×	×	×	×	
LEXUS	Others	-0608	GS430			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	Others	-0608	GS430			Gateway			×	×			
LEXUS	Others	-0608	GS430			Body No. 3					×	×	
LEXUS	Others	-0608	GS430			Body No. 4			×	×	×	×	
LEXUS	Others	-0608	GS430			Body No. 5			×	×	×	×	
LEXUS	Others	-0608	GS430			Driver Door			×	×	×	×	
LEXUS	Others	-0608	GS430			Passenger Door			×	×	×	×	

LEXUS	Others	-0608	GS430			Rear Left Door			×	×	×	×	
LEXUS	Others	-0608	GS430			Rear Right Door			×	×	×	×	
LEXUS	Others	-0608	GS430			Driver Seat					×	×	
LEXUS	Others	-0608	GS430			Passenger Seat					×	×	
LEXUS	Others	-0608	GS430			Master Switch					×	×	
LEXUS	Others	-0608	GS430			D-SEAT SW					×		
LEXUS	Others	-0608	GS430			Sliding Roof					×	×	
LEXUS	Others	-0608	GS430			Tilt&Telescopic			×	×	×	×	
LEXUS	Others	-0608	GS430			Combination Meter					×	×	
LEXUS	Others	-0608	GS430			Combination Switch					×		
LEXUS	Others	-0608	GS430			Clearance Sonar			×	×			
LEXUS	Others	-0608	GS430			Rain Sensor					×		
LEXUS	Others	-0608	GS430			AFS			×	×	×	×	
LEXUS	Others	-0608	GS430			Entry&Start			×	×	×	×	1. Key Code Erasure. 2. Key Code Registration. 3. Communication Check(Key Diagnosis Mode).
LEXUS	Others	-0608	GS430			Power Source Control			×	×	×	×	
LEXUS	MIDDLE EAST	0608-0709	GS430			Engine			×	×	×	×	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data

LEXUS	MIDDLE EAST	0608- 0709	GS430			ECT				×	×	×	×	1. Check Mode 2. Reset Memory 3. A/T Code Reset 4. A/T Code Registration 5. Read Freeze Frame Data
LEXUS	MIDDLE EAST	0608- 0709	GS430			Cruise Control				×	×	×		
LEXUS	MIDDLE EAST	0608- 0709	GS430			EMS				×	×	×	×	
LEXUS	MIDDLE EAST	0608- 0709	GS430			Stabilizer				×	×	×		
LEXUS	MIDDLE EAST	0608- 0709	GS430			ABS/VSC/TRC				×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	MIDDLE EAST	0608- 0709	GS430			Tire Pressure Monitor				×	×	×		
LEXUS	MIDDLE EAST	0608- 0709	GS430			EMPS				×	×	×		1. Torque Sensor Adjustment
LEXUS	MIDDLE EAST	0608- 0709	GS430			VGRS				×	×	×		1. Steering Angle Adjust
LEXUS	MIDDLE EAST	0608- 0709	GS430			Air Conditioner				×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	MIDDLE EAST	0608- 0709	GS430			SRS Airbag				×	×			
LEXUS	MIDDLE EAST	0608- 0709	GS430			Body				×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration

LEXUS	MIDDLE EAST	0608- 0709	GS430			Gateway BEAN			×	×			
LEXUS	MIDDLE EAST	0608- 0709	GS430			Gateway CAN			×	×			1. Initialization
LEXUS	MIDDLE EAST	0608- 0709	GS430			Body No. 3					×	×	
LEXUS	MIDDLE EAST	0608- 0709	GS430			Body No. 4			×	×	×	×	
LEXUS	MIDDLE EAST	0608- 0709	GS430			Body No. 5			×	×	×	×	
LEXUS	MIDDLE EAST	0608- 0709	GS430			Driver Door			×	×	×	×	
LEXUS	MIDDLE EAST	0608- 0709	GS430			Passenger Door			×	×	×	×	
LEXUS	MIDDLE EAST	0608- 0709	GS430			Rear Left Door			×	×	×	×	
LEXUS	MIDDLE EAST	0608- 0709	GS430			Rear Right Door			×	×	×	×	
LEXUS	MIDDLE EAST	0608- 0709	GS430			Driver Seat					×	×	
LEXUS	MIDDLE EAST	0608- 0709	GS430			Passenger Seat					×	×	
LEXUS	MIDDLE EAST	0608- 0709	GS430			Master Switch					×	×	
LEXUS	MIDDLE EAST	0608- 0709	GS430			D-SEAT SW					×		
LEXUS	MIDDLE EAST	0608- 0709	GS430			Sliding Roof					×	×	
LEXUS	MIDDLE EAST	0608- 0709	GS430			Tilt&Telescopic			×	×	×	×	

LEXUS	MIDDLE EAST	0608-0709	GS430			Combination Meter					×	×	
LEXUS	MIDDLE EAST	0608-0709	GS430			Combination Switch					×		
LEXUS	MIDDLE EAST	0608-0709	GS430			Clearance Sonar			×	×			
LEXUS	MIDDLE EAST	0608-0709	GS430			Rain Sensor					×		
LEXUS	MIDDLE EAST	0608-0709	GS430			AFS			×	×	×	×	
LEXUS	MIDDLE EAST	0608-0709	GS430			Entry&Start			×	×	×	×	1.Key Code Erasure. 2.Key Code Registration. 3.Communication Check(Key Diagnosis Mode).
LEXUS	MIDDLE EAST	0608-0709	GS430			Power Source Control			×	×	×	×	
LEXUS	Others	0608-0709	GS430			Engine			×	×	×	×	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode 7.Read Freeze Frame Data
LEXUS	Others	0608-0709	GS430			ECT			×	×	×	×	1.Check Mode 2.Reset Memory 3.A/T Code Reset 4.A/T Code Registration 5.Read Freeze Frame Data

LEXUS	Others	0608-0709	GS430			Radar Cruise			×	×	×		1. Beam Axis Adjustment
LEXUS	Others	0608-0709	GS430			EMS			×	×	×	×	
LEXUS	Others	0608-0709	GS430			Stabilizer			×	×	×		
LEXUS	Others	0608-0709	GS430			ABS/VSC/TRC			×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	Others	0608-0709	GS430			Tire Pressure Monitor			×	×	×		
LEXUS	Others	0608-0709	GS430			EMPS			×	×	×		1. Torque Sensor Adjustment
LEXUS	Others	0608-0709	GS430			VGRS			×	×	×		1. Steering Angle Adjust
LEXUS	Others	0608-0709	GS430			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	Others	0608-0709	GS430			SRS Airbag			×	×			
LEXUS	Others	0608-0709	GS430			Pre-Crash			×	×	×	×	
LEXUS	Others	0608-0709	GS430			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	Others	0608-0709	GS430			Gateway BEAN			×	×			
LEXUS	Others	0608-0709	GS430			Gateway CAN			×	×			1. Initialization

LEXUS	Others	0608-0709	GS430			Body No. 3					×	×	
LEXUS	Others	0608-0709	GS430			Body No. 4			×	×	×	×	
LEXUS	Others	0608-0709	GS430			Body No. 5			×	×	×	×	
LEXUS	Others	0608-0709	GS430			Driver Door			×	×	×	×	
LEXUS	Others	0608-0709	GS430			Passenger Door			×	×	×	×	
LEXUS	Others	0608-0709	GS430			Rear Left Door			×	×	×	×	
LEXUS	Others	0608-0709	GS430			Rear Right Door			×	×	×	×	
LEXUS	Others	0608-0709	GS430			Driver Seat					×	×	
LEXUS	Others	0608-0709	GS430			Passenger Seat					×	×	
LEXUS	Others	0608-0709	GS430			Master Switch					×	×	
LEXUS	Others	0608-0709	GS430			D-SEAT SW					×		
LEXUS	Others	0608-0709	GS430			Sliding Roof					×	×	
LEXUS	Others	0608-0709	GS430			Tilt&Telescopic			×	×	×	×	
LEXUS	Others	0608-0709	GS430			Combination Meter					×	×	
LEXUS	Others	0608-0709	GS430			Combination Switch					×		

LEXUS	Others	0608-0709	GS430			Clearance Sonar			×	×			
LEXUS	Others	0608-0709	GS430			Rain Sensor					×		
LEXUS	Others	0608-0709	GS430			AFS			×	×	×	×	
LEXUS	Others	0608-0709	GS430			Entry&Start			×	×	×	×	1.Key Code Erasure. 2.Key Code Registration. 3.Communication Check(Key Diagnosis Mode).
LEXUS	Others	0608-0709	GS430			Power Source Control			×	×	×	×	
LEXUS	Others	0608-0709	GS430			Occupant Detection			×	×	×		
LEXUS	MIDDLE EAST	0709-	GS430			Engine			×	×	×	×	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode 7.Read Freeze Frame Data
LEXUS	MIDDLE EAST	0709-	GS430			ECT			×	×	×	×	1.Check Mode 2.Reset Memory 3.A/T Code Reset 4.A/T Code Registration 5.Read Freeze Frame Data
LEXUS	MIDDLE EAST	0709-	GS430			Cruise Control			×	×	×		

LEXUS	MIDDLE EAST	0709-	GS430			EMS			×	×	×	×	
LEXUS	MIDDLE EAST	0709-	GS430			Stabilizer			×	×	×		
LEXUS	MIDDLE EAST	0709-	GS430			ABS/VSC/TRC			×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	MIDDLE EAST	0709-	GS430			Tire Pressure Monitor			×	×	×		
LEXUS	MIDDLE EAST	0709-	GS430			EMPS			×	×	×		1. Torque Sensor Adjustment
LEXUS	MIDDLE EAST	0709-	GS430			VGRS			×	×	×		1. Steering Angle Adjust
LEXUS	MIDDLE EAST	0709-	GS430			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	MIDDLE EAST	0709-	GS430			SRS Airbag			×	×			
LEXUS	MIDDLE EAST	0709-	GS430			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	MIDDLE EAST	0709-	GS430			Gateway BEAN			×	×			
LEXUS	MIDDLE EAST	0709-	GS430			Gateway CAN			×	×			1. Initialization
LEXUS	MIDDLE EAST	0709-	GS430			Body No. 3					×	×	
LEXUS	MIDDLE EAST	0709-	GS430			Body No. 4			×	×	×	×	

LEXUS	MIDDLE EAST	0709-	GS430			Body No. 5			×	×	×	×	
LEXUS	MIDDLE EAST	0709-	GS430			Driver Door			×	×	×	×	
LEXUS	MIDDLE EAST	0709-	GS430			Passenger Door			×	×	×	×	
LEXUS	MIDDLE EAST	0709-	GS430			Rear Left Door			×	×	×	×	
LEXUS	MIDDLE EAST	0709-	GS430			Rear Right Door			×	×	×	×	
LEXUS	MIDDLE EAST	0709-	GS430			Driver Seat					×	×	
LEXUS	MIDDLE EAST	0709-	GS430			Passenger Seat					×	×	
LEXUS	MIDDLE EAST	0709-	GS430			Master Switch					×	×	
LEXUS	MIDDLE EAST	0709-	GS430			D-SEAT SW					×		
LEXUS	MIDDLE EAST	0709-	GS430			Sliding Roof					×	×	
LEXUS	MIDDLE EAST	0709-	GS430			Tilt&Telescopic			×	×	×	×	
LEXUS	MIDDLE EAST	0709-	GS430			Combination Meter					×	×	
LEXUS	MIDDLE EAST	0709-	GS430			Combination Switch					×		
LEXUS	MIDDLE EAST	0709-	GS430			Clearance Sonar			×	×			
LEXUS	MIDDLE EAST	0709-	GS430			Rain Sensor					×		

LEXUS	MIDDLE EAST	0709-	GS430			AFS			×	×	×	×	
LEXUS	MIDDLE EAST	0709-	GS430			Entry&Start			×	×	×	×	1.Key Code Erasure. 2.Key Code Registration. 3.Communication Check(Key Diagnosis Mode).
LEXUS	MIDDLE EAST	0709-	GS430			Power Source Control			×	×	×	×	
LEXUS	Others	0709-	GS430			Engine			×	×	×	×	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode 7.Read Freeze Frame Data
LEXUS	Others	0709-	GS430			ECT			×	×	×	×	1.Check Mode 2.Reset Memory 3.A/T Code Reset 4.A/T Code Registration 5.Read Freeze Frame Data
LEXUS	Others	0709-	GS430			Radar Cruise			×	×	×		1.Beam Axis Adjustment
LEXUS	Others	0709-	GS430			EMS			×	×	×	×	
LEXUS	Others	0709-	GS430			Stabilizer			×	×	×		

													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	Others	0709-	GS430			ABS/VSC/TRC			×	×	×	×	
LEXUS	Others	0709-	GS430			Four Wheel Drive			×	×	×	×	1. Reset Memory
LEXUS	Others	0709-	GS430			Tire Pressure Monitor			×	×	×		
LEXUS	Others	0709-	GS430			EMPS			×	×	×		1. Torque Sensor Adjustment
LEXUS	Others	0709-	GS430			VGRS			×	×	×		1. Steering Angle Adjust
LEXUS	Others	0709-	GS430			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization
LEXUS	Others	0709-	GS430			SRS Airbag			×	×			
LEXUS	Others	0709-	GS430			Pre-Crash			×	×	×	×	
LEXUS	Others	0709-	GS430			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	Others	0709-	GS430			Gateway BEAN			×	×			
LEXUS	Others	0709-	GS430			Gateway CAN			×	×			1. Initialization
LEXUS	Others	0709-	GS430			Body No. 3					×	×	
LEXUS	Others	0709-	GS430			Body No. 4			×	×	×	×	
LEXUS	Others	0709-	GS430			Body No. 5			×	×	×	×	
LEXUS	Others	0709-	GS430			Driver Door			×	×	×	×	
LEXUS	Others	0709-	GS430			Passenger Door			×	×	×	×	
LEXUS	Others	0709-	GS430			Rear Left Door			×	×	×	×	
LEXUS	Others	0709-	GS430			Rear Right Door			×	×	×	×	
LEXUS	Others	0709-	GS430			Driver Seat					×	×	
LEXUS	Others	0709-	GS430			Passenger Seat					×	×	

LEXUS	Others	0709-	GS430			Master Switch					×	×	
LEXUS	Others	0709-	GS430			D-SEAT SW					×		
LEXUS	Others	0709-	GS430			Sliding Roof					×	×	
LEXUS	Others	0709-	GS430			Tilt&Telescopic			×	×	×	×	
LEXUS	Others	0709-	GS430			Combination Meter					×	×	
LEXUS	Others	0709-	GS430			Combination Switch					×		
LEXUS	Others	0709-	GS430			Clearance Sonar			×	×			
LEXUS	Others	0709-	GS430			Rain Sensor					×		
LEXUS	Others	0709-	GS430			AFS			×	×	×	×	
LEXUS	Others	0709-	GS430			Entry&Start			×	×	×	×	1.Key Code Erasure. 2.Key Code Registration. 3.Communication Check(Key Diagnosis Mode).
LEXUS	Others	0709-	GS430			Power Source Control			×	×	×	×	
LEXUS	Others	All	RX350			Engine			×	×	×	×	1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode 7.Read Freeze Frame Data

													1. Check Mode 2. Reset Memory 3. A/T Code Reset 4. A/T Code Registration 5. Read Freeze Frame Data
LEXUS	Others	All	RX350			ECT			×	×	×	×	
LEXUS	Others	All	RX350			Radar Cruise			×	×	×		1. Beam Axis Adjustment
LEXUS	Others	All	RX350			Air suspension			×	×	×	×	
													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	Others	All	RX350			ABS/VSC/TRC			×	×	×	×	
LEXUS	Others	All	RX350			Four Wheel Drive			×	×	×	×	1. Reset Memory
LEXUS	Others	All	RX350			Tire Pressure Monitor			×	×	×		
LEXUS	Others	All	RX350			EMPS			×	×	×		1. Torque Sensor Adjustment
LEXUS	Others	All	RX350			Parking Assist Monitor System			×	×	×		
LEXUS	Others	All	RX350			Air Conditioner			×	×	×	×	1. Servomotor Initialization
LEXUS	Others	All	RX350			SRS Airbag			×	×	×		
LEXUS	Others	All	RX350			Pre-Crash			×	×	×	×	
													1. Recognition ECU High Temp History Reset 2. Camera/Target Position Memory 3. Camera Axis Adjust 4. Rear Beam Axis Adjustment
LEXUS	Others	All	RX350			Pre-Crash 2			×	×	×	×	

													1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
LEXUS	Others	All	RX350			Main Body			×	×	×	×	
LEXUS	Others	All	RX350			PM1 Gateway			×	×	×		1. Initialization
LEXUS	Others	All	RX350			PM2 Gateway			×	×	×		1. Initialization
LEXUS	Others	All	RX350			Back Door			×	×	×	×	
LEXUS	Others	All	RX350			D-Door Motor			×	×	×	×	
LEXUS	Others	All	RX350			P-Door Motor			×	×	×	×	
LEXUS	Others	All	RX350			RL-Door Motor			×	×	×	×	
LEXUS	Others	All	RX350			RR-Door Motor			×	×	×	×	
LEXUS	Others	All	RX350			Driver Seat					×	×	
LEXUS	Others	All	RX350			Passenger Seat			×	×	×	×	
LEXUS	Others	All	RX350			Master Switch			×	×	×		
LEXUS	Others	All	RX350			Sliding Roof			×	×	×	×	
LEXUS	Others	All	RX350			Tilt&Telescopic			×	×	×	×	
						Combination							
LEXUS	Others	All	RX350			Meter			×	×	×	×	
LEXUS	Others	All	RX350			Mirror L			×	×	×	×	
LEXUS	Others	All	RX350			Mirror R			×	×	×	×	
LEXUS	Others	All	RX350			Clearance Sonar			×	×	×	×	
LEXUS	Others	All	RX350			AFS			×	×	×	×	1. ECU Information Synchronize
													1. Key Code Erasure. 2. Key Code Registration. 3. ECU Communication ID Registration. 4. Communication Check(Key Diagnosis Mode).
LEXUS	Others	All	RX350			Entry&Start			×	×	×	×	
LEXUS	Others	All	RX350			Power Source Control			×	×	×	×	

LEXUS	Others	All	RX350			Occupant Detection			×	×	×		
LEXUS	Others	All	RX350			Charging Control			×	×	×	×	
LEXUS	Others	All	RX350			Remote Engine Starter			×	×	×		1. Trouble Factor Code Clear
LEXUS	Others	All	RX350			Starting Control			×	×	×	×	
LEXUS	Others	All	RX350			Navigation System			×	×			
LEXUS	Brazil	All	RX350			Engine			×	×	×	×	1. VIN(VIN Read, VIN Write) 2. Reset Memory 3. Electric Throttle Learning 4. Deceleration Sensor 0 Point Calibration 5. CVT Oil Pressure Calibration 6. Check Mode 7. Read Freeze Frame Data
LEXUS	Brazil	All	RX350			ECT			×	×	×	×	1. Check Mode 2. Reset Memory 3. A/T Code Reset 4. A/T Code Registration 5. Read Freeze Frame Data
LEXUS	Brazil	All	RX350			Radar Cruise			×	×	×		1. Beam Axis Adjustment
LEXUS	Brazil	All	RX350			Air suspension			×	×	×	×	

													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset) 5. Read Freeze Frame Data
LEXUS	Brazil	All	RX350			ABS/VSC/TRC			×	×	×	×	
LEXUS	Brazil	All	RX350			Four Wheel Drive			×	×	×	×	1. Reset Memory
LEXUS	Brazil	All	RX350			Tire Pressure Monitor			×	×	×		
LEXUS	Brazil	All	RX350			EMPS			×	×	×		1. Torque Sensor Adjustment
LEXUS	Brazil	All	RX350			Parking Assist Monitor System			×	×	×		
LEXUS	Brazil	All	RX350			Air Conditioner			×	×	×	×	1. Servomotor Initialization
LEXUS	Brazil	All	RX350			SRS Airbag			×	×	×		
LEXUS	Brazil	All	RX350			Pre-Crash			×	×	×	×	
LEXUS	Brazil	All	RX350			Pre-Crash 2			×	×	×	×	1. Recognition ECU High Temp History Reset 2. Camera/Target Position Memory 3. Camera Axis Adjust 4. Rear Beam Axis Adjustment
LEXUS	Brazil	All	RX350			Main Body			×	×	×	×	1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
LEXUS	Brazil	All	RX350			PM1 Gateway			×	×	×		1. Initialization
LEXUS	Brazil	All	RX350			PM2 Gateway			×	×	×		1. Initialization
LEXUS	Brazil	All	RX350			Back Door			×	×	×	×	
LEXUS	Brazil	All	RX350			D-Door Motor			×	×	×	×	

LEXUS	Brazil	All	RX350			P-Door Motor			×	×	×	×	
LEXUS	Brazil	All	RX350			RL-Door Motor			×	×	×	×	
LEXUS	Brazil	All	RX350			RR-Door Motor			×	×	×	×	
LEXUS	Brazil	All	RX350			Driver Seat					×	×	
LEXUS	Brazil	All	RX350			Passenger Seat			×	×	×	×	
LEXUS	Brazil	All	RX350			Master Switch			×	×	×		
LEXUS	Brazil	All	RX350			Sliding Roof			×	×	×	×	
LEXUS	Brazil	All	RX350			Tilt&Telescopic			×	×	×	×	
LEXUS	Brazil	All	RX350			Combination Meter			×	×	×	×	
LEXUS	Brazil	All	RX350			Mirror L			×	×	×	×	
LEXUS	Brazil	All	RX350			Mirror R			×	×	×	×	
LEXUS	Brazil	All	RX350			Clearance Sonar			×	×	×	×	
LEXUS	Brazil	All	RX350			AFS			×	×	×	×	1. ECU Information Synchronize
LEXUS	Brazil	All	RX350			Entry&Start			×	×	×	×	1. Key Code Erasure. 2. Key Code Registration. 3. ECU Communication ID Registration. 4. Communication Check(Key Diagnosis Mode).
LEXUS	Brazil	All	RX350			Power Source Control			×	×	×	×	
LEXUS	Brazil	All	RX350			Occupant Detection			×	×	×		
LEXUS	Brazil	All	RX350			Charging Control			×	×	×	×	
LEXUS	Brazil	All	RX350			Remote Engine Starter			×	×	×		1. Trouble Factor Code Clear

LEXUS	Brazil	All	RX350			Starting Control			×	×	×	×	
													1.VIN(VIN Read,VIN Write) 2.Reset Memory 3.Electric Throttle Learning 4.Deceleration Sensor 0 Point Calibration 5.CVT Oil Pressure Calibration 6.Check Mode 7.Read Freeze Frame Data
LEXUS	All	All	RX450h			Engine			×	×	×	×	
LEXUS	All	All	RX450h			Hybrid Control			×	×	×	×	1.VIN Read
LEXUS	All	All	RX450h			Radar Cruise			×	×	×		1.Beam Axis Adjustment
LEXUS	All	All	RX450h			Air suspension			×	×	×	×	
LEXUS	All	All	RX450h			Front Stabilizer			×	×	×	×	
LEXUS	All	All	RX450h			Rear Stabilizer			×	×	×	×	
													1.Air Bleeding 2.Reset Memory 3.Test Mode 4.ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset) 5.Read Freeze Frame Data
LEXUS	All	All	RX450h			ABS/VSC/TRC			×	×	×	×	
LEXUS	All	All	RX450h			Tire Pressure Monitor			×	×	×		
LEXUS	All	All	RX450h			EMPS			×	×	×		1.Torque Sensor Adjustment
LEXUS	All	All	RX450h			Parking Assist Monitor System			×	×	×		
LEXUS	All	All	RX450h			Air Conditioner			×	×	×	×	1.Servomotor Initialization

LEXUS	A11	A11	RX450h			SRS Airbag			×	×	×		
LEXUS	A11	A11	RX450h			Pre-Crash			×	×	×	×	
													1. Recognition ECU High Temp History Reset 2. Camera/Target Position Memory 3. Camera Axis Adjust 4. Rear Beam Axis Adjustment
LEXUS	A11	A11	RX450h			Pre-Crash 2			×	×	×	×	
													1. Initialization 2. Wireless Code Erasure 3. Wireless Code Registration
LEXUS	A11	A11	RX450h			Main Body			×	×	×	×	
LEXUS	A11	A11	RX450h			PM1 Gateway			×	×	×		1. Initialization
LEXUS	A11	A11	RX450h			PM2 Gateway			×	×	×		1. Initialization
LEXUS	A11	A11	RX450h			Back Door			×	×	×	×	
LEXUS	A11	A11	RX450h			D-Door Motor			×	×	×	×	
LEXUS	A11	A11	RX450h			P-Door Motor			×	×	×	×	
LEXUS	A11	A11	RX450h			RL-Door Motor			×	×	×	×	
LEXUS	A11	A11	RX450h			RR-Door Motor			×	×	×	×	
LEXUS	A11	A11	RX450h			Driver Seat					×	×	
LEXUS	A11	A11	RX450h			Passenger Seat			×	×	×	×	
LEXUS	A11	A11	RX450h			Master Switch			×	×	×		
LEXUS	A11	A11	RX450h			Sliding Roof			×	×	×	×	
LEXUS	A11	A11	RX450h			Tilt&Telescopic			×	×	×	×	
						Combination							
LEXUS	A11	A11	RX450h			Meter			×	×	×	×	
LEXUS	A11	A11	RX450h			Mirror L			×	×	×	×	
LEXUS	A11	A11	RX450h			Mirror R			×	×	×	×	
LEXUS	A11	A11	RX450h			Clearance Sonar			×	×	×	×	
													1. ECU Information Synchronize
LEXUS	A11	A11	RX450h			AFS			×	×	×	×	

													1.Key Code Erasure. 2.Key Code Registration. 3.ECU Communication ID Registration. 4.Communication Check(Key Diagnosis Mode).
LEXUS	A11	A11	RX450h			Entry&Start			×	×	×	×	
LEXUS	A11	A11	RX450h			Power Source Control			×	×	×	×	
LEXUS	A11	A11	RX450h			Occupant Detection			×	×	×		
LEXUS	A11	A11	RX450h			Remote Engine Starter			×	×	×		1.Trouble Factor Code Clear
LEXUS	A11	A11	RX450h			Navigation System			×	×			
LEXUS	A11	A11	SC300			Engine and ECT			×	×	×	×	1. Check Mode 2. Reset Memory
LEXUS	A11	A11	SC300			Cruise Control			×	×			
LEXUS	A11	A11	SC300			Immobiliser			×	×	×	×	1.Key Code Registration 2.Key Code Erasure 3.Auto Registration Closure
LEXUS	A11	A11	RX300			Engine and ECT			×	×	×	×	1. Check Mode 2. Reset Memory
LEXUS	A11	A11	RX300			ABS/VSC/TRC			×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	A11	RX300			Air Conditioner			×	×	×	×	1. Compass calibration 2. Servomotor Initialization

SERVICE SOLUTIONS

LEXUS	A11	A11	RX300			Immobiliser			×	×	×	×	1.Key Code Registration 2.Key Code Erasure 3.Auto Registration Closure
LEXUS	A11	A11	RX300			Theft Deterrent			×	×	×	×	
LEXUS	A11	A11	RX300			SRS Airbag			×	×			
LEXUS	A11	A11	RX300			Body			×	×	×	×	1.Wireless Code Erasure 2.Wireless Code Registration
LEXUS	A11	A11	RX300			Driver Door			×	×	×	×	
LEXUS	A11	A11	RX300			Passenger Door			×	×	×	×	
LEXUS	A11	A11	RX300			Rear Left Door			×	×	×	×	
LEXUS	A11	A11	RX300			Rear Right Door			×	×	×	×	
LEXUS	A11	A11	RX300			Sliding Roof					×	×	
LEXUS	A11	A11	RX300			Combination Meter					×	×	
LEXUS	A11	A11	A11			Cruise Control			×	×			
LEXUS	A11	A11	A11			Air suspension			×	×	×	×	
LEXUS	A11	A11	A11			Back Door			×	×	×	×	
LEXUS	A11	A11	A11			Driver Seat					×	×	
LEXUS	A11	A11	A11			Master Switch					×	×	
LEXUS	A11	A11	A11			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	A11	A11			Rain Sensor					×		
LEXUS	A11	A11	A11			Wiper					×	×	
LEXUS	A11	A11	A11			AFS			×	×	×	×	
LEXUS	A11	-0408	LX470			Engine and ECT			×	×	×	×	1. Check Mode 2. Reset Memory
LEXUS	A11	-0408	LX470			Cruise Control			×	×			
LEXUS	A11	-0408	LX470			AHC			×	×	×	×	

													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility (ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	-0408	LX470			ABS/VSC/TRC			×	×	×	×	
LEXUS	A11	-0408	LX470			VGRS			×	×	×		1. Steering Angle Adjust
LEXUS	A11	-0408	LX470			Immobiliser			×	×	×	×	1. Transponder Code Registration 2. Transponder Code Erasure
LEXUS	A11	-0408	LX470			Theft Deterrent			×	×	×	×	
LEXUS	A11	-0408	LX470			SRS Airbag			×	×			
LEXUS	A11	-0408	LX470			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	-0408	LX470			Body No. 2					×	×	
LEXUS	A11	-0408	LX470			Driver Door			×	×	×	×	
LEXUS	A11	-0408	LX470			Driver Seat					×	×	
LEXUS	A11	-0408	LX470			Sliding Roof					×	×	
LEXUS	A11	-0408	LX470			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	-0408	LX470			Mirror					×	×	
LEXUS	A11	-0408	LX470			Rain Sensor					×		
LEXUS	A11	-0408	LX470			Wiper					×	×	
LEXUS	A11	0408-	LX470			Engine and ECT			×	×	×	×	1. Check Mode 2. Reset Memory
LEXUS	A11	0408-	LX470			Cruise Control			×	×			
LEXUS	A11	0408-	LX470			AHC			×	×	×	×	

													1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)
LEXUS	A11	0408-	LX470			ABS/VSC/TRC			×	×	×	×	
LEXUS	A11	0408-	LX470			VGRS			×	×	×		1. Steering Angle Adjust
LEXUS	A11	0408-	LX470			Immobiliser			×	×	×	×	1. Transponder Code Registration 2. Transponder Code Erasure
LEXUS	A11	0408-	LX470			Theft Deterrent			×	×	×	×	
LEXUS	A11	0408-	LX470			SRS Airbag			×	×			
LEXUS	A11	0408-	LX470			Body			×	×	×	×	1. Wireless Code Erasure 2. Wireless Code Registration
LEXUS	A11	0408-	LX470			Body No. 2					×	×	
LEXUS	A11	0408-	LX470			Driver Door			×	×	×	×	
LEXUS	A11	0408-	LX470			Driver Seat					×	×	
LEXUS	A11	0408-	LX470			Sliding Roof					×	×	
LEXUS	A11	0408-	LX470			Tilt&Telescopic			×	×	×	×	
LEXUS	A11	0408-	LX470			Mirror					×	×	
LEXUS	A11	0408-	LX470			Rain Sensor					×		
LEXUS	A11	0408-	LX470			Wiper					×	×	
LEXUS	A11	A11	CELICA			Engine and ECT			×	×	×	×	1. Check Mode 2. Reset Memory
LEXUS	A11	A11	CELICA			ABS/VSC/TRC			×	×	×	×	1. Air Bleeding 2. Reset Memory 3. Test Mode 4. ECB Utility(ECB Invalid, Zero Down, Linear Valve Offset)



SERVICE SOLUTIONS

													1. Transponder Code Registration
LEXUS	A11	A11	CELICA			Immobiliser			×	×	×	×	2. Transponder Code Erasure
LEXUS	A11	A11	CELICA			SRS Airbag			×	×			