

How to read this list:	
Mark	Description
X	Function is supported.
*	Function is added or developed newly

Test Function List													
Automaker:				MAZDA									
Software Version:				V5.2									
Automaker	Region	Year	Model	Vehicle Type	ECU Type	System	ECU Supplier	Sys. Info.	Read Code	Clear Code	Data Stream	Actuations	Special Functions
Mazda	ASIA	2000-2008	MAZDA2			PCM			X	X	X		
Mazda	ASIA	2000-2008	MAZDA2			ABSVTCS			X	X	X		
Mazda	ASIA	2000-2008	MAZDA2			ICM			X	X	X		
Mazda	ASIA	2000-2008	MAZDA2			TCM			X	X	X		
Mazda	ASIA	2000-2008	MAZDA2			EPS			X	X	X		
Mazda	ASIA	2000-2008	MAZDA2			RCM			X	X	X		
Mazda	ASIA	2000-2008	MAZDA2			GEM			X	X	X		
Mazda	ASIA	2009	MAZDA2(Europe)			PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2009	MAZDA2(Europe)			PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2009	MAZDA2(Europe)			ABS			X	X	X		
Mazda	ASIA	2009	MAZDA2(Europe)			RCM			X	X	X		
Mazda	ASIA	2009	MAZDA2(Europe)			ICM			X	X	X		
Mazda	ASIA	2009	MAZDA2(Europe)			EPS			X	X	X		Calibration After Parts Removal or Replacement
Mazda	ASIA	2009	MAZDA2(Europe)			EPS			X	X	X		Restoration Procedure for DTC_C1B00_95
Mazda	ASIA	2009	MAZDA2(Europe)			EPS			X	X	X		Restoration Procedure for DTC_C1B00_54
Mazda	ASIA	2009	MAZDA2(Europe)			BCM/GEM			X	X	X		
Mazda	ASIA	2009	MAZDA2(Europe)			RKE			X	X	X		
Mazda	ASIA	2009	MAZDA2(Europe)			VSM			X	X	X		
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)			PCM			X	X	X		

Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)		ABS			X	X	X		brake fluid pressure sensor
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)		ABS			X	X	X		Lateral Acceleration Sensor
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)		RCM			X	X	X		
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)		ICM			X	X	X		
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)		EPS			X	X	X		Calibration After Parts Removal or Replacement
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)		EPS			X	X	X		Restoration Procedure for DTC_C1B00_95
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)		EPS			X	X	X		Restoration Procedure for DTC_C1B00_54
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)		BCM/GEM			X	X	X		
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)		RKE			X	X	X		
Mazda	ASIA	2007	MAZDA2(ZY 1.5L,Europe)		VSM			X	X	X		
Mazda	ASIA	2011	MAZDA2(ZY 1.5L)		PCM			X	X	X		
Mazda	ASIA	2011	MAZDA2(ZY 1.5L)		ABS			X	X	X		
Mazda	ASIA	2011	MAZDA2(ZY 1.5L)		RCM			X	X	X		
Mazda	ASIA	2011	MAZDA2(ZY 1.5L)		ICM			X	X	X		
Mazda	ASIA	2011	MAZDA2(ZY 1.5L)		EPS			X	X	X		Calibration After Parts Removal or Replacement
Mazda	ASIA	2011	MAZDA2(ZY 1.5L)		EPS			X	X	X		Restoration Procedure for DTC_C1B00_95
Mazda	ASIA	2011	MAZDA2(ZY 1.5L)		EPS			X	X	X		Restoration Procedure for DTC_C1B00_54
Mazda	ASIA	2011	MAZDA2(ZY 1.5L)		GEM			X	X	X		
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)		PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)		PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)		ABS			X	X	X		brake fluid pressure sensor
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)		ABS			X	X	X		Lateral Acceleration Sensor
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)		RCM			X	X	X		
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)		ICM			X	X	X		

Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)			EPS			X	X	X		Calibration After Parts Removal or Replacement
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)			EPS			X	X	X		Restoration Procedure for DTC C1B00 95
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)			EPS			X	X	X		Restoration Procedure for DTC C1B00 54
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)			BCM/GEM			X	X	X		
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)			RKE			X	X	X		
Mazda	ASIA	2008	MAZDA2(ZJ 1.3L)			VSM			X	X	X		
Mazda	ASIA	2000-2008	MAZDA3			PCM			X	X	X		
Mazda	ASIA	2000-2008	MAZDA3			ABS/TCS			X	X	X		
Mazda	ASIA	2000-2008	MAZDA3			ICM			X	X	X		
Mazda	ASIA	2000-2008	MAZDA3			TCM			X	X	X		
Mazda	ASIA	2000-2008	MAZDA3			EPS			X	X	X		
Mazda	ASIA	2000-2008	MAZDA3			RCM			X	X	X		
Mazda	ASIA	2000-2008	MAZDA3			GEM			X	X	X		
Mazda	ASIA	2009-2010	AXELA/MAZDA3(2.0L)			PCM			X	X	X		
Mazda	ASIA	2009-2010	AXELA/MAZDA3(2.0L)			ABS			X	X	X		
Mazda	ASIA	2009-2010	AXELA/MAZDA3(2.0L)			EPS			X	X	X		
Mazda	ASIA	2009-2010	AXELA/MAZDA3(2.0L)			RCM			X	X	X		
Mazda	ASIA	2009-2010	AXELA/MAZDA3(2.0L)			TCM			X	X	X		
Mazda	ASIA	2009-2010	AXELA/MAZDA3(2.0L)			BCM			X	X	X		
Mazda	ASIA	2009-2010	AXELA/MAZDA3(2.0L)			ICM			X	X	X		
Mazda	ASIA	2005	MAZDA3(L3_T 2.3L, North America)			PCM			X	X	X	*	
Mazda	ASIA	2005	MAZDA3(L3_T 2.3L, North America)			ABS			X	X	X	*	brake fluid pressure sensor
Mazda	ASIA	2005	MAZDA3(L3_T 2.3L, North America)			ABS			X	X	X		Lateral Acceleration Sensor
Mazda	ASIA	2005	MAZDA3(L3_T 2.3L, North America)			RCM			X	X	X		
Mazda	ASIA	2005	MAZDA3(L3_T 2.3L, North America)			ICM			X	X	X		
Mazda	ASIA	2005	MAZDA3(L3_T 2.3L, North America)			EPS			X	X	X		
Mazda	ASIA	2005	MAZDA3(L3_T 2.3L, North America)			GEM			X	X	X		
Mazda	ASIA	2005	MAZDA3(L3_T 2.3L, North America)			TPM			X	X	X		
Mazda	ASIA	2006	AXELA/MAZDA3(L3_T 2.3L)			PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2006	AXELA/MAZDA3(L3_T 2.3L)			PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2006	AXELA/MAZDA3(L3_T 2.3L)			ABS			X	X	X		brake fluid pressure sensor

Mazda	ASIA	2006	AXELA/MAZDA3(L3_T 2.3L)			ABS			X	X	X		Lateral Acceleration Sensor
Mazda	ASIA	2006	AXELA/MAZDA3(L3_T 2.3L)			RCM			X	X	X		
Mazda	ASIA	2006	AXELA/MAZDA3(L3_T 2.3L)			ICM			X	X	X		
Mazda	ASIA	2006	AXELA/MAZDA3(L3_T 2.3L)			GEM			X	X	X		
Mazda	ASIA	2006	AXELA/MAZDA3(L3_T 2.3L)			RKE			X	X	X		
Mazda	ASIA	2007	MAZDA3(L3_T 2.3L)			PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2007	MAZDA3(L3_T 2.3L)			PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2007	MAZDA3(L3_T 2.3L)			ABS			X	X	X		brake fluid pressure sensor
Mazda	ASIA	2007	MAZDA3(L3_T 2.3L)			ABS			X	X	X		Lateral Acceleration Sensor
Mazda	ASIA	2007	MAZDA3(L3_T 2.3L)			RCM			X	X	X		
Mazda	ASIA	2007	MAZDA3(L3_T 2.3L)			ICM			X	X	X		
Mazda	ASIA	2007	MAZDA3(L3_T 2.3L)			GEM			X	X	X		
Mazda	ASIA	2007	MAZDA3(L3_T 2.3L)			TPM			X	X	X		
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			PCM			X	X	X		DPF Assessment
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			PCM			X	X	X		DPF Regeneration
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			PCM			X	X	X		Reset PCM
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			PCM			X	X	X		Reset Engine Oil
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			PCM			X	X	X		Reset Fuel Pump
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			PCM			X	X	X		Reset Injector
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			PCM			X	X	X		Reset MAF Sensor
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			PCM			X	X	X		Reset O2 Sensor
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			PCM			X	X	X		Reset DPF Pressure Sensor
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			PCM			X	X	X		Reset DPF
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			ABS			X	X	X		Yaw rate sensor Initialization
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			ABS			X	X	X		Longitudinal Acceleration Sensor Initialization
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			RCM			X	X	X		
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			ICM			X	X	X		

Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			EPS			X	X	X		
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			BCM/GEM			X	X	X		
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			EATC			X	X	X		
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			RKE			X	X	X		
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			AFS			X	X	X		
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			MID			X	X	X		
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.2L)			FFH			X	X	X		
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.3L)			PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.3L)			PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.3L)			ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.3L)			RCM			X	X	X		
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.3L)			ICM			X	X	X		
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.3L)			GEM			X	X	X		
Mazda	ASIA	2000-2011	MAZDA3 (Europe 2.3L)			RKE			X	X	X		
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)			PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)			PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)			ABS			X	X	X		brake fluid pressure sensor
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)			ABS			X	X	X		Lateral Acceleration Sensor
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)			ABS			X	X	X		Yaw rate sensor
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)			ABS			X	X	X		Longitudinal Acceleration Sensor
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)			RCM			X	X	X		
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)			ICM			X	X	X		
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)			EPS			X	X	X		
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)			BCM/GEM			X	X	X		
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)			EATC			X	X	X		
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)			RKE			X	X	X		
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)			RVM			X	X	X		
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)			AFS			X	X	X		
Mazda	ASIA	2009	MAZDA3 (Z6 1.6L)			MID			X	X	X		
Mazda	ASIA	2000-2008	MAZDA5			PCM			X	X	X		
Mazda	ASIA	2000-2008	MAZDA5			ABSTCS			X	X	X		
Mazda	ASIA	2000-2008	MAZDA5			ICM			X	X	X		
Mazda	ASIA	2000-2008	MAZDA5			TCM			X	X	X		

Mazda	ASIA	2000-2008	MAZDA5			EPS			X	X	X		
Mazda	ASIA	2000-2008	MAZDA5			RCM			X	X	X		
Mazda	ASIA	2000-2008	MAZDA5			GEM			X	X	X		
Mazda	ASIA	2005	MAZDA5(L3 2.3L,Japan/General Specs)			PCM			*	*	*		
Mazda	ASIA	2005	MAZDA5(L3 2.3L,Japan/General Specs)			ABS			*	*	*		
Mazda	ASIA	2005	MAZDA5(L3 2.3L,Japan/General Specs)			RCM			*	*	*		
Mazda	ASIA	2005	MAZDA5(L3 2.3L,Japan/General Specs)			ICM			*	*	*		
Mazda	ASIA	2005	MAZDA5(L3 2.3L,Japan/General Specs)			EPS			*	*	*		
Mazda	ASIA	2005	MAZDA5(L3 2.3L,Japan/General Specs)			GEM			*	*	*		
Mazda	ASIA	2005	MAZDA5(L3 2.3L,Japan/General Specs)			EATC			*	*	*		
Mazda	ASIA	2005	MAZDA5(L3 2.3L,Japan/General Specs)			RKE			*	*	*		
Mazda	ASIA	2010	MAZDA5(L3 2.3L,North America Specs)			PCM			X	X	X		
Mazda	ASIA	2010	MAZDA5(L3 2.3L,North America Specs)			ABS			X	X	X		brake fluid pressure sensor
Mazda	ASIA	2010	MAZDA5(L3 2.3L,North America Specs)			ABS			X	X	X		Lateral Acceleration Sensor
Mazda	ASIA	2010	MAZDA5(L3 2.3L,North America Specs)			RCM			X	X	X		
Mazda	ASIA	2010	MAZDA5(L3 2.3L,North America Specs)			ICM			X	X	X		
Mazda	ASIA	2010	MAZDA5(L3 2.3L,North America Specs)			EPS			X	X	X		
Mazda	ASIA	2010	MAZDA5(L3 2.3L,North America Specs)			GEM			X	X	X		
Mazda	ASIA	2010	MAZDA5(L3 2.3L,North America Specs)			EATC			X	X	X		
Mazda	ASIA	2010	MAZDA5(L3 2.3L,North America Specs)			TPM			X	X	X		
Mazda	ASIA	2000-2008	MAZDA6			PCM			X	X	X		
Mazda	ASIA	2000-2008	MAZDA6			ABSTCS			X	X	X		
Mazda	ASIA	2000-2008	MAZDA6			ICM			X	X	X		
Mazda	ASIA	2000-2008	MAZDA6			TCM			X	X	X		
Mazda	ASIA	2000-2008	MAZDA6			EPS			X	X	X		
Mazda	ASIA	2000-2008	MAZDA6			RCM			X	X	X		
Mazda	ASIA	2000-2008	MAZDA6			GEM			X	X	X		
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)			PCM			X	X	X		DPF Assessment
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)			PCM			X	X	X		DPF Regeneration
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)			PCM			X	X	X		Reset Engine Oil
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)			PCM			X	X	X		Reset Fuel Pump
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)			PCM			X	X	X		Reset Injector
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)			PCM			X	X	X		Reset MAF Sensor
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)			PCM			X	X	X		Reset O2 Sensor
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)			PCM			X	X	X		Reset DPF Pressure Sensor
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)			PCM			X	X	X		Reset DPF
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)			ABS			X	X	X		
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)			ICM			X	X			
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)			BCM/GEM			X	X			

Mazda	ASIA	2009	MAZDA6 (GH,before facelift)		EPS			X	X	X		
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)		RCM			X	X	X		
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)		EATC			X	X			
Mazda	ASIA	2009	MAZDA6 (GH,before facelift)		RVM			X	X			
Mazda	ASIA	2003	MAZDA6 (RF_T 2.0L)		PCM			X	X	X		
Mazda	ASIA	2003	MAZDA6 (RF_T 2.0L)		ABS			X	X	X		Yaw rate sensor
Mazda	ASIA	2003	MAZDA6 (RF_T 2.0L)		ABS			X	X	X		Lateral Acceleration Sensor
Mazda	ASIA	2003	MAZDA6 (RF_T 2.0L)		RCM			X	X	X		
Mazda	ASIA	2003	MAZDA6 (RF_T 2.0L)		ICM			X	X	X		
Mazda	ASIA	2003	MAZDA6 (RF_T 2.0L)		LHID			X	X	X		
Mazda	ASIA	2003	MAZDA6 (RF_T 2.0L)		RHID			X	X	X		
Mazda	ASIA	2004	MAZDA6 (RF_T 2.0L)		PCM			X	X	X		
Mazda	ASIA	2004	MAZDA6 (RF_T 2.0L)		ABS			X	X	X		Yaw rate sensor
Mazda	ASIA	2004	MAZDA6 (RF_T 2.0L)		ABS			X	X	X		Lateral Acceleration Sensor
Mazda	ASIA	2004	MAZDA6 (RF_T 2.0L)		RCM			X	X	X		
Mazda	ASIA	2004	MAZDA6 (RF_T 2.0L)		ICM			X	X	X		
Mazda	ASIA	2004	MAZDA6 (RF_T 2.0L)		LHID			X	X	X		
Mazda	ASIA	2004	MAZDA6 (RF_T 2.0L)		RHID			X	X	X		
Mazda	ASIA	2004	MAZDA6 (AJ 3.0L)		PCM			X	X	X		
Mazda	ASIA	2004	MAZDA6 (AJ 3.0L)		ABS			X	X	X		
Mazda	ASIA	2004	MAZDA6 (AJ 3.0L)		RCM			X	X	X		
Mazda	ASIA	2004	MAZDA6 (AJ 3.0L)		ICM			X	X	X		
Mazda	ASIA	2003	MAZDA6 (L3 2.3L)		PCM			X	X	X		
Mazda	ASIA	2003	MAZDA6 (L3 2.3L)		ABS			X	X	X		
Mazda	ASIA	2003	MAZDA6 (L3 2.3L)		RCM			X	X	X		
Mazda	ASIA	2003	MAZDA6 (L3 2.3L)		ICM			X	X	X		
Mazda	ASIA	2004	MAZDA6 (L3 2.3L)		PCM			X	X	X		
Mazda	ASIA	2004	MAZDA6 (L3 2.3L)		ABS			X	X	X		
Mazda	ASIA	2004	MAZDA6 (L3 2.3L)		RCM			X	X	X		
Mazda	ASIA	2004	MAZDA6 (L3 2.3L)		ICM			X	X	X		
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)		PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)		PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)		PCM			X	X	X		DPF Reset
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)		PCM			X	X	X		DPF Assessment
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)		PCM			X	X	X		DPF Regeneration
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)		PCM			X	X	X		Reset PCM
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)		PCM			X	X	X		Reset Engine Oil

Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)			PCM			X	X	X		Reset Fuel pump
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)			PCM			X	X	X		Reset Injector
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)			PCM			X	X	X		Reset MAF sensor
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)			PCM			X	X	X		Reset O2/Air Fuel Ratio (A/F) Sensor
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)			PCM			X	X	X		Reset DPF Pressure Sensor
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)			PCM			X	X	X		Reset DPF
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)			PCM			X	X	X		Reset ETB/EGR
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)			ABS			X	X	X		Yaw rate sensor Initialization
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)			ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)			RCM			X	X	X		
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)			ICM			X	X	X		
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)			GEM			X	X	X		
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)			RKE			X	X	X		
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)			LHID			X	X	X		
Mazda	ASIA	2005-2007	MAZDA6 (RF_T 2.0L)			RHID			X	X	X		
Mazda	ASIA	2005	MAZDA6(L3_T 2.3L,General)			PCM			X	X	X		
Mazda	ASIA	2005	MAZDA6(L3_T 2.3L,General)			ABS			X	X	X		Yaw rate sensor Initialization
Mazda	ASIA	2005	MAZDA6(L3_T 2.3L,General)			ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2005	MAZDA6(L3_T 2.3L,General)			RCM			X	X	X		
Mazda	ASIA	2005	MAZDA6(L3_T 2.3L,General)			ICM			X	X	X		
Mazda	ASIA	2005	MAZDA6(L3_T 2.3L,General)			GEM			X	X	X		
Mazda	ASIA	2005	MAZDA6(L3_T 2.3L,General)			RKE			X	X	X		
Mazda	ASIA	2005	MAZDA6(L3_T 2.3L,General)			LHID			X	X	X		
Mazda	ASIA	2005	MAZDA6(L3_T 2.3L,General)			RHID			X	X	X		
Mazda	ASIA	2006	MAZDA6(L3_T 2.3L)			PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2006	MAZDA6(L3_T 2.3L)			PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2006	MAZDA6(L3_T 2.3L)			ABS			X	X	X		
Mazda	ASIA	2006	MAZDA6(L3_T 2.3L)			RCM			X	X	X		
Mazda	ASIA	2006	MAZDA6(L3_T 2.3L)			ICM			X	X	X		
Mazda	ASIA	2006	MAZDA6(L3_T 2.3L)			GEM			X	X	X		
Mazda	ASIA	2006	MAZDA6(L3_T 2.3L)			RKE			X	X	X		
Mazda	ASIA	2008	MAZDA6 (L8 1.8L)			PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2008	MAZDA6 (L8 1.8L)			PCM			X	X	X		KOER On Demand Self Test

Mazda	ASIA	2008	MAZDA6 (L8 1.8L)			ABS			X	X	X		
Mazda	ASIA	2008	MAZDA6 (L8 1.8L)			RCM			X	X	X		
Mazda	ASIA	2008	MAZDA6 (L8 1.8L)			ICM			X	X	X		
Mazda	ASIA	2008	MAZDA6 (L8 1.8L)			EPS			X	X	X		Neutral Position Setting
Mazda	ASIA	2008	MAZDA6 (L8 1.8L)			GEM			X	X	X		
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		DPF Assessment
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		DPF Regeneration
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		Reset PCM
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		Reset Engine Oil
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		Reset Fuel Pump
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		Reset Injector
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		Reset MAF Sensor
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		Reset O2 Sensor
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		Reset DPF Pressure Sensor
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		Reset DPF
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)			ABS			X	X	X		
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)			RCM			X	X	X		
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)			ICM			X	X	X		
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)			EPS			X	X	X		Neutral Position Setting
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)			BCM/GEM			X	X	X		
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)			EATC			X	X	X		
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)			RKE			X	X	X		
Mazda	ASIA	2009	MAZDA6 (R2_T 2.2L)			RVM			X	X	X		
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		DPF Assessment
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		DPF Regeneration
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		Reset PCM
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		Reset Engine Oil
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		Reset Fuel Pump
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		Reset Injector
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		Reset MAF Sensor
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		Reset O2 Sensor
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		Reset DPF Pressure Sensor

Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)			PCM			X	X	X		Reset DPF
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)			ABS			X	X	X		Longitudinal Acceleration Sensor Initialization
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)			RCM			X	X	X		
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)			ICM			X	X	X		
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)			EPS			X	X	X		Neutral Position Setting
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)			BCM/GEM			X	X	X		
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)			EATC			X	X	X		
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)			RKE			X	X	X		
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)			RVM			X	X	X		
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)			AFS			X	X	X		
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)			ICCM			X	X	X		
Mazda	ASIA	2011	MAZDA6 (R2_T 2.2L)			MPM			X	X	X		
Mazda	ASIA	2010	MAZDA6 (Europe)			PCM			X	X	X		DPF Assessment
Mazda	ASIA	2010	MAZDA6 (Europe)			PCM			X	X	X		DPF Regeneration
Mazda	ASIA	2010	MAZDA6 (Europe)			PCM			X	X	X		PCM
Mazda	ASIA	2010	MAZDA6 (Europe)			PCM			X	X	X		Engine Oil
Mazda	ASIA	2010	MAZDA6 (Europe)			PCM			X	X	X		Fuel Pump
Mazda	ASIA	2010	MAZDA6 (Europe)			PCM			X	X	X		Injector
Mazda	ASIA	2010	MAZDA6 (Europe)			PCM			X	X	X		MAF Sensor
Mazda	ASIA	2010	MAZDA6 (Europe)			PCM			X	X	X		O2 Sensor
Mazda	ASIA	2010	MAZDA6 (Europe)			PCM			X	X	X		DPF Pressure Sensor
Mazda	ASIA	2010	MAZDA6 (Europe)			PCM			X	X	X		DPF
Mazda	ASIA	2010	MAZDA6 (Europe)			ABS			X	X	X		Sensor Initialization
Mazda	ASIA	2010	MAZDA6 (Europe)			RCM			X	X	X		
Mazda	ASIA	2010	MAZDA6 (Europe)			ICM			X	X	X		
Mazda	ASIA	2010	MAZDA6 (Europe)			EPS			X	X	X		Neutral Position Setting
Mazda	ASIA	2010	MAZDA6 (Europe)			BCM/GEM			X	X	X		
Mazda	ASIA	2010	MAZDA6 (Europe)			EATC			X	X	X		
Mazda	ASIA	2010	MAZDA6 (Europe)			RKE			X	X	X		
Mazda	ASIA	2010	MAZDA6 (Europe)			RVM			X	X	X		
Mazda	ASIA	2010	MAZDA6 (Europe)			AFS			X	X	X		
Mazda	ASIA	2000-2008	MAZDA8			PCM			X	X	X		
Mazda	ASIA	2000-2008	MAZDA8			ABSVTCS			X	X	X		
Mazda	ASIA	2000-2008	MAZDA8			ICM			X	X	X		
Mazda	ASIA	2000-2008	MAZDA8			TCM			X	X	X		
Mazda	ASIA	2000-2008	MAZDA8			EPS			X	X	X		
Mazda	ASIA	2000-2008	MAZDA8			RCM			X	X	X		
Mazda	ASIA	2000-2008	MAZDA8			GEM			X	X	X		

Mazda	ASIA	2001	PREMACY(FS 2.0L)			PCM			X	X	X		
Mazda	ASIA	2001	PREMACY(FS 2.0L)			ABS			X	X	X		
Mazda	ASIA	2005	PREMACY(L3 2.3L,Japan/General Specs)			PCM			*	*	*		
Mazda	ASIA	2005	PREMACY(L3 2.3L,Japan/General Specs)			ABS			*	*	*		
Mazda	ASIA	2005	PREMACY(L3 2.3L,Japan/General Specs)			RCM			*	*	*		
Mazda	ASIA	2005	PREMACY(L3 2.3L,Japan/General Specs)			ICM			*	*	*		
Mazda	ASIA	2005	PREMACY(L3 2.3L,Japan/General Specs)			EPS			*	*	*		
Mazda	ASIA	2005	PREMACY(L3 2.3L,Japan/General Specs)			GEM			*	*	*		
Mazda	ASIA	2005	PREMACY(L3 2.3L,Japan/General Specs)			EATC			*	*	*		
Mazda	ASIA	2005	PREMACY(L3 2.3L,Japan/General Specs)			RKE			*	*	*		
Mazda	ASIA	2000-2008	PREMACY			PCM			X	X	X		
Mazda	ASIA	2000-2008	PREMACY			ABSTCS			X	X	X		
Mazda	ASIA	2000-2008	PREMACY			ICM			X	X	X		
Mazda	ASIA	2000-2008	PREMACY			TCM			X	X	X		
Mazda	ASIA	2000-2008	PREMACY			EPS			X	X	X		
Mazda	ASIA	2000-2008	PREMACY			RCM			X	X	X		
Mazda	ASIA	2000-2008	PREMACY			GEM			X	X	X		
Mazda	ASIA	2000-2008	TRIBUTE/ESCAPE			PCM			X	X	X		
Mazda	ASIA	2000-2008	TRIBUTE/ESCAPE			ABSTCS			X	X	X		
Mazda	ASIA	2000-2008	TRIBUTE/ESCAPE			ICM			X	X	X		
Mazda	ASIA	2000-2008	TRIBUTE/ESCAPE			TCM			X	X	X		
Mazda	ASIA	2000-2008	TRIBUTE/ESCAPE			EPS			X	X	X		
Mazda	ASIA	2000-2008	TRIBUTE/ESCAPE			RCM			X	X	X		
Mazda	ASIA	2000-2008	TRIBUTE/ESCAPE			GEM			X	X	X		
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)			PCM			X	X	X		
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)			ABS			X	X	X		
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)			RCM			X	X	X		
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)			IC			X	X	X		
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)			GEM/SJB			X	X	X		
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)			ACM			X	X	X		
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)			FCIM			X	X	X		
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)			FDIM			X	X	X		
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)			HVAC			X	X	X		
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)			SDARS			X	X	X		
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)			4X4			X	X	X		
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)			OCSM			X	X	X		
Mazda	ASIA	2008	TRIBUTE/ESCAPE(DURATEC-HE 2.3L)			PAM			X	X	X		
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)			PCM			X	X	X		
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)			ABS			X	X	X		
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)			RCM			X	X	X		
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)			ICM			X	X	X		
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)			GEM/SJB			X	X	X		

Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)		4X4			X	X	X		
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)		ACM			X	X	X		
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)		APIM			X	X	X		
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)		FCIM			X	X	X		
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)		FDIM			X	X	X		
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)		HVAC			X	X	X		
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)		OCSM			X	X	X		
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)		PAM			X	X	X		
Mazda	ASIA	2009	TRIBUTE/ESCAPE(4V 3.0L)		SDARS			X	X	X		
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)		PCM			X	X	X		
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)		ABS			X	X	X		
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)		RCM			X	X	X		
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)		IC			X	X	X		
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)		GEM/SJB			X	X	X		
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)		ACM			X	X	X		
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)		FCIM			X	X	X		
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)		HVAC			X	X	X		
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)		4X4			X	X	X		
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)		APIM			X	X	X		
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)		OCSM			X	X	X		
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)		PAM			X	X	X		
Mazda	ASIA	2010	TRIBUTE/ESCAPE(4V 3.0L)		GPSM			X	X	X		
Mazda	ASIA	2000-2008	RX-8		PCM			X	X	X		
Mazda	ASIA	2000-2008	RX-8		ABSVTCS			X	X	X		
Mazda	ASIA	2000-2008	RX-8		ICM			X	X	X		
Mazda	ASIA	2000-2008	RX-8		TCM			X	X	X		
Mazda	ASIA	2000-2008	RX-8		EPS			X	X	X		
Mazda	ASIA	2000-2008	RX-8		RCM			X	X	X		
Mazda	ASIA	2000-2008	RX-8		GEM			X	X	X		
Mazda	ASIA	2000-2008	RX-8		RKE			X	X	X		
Mazda	ASIA	2000-2008	RX-8		TPM			X	X	X		
Mazda	ASIA	2000-2011	RX-8(Europe 13B-MSP High-Power)		PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2000-2011	RX-8(Europe 13B-MSP High-Power)		PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2000-2011	RX-8(Europe 13B-MSP High-Power)		ABS			X	X	X		
Mazda	ASIA	2000-2011	RX-8(Europe 13B-MSP High-Power)		RCM			X	X	X		
Mazda	ASIA	2000-2011	RX-8(Europe 13B-MSP High-Power)		ICM			X	X	X		
Mazda	ASIA	2000-2011	RX-8(Europe 13B-MSP High-Power)		EPS			X	X	X		
Mazda	ASIA	2000-2011	RX-8(Europe 13B-MSP High-Power)		RKE			X	X	X		
Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)		PCM			X	X	X		KOEO On Demand Self Test

Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)			PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)			ABS			X	X	X		Yaw rate sensor Initialization
Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)			ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)			ABS			X	X	X		Steering Angle Sensor Initialization
Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)			RCM			X	X	X		
Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)			ICM			X	X	X		
Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)			EPS			X	X	X		Neutral Position Setting
Mazda	ASIA	2008	RX-8(Europe 13B-MSP High-Power)			RKE			X	X	X		
Mazda	ASIA	2000-2008	VERSIA			PCM			X	X	X		
Mazda	ASIA	2000-2008	VERSIA			ABSTCS			X	X	X		
Mazda	ASIA	2000-2008	VERSIA			ICM			X	X	X		
Mazda	ASIA	2000-2008	VERSIA			TCM			X	X	X		
Mazda	ASIA	2000-2008	VERSIA			EPS			X	X	X		
Mazda	ASIA	2000-2008	VERSIA			RCM			X	X	X		
Mazda	ASIA	2000-2008	VERSIA			GEM			X	X	X		
Mazda	ASIA	2000-2008	MPV			PCM			X	X	X		
Mazda	ASIA	2000-2008	MPV			ABSTCS			X	X	X		
Mazda	ASIA	2000-2008	MPV			ICM			X	X	X		
Mazda	ASIA	2000-2008	MPV			TCM			X	X	X		
Mazda	ASIA	2000-2008	MPV			EPS			X	X	X		
Mazda	ASIA	2000-2008	MPV			RCM			X	X	X		
Mazda	ASIA	2000-2008	MPV			GEM			X	X	X		
Mazda	ASIA	2001	MPV(L3_T 2.3L)			PCM			X	X	X	X	
Mazda	ASIA	2001	MPV(L3_T 2.3L)			ABS			X	X	X	X	
Mazda	ASIA	2002	MPV(L3_T 2.3L)			PCM			X	X	X	X	
Mazda	ASIA	2002	MPV(L3_T 2.3L)			ABS			X	X	X	X	
Mazda	ASIA	2003	MPV(L3_T 2.3L)			PCM			X	X	X	X	
Mazda	ASIA	2003	MPV(L3_T 2.3L)			ABS			X	X	X	X	
Mazda	ASIA	2004	MPV(L3_T 2.3L)			PCM			X	X	X	X	
Mazda	ASIA	2004	MPV(L3_T 2.3L)			ABS			X	X	X	X	
Mazda	ASIA	2005	MPV(AJ 3.0L,North America/General)			PCM			*	*	*		* KOEO On Demand Self Test
Mazda	ASIA	2005	MPV(AJ 3.0L,North America/General)			PCM			*	*	*		* KOER On Demand Self Test
Mazda	ASIA	2005	MPV(AJ 3.0L,North America/General)			ABS			*	*	*		
Mazda	ASIA	2005	MPV(AJ 3.0L,North America/General)			RCM			*	*	*		
Mazda	ASIA	2005	MPV(AJ 3.0L,North America/General)			TCM			*	*	*		

Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)		PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)		PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)		ABS			X	X	X		Yaw rate sensor Initialization
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)		ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)		ABS			X	X	X		Steering angle sensor Initialization
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)		RCM			X	X	X		
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)		IC			X	X	X		
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)		GEM			X	X	X		
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)		RKE			X	X	X		
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)		ICCM			X	X	X		
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)		TCM			X	X	X		
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)		HCM			X	X	X		
Mazda	ASIA	2006	MPV(L3_T 2.3L,JPN/General)		LTM			X	X	X		
Mazda	ASIA	2000-2008	ATENZA		PCM			X	X	X		
Mazda	ASIA	2000-2008	ATENZA		ABSTCS			X	X	X		
Mazda	ASIA	2000-2008	ATENZA		ICM			X	X	X		
Mazda	ASIA	2000-2008	ATENZA		TCM			X	X	X		
Mazda	ASIA	2000-2008	ATENZA		EPS			X	X	X		
Mazda	ASIA	2000-2008	ATENZA		RCM			X	X	X		
Mazda	ASIA	2000-2008	ATENZA		GEM			X	X	X		
Mazda	ASIA	2005	ATENZA(L3_T 2.3L,General)		PCM			X	X	X		
Mazda	ASIA	2005	ATENZA(L3_T 2.3L,General)		ABS			X	X	X		Yaw rate sensor Initialization
Mazda	ASIA	2005	ATENZA(L3_T 2.3L,General)		ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2005	ATENZA(L3_T 2.3L,General)		RCM			X	X	X		
Mazda	ASIA	2005	ATENZA(L3_T 2.3L,General)		ICM			X	X	X		
Mazda	ASIA	2005	ATENZA(L3_T 2.3L,General)		GEM			X	X	X		
Mazda	ASIA	2005	ATENZA(L3_T 2.3L,General)		RKE			X	X	X		
Mazda	ASIA	2005	ATENZA(L3_T 2.3L,General)		LHID			X	X	X		
Mazda	ASIA	2005	ATENZA(L3_T 2.3L,General)		RHID			X	X	X		
Mazda	ASIA	2000-2008	AXELA		PCM			X	X	X		
Mazda	ASIA	2000-2008	AXELA		ABSTCS			X	X	X		
Mazda	ASIA	2000-2008	AXELA		ICM			X	X	X		
Mazda	ASIA	2000-2008	AXELA		TCM			X	X	X		
Mazda	ASIA	2000-2008	AXELA		EPS			X	X	X		
Mazda	ASIA	2000-2008	AXELA		RCM			X	X	X		

Mazda	ASIA	2000-2008	AXELA			GEM			X	X	X		
Mazda	ASIA	2000-2008	BONGO			PCM			X	X	X		
Mazda	ASIA	2000-2008	BONGO			ABSTCS			X	X	X		
Mazda	ASIA	2000-2008	BONGO			ICM			X	X	X		
Mazda	ASIA	2000-2008	BONGO			TCM			X	X	X		
Mazda	ASIA	2000-2008	BONGO			EPS			X	X	X		
Mazda	ASIA	2000-2008	BONGO			RCM			X	X	X		
Mazda	ASIA	2000-2008	BONGO			GEM			X	X	X		
Mazda	ASIA	2000-2008	BONGO BRAWNY			PCM			X	X	X		
Mazda	ASIA	2000-2008	BONGO BRAWNY			ABSTCS			X	X	X		
Mazda	ASIA	2000-2008	BONGO BRAWNY			ICM			X	X	X		
Mazda	ASIA	2000-2008	BONGO BRAWNY			TCM			X	X	X		
Mazda	ASIA	2000-2008	BONGO BRAWNY			EPS			X	X	X		
Mazda	ASIA	2000-2008	BONGO BRAWNY			RCM			X	X	X		
Mazda	ASIA	2000-2008	BONGO BRAWNY			GEM			X	X	X		
Mazda	ASIA	2007	RANGER/BT-50(WE-CD 3.0L)			PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2007	RANGER/BT-50(WE-CD 3.0L)			PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2007	RANGER/BT-50(WE-CD 3.0L)			PCM			X	X	X		Reset PCM
Mazda	ASIA	2007	RANGER/BT-50(WE-CD 3.0L)			PCM			X	X	X		Reset MAF sensor
Mazda	ASIA	2007	RANGER/BT-50(WE-CD 3.0L)			ABS			X	X	X		
Mazda	ASIA	2007	RANGER/BT-50(WE-CD 3.0L)			RCM			X	X	X		
Mazda	ASIA	2000-2008	RANGER/BT-50			PCM			X	X	X		
Mazda	ASIA	2000-2008	RANGER/BT-50			ABSTCS			X	X	X		
Mazda	ASIA	2000-2008	RANGER/BT-50			ICM			X	X	X		
Mazda	ASIA	2000-2008	RANGER/BT-50			TCM			X	X	X		
Mazda	ASIA	2000-2008	RANGER/BT-50			EPS			X	X	X		
Mazda	ASIA	2000-2008	RANGER/BT-50			RCM			X	X	X		
Mazda	ASIA	2000-2008	RANGER/BT-50			GEM			X	X	X		
Mazda	ASIA	2007	CX-7(L3_T 2.3L,North America/General Specs)			PCM			*	*	*		* KOEO On Demand Self Test
Mazda	ASIA	2007	CX-7(L3_T 2.3L,North America/General Specs)			PCM			*	*	*		* KOER On Demand Self Test
Mazda	ASIA	2007	CX-7(L3_T 2.3L,North America/General Specs)			ABS			*	*	*		* Yaw rate sensor Initialization
Mazda	ASIA	2007	CX-7(L3_T 2.3L,North America/General Specs)			ABS			*	*	*		* Lateral Acceleration Sensor Initialization
Mazda	ASIA	2007	CX-7(L3_T 2.3L,North America/General Specs)			ABS			*	*	*		* Steering angle sensor Initialization
Mazda	ASIA	2007	CX-7(L3_T 2.3L,North America/General Specs)			RCM			*	*	*		
Mazda	ASIA	2007	CX-7(L3_T 2.3L,North America/General Specs)			IC			*	*	*		
Mazda	ASIA	2007	CX-7(L3_T 2.3L,North America/General Specs)			GEM			*	*	*		

Mazda	ASIA	2007	CX-7(L3_T 2.3L,North America/General Specs)	EATC			*	*	*		
Mazda	ASIA	2007	CX-7(L3_T 2.3L,North America/General Specs)	RKE			*	*	*		
Mazda	ASIA	2007	CX-7(L3_T 2.3L,North America/General Specs)	TCM			*	*	*		
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		DPF Assessment
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		DPF Regeneration
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		Reset PCM
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		Reset Engine Oil
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		Reset Fuel Pump
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		Reset Fuel Injector
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		Reset MAF Sensor
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		Reset O2 Sensor
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		Reset DPF Pressure Sensor
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		Reset DPF
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		Reset SCR CU
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	PCM			X	X	X		Reset SCR Converter
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	ABS			X	X	X		Yaw rate sensor Initialization
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	ABS			X	X	X		Steering angle sensor Initialization
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	RCM			X	X	X		
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	ICM			X	X	X		
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	EPS			X	X	X		
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	GEM			X	X	X		
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	EATC			X	X	X		
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	RKE			X	X	X		
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	RVM			X	X	X		
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	MID			X	X	X		
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	FFH			X	X	X		
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	SCR			X	X	X		Urea Hose Leak Test
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	SCR			X	X	X		Urea Injector Test
Mazda	ASIA	2009	CX-7(R2_T 2.2L)	SCR			X	X	X		Urea Pump Test
Mazda	ASIA	2008	CX-7(L3_T 2.3L)	PCM			X	X	X		
Mazda	ASIA	2008	CX-7(L3_T 2.3L)	ABS			X	X	X		Yaw rate sensor Initialization
Mazda	ASIA	2008	CX-7(L3_T 2.3L)	ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2008	CX-7(L3_T 2.3L)	ABS			X	X	X		Steering angle sensor Initialization

Mazda	ASIA	2008	CX-7(L3_T 2.3L)			RCM			X	X	X		
Mazda	ASIA	2008	CX-7(L3_T 2.3L)			ICM			X	X	X		
Mazda	ASIA	2008	CX-7(L3_T 2.3L)			GEM			X	X	X		
Mazda	ASIA	2008	CX-7(L3_T 2.3L)			EATC			X	X	X		
Mazda	ASIA	2008	CX-7(L3_T 2.3L)			RKE			X	X	X		
Mazda	ASIA	2010	CX-7(L3_T 2.3L)			PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2010	CX-7(L3_T 2.3L)			PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2010	CX-7(L3_T 2.3L)			ABS			X	X	X		Yaw rate sensor Initialization
Mazda	ASIA	2010	CX-7(L3_T 2.3L)			ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2010	CX-7(L3_T 2.3L)			ABS			X	X	X		Steering angle sensor Initialization
Mazda	ASIA	2010	CX-7(L3_T 2.3L)			RCM			X	X	X		
Mazda	ASIA	2010	CX-7(L3_T 2.3L)			ICM			X	X	X		
Mazda	ASIA	2010	CX-7(L3_T 2.3L)			GEM			X	X	X		
Mazda	ASIA	2010	CX-7(L3_T 2.3L)			EATC			X	X	X		
Mazda	ASIA	2010	CX-7(L3_T 2.3L)			RKE			X	X	X		
Mazda	ASIA	2010	CX-7(L3_T 2.3L)			MID			X	X	X		
Mazda	ASIA	2010	CX-7(L3_T 2.3L)			TCM			X	X	X		
Mazda	ASIA	2000-2008	CX-7			PCM			X	X	X		
Mazda	ASIA	2000-2008	CX-7			ABSTCS			X	X	X		
Mazda	ASIA	2000-2008	CX-7			ICM			X	X	X		
Mazda	ASIA	2000-2008	CX-7			TCM			X	X	X		
Mazda	ASIA	2000-2008	CX-7			EPS			X	X	X		
Mazda	ASIA	2000-2008	CX-7			RCM			X	X	X		
Mazda	ASIA	2000-2008	CX-7			GEM			X	X	X		
Mazda	ASIA	2000-2008	CX-9			PCM			X	X	X		
Mazda	ASIA	2000-2008	CX-9			ABSTCS			X	X	X		
Mazda	ASIA	2000-2008	CX-9			ICM			X	X	X		
Mazda	ASIA	2000-2008	CX-9			TCM			X	X	X		
Mazda	ASIA	2000-2008	CX-9			EPS			X	X	X		
Mazda	ASIA	2000-2008	CX-9			RCM			X	X	X		
Mazda	ASIA	2000-2008	CX-9			GEM			X	X	X		
Mazda	ASIA	2000-2008	DEMIO			PCM			X	X	X		
Mazda	ASIA	2000-2008	DEMIO			ABSTCS			X	X	X		
Mazda	ASIA	2000-2008	DEMIO			ICM			X	X	X		
Mazda	ASIA	2000-2008	DEMIO			TCM			X	X	X		
Mazda	ASIA	2000-2008	DEMIO			EPS			X	X	X		
Mazda	ASIA	2000-2008	DEMIO			RCM			X	X	X		

Mazda	ASIA	2000-2008	DEMIO			GEM			X	X	X		
Mazda	ASIA	2000-2008	MX-5			PCM			X	X	X		
Mazda	ASIA	2000-2008	MX-5			ABSTCS			X	X	X		
Mazda	ASIA	2000-2008	MX-5			ICM			X	X	X		
Mazda	ASIA	2000-2008	MX-5			TCM			X	X	X		
Mazda	ASIA	2000-2008	MX-5			EPS			X	X	X		
Mazda	ASIA	2000-2008	MX-5			RCM			X	X	X		
Mazda	ASIA	2000-2008	MX-5			GEM			X	X	X		
Mazda	ASIA	2000-2011	MX-5(Europe 2.0L)			PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2000-2011	MX-5(Europe 2.0L)			PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2000-2011	MX-5(Europe 2.0L)			ABS			X	X	X		Yaw rate sensor Initialization
Mazda	ASIA	2000-2011	MX-5(Europe 2.0L)			ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2000-2011	MX-5(Europe 2.0L)			ABS			X	X	X		Steering angle sensor Initialization
Mazda	ASIA	2000-2011	MX-5(Europe 2.0L)			RCM			X	X	X		
Mazda	ASIA	2000-2011	MX-5(Europe 2.0L)			ICM			X	X	X		
Mazda	ASIA	2000-2011	MX-5(Europe 2.0L)			RKE			X	X	X		
Mazda	ASIA	2000-2011	MX-5(Europe 2.0L)			RHT			X	X	X		
Mazda	ASIA	2004	MX-5(LF 2.0L)			PCM			X	X	X		KOEO On Demand Self Test
Mazda	ASIA	2004	MX-5(LF 2.0L)			PCM			X	X	X		KOER On Demand Self Test
Mazda	ASIA	2004	MX-5(LF 2.0L)			ABS			X	X	X		Yaw rate sensor Initialization
Mazda	ASIA	2004	MX-5(LF 2.0L)			ABS			X	X	X		Lateral Acceleration Sensor Initialization
Mazda	ASIA	2004	MX-5(LF 2.0L)			ABS			X	X	X		Steering angle sensor Initialization
Mazda	ASIA	2004	MX-5(LF 2.0L)			RCM			X	X	X		
Mazda	ASIA	2004	MX-5(LF 2.0L)			ICM			X	X	X		
Mazda	ASIA	2004	MX-5(LF 2.0L)			RHT			X	X	X		
Mazda	ASIA	2000-2008	ROADSTER			PCM			X	X	X		
Mazda	ASIA	2000-2008	ROADSTER			ABSTCS			X	X	X		
Mazda	ASIA	2000-2008	ROADSTER			ICM			X	X	X		
Mazda	ASIA	2000-2008	ROADSTER			TCM			X	X	X		
Mazda	ASIA	2000-2008	ROADSTER			EPS			X	X	X		
Mazda	ASIA	2000-2008	ROADSTER			RCM			X	X	X		
Mazda	ASIA	2000-2008	ROADSTER			GEM			X	X	X		
Mazda	ASIA	2000-2008	SPECTRON			PCM			X	X	X		

Mazda	ASIA	2000-2008	SPECTRON			ABSVTCS			X	X	X		
Mazda	ASIA	2000-2008	SPECTRON			ICM			X	X	X		
Mazda	ASIA	2000-2008	SPECTRON			TCM			X	X	X		
Mazda	ASIA	2000-2008	SPECTRON			EPS			X	X	X		
Mazda	ASIA	2000-2008	SPECTRON			RCM			X	X	X		
Mazda	ASIA	2000-2008	SPECTRON			GEM			X	X	X		
Mazda	ASIA	2000-2008	TITAN DASH			PCM			X	X	X		
Mazda	ASIA	2000-2008	TITAN DASH			ABSVTCS			X	X	X		
Mazda	ASIA	2000-2008	TITAN DASH			ICM			X	X	X		
Mazda	ASIA	2000-2008	TITAN DASH			TCM			X	X	X		
Mazda	ASIA	2000-2008	TITAN DASH			EPS			X	X	X		
Mazda	ASIA	2000-2008	TITAN DASH			RCM			X	X	X		
Mazda	ASIA	2000-2008	TITAN DASH			GEM			X	X	X		
Mazda	ASIA	2000-2008	PROTEGE			PCM			X	X	X		
Mazda	ASIA	2000-2008	PROTEGE			ABSVTCS			X	X	X		
Mazda	ASIA	2000-2008	PROTEGE			ICM			X	X	X		
Mazda	ASIA	2000-2008	PROTEGE			TCM			X	X	X		
Mazda	ASIA	2000-2008	PROTEGE			EPS			X	X	X		
Mazda	ASIA	2000-2008	PROTEGE			RCM			X	X	X		
Mazda	ASIA	2000-2008	PROTEGE			GEM			X	X	X		
Mazda	ASIA	2000-2008	626/626 WAGON/TELSTAR			PCM			X	X	X		
Mazda	ASIA	2000-2008	626/626 WAGON/TELSTAR			ABSVTCS			X	X	X		
Mazda	ASIA	2000-2008	626/626 WAGON/TELSTAR			ICM			X	X	X		
Mazda	ASIA	2000-2008	626/626 WAGON/TELSTAR			TCM			X	X	X		
Mazda	ASIA	2000-2008	626/626 WAGON/TELSTAR			EPS			X	X	X		
Mazda	ASIA	2000-2008	626/626 WAGON/TELSTAR			RCM			X	X	X		
Mazda	ASIA	2000-2008	626/626 WAGON/TELSTAR			GEM			X	X	X		
Mazda	ASIA	2000-2008	LASER/323/TIERRA			PCM			X	X	X		
Mazda	ASIA	2000-2008	LASER/323/TIERRA			ABSVTCS			X	X	X		
Mazda	ASIA	2000-2008	LASER/323/TIERRA			ICM			X	X	X		
Mazda	ASIA	2000-2008	LASER/323/TIERRA			TCM			X	X	X		
Mazda	ASIA	2000-2008	LASER/323/TIERRA			EPS			X	X	X		
Mazda	ASIA	2000-2008	LASER/323/TIERRA			RCM			X	X	X		
Mazda	ASIA	2000-2008	LASER/323/TIERRA			GEM			X	X	X		
Mazda	ASIA	2000-2008	AZ/WAGON(MJ)			PCM			X	X	X		
Mazda	ASIA	2000-2008	AZ/WAGON(MJ)			ABSVTCS			X	X	X		
Mazda	ASIA	2000-2008	AZ/WAGON(MJ)			ICM			X	X	X		
Mazda	ASIA	2000-2008	AZ/WAGON(MJ)			TCM			X	X	X		
Mazda	ASIA	2000-2008	AZ/WAGON(MJ)			EPS			X	X	X		
Mazda	ASIA	2000-2008	AZ/WAGON(MJ)			RCM			X	X	X		
Mazda	ASIA	2000-2008	AZ/WAGON(MJ)			GEM			X	X	X		
Mazda	ASIA	2000-2008	FAMILIA/LASER			PCM			X	X	X		

Mazda	ASIA	2000-2008	FAMILIA/LASER			ABSTCS			X	X	X		
Mazda	ASIA	2000-2008	FAMILIA/LASER			ICM			X	X	X		
Mazda	ASIA	2000-2008	FAMILIA/LASER			TCM			X	X	X		
Mazda	ASIA	2000-2008	FAMILIA/LASER			EPS			X	X	X		
Mazda	ASIA	2000-2008	FAMILIA/LASER			RCM			X	X	X		
Mazda	ASIA	2000-2008	FAMILIA/LASER			GEM			X	X	X		
Mazda	ASIA	2000-2008	XEDOS9			PCM			X	X	X		
Mazda	ASIA	2000-2008	XEDOS9			ABSTCS			X	X	X		
Mazda	ASIA	2000-2008	XEDOS9			ICM			X	X	X		
Mazda	ASIA	2000-2008	XEDOS9			TCM			X	X	X		
Mazda	ASIA	2000-2008	XEDOS9			EPS			X	X	X		
Mazda	ASIA	2000-2008	XEDOS9			RCM			X	X	X		
Mazda	ASIA	2000-2008	XEDOS9			GEM			X	X	X		
Mazda	Asia	2000-2008	CAPELLA/CAPELAW/TELSTAR/TELSTAR W			PCM			X	X	X		
Mazda	Asia	2000-2008	CAPELLA/CAPELAW/TELSTAR/TELSTAR W			ABSTCS			X	X	X		
Mazda	Asia	2000-2008	CAPELLA/CAPELAW/TELSTAR/TELSTAR W			ICM			X	X	X		
Mazda	Asia	2000-2008	CAPELLA/CAPELAW/TELSTAR/TELSTAR W			TCM			X	X	X		
Mazda	Asia	2000-2008	CAPELLA/CAPELAW/TELSTAR/TELSTAR W			EPS			X	X	X		
Mazda	Asia	2000-2008	CAPELLA/CAPELAW/TELSTAR/TELSTAR W			RCM			X	X	X		
Mazda	Asia	2000-2008	CAPELLA/CAPELAW/TELSTAR/TELSTAR W			GEM			X	X	X		
Mazda	Asia	2000-2008	DEMI0/121			PCM			X	X	X		
Mazda	Asia	2000-2008	DEMI0/121			ABSTCS			X	X	X		
Mazda	Asia	2000-2008	DEMI0/121			ICM			X	X	X		
Mazda	Asia	2000-2008	DEMI0/121			TCM			X	X	X		
Mazda	Asia	2000-2008	DEMI0/121			EPS			X	X	X		
Mazda	Asia	2000-2008	DEMI0/121			RCM			X	X	X		
Mazda	Asia	2000-2008	DEMI0/121			GEM			X	X	X		
Mazda	Asia	2000-2008	DEMI0/FESTIVA MINI WAGON			PCM			X	X	X		
Mazda	Asia	2000-2008	DEMI0/FESTIVA MINI WAGON			ABSTCS			X	X	X		
Mazda	Asia	2000-2008	DEMI0/FESTIVA MINI WAGON			ICM			X	X	X		
Mazda	Asia	2000-2008	DEMI0/FESTIVA MINI WAGON			TCM			X	X	X		
Mazda	Asia	2000-2008	DEMI0/FESTIVA MINI WAGON			EPS			X	X	X		
Mazda	Asia	2000-2008	DEMI0/FESTIVA MINI WAGON			RCM			X	X	X		
Mazda	Asia	2000-2008	DEMI0/FESTIVA MINI WAGON			GEM			X	X	X		
Mazda	Asia	2000-2008	FRIENDEE/FREDA/BONGO FRIENDEE			PCM			X	X	X		
Mazda	Asia	2000-2008	FRIENDEE/FREDA/BONGO FRIENDEE			ABSTCS			X	X	X		
Mazda	Asia	2000-2008	FRIENDEE/FREDA/BONGO FRIENDEE			ICM			X	X	X		
Mazda	Asia	2000-2008	FRIENDEE/FREDA/BONGO FRIENDEE			TCM			X	X	X		
Mazda	Asia	2000-2008	FRIENDEE/FREDA/BONGO FRIENDEE			EPS			X	X	X		
Mazda	Asia	2000-2008	FRIENDEE/FREDA/BONGO FRIENDEE			RCM			X	X	X		
Mazda	Asia	2000-2008	FRIENDEE/FREDA/BONGO FRIENDEE			GEM			X	X	X		