

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	GENERAL		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	GENERAL		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	GENERAL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	GENERAL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	GENERAL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	GENERAL		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	GENERAL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	GENERAL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	GENERAL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	GENERAL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	GENERAL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	GENERAL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	GENERAL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	GENERAL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	GENERAL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	GENERAL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	GENERAL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	GENERAL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	GENERAL		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	GENERAL		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	GENERAL		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	GENERAL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	GENERAL		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	GENERAL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	GENERAL		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	GENERAL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	GENERAL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	GENERAL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	GENERAL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	GENERAL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	GENERAL		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	GENERAL		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	GENERAL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	GENERAL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	GENERAL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	GENERAL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	GENERAL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	GENERAL		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	GENERAL		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	GENERAL		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	GENERAL		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	GENERAL		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	GENERAL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	GENERAL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	GENERAL		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	GENERAL		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	GENERAL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	GENERAL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	GENERAL		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	GENERAL		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	GENERAL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	GENERAL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	GENERAL		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	ACCORD		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ACCORD		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ACCORD		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	ACCORD		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	ACCORD		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	ACCORD		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ACCORD		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	ACCORD		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	ACCORD		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ACCORD		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ACCORD		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ACCORD		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ACCORD		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	ACCORD		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	ACCORD		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ACCORD		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ACCORD		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	ACCORD		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	ACCORD		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	ACCORD		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	ACCORD		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	ACCORD		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	ACCORD		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	ACCORD		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	ACCORD		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	ACCORD		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	ACCORD		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	ACCORD		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	ACCORD		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	ACCORD		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	ACCORD		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	ACCORD		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	ACCORD		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	ACCORD		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	ACCORD		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	ACCORD		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	ACCORD		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	ACCORD		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	ACCORD		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	ACCORD		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	ACCORD		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	ACCORD		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	ACCORD		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	ACCORD		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	ACCORD		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	ACCORD		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	ACCORD		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	ACCORD		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	ACCORD		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	ACCORD		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	ACCORD		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	ACCORD		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	ACCORD		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	AVANCIER		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	AVANCIER		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	AVANCIER		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	AVANCIER		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	AVANCIER		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	AVANCIER		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	AVANCIER		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	AVANCIER		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	AVANCIER		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	AVANCIER		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	AVANCIER		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	AVANCIER		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	AVANCIER		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	AVANCIER		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	AVANCIER		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	AVANCIER		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	AVANCIER		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	AVANCIER		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	AVANCIER		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	AVANCIER		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	AVANCIER		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	AVANCIER		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	AVANCIER		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	AVANCIER		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	AVANCIER		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	AVANCIER		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	AVANCIER		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	AVANCIER		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	AVANCIER		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	AVANCIER		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	AVANCIER		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	AVANCIER		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	AVANCIER		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	AVANCIER		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	AVANCIER		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	AVANCIER		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	AVANCIER		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	AVANCIER		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	AVANCIER		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	AVANCIER		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	AVANCIER		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	AVANCIER		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	AVANCIER		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	AVANCIER		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	AVANCIER		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	AVANCIER		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	AVANCIER		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	AVANCIER		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	AVANCIER		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	AVANCIER		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	AVANCIER		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	AVANCIER		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	AIRWAVE		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	AIRWAVE		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	AIRWAVE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	AIRWAVE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	AIRWAVE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	AIRWAVE		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	AIRWAVE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	AIRWAVE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	AIRWAVE		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	AIRWAVE		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	AIRWAVE		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	AIRWAVE		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	AIRWAVE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	AIRWAVE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	AIRWAVE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	AIRWAVE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	AIRWAVE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	AIRWAVE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	AIRWAVE		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	AIRWAVE		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	AIRWAVE		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	AIRWAVE		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	AIRWAVE		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	AIRWAVE		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	AIRWAVE		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	AIRWAVE		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	AIRWAVE		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	AIRWAVE		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	AIRWAVE		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	AIRWAVE		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	AIRWAVE		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	AIRWAVE		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	AIRWAVE		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	AIRWAVE		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	AIRWAVE		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	AIRWAVE		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	AIRWAVE		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	AIRWAVE		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	AIRWAVE		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	AIRWAVE		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	AIRWAVE		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	AIRWAVE		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	AIRWAVE		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	AIRWAVE		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	AIRWAVE		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	AIRWAVE		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	AIRWAVE		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	AIRWAVE		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	AIRWAVE		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	AIRWAVE		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	AIRWAVE		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	AIRWAVE		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	CAPA		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CAPA		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CAPA		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	CAPA		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	CAPA		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	CAPA		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	CAPA		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	CAPA		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	CAPA		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CAPA		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CAPA		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CAPA		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	CAPA		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	CAPA		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CAPA		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CAPA		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	CAPA		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	CAPA		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	CAPA		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	CAPA		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	CAPA		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	CAPA		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	CAPA		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	CAPA		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	CAPA		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	CAPA		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	CAPA		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	CAPA		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	CAPA		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	CAPA		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	CAPA		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	CAPA		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	CAPA		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	CAPA		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	CAPA		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	CAPA		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	CAPA		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	CAPA		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	CAPA		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	CAPA		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	CAPA		VTM-4			OBD-II 16PIN CONNECTOR	O		△				

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	CAPA		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	CAPA		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	CAPA		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	CAPA		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	CAPA		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	CAPA		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	CAPA		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	CAPA		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	CAPA		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	CAPA		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	CAPA		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	CITY		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CITY		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CITY		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	CITY		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	CITY		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	CITY		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	CITY		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	CITY		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CITY		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CITY		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CITY		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CITY		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	CITY		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	CITY		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CITY		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CITY		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	CITY		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	CITY		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	CITY		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	CITY		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	CITY		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	CITY		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	CITY		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	CITY		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	CITY		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	CITY		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	CITY		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	CITY		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	CITY		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	CITY		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	CITY		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	CITY		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	CITY		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	CITY		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	CITY		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	CITY		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	CITY		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	CITY		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	CITY		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	CITY		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	CITY		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	CITY		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	CITY		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	CITY		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	CITY		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	CITY		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	CITY		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	CITY		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	CITY		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	CITY		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	CITY		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	CITY		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	CIVIC		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CIVIC		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CIVIC		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	CIVIC		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	CIVIC		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	CIVIC		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CIVIC		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	CIVIC		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	CIVIC		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CIVIC		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CIVIC		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CIVIC		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CIVIC		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	CIVIC		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	CIVIC		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CIVIC		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CIVIC		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	CIVIC		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	CIVIC		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	CIVIC		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	CIVIC		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	CIVIC		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	CIVIC		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	CIVIC		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	CIVIC		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	CIVIC		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	CIVIC		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	CIVIC		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	CIVIC		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	CIVIC		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	CIVIC		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	CIVIC		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	CIVIC		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	CIVIC		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	CIVIC		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	CIVIC		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	CIVIC		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	CIVIC		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	CIVIC		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	CIVIC		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	CIVIC		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	CIVIC		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	CIVIC		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	CIVIC		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	CIVIC		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	CIVIC		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	CIVIC		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	CIVIC		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	CIVIC		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	CIVIC		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	CIVIC		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	CIVIC		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	CIVIC		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	CR-V		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CR-V		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CR-V		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	CR-V		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	CR-V		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	CR-V		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CR-V		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	CR-V		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	CR-V		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CR-V		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CR-V		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CR-V		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CR-V		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	CR-V		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	CR-V		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CR-V		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CR-V		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	CR-V		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	CR-V		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	CR-V		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	CR-V		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	CR-V		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	CR-V		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	CR-V		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORYIZATION
HONDA	CR-V		ABS VSA TCS			5PIN CONNECTOR	O		△				

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	CR-V		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	CR-V		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	CR-V		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	CR-V		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	CR-V		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	CR-V		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	CR-V		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	CR-V		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	CR-V		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	CR-V		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	CR-V		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	CR-V		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	CR-V		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	CR-V		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	CR-V		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	CR-V		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	CR-V		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	CR-V		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	CR-V		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	CR-V		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	CR-V		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	CR-V		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	CR-V		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	CR-V		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	CR-V		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	CR-V		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	CR-V		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	CR-V		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	DEL SOL		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	DEL SOL		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	DEL SOL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	DEL SOL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	DEL SOL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	DEL SOL		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	DEL SOL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	DEL SOL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	DEL SOL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	DEL SOL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	DEL SOL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	DEL SOL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	DEL SOL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	DEL SOL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	DEL SOL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	DEL SOL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	DEL SOL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	DEL SOL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	DEL SOL		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	DEL SOL		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	DEL SOL		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	DEL SOL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	DEL SOL		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	DEL SOL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	DEL SOL		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	DEL SOL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	DEL SOL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	DEL SOL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	DEL SOL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	DEL SOL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	DEL SOL		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	DEL SOL		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	DEL SOL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	DEL SOL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	DEL SOL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	DEL SOL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	DEL SOL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	DEL SOL		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	DEL SOL		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	DEL SOL		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	DEL SOL		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	DEL SOL		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	DEL SOL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	DEL SOL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	DEL SOL		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	DEL SOL		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	DEL SOL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	DEL SOL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	DEL SOL		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	DEL SOL		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	DEL SOL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	DEL SOL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	DEL SOL		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	DOMANI		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	DOMANI		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	DOMANI		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	DOMANI		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	DOMANI		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	DOMANI		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	DOMANI		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	DOMANI		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	DOMANI		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	DOMANI		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	DOMANI		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	DOMANI		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	DOMANI		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	DOMANI		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	DOMANI		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	DOMANI		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	DOMANI		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	DOMANI		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	DOMANI		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	DOMANI		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	DOMANI		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	DOMANI		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	DOMANI		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	DOMANI		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	DOMANI		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	DOMANI		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	DOMANI		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	DOMANI		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	DOMANI		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	DOMANI		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	DOMANI		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	DOMANI		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	DOMANI		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	DOMANI		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	DOMANI		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	DOMANI		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	DOMANI		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	DOMANI		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	DOMANI		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	DOMANI		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	DOMANI		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	DOMANI		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	DOMANI		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	DOMANI		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	DOMANI		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	DOMANI		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	DOMANI		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	DOMANI		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	DOMANI		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	DOMANI		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	DOMANI		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	DOMANI		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	ELEMENT		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ELEMENT		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ELEMENT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	ELEMENT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	ELEMENT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	ELEMENT		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	ELEMENT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	ELEMENT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	ELEMENT		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ELEMENT		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ELEMENT		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ELEMENT		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ELEMENT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	ELEMENT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	ELEMENT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ELEMENT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ELEMENT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	ELEMENT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	ELEMENT		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	ELEMENT		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	ELEMENT		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	ELEMENT		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	ELEMENT		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	ELEMENT		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	ELEMENT		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	ELEMENT		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	ELEMENT		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	ELEMENT		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	ELEMENT		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	ELEMENT		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	ELEMENT		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	ELEMENT		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	ELEMENT		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	ELEMENT		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	ELEMENT		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	ELEMENT		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	ELEMENT		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	ELEMENT		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	ELEMENT		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	ELEMENT		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	ELEMENT		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	ELEMENT		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	ELEMENT		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	ELEMENT		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	ELEMENT		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	ELEMENT		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	ELEMENT		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	ELEMENT		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	ELEMENT		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	ELEMENT		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	ELEMENT		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	ELEMENT		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	ELYSION		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ELYSION		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ELYSION		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	ELYSION		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	ELYSION		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	ELYSION		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ELYSION		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	ELYSION		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	ELYSION		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ELYSION		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ELYSION		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ELYSION		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ELYSION		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	ELYSION		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	ELYSION		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ELYSION		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ELYSION		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	ELYSION		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	ELYSION		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	ELYSION		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	ELYSION		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	ELYSION		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	ELYSION		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	ELYSION		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	ELYSION		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	ELYSION		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	ELYSION		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	ELYSION		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	ELYSION		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	ELYSION		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	ELYSION		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	ELYSION		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	ELYSION		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	ELYSION		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	ELYSION		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	ELYSION		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	ELYSION		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	ELYSION		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	ELYSION		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	ELYSION		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	ELYSION		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	ELYSION		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	ELYSION		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	ELYSION		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	ELYSION		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	ELYSION		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	ELYSION		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	ELYSION		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	ELYSION		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	ELYSION		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	ELYSION		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	ELYSION		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	EV-PLUS		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	EV-PLUS		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	EV-PLUS		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	EV-PLUS		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	EV-PLUS		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	EV-PLUS		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	EV-PLUS		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	EV-PLUS		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	EV-PLUS		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	EV-PLUS		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	EV-PLUS		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	EV-PLUS		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	EV-PLUS		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	EV-PLUS		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	EV-PLUS		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	EV-PLUS		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	EV-PLUS		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	EV-PLUS		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	EV-PLUS		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	EV-PLUS		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	EV-PLUS		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	EV-PLUS		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	EV-PLUS		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	EV-PLUS		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	EV-PLUS		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	EV-PLUS		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	EV-PLUS		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	EV-PLUS		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	EV-PLUS		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	EV-PLUS		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	EV-PLUS		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	EV-PLUS		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	EV-PLUS		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	EV-PLUS		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	EV-PLUS		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	EV-PLUS		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	EV-PLUS		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	EV-PLUS		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	EV-PLUS		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	EV-PLUS		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	EV-PLUS		VTM-4			OBD-II 16PIN CONNECTOR	O		△				

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	EV-PLUS		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	EV-PLUS		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	EV-PLUS		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	EV-PLUS		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	EV-PLUS		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	EV-PLUS		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	EV-PLUS		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	EV-PLUS		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	EV-PLUS		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	EV-PLUS		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	EV-PLUS		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	FIT/JAZZ		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	FIT/JAZZ		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	FIT/JAZZ		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	FIT/JAZZ		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	FIT/JAZZ		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	FIT/JAZZ		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	FIT/JAZZ		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	FIT/JAZZ		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	FIT/JAZZ		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	FIT/JAZZ		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	FIT/JAZZ		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	FIT/JAZZ		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	FIT/JAZZ		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	FIT/JAZZ		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	FIT/JAZZ		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	FIT/JAZZ		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	FIT/JAZZ		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	FIT/JAZZ		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	FIT/JAZZ		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	FIT/JAZZ		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	FIT/JAZZ		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	FIT/JAZZ		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	FIT/JAZZ		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	FIT/JAZZ		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	FIT/JAZZ		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	FIT/JAZZ		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	FIT/JAZZ		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	FIT/JAZZ		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	FIT/JAZZ		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	FIT/JAZZ		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	FIT/JAZZ		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	FIT/JAZZ		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	FIT/JAZZ		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	FIT/JAZZ		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	FIT/JAZZ		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	FIT/JAZZ		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	FIT/JAZZ		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	FIT/JAZZ		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	FIT/JAZZ		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	FIT/JAZZ		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	FIT/JAZZ		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	FIT/JAZZ		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	FIT/JAZZ		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	FIT/JAZZ		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	FIT/JAZZ		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	FIT/JAZZ		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	FIT/JAZZ		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	FIT/JAZZ		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	FIT/JAZZ		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	FIT/JAZZ		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	FIT/JAZZ		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	FIT/JAZZ		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	FR-V/EDIX		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	FR-V/EDIX		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	FR-V/EDIX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	FR-V/EDIX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	FR-V/EDIX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	FR-V/EDIX		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	FR-V/EDIX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	FR-V/EDIX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	FR-V/EDIX		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	FR-V/EDIX		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	FR-V/EDIX		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	FR-V/EDIX		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	FR-V/EDIX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	FR-V/EDIX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	FR-V/EDIX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	FR-V/EDIX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	FR-V/EDIX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	FR-V/EDIX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	FR-V/EDIX		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	FR-V/EDIX		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	FR-V/EDIX		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	FR-V/EDIX		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	FR-V/EDIX		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	FR-V/EDIX		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	FR-V/EDIX		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	FR-V/EDIX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	FR-V/EDIX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	FR-V/EDIX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	FR-V/EDIX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	FR-V/EDIX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	FR-V/EDIX		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	FR-V/EDIX		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	FR-V/EDIX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	FR-V/EDIX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	FR-V/EDIX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	FR-V/EDIX		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	FR-V/EDIX		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	FR-V/EDIX		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	FR-V/EDIX		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	FR-V/EDIX		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	FR-V/EDIX		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	FR-V/EDIX		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	FR-V/EDIX		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	FR-V/EDIX		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	FR-V/EDIX		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	FR-V/EDIX		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	FR-V/EDIX		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	FR-V/EDIX		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	FR-V/EDIX		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	FR-V/EDIX		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	FR-V/EDIX		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	FR-V/EDIX		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	FR-V/EDIX		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	HR-V		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	HR-V		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	HR-V		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	HR-V		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	HR-V		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	HR-V		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	HR-V		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	HR-V		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	HR-V		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	HR-V		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	HR-V		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	HR-V		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	HR-V		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	HR-V		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	HR-V		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	HR-V		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	HR-V		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	HR-V		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	HR-V		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	HR-V		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	HR-V		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	HR-V		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	HR-V		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	HR-V		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	HR-V		ABS VSA TCS			5PIN CONNECTOR	O		△				

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	HR-V		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	HR-V		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	HR-V		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	HR-V		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	HR-V		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	HR-V		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	HR-V		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	HR-V		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	HR-V		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	HR-V		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	HR-V		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	HR-V		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	HR-V		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	HR-V		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	HR-V		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	HR-V		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	HR-V		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	HR-V		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	HR-V		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	HR-V		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	HR-V		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	HR-V		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	HR-V		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	HR-V		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	HR-V		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	HR-V		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	HR-V		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	HR-V		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	INSIGHT		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INSIGHT		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	INSIGHT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	INSIGHT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	INSIGHT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	INSIGHT		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INSIGHT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	INSIGHT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	INSIGHT		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INSIGHT		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INSIGHT		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INSIGHT		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INSIGHT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	INSIGHT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	INSIGHT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INSIGHT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INSIGHT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	INSIGHT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	INSIGHT		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	INSIGHT		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	INSIGHT		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	INSIGHT		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	INSIGHT		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	INSIGHT		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	INSIGHT		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	INSIGHT		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	INSIGHT		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	INSIGHT		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	INSIGHT		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	INSIGHT		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	INSIGHT		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	INSIGHT		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	INSIGHT		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	INSIGHT		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	INSIGHT		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	INSIGHT		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	INSIGHT		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	INSIGHT		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	INSIGHT		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	INSIGHT		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	INSIGHT		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	INSIGHT		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	INSIGHT		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	INSIGHT		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	INSIGHT		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	INSIGHT		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	INSIGHT		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	INSIGHT		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	INSIGHT		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	INSIGHT		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	INSIGHT		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	INSIGHT		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	INSIGHT		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	INSPIRE		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INSPIRE		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INSPIRE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	INSPIRE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	INSPIRE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	INSPIRE		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INSPIRE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	INSPIRE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	INSPIRE		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INSPIRE		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INSPIRE		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INSPIRE		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INSPIRE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	INSPIRE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	INSPIRE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INSPIRE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INSPIRE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	INSPIRE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	INSPIRE		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	INSPIRE		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	INSPIRE		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	INSPIRE		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	INSPIRE		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	INSPIRE		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	INSPIRE		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	INSPIRE		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	INSPIRE		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	INSPIRE		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	INSPIRE		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	INSPIRE		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	INSPIRE		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	INSPIRE		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	INSPIRE		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	INSPIRE		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	INSPIRE		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	INSPIRE		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	INSPIRE		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	INSPIRE		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	INSPIRE		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	INSPIRE		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	INSPIRE		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	INSPIRE		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	INSPIRE		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	INSPIRE		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	INSPIRE		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	INSPIRE		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	INSPIRE		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	INSPIRE		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	INSPIRE		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	INSPIRE		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	INSPIRE		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	INSPIRE		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	INTEGRA		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INTEGRA		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INTEGRA		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	INTEGRA		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	INTEGRA		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	INTEGRA		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	INTEGRA		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	INTEGRA		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	INTEGRA		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INTEGRA		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INTEGRA		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INTEGRA		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INTEGRA		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	INTEGRA		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	INTEGRA		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INTEGRA		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	INTEGRA		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	INTEGRA		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	INTEGRA		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	INTEGRA		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	INTEGRA		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	INTEGRA		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	INTEGRA		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	INTEGRA		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	INTEGRA		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	INTEGRA		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	INTEGRA		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	INTEGRA		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	INTEGRA		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	INTEGRA		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	INTEGRA		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	INTEGRA		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	INTEGRA		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	INTEGRA		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	INTEGRA		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	INTEGRA		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	INTEGRA		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	INTEGRA		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	INTEGRA		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	INTEGRA		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	INTEGRA		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	INTEGRA		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	INTEGRA		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	INTEGRA		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	INTEGRA		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	INTEGRA		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	INTEGRA		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	INTEGRA		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	INTEGRA		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	INTEGRA		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	INTEGRA		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	INTEGRA		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	LEGEND		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LEGEND		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LEGEND		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	LEGEND		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	LEGEND		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	LEGEND		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LEGEND		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	LEGEND		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	LEGEND		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LEGEND		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LEGEND		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LEGEND		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LEGEND		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	LEGEND		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	LEGEND		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LEGEND		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LEGEND		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	LEGEND		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	LEGEND		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	LEGEND		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	LEGEND		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	LEGEND		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	LEGEND		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	LEGEND		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	LEGEND		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	LEGEND		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	LEGEND		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	LEGEND		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	LEGEND		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	LEGEND		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	LEGEND		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	LEGEND		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	LEGEND		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	LEGEND		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	LEGEND		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	LEGEND		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	LEGEND		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	LEGEND		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	LEGEND		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	LEGEND		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	LEGEND		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	LEGEND		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	LEGEND		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	LEGEND		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	LEGEND		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	LEGEND		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	LEGEND		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	LEGEND		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	LEGEND		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	LEGEND		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	LEGEND		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	LEGEND		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	LEGEND		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	LIFE		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LIFE		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LIFE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	LIFE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	LIFE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	LIFE		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LIFE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	LIFE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	LIFE		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	LIFE		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LIFE		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LIFE		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LIFE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	LIFE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	LIFE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LIFE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LIFE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	LIFE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	LIFE		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	LIFE		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	LIFE		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	LIFE		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	LIFE		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	LIFE		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	LIFE		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	LIFE		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	LIFE		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	LIFE		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	LIFE		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	LIFE		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	LIFE		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	LIFE		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	LIFE		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	LIFE		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	LIFE		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	LIFE		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	LIFE		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	LIFE		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	LIFE		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	LIFE		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	LIFE		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	LIFE		VTM-4			OBD-II 16PIN CONNECTOR	O		△				

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	LIFE		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	LIFE		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	LIFE		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	LIFE		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	LIFE		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	LIFE		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	LIFE		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	LIFE		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	LIFE		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	LIFE		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	LIFE		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	LOGO		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LOGO		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LOGO		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	LOGO		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	LOGO		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	LOGO		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	LOGO		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	LOGO		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LOGO		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LOGO		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LOGO		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LOGO		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	LOGO		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	LOGO		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LOGO		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	LOGO		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	LOGO		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	LOGO		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	LOGO		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	LOGO		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	LOGO		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	LOGO		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	LOGO		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	LOGO		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	LOGO		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	LOGO		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	LOGO		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	LOGO		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	LOGO		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	LOGO		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	LOGO		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	LOGO		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	LOGO		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	LOGO		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	LOGO		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	LOGO		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	LOGO		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	LOGO		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	LOGO		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	LOGO		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	LOGO		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	LOGO		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	LOGO		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	LOGO		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	LOGO		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	LOGO		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	LOGO		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	LOGO		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	LOGO		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	LOGO		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	LOGO		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	LOGO		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	MDX		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MDX		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MDX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	MDX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	MDX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	MDX		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MDX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	MDX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	MDX		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MDX		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MDX		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MDX		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MDX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	MDX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	MDX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MDX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MDX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	MDX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	MDX		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	MDX		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	MDX		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	MDX		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	MDX		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	MDX		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	MDX		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	MDX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	MDX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	MDX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	MDX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	MDX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	MDX		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	MDX		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	MDX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	MDX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	MDX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	MDX		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	MDX		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	MDX		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	MDX		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	MDX		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	MDX		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	MDX		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	MDX		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	MDX		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	MDX		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	MDX		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	MDX		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	MDX		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	MDX		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	MDX		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	MDX		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	MDX		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	MDX		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	MOBILIO		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MOBILIO		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MOBILIO		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	MOBILIO		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	MOBILIO		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	MOBILIO		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MOBILIO		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	MOBILIO		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	MOBILIO		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MOBILIO		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MOBILIO		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MOBILIO		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MOBILIO		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	MOBILIO		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	MOBILIO		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MOBILIO		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MOBILIO		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	MOBILIO		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	MOBILIO		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	MOBILIO		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	MOBILIO		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	MOBILIO		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	MOBILIO		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	MOBILIO		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORYIZATION
HONDA	MOBILIO		ABS VSA TCS			5PIN CONNECTOR	O		△				

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	MOBILIO		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	MOBILIO		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	MOBILIO		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	MOBILIO		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	MOBILIO		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	MOBILIO		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	MOBILIO		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	MOBILIO		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	MOBILIO		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	MOBILIO		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	MOBILIO		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	MOBILIO		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	MOBILIO		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	MOBILIO		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	MOBILIO		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	MOBILIO		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	MOBILIO		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	MOBILIO		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	MOBILIO		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	MOBILIO		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	MOBILIO		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	MOBILIO		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	MOBILIO		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	MOBILIO		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	MOBILIO		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	MOBILIO		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	MOBILIO		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	MOBILIO		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	MR-V/PILOT		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MR-V/PILOT		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	MR-V/PILOT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	MR-V/PILOT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	MR-V/PILOT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	MR-V/PILOT		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MR-V/PILOT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	MR-V/PILOT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	MR-V/PILOT		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MR-V/PILOT		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MR-V/PILOT		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MR-V/PILOT		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MR-V/PILOT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	MR-V/PILOT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	MR-V/PILOT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MR-V/PILOT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	MR-V/PILOT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	MR-V/PILOT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	MR-V/PILOT		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	MR-V/PILOT		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	MR-V/PILOT		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	MR-V/PILOT		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	MR-V/PILOT		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	MR-V/PILOT		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	MR-V/PILOT		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	MR-V/PILOT		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	MR-V/PILOT		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	MR-V/PILOT		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	MR-V/PILOT		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	MR-V/PILOT		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	MR-V/PILOT		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	MR-V/PILOT		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	MR-V/PILOT		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	MR-V/PILOT		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	MR-V/PILOT		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	MR-V/PILOT		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	MR-V/PILOT		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	MR-V/PILOT		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	MR-V/PILOT		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	MR-V/PILOT		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	MR-V/PILOT		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	MR-V/PILOT		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	MR-V/PILOT		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	MR-V/PILOT		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	MR-V/PILOT		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	MR-V/PILOT		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	MR-V/PILOT		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	MR-V/PILOT		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	MR-V/PILOT		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	MR-V/PILOT		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	MR-V/PILOT		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	MR-V/PILOT		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	MR-V/PILOT		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	NSX		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	NSX		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	NSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	NSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	NSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	NSX		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	NSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	NSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	NSX		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	NSX		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	NSX		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	NSX		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	NSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	NSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	NSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	NSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	NSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	NSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	NSX		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	NSX		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	NSX		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	NSX		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	NSX		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	NSX		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	NSX		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	NSX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	NSX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	NSX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	NSX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	NSX		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	NSX		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	NSX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	NSX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	NSX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	NSX		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	NSX		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	NSX		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	NSX		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	NSX		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	NSX		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	NSX		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	NSX		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	NSX		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	NSX		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	NSX		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	NSX		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	NSX		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	NSX		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	NSX		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	NSX		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	NSX		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	NSX		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	ODYSSEY		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ODYSSEY		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ODYSSEY		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	ODYSSEY		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	ODYSSEY		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	ODYSSEY		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	ODYSSEY		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	ODYSSEY		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	ODYSSEY		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ODYSSEY		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ODYSSEY		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ODYSSEY		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ODYSSEY		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	ODYSSEY		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	ODYSSEY		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ODYSSEY		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ODYSSEY		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	ODYSSEY		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	ODYSSEY		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	ODYSSEY		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	ODYSSEY		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	ODYSSEY		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	ODYSSEY		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	ODYSSEY		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	ODYSSEY		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	ODYSSEY		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	ODYSSEY		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	ODYSSEY		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	ODYSSEY		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	ODYSSEY		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	ODYSSEY		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	ODYSSEY		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	ODYSSEY		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	ODYSSEY		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	ODYSSEY		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	ODYSSEY		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	ODYSSEY		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	ODYSSEY		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	ODYSSEY		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	ODYSSEY		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	ODYSSEY		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	ODYSSEY		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	ODYSSEY		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	ODYSSEY		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	ODYSSEY		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	ODYSSEY		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	ODYSSEY		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	ODYSSEY		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	ODYSSEY		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	ODYSSEY		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	ODYSSEY		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	ODYSSEY		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	PASSPORT		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	PASSPORT		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	PASSPORT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	PASSPORT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	PASSPORT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	PASSPORT		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	PASSPORT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	PASSPORT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	PASSPORT		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	PASSPORT		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	PASSPORT		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	PASSPORT		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	PASSPORT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	PASSPORT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	PASSPORT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	PASSPORT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	PASSPORT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	PASSPORT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	PASSPORT		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	PASSPORT		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	PASSPORT		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	PASSPORT		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	PASSPORT		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	PASSPORT		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	PASSPORT		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	PASSPORT		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	PASSPORT		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	PASSPORT		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	PASSPORT		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	PASSPORT		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	PASSPORT		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	PASSPORT		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	PASSPORT		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	PASSPORT		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	PASSPORT		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	PASSPORT		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	PASSPORT		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	PASSPORT		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	PASSPORT		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	PASSPORT		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	PASSPORT		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	PASSPORT		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	PASSPORT		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	PASSPORT		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	PASSPORT		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	PASSPORT		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	PASSPORT		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	PASSPORT		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	PASSPORT		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	PASSPORT		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	PASSPORT		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	PASSPORT		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	PRELUDE		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	PRELUDE		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	PRELUDE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	PRELUDE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	PRELUDE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	PRELUDE		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	PRELUDE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	PRELUDE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	PRELUDE		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	PRELUDE		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	PRELUDE		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	PRELUDE		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	PRELUDE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	PRELUDE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	PRELUDE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	PRELUDE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	PRELUDE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	PRELUDE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	PRELUDE		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	PRELUDE		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	PRELUDE		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	PRELUDE		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	PRELUDE		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	PRELUDE		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	PRELUDE		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	PRELUDE		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	PRELUDE		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	PRELUDE		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	PRELUDE		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	PRELUDE		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	PRELUDE		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	PRELUDE		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	PRELUDE		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	PRELUDE		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	PRELUDE		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	PRELUDE		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	PRELUDE		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	PRELUDE		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	PRELUDE		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	PRELUDE		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	PRELUDE		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	PRELUDE		VTM-4			OBD-II 16PIN CONNECTOR	O		△				

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	PRELUDE		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	PRELUDE		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	PRELUDE		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	PRELUDE		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	PRELUDE		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	PRELUDE		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	PRELUDE		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	PRELUDE		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	PRELUDE		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	PRELUDE		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	PRELUDE		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	S2000		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	S2000		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	S2000		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	S2000		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	S2000		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	S2000		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	S2000		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	S2000		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	S2000		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	S2000		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	S2000		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	S2000		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	S2000		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	S2000		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	S2000		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	S2000		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	S2000		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	S2000		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	S2000		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	S2000		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	S2000		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	S2000		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	S2000		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	S2000		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	S2000		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	S2000		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	S2000		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	S2000		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	S2000		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	S2000		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	S2000		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	S2000		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	S2000		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	S2000		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	S2000		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	S2000		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	S2000		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	S2000		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	S2000		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	S2000		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	S2000		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	S2000		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	S2000		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	S2000		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	S2000		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	S2000		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	S2000		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	S2000		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	S2000		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	S2000		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	S2000		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	S2000		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	STREAM		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	STREAM		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	STREAM		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	STREAM		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	STREAM		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	STREAM		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	STREAM		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	STREAM		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	STREAM		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	STREAM		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	STREAM		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	STREAM		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	STREAM		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	STREAM		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	STREAM		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	STREAM		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	STREAM		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	STREAM		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	STREAM		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	STREAM		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	STREAM		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	STREAM		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	STREAM		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	STREAM		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	STREAM		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	STREAM		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	STREAM		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	STREAM		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	STREAM		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	STREAM		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	STREAM		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	STREAM		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	STREAM		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	STREAM		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	STREAM		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	STREAM		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	STREAM		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	STREAM		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	STREAM		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	STREAM		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	STREAM		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	STREAM		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	STREAM		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	STREAM		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	STREAM		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	STREAM		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	STREAM		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	STREAM		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	STREAM		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	STREAM		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	STREAM		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	STREAM		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	STREAM		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	THAT'S		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	THAT'S		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	THAT'S		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	THAT'S		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	THAT'S		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	THAT'S		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	THAT'S		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	THAT'S		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	THAT'S		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	THAT'S		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	THAT'S		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	THAT'S		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	THAT'S		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	THAT'S		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	THAT'S		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	THAT'S		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	THAT'S		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	THAT'S		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	THAT'S		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	THAT'S		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	THAT'S		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	THAT'S		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	THAT'S		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	THAT'S		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORYIZATION
HONDA	THAT'S		ABS VSA TCS			5PIN CONNECTOR	O		△				

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	THAT'S		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	THAT'S		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	THAT'S		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	THAT'S		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	THAT'S		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	THAT'S		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	THAT'S		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	THAT'S		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	THAT'S		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	THAT'S		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	THAT'S		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	THAT'S		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	THAT'S		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	THAT'S		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	THAT'S		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	THAT'S		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	THAT'S		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	THAT'S		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	THAT'S		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	THAT'S		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	THAT'S		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	THAT'S		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	THAT'S		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	THAT'S		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	THAT'S		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	THAT'S		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	THAT'S		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	THAT'S		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	TODAY		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	TODAY		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	TODAY		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	TODAY		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	TODAY		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	TODAY		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	TODAY		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	TODAY		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	TODAY		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	TODAY		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	TODAY		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	TODAY		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	TODAY		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	TODAY		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	TODAY		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	TODAY		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	TODAY		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	TODAY		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	TODAY		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	TODAY		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	TODAY		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	TODAY		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	TODAY		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	TODAY		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	TODAY		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	TODAY		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	TODAY		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	TODAY		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	TODAY		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	TODAY		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	TODAY		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	TODAY		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	TODAY		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	TODAY		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	TODAY		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	TODAY		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	TODAY		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	TODAY		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	TODAY		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	TODAY		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	TODAY		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	TODAY		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	TODAY		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	TODAY		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	TODAY		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	TODAY		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	TODAY		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	TODAY		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	TODAY		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	TODAY		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	TODAY		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	TODAY		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	TODAY		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	QUINT		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	QUINT		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	QUINT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	QUINT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	QUINT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	QUINT		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	QUINT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	QUINT		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	QUINT		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	QUINT		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	QUINT		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	QUINT		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	QUINT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	QUINT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	QUINT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	QUINT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	QUINT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	QUINT		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	QUINT		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	QUINT		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	QUINT		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	QUINT		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	QUINT		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	QUINT		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	QUINT		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	QUINT		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	QUINT		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	QUINT		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	QUINT		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	QUINT		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	QUINT		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	QUINT		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	QUINT		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	QUINT		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	QUINT		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	QUINT		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	QUINT		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	QUINT		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	QUINT		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	QUINT		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	QUINT		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	QUINT		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	QUINT		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	QUINT		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	QUINT		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	QUINT		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	QUINT		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	QUINT		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	QUINT		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	QUINT		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	QUINT		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	QUINT		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	RIDGELINE		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	RIDGELINE		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	RIDGELINE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	RIDGELINE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	RIDGELINE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	RIDGELINE		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	RIDGELINE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	RIDGELINE		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	RIDGELINE		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	RIDGELINE		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	RIDGELINE		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	RIDGELINE		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	RIDGELINE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	RIDGELINE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	RIDGELINE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	RIDGELINE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	RIDGELINE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	RIDGELINE		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	RIDGELINE		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	RIDGELINE		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	RIDGELINE		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	RIDGELINE		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	RIDGELINE		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	RIDGELINE		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	RIDGELINE		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	RIDGELINE		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	RIDGELINE		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	RIDGELINE		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	RIDGELINE		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	RIDGELINE		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	RIDGELINE		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	RIDGELINE		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	RIDGELINE		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	RIDGELINE		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	RIDGELINE		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	RIDGELINE		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	RIDGELINE		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	RIDGELINE		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	RIDGELINE		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	RIDGELINE		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	RIDGELINE		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	RIDGELINE		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	RIDGELINE		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	RIDGELINE		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	RIDGELINE		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	RIDGELINE		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	RIDGELINE		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	RIDGELINE		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	RIDGELINE		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	RIDGELINE		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	RIDGELINE		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	RIDGELINE		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	CR-Z		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CR-Z		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CR-Z		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	CR-Z		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	CR-Z		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	CR-Z		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CR-Z		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	CR-Z		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	CR-Z		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CR-Z		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CR-Z		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CR-Z		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CR-Z		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	CR-Z		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	CR-Z		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CR-Z		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CR-Z		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	CR-Z		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	CR-Z		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	CR-Z		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	CR-Z		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	CR-Z		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	CR-Z		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	CR-Z		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	CR-Z		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	CR-Z		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	CR-Z		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	CR-Z		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	CR-Z		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	CR-Z		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	CR-Z		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	CR-Z		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	CR-Z		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	CR-Z		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	CR-Z		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	CR-Z		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	CR-Z		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	CR-Z		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	CR-Z		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	CR-Z		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	CR-Z		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	CR-Z		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	CR-Z		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	CR-Z		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	CR-Z		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	CR-Z		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	CR-Z		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	CR-Z		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	CR-Z		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	CR-Z		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	CR-Z		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	CR-Z		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	CIVIC HYBRID		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CIVIC HYBRID		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CIVIC HYBRID		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	CIVIC HYBRID		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	CIVIC HYBRID		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	CIVIC HYBRID		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CIVIC HYBRID		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	CIVIC HYBRID		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	CIVIC HYBRID		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	CIVIC HYBRID		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CIVIC HYBRID		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CIVIC HYBRID		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CIVIC HYBRID		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	CIVIC HYBRID		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	CIVIC HYBRID		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CIVIC HYBRID		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	CIVIC HYBRID		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	CIVIC HYBRID		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	CIVIC HYBRID		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	CIVIC HYBRID		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	CIVIC HYBRID		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	CIVIC HYBRID		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	CIVIC HYBRID		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	CIVIC HYBRID		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	CIVIC HYBRID		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	CIVIC HYBRID		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	CIVIC HYBRID		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	CIVIC HYBRID		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	CIVIC HYBRID		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	CIVIC HYBRID		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	CIVIC HYBRID		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	CIVIC HYBRID		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	CIVIC HYBRID		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	CIVIC HYBRID		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	CIVIC HYBRID		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	CIVIC HYBRID		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	CIVIC HYBRID		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	CIVIC HYBRID		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	CIVIC HYBRID		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	CIVIC HYBRID		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	CIVIC HYBRID		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	CIVIC HYBRID		VTM-4			OBD-II 16PIN CONNECTOR	O		△				

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	CIVIC HYBRID		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	CIVIC HYBRID		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
HONDA	CIVIC HYBRID		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	CIVIC HYBRID		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	CIVIC HYBRID		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	CIVIC HYBRID		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	CIVIC HYBRID		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	CIVIC HYBRID		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	CIVIC HYBRID		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	CIVIC HYBRID		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	CIVIC HYBRID		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
HONDA	ACCORD HYBRID		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ACCORD HYBRID		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ACCORD HYBRID		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	ACCORD HYBRID		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	ACCORD HYBRID		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
HONDA	ACCORD HYBRID		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ACCORD HYBRID		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
HONDA	ACCORD HYBRID		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
HONDA	ACCORD HYBRID		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ACCORD HYBRID		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ACCORD HYBRID		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ACCORD HYBRID		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ACCORD HYBRID		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
HONDA	ACCORD HYBRID		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	ACCORD HYBRID		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ACCORD HYBRID		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
HONDA	ACCORD HYBRID		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	ACCORD HYBRID		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
HONDA	ACCORD HYBRID		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	ACCORD HYBRID		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	ACCORD HYBRID		ABS VSA TCS			3PIN CONNECTOR	O		△				
HONDA	ACCORD HYBRID		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	ACCORD HYBRID		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	ACCORD HYBRID		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	ACCORD HYBRID		ABS VSA TCS			5PIN CONNECTOR	O		△				
HONDA	ACCORD HYBRID		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
HONDA	ACCORD HYBRID		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	ACCORD HYBRID		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	ACCORD HYBRID		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
HONDA	ACCORD HYBRID		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
HONDA	ACCORD HYBRID		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
HONDA	ACCORD HYBRID		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
HONDA	ACCORD HYBRID		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	ACCORD HYBRID		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	ACCORD HYBRID		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
HONDA	ACCORD HYBRID		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	ACCORD HYBRID		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
HONDA	ACCORD HYBRID		IMMOBILISER			OBD-II 16PIN CONNECTOR							
HONDA	ACCORD HYBRID		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	ACCORD HYBRID		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
HONDA	ACCORD HYBRID		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
HONDA	ACCORD HYBRID		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
HONDA	ACCORD HYBRID		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
HONDA	ACCORD HYBRID		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
HONDA	ACCORD HYBRID		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
HONDA	ACCORD HYBRID		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
HONDA	ACCORD HYBRID		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	ACCORD HYBRID		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
HONDA	ACCORD HYBRID		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
HONDA	ACCORD HYBRID		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	ACCORD HYBRID		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
HONDA	ACCORD HYBRID		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
HONDA	ACCORD HYBRID		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
ACURA	GENERAL		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	GENERAL		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	GENERAL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	GENERAL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	GENERAL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	GENERAL		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	GENERAL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
ACURA	GENERAL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
ACURA	GENERAL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	GENERAL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	GENERAL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	GENERAL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	GENERAL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	GENERAL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	GENERAL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	GENERAL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	GENERAL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	GENERAL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	GENERAL		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	GENERAL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	GENERAL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	GENERAL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	GENERAL		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	GENERAL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	GENERAL		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	GENERAL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	GENERAL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	GENERAL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	GENERAL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	GENERAL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	GENERAL		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
ACURA	GENERAL		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
ACURA	GENERAL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	GENERAL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	GENERAL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	GENERAL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	GENERAL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	GENERAL		IMMOBILISER			OBD-II 16PIN CONNECTOR							
ACURA	GENERAL		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	GENERAL		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
ACURA	GENERAL		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
ACURA	GENERAL		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
ACURA	GENERAL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
ACURA	GENERAL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
ACURA	GENERAL		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
ACURA	GENERAL		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
ACURA	GENERAL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	GENERAL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	GENERAL		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
ACURA	GENERAL		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	GENERAL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
ACURA	GENERAL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	GENERAL		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
ACURA	1.6EL		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	1.6EL		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	1.6EL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	1.6EL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	1.6EL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	1.6EL		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	1.6EL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
ACURA	1.6EL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
ACURA	1.6EL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	1.6EL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	1.6EL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	1.6EL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	1.6EL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	1.6EL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	1.6EL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	1.6EL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	1.6EL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	1.6EL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	1.6EL		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	1.6EL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	1.6EL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	1.6EL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	1.6EL		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	1.6EL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	1.6EL		ABS VSA TCS			5PIN CONNECTOR	O		△				

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	1.6EL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	1.6EL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	1.6EL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	1.6EL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	1.6EL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	1.6EL		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
ACURA	1.6EL		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
ACURA	1.6EL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	1.6EL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	1.6EL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	1.6EL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	1.6EL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	1.6EL		IMMOBILISER			OBD-II 16PIN CONNECTOR							
ACURA	1.6EL		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	1.6EL		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
ACURA	1.6EL		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
ACURA	1.6EL		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
ACURA	1.6EL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
ACURA	1.6EL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
ACURA	1.6EL		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
ACURA	1.6EL		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
ACURA	1.6EL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	1.6EL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	1.6EL		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
ACURA	1.6EL		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	1.6EL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
ACURA	1.6EL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	1.6EL		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
ACURA	1.7EL		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	1.7EL		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	1.7EL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	1.7EL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	1.7EL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	1.7EL		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	1.7EL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
ACURA	1.7EL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
ACURA	1.7EL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	1.7EL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	1.7EL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	1.7EL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	1.7EL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	1.7EL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	1.7EL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	1.7EL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	1.7EL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	1.7EL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	1.7EL		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	1.7EL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	1.7EL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	1.7EL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	1.7EL		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	1.7EL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	1.7EL		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	1.7EL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	1.7EL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	1.7EL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	1.7EL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	1.7EL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	1.7EL		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
ACURA	1.7EL		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
ACURA	1.7EL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	1.7EL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	1.7EL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	1.7EL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	1.7EL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	1.7EL		IMMOBILISER			OBD-II 16PIN CONNECTOR							
ACURA	1.7EL		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	1.7EL		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
ACURA	1.7EL		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
ACURA	1.7EL		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
ACURA	1.7EL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
ACURA	1.7EL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
ACURA	1.7EL		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
ACURA	1.7EL		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
ACURA	1.7EL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	1.7EL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	1.7EL		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
ACURA	1.7EL		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	1.7EL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
ACURA	1.7EL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	1.7EL		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
ACURA	2.2CL		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.2CL		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.2CL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	2.2CL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	2.2CL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	2.2CL		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.2CL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
ACURA	2.2CL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
ACURA	2.2CL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.2CL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.2CL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.2CL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.2CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	2.2CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	2.2CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.2CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.2CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	2.2CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	2.2CL		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	2.2CL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	2.2CL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	2.2CL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	2.2CL		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	2.2CL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	2.2CL		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	2.2CL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	2.2CL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	2.2CL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	2.2CL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	2.2CL		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
ACURA	2.2CL		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
ACURA	2.2CL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	2.2CL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	2.2CL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	2.2CL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	2.2CL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	2.2CL		IMMOBILISER			OBD-II 16PIN CONNECTOR							
ACURA	2.2CL		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	2.2CL		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
ACURA	2.2CL		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
ACURA	2.2CL		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
ACURA	2.2CL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
ACURA	2.2CL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
ACURA	2.2CL		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
ACURA	2.2CL		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
ACURA	2.2CL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	2.2CL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	2.2CL		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
ACURA	2.2CL		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	2.2CL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
ACURA	2.2CL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	2.2CL		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
ACURA	2.3CL		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.3CL		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.3CL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	2.3CL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	2.3CL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	2.3CL		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	2.3CL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
ACURA	2.3CL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
ACURA	2.3CL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.3CL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.3CL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.3CL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.3CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	2.3CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	2.3CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.3CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.3CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	2.3CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	2.3CL		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	2.3CL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	2.3CL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	2.3CL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	2.3CL		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	2.3CL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	2.3CL		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	2.3CL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	2.3CL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	2.3CL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	2.3CL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	2.3CL		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
ACURA	2.3CL		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
ACURA	2.3CL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	2.3CL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	2.3CL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	2.3CL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	2.3CL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	2.3CL		IMMOBILISER			OBD-II 16PIN CONNECTOR							
ACURA	2.3CL		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	2.3CL		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
ACURA	2.3CL		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
ACURA	2.3CL		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
ACURA	2.3CL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
ACURA	2.3CL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
ACURA	2.3CL		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
ACURA	2.3CL		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
ACURA	2.3CL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	2.3CL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	2.3CL		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
ACURA	2.3CL		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	2.3CL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
ACURA	2.3CL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	2.3CL		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
ACURA	3.0CL		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.0CL		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.0CL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	3.0CL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	3.0CL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	3.0CL		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.0CL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	3.0CL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
ACURA	3.0CL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.0CL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.0CL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.0CL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.0CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	3.0CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	3.0CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.0CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.0CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	3.0CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	3.0CL		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	3.0CL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	3.0CL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	3.0CL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	3.0CL		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	3.0CL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	3.0CL		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	3.0CL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	3.0CL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	3.0CL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	3.0CL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	3.0CL		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
ACURA	3.0CL		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
ACURA	3.0CL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	3.0CL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	3.0CL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	3.0CL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	3.0CL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	3.0CL		IMMOBILISER			OBD-II 16PIN CONNECTOR							
ACURA	3.0CL		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	3.0CL		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
ACURA	3.0CL		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
ACURA	3.0CL		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
ACURA	3.0CL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
ACURA	3.0CL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
ACURA	3.0CL		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
ACURA	3.0CL		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
ACURA	3.0CL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	3.0CL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	3.0CL		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
ACURA	3.0CL		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	3.0CL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
ACURA	3.0CL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	3.0CL		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
ACURA	3.2CL		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.2CL		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.2CL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	3.2CL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	3.2CL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	3.2CL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
ACURA	3.2CL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
ACURA	3.2CL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	3.2CL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.2CL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.2CL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.2CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	3.2CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	3.2CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.2CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.2CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	3.2CL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	3.2CL		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	3.2CL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	3.2CL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	3.2CL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	3.2CL		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	3.2CL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	3.2CL		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	3.2CL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	3.2CL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	3.2CL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	3.2CL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	3.2CL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	3.2CL		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
ACURA	3.2CL		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
ACURA	3.2CL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	3.2CL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	3.2CL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	3.2CL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	3.2CL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	3.2CL		IMMOBILISER			OBD-II 16PIN CONNECTOR							
ACURA	3.2CL		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	3.2CL		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
ACURA	3.2CL		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
ACURA	3.2CL		VTM-4			OBD-II 16PIN CONNECTOR	O		△				

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	3.2CL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
ACURA	3.2CL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
ACURA	3.2CL		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
ACURA	3.2CL		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
ACURA	3.2CL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	3.2CL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	3.2CL		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
ACURA	3.2CL		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	3.2CL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
ACURA	3.2CL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	3.2CL		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
ACURA	2.5TL		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.5TL		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.5TL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	2.5TL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	2.5TL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	2.5TL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	2.5TL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
ACURA	2.5TL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.5TL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.5TL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.5TL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.5TL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	2.5TL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	2.5TL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.5TL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	2.5TL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	2.5TL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	2.5TL		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	2.5TL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	2.5TL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	2.5TL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	2.5TL		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	2.5TL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	2.5TL		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	2.5TL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	2.5TL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	2.5TL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	2.5TL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	2.5TL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	2.5TL		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
ACURA	2.5TL		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
ACURA	2.5TL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	2.5TL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	2.5TL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	2.5TL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	2.5TL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	2.5TL		IMMOBILISER			OBD-II 16PIN CONNECTOR							
ACURA	2.5TL		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	2.5TL		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
ACURA	2.5TL		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
ACURA	2.5TL		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
ACURA	2.5TL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
ACURA	2.5TL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	2.5TL		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
ACURA	2.5TL		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
ACURA	2.5TL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	2.5TL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	2.5TL		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
ACURA	2.5TL		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	2.5TL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
ACURA	2.5TL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	2.5TL		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
ACURA	3.2TL		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.2TL		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.2TL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	3.2TL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	3.2TL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	3.2TL		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.2TL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
ACURA	3.2TL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
ACURA	3.2TL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.2TL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.2TL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.2TL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.2TL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	3.2TL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	3.2TL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.2TL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.2TL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	3.2TL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	3.2TL		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	3.2TL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	3.2TL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	3.2TL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	3.2TL		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	3.2TL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	3.2TL		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	3.2TL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	3.2TL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	3.2TL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	3.2TL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	3.2TL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	3.2TL		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
ACURA	3.2TL		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
ACURA	3.2TL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	3.2TL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	3.2TL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	3.2TL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	3.2TL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	3.2TL		IMMOBILISER			OBD-II 16PIN CONNECTOR							
ACURA	3.2TL		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	3.2TL		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
ACURA	3.2TL		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
ACURA	3.2TL		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
ACURA	3.2TL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
ACURA	3.2TL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
ACURA	3.2TL		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
ACURA	3.2TL		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
ACURA	3.2TL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	3.2TL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	3.2TL		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
ACURA	3.2TL		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	3.2TL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
ACURA	3.2TL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	3.2TL		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
ACURA	3.5RL		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.5RL		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.5RL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	3.5RL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	3.5RL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	3.5RL		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.5RL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
ACURA	3.5RL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
ACURA	3.5RL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.5RL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.5RL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.5RL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.5RL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	3.5RL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	3.5RL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.5RL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	3.5RL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	3.5RL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	3.5RL		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	3.5RL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	3.5RL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	3.5RL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	3.5RL		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	3.5RL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	3.5RL		ABS VSA TCS			5PIN CONNECTOR	O		△				

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	3.5RL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	3.5RL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	3.5RL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	3.5RL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	3.5RL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	3.5RL		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
ACURA	3.5RL		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
ACURA	3.5RL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	3.5RL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	3.5RL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	3.5RL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	3.5RL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	3.5RL		IMMOBILISER			OBD-II 16PIN CONNECTOR							
ACURA	3.5RL		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	3.5RL		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
ACURA	3.5RL		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
ACURA	3.5RL		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
ACURA	3.5RL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
ACURA	3.5RL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
ACURA	3.5RL		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
ACURA	3.5RL		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
ACURA	3.5RL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	3.5RL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	3.5RL		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
ACURA	3.5RL		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	3.5RL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
ACURA	3.5RL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	3.5RL		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
ACURA	CSX		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	CSX		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	CSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	CSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	CSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	CSX		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	CSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
ACURA	CSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
ACURA	CSX		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	CSX		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	CSX		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	CSX		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	CSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	CSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	CSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	CSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	CSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	CSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	CSX		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	CSX		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	CSX		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	CSX		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	CSX		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	CSX		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	CSX		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	CSX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	CSX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	CSX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	CSX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	CSX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	CSX		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
ACURA	CSX		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
ACURA	CSX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	CSX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	CSX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	CSX		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	CSX		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	CSX		IMMOBILISER			OBD-II 16PIN CONNECTOR							
ACURA	CSX		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	CSX		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
ACURA	CSX		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
ACURA	CSX		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
ACURA	CSX		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
ACURA	CSX		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
ACURA	CSX		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
ACURA	CSX		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
ACURA	CSX		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	CSX		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	CSX		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
ACURA	CSX		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	CSX		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
ACURA	CSX		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	CSX		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
ACURA	INTEGRA		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	INTEGRA		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	INTEGRA		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	INTEGRA		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	INTEGRA		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	INTEGRA		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	INTEGRA		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
ACURA	INTEGRA		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
ACURA	INTEGRA		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	INTEGRA		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	INTEGRA		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	INTEGRA		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	INTEGRA		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	INTEGRA		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	INTEGRA		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	INTEGRA		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	INTEGRA		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	INTEGRA		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	INTEGRA		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	INTEGRA		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	INTEGRA		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	INTEGRA		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	INTEGRA		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	INTEGRA		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	INTEGRA		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	INTEGRA		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	INTEGRA		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	INTEGRA		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	INTEGRA		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	INTEGRA		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
ACURA	INTEGRA		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
ACURA	INTEGRA		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	INTEGRA		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	INTEGRA		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	INTEGRA		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	INTEGRA		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	INTEGRA		IMMOBILISER			OBD-II 16PIN CONNECTOR							
ACURA	INTEGRA		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	INTEGRA		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
ACURA	INTEGRA		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
ACURA	INTEGRA		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
ACURA	INTEGRA		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
ACURA	INTEGRA		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
ACURA	INTEGRA		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
ACURA	INTEGRA		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
ACURA	INTEGRA		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	INTEGRA		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	INTEGRA		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
ACURA	INTEGRA		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	INTEGRA		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
ACURA	INTEGRA		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	INTEGRA		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
ACURA	LEGEND		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	LEGEND		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	LEGEND		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	LEGEND		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	LEGEND		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	LEGEND		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	LEGEND		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
ACURA	LEGEND		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
ACURA	LEGEND		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	LEGEND		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	LEGEND		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	LEGEND		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	LEGEND		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	LEGEND		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	LEGEND		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	LEGEND		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	LEGEND		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	LEGEND		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	LEGEND		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	LEGEND		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	LEGEND		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	LEGEND		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	LEGEND		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	LEGEND		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	LEGEND		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	LEGEND		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	LEGEND		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	LEGEND		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	LEGEND		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	LEGEND		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
ACURA	LEGEND		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
ACURA	LEGEND		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	LEGEND		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	LEGEND		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	LEGEND		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	LEGEND		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	LEGEND		IMMOBILISER			OBD-II 16PIN CONNECTOR							
ACURA	LEGEND		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	LEGEND		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
ACURA	LEGEND		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
ACURA	LEGEND		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
ACURA	LEGEND		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
ACURA	LEGEND		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
ACURA	LEGEND		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
ACURA	LEGEND		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
ACURA	LEGEND		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	LEGEND		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	LEGEND		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
ACURA	LEGEND		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	LEGEND		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
ACURA	LEGEND		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	LEGEND		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
ACURA	MDX		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	MDX		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	MDX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	MDX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	MDX		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	MDX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	MDX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
ACURA	MDX		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	MDX		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	MDX		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	MDX		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	MDX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	MDX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	MDX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	MDX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	MDX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	MDX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	MDX		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	MDX		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	MDX		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	MDX		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	MDX		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	MDX		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	MDX		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	MDX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	MDX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	MDX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	MDX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	MDX		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
ACURA	MDX		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
ACURA	MDX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	MDX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	MDX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	MDX		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	MDX		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	MDX		IMMOBILISER			OBD-II 16PIN CONNECTOR							
ACURA	MDX		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	MDX		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
ACURA	MDX		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
ACURA	MDX		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
ACURA	MDX		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
ACURA	MDX		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
ACURA	MDX		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
ACURA	MDX		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
ACURA	MDX		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	MDX		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	MDX		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
ACURA	MDX		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	MDX		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
ACURA	MDX		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	MDX		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
ACURA	NSX		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	NSX		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	NSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	NSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	NSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	NSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
ACURA	NSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
ACURA	NSX		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	NSX		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	NSX		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	NSX		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	NSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	NSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	NSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	NSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	NSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	NSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	NSX		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	NSX		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	NSX		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	NSX		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	NSX		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	NSX		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	NSX		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	NSX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	NSX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	NSX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	NSX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	NSX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	NSX		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
ACURA	NSX		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
ACURA	NSX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	NSX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	NSX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	NSX		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	NSX		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	NSX		IMMOBILISER			OBD-II 16PIN CONNECTOR							
ACURA	NSX		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	NSX		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
ACURA	NSX		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
ACURA	NSX		VTM-4			OBD-II 16PIN CONNECTOR	O		△				

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	NSX		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
ACURA	NSX		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
ACURA	NSX		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
ACURA	NSX		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
ACURA	NSX		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	NSX		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	NSX		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
ACURA	NSX		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	NSX		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
ACURA	NSX		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	NSX		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
ACURA	RL		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	RL		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	RL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	RL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	RL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	RL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
ACURA	RL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
ACURA	RL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	RL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	RL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	RL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	RL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	RL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	RL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	RL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	RL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	RL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	RL		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	RL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	RL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	RL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	RL		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	RL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	RL		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	RL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	RL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	RL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	RL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	RL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	RL		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
ACURA	RL		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
ACURA	RL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	RL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	RL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	RL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	RL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	RL		IMMOBILISER			OBD-II 16PIN CONNECTOR							
ACURA	RL		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	RL		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
ACURA	RL		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
ACURA	RL		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
ACURA	RL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
ACURA	RL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	RL		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
ACURA	RL		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
ACURA	RL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	RL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	RL		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
ACURA	RL		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	RL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
ACURA	RL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	RL		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
ACURA	RSX		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	RSX		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	RSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	RSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	RSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	RSX		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	RSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
ACURA	RSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
ACURA	RSX		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	RSX		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	RSX		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	RSX		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	RSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	RSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	RSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	RSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	RSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	RSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	RSX		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	RSX		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	RSX		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	RSX		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	RSX		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	RSX		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	RSX		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	RSX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	RSX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	RSX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	RSX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	RSX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	RSX		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
ACURA	RSX		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
ACURA	RSX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	RSX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	RSX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	RSX		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	RSX		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	RSX		IMMOBILISER			OBD-II 16PIN CONNECTOR							
ACURA	RSX		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	RSX		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
ACURA	RSX		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
ACURA	RSX		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
ACURA	RSX		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
ACURA	RSX		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
ACURA	RSX		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
ACURA	RSX		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
ACURA	RSX		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	RSX		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	RSX		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
ACURA	RSX		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	RSX		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
ACURA	RSX		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	RSX		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
ACURA	SLX		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	SLX		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	SLX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	SLX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	SLX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	SLX		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	SLX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
ACURA	SLX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
ACURA	SLX		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	SLX		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	SLX		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	SLX		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	SLX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	SLX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	SLX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	SLX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	SLX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	SLX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	SLX		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	SLX		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	SLX		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	SLX		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	SLX		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	SLX		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	SLX		ABS VSA TCS			5PIN CONNECTOR	O		△				

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	SLX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	SLX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	SLX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	SLX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	SLX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	SLX		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
ACURA	SLX		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
ACURA	SLX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	SLX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	SLX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	SLX		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	SLX		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	SLX		IMMOBILISER			OBD-II 16PIN CONNECTOR							
ACURA	SLX		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	SLX		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
ACURA	SLX		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
ACURA	SLX		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
ACURA	SLX		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
ACURA	SLX		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
ACURA	SLX		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
ACURA	SLX		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
ACURA	SLX		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	SLX		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	SLX		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
ACURA	SLX		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	SLX		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
ACURA	SLX		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	SLX		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
ACURA	TL		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	TL		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	TL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	TL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	TL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	TL		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	TL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
ACURA	TL		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
ACURA	TL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	TL		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	TL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	TL		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	TL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	TL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	TL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	TL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	TL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	TL		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	TL		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	TL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	TL		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	TL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	TL		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	TL		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	TL		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	TL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	TL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	TL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	TL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	TL		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	TL		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
ACURA	TL		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
ACURA	TL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	TL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	TL		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	TL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	TL		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	TL		IMMOBILISER			OBD-II 16PIN CONNECTOR							
ACURA	TL		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	TL		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
ACURA	TL		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
ACURA	TL		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
ACURA	TL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
ACURA	TL		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
ACURA	TL		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
ACURA	TL		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
ACURA	TL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	TL		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	TL		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
ACURA	TL		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	TL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
ACURA	TL		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	TL		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
ACURA	TSX		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	TSX		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	TSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	TSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	TSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	TSX		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	TSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
ACURA	TSX		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
ACURA	TSX		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	TSX		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	TSX		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	TSX		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	TSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	TSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	TSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	TSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	TSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	TSX		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	TSX		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	TSX		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	TSX		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	TSX		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	TSX		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	TSX		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	TSX		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	TSX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	TSX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	TSX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	TSX		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	TSX		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
ACURA	TSX		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
ACURA	TSX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	TSX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	TSX		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	TSX		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	TSX		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	TSX		IMMOBILISER			OBD-II 16PIN CONNECTOR							
ACURA	TSX		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	TSX		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
ACURA	TSX		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
ACURA	TSX		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
ACURA	TSX		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
ACURA	TSX		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
ACURA	TSX		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
ACURA	TSX		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
ACURA	TSX		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	TSX		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	TSX		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
ACURA	TSX		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	TSX		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
ACURA	TSX		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	TSX		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST
ACURA	VIGOR		ENGINE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	VIGOR		ENGINE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	VIGOR		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	VIGOR		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	VIGOR		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST
ACURA	VIGOR		ENGINE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	VIGOR		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET CRANKSHAFT PATTERN CLEAR INSPECTION TEST M-OBD
ACURA	VIGOR		ENGINE			OBD-II 16PIN CONNECTOR	O	O	△	O			READINESS TEST O2 TEST RESULTS MONITORING TEST RESULTS BI-DIRECTIONAL CONTROL EXPANDED DIAG. PROTOCOL VEHICLE INFORMATION
ACURA	VIGOR		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	VIGOR		AUTOMATIC TRANSAXLE			3PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	VIGOR		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	VIGOR		AUTOMATIC TRANSAXLE			5PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	VIGOR		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	VIGOR		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O	O	△			O	ECM/PCM RESET
ACURA	VIGOR		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	VIGOR		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES
ACURA	VIGOR		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	VIGOR		AUTOMATIC TRANSAXLE			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES ECM/PCM RESET
ACURA	VIGOR		ABS VSA TCS			3PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	VIGOR		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	VIGOR		ABS VSA TCS			3PIN CONNECTOR	O		△				
ACURA	VIGOR		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	VIGOR		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	VIGOR		ABS VSA TCS			5PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	VIGOR		ABS VSA TCS			5PIN CONNECTOR	O		△				
ACURA	VIGOR		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST
ACURA	VIGOR		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	VIGOR		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△			O	FUNCTIONAL TEST NEUTRAL_MEMORIZATION
ACURA	VIGOR		ABS VSA TCS			OBD-II 16PIN CONNECTOR	O		△				
ACURA	VIGOR		SRS-AIRBAG			3PIN CONNECTOR	O		△			O	
ACURA	VIGOR		SRS-AIRBAG			5PIN CONNECTOR	O		△			O	
ACURA	VIGOR		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	VIGOR		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS
ACURA	VIGOR		SRS-AIRBAG			OBD-II 16PIN CONNECTOR	O		△			O	RESETTING ADAPTIVE VALUES OPDS

HONDA/ACURA VEHICLE COVERAGE

MAKER	CAR1	CAR2	SYSTEM1	SYSTEM2	SYSTEM3	DLC ADPATER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
ACURA	VIGOR		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	VIGOR		IMMOBILISER			OBD-II 16PIN CONNECTOR							SYSTEM CHECK ADD AND DELETE KEYS
ACURA	VIGOR		IMMOBILISER			OBD-II 16PIN CONNECTOR							
ACURA	VIGOR		EPS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	VIGOR		EPS			OBD-II 16PIN CONNECTOR	O		O			O	TORQUE SENSOR LEARN
ACURA	VIGOR		EPS			OBD-II 16PIN CONNECTOR	O					O	TORQUE SENSOR LEARN
ACURA	VIGOR		VTM-4			OBD-II 16PIN CONNECTOR	O		△				
ACURA	VIGOR		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK MAINTENANCE MINDER PAX WARNING RESET
ACURA	VIGOR		BODY			OBD-II 16PIN CONNECTOR	O		△				B-CAN CONTROL UNITS INFORMATION SELF DIAGNOSTIC CHECK PAX WARNING RESET
ACURA	VIGOR		TPMS			OBD-II 16PIN CONNECTOR	O		△	O			RESETTING ADAPTIVE VALUES
ACURA	VIGOR		TPMS(WIRELESS CHECK)	TRW SENSOR		TPMS(WIRELESS CHECK)							TPMS SENSOR STATUS READ TPMS ID REGISTRATION,VIEWER
ACURA	VIGOR		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	VIGOR		IMA			OBD-II 16PIN CONNECTOR	O	O	△			O	
ACURA	VIGOR		IMA			OBD-II 16PIN CONNECTOR	O		O			O	IMA FAN DRIVE
ACURA	VIGOR		SH-AWD			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	VIGOR		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		O			O	SMART INFORMATION
ACURA	VIGOR		KEYLESS ACCESS			OBD-II 16PIN CONNECTOR	O		△			O	
ACURA	VIGOR		4WS			OBD-II 16PIN CONNECTOR	O		O				INSPECTION TEST