

HYUNDAI(GENERAL EXPORT) VEHICLE COVERAGE

INDEX	MAKER	CAR1	SYSTEM1	SYSTEM2	DLC ADAPTER	DTC	HISTORY DTC	CURRENT	ACTUATOR	FREEZE FRAME	ECU INFO FUNC	SPECIAL FUNCTION
1	HYUNDAI GENERAL EXPORT	ACCENT 00-02		ENGINE L4-SOHC LEAD ALL	OBD-11 16PIN CONNECTOR	O		O				1.IDLE CO ADJUSTMENT
2	HYUNDAI GENERAL EXPORT	ACCENT 00-02		ENGINE L4-SOHC UNLEAD GEN	OBD-11 16PIN CONNECTOR	O		O			O	
3	HYUNDAI GENERAL EXPORT	ACCENT 00-02		ENGINE L4-SOHC UNLEAD EOBD	OBD-11 16PIN CONNECTOR	O		O			O	
4	HYUNDAI GENERAL EXPORT	ACCENT 00-02		ENGINE L4-SOHC UNLEAD OBD-11	OBD-11 16PIN CONNECTOR	O		O		O	O	1.EVAP. TEST(DMTL TEST)
5	HYUNDAI GENERAL EXPORT	ACCENT 00-02		ENGINE L4-DOHC LEAD ALL	OBD-11 16PIN CONNECTOR	O		O				1.IDLE CO ADJUSTMENT
6	HYUNDAI GENERAL EXPORT	ACCENT 00-02		ENGINE L4-DOHC UNLEAD GEN	OBD-11 16PIN CONNECTOR	O		O			O	
7	HYUNDAI GENERAL EXPORT	ACCENT 00-02		ENGINE L4-DOHC UNLEAD EOBD	OBD-11 16PIN CONNECTOR	O		O			O	
8	HYUNDAI GENERAL EXPORT	ACCENT 00-02		ENGINE L4-DOHC UNLEAD OBD-11	OBD-11 16PIN CONNECTOR	O		O		O	O	1.EVAP. TEST(DMTL TEST)
9	HYUNDAI GENERAL EXPORT	ACCENT 00-02		ENGINE-DIESEL	OBD-11 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST
10	HYUNDAI GENERAL EXPORT	ACCENT 00-02		AUTOMATIC TRANSAXLE	OBD-11 16PIN CONNECTOR	O		O	O		O	
11	HYUNDAI GENERAL EXPORT	ACCENT 00-02		ANTI-LOCK BRAKE SYSTEM	OBD-11 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
12	HYUNDAI GENERAL EXPORT	ACCENT 00-02		SRS-AIRBAG	OBD-11 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
13	HYUNDAI GENERAL EXPORT	ACCENT 00-02		IMMOBILIZER GASOLINE	OBD-11 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
14	HYUNDAI GENERAL EXPORT	ACCENT 00-02		IMMOBILIZER DIESEL	OBD-11 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
15	HYUNDAI GENERAL EXPORT	ACCENT 03-05		ENGINE(GASOLINE) UNLEAD GEN	OBD-11 16PIN CONNECTOR	O		O			O	
16	HYUNDAI GENERAL EXPORT	ACCENT 03-05		ENGINE(GASOLINE) LEAD ALL	OBD-11 16PIN CONNECTOR	O		O			O	1.IDLE CO ADJUSTMENT
17	HYUNDAI GENERAL EXPORT	ACCENT 03-05		ENGINE(GASOLINE) UNLEAD EOBD	OBD-11 16PIN CONNECTOR	O		O			O	
18	HYUNDAI GENERAL EXPORT	ACCENT 03-05		ENGINE(GASOLINE) ULLEAD 03MY OBD-11	OBD-11 16PIN CONNECTOR	O		O		O	O	1.EVAP. LEAKAGE TEST
19	HYUNDAI GENERAL EXPORT	ACCENT 03-05		ENGINE(GASOLINE) ULLEAD 04MY OBD-11	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.EVAP. LEAKAGE TEST
20	HYUNDAI GENERAL EXPORT	ACCENT 03-05		ENGINE(DIESEL)	OBD-11 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST
21	HYUNDAI GENERAL EXPORT	ACCENT 03-05		AUTOMATIC TRANSAXLE	OBD-11 16PIN CONNECTOR	O		O	O		O	
22	HYUNDAI GENERAL EXPORT	ACCENT 03-05		ANTI-LOCK BRAKE SYSTEM	OBD-11 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
23	HYUNDAI GENERAL EXPORT	ACCENT 03-05		SRS-AIRBAG SRE-LC/HMC	OBD-11 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
24	HYUNDAI GENERAL EXPORT	ACCENT 03-05		SRS-AIRBAG SRE-SMART(DUAL STAGE)	OBD-11 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
25	HYUNDAI GENERAL EXPORT	ACCENT 03-05		IMMOBILIZER GASOLINE	OBD-11 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
26	HYUNDAI GENERAL EXPORT	ACCENT 03-05		IMMOBILIZER DIESEL	OBD-11 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
27	HYUNDAI GENERAL EXPORT	ACCENT 03-05		TRANSMITTER CODE SAVING	OBD-11 16PIN CONNECTOR							
28	HYUNDAI GENERAL EXPORT	ACCENT 95-99		ENGINE L4-SOHC UNLEAD 1.3 95-97MY GEN	HYUNDAI 12PIN CONNECTOR	O		O	O			
29	HYUNDAI GENERAL EXPORT	ACCENT 95-99		ENGINE L4-SOHC UNLEAD 1.3 95-97MY IMM	HYUNDAI 12PIN CONNECTOR	O		O	O			
30	HYUNDAI GENERAL EXPORT	ACCENT 95-99		ENGINE L4-SOHC UNLEAD 1.3L 98MY GEN	HYUNDAI 12PIN CONNECTOR	O		O	O			
31	HYUNDAI GENERAL EXPORT	ACCENT 95-99		ENGINE L4-SOHC UNLEAD 1.3L 98MY IMM	HYUNDAI 12PIN CONNECTOR	O		O	O			
32	HYUNDAI GENERAL EXPORT	ACCENT 95-99		ENGINE L4-SOHC UNLEAD 1.5L 95MY	HYUNDAI 12PIN CONNECTOR	O		O	O			
33	HYUNDAI GENERAL EXPORT	ACCENT 95-99		ENGINE L4-SOHC UNLEAD 1.5L 96-98MY	HYUNDAI 12PIN CONNECTOR	O		O	O			
34	HYUNDAI GENERAL EXPORT	ACCENT 95-99		ENGINE L4-SOHC UNLEAD 1.5L IMM	HYUNDAI 12PIN CONNECTOR	O		O	O			
35	HYUNDAI GENERAL EXPORT	ACCENT 95-99		ENGINE L4-SOHC UNLEAD 1.5L 95-97MY KOR	HYUNDAI 12PIN CONNECTOR	O		O	O			
36	HYUNDAI GENERAL EXPORT	ACCENT 95-99		ENGINE L4-SOHC UNLEAD 1.5L 98MY KOR	HYUNDAI 12PIN CONNECTOR	O		O	O			
37	HYUNDAI GENERAL EXPORT	ACCENT 95-99		ENGINE L4-SOHC LEAD 1.5L 95MY	HYUNDAI 12PIN CONNECTOR	O		O	O			
38	HYUNDAI GENERAL EXPORT	ACCENT 95-99		ENGINE L4-SOHC LEAD 1.5L 96-98MY	HYUNDAI 12PIN CONNECTOR	O		O	O			
39	HYUNDAI GENERAL EXPORT	ACCENT 95-99		ENGINE L4-SOHC UNLEAD 96-97MY OBD-11	HYUNDAI 12PIN CONNECTOR	O	O	O		O		
40	HYUNDAI GENERAL EXPORT	ACCENT 95-99		ENGINE L4-SOHC UNLEAD 98-99MY OBD-11	HYUNDAI 12PIN CONNECTOR	O	O	O		O		1.EVAP. LEAKAGE TEST

41	HYUNDAI GENERAL EXPORT	ACCENT 95-99		ENGINE L4-DOHC UNLEAD 1.5 95-97MY MAF	HYUNDAI 12PIN CONNECTOR	O		O	O			
42	HYUNDAI GENERAL EXPORT	ACCENT 95-99		ENGINE L4-DOHC UNLEAD 1.5L 97MY IMM	HYUNDAI 12PIN CONNECTOR	O		O	O			
43	HYUNDAI GENERAL EXPORT	ACCENT 95-99		ENGINE L4-DOHC UNLEAD 1.5L 98-99MY IMM	HYUNDAI 12PIN CONNECTOR	O		O	O			
44	HYUNDAI GENERAL EXPORT	ACCENT 95-99		ENGINE L4-DOHC UNLEAD 1.5 97-98MY MAP	HYUNDAI 12PIN CONNECTOR	O		O	O			
45	HYUNDAI GENERAL EXPORT	ACCENT 95-99		ENGINE L4-DOHC UNLEAD 96-97MY OBD-II	HYUNDAI 12PIN CONNECTOR	O	O	O		O		
46	HYUNDAI GENERAL EXPORT	ACCENT 95-99		AUTOMATIC TRANSAXLE	HYUNDAI 12PIN CONNECTOR	O		O	O		O	
47	HYUNDAI GENERAL EXPORT	ACCENT 95-99		ANTI-LOCK BRAKE SYSTEM	HYUNDAI 12PIN CONNECTOR	O		O	O			
48	HYUNDAI GENERAL EXPORT	ACCENT 95-99		SRS-AIRBAG	HYUNDAI 12PIN CONNECTOR	O	O	O				1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
49	HYUNDAI GENERAL EXPORT	ACCENT 95-99		IMMOBILIZER	HYUNDAI 12PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.MASTER KEY RECORD 3.MASTER KEY DELETE 4.NEUTRAL MODE 5.IMMOBILIZER RESET
50	HYUNDAI GENERAL EXPORT	ACCENT(MC) 06-11		ENGINE(GASOLINE) UNLEAD 1.6L(CVVT) GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
51	HYUNDAI GENERAL EXPORT	ACCENT(MC) 06-11		ENGINE(GASOLINE) UNLEAD 1.6L(CVVT) E0BD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
52	HYUNDAI GENERAL EXPORT	ACCENT(MC) 06-11		ENGINE(GASOLINE) LEAD 1.6L(CVVT) ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
53	HYUNDAI GENERAL EXPORT	ACCENT(MC) 06-11		ENGINE(GASOLINE) UNLEAD 1.4L(DOHC) GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
54	HYUNDAI GENERAL EXPORT	ACCENT(MC) 06-11		ENGINE(GASOLINE) UNLEAD 1.4L(DOHC) E0BD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
55	HYUNDAI GENERAL EXPORT	ACCENT(MC) 06-11		ENGINE(GASOLINE) LEAD 1.4L(DOHC) ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
56	HYUNDAI GENERAL EXPORT	ACCENT(MC) 06-11		ENGINE(DIESEL) D 1.5 TCI-U	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA
57	HYUNDAI GENERAL EXPORT	ACCENT(MC) 06-11		AUTOMATIC TRANSAXLE GASOLINE(A4AF3)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
58	HYUNDAI GENERAL EXPORT	ACCENT(MC) 06-11		AUTOMATIC TRANSAXLE DIESEL(A4CF2)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
59	HYUNDAI GENERAL EXPORT	ACCENT(MC) 06-11		ABS/ESP	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
60	HYUNDAI GENERAL EXPORT	ACCENT(MC) 06-11		SRS-AIRBAG	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
61	HYUNDAI GENERAL EXPORT	ACCENT(MC) 06-11		ELEC.POWER STEERING	OBD-II 16PIN CONNECTOR	O		O			O	
62	HYUNDAI GENERAL EXPORT	ACCENT(MC) 06-11		FULL AUTO AIR/CON.	OBD-II 16PIN CONNECTOR	O		O	O		O	
63	HYUNDAI GENERAL EXPORT	ACCENT(MC) 06-11		IMMOBILIZER	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
64	HYUNDAI GENERAL EXPORT	ACCENT(MC) 06-11		TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
65	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2012MY	ENGINE(GASOLINE) UNLEADED 1.4 DOHC E0BD	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
66	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2012MY	ENGINE(GASOLINE) UNLEADED 1.4 DOHC GEN	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
67	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2012MY	ENGINE(GASOLINE) LEADED 1.4 DOHC ALL	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VIN READING 4.VIN WRITING
68	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2012MY	ENGINE(GASOLINE) UNLEADED 1.6 DOHC E0BD	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
69	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2012MY	ENGINE(GASOLINE) UNLEADED 1.6 DOHC GEN	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
70	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2012MY	ENGINE(GASOLINE) LEADED 1.6 DOHC ALL	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VIN READING 4.VIN WRITING
71	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2012MY	ENGINE(DIESEL) D 1.6 TCI-U2	OBD-II 16PIN CONNECTOR	O						
72	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2012MY	ENGINE(DIESEL) D 1.4 TCI-U2	OBD-II 16PIN CONNECTOR	O						
73	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2012MY	AUTOMATIC TRANSAXLE	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING AUTO T/A VALUES
74	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2012MY	ANTI-LOCK BRAKE SYSTEM	OBD-II 16PIN CONNECTOR	O		O	O			1.HCU AIR BLEEDING 2.G-SENSOR ZERO SETTING
75	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2012MY	SRS-AIRBAG	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.ACU CODING
76	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2012MY	FULL AUTO AIR/CON.	OBD-II 16PIN CONNECTOR	O		O	O			
77	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2012MY	ELEC.POWER STEERING ~2012.FEB.22	OBD-II 16PIN CONNECTOR	O		O	O			1.EPS TYPE RECOGNITION
78	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2012MY	ELEC.POWER STEERING 2012.FEB.23~	OBD-II 16PIN CONNECTOR	O		O	O			1.EPS TYPE RECOGNITION
79	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2012MY	BODY CONTROL MODULE	OBD-II 16PIN CONNECTOR	O	O	O	O			1.USER OPTION
80	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2012MY	SMART KEY UNIT	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.ANTENNA STATUS CHECK 2.FOB STATUS INFO 3.SMK STATUS INFO 4.NEUTRAL MODE

81	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2012MY	SMART KEY CODE SAVING	OBD-II 16PIN CONNECTOR							1.SMART KEY CODE SAVING
82	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2012MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
83	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2011MY	ENGINE(GASOLINE) UNLEADED 1.4 DOHC E0BD	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
84	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2011MY	ENGINE(GASOLINE) UNLEADED 1.4 DOHC GEN	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
85	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2011MY	ENGINE(GASOLINE) LEADED 1.4 DOHC ALL	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VIN READING 4.VIN WRITING
86	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2011MY	ENGINE(GASOLINE) UNLEADED 1.6 DOHC E0BD	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
87	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2011MY	ENGINE(GASOLINE) UNLEADED 1.6 DOHC GEN	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
88	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2011MY	ENGINE(GASOLINE) LEADED 1.6 DOHC ALL	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VIN READING 4.VIN WRITING
89	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2011MY	ENGINE(DIESEL) D 1.6 TCI-U2	OBD-II 16PIN CONNECTOR	O						
90	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2011MY	ENGINE(DIESEL) D 1.4 TCI-U2	OBD-II 16PIN CONNECTOR	O						
91	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2011MY	AUTOMATIC TRANSAXLE	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING AUTO T/A VALUES
92	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2011MY	ANTI-LOCK BRAKE SYSTEM	OBD-II 16PIN CONNECTOR	O		O	O			1.HCU AIR BLEEDING 2.G-SENSOR ZERO SETTING
93	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2011MY	SRS-AIRBAG	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.ACU CODING
94	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2011MY	FULL AUTO AIR/CON.	OBD-II 16PIN CONNECTOR	O		O	O			
95	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2011MY	ELEC.POWER STEERING ~2012.FEB.22	OBD-II 16PIN CONNECTOR	O		O	O			1.EPS TYPE RECOGNITION
96	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2011MY	ELEC.POWER STEERING 2012.FEB.23~	OBD-II 16PIN CONNECTOR	O		O	O			1.EPS TYPE RECOGNITION
97	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2011MY	BODY CONTROL MODULE	OBD-II 16PIN CONNECTOR	O	O	O	O			1.USER OPTION
98	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2011MY	SMART KEY UNIT	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.ANTENNA STATUS CHECK 2.FOB STATUS INFO 3.SMK STATUS INFO 4.NEUTRAL MODE
99	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2011MY	SMART KEY CODE SAVING	OBD-II 16PIN CONNECTOR							1.SMART KEY CODE SAVING
100	HYUNDAI GENERAL EXPORT	ACCENT(RB)	2011MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
101	HYUNDAI GENERAL EXPORT	ACCENT/SOLARIS(RBr)	2012MY	ENGINE(GASOLINE) 1.4L DOHC	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
102	HYUNDAI GENERAL EXPORT	ACCENT/SOLARIS(RBr)	2012MY	ENGINE(GASOLINE) 1.6L DOHC	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
103	HYUNDAI GENERAL EXPORT	ACCENT/SOLARIS(RBr)	2012MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
104	HYUNDAI GENERAL EXPORT	ACCENT/SOLARIS(RBr)	2011MY	ENGINE(GASOLINE) 1.4L DOHC	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
105	HYUNDAI GENERAL EXPORT	ACCENT/SOLARIS(RBr)	2011MY	ENGINE(GASOLINE) 1.6L DOHC	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
106	HYUNDAI GENERAL EXPORT	ACCENT/SOLARIS(RBr)	2011MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
107	HYUNDAI GENERAL EXPORT	ATOS 98-03		ENGINE L4-SOHC UNLEAD GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
108	HYUNDAI GENERAL EXPORT	ATOS 98-03		ENGINE L4-SOHC UNLEAD E0BD	OBD-II 16PIN CONNECTOR	O		O			O	
109	HYUNDAI GENERAL EXPORT	ATOS 98-03		ENGINE L4-SOHC UNLEAD MEX	OBD-II 16PIN CONNECTOR	O		O			O	
110	HYUNDAI GENERAL EXPORT	ATOS 98-03		ENGINE L4-SOHC UNLEAD IMM	OBD-II 16PIN CONNECTOR	O		O	O			
111	HYUNDAI GENERAL EXPORT	ATOS 98-03		ENGINE L4-SOHC LEAD ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
112	HYUNDAI GENERAL EXPORT	ATOS 98-03		AUTOMATIC TRANSAXLE	OBD-II 16PIN CONNECTOR	O		O	O		O	
113	HYUNDAI GENERAL EXPORT	ATOS 98-03		SAT	OBD-II 16PIN CONNECTOR	O		O			O	1.IDLE CO ADJUSTMENT
114	HYUNDAI GENERAL EXPORT	ATOS 98-03		ANTI-LOCK BRAKE SYSTEM	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
115	HYUNDAI GENERAL EXPORT	ATOS 98-03		SRS-AIRBAG	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
116	HYUNDAI GENERAL EXPORT	ATOS 98-03		IMMOBILIZER	OBD-II 16PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
117	HYUNDAI GENERAL EXPORT	ATOS F/LIFT04-05		ENGINE L4-SOHC UNLEAD GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
118	HYUNDAI GENERAL EXPORT	ATOS F/LIFT04-05		ENGINE L4-SOHC UNLEAD E0BD	OBD-II 16PIN CONNECTOR	O		O	O		O	
119	HYUNDAI GENERAL EXPORT	ATOS F/LIFT04-05		ENGINE L4-SOHC UNLEAD MEX	OBD-II 16PIN CONNECTOR	O		O	O		O	

120	HYUNDAI GENERAL EXPORT	ATOS F/LIFT04-05		ENGINE L4-SOHC LEAD ALL	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
121	HYUNDAI GENERAL EXPORT	ATOS F/LIFT04-05		AUTOMATIC TRANSAXLE	OBD-11 16PIN CONNECTOR	O		O	O		O	
122	HYUNDAI GENERAL EXPORT	ATOS F/LIFT04-05		ANTI-LOCK BRAKE SYSTEM	OBD-11 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
123	HYUNDAI GENERAL EXPORT	ATOS F/LIFT04-05		SRS-AIRBAG	OBD-11 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
124	HYUNDAI GENERAL EXPORT	ATOS F/LIFT04-05		IMMOBILIZER	OBD-11 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
125	HYUNDAI GENERAL EXPORT	ATOS F/LIFT06-		ENGINE L4-SOHC UNLEAD 1.0L GEN	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
126	HYUNDAI GENERAL EXPORT	ATOS F/LIFT06-		ENGINE L4-SOHC UNLEAD 1.1L GEN	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
127	HYUNDAI GENERAL EXPORT	ATOS F/LIFT06-		ENGINE L4-SOHC UNLEAD E0BD	OBD-11 16PIN CONNECTOR	O		O	O		O	
128	HYUNDAI GENERAL EXPORT	ATOS F/LIFT06-		ENGINE L4-SOHC UNLEAD MEX	OBD-11 16PIN CONNECTOR	O		O	O		O	
129	HYUNDAI GENERAL EXPORT	ATOS F/LIFT06-		ENGINE L4-SOHC LEAD 1.0L ALL	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
130	HYUNDAI GENERAL EXPORT	ATOS F/LIFT06-		ENGINE L4-SOHC LEAD 1.1L ALL	OBD-11 16PIN CONNECTOR	O		O	O		O	1.IDLE CO ADJUSTMENT
131	HYUNDAI GENERAL EXPORT	ATOS F/LIFT06-		AUTOMATIC TRANSAXLE	OBD-11 16PIN CONNECTOR	O		O	O		O	
132	HYUNDAI GENERAL EXPORT	ATOS F/LIFT06-		ANTI-LOCK BRAKE SYSTEM	OBD-11 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
133	HYUNDAI GENERAL EXPORT	ATOS F/LIFT06-		SRS-AIRBAG	OBD-11 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
134	HYUNDAI GENERAL EXPORT	ATOS F/LIFT06-		IMMOBILIZER	OBD-11 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
135	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		ENGINE CONTROL UNLEAD 3.0L ALL	OBD-11 16PIN CONNECTOR	O	O	O	O		O	
136	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		ENGINE CONTROL UNLEAD 3.0L(+ETS) ALL	OBD-11 16PIN CONNECTOR	O	O	O	O		O	
137	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		ENGINE CONTROL UNLEAD 3.5L(+ETS) GEN	OBD-11 16PIN CONNECTOR	O	O	O	O		O	
138	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		ENGINE CONTROL UNLEAD 3.5L(+ETS) E0BD	OBD-11 16PIN CONNECTOR	O	O	O	O	O	O	
139	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		ENGINE CONTROL LEAD 3.5L(+ETS) ALL	OBD-11 16PIN CONNECTOR	O	O	O	O		O	
140	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		ENGINE CONTROL UNLEAD 4.5L GDI ALL	OBD-11 16PIN CONNECTOR	O	O	O	O		O	
141	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		ENGINE CONTROL UNLEAD 4.5(+ETS) OBD-11	OBD-11 16PIN CONNECTOR	O	O	O	O		O	
142	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		ENGINE CONTROL UNLEAD 4.5L MPI GEN	OBD-11 16PIN CONNECTOR	O	O	O	O		O	
143	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		ENGINE CONTROL UNLEAD 4.5L MPI E0BD	OBD-11 16PIN CONNECTOR	O	O	O	O	O	O	
144	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		ENGINE CONTROL UNLEAD 4.5L MPI OBD-11	OBD-11 16PIN CONNECTOR	O	O	O	O	O	O	1.EVAP. LEAKAGE TEST
145	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		ENGINE CONTROL LEAD 4.5L MPI ALL	OBD-11 16PIN CONNECTOR	O	O	O	O		O	
146	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		AUTOMATIC TRANSAXLE 3.0/3.5L	OBD-11 16PIN CONNECTOR	O		O	O		O	
147	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		AUTOMATIC TRANSAXLE 4.5L	OBD-11 16PIN CONNECTOR	O		O	O		O	
148	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		ANTI-LOCK BRAKE SYSTEM TCS (ITT TYPE)	OBD-11 16PIN CONNECTOR	O		O	O			
149	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		ANTI-LOCK BRAKE SYSTEM TCS (CTC TYPE:2002.09~)	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.HCU AIR BLEEDING
150	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		ANTI-LOCK BRAKE SYSTEM VDO (AISIN TYPE)	OBD-11 16PIN CONNECTOR	O		O	O			
151	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		ANTI-LOCK BRAKE SYSTEM VDO (CTC TYPE:2002.09~)	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.HCU AIR BLEEDING
152	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		SRS-AIRBAG ~2001MY(SDM-GH)	OBD-11 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
153	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		SRS-AIRBAG 2002MY~(SRE-SMART)	OBD-11 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
154	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		IMMOBILIZER	OBD-11 16PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.MASTER KEY RECORD 3.MASTER KEY DELETE 4.NEUTRAL MODE 5.IMMOBILIZER RESET
155	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		ELEC.CONTROL SUSPENSION ECS	OBD-11 16PIN CONNECTOR	O		O	O			
156	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		ELEC.CONTROL SUSPENSION ACTIVE ECS	OBD-11 16PIN CONNECTOR	O		O	O			
157	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		FULL AUTO AIR/CON.	OBD-11 16PIN CONNECTOR	O		O	O		O	
158	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		LAN	OBD-11 16PIN CONNECTOR	O		O	O		O	
159	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		ELEC.POWER STEERING	OBD-11 16PIN CONNECTOR	O						
160	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		AHLS	OBD-11 16PIN CONNECTOR	O		O			O	1.ACTUATOR DRIVING 2.SELECT VEHICLE
161	HYUNDAI GENERAL EXPORT	CENTENNIAL 00-07		TRANSMITTER CODE SAVING	OBD-11 16PIN CONNECTOR							
162	HYUNDAI GENERAL EXPORT	ELANTRA 01-03		ENGINE(GASOLINE) LEAD 1.6L ALL	OBD-11 16PIN CONNECTOR	O		O				1.IDLE CO ADJUSTMENT
163	HYUNDAI GENERAL EXPORT	ELANTRA 01-03		ENGINE(GASOLINE) UNLEAD 1.6L GEN	OBD-11 16PIN CONNECTOR	O		O			O	
164	HYUNDAI GENERAL EXPORT	ELANTRA 01-03		ENGINE(GASOLINE) UNLEAD 1.6L E0BD	OBD-11 16PIN CONNECTOR	O		O			O	
165	HYUNDAI GENERAL EXPORT	ELANTRA 01-03		ENGINE(GASOLINE) LEAD 1.8/2.0L ALL	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION 3.IDLE CO ADJUSTMENT
166	HYUNDAI GENERAL EXPORT	ELANTRA 01-03		ENGINE(GASOLINE) UNLEAD 1.8/2.0L GEN	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
167	HYUNDAI GENERAL EXPORT	ELANTRA 01-03		ENGINE(GASOLINE) UNLEAD 1.8/2.0L E0BD	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION

168	HYUNDAI GENERAL EXPORT	ELANTRA 01-03		ENGINE(GASOLINE) UNLEAD 2.0L(-SULEV)OBD-II	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION 3.EVAP. LEAKAGE TEST
169	HYUNDAI GENERAL EXPORT	ELANTRA 01-03		ENGINE(GASOLINE) UNLEAD 2.0L(+SULEV)OBD-II	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST 3.VERSION CONFIGURATION
170	HYUNDAI GENERAL EXPORT	ELANTRA 01-03		ENGINE(DIESEL)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST
171	HYUNDAI GENERAL EXPORT	ELANTRA 01-03		AUTOMATIC TRANSAXLE 1.6L	OBD-II 16PIN CONNECTOR	O		O	O		O	
172	HYUNDAI GENERAL EXPORT	ELANTRA 01-03		AUTOMATIC TRANSAXLE 1.8/2.0L(MELCO TCM)	OBD-II 16PIN CONNECTOR	O		O	O		O	
173	HYUNDAI GENERAL EXPORT	ELANTRA 01-03		AUTOMATIC TRANSAXLE 1.8/2.0L(SIEMENS PCM)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING AUTO T/A VALUES
174	HYUNDAI GENERAL EXPORT	ELANTRA 01-03		ANTI-LOCK BRAKE SYSTEM	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
175	HYUNDAI GENERAL EXPORT	ELANTRA 01-03		SRS-AIRBAG	OBD-II 16PIN CONNECTOR	O		O			O	1.CRASH INFO
176	HYUNDAI GENERAL EXPORT	ELANTRA 01-03		TRACTION CONTROL SYSTEM	OBD-II 16PIN CONNECTOR	O		O	O			
177	HYUNDAI GENERAL EXPORT	ELANTRA 01-03		IMMOBILIZER 1.6L(GASOLINE)	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
178	HYUNDAI GENERAL EXPORT	ELANTRA 01-03		IMMOBILIZER 1.8/2.0L(GASOLINE)	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
179	HYUNDAI GENERAL EXPORT	ELANTRA 01-03		IMMOBILIZER DIESEL	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
180	HYUNDAI GENERAL EXPORT	ELANTRA 01-03		TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
181	HYUNDAI GENERAL EXPORT	ELANTRA 04-06		ENGINE(GASOLINE) LEAD 1.6L ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.IDLE CO ADJUSTMENT
182	HYUNDAI GENERAL EXPORT	ELANTRA 04-06		ENGINE(GASOLINE) UNLEAD 1.6L GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	
183	HYUNDAI GENERAL EXPORT	ELANTRA 04-06		ENGINE(GASOLINE) UNLEAD 1.6L EOBD	OBD-II 16PIN CONNECTOR	O		O	O		O	
184	HYUNDAI GENERAL EXPORT	ELANTRA 04-06		ENGINE(GASOLINE) LEAD 1.8/2.0L ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION 3.IDLE CO ADJUSTMENT
185	HYUNDAI GENERAL EXPORT	ELANTRA 04-06		ENGINE(GASOLINE) UNLEAD 1.8/2.0L(-CVVT)GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
186	HYUNDAI GENERAL EXPORT	ELANTRA 04-06		ENGINE(GASOLINE) ULLEAD 1.8/2.0L(+CVVT)GEN	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
187	HYUNDAI GENERAL EXPORT	ELANTRA 04-06		ENGINE(GASOLINE) ULLEAD 1.8/2.0L(CVVT)EOBD	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
188	HYUNDAI GENERAL EXPORT	ELANTRA 04-06		ENGINE(GASOLINE) UNLEAD 2.0L(CVVT) OBD-II	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST 3.VERSION CONFIGURATION
189	HYUNDAI GENERAL EXPORT	ELANTRA 04-06		ENGINE(DIESEL) EURO-3 VGT(KWP)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST
190	HYUNDAI GENERAL EXPORT	ELANTRA 04-06		ENGINE(DIESEL) EURO-4 VGT(CAN)	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA
191	HYUNDAI GENERAL EXPORT	ELANTRA 04-06		AUTOMATIC TRANSAXLE 1.6L	OBD-II 16PIN CONNECTOR	O		O	O			
192	HYUNDAI GENERAL EXPORT	ELANTRA 04-06		AUTOMATIC TRANSAXLE 1.8/2.0L(SIEMENS PCM)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING AUTO T/A VALUES
193	HYUNDAI GENERAL EXPORT	ELANTRA 04-06		ANTI-LOCK BRAKE SYSTEM	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
194	HYUNDAI GENERAL EXPORT	ELANTRA 04-06		SRS-AIRBAG GENERAL	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
195	HYUNDAI GENERAL EXPORT	ELANTRA 04-06		SRS-AIRBAG CHINA(JMC)	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
196	HYUNDAI GENERAL EXPORT	ELANTRA 04-06		TRACTION CONTROL SYSTEM	OBD-II 16PIN CONNECTOR	O		O	O			
197	HYUNDAI GENERAL EXPORT	ELANTRA 04-06		IMMOBILIZER 1.6L(GASOLINE)	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
198	HYUNDAI GENERAL EXPORT	ELANTRA 04-06		IMMOBILIZER 1.8/2.0L(GASOLINE)	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
199	HYUNDAI GENERAL EXPORT	ELANTRA 04-06		IMMOBILIZER DIESEL	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
200	HYUNDAI GENERAL EXPORT	ELANTRA 04-06		TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
201	HYUNDAI GENERAL EXPORT	ELANTRA 92-95		ENGINE L4-SOHC	HYUNDAI 12PIN CONNECTOR	O		O	O			
202	HYUNDAI GENERAL EXPORT	ELANTRA 92-95		ENGINE L4-DOHC	HYUNDAI 12PIN CONNECTOR	O		O	O			
203	HYUNDAI GENERAL EXPORT	ELANTRA 92-95		AUTOMATIC TRANSAXLE	HYUNDAI 12PIN CONNECTOR	O		O	O			
204	HYUNDAI GENERAL EXPORT	ELANTRA 92-95		ANTI-LOCK BRAKE SYSTEM	HYUNDAI 12PIN CONNECTOR	O		O	O			
205	HYUNDAI GENERAL EXPORT	ELANTRA 92-95		SRS-AIRBAG	HYUNDAI 12PIN CONNECTOR	O	O	O				1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
206	HYUNDAI GENERAL EXPORT	ELANTRA 92-95		CRUISE CONTROL 92-93MY ALL	HYUNDAI 12PIN CONNECTOR	O						
207	HYUNDAI GENERAL EXPORT	ELANTRA 92-95		CRUISE CONTROL 94-95MY ALL	HYUNDAI 12PIN CONNECTOR	O						

208	HYUNDAI GENERAL EXPORT	ELANTRA 96-00		ENGINE L4-SOHC UNLEAD 1.5L GEN	HYUNDAI 12PIN CONNECTOR	O		O	O			
209	HYUNDAI GENERAL EXPORT	ELANTRA 96-00		ENGINE L4-SOHC UNLEAD 1.5L IMM	HYUNDAI 12PIN CONNECTOR	O		O	O			
210	HYUNDAI GENERAL EXPORT	ELANTRA 96-00		ENGINE L4-SOHC LEAD 1.5L ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
211	HYUNDAI GENERAL EXPORT	ELANTRA 96-00		ENGINE L4-DOHC UNLEAD 1.5L 96MY KOR	HYUNDAI 12PIN CONNECTOR	O		O	O			
212	HYUNDAI GENERAL EXPORT	ELANTRA 96-00		ENGINE L4-DOHC UNLEAD 1.5 97-98MY KOR	HYUNDAI 12PIN CONNECTOR	O		O	O			
213	HYUNDAI GENERAL EXPORT	ELANTRA 96-00		ENGINE L4-DOHC UNLEAD 1.6~2.0L GEN	HYUNDAI 12PIN CONNECTOR	O		O	O			
214	HYUNDAI GENERAL EXPORT	ELANTRA 96-00		ENGINE L4-DOHC UNLEAD 1.6~2.0L IMM	HYUNDAI 12PIN CONNECTOR	O		O	O			
215	HYUNDAI GENERAL EXPORT	ELANTRA 96-00		ENGINE L4-DOHC LEAD 1.6~2.0L ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
216	HYUNDAI GENERAL EXPORT	ELANTRA 96-00		ENGINE L4-DOHC UNLEAD 96MY OBD-II	HYUNDAI 12PIN CONNECTOR	O	O	O		O		
217	HYUNDAI GENERAL EXPORT	ELANTRA 96-00		ENGINE L4-DOHC UNLEAD 97MY OBD-II	HYUNDAI 12PIN CONNECTOR	O	O	O		O		1.EVAP. LEAKAGE TEST
218	HYUNDAI GENERAL EXPORT	ELANTRA 96-00		ENGINE L4-DOHC UNLEAD 98MY OBD-II	HYUNDAI 12PIN CONNECTOR	O	O	O		O		1.EVAP. LEAKAGE TEST
219	HYUNDAI GENERAL EXPORT	ELANTRA 96-00		ENGINE L4-DOHC UNLEAD 99-00MY OBD-II	HYUNDAI 12PIN CONNECTOR	O	O	O		O		1.EVAP. LEAKAGE TEST
220	HYUNDAI GENERAL EXPORT	ELANTRA 96-00		AUTOMATIC TRANSAXLE ~99MY(A4BF1)	HYUNDAI 12PIN CONNECTOR	O		O	O			
221	HYUNDAI GENERAL EXPORT	ELANTRA 96-00		AUTOMATIC TRANSAXLE 2000MY(A4BF2)	HYUNDAI 12PIN CONNECTOR	O		O	O		O	
222	HYUNDAI GENERAL EXPORT	ELANTRA 96-00		ANTI-LOCK BRAKE SYSTEM	HYUNDAI 12PIN CONNECTOR	O		O	O		O	
223	HYUNDAI GENERAL EXPORT	ELANTRA 96-00		SRS-AIRBAG	HYUNDAI 12PIN CONNECTOR	O	O	O				1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
224	HYUNDAI GENERAL EXPORT	ELANTRA 96-00		CRUISE CONTROL	HYUNDAI 12PIN CONNECTOR	O						
225	HYUNDAI GENERAL EXPORT	ELANTRA 96-00		ELEC.POWER STEERING	HYUNDAI 12PIN CONNECTOR	O						
226	HYUNDAI GENERAL EXPORT	ELANTRA 96-00		IMMOBILIZER GASOLINE	HYUNDAI 12PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.MASTER KEY RECORD 3.MASTER KEY DELETE 4.NEUTRAL MODE 5.IMMOBILIZER RESET
227	HYUNDAI GENERAL EXPORT	ELANTRA 96-00		IMMOBILIZER DIESEL	HYUNDAI 12PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.MASTER KEY RECORD 3.MASTER KEY DELETE 4.IMMOBILIZER RESET 5.FCVC STATUS 6.FCVC RESET
228	HYUNDAI GENERAL EXPORT	ELANTRA(HD)07-11		ENGINE(GASOLINE) UNLEAD 1.6L GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
229	HYUNDAI GENERAL EXPORT	ELANTRA(HD)07-11		ENGINE(GASOLINE) UNLEAD 1.6L EOBD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
230	HYUNDAI GENERAL EXPORT	ELANTRA(HD)07-11		ENGINE(GASOLINE) LEAD 1.6L ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
231	HYUNDAI GENERAL EXPORT	ELANTRA(HD)07-11		ENGINE(GASOLINE) UNLEAD 1.6L OBD-II	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST
232	HYUNDAI GENERAL EXPORT	ELANTRA(HD)07-11		ENGINE(GASOLINE) UNLEAD 2.0L EOBD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
233	HYUNDAI GENERAL EXPORT	ELANTRA(HD)07-11		ENGINE(GASOLINE) UNLEAD 2.0L GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
234	HYUNDAI GENERAL EXPORT	ELANTRA(HD)07-11		ENGINE(GASOLINE) LEAD 2.0L ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
235	HYUNDAI GENERAL EXPORT	ELANTRA(HD)07-11		ENGINE(GASOLINE) UNLEAD 2.0L OBD-II	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST
236	HYUNDAI GENERAL EXPORT	ELANTRA(HD)07-11		ENGINE(DIESEL) D 1.6 TCI-U	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA
237	HYUNDAI GENERAL EXPORT	ELANTRA(HD)07-11		AUTOMATIC TRANSAXLE 1.6L GASOLINE	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING AUTO T/A VALUES
238	HYUNDAI GENERAL EXPORT	ELANTRA(HD)07-11		AUTOMATIC TRANSAXLE 2.0L GASOLINE	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
239	HYUNDAI GENERAL EXPORT	ELANTRA(HD)07-11		AUTOMATIC TRANSAXLE 1.6L DIESEL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING AUTO T/A VALUES
240	HYUNDAI GENERAL EXPORT	ELANTRA(HD)07-11		ABS/ESP	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING 2.VARIANT CODING 3.SOLENOID VALVE TEST 4.SAS SENSOR ZERO SETTING
241	HYUNDAI GENERAL EXPORT	ELANTRA(HD)07-11		SRS-AIRBAG ACU(GEN)	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
242	HYUNDAI GENERAL EXPORT	ELANTRA(HD)07-11		SRS-AIRBAG ACU(NAS)	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
243	HYUNDAI GENERAL EXPORT	ELANTRA(HD)07-11		SRS-AIRBAG WCS	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.WCS RESET
244	HYUNDAI GENERAL EXPORT	ELANTRA(HD)07-11		FULL AUTO AIR/CON.	OBD-II 16PIN CONNECTOR	O		O	O		O	
245	HYUNDAI GENERAL EXPORT	ELANTRA(HD)07-11		ELEC.POWER STEERING	OBD-II 16PIN CONNECTOR	O		O		O	O	1.EPS TYPE RECOGNITION 2.ASP CALIBRATION
246	HYUNDAI GENERAL EXPORT	ELANTRA(HD)07-11		BODY CONTROL MODULE GENERAL	OBD-II 16PIN CONNECTOR			O	O		O	1.USER OPTION
247	HYUNDAI GENERAL EXPORT	ELANTRA(HD)07-11		BODY CONTROL MODULE NAS	OBD-II 16PIN CONNECTOR			O	O		O	1.USER OPTION
248	HYUNDAI GENERAL EXPORT	ELANTRA(HD)07-11		TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
249	HYUNDAI GENERAL EXPORT	ELANTRA(HD)07-11		IMMOBILIZER GASOLINE	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
250	HYUNDAI GENERAL EXPORT	ELANTRA(HD)07-11		IMMOBILIZER DIESEL	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL

251	HYUNDAI GENERAL EXPORT	ELANTRA(MD)	2012MY	ENGINE(GASOLINE) UNLEADED 1.6 DOHC ALL	OBD-11 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
252	HYUNDAI GENERAL EXPORT	ELANTRA(MD)	2012MY	ENGINE(GASOLINE) LEADED 1.6 DOHC ALL	OBD-11 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VIN READING 4.VIN WRITING
253	HYUNDAI GENERAL EXPORT	ELANTRA(MD)	2012MY	ENGINE(GASOLINE) G 1.8 DOHC UNLEADED ALL	OBD-11 16PIN CONNECTOR	O		O	O			
254	HYUNDAI GENERAL EXPORT	ELANTRA(MD)	2012MY	ENGINE(GASOLINE) G 1.8 DOHC LEADED ALL	OBD-11 16PIN CONNECTOR	O		O				
255	HYUNDAI GENERAL EXPORT	ELANTRA(MD)	2012MY	AUTOMATIC TRANSAXLE	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING AUTO T/A VALUES
256	HYUNDAI GENERAL EXPORT	ELANTRA(MD)	2012MY	SRS-AIRBAG	OBD-11 16PIN CONNECTOR	O		O			O	1.CRASH INFO 2.ACJ CODING
257	HYUNDAI GENERAL EXPORT	ELANTRA(MD)	2012MY	FULL AUTO AIR/CON.	OBD-11 16PIN CONNECTOR	O		O	O		O	
258	HYUNDAI GENERAL EXPORT	ELANTRA(MD)	2012MY	ELEC.POWER STEERING	OBD-11 16PIN CONNECTOR	O		O			O	1.EPS TYPE RECOGNITION 2.ASP CALIBRATION
259	HYUNDAI GENERAL EXPORT	ELANTRA(MD)	2012MY	BODY CONTROL MODULE ALL SYSTEMS	OBD-11 16PIN CONNECTOR	O		O	O		O	1.USER OPTION
260	HYUNDAI GENERAL EXPORT	ELANTRA(MD)	2012MY	BODY CONTROL MODULE BODY CONTROL MODULE	OBD-11 16PIN CONNECTOR	O		O	O		O	1.USER OPTION
261	HYUNDAI GENERAL EXPORT	ELANTRA(MD)	2012MY	BODY CONTROL MODULE SMART JUNCTION BOX	OBD-11 16PIN CONNECTOR	O	O	O	O		O	
262	HYUNDAI GENERAL EXPORT	ELANTRA(MD)	2012MY	IMMOBILIZER	OBD-11 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
263	HYUNDAI GENERAL EXPORT	ELANTRA(MD)	2012MY	AUTO HEAD LEVELING	OBD-11 16PIN CONNECTOR	O		O			O	1.ACTUATOR DRIVING 2.SELECT VEHICLE 3.PARAMETER INITIALIZING
264	HYUNDAI GENERAL EXPORT	ELANTRA(MD)	2012MY	TRANSMITTER CODE SAVING	OBD-11 16PIN CONNECTOR							
265	HYUNDAI GENERAL EXPORT	EON(HA)	2012MY	ENGINE(GASOLINE) G 0.8 SOHC	OBD-11 16PIN CONNECTOR	O						
266	HYUNDAI GENERAL EXPORT	EQUUS/CENTENNIAL	2012MY	ENGINE(GASOLINE) G 5.0 GDI	OBD-11 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
267	HYUNDAI GENERAL EXPORT	EQUUS/CENTENNIAL	2012MY	ENGINE(GASOLINE) G 4.6 DOHC	OBD-11 16PIN CONNECTOR	O						
268	HYUNDAI GENERAL EXPORT	EQUUS/CENTENNIAL	2012MY	ENGINE(GASOLINE) G 3.8 GDI	OBD-11 16PIN CONNECTOR	O		O	O			
269	HYUNDAI GENERAL EXPORT	EQUUS/CENTENNIAL	2012MY	ENGINE(GASOLINE) G 3.8 DOHC	OBD-11 16PIN CONNECTOR	O						
270	HYUNDAI GENERAL EXPORT	EQUUS/CENTENNIAL	2011MY	ENGINE(GASOLINE) G 4.6 DOHC	OBD-11 16PIN CONNECTOR	O						
271	HYUNDAI GENERAL EXPORT	EQUUS/CENTENNIAL	2011MY	ENGINE(GASOLINE) G 3.8 DOHC	OBD-11 16PIN CONNECTOR	O						
272	HYUNDAI GENERAL EXPORT	EQUUS/CENTENNIAL	2010MY	ENGINE(GASOLINE) G 4.6 DOHC	OBD-11 16PIN CONNECTOR	O						
273	HYUNDAI GENERAL EXPORT	EQUUS/CENTENNIAL	2010MY	ENGINE(GASOLINE) G 3.8 DOHC	OBD-11 16PIN CONNECTOR	O						
274	HYUNDAI GENERAL EXPORT	EXCEL 90-94		ENGINE L4-SOHC	HYUNDAI 12PIN CONNECTOR	O		O	O			
275	HYUNDAI GENERAL EXPORT	EXCEL 90-94		AUTOMATIC TRANSAXLE	HYUNDAI 12PIN CONNECTOR	O		O	O			
276	HYUNDAI GENERAL EXPORT	GALLOPER-11		ENGINE V6-SOHC UNLEAD 3.0L GEN	HYUNDAI 12PIN CONNECTOR	O		O	O			
277	HYUNDAI GENERAL EXPORT	GALLOPER-11		ENGINE V6-SOHC UNLEAD 3.0L IMM/ME	HYUNDAI 12PIN CONNECTOR	O		O	O			
278	HYUNDAI GENERAL EXPORT	GALLOPER-11		ENGINE V6-SOHC LEAD 3.0L GEN	HYUNDAI 12PIN CONNECTOR	O		O	O			
279	HYUNDAI GENERAL EXPORT	GALLOPER-11		ENGINE V6-SOHC LEAD 3.0L IMM	HYUNDAI 12PIN CONNECTOR	O	O	O	O		O	
280	HYUNDAI GENERAL EXPORT	GALLOPER-11		ENGINE V6-SOHC DIESEL(COVEC-F)	HYUNDAI 12PIN CONNECTOR	O		O	O			
281	HYUNDAI GENERAL EXPORT	GALLOPER-11		AUTOMATIC TRANSAXLE	HYUNDAI 12PIN CONNECTOR	O						
282	HYUNDAI GENERAL EXPORT	GALLOPER-11		ANTI-LOCK BRAKE SYSTEM ~2000MY	HYUNDAI 12PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
283	HYUNDAI GENERAL EXPORT	GALLOPER-11		ANTI-LOCK BRAKE SYSTEM 2001MY BOSCH	HYUNDAI 12PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
284	HYUNDAI GENERAL EXPORT	GALLOPER-11		SRS-AIRBAG	HYUNDAI 12PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
285	HYUNDAI GENERAL EXPORT	GALLOPER-11		IMMOBILIZER UNLEAD 3.0L IMM/ME	HYUNDAI 12PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.MASTER KEY RECORD 3.MASTER KEY DELETE 4.IMMOBILIZER RESET
286	HYUNDAI GENERAL EXPORT	GALLOPER-11		IMMOBILIZER LEAD 3.0L IMM	HYUNDAI 12PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.MASTER KEY RECORD 3.MASTER KEY DELETE 4.NEUTRAL MODE 5.IMMOBILIZER RESET
287	HYUNDAI GENERAL EXPORT	GALLOPER-11		IMMOBILIZER DIESEL(COVEC-F)	HYUNDAI 12PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.MASTER KEY RECORD 3.MASTER KEY DELETE 4.NEUTRAL MODE 5.IMMOBILIZER RESET
288	HYUNDAI GENERAL EXPORT	GALLOPER-11		IMMOBILIZER DIESEL(DDS)	HYUNDAI 12PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.MASTER KEY RECORD 3.MASTER KEY DELETE 4.IMMOBILIZER RESET 5.FCVC STATUS 6.FCVC RESET
289	HYUNDAI GENERAL EXPORT	GENESIS COUPE(BK)		ENGINE(GASOLINE) UNLEAD 2.0L(TCI) GEN	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES

290	HYUNDAI GENERAL EXPORT	GENESIS COUPE(BK)		ENGINE(GASOLINE) UNLEAD 2.0L(TCI) E0BD	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES
291	HYUNDAI GENERAL EXPORT	GENESIS COUPE(BK)		ENGINE(GASOLINE) LEAD 2.0L(TCI) ALL	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
292	HYUNDAI GENERAL EXPORT	GENESIS COUPE(BK)		ENGINE(GASOLINE) UNLEAD 3.8L GEN	OBD-II 16PIN CONNECTOR	O	O	O	O	O	O	1.PCM AUTO DETECTION RESET 2.PCM LOCK(MEC) SETTING
293	HYUNDAI GENERAL EXPORT	GENESIS COUPE(BK)		ENGINE(GASOLINE) UNLEAD 3.8L E0BD	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.PCM AUTO DETECTION RESET 2.PCM LOCK(MEC) SETTING
294	HYUNDAI GENERAL EXPORT	GENESIS COUPE(BK)		ENGINE(GASOLINE) LEAD 3.8L ALL	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.PCM AUTO DETECTION RESET 2.IDLE CO ADJUSTMENT 3.PCM LOCK(MEC) SETTING
295	HYUNDAI GENERAL EXPORT	GENESIS COUPE(BK)		ENGINE(GASOLINE) UNLEAD 3.8L OBD-II	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST 3.PCM LOCK(MEC) SETTING 4.MISFIRE DELAY RESON.
296	HYUNDAI GENERAL EXPORT	GENESIS COUPE(BK)		AUTOMATIC TRANSAXLE 2.0L	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING AUTO T/A VALUES 2.TCU SUB ROM RESET
297	HYUNDAI GENERAL EXPORT	GENESIS COUPE(BK)		AUTOMATIC TRANSAXLE 3.8L	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING AUTO T/A VALUES 2.CLEAR CAN LEARNABLE STATUS
298	HYUNDAI GENERAL EXPORT	GENESIS COUPE(BK)		ABS/ESP ~2010MY	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
299	HYUNDAI GENERAL EXPORT	GENESIS COUPE(BK)		ABS/ESP 2011MY~	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
300	HYUNDAI GENERAL EXPORT	GENESIS COUPE(BK)		SRS-AIRBAG GENERAL	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.ACU CODING
301	HYUNDAI GENERAL EXPORT	GENESIS COUPE(BK)		SRS-AIRBAG NAS	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.ACU CODING
302	HYUNDAI GENERAL EXPORT	GENESIS COUPE(BK)		SMART KEY SYSTEM SMART KEY UNIT	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.STATUS CHECK 2.FOB STATUS INFO 3.SMK STATUS INFO 4.ESCL STATUS INFO 5.PDM STATUS INFO 6.NEUTRAL MODE
303	HYUNDAI GENERAL EXPORT	GENESIS COUPE(BK)		SMART KEY SYSTEM SMART KEY CODE SAVING	OBD-II 16PIN CONNECTOR							
304	HYUNDAI GENERAL EXPORT	GENESIS COUPE(BK)		SMART KEY SYSTEM PDM(POWER DISTRIBUTION)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.ESCL OPEN CHECK
305	HYUNDAI GENERAL EXPORT	GENESIS COUPE(BK)		FULL AUTO AIR/CON.	OBD-II 16PIN CONNECTOR	O		O	O		O	
306	HYUNDAI GENERAL EXPORT	GENESIS COUPE(BK)		BODY CONTROL MODULE GENERAL	OBD-II 16PIN CONNECTOR			O	O		O	1.USER OPTION
307	HYUNDAI GENERAL EXPORT	GENESIS COUPE(BK)		BODY CONTROL MODULE NAS	OBD-II 16PIN CONNECTOR			O	O		O	1.USER OPTION
308	HYUNDAI GENERAL EXPORT	GENESIS COUPE(BK)		AUTO HEAD LEVELING	OBD-II 16PIN CONNECTOR	O		O			O	1.ACTUATOR DRIVING 2.SELECT VEHICLE 3.PARAMETER INITIALIZING
309	HYUNDAI GENERAL EXPORT	GENESIS COUPE(BK)		TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
310	HYUNDAI GENERAL EXPORT	GENESIS COUPE(BK)		IMMOBILIZER	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
311	HYUNDAI GENERAL EXPORT	GENESIS COUPE(BK)		TPMS	OBD-II 16PIN CONNECTOR	O	O	O	O			1.SPECIFIC DATA WRITING 2.SYSTEM ID
312	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2012MY	ENGINE(GASOLINE) G 5.0 GDI	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
313	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2012MY	ENGINE(GASOLINE) G 4.6 DOHC	OBD-II 16PIN CONNECTOR	O						
314	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2012MY	ENGINE(GASOLINE) G 3.8 GDI	OBD-II 16PIN CONNECTOR	O		O	O			
315	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2012MY	ENGINE(GASOLINE) G 3.3 GDI	OBD-II 16PIN CONNECTOR	O		O	O			
316	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2012MY	ENGINE(GASOLINE) G 3.8 DOHC	OBD-II 16PIN CONNECTOR	O						
317	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2012MY	ENGINE(GASOLINE) G 3.3 DOHC	OBD-II 16PIN CONNECTOR	O						
318	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	ENGINE(GASOLINE) UNLEAD 3.3/3.8L GEN	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.PCM LOCK(MEC) SETTING
319	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	ENGINE(GASOLINE) UNLEAD 3.3/3.8L E0BD	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.PCM LOCK(MEC) SETTING
320	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	ENGINE(GASOLINE) UNLEAD 3.3/3.8L OBD-II	OBD-II 16PIN CONNECTOR	O	O	O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST 3.PCM LOCK(MEC) SETTING
321	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	ENGINE(GASOLINE) UNLEAD 4.6L OBD-II	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST 3.VIN WRITING 4.VIN READING
322	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	AUTOMATIC TRANSAXLE 3.3/3.8L	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING AUTO T/A VALUES
323	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	ABS/ESP/ESC	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.HCU AIR BLEEDING 2.VARIANT CODING 3.SAS SENSOR ZERO SETTING 4.G-SENSOR CAL.(LONG) - EPB 5.G-SENSOR CAL.(LATERAL) 6.PRESURE SENSOR CALIBRATION
324	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	SRS-AIRBAG ACU(GEN)	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO

325	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	SRS-AIRBAG ACU(NAS)	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.PODS RESET
326	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	FULL AUTO AIR/CON.	OBD-II 16PIN CONNECTOR	O		O	O		O	
327	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	ELEC.POWER STEERING	OBD-II 16PIN CONNECTOR	O		O	O		O	1.EPS TYPE RECOGNITION
328	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	ELEC.CONTROL SUSPENSION	OBD-II 16PIN CONNECTOR	O		O			O	1.VARIANT CODING 2.HEIGHT SENSOR CALIBRATION 3.AIR FILLING/VENTING 4.CHECKING AIR PRESSURE SYSTEM 5.HEIGHTE LEVEL SELECT
329	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	ELEC.PAKING BRAKE	OBD-II 16PIN CONNECTOR	O		O	O		O	
330	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	AUTO HEAD LEVELING AHLS	OBD-II 16PIN CONNECTOR	O		O			O	1.ACTUATOR DRIVING 2.SELECT VEHICLE 3.PARAMETER INITIALIZING
331	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	AUTO HEAD LEVELING AFLS	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.PARAMETER DOWNLOAD 2.SENSOR INITIALIZING - NOT ECS
332	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	BODY CONTROL MODULE IPM(IN PANEL MODULE) -PIC	OBD-II 16PIN CONNECTOR	O		O	O		O	1.SERIAL COMMLINE CHECK
333	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	BODY CONTROL MODULE IPM(IN PANEL MODULE) +PIC	OBD-II 16PIN CONNECTOR	O		O	O		O	1.SERIAL COMMLINE CHECK 2.PIC ANTENNA STATUS CHECK 3.PIC ANTENNA ACTUATION TEST 4.FOB STATUS INFO 5.EMS IMMO STATUS INFO 6.IPM STATE INFO. 7.ESCL STATUS INFO 8.PDM STATUS INFO 9.NEUTRAL MODE
334	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	BODY CONTROL MODULE FAM(FRONT AREA MODULE)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
335	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	BODY CONTROL MODULE DDM(POWER WINDOW MAIN)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
336	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	BODY CONTROL MODULE ADM(POWER WINDOW ASSIST)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
337	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	BODY CONTROL MODULE CLU(CLUSTER)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
338	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	BODY CONTROL MODULE MFSW(MULTIFUNTION SW)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
339	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	BODY CONTROL MODULE PSM(POWER SEAT)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
340	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	BODY CONTROL MODULE SCM(TILT & TELE)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
341	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	BODY CONTROL MODULE FBWS(FRONT&BACK WARNING)	OBD-II 16PIN CONNECTOR	O	O	O			O	
342	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	BODY CONTROL MODULE PTM(POWER TRUNK)	OBD-II 16PIN CONNECTOR	O	O	O			O	
343	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	BODY CONTROL MODULE ECW(ELEC. CONTROL WIPER)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
344	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	BODY CONTROL MODULE PDM(POWER DISTRIBUTION)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.ESCL OPEN STATUS CHECK
345	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	BODY CONTROL MODULE USER OPTION	OBD-II 16PIN CONNECTOR							1.DOOR KEY BUGLAR ALARM 2.AUTO DOOR LOCK SETUP 3.EASY ACCESS
346	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	MULTI MEDIA SYSTEM HEAD UNIT	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.WRITE VARIENT CODING 2.ALL UNIT SOFTWARE VERSION 3.WAKE UP LINE TEST 4.RING BREAK TEST 5.XdB TEST 6.UNIT UPDATE FROM CD 7.NUMBER IN DVD SLOT
347	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	MULTI MEDIA SYSTEM TUNER/AMP	OBD-II 16PIN CONNECTOR	O	O				O	
348	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	IMMOBILIZER	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
349	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	SMART KEY CODE SAVING	OBD-II 16PIN CONNECTOR							
350	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2011MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
351	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	ENGINE(GASOLINE) UNLEAD 3.3/3.8L GEN	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.PCM LOCK(MEC) SETTING
352	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	ENGINE(GASOLINE) UNLEAD 3.3/3.8L EOBD	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.PCM LOCK(MEC) SETTING
353	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	ENGINE(GASOLINE) UNLEAD 3.3/3.8L OBD-II	OBD-II 16PIN CONNECTOR	O	O	O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST 3.PCM LOCK(MEC) SETTING
354	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	ENGINE(GASOLINE) UNLEAD 4.6L OBD-II	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST 3.VIN WRITING 4.VIN READING
355	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	AUTOMATIC TRANSAXLE 3.3/3.8L	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING AUTO T/A VALUES
356	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	ABS/ESP/ESC	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.HCU AIR BLEEDING 2.VARIANT CODING 3.SAS SENSOR ZERO SETTING 4.G-SENSOR CAL.(LONG) - EPB 5.G-SENSOR CAL.(LATERAL) 6.PRESURE SENSOR CALIBRATION
357	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	SRS-AIRBAG ACU(GEN)	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO

358	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	SRS-AIRBAG ACU(NAS)	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.PODS RESET
359	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	FULL AUTO AIR/CON.	OBD-II 16PIN CONNECTOR	O		O	O		O	
360	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	ELEC.POWER STEERING	OBD-II 16PIN CONNECTOR	O		O	O		O	1.EPS TYPE RECOGNITION
361	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	ELEC.CONTROL SUSPENSION	OBD-II 16PIN CONNECTOR	O		O			O	1.VARIANT CODING 2.HEIGHT SENSOR CALIBRATION 3.AIR FILLING/VENTING 4.CHECKING AIR PRESSURE SYSTEM 5.HEIGHTE LEVEL SELECT
362	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	ELEC.PAKING BRAKE	OBD-II 16PIN CONNECTOR	O		O	O		O	
363	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	AUTO HEAD LEVELING AHL5	OBD-II 16PIN CONNECTOR	O		O			O	1.ACTUATOR DRIVING 2.SELECT VEHICLE 3.PARAMETER INITIALIZING
364	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	AUTO HEAD LEVELING AFL5	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.PARAMETER DOWNLOAD 2.SENSOR INITIALIZING - NOT ECS
365	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	BODY CONTROL MODULE IPM(IN PANEL MODULE) -PIC	OBD-II 16PIN CONNECTOR	O		O	O		O	1.SERIAL COMMLINE CHECK
366	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	BODY CONTROL MODULE IPM(IN PANEL MODULE) +PIC	OBD-II 16PIN CONNECTOR	O		O	O		O	1.SERIAL COMMLINE CHECK 2.PIC ANTENNA STATUS CHECK 3.PIC ANTENNA ACTUATION TEST 4.FOB STATUS INFO 5.EMS IMMO STATUS INFO 6.IPM STATE INFO. 7.ESCL STATUS INFO 8.PDM STATUS INFO 9.NEUTRAL MODE
367	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	BODY CONTROL MODULE FAM(FRONT AREA MODULE)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
368	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	BODY CONTROL MODULE DDM(POWER WINDOW MAIN)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
369	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	BODY CONTROL MODULE ADM(POWER WINDOW ASSIST)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
370	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	BODY CONTROL MODULE CLU(CLUSTER)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
371	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	BODY CONTROL MODULE MFSW(MULTIFUNTION SW)	OBD-II 16PIN CONNECTOR	O	O	O			O	
372	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	BODY CONTROL MODULE PSM(POWER SEAT)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
373	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	BODY CONTROL MODULE SCM(TILT & TELE)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
374	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	BODY CONTROL MODULE FBWS(FRONT&BACK WARNING)	OBD-II 16PIN CONNECTOR	O	O	O			O	
375	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	BODY CONTROL MODULE PTM(POWER TRUNK)	OBD-II 16PIN CONNECTOR	O	O	O			O	
376	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	BODY CONTROL MODULE ECW(ELEC. CONTROL WIPER)	OBD-II 16PIN CONNECTOR	O	O	O			O	
377	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	BODY CONTROL MODULE PDM(POWER DISTRIBUTION)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.ESCL OPEN STATUS CHECK
378	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	BODY CONTROL MODULE USER OPTION	OBD-II 16PIN CONNECTOR							1.DOOR KEY BUGLAR ALARM 2.AUTO DOOR LOCK SETUP 3.EASY ACCESS
379	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	MULTI MEDIA SYSTEM HEAD UNIT	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.WRITE VARIENT CODING 2.ALL UNIT SOFTWARE VERSION 3.WAKE UP LINE TEST 4.RING BREAK TEST 5.XdB TEST 6.UNIT UPDATE FROM CD 7.NUMBER IN DVD SLOT
380	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	MULTI MEDIA SYSTEM TUNER/AMP	OBD-II 16PIN CONNECTOR	O	O				O	
381	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	IMMOBILIZER	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
382	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	SMART KEY CODE SAVING	OBD-II 16PIN CONNECTOR							
383	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2010MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
384	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	ENGINE(GASOLINE) UNLEAD 3.3/3.8L GEN	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.PCM LOCK(MEC) SETTING
385	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	ENGINE(GASOLINE) UNLEAD 3.3/3.8L EOBD	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.PCM LOCK(MEC) SETTING
386	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	ENGINE(GASOLINE) UNLEAD 3.3/3.8L OBD-II	OBD-II 16PIN CONNECTOR	O	O	O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST 3.PCM LOCK(MEC) SETTING
387	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	ENGINE(GASOLINE) UNLEAD 4.6L OBD-II	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST 3.VIN WRITING 4.VIN READING
388	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	AUTOMATIC TRANSAXLE 3.3/3.8L	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING AUTO T/A VALUES
389	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	ABS/ESP/ESC	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.HCU AIR BLEEDING 2.VARIANT CODING 3.SAS SENSOR ZERO SETTING 4.G-SENSOR CAL.(LONG) - EPB 5.G-SENSOR CAL.(LATERAL) 6.PRESURE SENSOR CALIBRATION
390	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	SRS-AIRBAG ACU(GEN)	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO

391	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	SRS-AIRBAG ACU(NAS)	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.PODS RESET
392	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	FULL AUTO AIR/CON.	OBD-II 16PIN CONNECTOR	O		O	O		O	
393	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	ELEC.POWER STEERING	OBD-II 16PIN CONNECTOR	O		O	O		O	1.EPS TYPE RECOGNITION
394	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	ELEC.CONTROL SUSPENSION	OBD-II 16PIN CONNECTOR	O		O			O	1.VARIANT CODING 2.HEIGHT SENSOR CALIBRATION 3.AIR FILLING/VENTING 4.CHECKING AIR PRESSURE SYSTEM 5.HEIGHTE LEVEL SELECT
395	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	ELEC.PAKING BRAKE	OBD-II 16PIN CONNECTOR	O		O	O		O	
396	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	AUTO HEAD LEVELING AHL5	OBD-II 16PIN CONNECTOR	O		O			O	1.ACTUATOR DRIVING 2.SELECT VEHICLE 3.PARAMETER INITIALIZING
397	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	AUTO HEAD LEVELING AFL5	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.PARAMETER DOWNLOAD 2.SENSOR INITIALIZING - NOT ECS
398	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	BODY CONTROL MODULE IPM(IN PANEL MODULE) -PIC	OBD-II 16PIN CONNECTOR	O		O	O		O	1.SERIAL COMMLINE CHECK
399	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	BODY CONTROL MODULE IPM(IN PANEL MODULE) +PIC	OBD-II 16PIN CONNECTOR	O		O	O		O	1.SERIAL COMMLINE CHECK 2.PIC ANTENNA STATUS CHECK 3.PIC ANTENNA ACTUATION TEST 4.FOB STATUS INFO 5.EMS IMMO STATUS INFO 6.IPM STATE INFO. 7.ESCL STATUS INFO 8.PDM STATUS INFO 9.NEUTRAL MODE
400	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	BODY CONTROL MODULE FAM(FRONT AREA MODULE)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
401	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	BODY CONTROL MODULE DDM(POWER WINDOW MAIN)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
402	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	BODY CONTROL MODULE ADM(POWER WINDOW ASSIST)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
403	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	BODY CONTROL MODULE CLU(CLUSTER)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
404	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	BODY CONTROL MODULE MFSW(MULTIFUNTION SW)	OBD-II 16PIN CONNECTOR	O	O	O			O	
405	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	BODY CONTROL MODULE PSM(POWER SEAT)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
406	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	BODY CONTROL MODULE SCM(TILT & TELE)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
407	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	BODY CONTROL MODULE FBWS(FRONT&BACK WARNING)	OBD-II 16PIN CONNECTOR	O	O	O			O	
408	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	BODY CONTROL MODULE PTM(POWER TRUNK)	OBD-II 16PIN CONNECTOR	O	O	O			O	
409	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	BODY CONTROL MODULE ECW(ELEC. CONTROL WIPER)	OBD-II 16PIN CONNECTOR	O	O	O			O	
410	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	BODY CONTROL MODULE PDM(POWER DISTRIBUTION)	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.ESCL OPEN STATUS CHECK
411	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	BODY CONTROL MODULE USER OPTION	OBD-II 16PIN CONNECTOR							1.DOOR KEY BUGLAR ALARM 2.AUTO DOOR LOCK SETUP 3.EASY ACCESS
412	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	MULTI MEDIA SYSTEM HEAD UNIT	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.WRITE VARIENT CODING 2.ALL UNIT SOFTWARE VERSION 3.WAKE UP LINE TEST 4.RING BREAK TEST 5.XdB TEST 6.UNIT UPDATE FROM CD 7.NUMBER IN DVD SLOT
413	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	MULTI MEDIA SYSTEM TUNER/AMP	OBD-II 16PIN CONNECTOR	O	O				O	
414	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	IMMOBILIZER	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
415	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	SMART KEY CODE SAVING	OBD-II 16PIN CONNECTOR							
416	HYUNDAI GENERAL EXPORT	GENESIS(BH)	2009MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
417	HYUNDAI GENERAL EXPORT	GETZ 03-05		ENGINE(GASOLINE) UNLEAD GEN	OBD-II 16PIN CONNECTOR	O		O			O	
418	HYUNDAI GENERAL EXPORT	GETZ 03-05		ENGINE(GASOLINE) LEAD ALL	OBD-II 16PIN CONNECTOR	O		O			O	1.IDLE CO ADJUSTMENT
419	HYUNDAI GENERAL EXPORT	GETZ 03-05		ENGINE(GASOLINE) UNLEAD EOBD	OBD-II 16PIN CONNECTOR	O		O			O	
420	HYUNDAI GENERAL EXPORT	GETZ 03-05		ENGINE-DIESEL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST
421	HYUNDAI GENERAL EXPORT	GETZ 03-05		AUTOMATIC TRANSAXLE	OBD-II 16PIN CONNECTOR	O		O	O			
422	HYUNDAI GENERAL EXPORT	GETZ 03-05		ANTI-LOCK BRAKE SYSTEM	OBD-II 16PIN CONNECTOR	O		O	O		O	1.SOLENOID VALVE TEST 2.HCU AIR BLEEDING
423	HYUNDAI GENERAL EXPORT	GETZ 03-05		SRS-AIRBAG	OBD-II 16PIN CONNECTOR	O		O			O	1.CRASH INFO 2.TROUBLE CODE INFORMATION
424	HYUNDAI GENERAL EXPORT	GETZ 03-05		IMMOBILIZER GASOLINE	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
425	HYUNDAI GENERAL EXPORT	GETZ 03-05		IMMOBILIZER DIESEL	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
426	HYUNDAI GENERAL EXPORT	GETZ 03-05		ELEC.POWER STEERING	OBD-II 16PIN CONNECTOR	O		O			O	1.EPS TYPE RECOGNITION

427	HYUNDAI GENERAL EXPORT	GETZ 03-05		TRANSMITTER CODE SAVING	OBD-11 16PIN CONNECTOR							
428	HYUNDAI GENERAL EXPORT	GETZ 06-		ENGINE(GASOLINE) UNLEAD GEN	OBD-11 16PIN CONNECTOR	O		O	O		O	
429	HYUNDAI GENERAL EXPORT	GETZ 06-		ENGINE(GASOLINE) LEAD ALL	OBD-11 16PIN CONNECTOR	O		O	O		O	1.IDLE CO ADJUSTMENT
430	HYUNDAI GENERAL EXPORT	GETZ 06-		ENGINE(GASOLINE) UNLEAD EOBD	OBD-11 16PIN CONNECTOR	O		O	O		O	
431	HYUNDAI GENERAL EXPORT	GETZ 06-		ENGINE(DIESEL)	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA
432	HYUNDAI GENERAL EXPORT	GETZ 06-		AUTOMATIC TRANSAXLE	OBD-11 16PIN CONNECTOR	O		O	O			
433	HYUNDAI GENERAL EXPORT	GETZ 06-		ABS/ESP	OBD-11 16PIN CONNECTOR	O		O	O		O	1.SOLEN01D VALVE TEST 2.HCU AIR BLEEDING
434	HYUNDAI GENERAL EXPORT	GETZ 06-		SRS-AIRBAG	OBD-11 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
435	HYUNDAI GENERAL EXPORT	GETZ 06-		IMMOBILIZER GASOLINE	OBD-11 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
436	HYUNDAI GENERAL EXPORT	GETZ 06-		IMMOBILIZER DIESEL	OBD-11 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
437	HYUNDAI GENERAL EXPORT	GETZ 06-		ELEC.POWER STEERING	OBD-11 16PIN CONNECTOR	O		O			O	1.EPS TYPE RECOGNITION
438	HYUNDAI GENERAL EXPORT	GETZ 06-		TRANSMITTER CODE SAVING	OBD-11 16PIN CONNECTOR							
439	HYUNDAI GENERAL EXPORT	GRANDEUR 89-93		ENGINE L4-SOHC	HYUNDAI 12PIN CONNECTOR	O		O	O			
440	HYUNDAI GENERAL EXPORT	GRANDEUR 89-93		ENGINE V6-SOHC	HYUNDAI 12PIN CONNECTOR	O		O	O			
441	HYUNDAI GENERAL EXPORT	GRANDEUR 89-93		AUTOMATIC TRANSAXLE	HYUNDAI 12PIN CONNECTOR	O		O	O			
442	HYUNDAI GENERAL EXPORT	GRANDEUR 89-93		ELEC.CONTROL SUSPENSION	HYUNDAI 12PIN CONNECTOR	O						
443	HYUNDAI GENERAL EXPORT	GRANDEUR 89-93		CRUISE CONTROL	HYUNDAI 12PIN CONNECTOR	O						
444	HYUNDAI GENERAL EXPORT	GRANDEUR 94-98		ENGINE L4-SOHC	HYUNDAI 12PIN CONNECTOR	O		O	O			
445	HYUNDAI GENERAL EXPORT	GRANDEUR 94-98		ENGINE L4-DOHC	HYUNDAI 12PIN CONNECTOR	O		O	O			
446	HYUNDAI GENERAL EXPORT	GRANDEUR 94-98		ENGINE V6-SOHC	HYUNDAI 12PIN CONNECTOR	O		O	O			
447	HYUNDAI GENERAL EXPORT	GRANDEUR 94-98		ENGINE V6-DOHC	HYUNDAI 12PIN CONNECTOR	O		O	O			
448	HYUNDAI GENERAL EXPORT	GRANDEUR 94-98		AUTOMATIC TRANSAXLE	HYUNDAI 12PIN CONNECTOR	O		O	O			
449	HYUNDAI GENERAL EXPORT	GRANDEUR 94-98		ANTI-LOCK BRAKE SYSTEM	HYUNDAI 12PIN CONNECTOR	O		O	O			
450	HYUNDAI GENERAL EXPORT	GRANDEUR 94-98		SRS-AIRBAG	HYUNDAI 12PIN CONNECTOR	O	O	O				1.CRASH INFO
451	HYUNDAI GENERAL EXPORT	GRANDEUR 94-98		ELEC.CONTROL SUSPENSION	HYUNDAI 12PIN CONNECTOR	O		O	O			
452	HYUNDAI GENERAL EXPORT	GRANDEUR 94-98		TRACTION CONTROL SYSTEM	HYUNDAI 12PIN CONNECTOR	O		O	O			
453	HYUNDAI GENERAL EXPORT	GRANDEUR 94-98		FULL AUTO AIR/CON.	HYUNDAI 12PIN CONNECTOR	O		O	O			
454	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	ENGINE(GASOLINE) UNLEAD GEN	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.PCM AUTO DETECTION RESET 2.PCM LOCK(MEC) SETTING
455	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	ENGINE(GASOLINE) UNLEAD EOBD	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.PCM AUTO DETECTION RESET 2.PCM LOCK(MEC) SETTING
456	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	ENGINE(GASOLINE) LEAD ALL	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.PCM AUTO DETECTION RESET 2.IDLE CO ADJUSTMENT 3.PCM LOCK(MEC) SETTING
457	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	ENGINE(GASOLINE) UNLEAD OBD-11	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST 3.PCM LOCK(MEC) SETTING 4.MISFIRE DELAY RESON.
458	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	ENGINE(DIESEL) EURO-4 VGT(CAN)	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
459	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	AUTOMATIC TRANSAXLE GASOLINE	OBD-11 16PIN CONNECTOR	O		O	O	O	O	
460	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	AUTOMATIC TRANSAXLE DIESEL	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING AUTO T/A VALUES
461	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	ABS/ESP	OBD-11 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING 2.VARIANT CODING 3.SOLEN01D VALVE TEST 4.SAS SENSOR ZERO SETTING
462	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	SRS-AIRBAG GENERAL	OBD-11 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
463	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	SRS-AIRBAG NAS	OBD-11 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.PODS RESET
464	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	IMMOBILIZER GASOLINE	OBD-11 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
465	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	IMMOBILIZER DIESEL	OBD-11 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
466	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	ELEC.POWER STEERING	OBD-11 16PIN CONNECTOR	O		O			O	
467	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	FULL AUTO AIR/CON.	OBD-11 16PIN CONNECTOR	O		O	O		O	
468	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	BODY CONTROL MODULE BODY CONTROL MODULE	OBD-11 16PIN CONNECTOR	O		O	O		O	

469	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	BODY CONTROL MODULE DRIVER DOOR MODULE(DDM)	OBD-11 16PIN CONNECTOR	O		O	O		O	
470	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	BODY CONTROL MODULE ASSIST DOOR MODULE(ADM)	OBD-11 16PIN CONNECTOR	O		O	O		O	
471	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	BODY CONTROL MODULE IMS	OBD-11 16PIN CONNECTOR	O		O	O		O	
472	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	BODY CONTROL MODULE TILT & TELESCOPE(TILT)	OBD-11 16PIN CONNECTOR	O		O	O		O	
473	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	BODY CONTROL MODULE USER OPTION	OBD-11 16PIN CONNECTOR							1.DOOR LOCK STATUS HORN ALARM 2.DOOR KEY BUGLAR ALARM 3.AUTO DOOR INTERLOCK 4.GET IN & GET DOWN LINGAGE
474	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	SMART KEY SYSTEM INTERFACE UNIT	OBD-11 16PIN CONNECTOR	O		O	O			1.ECU RESET
475	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	SMART KEY SYSTEM SMART KEY UNIT	OBD-11 16PIN CONNECTOR	O		O	O		O	
476	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	TRANSMITTER CODE SAVING	OBD-11 16PIN CONNECTOR							
477	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	SMART KEY CODE SAVING	OBD-11 16PIN CONNECTOR							1.TEACHING
478	HYUNDAI GENERAL EXPORT	GRANDEUR(TG)	2006-2010MY	AHLS	OBD-11 16PIN CONNECTOR	O		O			O	1.ACTUATOR DRIVING 2.SELECT VEHICLE
479	HYUNDAI GENERAL EXPORT	GRANDEUR/AZERA(HG)	2012MY	ENGINE(GASOLINE) G 3.0 DOHC	OBD-11 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
480	HYUNDAI GENERAL EXPORT	GRANDEUR/AZERA(HG)	2012MY	ENGINE(GASOLINE) G 2.4 DOHC UNLEADED ALL	OBD-11 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.ISG TEST 4.VIN READING 5.VIN WRITING
481	HYUNDAI GENERAL EXPORT	GRANDEUR/AZERA(HG)	2012MY	ENGINE(GASOLINE) G 2.4 DOHC LEADED ALL	OBD-11 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.ISG TEST 4.IDLE CO ADJUSTMENT 5.VIN READING 6.VIN WRITING
482	HYUNDAI GENERAL EXPORT	GRANDEUR/AZERA(HG)	2011MY	ENGINE(DIESEL) D 2.2 TCI-D	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
483	HYUNDAI GENERAL EXPORT	GRANDEUR/AZERA(HG)	2011MY	TPMS	OBD-11 16PIN CONNECTOR	O		O	O		O	
484	HYUNDAI GENERAL EXPORT	H-1 07-		ENGINE(GASOLINE) UNLEAD GEN CAN	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES
485	HYUNDAI GENERAL EXPORT	H-1 07-		ENGINE(GASOLINE) UNLEAD EOBD CAN	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES
486	HYUNDAI GENERAL EXPORT	H-1 07-		ENGINE(GASOLINE) LEAD ALL CAN	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
487	HYUNDAI GENERAL EXPORT	H-1 07-		ENGINE(DIESEL) T/CHARGER(COVEC-F)	OBD-11 16PIN CONNECTOR	O		O	O		O	
488	HYUNDAI GENERAL EXPORT	H-1 07-		ENGINE(DIESEL) CRDI(A-ENG) EURO-4 (-CPF)	OBD-11 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
489	HYUNDAI GENERAL EXPORT	H-1 07-		ENGINE(DIESEL) CRDI(A-ENG) EURO-4 (+CPF)	OBD-11 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
490	HYUNDAI GENERAL EXPORT	H-1 07-		AUTOMATIC TRANSAXLE GASOLINE	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING AUTO T/A VALUES
491	HYUNDAI GENERAL EXPORT	H-1 07-		AUTOMATIC TRANSAXLE T/CHARGER(COVEC-F)	OBD-11 16PIN CONNECTOR	O		O	O		O	
492	HYUNDAI GENERAL EXPORT	H-1 07-		AUTOMATIC TRANSAXLE CRDI(A-ENG) EURO-4	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING AUTO T/A VALUES 2.TCU SUB ROM RESET
493	HYUNDAI GENERAL EXPORT	H-1 07-		ABS/ESP	OBD-11 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
494	HYUNDAI GENERAL EXPORT	H-1 07-		SRS-AIRBAG	OBD-11 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
495	HYUNDAI GENERAL EXPORT	H-1 07-		FULL AUTO AIR/CON.	OBD-11 16PIN CONNECTOR	O		O	O		O	
496	HYUNDAI GENERAL EXPORT	H-1 07-		BODY CONTROL MODULE	OBD-11 16PIN CONNECTOR			O	O		O	1.USER OPTION
497	HYUNDAI GENERAL EXPORT	H-1 07-		IMMOBILIZER GASOLINE CAN	OBD-11 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
498	HYUNDAI GENERAL EXPORT	H-1 07-		IMMOBILIZER T/CHARGER(COVEC-F)	OBD-11 16PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
499	HYUNDAI GENERAL EXPORT	H-1 07-		IMMOBILIZER CRDI(A-ENG) EURO-4	OBD-11 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
500	HYUNDAI GENERAL EXPORT	H-1 07-		TRANSMITTER CODE SAVING	OBD-11 16PIN CONNECTOR							
501	HYUNDAI GENERAL EXPORT	H-1 07-		FUEL FIRED HEATER	OBD-11 16PIN CONNECTOR	O		O	O			
502	HYUNDAI GENERAL EXPORT	H-1 98-		ENGINE-GASOLINE:2002MY~ UNLEAD 2.4L GEN	HYUNDAI 12PIN CONNECTOR	O	O	O	O	O	O	
503	HYUNDAI GENERAL EXPORT	H-1 98-		ENGINE-GASOLINE:2002MY~ UNLEAD 2.4L EOBD	HYUNDAI 12PIN CONNECTOR	O	O	O	O	O	O	
504	HYUNDAI GENERAL EXPORT	H-1 98-		ENGINE-GASOLINE:2002MY~ LEAD 2.4L ALL	HYUNDAI 12PIN CONNECTOR	O	O	O	O	O	O	

505	HYUNDAI GENERAL EXPORT	H-1	98-		ENGINE-GASOLINE::~2001MY	HYUNDAI 12PIN CONNECTOR	O		O	O			
506	HYUNDAI GENERAL EXPORT	H-1	98-		ENGINE-DIESEL T/CHARGER(COVEC-F)	HYUNDAI 12PIN CONNECTOR	O		O	O			
507	HYUNDAI GENERAL EXPORT	H-1	98-		ENGINE-DIESEL T/C INTERCOOLER(COVEC)	HYUNDAI 12PIN CONNECTOR	O		O	O			
508	HYUNDAI GENERAL EXPORT	H-1	98-		ENGINE-DIESEL CRDI(A-ENG)	HYUNDAI 12PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.AT/MT RECOGNITION
509	HYUNDAI GENERAL EXPORT	H-1	98-		ENGINE-DIESEL CRDI(A-ENG) F/LIFT	HYUNDAI 12PIN CONNECTOR	O		O	O		O	1.INPUT INJECTOR DATA 2.COMPRESSION TEST 3.AT/MT RECOGNITION
510	HYUNDAI GENERAL EXPORT	H-1	98-		ENGINE-DIESEL CRDI(A-ENG) EURO-4	HYUNDAI 12PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.COMPONENT CHANGE ROUTINE
511	HYUNDAI GENERAL EXPORT	H-1	98-		ENGINE-FBM	HYUNDAI 12PIN CONNECTOR	O						
512	HYUNDAI GENERAL EXPORT	H-1	98-		AUTOMATIC TRANSAXLE	HYUNDAI 12PIN CONNECTOR	O	O	O	O		O	
513	HYUNDAI GENERAL EXPORT	H-1	98-		ANTI-LOCK BRAKE SYSTEM 2WD	HYUNDAI 12PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
514	HYUNDAI GENERAL EXPORT	H-1	98-		ANTI-LOCK BRAKE SYSTEM 4WD	HYUNDAI 12PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
515	HYUNDAI GENERAL EXPORT	H-1	98-		SRS-AIRBAG	HYUNDAI 12PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
516	HYUNDAI GENERAL EXPORT	H-1	98-		TCCM 2002MY~	HYUNDAI 12PIN CONNECTOR	O						
517	HYUNDAI GENERAL EXPORT	H-1	98-		TCCM ~2001MY	HYUNDAI 12PIN CONNECTOR	O						
518	HYUNDAI GENERAL EXPORT	H-1	98-		IMMOBILIZER GASOLINE(2002MY~)	HYUNDAI 12PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.MASTER KEY RECORD 3.MASTER KEY DELETE 4.NEUTRAL MODE 5.IMMOBILIZER RESET
519	HYUNDAI GENERAL EXPORT	H-1	98-		IMMOBILIZER GASOLINE(~2001MY)	HYUNDAI 12PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.MASTER KEY RECORD 3.MASTER KEY DELETE 4.IMMOBILIZER RESET
520	HYUNDAI GENERAL EXPORT	H-1	98-		IMMOBILIZER DIESEL(CRDI)	HYUNDAI 12PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
521	HYUNDAI GENERAL EXPORT	H-1	98-		IMMOBILIZER DIESEL(COVEC-F)	HYUNDAI 12PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.MASTER KEY RECORD 3.MASTER KEY DELETE 4.NEUTRAL MODE 5.IMMOBILIZER RESET
522	HYUNDAI GENERAL EXPORT	H-1	98-		IMMOBILIZER DIESEL(DDS)	HYUNDAI 12PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.MASTER KEY RECORD 3.MASTER KEY DELETE 4.IMMOBILIZER RESET 5.FCVC STATUS 6.FCVC RESET
523	HYUNDAI GENERAL EXPORT	H-1	98-		IMMOBILIZER DIESEL(CRDI EURO-4)	HYUNDAI 12PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
524	HYUNDAI GENERAL EXPORT	H-1	98-		TRANSMITTER CODE SAVING 2002MY~	HYUNDAI 12PIN CONNECTOR							
525	HYUNDAI GENERAL EXPORT	H-1	98-		FUEL FIRED HEATER	HYUNDAI 12PIN CONNECTOR	O		O	O			
526	HYUNDAI GENERAL EXPORT	H-1 TRUCK	01-		ENGINE-DIESEL	OBD-II 16PIN CONNECTOR	O		O	O			
527	HYUNDAI GENERAL EXPORT	H-1 TRUCK	01-		AUTOMATIC TRANSAXLE	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
528	HYUNDAI GENERAL EXPORT	H-1 TRUCK	01-		ANTI-LOCK BRAKE SYSTEM	OBD-II 16PIN CONNECTOR	O		O	O			
529	HYUNDAI GENERAL EXPORT	H-1 TRUCK	01-		SRS-AIRBAG	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
530	HYUNDAI GENERAL EXPORT	H-100	94-01		ENGINE L4-SOHC UNLEAD 94-96MY ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
531	HYUNDAI GENERAL EXPORT	H-100	94-01		ENGINE L4-SOHC UNLEAD 97-2000MY ALL	OBD-II 16PIN CONNECTOR	O		O	O			
532	HYUNDAI GENERAL EXPORT	H-100	94-01		ENGINE L4-SOHC LEAD 94-96MY ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
533	HYUNDAI GENERAL EXPORT	H-100	94-01		ENGINE L4-SOHC LEAD 97-2000MY ALL	OBD-II 16PIN CONNECTOR	O		O	O			
534	HYUNDAI GENERAL EXPORT	H-100	94-01		ENGINE L4-SOHC LEAD 97-98MY ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
535	HYUNDAI GENERAL EXPORT	H-100	94-01		ENGINE L4-SOHC DIESEL	HYUNDAI 12PIN CONNECTOR	O		O	O			
536	HYUNDAI GENERAL EXPORT	H-100	94-01		AUTOMATIC TRANSAXLE	HYUNDAI 12PIN CONNECTOR	O						
537	HYUNDAI GENERAL EXPORT	H-100TRUCK	04-		ENGINE CONTROL DIESEL(CRDI)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
538	HYUNDAI GENERAL EXPORT	H-100TRUCK	04-		ENGINE CONTROL 2.5L DIESEL(TCI)	OBD-II 16PIN CONNECTOR	O		O	O		O	
539	HYUNDAI GENERAL EXPORT	H-100TRUCK	04-		AUTOMATIC TRANSAXLE DIESEL(CRDI)	OBD-II 16PIN CONNECTOR	O		O	O		O	
540	HYUNDAI GENERAL EXPORT	H-100TRUCK	04-		AUTOMATIC TRANSAXLE 2.5L DIESEL(TCI)	OBD-II 16PIN CONNECTOR	O						
541	HYUNDAI GENERAL EXPORT	H-100TRUCK	04-		ANTI-LOCK BRAKE SYSTEM	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING

542	HYUNDAI GENERAL EXPORT	H-100TRUCK 04-		TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
543	HYUNDAI GENERAL EXPORT	H-100TRUCK 04-		IMMOBILIZER	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
544	HYUNDAI GENERAL EXPORT	H-100TRUCK 97-03		ENGINE L4-SOHC GASOLINE	HYUNDAI 12PIN CONNECTOR	O		O	O			
545	HYUNDAI GENERAL EXPORT	H-100TRUCK 97-03		ENGINE L4-SOHC DIESEL	HYUNDAI 12PIN CONNECTOR	O		O	O			
546	HYUNDAI GENERAL EXPORT	H-100TRUCK 97-03		ENGINE L4-SOHC FBM	HYUNDAI 12PIN CONNECTOR	O						
547	HYUNDAI GENERAL EXPORT	H-100TRUCK 97-03		AUTOMATIC TRANSAXLE	HYUNDAI 12PIN CONNECTOR	O						
548	HYUNDAI GENERAL EXPORT	HD COUPE 02-		ENGINE CONTROL LEAD 1.6L ALL	OBD-II 16PIN CONNECTOR	O		O				1.IDLE CO ADJUSTMENT
549	HYUNDAI GENERAL EXPORT	HD COUPE 02-		ENGINE CONTROL UNLEAD 1.6L GEN	OBD-II 16PIN CONNECTOR	O		O			O	
550	HYUNDAI GENERAL EXPORT	HD COUPE 02-		ENGINE CONTROL UNLEAD 1.6L E0BD	OBD-II 16PIN CONNECTOR	O		O			O	
551	HYUNDAI GENERAL EXPORT	HD COUPE 02-		ENGINE CONTROL LEAD 2.0L ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION 3.IDLE CO ADJUSTMENT
552	HYUNDAI GENERAL EXPORT	HD COUPE 02-		ENGINE CONTROL UNLEAD 2.0L(-CVVT) GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
553	HYUNDAI GENERAL EXPORT	HD COUPE 02-		ENGINE CONTROL UNLEAD 2.0L(+CVVT) GEN	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
554	HYUNDAI GENERAL EXPORT	HD COUPE 02-		ENGINE CONTROL UNLEAD 2.0L(-CVVT) E0BD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
555	HYUNDAI GENERAL EXPORT	HD COUPE 02-		ENGINE CONTROL UNLEAD 2.0L(+CVVT) E0BD	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
556	HYUNDAI GENERAL EXPORT	HD COUPE 02-		ENGINE CONTROL ULLEAD 2.0L(-CVVT) OBD-II	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION 3.EVAP. LEAKAGE TEST
557	HYUNDAI GENERAL EXPORT	HD COUPE 02-		ENGINE CONTROL UNLEAD 2.0L(CVVT) OBD-II	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST 3.VERSION CONFIGURATION
558	HYUNDAI GENERAL EXPORT	HD COUPE 02-		ENGINE CONTROL LEAD 2.7L ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION 3.IDLE CO ADJUSTMENT
559	HYUNDAI GENERAL EXPORT	HD COUPE 02-		ENGINE CONTROL UNLEAD 2.7L GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
560	HYUNDAI GENERAL EXPORT	HD COUPE 02-		ENGINE CONTROL UNLEAD 2.7L(Ti 02S) E0BD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
561	HYUNDAI GENERAL EXPORT	HD COUPE 02-		ENGINE CONTROL UNLEAD 2.7L(Zr 02S) E0BD	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
562	HYUNDAI GENERAL EXPORT	HD COUPE 02-		ENGINE CONTROL UNLEAD 2.7L(Ti 02S)OBD-II	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST 3.VERSION CONFIGURATION
563	HYUNDAI GENERAL EXPORT	HD COUPE 02-		ENGINE CONTROL UNLEAD 2.7L(Zr 02S)OBD-II	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST 3.VERSION CONFIGURATION
564	HYUNDAI GENERAL EXPORT	HD COUPE 02-		AUTOMATIC TRANSAXLE	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING AUTO T/A VALUES
565	HYUNDAI GENERAL EXPORT	HD COUPE 02-		ABS/ESP	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
566	HYUNDAI GENERAL EXPORT	HD COUPE 02-		SRS-AIRBAG	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
567	HYUNDAI GENERAL EXPORT	HD COUPE 02-		TRACTION CONTROL SYSTEM	OBD-II 16PIN CONNECTOR	O		O	O			
568	HYUNDAI GENERAL EXPORT	HD COUPE 02-		IMMOBILIZER UNLEAD 1.6/2.0L IMM	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
569	HYUNDAI GENERAL EXPORT	HD COUPE 02-		IMMOBILIZER UNLEAD 2.7L IMM	OBD-II 16PIN CONNECTOR	O		O				1.TEACHING 2.PASSWORD TEACHING/CHANGING 3.ECU INITAILIZATION 4.LIMP HOME MODE
570	HYUNDAI GENERAL EXPORT	HD COUPE 02-		BODY CONTROL MODULE	OBD-II 16PIN CONNECTOR			O	O			
571	HYUNDAI GENERAL EXPORT	HD COUPE 02-		TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
572	HYUNDAI GENERAL EXPORT	HD COUPE 02-		AHLS	OBD-II 16PIN CONNECTOR	O		O			O	1.ACTUATOR DRIVING 2.SELECT VEHICLE
573	HYUNDAI GENERAL EXPORT	HD COUPE 97-01		ENGINE L4-DOHC UNLEAD 1.6/2.0L GEN	HYUNDAI 12PIN CONNECTOR	O		O	O			
574	HYUNDAI GENERAL EXPORT	HD COUPE 97-01		ENGINE L4-DOHC UNLEAD 1.6/2.0L IMM	HYUNDAI 12PIN CONNECTOR	O		O	O			
575	HYUNDAI GENERAL EXPORT	HD COUPE 97-01		ENGINE L4-DOHC LEAD 1.6/2.0L ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
576	HYUNDAI GENERAL EXPORT	HD COUPE 97-01		ENGINE L4-DOHC E0BD 2001MY	HYUNDAI 12PIN CONNECTOR	O	O	O			O	
577	HYUNDAI GENERAL EXPORT	HD COUPE 97-01		ENGINE L4-DOHC UNLEAD 97MY OBD-II	HYUNDAI 12PIN CONNECTOR	O	O	O		O		1.EVAP. LEAKAGE TEST
578	HYUNDAI GENERAL EXPORT	HD COUPE 97-01		ENGINE L4-DOHC UNLEAD 98MY OBD-II	HYUNDAI 12PIN CONNECTOR	O	O	O		O		1.EVAP. LEAKAGE TEST
579	HYUNDAI GENERAL EXPORT	HD COUPE 97-01		ENGINE L4-DOHC UNLEAD 99-00MY OBD-II	HYUNDAI 12PIN CONNECTOR	O	O	O		O		1.EVAP. LEAKAGE TEST
580	HYUNDAI GENERAL EXPORT	HD COUPE 97-01		AUTOMATIC TRANSAXLE 97-99MY	HYUNDAI 12PIN CONNECTOR	O		O	O			
581	HYUNDAI GENERAL EXPORT	HD COUPE 97-01		AUTOMATIC TRANSAXLE 2000MY~	HYUNDAI 12PIN CONNECTOR	O		O	O		O	
582	HYUNDAI GENERAL EXPORT	HD COUPE 97-01		ANTI-LOCK BRAKE SYSTEM	HYUNDAI 12PIN CONNECTOR	O		O	O		O	

583	HYUNDAI GENERAL EXPORT	HD COUPE 97-01		SRS-AIRBAG 97-99MY	HYUNDAI 12PIN CONNECTOR	O	O	O				1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
584	HYUNDAI GENERAL EXPORT	HD COUPE 97-01		SRS-AIRBAG 2000MY~	HYUNDAI 12PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
585	HYUNDAI GENERAL EXPORT	HD COUPE 97-01		CRUISE CONTROL	HYUNDAI 12PIN CONNECTOR	O						
586	HYUNDAI GENERAL EXPORT	HD COUPE 97-01		ELEC.POWER STEERING	HYUNDAI 12PIN CONNECTOR	O						
587	HYUNDAI GENERAL EXPORT	HD COUPE 97-01		IMMOBILIZER	HYUNDAI 12PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.MASTER KEY RECORD 3.MASTER KEY DELETE 4.NEUTRAL MODE 5.IMMOBILIZER RESET
588	HYUNDAI GENERAL EXPORT	i10		ENGINE(GASOLINE) UNLEAD E0BD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
589	HYUNDAI GENERAL EXPORT	i10		ENGINE(GASOLINE) UNLEAD GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
590	HYUNDAI GENERAL EXPORT	i10		ENGINE(GASOLINE) LEAD ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	
591	HYUNDAI GENERAL EXPORT	i10		ENGINE(DIESEL)	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA
592	HYUNDAI GENERAL EXPORT	i10		AUTOMATIC TRANSAXLE	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING AUTO T/A VALUES
593	HYUNDAI GENERAL EXPORT	i10		ABS/ESP	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
594	HYUNDAI GENERAL EXPORT	i10		SRS-AIRBAG	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
595	HYUNDAI GENERAL EXPORT	i10		ELEC.POWER STEERING	OBD-II 16PIN CONNECTOR	O		O			O	
596	HYUNDAI GENERAL EXPORT	i10		IMMOBILIZER GASOLINE	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
597	HYUNDAI GENERAL EXPORT	i10		IMMOBILIZER DIESEL	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
598	HYUNDAI GENERAL EXPORT	i10		TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
599	HYUNDAI GENERAL EXPORT	i20(PB)	2011MY	ENGINE(GASOLINE) UNLEAD 1.2L(KAPA) GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
600	HYUNDAI GENERAL EXPORT	i20(PB)	2011MY	ENGINE(GASOLINE) UNLEAD 1.2L(KAPA) KOBD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
601	HYUNDAI GENERAL EXPORT	i20(PB)	2011MY	ENGINE(GASOLINE) UNLEAD 1.2L(KAPA) ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
602	HYUNDAI GENERAL EXPORT	i20(PB)	2011MY	ENGINE(GASOLINE) UNLEAD 1.2L(KAPA) OBD-II	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST
603	HYUNDAI GENERAL EXPORT	i20(PB)	2011MY	ENGINE(GASOLINE) UNLEAD 1.6L GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
604	HYUNDAI GENERAL EXPORT	i20(PB)	2011MY	ENGINE(GASOLINE) UNLEAD 1.6L E0BD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
605	HYUNDAI GENERAL EXPORT	i20(PB)	2011MY	ENGINE(GASOLINE) LEAD 1.6L ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
606	HYUNDAI GENERAL EXPORT	i20(PB)	2011MY	ENGINE(GASOLINE) UNLEAD 1.6L OBD-II	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST
607	HYUNDAI GENERAL EXPORT	i20(PB)	2011MY	ENGINE(DIESEL) 1.4 U-ENGINE WITHOUT CPF	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPONENT CHANGE ROUTINE 2.INPUT INJECTOR DATA
608	HYUNDAI GENERAL EXPORT	i20(PB)	2011MY	ENGINE(DIESEL) 1.6 U2-ENGINE WITH CPF	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
609	HYUNDAI GENERAL EXPORT	i20(PB)	2011MY	ENGINE(DIESEL) D 1.4 TCI-U2	OBD-II 16PIN CONNECTOR	O						
610	HYUNDAI GENERAL EXPORT	i20(PB)	2011MY	ANTI-LOCK BRAKE SYSTEM	OBD-II 16PIN CONNECTOR	O		O	O		O	1.AIR BLEEDING MODE 2.SOLENOID VALVE TEST 3.STEERING ANGLE SENSOR 4.VARIANT CODING
611	HYUNDAI GENERAL EXPORT	i20(PB)	2011MY	BODY CONTROL MODULE	OBD-II 16PIN CONNECTOR			O	O		O	1.USER OPTION
612	HYUNDAI GENERAL EXPORT	i20(PB)	2011MY	ELEC.POWER STEERING	OBD-II 16PIN CONNECTOR	O	O	O			O	
613	HYUNDAI GENERAL EXPORT	i20(PB)	2011MY	SRS-AIRBAG	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
614	HYUNDAI GENERAL EXPORT	i20(PB)	2011MY	FULL AUTO AIR/CON.	OBD-II 16PIN CONNECTOR	O		O	O		O	
615	HYUNDAI GENERAL EXPORT	i20(PB)	2011MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
616	HYUNDAI GENERAL EXPORT	i20(PB)	2011MY	IMMOBILIZER	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
617	HYUNDAI GENERAL EXPORT	i20(PB)	2011MY	TPMS	OBD-II 16PIN CONNECTOR	O	O	O	O			1.SPECIFIC DATA WRITING 2.SYSTEM ID
618	HYUNDAI GENERAL EXPORT	i20(PB)	2010MY	ENGINE(GASOLINE) UNLEAD 1.2L(KAPA) GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
619	HYUNDAI GENERAL EXPORT	i20(PB)	2010MY	ENGINE(GASOLINE) UNLEAD 1.2L(KAPA) KOBD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
620	HYUNDAI GENERAL EXPORT	i20(PB)	2010MY	ENGINE(GASOLINE) UNLEAD 1.2L(KAPA) ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT

621	HYUNDAI GENERAL EXPORT	i20(PB)	2010MY	ENGINE(GASOLINE) UNLEAD 1.2L(KAPA) OBD-II	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST
622	HYUNDAI GENERAL EXPORT	i20(PB)	2010MY	ENGINE(GASOLINE) UNLEAD 1.6L GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
623	HYUNDAI GENERAL EXPORT	i20(PB)	2010MY	ENGINE(GASOLINE) UNLEAD 1.6L EOBD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
624	HYUNDAI GENERAL EXPORT	i20(PB)	2010MY	ENGINE(GASOLINE) LEAD 1.6L ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
625	HYUNDAI GENERAL EXPORT	i20(PB)	2010MY	ENGINE(GASOLINE) UNLEAD 1.6L OBD-II	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST
626	HYUNDAI GENERAL EXPORT	i20(PB)	2010MY	ENGINE(DIESEL) 1.4 U-ENGINE WITHOUT CPF	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPONENT CHANGE ROUTINE 2.INPUT INJECTOR DATA
627	HYUNDAI GENERAL EXPORT	i20(PB)	2010MY	ENGINE(DIESEL) 1.6 U2-ENGINE WITH CPF	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
628	HYUNDAI GENERAL EXPORT	i20(PB)	2010MY	ENGINE(DIESEL) D 1.4 TCI-U2	OBD-II 16PIN CONNECTOR	O						
629	HYUNDAI GENERAL EXPORT	i20(PB)	2010MY	ANTI-LOCK BRAKE SYSTEM	OBD-II 16PIN CONNECTOR	O		O	O		O	1.AIR BLEEDING MODE 2.SOLENOID VALVE TEST 3.STEERING ANGLE SENSOR 4.VARIANT CODING
630	HYUNDAI GENERAL EXPORT	i20(PB)	2010MY	BODY CONTROL MODULE	OBD-II 16PIN CONNECTOR			O	O		O	1.USER OPTION
631	HYUNDAI GENERAL EXPORT	i20(PB)	2010MY	ELEC.POWER STEERING	OBD-II 16PIN CONNECTOR	O	O	O			O	
632	HYUNDAI GENERAL EXPORT	i20(PB)	2010MY	SRS-AIRBAG	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
633	HYUNDAI GENERAL EXPORT	i20(PB)	2010MY	FULL AUTO AIR/CON.	OBD-II 16PIN CONNECTOR	O		O	O		O	
634	HYUNDAI GENERAL EXPORT	i20(PB)	2010MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
635	HYUNDAI GENERAL EXPORT	i20(PB)	2010MY	IMMOBILIZER	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
636	HYUNDAI GENERAL EXPORT	i20(PB)	2010MY	TPMS	OBD-II 16PIN CONNECTOR	O	O	O	O			1.SPECIFIC DATA WRITING 2.SYSTEM ID
637	HYUNDAI GENERAL EXPORT	i20(PB)	2009MY	ENGINE(GASOLINE) UNLEAD 1.2L(KAPA) GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
638	HYUNDAI GENERAL EXPORT	i20(PB)	2009MY	ENGINE(GASOLINE) UNLEAD 1.2L(KAPA) KOBD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
639	HYUNDAI GENERAL EXPORT	i20(PB)	2009MY	ENGINE(GASOLINE) UNLEAD 1.2L(KAPA) ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
640	HYUNDAI GENERAL EXPORT	i20(PB)	2009MY	ENGINE(GASOLINE) UNLEAD 1.2L(KAPA) OBD-II	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST
641	HYUNDAI GENERAL EXPORT	i20(PB)	2009MY	ENGINE(GASOLINE) UNLEAD 1.6L GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
642	HYUNDAI GENERAL EXPORT	i20(PB)	2009MY	ENGINE(GASOLINE) UNLEAD 1.6L EOBD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
643	HYUNDAI GENERAL EXPORT	i20(PB)	2009MY	ENGINE(GASOLINE) LEAD 1.6L ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
644	HYUNDAI GENERAL EXPORT	i20(PB)	2009MY	ENGINE(GASOLINE) UNLEAD 1.6L OBD-II	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST
645	HYUNDAI GENERAL EXPORT	i20(PB)	2009MY	ENGINE(DIESEL) 1.4 U-ENGINE WITHOUT CPF	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPONENT CHANGE ROUTINE 2.INPUT INJECTOR DATA
646	HYUNDAI GENERAL EXPORT	i20(PB)	2009MY	ENGINE(DIESEL) 1.6 U2-ENGINE WITH CPF	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
647	HYUNDAI GENERAL EXPORT	i20(PB)	2009MY	ANTI-LOCK BRAKE SYSTEM	OBD-II 16PIN CONNECTOR	O		O	O		O	1.AIR BLEEDING MODE 2.SOLENOID VALVE TEST 3.STEERING ANGLE SENSOR 4.VARIANT CODING
648	HYUNDAI GENERAL EXPORT	i20(PB)	2009MY	BODY CONTROL MODULE	OBD-II 16PIN CONNECTOR			O	O		O	1.USER OPTION
649	HYUNDAI GENERAL EXPORT	i20(PB)	2009MY	ELEC.POWER STEERING	OBD-II 16PIN CONNECTOR	O	O	O			O	
650	HYUNDAI GENERAL EXPORT	i20(PB)	2009MY	SRS-AIRBAG	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
651	HYUNDAI GENERAL EXPORT	i20(PB)	2009MY	FULL AUTO AIR/CON.	OBD-II 16PIN CONNECTOR	O		O	O		O	
652	HYUNDAI GENERAL EXPORT	i20(PB)	2009MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
653	HYUNDAI GENERAL EXPORT	i20(PB)	2009MY	IMMOBILIZER	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
654	HYUNDAI GENERAL EXPORT	i20(PB)	2009MY	TPMS	OBD-II 16PIN CONNECTOR	O	O	O	O			1.SPECIFIC DATA WRITING 2.SYSTEM ID
655	HYUNDAI GENERAL EXPORT	I30(FDe)	2012MY	TPMS	OBD-II 16PIN CONNECTOR	O	O	O	O			1.SPECIFIC DATA WRITING 2.SYSTEM ID
656	HYUNDAI GENERAL EXPORT	I30(FDe)	2012MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
657	HYUNDAI GENERAL EXPORT	I30(GD)	2012MY	TPMS	OBD-II 16PIN CONNECTOR	O	O	O	O			1.SPECIFIC DATA WRITING 2.SYSTEM ID
658	HYUNDAI GENERAL EXPORT	I30(GD)	2012MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
659	HYUNDAI GENERAL EXPORT	I30(GDe)	2012MY	TPMS	OBD-II 16PIN CONNECTOR	O	O	O	O			1.SPECIFIC DATA WRITING 2.SYSTEM ID

660	HYUNDAI GENERAL EXPORT	i30(GDe)	2012MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
661	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2012MY	ENGINE(GASOLINE) UNLEADED 1.4 DOHC EOBD	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
662	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2012MY	ENGINE(GASOLINE) UNLEADED 1.4 DOHC GEN	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
663	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2012MY	ENGINE(GASOLINE) G 1.4 DOHC LEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VIN READING 4.VIN WRITING
664	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2012MY	ENGINE(GASOLINE) UNLEADED 1.6 DOHC EOBD	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
665	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2012MY	ENGINE(GASOLINE) UNLEADED 1.6 DOHC GEN	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
666	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2012MY	ENGINE(GASOLINE) G 1.6 DOHC LEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VIN READING 4.VIN WRITING
667	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2012MY	ENGINE(GASOLINE) G 2.0 DOHC UNLEADED EOBD	OBD-II 16PIN CONNECTOR	O						
668	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2012MY	ENGINE(GASOLINE) G 2.0 DOHC UNLEADED GEN	OBD-II 16PIN CONNECTOR	O						
669	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2012MY	ENGINE(GASOLINE) G 2.0 DOHC LEADED ALL	OBD-II 16PIN CONNECTOR	O						
670	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2012MY	ENGINE(DIESEL) 1.6 U-ENGINE WITHOUT CPF	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA
671	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2012MY	ENGINE(DIESEL) 1.6 U-ENGINE WITH CPF	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
672	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2012MY	ENGINE(DIESEL) D 2.0 TCI-D	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
673	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2012MY	ENGINE(DIESEL) 1.6 U2-ENGINE WITH CPF	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
674	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2012MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
675	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2011MY	ENGINE(GASOLINE) UNLEADED 1.4 DOHC EOBD	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
676	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2011MY	ENGINE(GASOLINE) UNLEADED 1.4 DOHC GEN	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
677	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2011MY	ENGINE(GASOLINE) G 1.4 DOHC LEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VIN READING 4.VIN WRITING
678	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2011MY	ENGINE(GASOLINE) UNLEADED 1.6 DOHC EOBD	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
679	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2011MY	ENGINE(GASOLINE) UNLEADED 1.6 DOHC GEN	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
680	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2011MY	ENGINE(GASOLINE) G 1.6 DOHC LEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VIN READING 4.VIN WRITING
681	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2011MY	ENGINE(GASOLINE) G 2.0 DOHC UNLEADED EOBD	OBD-II 16PIN CONNECTOR	O						
682	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2011MY	ENGINE(GASOLINE) G 2.0 DOHC UNLEADED GEN	OBD-II 16PIN CONNECTOR	O						
683	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2011MY	ENGINE(GASOLINE) G 2.0 DOHC LEADED ALL	OBD-II 16PIN CONNECTOR	O						
684	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2011MY	ENGINE(DIESEL) 1.6 U-ENGINE WITHOUT CPF	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA
685	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2011MY	ENGINE(DIESEL) 1.6 U-ENGINE WITH CPF	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
686	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2011MY	ENGINE(DIESEL) D 2.0 TCI-D	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE

687	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2011MY	ENGINE(DIESEL) 1.6 U2-ENGINE WITH CPF	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
688	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2011MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
689	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	ENGINE(GASOLINE) UNLEAD 1.6L GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
690	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	ENGINE(GASOLINE) UNLEAD 1.4/1.6L EOBD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
691	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	ENGINE(GASOLINE) LEAD 1.6L ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
692	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	ENGINE(GASOLINE) UNLEAD 1.6L OBD-II	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST
693	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	ENGINE(GASOLINE) UNLEAD 2.0L EOBD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
694	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	ENGINE(GASOLINE) UNLEAD 2.0L GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
695	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	ENGINE(GASOLINE) LEAD 2.0L ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
696	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	ENGINE(GASOLINE) UNLEAD 2.0L OBD-II	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST
697	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	ENGINE(DIESEL) 1.6 U-ENGINE WITHOUT CPF	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA
698	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	ENGINE(DIESEL) 1.6 U-ENGINE WITH CPF	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
699	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	ENGINE(DIESEL) 2.0 D-ENGINE	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
700	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	ENGINE(DIESEL) 1.6 U2-ENGINE WITH CPF	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
701	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	AUTOMATIC TRANSAXLE 1.4/1.6L	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING AUTO T/A VALUES
702	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	AUTOMATIC TRANSAXLE 2.0L	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
703	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	ANTI-LOCK BRAKE SYSTEM ABS/ESP	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING 2.VARIANT CODING 3.SOLENOID VALVE TEST 4.SAS SENSOR ZERO SETTING
704	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	ANTI-LOCK BRAKE SYSTEM ABS/ESP(AFTER 2011MY)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING 2.SAS CALIBRATION 3.VARIANT CODING 4.ACTUATION TEST - BLEEDING
705	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	SRS-AIRBAG ACU(GEN)	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
706	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	SRS-AIRBAG ACU(NAS)	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
707	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	SRS-AIRBAG WCS	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.WCS RESET
708	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	TPMS	OBD-II 16PIN CONNECTOR	O	O	O	O			1.SPECIFIC DATA WRITING 2.SYSTEM ID
709	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	FULL AUTO AIR/CON. EOBD	OBD-II 16PIN CONNECTOR	O		O	O		O	
710	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	FULL AUTO AIR/CON. GENERAL	OBD-II 16PIN CONNECTOR	O		O	O		O	
711	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	ELEC.POWER STEERING	OBD-II 16PIN CONNECTOR	O		O		O	O	1.EPS TYPE RECOGNITION 2.ASP CALIBRATION
712	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	BODY CONTROL MODULE GENERAL	OBD-II 16PIN CONNECTOR			O	O		O	1.USER OPTION
713	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	BODY CONTROL MODULE NAS	OBD-II 16PIN CONNECTOR			O	O		O	1.USER OPTION
714	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	BODY CONTROL MODULE BCM(2011MY~)	OBD-II 16PIN CONNECTOR			O	O		O	1.USER OPTION
715	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
716	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	IMMOBILIZER GASOLINE	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
717	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	IMMOBILIZER DIESEL	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
718	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2010MY	IMMOBILIZER DIESEL(U2 ENG)	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
719	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	ENGINE(GASOLINE) UNLEAD 1.6L GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
720	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	ENGINE(GASOLINE) UNLEAD 1.4/1.6L EOBD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES

721	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	ENGINE(GASOLINE) LEAD 1.6L ALL	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
722	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	ENGINE(GASOLINE) UNLEAD 1.6L OBD-11	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST
723	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	ENGINE(GASOLINE) UNLEAD 2.0L GEN	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
724	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	ENGINE(GASOLINE) UNLEAD 2.0L EOBD	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
725	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	ENGINE(GASOLINE) LEAD 2.0L ALL	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
726	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	ENGINE(GASOLINE) UNLEAD 2.0L OBD-11	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST
727	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	ENGINE(DIESEL) 1.6 U-ENGINE WITHOUT CPF	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA
728	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	ENGINE(DIESEL) 1.6 U-ENGINE WITH CPF	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
729	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	ENGINE(DIESEL) 2.0 D-ENGINE	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
730	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	ENGINE(DIESEL) 1.6 U2-ENGINE WITH CPF	OBD-11 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
731	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	AUTOMATIC TRANSAXLE 1.4/1.6L	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING AUTO T/A VALUES
732	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	AUTOMATIC TRANSAXLE 2.0L	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
733	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	ANTI-LOCK BRAKE SYSTEM ABS/ESP	OBD-11 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING 2.VARIANT CODING 3.SOLENOID VALVE TEST 4.SAS SENSOR ZERO SETTING
734	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	ANTI-LOCK BRAKE SYSTEM ABS/ESP(AFTER 2011MY)	OBD-11 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING 2.SAS CALIBRATION 3.VARIANT CODING 4.ACTUATION TEST - BLEEDING
735	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	SRS-AIRBAG ACU(GEN)	OBD-11 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
736	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	SRS-AIRBAG ACU(NAS)	OBD-11 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
737	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	SRS-AIRBAG WCS	OBD-11 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.WCS RESET
738	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	TPMS	OBD-11 16PIN CONNECTOR	O	O	O	O			1.SPECIFIC DATA WRITING 2.SYSTEM ID
739	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	FULL AUTO AIR/CON. EOBD	OBD-11 16PIN CONNECTOR	O		O	O		O	
740	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	FULL AUTO AIR/CON. GENERAL	OBD-11 16PIN CONNECTOR	O		O	O		O	
741	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	ELEC.POWER STEERING	OBD-11 16PIN CONNECTOR	O		O		O	O	1.EPS TYPE RECOGNITION 2.ASP CALIBRATION
742	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	BODY CONTROL MODULE GENERAL	OBD-11 16PIN CONNECTOR			O	O		O	1.USER OPTION
743	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	BODY CONTROL MODULE NAS	OBD-11 16PIN CONNECTOR			O	O		O	1.USER OPTION
744	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	BODY CONTROL MODULE BCM(2011MY~)	OBD-11 16PIN CONNECTOR			O	O		O	1.USER OPTION
745	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	TRANSMITTER CODE SAVING	OBD-11 16PIN CONNECTOR							
746	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	IMMOBILIZER GASOLINE	OBD-11 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
747	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	IMMOBILIZER DIESEL	OBD-11 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
748	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2009MY	IMMOBILIZER DIESEL(U2 ENG)	OBD-11 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
749	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	ENGINE(GASOLINE) UNLEAD 1.6L GEN	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
750	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	ENGINE(GASOLINE) UNLEAD 1.4/1.6L EOBD	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
751	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	ENGINE(GASOLINE) LEAD 1.6L ALL	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
752	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	ENGINE(GASOLINE) UNLEAD 1.6L OBD-11	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST
753	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	ENGINE(GASOLINE) UNLEAD 2.0L GEN	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
754	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	ENGINE(GASOLINE) UNLEAD 2.0L EOBD	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
755	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	ENGINE(GASOLINE) LEAD 2.0L ALL	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT

756	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	ENGINE(GASOLINE) UNLEAD 2.0L OBD-II	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST
757	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	ENGINE(DIESEL) 1.6 U-ENGINE WITHOUT CPF	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA
758	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	ENGINE(DIESEL) 1.6 U-ENGINE WITH CPF	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
759	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	ENGINE(DIESEL) 2.0 D-ENGINE	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
760	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	ENGINE(DIESEL) 1.6 U2-ENGINE WITH CPF	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
761	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	AUTOMATIC TRANSAXLE 1.4/1.6L	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING AUTO T/A VALUES
762	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	AUTOMATIC TRANSAXLE 2.0L	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
763	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	ANTI-LOCK BRAKE SYSTEM ABS/ESP	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING 2.VARIANT CODING 3.SOLENOID VALVE TEST 4.SAS SENSOR ZERO SETTING
764	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	ANTI-LOCK BRAKE SYSTEM ABS/ESP(AFTER 2011MY)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING 2.SAS CALIBRATION 3.VARIANT CODING 4.ACTUATION TEST - BLEEDING
765	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	SRS-AIRBAG ACU(GEN)	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
766	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	SRS-AIRBAG ACU(NAS)	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
767	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	SRS-AIRBAG WCS	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.WCS RESET
768	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	TPMS	OBD-II 16PIN CONNECTOR	O	O	O	O			1.SPECIFIC DATA WRITING 2.SYSTEM ID
769	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	FULL AUTO AIR/CON. EOBD	OBD-II 16PIN CONNECTOR	O		O	O		O	
770	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	FULL AUTO AIR/CON. GENERAL	OBD-II 16PIN CONNECTOR	O		O	O		O	
771	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	ELEC.POWER STEERING	OBD-II 16PIN CONNECTOR	O		O		O	O	1.EPS TYPE RECOGNITION 2.ASP CALIBRATION
772	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	BODY CONTROL MODULE GENERAL	OBD-II 16PIN CONNECTOR			O	O		O	1.USER OPTION
773	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	BODY CONTROL MODULE NAS	OBD-II 16PIN CONNECTOR			O	O		O	1.USER OPTION
774	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	BODY CONTROL MODULE BCM(2011MY~)	OBD-II 16PIN CONNECTOR			O	O		O	1.USER OPTION
775	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
776	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	IMMOBILIZER GASOLINE	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
777	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	IMMOBILIZER DIESEL	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
778	HYUNDAI GENERAL EXPORT	i30/ELANTRA NEOS(FD)	2008MY	IMMOBILIZER DIESEL(U2 ENG)	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
779	HYUNDAI GENERAL EXPORT	i40(VF)	2012MY	ENGINE(GASOLINE) G 1.6 GDI UNLEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
780	HYUNDAI GENERAL EXPORT	i40(VF)	2012MY	ENGINE(GASOLINE) G 1.6 GDI LEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
781	HYUNDAI GENERAL EXPORT	i40(VF)	2012MY	ENGINE(GASOLINE) G 2.0 GDI UNLEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
782	HYUNDAI GENERAL EXPORT	i40(VF)	2012MY	ENGINE(GASOLINE) G 2.0 GDI LEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
783	HYUNDAI GENERAL EXPORT	i40(VF)	2012MY	ENGINE(GASOLINE) G 2.0 DOHC UNLEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O			
784	HYUNDAI GENERAL EXPORT	i40(VF)	2012MY	ENGINE(GASOLINE) G 2.0 DOHC LEADED ALL	OBD-II 16PIN CONNECTOR	O		O				
785	HYUNDAI GENERAL EXPORT	i40(VF)	2012MY	ENGINE(GASOLINE) D 1.7 TC1-U2	OBD-II 16PIN CONNECTOR	O						
786	HYUNDAI GENERAL EXPORT	i40(VF)	2012MY	TPMS	OBD-II 16PIN CONNECTOR	O	O	O	O			1.SPECIFIC DATA WRITING 2.SYSTEM ID
787	HYUNDAI GENERAL EXPORT	i40(VF)	2012MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							

788	HYUNDAI GENERAL EXPORT	ix20(JC)	2012MY	ENGINE(GASOLINE) UNLEADED 1.4 DOHC E0BD	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
789	HYUNDAI GENERAL EXPORT	ix20(JC)	2012MY	ENGINE(GASOLINE) UNLEADED 1.4 DOHC GEN	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
790	HYUNDAI GENERAL EXPORT	ix20(JC)	2012MY	ENGINE(GASOLINE) G 1.4 DOHC LEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VIN READING 4.VIN WRITING
791	HYUNDAI GENERAL EXPORT	ix20(JC)	2012MY	ENGINE(GASOLINE) UNLEADED 1.6 DOHC E0BD	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
792	HYUNDAI GENERAL EXPORT	ix20(JC)	2012MY	ENGINE(GASOLINE) UNLEADED 1.6 DOHC GEN	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
793	HYUNDAI GENERAL EXPORT	ix20(JC)	2012MY	ENGINE(GASOLINE) G 1.6 DOHC LEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VIN READING 4.VIN WRITING
794	HYUNDAI GENERAL EXPORT	ix20(JC)	2012MY	ENGINE(DIESEL) D 1.6 TCI-U2	OBD-II 16PIN CONNECTOR	O						
795	HYUNDAI GENERAL EXPORT	ix20(JC)	2012MY	ENGINE(DIESEL) D 1.4 TCI-U2	OBD-II 16PIN CONNECTOR	O						
796	HYUNDAI GENERAL EXPORT	ix20(JC)	2012MY	TPMS	OBD-II 16PIN CONNECTOR	O	O	O	O			1.SPECIFIC DATA WRITING 2.SYSTEM ID
797	HYUNDAI GENERAL EXPORT	ix20(JC)	2011MY	ENGINE(GASOLINE) UNLEADED 1.4 DOHC E0BD	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
798	HYUNDAI GENERAL EXPORT	ix20(JC)	2011MY	ENGINE(GASOLINE) UNLEADED 1.4 DOHC GEN	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
799	HYUNDAI GENERAL EXPORT	ix20(JC)	2011MY	ENGINE(GASOLINE) G 1.4 DOHC LEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VIN READING 4.VIN WRITING
800	HYUNDAI GENERAL EXPORT	ix20(JC)	2011MY	ENGINE(GASOLINE) UNLEADED 1.6 DOHC E0BD	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
801	HYUNDAI GENERAL EXPORT	ix20(JC)	2011MY	ENGINE(GASOLINE) UNLEADED 1.6 DOHC GEN	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
802	HYUNDAI GENERAL EXPORT	ix20(JC)	2011MY	ENGINE(GASOLINE) G 1.6 DOHC LEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VIN READING 4.VIN WRITING
803	HYUNDAI GENERAL EXPORT	ix20(JC)	2011MY	ENGINE(DIESEL) D 1.4 TCI-U2	OBD-II 16PIN CONNECTOR	O						
804	HYUNDAI GENERAL EXPORT	ix20(JC)	2011MY	TPMS	OBD-II 16PIN CONNECTOR	O	O	O	O			1.SPECIFIC DATA WRITING 2.SYSTEM ID
805	HYUNDAI GENERAL EXPORT	MARCIA 96-98		ENGINE L4-DOHC	HYUNDAI 12PIN CONNECTOR	O		O	O			
806	HYUNDAI GENERAL EXPORT	MARCIA 96-98		ENGINE V6-DOHC	HYUNDAI 12PIN CONNECTOR	O		O	O			
807	HYUNDAI GENERAL EXPORT	MARCIA 96-98		AUTOMATIC TRANSAXLE	HYUNDAI 12PIN CONNECTOR	O		O	O			
808	HYUNDAI GENERAL EXPORT	MARCIA 96-98		ANTI-LOCK BRAKE SYSTEM	HYUNDAI 12PIN CONNECTOR	O		O	O			
809	HYUNDAI GENERAL EXPORT	MARCIA 96-98		SRS-AIRBAG	HYUNDAI 12PIN CONNECTOR	O	O	O				1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
810	HYUNDAI GENERAL EXPORT	MARCIA 96-98		TRACTION CONTROL SYSTEM	HYUNDAI 12PIN CONNECTOR	O		O	O			
811	HYUNDAI GENERAL EXPORT	MARCIA 96-98		ELEC.CONTROL SUSPENSION	HYUNDAI 12PIN CONNECTOR	O		O	O			
812	HYUNDAI GENERAL EXPORT	MARCIA 96-98		ELEC.POWER STEERING	HYUNDAI 12PIN CONNECTOR	O						
813	HYUNDAI GENERAL EXPORT	MATRIX(FC)	2011MY	ENGINE(DIESEL) D 1.5 TCI-U	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA
814	HYUNDAI GENERAL EXPORT	MATRIX(FC)	2010MY	ENGINE(DIESEL) D 1.5 TCI-U	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA
815	HYUNDAI GENERAL EXPORT	MATRIX(FC)	2009MY	ENGINE(DIESEL) D 1.5 TCI-U	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA
816	HYUNDAI GENERAL EXPORT	MATRIX(FC)	2008MY	ENGINE(DIESEL) D 1.5 TCI-U	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA
817	HYUNDAI GENERAL EXPORT	MATRIX(FC)	2002-2007MY	ENGINE(GASOLINE) LEAD 1.6L ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.IDLE CO ADJUSTMENT
818	HYUNDAI GENERAL EXPORT	MATRIX(FC)	2002-2007MY	ENGINE(GASOLINE) UNLEAD 1.6L GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	
819	HYUNDAI GENERAL EXPORT	MATRIX(FC)	2002-2007MY	ENGINE(GASOLINE) UNLEAD 1.6L E0BD	OBD-II 16PIN CONNECTOR	O		O	O		O	
820	HYUNDAI GENERAL EXPORT	MATRIX(FC)	2002-2007MY	ENGINE(GASOLINE) LEAD 1.8L ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION 3.IDLE CO ADJUSTMENT
821	HYUNDAI GENERAL EXPORT	MATRIX(FC)	2002-2007MY	ENGINE(GASOLINE) UNLEAD 1.8L GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION

822	HYUNDAI GENERAL EXPORT	MATRIX(FC)	2002~2007MY	ENGINE(GASOLINE) UNLEAD 1.8L E0BD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
823	HYUNDAI GENERAL EXPORT	MATRIX(FC)	2002~2007MY	ENGINE(DIESEL) 1.5 D-ENGINE	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST
824	HYUNDAI GENERAL EXPORT	MATRIX(FC)	2002~2007MY	ENGINE(DIESEL) 1.5 U-ENGINE VGT(EURO-3)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.INPUT INJECTOR DATA 2.COMPRESSION TEST
825	HYUNDAI GENERAL EXPORT	MATRIX(FC)	2002~2007MY	ENGINE(DIESEL) 1.5 U-ENGINE VGT(EURO-4)	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA
826	HYUNDAI GENERAL EXPORT	MATRIX(FC)	2002~2007MY	AUTOMATIC TRANSAXLE	OBD-II 16PIN CONNECTOR	O		O	O		O	
827	HYUNDAI GENERAL EXPORT	MATRIX(FC)	2002~2007MY	ANTI-LOCK BRAKE SYSTEM	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
828	HYUNDAI GENERAL EXPORT	MATRIX(FC)	2002~2007MY	SRS-AIRBAG	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
829	HYUNDAI GENERAL EXPORT	MATRIX(FC)	2002~2007MY	TRACTION CONTROL SYSTEM	OBD-II 16PIN CONNECTOR	O		O	O			
830	HYUNDAI GENERAL EXPORT	MATRIX(FC)	2002~2007MY	FULL AUTO AIR/CON.	OBD-II 16PIN CONNECTOR	O		O	O		O	
831	HYUNDAI GENERAL EXPORT	MATRIX(FC)	2002~2007MY	IMMOBILIZER GASOLINE	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
832	HYUNDAI GENERAL EXPORT	MATRIX(FC)	2002~2007MY	IMMOBILIZER DIESEL(D1.5/U1.5 EURO-3)	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
833	HYUNDAI GENERAL EXPORT	MATRIX(FC)	2002~2007MY	IMMOBILIZER DIESEL(U1.5 EURO-4)	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
834	HYUNDAI GENERAL EXPORT	MATRIX(FC)	2002~2007MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
835	HYUNDAI GENERAL EXPORT	SANTAFE 01-05		ENG. 2.0/2.4L(GASOLINE) LEAD ALL	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
836	HYUNDAI GENERAL EXPORT	SANTAFE 01-05		ENG. 2.0/2.4L(GASOLINE) UNLEAD GEN	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
837	HYUNDAI GENERAL EXPORT	SANTAFE 01-05		ENG. 2.0/2.4L(GASOLINE) UNLEAD 2.0L E0BD	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
838	HYUNDAI GENERAL EXPORT	SANTAFE 01-05		ENG. 2.0/2.4L(GASOLINE) UNLEAD 2.4L E0BD	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
839	HYUNDAI GENERAL EXPORT	SANTAFE 01-05		ENG. 2.0/2.4L(GASOLINE) UNLEAD OBD-II	OBD-II 16PIN CONNECTOR	O	O	O	O	O	O	1.EVAP. LEAKAGE TEST
840	HYUNDAI GENERAL EXPORT	SANTAFE 01-05		ENGINE 2.7L(GASOLINE) LEAD ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION 3.IDLE CO ADJUSTMENT
841	HYUNDAI GENERAL EXPORT	SANTAFE 01-05		ENGINE 2.7L(GASOLINE) UNLEAD(Ti 02S) GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
842	HYUNDAI GENERAL EXPORT	SANTAFE 01-05		ENGINE 2.7L(GASOLINE) UNLEAD(Zr 02S) GEN	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
843	HYUNDAI GENERAL EXPORT	SANTAFE 01-05		ENGINE 2.7L(GASOLINE) UNLEAD(Ti 02S) E0BD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
844	HYUNDAI GENERAL EXPORT	SANTAFE 01-05		ENGINE 2.7L(GASOLINE) UNLEAD(Zr 02S) E0BD	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
845	HYUNDAI GENERAL EXPORT	SANTAFE 01-05		ENGINE 2.7L(GASOLINE) UNLEAD(Ti 02S) OBD-II	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST 3.VERSION CONFIGURATION
846	HYUNDAI GENERAL EXPORT	SANTAFE 01-05		ENGINE 2.7L(GASOLINE) UNLEAD(Zr 02S) OBD-II	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST 3.VERSION CONFIGURATION
847	HYUNDAI GENERAL EXPORT	SANTAFE 01-05		ENGINE(DIESEL) WGT	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST
848	HYUNDAI GENERAL EXPORT	SANTAFE 01-05		ENGINE(DIESEL) VGT	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST
849	HYUNDAI GENERAL EXPORT	SANTAFE 01-05		AUTOMATIC TRANSAXLE	OBD-II 16PIN CONNECTOR	O		O	O		O	
850	HYUNDAI GENERAL EXPORT	SANTAFE 01-05		ANTI-LOCK BRAKE SYSTEM 2WD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
851	HYUNDAI GENERAL EXPORT	SANTAFE 01-05		ANTI-LOCK BRAKE SYSTEM 4WD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
852	HYUNDAI GENERAL EXPORT	SANTAFE 01-05		SRS-AIRBAG GENERAL	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
853	HYUNDAI GENERAL EXPORT	SANTAFE 01-05		SRS-AIRBAG NAS	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.PASSENGER AIRBAG STATUS
854	HYUNDAI GENERAL EXPORT	SANTAFE 01-05		TRACTION CONTROL SYSTEM	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
855	HYUNDAI GENERAL EXPORT	SANTAFE 01-05		4WD CONTROL	OBD-II 16PIN CONNECTOR	O					O	
856	HYUNDAI GENERAL EXPORT	SANTAFE 01-05		IMMOBILIZER	OBD-II 16PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
857	HYUNDAI GENERAL EXPORT	SANTAFE 01-05		TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
858	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2011MY	ENGINE(GASOLINE) G 2.4 DOHC UNLEADED E0BD	OBD-II 16PIN CONNECTOR	O		O	O			
859	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2011MY	ENGINE(GASOLINE) G 2.4 DOHC UNLEADED GEN	OBD-II 16PIN CONNECTOR	O		O	O			
860	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2011MY	ENGINE(GASOLINE) G 2.4 DOHC LEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O			
861	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2011MY	ENGINE(DIESEL) D 2.2 TCI-R(CPF-)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.COMPONENT CHANGE ROUTINE 4.FUEL FILTER LINE AIRBLEEDING

862	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2011MY	ENGINE(DIESEL) D 2.2 TCI-R(CPF+)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE 5.FUEL FILTER LINE AIRBLEEDING
863	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2011MY	ENGINE(DIESEL) D 2.0 TCI-R(CPF-)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.COMPONENT CHANGE ROUTINE 4.FUEL FILTER LINE AIRBLEEDING
864	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2011MY	ENGINE(DIESEL) D 2.0 TCI-R(CPF+)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE 5.FUEL FILTER LINE AIRBLEEDING
865	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2011MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
866	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2010MY	ENGINE(GASOLINE) G 2.4 DOHC UNLEADED EOBD	OBD-II 16PIN CONNECTOR	O		O	O			
867	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2010MY	ENGINE(GASOLINE) G 2.4 DOHC UNLEADED GEN	OBD-II 16PIN CONNECTOR	O		O	O			
868	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2010MY	ENGINE(GASOLINE) G 2.4 DOHC LEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O			
869	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2010MY	ENGINE(DIESEL) D 2.2 TCI-R(CPF-)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.COMPONENT CHANGE ROUTINE 4.FUEL FILTER LINE AIRBLEEDING
870	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2010MY	ENGINE(DIESEL) D 2.2 TCI-R(CPF+)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE 5.FUEL FILTER LINE AIRBLEEDING
871	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2010MY	ENGINE(DIESEL) D 2.0 TCI-R(CPF-)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.COMPONENT CHANGE ROUTINE 4.FUEL FILTER LINE AIRBLEEDING
872	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2010MY	ENGINE(DIESEL) D 2.0 TCI-R(CPF+)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE 5.FUEL FILTER LINE AIRBLEEDING
873	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2010MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
874	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2006-2009MY	ENGINE(GASOLINE) UNLEAD GEN	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.PCM LOCK(MEC) SETTING
875	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2006-2009MY	ENGINE(GASOLINE) UNLEAD EOBD	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.PCM LOCK(MEC) SETTING
876	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2006-2009MY	ENGINE(GASOLINE) LEAD ALL	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.PCM LOCK(MEC) SETTING 3.IDLE CO ADJUSTMENT
877	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2006-2009MY	ENGINE(GASOLINE) UNLEAD OBD-II	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST 3.PCM LOCK(MEC) SETTING
878	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2006-2009MY	ENGINE(DIESEL) EURO-3 VGT(KWP)	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.COMPONENT CHANGE ROUTINE
879	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2006-2009MY	ENGINE(DIESEL) EURO-4 VGT -CPF(CAN)	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.COMPONENT CHANGE ROUTINE
880	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2006-2009MY	ENGINE(DIESEL) EURO-4 VGT +CPF(CAN)	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
881	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2006-2009MY	AUTOMATIC TRANSAXLE GASOLINE	OBD-II 16PIN CONNECTOR	O		O	O	O	O	
882	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2006-2009MY	AUTOMATIC TRANSAXLE EURO-3 VGT(KWP)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING AUTO T/A VALUES
883	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2006-2009MY	AUTOMATIC TRANSAXLE EURO-4 VGT(CAN)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING AUTO T/A VALUES
884	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2006-2009MY	ABS/ESP	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING 2.VARIANT CODING 3.SOLENOID VALVE TEST 4.SAS SENSOR ZERO SETTING
885	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2006-2009MY	SRS-AIRBAG GENERAL	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
886	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2006-2009MY	SRS-AIRBAG NAS	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.PODS RESET
887	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2006-2009MY	FULL AUTO AIR/CON.	OBD-II 16PIN CONNECTOR	O		O	O		O	
888	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2006-2009MY	BODY CONTROL MODULE GENERAL	OBD-II 16PIN CONNECTOR			O	O		O	1.USER OPTION
889	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2006-2009MY	BODY CONTROL MODULE NAS	OBD-II 16PIN CONNECTOR			O	O		O	1.USER OPTION
890	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2006-2009MY	4WD CONTROL	OBD-II 16PIN CONNECTOR	O	O	O			O	

891	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2006-2009MY	IMMOBILIZER GASOLINE	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
892	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2006-2009MY	IMMOBILIZER EURO-3 VGT(KWP)	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
893	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2006-2009MY	IMMOBILIZER EURO-4 VGT(CAN)	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
894	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2006-2009MY	AHLS	OBD-II 16PIN CONNECTOR	O		O			O	1.ACTUATOR DRIVING 2.SELECT VEHICLE
895	HYUNDAI GENERAL EXPORT	SANTAFE(CM)	2006-2009MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
896	HYUNDAI GENERAL EXPORT	SANTAFE(DM)	2013MY	TPMS	OBD-II 16PIN CONNECTOR	O	O	O	O			1.SPECIFIC DATA WRITING 2.SYSTEM ID
897	HYUNDAI GENERAL EXPORT	SANTAFE(DM)	2013MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
898	HYUNDAI GENERAL EXPORT	SANTAMO		ENGINE L4-SOHC UNLEAD 2.0L ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
899	HYUNDAI GENERAL EXPORT	SANTAMO		ENGINE L4-SOHC LEAD 2.0L ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
900	HYUNDAI GENERAL EXPORT	SANTAMO		ENGINE L4-DOHC UNLEAD 2.0L ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
901	HYUNDAI GENERAL EXPORT	SANTAMO		ENGINE L4-DOHC LEAD 2.0L ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
902	HYUNDAI GENERAL EXPORT	SANTAMO		AUTOMATIC TRANSAXLE	HYUNDAI 12PIN CONNECTOR	O		O	O			
903	HYUNDAI GENERAL EXPORT	SANTAMO		ANTI-LOCK BRAKE SYSTEM	HYUNDAI 12PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
904	HYUNDAI GENERAL EXPORT	SANTAMO		SRS-AIRBAG	HYUNDAI 12PIN CONNECTOR	O	O	O				1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
905	HYUNDAI GENERAL EXPORT	SANTAMO		IMMOBILIZER	HYUNDAI 12PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.MASTER KEY RECORD 3.MASTER KEY DELETE 4.IMMOBILIZER RESET
906	HYUNDAI GENERAL EXPORT	SCOUPE 91-96		ENGINE L4-SOHC UNLEAD 94-96MY GEN	HYUNDAI 12PIN CONNECTOR	O		O	O			
907	HYUNDAI GENERAL EXPORT	SCOUPE 91-96		ENGINE L4-SOHC UNLEAD 92-94MY ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
908	HYUNDAI GENERAL EXPORT	SCOUPE 91-96		ENGINE L4-SOHC UNLEAD 91-92MY ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
909	HYUNDAI GENERAL EXPORT	SCOUPE 91-96		ENGINE L4-SOHC UNLEAD 94-96MY FED	HYUNDAI 12PIN CONNECTOR	O		O	O			
910	HYUNDAI GENERAL EXPORT	SCOUPE 91-96		ENGINE L4-SOHC UNLEAD 94-96MY CAL	HYUNDAI 12PIN CONNECTOR	O		O	O			
911	HYUNDAI GENERAL EXPORT	SCOUPE 91-96		ENGINE L4-SOHC LEAD 93-96MY ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
912	HYUNDAI GENERAL EXPORT	SCOUPE 91-96		ENGINE L4-SOHC TURBO UNLEAD 94-96MY ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
913	HYUNDAI GENERAL EXPORT	SCOUPE 91-96		ENGINE L4-SOHC TURBO UNLEAD 92-94MY ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
914	HYUNDAI GENERAL EXPORT	SCOUPE 91-96		ENGINE L4-SOHC TURBO UNLEAD 92MY KOR	HYUNDAI 12PIN CONNECTOR	O		O	O			
915	HYUNDAI GENERAL EXPORT	SCOUPE 91-96		AUTOMATIC TRANSAXLE	HYUNDAI 12PIN CONNECTOR	O		O	O			
916	HYUNDAI GENERAL EXPORT	SCOUPE 91-96		CRUISE CONTROL	HYUNDAI 12PIN CONNECTOR	O						
917	HYUNDAI GENERAL EXPORT	SONATA 05-07		ENGINE(GASOLINE) UNLEAD 2.0/2.4L -ETS GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
918	HYUNDAI GENERAL EXPORT	SONATA 05-07		ENGINE(GASOLINE) UNLEAD 2.0/2.4L -ETS E0BD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
919	HYUNDAI GENERAL EXPORT	SONATA 05-07		ENGINE(GASOLINE) LEAD 2.0/2.4L -ETS ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION 3.IDLE CO ADJUSTMENT
920	HYUNDAI GENERAL EXPORT	SONATA 05-07		ENGINE(GASOLINE) UNLEAD 2.0/2.4L +ETS GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
921	HYUNDAI GENERAL EXPORT	SONATA 05-07		ENGINE(GASOLINE) UNLEAD 2.0/2.4L +ETS E0BD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
922	HYUNDAI GENERAL EXPORT	SONATA 05-07		ENGINE(GASOLINE) LEAD 2.0/2.4L +ETS ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION 3.IDLE CO ADJUSTMENT
923	HYUNDAI GENERAL EXPORT	SONATA 05-07		ENGINE(GASOLINE) UNLEAD 3.3L GEN	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.PCM AUTO DETECTION RESET 2.PCM LOCK(MEC) SETTING
924	HYUNDAI GENERAL EXPORT	SONATA 05-07		ENGINE(GASOLINE) UNLEAD 3.3L E0BD	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.PCM AUTO DETECTION RESET 2.PCM LOCK(MEC) SETTING
925	HYUNDAI GENERAL EXPORT	SONATA 05-07		ENGINE(GASOLINE) LEAD 3.3L ALL	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.PCM AUTO DETECTION RESET 2.IDLE CO ADJUSTMENT 3.PCM LOCK(MEC) SETTING
926	HYUNDAI GENERAL EXPORT	SONATA 05-07		ENGINE(GASOLINE) UNLEAD 3.3L OBD-II	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST 3.PCM LOCK(MEC) SETTING 4.MISFIRE DELAY RESON.
927	HYUNDAI GENERAL EXPORT	SONATA 05-07		ENGINE(DIESEL) EURO-4 VGT(CAN)	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE

928	HYUNDAI GENERAL EXPORT	SONATA	05-07		AUTOMATIC TRANSAXLE 2.0/2.4L	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING AUTO T/A VALUES
929	HYUNDAI GENERAL EXPORT	SONATA	05-07		AUTOMATIC TRANSAXLE 3.3L	OBD-11 16PIN CONNECTOR	O		O	O	O	O	
930	HYUNDAI GENERAL EXPORT	SONATA	05-07		AUTOMATIC TRANSAXLE EURO-4 VGT(CAN)	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING AUTO T/A VALUES
931	HYUNDAI GENERAL EXPORT	SONATA	05-07		ABS/ESP	OBD-11 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING 2.VARIANT CODING 3.SOLENOID VALVE TEST 4.SAS SENSOR ZERO SETTING
932	HYUNDAI GENERAL EXPORT	SONATA	05-07		SRS-AIRBAG	OBD-11 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
933	HYUNDAI GENERAL EXPORT	SONATA	05-07		ELEC.CONTROL SUSPENSION	OBD-11 16PIN CONNECTOR	O	O	O	O			
934	HYUNDAI GENERAL EXPORT	SONATA	05-07		IMMOBILIZER GASOLINE	OBD-11 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
935	HYUNDAI GENERAL EXPORT	SONATA	05-07		IMMOBILIZER DIESEL	OBD-11 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
936	HYUNDAI GENERAL EXPORT	SONATA	05-07		ELEC.POWER STEERING	OBD-11 16PIN CONNECTOR	O		O			O	
937	HYUNDAI GENERAL EXPORT	SONATA	05-07		FULL AUTO AIR/CON.	OBD-11 16PIN CONNECTOR	O		O	O		O	
938	HYUNDAI GENERAL EXPORT	SONATA	05-07		BODY CONTROL MODULE	OBD-11 16PIN CONNECTOR			O	O		O	1.USER OPTION
939	HYUNDAI GENERAL EXPORT	SONATA	05-07		TRANSMITTER CODE SAVING	OBD-11 16PIN CONNECTOR							
940	HYUNDAI GENERAL EXPORT	SONATA	89-93		ENGINE L4-SOHC	HYUNDAI 12PIN CONNECTOR	O		O	O			
941	HYUNDAI GENERAL EXPORT	SONATA	89-93		ENGINE L4-DOHC	HYUNDAI 12PIN CONNECTOR	O		O	O			
942	HYUNDAI GENERAL EXPORT	SONATA	89-93		ENGINE V6-SOHC	HYUNDAI 12PIN CONNECTOR	O		O	O			
943	HYUNDAI GENERAL EXPORT	SONATA	89-93		AUTOMATIC TRANSAXLE	HYUNDAI 12PIN CONNECTOR	O		O	O			
944	HYUNDAI GENERAL EXPORT	SONATA	89-93		ANTI-LOCK BRAKE SYSTEM	HYUNDAI 12PIN CONNECTOR	O		O	O			
945	HYUNDAI GENERAL EXPORT	SONATA	89-93		CRUISE CONTROL	HYUNDAI 12PIN CONNECTOR	O						
946	HYUNDAI GENERAL EXPORT	SONATA	94-98		ENGINE L4-SOHC UNLEAD 1.8L ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
947	HYUNDAI GENERAL EXPORT	SONATA	94-98		ENGINE L4-SOHC UNLEAD 2.0L ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
948	HYUNDAI GENERAL EXPORT	SONATA	94-98		ENGINE L4-SOHC LEAD 1.8L ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
949	HYUNDAI GENERAL EXPORT	SONATA	94-98		ENGINE L4-SOHC LEAD 2.0L ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
950	HYUNDAI GENERAL EXPORT	SONATA	94-98		ENGINE L4-SOHC UNLEAD 97MY OBD-11	HYUNDAI 12PIN CONNECTOR	O	O	O	O		O	
951	HYUNDAI GENERAL EXPORT	SONATA	94-98		ENGINE L4-SOHC UNLEAD 98MY OBD-11	HYUNDAI 12PIN CONNECTOR	O	O	O	O		O	
952	HYUNDAI GENERAL EXPORT	SONATA	94-98		ENGINE L4-DOHC UNLEAD 1.8L ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
953	HYUNDAI GENERAL EXPORT	SONATA	94-98		ENGINE L4-DOHC UNLEAD 2.0L ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
954	HYUNDAI GENERAL EXPORT	SONATA	94-98		ENGINE L4-DOHC LEAD 2.0L ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
955	HYUNDAI GENERAL EXPORT	SONATA	94-98		ENGINE L4-DOHC UNLEAD 97MY OBD-11	HYUNDAI 12PIN CONNECTOR	O	O	O	O		O	
956	HYUNDAI GENERAL EXPORT	SONATA	94-98		ENGINE L4-DOHC UNLEAD 98MY OBD-11	HYUNDAI 12PIN CONNECTOR	O	O	O	O		O	
957	HYUNDAI GENERAL EXPORT	SONATA	94-98		ENGINE V6-SOHC UNLEAD 3.0L ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
958	HYUNDAI GENERAL EXPORT	SONATA	94-98		ENGINE V6-SOHC LEAD 3.0L ALL	HYUNDAI 12PIN CONNECTOR	O		O	O			
959	HYUNDAI GENERAL EXPORT	SONATA	94-98		ENGINE V6-SOHC UNLEAD 97MY OBD-11	HYUNDAI 12PIN CONNECTOR	O	O	O	O		O	
960	HYUNDAI GENERAL EXPORT	SONATA	94-98		ENGINE V6-SOHC UNLEAD 98MY OBD-11	HYUNDAI 12PIN CONNECTOR	O	O	O	O		O	
961	HYUNDAI GENERAL EXPORT	SONATA	94-98		AUTOMATIC TRANSAXLE	HYUNDAI 12PIN CONNECTOR	O		O	O			
962	HYUNDAI GENERAL EXPORT	SONATA	94-98		ANTI-LOCK BRAKE SYSTEM	HYUNDAI 12PIN CONNECTOR	O		O	O			
963	HYUNDAI GENERAL EXPORT	SONATA	94-98		SRS-AIRBAG	HYUNDAI 12PIN CONNECTOR	O	O	O				1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
964	HYUNDAI GENERAL EXPORT	SONATA	94-98		ELEC.POWER STEERING	HYUNDAI 12PIN CONNECTOR	O						
965	HYUNDAI GENERAL EXPORT	SONATA	94-98		IMMOBILIZER	HYUNDAI 12PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.MASTER KEY RECORD 3.MASTER KEY DELETE 4.IMMOBILIZER RESET
966	HYUNDAI GENERAL EXPORT	SONATA	94-98		ELEC.CONTROL SUSPENSION	HYUNDAI 12PIN CONNECTOR	O		O	O			
967	HYUNDAI GENERAL EXPORT	SONATA	94-98		CRUISE CONTROL	HYUNDAI 12PIN CONNECTOR	O						
968	HYUNDAI GENERAL EXPORT	SONATA	99-04		ENGINE L4-DOHC UNLEAD GEN	OBD-11 16PIN CONNECTOR	O	O	O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
969	HYUNDAI GENERAL EXPORT	SONATA	99-04		ENGINE L4-DOHC UNLEAD IMM	OBD-11 16PIN CONNECTOR	O	O	O	O		O	
970	HYUNDAI GENERAL EXPORT	SONATA	99-04		ENGINE L4-DOHC LEAD ALL	OBD-11 16PIN CONNECTOR	O	O	O	O		O	
971	HYUNDAI GENERAL EXPORT	SONATA	99-04		ENGINE L4-DOHC UNLEAD EOBD	OBD-11 16PIN CONNECTOR	O		O	O			
972	HYUNDAI GENERAL EXPORT	SONATA	99-04		ENGINE L4-DOHC UNLEAD OBD-11	OBD-11 16PIN CONNECTOR	O	O	O	O	O	O	1.EVAP. LEAKAGE TEST
973	HYUNDAI GENERAL EXPORT	SONATA	99-04		ENGINE L4-DOHC LPG(~2002) ALL	OBD-11 16PIN CONNECTOR	O		O	O		O	
974	HYUNDAI GENERAL EXPORT	SONATA	99-04		ENGINE L4-DOHC LPG(2003~) ALL	OBD-11 16PIN CONNECTOR	O		O	O		O	
975	HYUNDAI GENERAL EXPORT	SONATA	99-04		ENGINE L4-DOHC BETA 2.0 RUS	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
976	HYUNDAI GENERAL EXPORT	SONATA	99-04		ENGINE V6-DOHC UNLEAD GEN	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
977	HYUNDAI GENERAL EXPORT	SONATA	99-04		ENGINE V6-DOHC UNLEAD IMM	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION

978	HYUNDAI GENERAL EXPORT	SONATA 99-04		ENGINE V6-DOHC LEAD ALL	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION 3.IDLE CO ADJUSTMENT
979	HYUNDAI GENERAL EXPORT	SONATA 99-04		ENGINE V6-DOHC UNLEAD(Ti 02S) EOBD	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
980	HYUNDAI GENERAL EXPORT	SONATA 99-04		ENGINE V6-DOHC UNLEAD(Zr 02S) EOBD	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
981	HYUNDAI GENERAL EXPORT	SONATA 99-04		ENGINE V6-DOHC UNLEAD(Ti 02S) OBD-11	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST 3.VERSION CONFIGURATION
982	HYUNDAI GENERAL EXPORT	SONATA 99-04		ENGINE V6-DOHC UNLEAD(Zr 02S) OBD-11	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST 3.VERSION CONFIGURATION
983	HYUNDAI GENERAL EXPORT	SONATA 99-04		AUTOMATIC TRANSAXLE	OBD-11 16PIN CONNECTOR	O		O	O		O	
984	HYUNDAI GENERAL EXPORT	SONATA 99-04		ANTI-LOCK BRAKE SYSTEM CTC TYPE(99-02MY)	OBD-11 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
985	HYUNDAI GENERAL EXPORT	SONATA 99-04		ANTI-LOCK BRAKE SYSTEM BOSCH TYPE(03MY-)	OBD-11 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
986	HYUNDAI GENERAL EXPORT	SONATA 99-04		SRS-AIRBAG 1999-2001MY	OBD-11 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
987	HYUNDAI GENERAL EXPORT	SONATA 99-04		SRS-AIRBAG F/LIFT	OBD-11 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
988	HYUNDAI GENERAL EXPORT	SONATA 99-04		ELEC.POWER STEERING	OBD-11 16PIN CONNECTOR	O						
989	HYUNDAI GENERAL EXPORT	SONATA 99-04		TRACTION CONTROL SYSTEM CTC TYPE(99-02MY)	OBD-11 16PIN CONNECTOR	O		O	O			
990	HYUNDAI GENERAL EXPORT	SONATA 99-04		TRACTION CONTROL SYSTEM BOSCH TYPE(03MY-)	OBD-11 16PIN CONNECTOR	O		O	O			
991	HYUNDAI GENERAL EXPORT	SONATA 99-04		IMMOBILIZER SIRIUS/DELTA ALL	OBD-11 16PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.MASTER KEY RECORD 3.MASTER KEY DELETE 4.NEUTRAL MODE 5.IMMOBILIZER RESET
992	HYUNDAI GENERAL EXPORT	SONATA 99-04		IMMOBILIZER BETA 2.0 RUS	OBD-11 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
993	HYUNDAI GENERAL EXPORT	SONATA 99-04		AHLS	OBD-11 16PIN CONNECTOR	O		O			O	1.ACTUATOR DRIVING 2.SELECT VEHICLE
994	HYUNDAI GENERAL EXPORT	SONATA 99-04		CODE SAVING(NEW EF) WITHOUT IMMOBILIZER	OBD-11 16PIN CONNECTOR							
995	HYUNDAI GENERAL EXPORT	SONATA 99-04		CODE SAVING(NEW EF) WITH IMMOBILIZER	OBD-11 16PIN CONNECTOR							
996	HYUNDAI GENERAL EXPORT	SONATA(F/L)07-		ENGINE(GASOLINE) UNLEAD 2.0L(NON ETC) GEN	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES
997	HYUNDAI GENERAL EXPORT	SONATA(F/L)07-		ENGINE(GASOLINE) UNLEAD 2.0L(NON ETC) EOBD	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES
998	HYUNDAI GENERAL EXPORT	SONATA(F/L)07-		ENGINE(GASOLINE) LEAD 2.0L(NON ETC) ALL	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
999	HYUNDAI GENERAL EXPORT	SONATA(F/L)07-		ENGINE(GASOLINE) UNLEAD 2.4L(ETC) GEN	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES
1000	HYUNDAI GENERAL EXPORT	SONATA(F/L)07-		ENGINE(GASOLINE) UNLEAD 2.4L(ETC) EOBD	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES
1001	HYUNDAI GENERAL EXPORT	SONATA(F/L)07-		ENGINE(GASOLINE) LEAD 2.4L(ETC) ALL	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
1002	HYUNDAI GENERAL EXPORT	SONATA(F/L)07-		ENGINE(GASOLINE) UNLEAD 3.3L GEN	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.PCM AUTO DETECTION RESET 2.PCM LOCK(MEC) SETTING
1003	HYUNDAI GENERAL EXPORT	SONATA(F/L)07-		ENGINE(GASOLINE) UNLEAD 3.3L EOBD	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.PCM AUTO DETECTION RESET 2.PCM LOCK(MEC) SETTING
1004	HYUNDAI GENERAL EXPORT	SONATA(F/L)07-		ENGINE(GASOLINE) LEAD 3.3L ALL	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.PCM AUTO DETECTION RESET 2.IDLE CO ADJUSTMENT 3.PCM LOCK(MEC) SETTING
1005	HYUNDAI GENERAL EXPORT	SONATA(F/L)07-		ENGINE(DIESEL) EURO-4 VGT(CAN)	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
1006	HYUNDAI GENERAL EXPORT	SONATA(F/L)07-		AUTOMATIC TRANSAXLE 2.0/2.4L	OBD-11 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING AUTO T/A VALUES
1007	HYUNDAI GENERAL EXPORT	SONATA(F/L)07-		AUTOMATIC TRANSAXLE 3.3L	OBD-11 16PIN CONNECTOR	O		O	O	O	O	
1008	HYUNDAI GENERAL EXPORT	SONATA(F/L)07-		AUTOMATIC TRANSAXLE EURO-4 VGT(CAN)	OBD-11 16PIN CONNECTOR	O		O	O		O	1.RESETTING AUTO T/A VALUES
1009	HYUNDAI GENERAL EXPORT	SONATA(F/L)07-		ABS/ESP	OBD-11 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING 2.VARIANT CODING 3.SOLENOID VALVE TEST 4.SAS SENSOR ZERO SETTING
1010	HYUNDAI GENERAL EXPORT	SONATA(F/L)07-		SRS-AIRBAG	OBD-11 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
1011	HYUNDAI GENERAL EXPORT	SONATA(F/L)07-		ELEC.CONTROL SUSPENSION	OBD-11 16PIN CONNECTOR	O	O	O	O			
1012	HYUNDAI GENERAL EXPORT	SONATA(F/L)07-		IMMOBILIZER GASOLINE	OBD-11 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL

1013	HYUNDAI GENERAL EXPORT	SONATA(F/L)07-		IMMOBILIZER DIESEL	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
1014	HYUNDAI GENERAL EXPORT	SONATA(F/L)07-		ELEC.POWER STEERING	OBD-II 16PIN CONNECTOR	O		O			O	
1015	HYUNDAI GENERAL EXPORT	SONATA(F/L)07-		FULL AUTO AIR/CON.	OBD-II 16PIN CONNECTOR	O		O	O		O	
1016	HYUNDAI GENERAL EXPORT	SONATA(F/L)07-		BODY CONTROL MODULE	OBD-II 16PIN CONNECTOR			O	O		O	1.USER OPTION
1017	HYUNDAI GENERAL EXPORT	SONATA(F/L)07-		TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
1018	HYUNDAI GENERAL EXPORT	SONATA(YF)	2012MY	ENGINE(GASOLINE) G 2.4 GDI	OBD-II 16PIN CONNECTOR	O		O	O			
1019	HYUNDAI GENERAL EXPORT	SONATA(YF)	2012MY	TPMS	OBD-II 16PIN CONNECTOR	O	O	O	O			1.SPECIFIC DATA WRITING 2.SYSTEM ID
1020	HYUNDAI GENERAL EXPORT	SONATA(YF)	2012MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
1021	HYUNDAI GENERAL EXPORT	SONATA(YF)	2011MY	ENGINE(GASOLINE) UNLEAD 2.0L GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN WRITING 4.VIN READING
1022	HYUNDAI GENERAL EXPORT	SONATA(YF)	2011MY	ENGINE(GASOLINE) UNLEAD 2.0L EOBD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN WRITING 4.VIN READING
1023	HYUNDAI GENERAL EXPORT	SONATA(YF)	2011MY	ENGINE(GASOLINE) LEAD 2.0L ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.EVAP. LEAKAGE TEST 2.RESETTING ADAPTIVE VALUES 3.AUTO DETECTED CONFIG.RESET 4.VIN WRITING 5.VIN READING
1024	HYUNDAI GENERAL EXPORT	SONATA(YF)	2011MY	ENGINE(GASOLINE) GDI	OBD-II 16PIN CONNECTOR	O		O	O		O	1.EVAP. LEAKAGE TEST 2.RESETTING ADAPTIVE VALUES 3.AUTO DETECTED CONFIG.RESET
1025	HYUNDAI GENERAL EXPORT	SONATA(YF)	2011MY	AUTOMATIC TRANSAXLE	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING AUTO T/A VALUES
1026	HYUNDAI GENERAL EXPORT	SONATA(YF)	2011MY	ANTI-LOCK BRAKE SYSTEM	OBD-II 16PIN CONNECTOR	O		O	O		O	1.AIR BLEEDING MODE 2.STEERING ANGLE SENSOR 3.VARIANT CODING 4.HAC/BLA/G-SENSOR CAL
1027	HYUNDAI GENERAL EXPORT	SONATA(YF)	2011MY	SRS-AIRBAG	OBD-II 16PIN CONNECTOR	O		O			O	1.CRASH INFO 2.ACU CODING
1028	HYUNDAI GENERAL EXPORT	SONATA(YF)	2011MY	FULL AUTO AIR/CON.	OBD-II 16PIN CONNECTOR	O		O	O		O	
1029	HYUNDAI GENERAL EXPORT	SONATA(YF)	2011MY	IMMOBILIZER	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
1030	HYUNDAI GENERAL EXPORT	SONATA(YF)	2011MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
1031	HYUNDAI GENERAL EXPORT	SONATA(YF)	2011MY	TPMS	OBD-II 16PIN CONNECTOR	O	O	O	O			1.SPECIFIC DATA WRITING 2.SYSTEM ID
1032	HYUNDAI GENERAL EXPORT	TAXI 94-01		ENGINE L4-SOHC FBM	OBD-II 16PIN CONNECTOR	O						
1033	HYUNDAI GENERAL EXPORT	TAXI 94-01		AUTOMATIC TRANSAXLE	OBD-II 16PIN CONNECTOR	O		O	O			
1034	HYUNDAI GENERAL EXPORT	TERRACAN 01-07		ENGINE CONTROL 2.5L DIESEL(TCI)	OBD-II 16PIN CONNECTOR	O		O	O			
1035	HYUNDAI GENERAL EXPORT	TERRACAN 01-07		ENGINE CONTROL 2.9L DIESEL(C/RAIL)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.INPUT INJECTOR DATA 2.FUEL LEAK TEST 3.ECU RESET
1036	HYUNDAI GENERAL EXPORT	TERRACAN 01-07		ENGINE CONTROL UNLEAD 3.5L GEN	OBD-II 16PIN CONNECTOR	O	O	O	O	O	O	
1037	HYUNDAI GENERAL EXPORT	TERRACAN 01-07		ENGINE CONTROL UNLEAD 3.5L EOBD	OBD-II 16PIN CONNECTOR	O	O	O	O	O	O	
1038	HYUNDAI GENERAL EXPORT	TERRACAN 01-07		ENGINE CONTROL UNLEAD 3.5L OBD-II	OBD-II 16PIN CONNECTOR	O	O	O	O	O	O	
1039	HYUNDAI GENERAL EXPORT	TERRACAN 01-07		ENGINE CONTROL LEAD 3.5L ALL	OBD-II 16PIN CONNECTOR	O	O	O	O	O	O	
1040	HYUNDAI GENERAL EXPORT	TERRACAN 01-07		AUTOMATIC TRANSAXLE	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
1041	HYUNDAI GENERAL EXPORT	TERRACAN 01-07		ANTI-LOCK BRAKE SYSTEM	OBD-II 16PIN CONNECTOR	O		O	O			1.HCU AIR BLEEDING
1042	HYUNDAI GENERAL EXPORT	TERRACAN 01-07		SRS-AIRBAG	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
1043	HYUNDAI GENERAL EXPORT	TERRACAN 01-07		4WD CONTROL EST	OBD-II 16PIN CONNECTOR	O						
1044	HYUNDAI GENERAL EXPORT	TERRACAN 01-07		4WD CONTROL TOD	OBD-II 16PIN CONNECTOR	O					O	
1045	HYUNDAI GENERAL EXPORT	TERRACAN 01-07		IMMOBILIZER 2.5L DIESEL(TCI)	OBD-II 16PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.MASTER KEY RECORD 3.MASTER KEY DELETE 4.NEUTRAL MODE 5.IMMOBILIZER RESET
1046	HYUNDAI GENERAL EXPORT	TERRACAN 01-07		IMMOBILIZER 2.9L DIESEL(C/RAIL)	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE

1047	HYUNDAI GENERAL EXPORT	TERRACAN 01-07		IMMOBILIZER 3.5L GASOLINE ALL	OBD-II 16PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.MASTER KEY RECORD 3.MASTER KEY DELETE 4.NEUTRAL MODE 5.IMMOBILIZER RESET
1048	HYUNDAI GENERAL EXPORT	TERRACAN 01-07		TRANSMITTER CODE SAVING WITHOUT IMMOBILIZER	OBD-II 16PIN CONNECTOR							
1049	HYUNDAI GENERAL EXPORT	TERRACAN 01-07		TRANSMITTER CODE SAVING WITH IMMOBILIZER	OBD-II 16PIN CONNECTOR							
1050	HYUNDAI GENERAL EXPORT	TRAJET XG 01-07		ENGINE 2.0L(GASOLINE) LEAD ALL	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION 3.IDLE CO ADJUSTMENT
1051	HYUNDAI GENERAL EXPORT	TRAJET XG 01-07		ENGINE 2.0L(GASOLINE) UNLEAD GEN	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
1052	HYUNDAI GENERAL EXPORT	TRAJET XG 01-07		ENGINE 2.0L(GASOLINE) UNLEAD EOBD	OBD-II 16PIN CONNECTOR	O	O	O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
1053	HYUNDAI GENERAL EXPORT	TRAJET XG 01-07		ENGINE 2.7L(GASOLINE) LEAD ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION 3.IDLE CO ADJUSTMENT
1054	HYUNDAI GENERAL EXPORT	TRAJET XG 01-07		ENGINE 2.7L(GASOLINE) LEAD(F/LIFT~) ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION 3.IDLE CO ADJUSTMENT
1055	HYUNDAI GENERAL EXPORT	TRAJET XG 01-07		ENGINE 2.7L(GASOLINE) UNLEAD(Ti 02S) GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
1056	HYUNDAI GENERAL EXPORT	TRAJET XG 01-07		ENGINE 2.7L(GASOLINE) UNLEAD(Zr 02S) GEN	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
1057	HYUNDAI GENERAL EXPORT	TRAJET XG 01-07		ENGINE 2.7L(GASOLINE) UNLEAD(Ti 02S) EOBD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
1058	HYUNDAI GENERAL EXPORT	TRAJET XG 01-07		ENGINE 2.7L(GASOLINE) UNLEAD(Zr 02S) EOBD	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
1059	HYUNDAI GENERAL EXPORT	TRAJET XG 01-07		ENGINE(DIESEL) WGT	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST
1060	HYUNDAI GENERAL EXPORT	TRAJET XG 01-07		ENGINE(DIESEL) VGT	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST
1061	HYUNDAI GENERAL EXPORT	TRAJET XG 01-07		AUTOMATIC TRANSAXLE 2.0(MELCO)/2.7	OBD-II 16PIN CONNECTOR	O		O	O		O	
1062	HYUNDAI GENERAL EXPORT	TRAJET XG 01-07		AUTOMATIC TRANSAXLE 2.0(SIEMENS)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING AUTO T/A VALUES
1063	HYUNDAI GENERAL EXPORT	TRAJET XG 01-07		AUTOMATIC TRANSAXLE DIESEL	OBD-II 16PIN CONNECTOR	O		O	O		O	
1064	HYUNDAI GENERAL EXPORT	TRAJET XG 01-07		ANTI-LOCK BRAKE SYSTEM	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
1065	HYUNDAI GENERAL EXPORT	TRAJET XG 01-07		SRS-AIRBAG	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
1066	HYUNDAI GENERAL EXPORT	TRAJET XG 01-07		IMMOBILIZER 2.0(MELCO)/2.7	OBD-II 16PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.MASTER KEY RECORD 3.MASTER KEY DELETE 4.NEUTRAL MODE 5.IMMOBILIZER RESET
1067	HYUNDAI GENERAL EXPORT	TRAJET XG 01-07		IMMOBILIZER 2.0(SIEMENS)	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
1068	HYUNDAI GENERAL EXPORT	TRAJET XG 01-07		IMMOBILIZER DIESEL	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
1069	HYUNDAI GENERAL EXPORT	TRAJET XG 01-07		FUEL FIRED HEATER	OBD-II 16PIN CONNECTOR	O		O	O			
1070	HYUNDAI GENERAL EXPORT	TRAJET XG 01-07		TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
1071	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	ENGINE(GASOLINE) UNLEAD 2.0L GEN	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES
1072	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	ENGINE(GASOLINE) UNLEAD 2.0L EOBD	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES
1073	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	ENGINE(GASOLINE) UNLEAD 2.0L OBD-II	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST
1074	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	ENGINE(GASOLINE) LEAD 2.0L ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
1075	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	ENGINE(GASOLINE) UNLEAD 2.7L GEN	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
1076	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	ENGINE(GASOLINE) UNLEAD 2.7L EOBD	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
1077	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	ENGINE(GASOLINE) UNLEAD 2.7L OBD-II	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST 3.VERSION CONFIGURATION
1078	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	ENGINE(GASOLINE) LEAD 2.7L ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION 3.IDLE CO ADJUSTMENT
1079	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	ENGINE(DIESEL) EURO-3 WGT	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.AT/MT RECOGNITION
1080	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	ENGINE(DIESEL) EURO-4 VGT(CAN)	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE

1081	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	ENGINE(DIESEL) EURO-4 VGT(KWP)	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE
1082	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	AUTOMATIC TRANSAXLE 2.0 EURO-4	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING AUTO T/A VALUES
1083	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	AUTOMATIC TRANSAXLE 2.0 EURO-3/2.7(MELCO TCM)	OBD-II 16PIN CONNECTOR	O		O	O		O	
1084	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	AUTOMATIC TRANSAXLE 2.0L(SIEMENS PCM)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES
1085	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	ABS/TCS/ESP	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
1086	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	SRS-AIRBAG GENERAL	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
1087	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	SRS-AIRBAG NAS	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.PODS RESET
1088	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	4WD CONTROL	OBD-II 16PIN CONNECTOR	O	O	O			O	
1089	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	IMMOBILIZER 2.0L GASOLINE	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
1090	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	IMMOBILIZER 2.7L GASOLINE	OBD-II 16PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
1091	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	IMMOBILIZER DIESEL	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
1092	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	FULL AUTO AIR/CON.	OBD-II 16PIN CONNECTOR	O		O	O		O	
1093	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	ETACS GENERAL	OBD-II 16PIN CONNECTOR			O	O		O	
1094	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	ETACS NAS	OBD-II 16PIN CONNECTOR			O	O		O	
1095	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	ETACS CHINA(JMC)	OBD-II 16PIN CONNECTOR			O	O		O	
1096	HYUNDAI GENERAL EXPORT	TUCSON(JM)	2004~2010MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
1097	HYUNDAI GENERAL EXPORT	TUCSON(LM)	2011MY	ENGINE(GASOLINE) G 2.0 DOHC UNLEADED GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1098	HYUNDAI GENERAL EXPORT	TUCSON(LM)	2011MY	ENGINE(GASOLINE) G 2.0 DOHC UNLEADED EOBD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1099	HYUNDAI GENERAL EXPORT	TUCSON(LM)	2011MY	ENGINE(GASOLINE) G 2.0 DOHC LEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1100	HYUNDAI GENERAL EXPORT	TUCSON(LM)	2011MY	ENGINE(GASOLINE) G 2.4 DOHC UNLEADED GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1101	HYUNDAI GENERAL EXPORT	TUCSON(LM)	2011MY	ENGINE(GASOLINE) G 2.4 DOHC UNLEADED EOBD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1102	HYUNDAI GENERAL EXPORT	TUCSON(LM)	2011MY	ENGINE(GASOLINE) G 2.4 DOHC LEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1103	HYUNDAI GENERAL EXPORT	TUCSON(LM)	2011MY	ENGINE(DIESEL) D 2.0 TCI-R	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE 5.FUEL FILTER LINE AIRBLEEDING
1104	HYUNDAI GENERAL EXPORT	TUCSON(LM)	2011MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
1105	HYUNDAI GENERAL EXPORT	TUCSON(LM)	2010MY	ENGINE(GASOLINE) G 2.0 DOHC UNLEADED GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1106	HYUNDAI GENERAL EXPORT	TUCSON(LM)	2010MY	ENGINE(GASOLINE) G 2.0 DOHC UNLEADED EOBD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1107	HYUNDAI GENERAL EXPORT	TUCSON(LM)	2010MY	ENGINE(GASOLINE) G 2.0 DOHC LEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING

1108	HYUNDAI GENERAL EXPORT	TUCSON(LM)	2010MY	ENGINE(GASOLINE) G 2.4 DOHC UNLEADED GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1109	HYUNDAI GENERAL EXPORT	TUCSON(LM)	2010MY	ENGINE(GASOLINE) G 2.4 DOHC UNLEADED EOBD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1110	HYUNDAI GENERAL EXPORT	TUCSON(LM)	2010MY	ENGINE(GASOLINE) G 2.4 DOHC LEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1111	HYUNDAI GENERAL EXPORT	TUCSON(LM)	2010MY	ENGINE(DIESEL) D 2.0 TCI-R	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE 5.FUEL FILTER LINE AIRBLEEDING
1112	HYUNDAI GENERAL EXPORT	TUCSON(LM)	2010MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
1113	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2012MY	ENGINE(GASOLINE) G 1.6 GDI	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
1114	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2012MY	ENGINE(GASOLINE) D 1.7 TCI-U2	OBD-II 16PIN CONNECTOR	O						
1115	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2012MY	ENGINE(GASOLINE) G 2.0 DOHC UNLEADED GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1116	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2012MY	ENGINE(GASOLINE) G 2.0 DOHC UNLEADED EOBD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1117	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2012MY	ENGINE(GASOLINE) G 2.0 DOHC LEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1118	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2012MY	ENGINE(GASOLINE) G 2.4 DOHC UNLEADED GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1119	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2012MY	ENGINE(GASOLINE) G 2.4 DOHC UNLEADED EOBD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1120	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2012MY	ENGINE(GASOLINE) G 2.4 DOHC LEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1121	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2012MY	ENGINE(DIESEL) 2.0L LOW POWER(CPF+)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE 5.FUEL FILTER LINE AIRBLEEDING
1122	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2012MY	ENGINE(DIESEL) 2.0L LOW POWER(CPF-)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.COMPONENT CHANGE ROUTINE 4.FUEL FILTER LINE AIRBLEEDING
1123	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2012MY	ENGINE(DIESEL) 2.0L HIGH POWER(CPF+)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE 5.FUEL FILTER LINE AIRBLEEDING
1124	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2012MY	ENGINE(DIESEL) 2.0L HIGH POWER(CPF-)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.COMPONENT CHANGE ROUTINE 4.FUEL FILTER LINE AIRBLEEDING
1125	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2012MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
1126	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2011MY	ENGINE(GASOLINE) G 1.6 GDI	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
1127	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2011MY	ENGINE(GASOLINE) D 1.7 TCI-U2	OBD-II 16PIN CONNECTOR	O						
1128	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2011MY	ENGINE(GASOLINE) G 2.0 DOHC UNLEADED GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING

1129	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2011MY	ENGINE(GASOLINE) G 2.0 DOHC UNLEADED E0BD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1130	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2011MY	ENGINE(GASOLINE) G 2.0 DOHC LEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1131	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2011MY	ENGINE(GASOLINE) G 2.4 DOHC UNLEADED GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1132	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2011MY	ENGINE(GASOLINE) G 2.4 DOHC UNLEADED E0BD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1133	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2011MY	ENGINE(GASOLINE) G 2.4 DOHC LEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1134	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2011MY	ENGINE(DIESEL) 2.0L LOW POWER(CPF+)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE 5.FUEL FILTER LINE AIRBLEEDING
1135	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2011MY	ENGINE(DIESEL) 2.0L LOW POWER(CPF-)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.COMPONENT CHANGE ROUTINE 4.FUEL FILTER LINE AIRBLEEDING
1136	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2011MY	ENGINE(DIESEL) 2.0L HIGH POWER(CPF+)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE 5.FUEL FILTER LINE AIRBLEEDING
1137	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2011MY	ENGINE(DIESEL) 2.0L HIGH POWER(CPF-)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.COMPONENT CHANGE ROUTINE 4.FUEL FILTER LINE AIRBLEEDING
1138	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2011MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
1139	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	ENGINE(GASOLINE) UNLEAD 2.0L GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1140	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	ENGINE(GASOLINE) UNLEAD 2.0L E0BD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1141	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	ENGINE(GASOLINE) LEAD 2.0L ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1142	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	ENGINE(GASOLINE) UNLEAD 2.4L GEN	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1143	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	ENGINE(GASOLINE) UNLEAD 2.4L E0BD	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1144	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	ENGINE(GASOLINE) LEAD 2.4L ALL	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED CONFIG.RESET 3.VIN READING 4.VIN WRITING
1145	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	ENGINE(DIESEL) 2.0L LOW POWER(CPF+)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE 5.FUEL FILTER LINE AIRBLEEDING
1146	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	ENGINE(DIESEL) 2.0L LOW POWER(CPF-)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.COMPONENT CHANGE ROUTINE 4.FUEL FILTER LINE AIRBLEEDING

1147	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	ENGINE(DIESEL) 2.0L HIGH POWER(CPF+)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.CPF REVIVAL 4.COMPONENT CHANGE ROUTINE 5.FUEL FILTER LINE AIRBLEEDING
1148	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	ENGINE(DIESEL) 2.0L HIGH POWER(CPF-)	OBD-II 16PIN CONNECTOR	O		O	O		O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.COMPONENT CHANGE ROUTINE 4.FUEL FILTER LINE AIRBLEEDING
1149	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	AUTOMATIC TRANSAXLE	OBD-II 16PIN CONNECTOR	O		O	O		O	1.RESETTING AUTO T/A VALUES
1150	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	ABS/ESP	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING 2.STEERING ANGLE SENSOR 3.VARIANT CODING 4.G-SENSOR ZERO SETTING
1151	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	SRS-AIRBAG	OBD-II 16PIN CONNECTOR	O		O			O	1.CRASH INFO 2.ACU CODING
1152	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	FULL AUTO AIR/CON. EUROPE	OBD-II 16PIN CONNECTOR	O		O	O		O	
1153	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	FULL AUTO AIR/CON. GENERAL	OBD-II 16PIN CONNECTOR	O		O	O		O	
1154	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	4 WHEEL DRIVE(4WD)	OBD-II 16PIN CONNECTOR	O		O			O	1.AWD MODE CHANGE 2.ACTUATOR ADJUSTING
1155	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	ELEC.POWER STEERING	OBD-II 16PIN CONNECTOR	O		O			O	
1156	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	BODY CONTROL MODULE ALL SYSTEMS	OBD-II 16PIN CONNECTOR	O		O	O		O	1.USER OPTION
1157	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	BODY CONTROL MODULE BODY CONTROL MODULE	OBD-II 16PIN CONNECTOR	O		O	O		O	1.USER OPTION
1158	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	BODY CONTROL MODULE SMART JUNCTION BOX	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
1159	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	IMMOBILIZER	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
1160	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	PIC ALL SYSTEMS	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.STATUS CHECK 2.FOB STATUS INFO 3.SMK STATUS INFO 4.ESCL STATUS INFO 5.PDM STATUS INFO 6.NEUTRAL MODE
1161	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	PIC SMART KEY UNIT	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.STATUS CHECK 2.FOB STATUS INFO 3.SMK STATUS INFO 4.ESCL STATUS INFO 5.PDM STATUS INFO 6.NEUTRAL MODE
1162	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	PIC SMART KEY CODE SAVING	OBD-II 16PIN CONNECTOR							
1163	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	PIC POWER DISTRIBUTION	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.ESCL OPEN STATUS CHECK
1164	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	TPMS	OBD-II 16PIN CONNECTOR	O		O	O		O	1.SPECIFIC DATA WRITING
1165	HYUNDAI GENERAL EXPORT	TUCSON_ix35(LM_EL)	2010MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
1166	HYUNDAI GENERAL EXPORT	VELOSTER(FS)	2012MY	ENGINE(GASOLINE) G 1.6 GDI	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
1167	HYUNDAI GENERAL EXPORT	VELOSTER(FS)	2012MY	ENGINE(GASOLINE) G 1.6 DOHC	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
1168	HYUNDAI GENERAL EXPORT	VELOSTER(FS)	2012MY	TPMS	OBD-II 16PIN CONNECTOR	O	O	O	O			1.SPECIFIC DATA WRITING 2.SYSTEM ID
1169	HYUNDAI GENERAL EXPORT	VELOSTER(FS)	2012MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
1170	HYUNDAI GENERAL EXPORT	VELOSTER(FS)	2011MY	ENGINE(GASOLINE) G 1.6 GDI	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
1171	HYUNDAI GENERAL EXPORT	VELOSTER(FS)	2011MY	ENGINE(GASOLINE) G 1.6 DOHC	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
1172	HYUNDAI GENERAL EXPORT	VELOSTER(FS)	2011MY	TPMS	OBD-II 16PIN CONNECTOR	O	O	O	O			1.SPECIFIC DATA WRITING 2.SYSTEM ID
1173	HYUNDAI GENERAL EXPORT	VELOSTER(FS)	2011MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
1174	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2012MY	ENGINE(GASOLINE) UNLEAD 3.8L GEN	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.PCM LOCK(MEC) SETTING
1175	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2012MY	ENGINE(GASOLINE) UNLEAD 3.8L E0BD	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.PCM LOCK(MEC) SETTING
1176	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2012MY	ENGINE(GASOLINE) UNLEAD 3.8L OBD-II	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST 3.PCM LOCK(MEC) SETTING
1177	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2012MY	ENGINE(GASOLINE) LEAD 3.8L ALL	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.PCM LOCK(MEC) SETTING 3.IDLE CO ADJUSTMENT
1178	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2012MY	ENGINE(DIESEL) D 3.0 TCI-S2	OBD-II 16PIN CONNECTOR	O						

1179	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2012MY	AUTOMATIC TRANSAXLE	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING AUTO T/A VALUES 2.ADAPTIVE PROCEDURE OF N RANGE
1180	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2012MY	ABS/ESP	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
1181	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2012MY	FULL AUTO AIR/CON.	OBD-II 16PIN CONNECTOR	O		O	O		O	
1182	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2012MY	SRS-AIRBAG	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
1183	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2012MY	4WD CONTROL	OBD-II 16PIN CONNECTOR	O		O	O		O	
1184	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2012MY	POWER TAIL GATE	OBD-II 16PIN CONNECTOR	O	O	O			O	
1185	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2012MY	BODY CONTROL MODULE BODY CONTROL MODULE	OBD-II 16PIN CONNECTOR	O		O	O		O	
1186	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2012MY	BODY CONTROL MODULE DRIVER DOOR MODULE(DDM)	OBD-II 16PIN CONNECTOR	O		O	O		O	
1187	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2012MY	BODY CONTROL MODULE ASSIST DOOR MODULE(ADM)	OBD-II 16PIN CONNECTOR	O		O	O		O	
1188	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2012MY	BODY CONTROL MODULE IMS	OBD-II 16PIN CONNECTOR	O		O	O		O	
1189	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2012MY	BODY CONTROL MODULE TILT & TELESCOPE(TILT)	OBD-II 16PIN CONNECTOR	O		O	O		O	
1190	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2012MY	BODY CONTROL MODULE USER OPTION	OBD-II 16PIN CONNECTOR							1.DOOR LOCK STATUS HORN ALARM 2.DOOR KEY BUGLAR ALARM 3.AUTO DOOR INTERLOCK 4.EASY ACCESS 5.TAIL GATE OPTION
1191	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2012MY	IMMOBILIZER GASOLINE	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
1192	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2012MY	IMMOBILIZER DIESEL	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
1193	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2012MY	SMART KEY SYSTEM SMART KEY UNIT	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.STATUS CHECK 2.FOB STATUS INFO 3.SMK STATUS INFO 4.MSL IMMO STATUS INFO 5.NEUTRAL MODE
1194	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2012MY	SMART KEY SYSTEM SMART KEY CODE SAVING	OBD-II 16PIN CONNECTOR							
1195	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2012MY	AHLS	OBD-II 16PIN CONNECTOR	O		O			O	1.ACTUATOR DRIVING 2.SELECT VEHICLE
1196	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2012MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
1197	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2011MY	ENGINE(GASOLINE) UNLEAD 3.8L GEN	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.PCM LOCK(MEC) SETTING
1198	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2011MY	ENGINE(GASOLINE) UNLEAD 3.8L EOBD	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.PCM LOCK(MEC) SETTING
1199	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2011MY	ENGINE(GASOLINE) UNLEAD 3.8L OBD-II	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST 3.PCM LOCK(MEC) SETTING
1200	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2011MY	ENGINE(GASOLINE) LEAD 3.8L ALL	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.PCM LOCK(MEC) SETTING 3.IDLE CO ADJUSTMENT
1201	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2011MY	ENGINE(DIESEL)	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.COMPONENT CHANGE ROUTINE
1202	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2011MY	AUTOMATIC TRANSAXLE	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING AUTO T/A VALUES 2.ADAPTIVE PROCEDURE OF N RANGE
1203	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2011MY	ABS/ESP	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
1204	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2011MY	FULL AUTO AIR/CON.	OBD-II 16PIN CONNECTOR	O		O	O		O	
1205	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2011MY	SRS-AIRBAG	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
1206	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2011MY	4WD CONTROL	OBD-II 16PIN CONNECTOR	O		O	O		O	
1207	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2011MY	POWER TAIL GATE	OBD-II 16PIN CONNECTOR	O	O	O			O	
1208	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2011MY	BODY CONTROL MODULE BODY CONTROL MODULE	OBD-II 16PIN CONNECTOR	O		O	O		O	
1209	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2011MY	BODY CONTROL MODULE DRIVER DOOR MODULE(DDM)	OBD-II 16PIN CONNECTOR	O		O	O		O	
1210	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2011MY	BODY CONTROL MODULE ASSIST DOOR MODULE(ADM)	OBD-II 16PIN CONNECTOR	O		O	O		O	
1211	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2011MY	BODY CONTROL MODULE IMS	OBD-II 16PIN CONNECTOR	O		O	O		O	
1212	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2011MY	BODY CONTROL MODULE TILT & TELESCOPE(TILT)	OBD-II 16PIN CONNECTOR	O		O	O		O	
1213	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2011MY	BODY CONTROL MODULE USER OPTION	OBD-II 16PIN CONNECTOR							1.DOOR LOCK STATUS HORN ALARM 2.DOOR KEY BUGLAR ALARM 3.AUTO DOOR INTERLOCK 4.EASY ACCESS 5.TAIL GATE OPTION
1214	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2011MY	IMMOBILIZER GASOLINE	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL

1215	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2011MY	IMMOBILIZER DIESEL	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
1216	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2011MY	SMART KEY SYSTEM SMART KEY UNIT	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.STATUS CHECK 2.FOB STATUS INFO 3.SMK STATUS INFO 4.MSL IMMO STATUS INFO 5.NEUTRAL MODE
1217	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2011MY	SMART KEY SYSTEM SMART KEY CODE SAVING	OBD-II 16PIN CONNECTOR							
1218	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2011MY	AHLS	OBD-II 16PIN CONNECTOR	O		O			O	1.ACTUATOR DRIVING 2.SELECT VEHICLE
1219	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2011MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
1220	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2007~2010MY	ENGINE(GASOLINE) UNLEAD 3.8L GEN	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.PCM LOCK(MEC) SETTING
1221	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2007~2010MY	ENGINE(GASOLINE) UNLEAD 3.8L EOBD	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.PCM LOCK(MEC) SETTING
1222	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2007~2010MY	ENGINE(GASOLINE) UNLEAD 3.8L OBD-II	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.EVAP. LEAKAGE TEST 3.PCM LOCK(MEC) SETTING
1223	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2007~2010MY	ENGINE(GASOLINE) LEAD 3.8L ALL	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.PCM LOCK(MEC) SETTING 3.IDLE CO ADJUSTMENT
1224	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2007~2010MY	ENGINE(DIESEL)	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.COMPRESSION TEST 2.INPUT INJECTOR DATA 3.COMPONENT CHANGE ROUTINE
1225	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2007~2010MY	AUTOMATIC TRANSAXLE	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING AUTO T/A VALUES 2.ADAPTIVE PROCEDURE OF N RANGE
1226	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2007~2010MY	ABS/ESP	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
1227	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2007~2010MY	FULL AUTO AIR/CON.	OBD-II 16PIN CONNECTOR	O		O	O		O	
1228	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2007~2010MY	SRS-AIRBAG	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO
1229	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2007~2010MY	4WD CONTROL	OBD-II 16PIN CONNECTOR	O		O	O		O	
1230	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2007~2010MY	POWER TAIL GATE	OBD-II 16PIN CONNECTOR	O	O	O			O	
1231	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2007~2010MY	BODY CONTROL MODULE BODY CONTROL MODULE	OBD-II 16PIN CONNECTOR	O		O	O		O	
1232	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2007~2010MY	BODY CONTROL MODULE DRIVER DOOR MODULE(DDM)	OBD-II 16PIN CONNECTOR	O		O	O		O	
1233	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2007~2010MY	BODY CONTROL MODULE ASSIST DOOR MODULE(ADM)	OBD-II 16PIN CONNECTOR	O		O	O		O	
1234	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2007~2010MY	BODY CONTROL MODULE IMS	OBD-II 16PIN CONNECTOR	O		O	O		O	
1235	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2007~2010MY	BODY CONTROL MODULE TILT & TELESCOPE(TILT)	OBD-II 16PIN CONNECTOR	O		O	O		O	
1236	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2007~2010MY	BODY CONTROL MODULE USER OPTION	OBD-II 16PIN CONNECTOR							1.DOOR LOCK STATUS HORN ALARM 2.DOOR KEY BUGLAR ALARM 3.AUTO DOOR INTERLOCK 4.EASY ACCESS 5.TAIL GATE OPTION
1237	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2007~2010MY	IMMOBILIZER GASOLINE	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
1238	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2007~2010MY	IMMOBILIZER DIESEL	OBD-II 16PIN CONNECTOR			O				1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
1239	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2007~2010MY	SMART KEY SYSTEM SMART KEY UNIT	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.STATUS CHECK 2.FOB STATUS INFO 3.SMK STATUS INFO 4.MSL IMMO STATUS INFO 5.NEUTRAL MODE
1240	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2007~2010MY	SMART KEY SYSTEM SMART KEY CODE SAVING	OBD-II 16PIN CONNECTOR							
1241	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2007~2010MY	AHLS	OBD-II 16PIN CONNECTOR	O		O			O	1.ACTUATOR DRIVING 2.SELECT VEHICLE
1242	HYUNDAI GENERAL EXPORT	VERACRUZ/ix55	2007~2010MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
1243	HYUNDAI GENERAL EXPORT	VERNA(RB1)	2012MY	ENGINE(GASOLINE) G 1.4 DOHC UNLEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING
1244	HYUNDAI GENERAL EXPORT	VERNA(RB1)	2012MY	ENGINE(GASOLINE) G 1.4 DOHC LEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VIN READING 4.VIN WRITING
1245	HYUNDAI GENERAL EXPORT	VERNA(RB1)	2012MY	ENGINE(GASOLINE) G 1.6 DOHC UNLEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.VIN READING 3.VIN WRITING

1246	HYUNDAI GENERAL EXPORT	VERNA(RBI)	2012MY	ENGINE(GASOLINE) G 1.6 DOHC LEADED ALL	OBD-II 16PIN CONNECTOR	O		O	O			1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT 3.VIN READING 4.VIN WRITING
1247	HYUNDAI GENERAL EXPORT	VERNA(RBI)	2012MY	ENGINE(DIESEL) D 1.6 TCI-U2	OBD-II 16PIN CONNECTOR	O						
1248	HYUNDAI GENERAL EXPORT	VERNA(RBI)	2012MY	ENGINE(DIESEL) D 1.4 TCI-U2	OBD-II 16PIN CONNECTOR	O						
1249	HYUNDAI GENERAL EXPORT	VERNA(RBI)	2012MY	TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							
1250	HYUNDAI GENERAL EXPORT	XG 99-05		ENGINE V6-DOHC LEAD ALL	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION 3.IDLE CO ADJUSTMENT
1251	HYUNDAI GENERAL EXPORT	XG 99-05		ENGINE V6-DOHC LEAD(+ETS) ALL	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
1252	HYUNDAI GENERAL EXPORT	XG 99-05		ENGINE V6-DOHC UNLEAD GEN	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
1253	HYUNDAI GENERAL EXPORT	XG 99-05		ENGINE V6-DOHC UNLEAD(+ETS) GEN	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
1254	HYUNDAI GENERAL EXPORT	XG 99-05		ENGINE V6-DOHC UNLEAD(Ti 02S) IMM	OBD-II 16PIN CONNECTOR	O	O	O	O		O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
1255	HYUNDAI GENERAL EXPORT	XG 99-05		ENGINE V6-DOHC UNLEAD(Zr 02S) IMM	OBD-II 16PIN CONNECTOR	O		O	O	O	O	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
1256	HYUNDAI GENERAL EXPORT	XG 99-05		ENGINE V6-DOHC UNLEAD(+ETS) IMM	OBD-II 16PIN CONNECTOR	O	O	O	O		O	
1257	HYUNDAI GENERAL EXPORT	XG 99-05		ENGINE V6-DOHC UNLEAD(+ETS) OBD-II	OBD-II 16PIN CONNECTOR	O	O	O	O	O	O	1.EVAP. LEAKAGE TEST
1258	HYUNDAI GENERAL EXPORT	XG 99-05		AUTOMATIC TRANSAXLE 2.0/2.5L	OBD-II 16PIN CONNECTOR	O		O	O		O	
1259	HYUNDAI GENERAL EXPORT	XG 99-05		AUTOMATIC TRANSAXLE 3.0/3.5L	OBD-II 16PIN CONNECTOR	O		O	O		O	
1260	HYUNDAI GENERAL EXPORT	XG 99-05		ANTI-LOCK BRAKE SYSTEM	OBD-II 16PIN CONNECTOR	O		O	O		O	1.HCU AIR BLEEDING
1261	HYUNDAI GENERAL EXPORT	XG 99-05		SRS-AIRBAG ~2002MY	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
1262	HYUNDAI GENERAL EXPORT	XG 99-05		SRS-AIRBAG F/LIFT	OBD-II 16PIN CONNECTOR	O	O	O			O	1.CRASH INFO 2.ACTIVE DTC INFO. 3.HISTORY DTC INFO.
1263	HYUNDAI GENERAL EXPORT	XG 99-05		TRACTION CONTROL SYSTEM	OBD-II 16PIN CONNECTOR	O		O	O			
1264	HYUNDAI GENERAL EXPORT	XG 99-05		ELEC.CONTROL SUSPENSION	OBD-II 16PIN CONNECTOR	O		O	O			
1265	HYUNDAI GENERAL EXPORT	XG 99-05		ELEC.POWER STEERING	OBD-II 16PIN CONNECTOR	O						
1266	HYUNDAI GENERAL EXPORT	XG 99-05		IMMOBILIZER	OBD-II 16PIN CONNECTOR	O		O				1.PASSWORD TEACHING/CHANGING 2.MASTER KEY RECORD 3.MASTER KEY DELETE 4.NEUTRAL MODE 5.IMMOBILIZER RESET
1267	HYUNDAI GENERAL EXPORT	XG 99-05		AHLS	OBD-II 16PIN CONNECTOR	O		O			O	1.ACTUATOR DRIVING 2.SELECT VEHICLE
1268	HYUNDAI GENERAL EXPORT	XG 99-05		TRANSMITTER CODE SAVING	OBD-II 16PIN CONNECTOR							