



FCAR Diagnostic List (Note: for reference only)

Manufacturer:	HUATAI HYUNDAI
Version:	V6.4

Model	Model	System	Function					
			Read ECU Info.	Read DTC	Erase DTC	Read Data Stream	Actuation Test	Remark(other functions)
HUATAI HY	SANTAFE	Diesel engines WITHOUT VGT	-	√	√	√	√	-
		Diesel engines WITH VGT	√	√	√	√	√	-
		Diesel engines	√	√	√	√	√	-
		ENGINE DIESEL2.0	√	√	√	√	√	-
		Diesel engines (CAN)	-	√	√	√	-	Actuator Test
	ERRACAN	2.5L Diesel(TCI)	-	√	√	√	√	-
		2.9L Diesel(C/RAIL)	-	√	√	√	√	ECU Initialization
		Diesel engines	√	√	√	√	√	-
	Sonata diesel	Diesel engines	√	√	√	√	√	-
	Accent diesel	Diesel engines (CAN)	-	√	√	√	-	Actuator Test
Huatai DTT diesel	Diesel engines	√	√	√	√	-		

Remark: √ means that system has this function - means not