

Year/Chassis type	Engine type	Model	System	System 2	DTC Analysis	Data Analysis	Actuation Test	System Identification	Service Reset	CBS Reset	CAS Reset	Reset All Adaptation Values	Teach In Components
ONE/COOPER 2001-2006[R50]	Gasoline	ONE[W10] ONE[W17] COOPER[W10]	Drive	DME	V	V	V	V					
				EGS(Electronic transmission control)	V	V	V	V				V	V
				EWS(Immobilizer)	V	V		V					
			Chassis	ABS/ASC/DSC	V	V	V	V					
				LEW(Steering angle sensor)	V	V		V					
				RDC(Tyre pressure control)	V			V					
			Body	AIC(Automatic Interval Control)	V			V					
				BM(On-board monitor)	V			V					
				IHKA/IHKB(Intergrated heating/air-conditioning)	V			V					
				IHKA(Integrated automatic heating/air conditioning)	V			V					
				IHS(Integrated heating control)	V			V					
				IH(K)S(Integrated heating control)	V			V					
				IKE/IKI/KOMBI(Instrument cluster)	V			V	V				
				INSTR(Instrument cluster)	V			V					
				LSZ/LCM(Light switching center)	V	V	V	V					
				PDC(Park distance control)	V	V	V	V					
				RAD(Radio)	V	V	V	V					
				RAD2-GW(Gateway)	V			V					
				SRS(Airbag)	V			V					
				MRS(Multiple restraint system)	V			V					
				SHD(Sliding/tilting sunroof)	V			V					
				VM(Video module)	V			V					
				DAB(Digital tuner)	V			V					
				CDC(CD Changer)	V			V					
				CID(Central information display)	V			V					
				CON(Controller)	V			V					

Year/Chassis type	Engine type	Model	System	System 2	DTC Analysis	Data Analysis	Actuation Test	System Identification	Service Reset	CBS Reset	CAS Reset	Reset All Adaptation Values	Teach In Components
ONE/COOPER 2001-2006[R50]	Gasoline	ONE[W10] / [W17] COOPER[W10]	Body	JNAV(Navigation system/Japan)	V			V					
				ULF(Universal charging and hands-free facility)	V			V					
				ULF-SBX(Interface box)	V			V					
				ULF-SBX-H(Interface box High)	V			V					
				CVM(Convertible-top module)	V	V		V					
				ZKE(Central body electronics)	V			V					
	Diesel	ONE[W17]	Drive	DME	V	V	V	V					
				EGS(Electronic transmission control)	V	V	V	V				V	V
				EWS(Immobilizer)	V	V		V					
			Chassis	ABS/ASC/DSC	V	V	V	V					
				LEW(Steering angle sensor)	V	V		V					
				RDC(Tyre pressure control)	V			V					
			Body	AIC(Automatic Interval Control)	V			V					
				BM(On-board monitor)	V			V					
				IHKA/IHKR(Intergrated heating/air-conditioning)	V			V					
				IHKA(Integrated automatic heating/air conditioning)	V			V					
				IHS(Integrated heating control)	V			V					
				IH(K)S(Integrated heating control)	V			V					
				IKE/IKI/KOMBI(Instrument cluster)	V			V	V				
				INSTR(Instrument cluster)	V			V					
				LSZ/LCM(Light switching center)	V	V	V	V					
				PDC(Park distance control)	V	V	V	V					
				RAD(Radio)	V	V	V	V					
				RAD2-GW(Gateway)	V			V					
				SRS(Airbag)	V			V					
				MRS(Multiple restraint system)	V			V					

Year/Chassis type	Engine type	Model	System	System 2	DTC Analysis	Data Analysis	Actuation Test	System Identification	Service Reset	CBS Reset	CAS Reset	Reset All Adaptation Values	Teach In Components
ONE/COOPER 2001-2006[R50]	Diesel	ONE[W17]	Body	SHD(Sliding/tilting sunroof)	V			V					
				VM(Video module)	V			V					
				DAB(Digital tuner)	V			V					
				CDC(CD Changer)	V			V					
				CID(Central information display)	V			V					
				CON(Controller)	V			V					
				JNAV(Navigation system/Japan)	V			V					
				ULF(Universal charging and hands-free facility)	V			V					
				ULF-SBX(Interface box)	V			V					
				ULF-SBX-H(Interface box High)	V			V					
				CVM(Convertible-top module)	V	V		V					
				ZKE(Central body electronics)	V			V					
MINI Convertible 2004-2008[R52]	Gasoline	ONE[W10] COOPER[N12]/[W10] COOPER S[W11]	Drive	DME	V	V	V	V					
				EGS(Electronic transmission control)	V	V	V	V				V	V
				EWS(Immobilizer)	V	V		V					
			Chassis	ABS/ASC/DSC	V	V	V	V					
				LEW(Steering angle sensor)	V	V		V					
				RDC(Tyre pressure control)	V			V					
			Body	AIC(Automatic Interval Control)	V			V					
				BM(On-board monitor)	V			V					
				IHKA/IHKR(Intergrated heating/air-conditioning)	V			V					
				IHKA(Integrated automatic heating/air conditioning)	V			V					
				IHS(Integrated heating control)	V			V					
				IH(K)S(Integrated heating control)	V			V					
				IKE/IKI/KOMBI(Instrument cluster)	V			V	V				
				INSTR(Instrument cluster)	V			V					

Year/Chassis type	Engine type	Model	System	System 2	DTC Analysis	Data Analysis	Actuation Test	System Identification	Service Reset	CBS Reset	CAS Reset	Reset All Adaptation Values	Teach In Components
MINI Convertible 2004-2008[R52]	Gasoline	ONE[W10] COOPER[N12]/[W10] COOPER S[W11]	Body	LSZ/LCM(Light switching center)	V	V	V	V					
				PDC(Park distance control)	V	V	V	V					
				RAD(Radio)	V	V	V	V					
				RAD2-GW(Gateway)	V			V					
				SRS(Airbag)	V			V					
				MRS(Multiple restraint system)	V			V					
				SHD(Sliding/tilting sunroof)	V			V					
				VM(Video module)	V			V					
				DAB(Digital tuner)	V			V					
				CDC(CD Changer)	V			V					
				CID(Central information display)	V			V					
				CON(Controller)	V			V					
				JNAV(Navigation system/Japan)	V			V					
				ULF(Universal charging and hands-free facility)	V			V					
				ULF-SBX(Interface box)	V			V					
				ULF-SBX-H(Interface box High)	V			V					
				CVM(Convertible-top module)	V	V		V					
				ZKE(Central body electronics)	V			V					
MINI COOPER S 2001-2006[R53]	Gasoline	COOPER S[W11]	Drive	DME	V	V	V	V					
				EGS(Electronic transmission control)	V	V	V	V				V	V
			Chassis	EWS(Immobilizer)	V	V		V					
				ABS/ASC/DSC	V	V	V	V					
				LEW(Steering angle sensor)	V	V		V					
			Body	RDC(Tyre pressure control)	V			V					
				AIC(Automatic Interval Control)	V			V					
				BM(On-board monitor)	V			V					

Year/Chassis type	Engine type	Model	System	System 2	DTC Analysis	Data Analysis	Actuation Test	System Identification	Service Reset	CBS Reset	CAS Reset	Reset All Adaptation Values	Teach In Components
MINI COOPER S 2001-2006[R53]	Gasoline	COOPER S[W11]	Body	IHKA/IHKR(Intergrated heating/air-conditioning	V			V					
				IHKA(Integrated automatic heating/air conditioning)	V			V					
				IHS(Integrated heating control)	V			V					
				IH(K)S(Integrated heating control)	V			V					
				IKE/IKI/KOMBI(Instrument cluster)	V			V	V				
				INSTR(Instrument cluster)	V			V					
				LSZ/LCM(Light switching center)	V	V	V	V					
				PDC(Park distance control)	V	V	V	V					
				RAD(Radio)	V	V	V	V					
				RAD2-GW(Gateway)	V			V					
				SRS(Airbag)	V			V					
				MRS(Multiple restraint system)	V			V					
				SHD(Sliding/tilting sunroof)	V			V					
				VM(Video module)	V			V					
				DAB(Digital tuner)	V			V					
				CDC(CD Changer)	V			V					
				CID(Central information display)	V			V					
				CON(Controller)	V			V					
				JNAV(Navigation system/Japan)	V			V					
				ULF(Universal charging and hands-free facility)	V			V					
				ULF-SBX(Interface box)	V			V					
				ULF-SBX-H(Interface box High)	V			V					
				CVM(Convertible-top module)	V	V		V					
				ZKE(Central body electronics)	V			V					
MINI COOPER S 2001-2006[R53]	Gasoline		Support Function	CBS Reset						V			
			Engine	DME	V	V	V	V					

Year/Chassis type	Engine type	Model	System	System 2	DTC Analysis	Data Analysis	Actuation Test	System Identification	Service Reset	CBS Reset	CAS Reset	Reset All Adaptation Values	Teach In Components
MINI CLUBMAN S/D 2007-present[R55]	Gasoline	CLUBMAN S[N14]/D[W16]	Engine	EGS(Electronic transmission control)	V			V				V	V
				EPS(Electronic power steering)	V			V					
			Chassis	ABS(Anti-lock Brake System)	V	V	V	V					
				ABS/ASC/DSC	V			V					
				RDC(Tyre pressure control)	V			V					
			Body	SRS(Airbag)	V			V					
				ZKE(Central body electronics)	V			V					
				LSZ/LCM(Light switching center)	V	V	V	V					
				AHM(Trailer Module)	V			V					
				AMP(Radio system Amplifier)	V			V					
				CCC-BO(User interface)	V			V					
				RAD2-BO(User interface)	V			V					
				RAD(Radio)	V			V					
				CCC-GW(Gateway)	V			V					
				RAD2-GW(Gateway)	V			V					
				CCC-A(Applications)	V			V					
				CCC-ANT(Aerial tuner)	V			V					
				CCC-ASK(Audio System controller)	V			V					
				DAB(Digital tuner)	V			V					
				CDC(CD Changer)	V			V					
				CID(Central information display)	V			V					
				CON(Controller)	V			V					
				FRM(Footwell module)	V			V					
				JBE(Junction-box electronics)	V			V					
				MRS(Multiple restraint system)	V			V					
				JNAV(Navigation system/Japan)	V			V					

Year/Chassis type	Engine type	Model	System	System 2	DTC Analysis	Data Analysis	Actuation Test	System Identification	Service Reset	CBS Reset	CAS Reset	Reset All Adaptation Values	Teach In Components
MINI CLUBMAN S/D 2007-present[R55]	Gasoline	CLUBMAN S[N14]/D[W16]	Body	PDC(Park distance control)	V	V	V	V					
				SHD(Sliding/tilting sunroof)	V			V					
				SZL(Switch centre/steering column)	V			V					
				ULF-SBX(Interface box)	V			V					
				ULF-SBX-H(Interface box High)	V			V					
				VM(Video module)	V			V					
			Information	INSTR(Instrument cluster)	V			V					
				IKE/IKI/KOMBI(Instrument cluster)	V			V	V				
			Air Conditioning	IHS(Integrated heating control)	V			V					
				IH(K)S(Integrated heating control)	V			V					
				IHKA(Integrated automatic heating/air conditioning)	V			V					
				IHKA/IHKA(Intergrated heating/air-conditioning)	V			V					
			Immobilizer	CAS(Car access system)	V			V			V		
				EWS(Immobilizer)	V	V		V					
	Diesel	CLUBMAN D[W16]	Engine	DME	V	V	V	V					
				EGS(Electronic transmission control)	V			V				V	V
				EPS(Electronic power steering)	V			V					
			Chassis	ABS(Anti-lock Brake System)	V	V	V	V					
				ABS/ASC/DSC	V			V					
				RDC(Tyre pressure control)	V			V					
			Body	SRS(Airbag)	V			V					
				ZKE(Central body electronics)	V			V					
				LSZ/LCM(Light switching center)	V	V	V	V					
				AHM(Trailer Module)	V			V					
				AMP(Radio system Amplifier)	V			V					
				CCC-BO(User interface)	V			V					

Year/Chassis type	Engine type	Model	System	System 2	DTC Analysis	Data Analysis	Actuation Test	System Identification	Service Reset	CBS Reset	CAS Reset	Reset All Adaptation Values	Teach In Components
MINI CLUBMAN S/D 2007-present[R55]	Diesel	CLUBMAN D[W16]	Body	RAD2-BO(User interface)	V			V					
				RAD(Radio)	V			V					
				CCC-GW(Gateway)	V			V					
				RAD2-GW(Gateway)	V			V					
				CCC-A(Applications)	V			V					
				CCC-ANT(Aerial tuner)	V			V					
				CCC-ASK(Audio System controller)	V			V					
				DAB(Digital tuner)	V			V					
				CDC(CD Changer)	V			V					
				CID(Central information display)	V			V					
				CON(Controller)	V			V					
				FRM(Footwell module)	V			V					
				JBE(Junction-box electronics)	V			V					
				MRS(Multiple restraint system)	V			V					
				JNAV(Navigation system/Japan)	V			V					
				PDC(Park distance control)	V	V	V	V					
				SHD(Sliding/tilting sunroof)	V			V					
				SZL(Switch centre/steering column)	V			V					
				ULF-SBX(Interface box)	V			V					
				ULF-SBX-H(Interface box High)	V			V					
				VM(Video module)	V			V					
			Information	INSTR(Instrument cluster)	V			V					
				IKE/IKI/KOMBI(Instrument cluster)	V			V	V				
			Air Conditioning	IHS(Integrated heating control)	V			V					
				IH(K)S(Integrated heating control)	V			V					
				IHKA(Integrated automatic heating/air conditioning)	V			V					

Year/Chassis type	Engine type	Model	System	System 2	DTC Analysis	Data Analysis	Actuation Test	System Identification	Service Reset	CBS Reset	CAS Reset	Reset All Adaptation Values	Teach In Components
MINI CLUBMAN S/D 2007-present[R55]	Diesel	CLUBMAN D[W16]	Air Conditioning	IHKA/IHKR(Intergrated heating/air-conditioning	V			V					
			Immobilizer	CAS(Car access system)	V			V			V		
				EWS(Immobilizer)	V	V		V					
MINI ONE/COOPER S/D 2007-present[R56]	Gasoline	CLUBMAN S[N14]/D[W16]	Engine	DME	V	V	V	V					
				EGS(Electronic transmission control)	V			V				V	V
				EPS(Electronic power steering)	V			V					
			Chassis	ABS(Anti-lock Brake System)	V	V	V	V					
				ABS/ASC/DSC	V			V					
				RDC(Tyre pressure control)	V			V					
			Body	SRS(Airbag)	V			V					
				ZKE(Central body electronics)	V			V					
				LSZ/LCM(Light switching center)	V	V	V	V					
				AHM(Trailer Module)	V			V					
				AMP(Radio system Amplifier)	V			V					
				CCC-BO(User interface)	V			V					
				RAD2-BO(User interface)	V			V					
				RAD(Radio)	V			V					
				CCC-GW(Gateway)	V			V					
				RAD2-GW(Gateway)	V			V					
				CCC-A(Applications)	V			V					
				CCC-ANT(Aerial tuner)	V			V					
				CCC-ASK(Audio System controller)	V			V					
				DAB(Digital tuner)	V			V					
				CDC(CD Changer)	V			V					
				CID(Central information display)	V			V					
				CON(Controller)	V			V					

Year/Chassis type	Engine type	Model	System	System 2	DTC Analysis	Data Analysis	Actuation Test	System Identification	Service Reset	CBS Reset	CAS Reset	Reset All Adaptation Values	Teach In Components
MINI ONE/COOPER S/D 2007-present[R56]	Gasoline	CLUBMAN S[N14]/D[W16]	Body	FRM(Footwell module)	V			V					
				JBE(Junction-box electronics)	V			V					
				MRS(Multiple restraint system)	V			V					
				JNAV(Navigation system/Japan)	V			V					
				PDC(Park distance control)	V	V	V	V					
				SHD(Sliding/tilting sunroof)	V			V					
				SZL(Switch centre/steering column)	V			V					
				ULF-SBX(Interface box)	V			V					
				ULF-SBX-H(Interface box High)	V			V					
				VM(Video module)	V			V					
			Information	INSTR(Instrument cluster)	V			V					
				IKE/IKI/KOMBI(Instrument cluster)	V			V	V				
			Air Conditioning	IHS(Integrated heating control)	V			V					
				IH(K)S(Integrated heating control)	V			V					
				IHKA(Integrated automatic heating/air conditioning)	V			V					
			Immobilizer	IHKA/IHKR(Intergrated heating/air-conditioning)	V			V					
				CAS(Car access system)	V			V			V		
				EWS(Immobilizer)	V	V		V					
	Diesel	CLUBMAN D[W16]	Engine	DME	V	V	V	V					
				EGS(Electronic transmission control)	V			V				V	V
				EPS(Electronic power steering)	V			V					
			Chassis	ABS(Anti-lock Brake System)	V	V	V	V					
				ABS/ASC/DSC	V			V					
				RDC(Tyre pressure control)	V			V					
			Body	SRS(Airbag)	V			V					
				ZKE(Central body electronics)	V			V					

Year/Chassis type	Engine type	Model	System	System 2	DTC Analysis	Data Analysis	Actuation Test	System Identification	Service Reset	CBS Reset	CAS Reset	Reset All Adaptation Values	Teach In Components
MINI ONE/COOPER S/D 2007-present[R56]	Diesel	CLUBMAN D[W16]	Body	LSZ/LCM(Light switching center)	V	V	V	V					
				AHM(Trailer Module)	V			V					
				AMP(Radio system Amplifier)	V			V					
				CCC-BO(User interface)	V			V					
				RAD2-BO(User interface)	V			V					
				RAD(Radio)	V			V					
				CCC-GW(Gateway)	V			V					
				RAD2-GW(Gateway)	V			V					
				CCC-A(Applications)	V			V					
				CCC-ANT(Aerial tuner)	V			V					
				CCC-ASK(Audio System controller)	V			V					
				DAB(Digital tuner)	V			V					
				CDC(CD Changer)	V			V					
				CID(Central information display)	V			V					
				CON(Controller)	V			V					
				FRM(Footwell module)	V			V					
				JBE(Junction-box electronics)	V			V					
				MRS(Multiple restraint system)	V			V					
				JNAV(Navigation system/Japan)	V			V					
				PDC(Park distance control)	V	V	V	V					
				SHD(Sliding/tilting sunroof)	V			V					
				SZL(Switch centre/steering column)	V			V					
				ULF-SBX(Interface box)	V			V					
				ULF-SBX-H(Interface box High)	V			V					
				VM(Video module)	V			V					
			Information	INSTR(Instrument cluster)	V			V					

Year/Chassis type	Engine type	Model	System	System 2	DTC Analysis	Data Analysis	Actuation Test	System Identification	Service Reset	CBS Reset	CAS Reset	Reset All Adaptation Values	Teach In Components	
MINI ONE/COOPER S/D 2007-present[R56]	Diesel	CLUBMAN D[W16]	Information	IKE/IKI/KOMBI(Instrument cluster)	V			V	V					
			Air Conditioning	IHS(Integrated heating control)	V			V						
				IH(K)S(Integrated heating control)	V			V						
				IHKA(Integrated automatic heating/air conditioning)	V			V						
				IHKA/IHKR(Intergrated heating/air-conditioning)	V			V						
			Immobilizer	CAS(Car access system)	V			V			V			
				EWS(Immobilizer)	V	V		V						