

## PEUGEOT V42.61 Diagnostics List (Note:For reference only)

| Vehicle           | System                    | ECU type                       | Functions    |          |           |             |           |                                                                 |
|-------------------|---------------------------|--------------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------|
|                   |                           |                                | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                |
| 106               | Additional heating        |                                | √            | √        | √         | √           | √         |                                                                 |
| 106REMOD<br>ELAGE | Petrol engine             | CDY BOSCH MA3.1                | √            | √        | √         |             |           |                                                                 |
|                   |                           | CDZ BOSCH MA3.1                | √            | √        | √         |             |           |                                                                 |
|                   |                           | HDY BOSCH MA3.1                | √            | √        | √         |             |           |                                                                 |
|                   |                           | HDZ BOSCH MA3.1                | √            | √        | √         |             |           |                                                                 |
|                   |                           | HFX BOSCH M7.4.4               | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adapation                   |
|                   |                           | KFX BOSCH MP7.3                | √            | √        | √         | √           | √         | 1.Initialization Adapation                                      |
|                   |                           | KFX MM1AP                      | √            | √        | √         | √           |           |                                                                 |
|                   |                           | KFW SAGEM S2000                | √            | √        | √         | √           | √         | 1.Marchting<br>2.Initialization Adapation                       |
|                   |                           | NFX MM1AP                      | √            | √        | √         | √           | √         | 1.Initialization Adapation<br>2.Injection ECU<br>initialisation |
|                   | Additional heating        |                                | √            | √        | √         | √           | √         |                                                                 |
| 107               | Petrol engine             | CFA BOSCH ME7.9.5              |              | √        | √         | √           | √         |                                                                 |
|                   | Diesel engine             | 8HT SIEMENS SID805             | √            | √        | √         | √           | √         | 1.Configuration<br>2.Pairing                                    |
|                   | AT                        | controlled manual gearbox(MMT) |              | √        | √         | √           |           |                                                                 |
|                   | Active and passive safety | ABS BOSCH 8.0 C1               |              | √        | √         | √           |           |                                                                 |
|                   |                           | ESP BOSCH 8.0 C1               |              | √        | √         | √           |           |                                                                 |
|                   | Airbag ECU                |                                | √            | √        | √         | √           |           |                                                                 |
|                   | Coded anti-star           |                                |              | √        | √         | √           |           |                                                                 |
|                   | Power steering            |                                | √            | √        | √         | √           |           |                                                                 |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                          | ECU type          | Functions    |          |           |             |           |                                                                                                                                                                                         |
|---------|---------------------------------|-------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |                                 |                   | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                        |
|         | Built-in systems interface(BSI) |                   | √            | √        | √         |             |           | 1. Resetting to zero of the service mileage                                                                                                                                             |
|         | Petrol engine                   | KFU MM6LPC        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                                                                                            |
|         |                                 | KFV J34P          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                                                                                            |
|         |                                 | NFU BOSCH ME7.4.5 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                                                                                                                                     |
|         | Diesel engine                   | 8HX SID 806 DV4   | √            | √        | √         | √           | √         | 1.Configuration                                                                                                                                                                         |
|         |                                 | 8HZ SID 806 DV4   | √            | √        | √         | √           | √         | 1.Configuration                                                                                                                                                                         |
|         |                                 | 9HT BOSCH EDC16C3 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Particulate filter regeneration<br>3.Replacement particle emission filter<br>4.Replacement of the particle emission filter and work on the additive adding circuit |

## PEUGEOT V42.61 Diagnostics List (Note:For reference only)

| Vehicle  | System                                    | ECU type                  | Functions    |          |           |             |           |                                                                                                                                                                                         |
|----------|-------------------------------------------|---------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|          |                                           |                           | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                        |
| 1007 CAN |                                           | 9HZ BOSCH EDC16C3         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Particulate filter regeneration<br>3.Replacement particle emission filter<br>4.Replacement of the particle emission filter and work on the additive adding circuit |
|          | ABS                                       | ABS MK70.1                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                                                                                                                                           |
|          |                                           | ESP MK60-O                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal                                                                                                                      |
|          | Airbag ECU                                | Airbag ECU                | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock                                                                                                                                                    |
|          | Vehicle protection/Management of accesses | Alarm                     | √            | √        | √         | √           | √         | 1.Configuration                                                                                                                                                                         |
|          |                                           | Rain/brightness sensor    | √            | √        | √         |             |           |                                                                                                                                                                                         |
|          | Driving assistance/Comfort                | Parking assistance        | √            | √        | √         | √           | √         | 1.Configuration                                                                                                                                                                         |
|          |                                           | Air conditioning          | √            | √        | √         | √           | √         | 1.Configuration                                                                                                                                                                         |
|          |                                           | Under inflation detection | √            | √        | √         | √           |           |                                                                                                                                                                                         |
|          |                                           | Power steering            | √            | √        | √         | √           |           | 1.Configuration                                                                                                                                                                         |

## PEUGEOT V42.61 Diagnostics List (Note:For reference only)

| Vehicle | System                                | ECU type                        | Functions    |          |           |             |           |                                                     |
|---------|---------------------------------------|---------------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------|
|         |                                       |                                 | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                    |
|         | Inform the driver/Audio/Communication | Multi-function display          |              |          |           |             |           |                                                     |
|         |                                       | Steering wheel switching module | √            | √        | √         | √           | √         |                                                     |
|         |                                       | Radio                           | √            | √        | √         | √           | √         | 1.Configuration                                     |
|         |                                       | Hands Free Kit                  | √            | √        | √         | √           | √         | 1.Configuration                                     |
|         |                                       | CD player                       | √            | √        | √         |             | √         |                                                     |
|         |                                       | Instrument panel                | √            | √        | √         | √           | √         | 1.Configuration                                     |
|         |                                       | Telematics                      | √            | √        | √         | √           | √         | 1.Configuration                                     |
|         | Built-in systems interface(BSI)       |                                 | √            | √        | √         |             |           | 1. Resetting to zero of the service mileage         |
|         | Petrol engine                         | NFU ME744                       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives |
|         |                                       | KFV J34P                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives |
|         |                                       | KFV S2000PM2                    | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption        |
|         |                                       | KFU MM6LP                       | √            | √        | √         | √           |           |                                                     |
|         |                                       | N6A BOSCH ME7.4.5               | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption        |
|         |                                       | N6B BOSCH ME7.4.5               | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption        |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle  | System                                | ECU type                        | Functions    |          |           |             |           |                                                                    |
|----------|---------------------------------------|---------------------------------|--------------|----------|-----------|-------------|-----------|--------------------------------------------------------------------|
|          |                                       |                                 | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                   |
| 1007 VAN |                                       | NFU BOSCH ME7.4.5               | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                |
|          | Diesel engine                         | 8HZ SIEMENS SID 804             | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|          |                                       | 8HX SIEMENS SID804              | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|          | ABS                                   | ABS MK70                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                      |
|          |                                       | ESP MK60                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal |
|          | A/T                                   | Controlled manual gearbox(BVMP) | √            | √        | √         | √           | √         | 1.Configuration<br>2.Counters<br>3.Learning<br>4.Stalling          |
|          | Air bag                               | Airbag ECU                      | √            | √        | √         | √           |           | 1.Configuration                                                    |
|          | Visibility/Lighting/Signalling        | Rain/brightness sensor          | √            | √        | √         |             |           |                                                                    |
|          |                                       | Steering wheel switching module | √            | √        | √         | √           |           |                                                                    |
|          | Driving assistance/Comfort            | Parking assistance              | √            | √        | √         | √           | √         |                                                                    |
|          |                                       | Air conditioning                | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|          |                                       | Power steering                  | √            | √        | √         | √           |           |                                                                    |
|          | Inform the driver/Audio/Communication | Telematics RT3                  | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|          |                                       | Multi-function display EMF      | √            | √        | √         | √           |           |                                                                    |
|          |                                       | CD player                       | √            | √        | √         | √           | √         | 1.Configuration                                                    |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                       | ECU type                         | Functions    |          |           |             |           |                                                                              |
|---------|------------------------------|----------------------------------|--------------|----------|-----------|-------------|-----------|------------------------------------------------------------------------------|
|         |                              |                                  | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                             |
|         | Driver/ Radio/ Communication | Instrument panel                 | √            | √        | √         | √           | √         | 1.Configuration                                                              |
|         |                              | Radio                            | √            | √        | √         | √           | √         | 1.Configuration                                                              |
|         | BSI                          |                                  | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.key program                                   |
|         |                              | NFU BOSCH ME744                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                          |
|         |                              | RFR MM48P                        | √            | √        | √         | √           | √         | 1.Initialization Adaption                                                    |
|         |                              | N6A BOSCH ME745                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Programming/Pairing |
|         |                              | NFU BOSCH ME745                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Programming/Pairing |
|         |                              | N6A BOSCH ME744 FLEX FUEL        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                          |
|         |                              | N6A BOSCH ME744                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                          |
|         |                              | NFU Or N6A Or N6B ME749 BIO FIEX | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                          |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type          | Functions    |          |           |             |           |                                                                                         |
|---------|---------------|-------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------|
|         |               |                   | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                        |
|         | Petrol engine | KFW ME749         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |
|         |               | KFW ME749 BIOFLEX | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |
|         |               | RFN MM48P         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                            |
|         |               | KFX BOSCH MP7.3   | √            | √        | √         | √           | √         | 1.Initialization Adaption                                                               |
|         |               | KFX MM1AP         | √            | √        | √         | √           |           |                                                                                         |
|         |               | KFU MM6LP         | √            | √        | √         | √           |           | 1.Initialization Adaption                                                               |
|         |               | HFZ MM1AP         | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Injection ECU initialisation                             |
|         |               | HFY MM1AP         | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Injection ECU initialisation                             |
|         |               | KFW SAGEM S2000   | √            | √        | √         | √           | √         | 1.Marchting<br>2.Initialization Adaption                                                |
|         |               | K6D SAGEM S2000   | √            | √        | √         | √           | √         | 1.Marchting<br>2.Initialization Adaption                                                |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System | ECU type                    | Functions    |          |           |             |           |                                                             |
|---------|--------|-----------------------------|--------------|----------|-----------|-------------|-----------|-------------------------------------------------------------|
|         |        |                             | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                            |
| 206     |        | K6C MM1AP                   | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Injection ECU initialisation |
|         |        | HFX MM4.8P                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                |
|         |        | RFK MM6LP                   | √            | √        | √         | √           | √         | 1.Configuration                                             |
|         |        | RFN MM6LP                   | √            | √        | √         | √           |           | 1.Initialization Adaption                                   |
|         |        | 7LZ MM5NP                   | √            | √        | √         |             |           |                                                             |
|         |        | KFW BOSCH ME7.4.4           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives         |
|         |        | NFZ BOSCH MP7.2             | √            | √        | √         | √           | √         |                                                             |
|         |        | KFW J34P                    | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives         |
|         |        | K6D J34P                    | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives         |
|         |        | NFU J35                     | √            | √        | √         | √           | √         | 1.Configuration                                             |
|         |        | 8HX/8HZ BOSCH EDC16C3 EURO3 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification               |
|         |        | 8HZ BOSCH EDC16C3 EURO4     | √            | √        | √         | √           |           | 1.Injection classification                                  |
|         |        | 9HY BOSCH EDC16C3 EURO4     | √            | √        | √         | √           | √         | 1.Injection classification                                  |



## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type          | Functions    |          |           |             |           |                                                                                                                                   |
|---------|---------------|-------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------------------------------|
|         |               |                   | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                  |
|         | Diesel engine | 9HY BOSCH EDC16C3 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification<br>3.Forced regeneration vehicle stationary<br>4.Forced regeneration vehicle moving |
|         |               | 9HZ BOSCH EDC16C3 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification<br>3.Forced regeneration vehicle stationary<br>4.Forced regeneration vehicle moving |
|         |               | 9HX EDC16C3       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification<br>3.Forced regeneration vehicle stationary<br>4.Forced regeneration vehicle moving |
|         |               | 9HT BOSCH EDC16C3 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification<br>3.Forced regeneration vehicle stationary<br>4.Forced regeneration vehicle moving |
|         |               | WJY LUCAS DCN2    | √            | √        | √         | √           | √         | 1.Configuration                                                                                                                   |

## PEUGEOT V42.61 Diagnostics List (Note:For reference only)

| Vehicle | System              | ECU type                                    | Functions    |          |           |             |           |                                                                                         |
|---------|---------------------|---------------------------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------|
|         |                     |                                             | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                        |
|         |                     | WJZ LUCAS DCN2                              | √            | √        | √         | √           |           |                                                                                         |
|         |                     | RHY BOSCH EDC15C2                           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Configuration of mileage completed by parts<br>3.particle filter   |
|         | ABS                 | ABS MK70                                    | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                                           |
|         |                     | Anti-lock brakes TEVES<br>( ABS BOSCH 5.3 ) | √            | √        | √         | √           | √         | 1.air bleed                                                                             |
|         | A/T                 | AL4 automatic gearbox                       | √            | √        | √         | √           | √         | 1.Marchting<br>2.Initialization Adaption<br>3.Accelebration pedal<br>4.Oil wear counter |
|         |                     | ZF 4HP20 AT                                 | √            | √        | √         | √           |           |                                                                                         |
|         |                     | Diesel fuel additive control unit           | √            | √        | √         | √           | √         | 1.Configuration                                                                         |
|         |                     | Electric pump unit(power steering)          | √            | √        | √         | √           |           |                                                                                         |
|         | IP                  | Instrument panel                            | √            | √        | √         | √           | √         | 1.Marchting                                                                             |
|         | A/C                 | Air conditioning                            | √            | √        | √         | √           | √         | 1.Configuration                                                                         |
|         |                     | Alarm                                       | √            | √        | √         | √           | √         | 1.Configuration                                                                         |
|         | Visibility/Lighting | Driving school                              | √            |          |           | √           | √         |                                                                                         |
|         |                     | Rain/brightness sensor                      | √            | √        | √         |             |           |                                                                                         |
|         |                     | Display/Telematics                          | √            | √        | √         | √           | √         | 1.Marchting                                                                             |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                          | ECU type                                   | Functions    |          |           |             |           |                                                             |
|---------|---------------------------------|--------------------------------------------|--------------|----------|-----------|-------------|-----------|-------------------------------------------------------------|
|         |                                 |                                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                            |
|         | Driver information              | on-board navigation system                 | √            | √        | √         | √           |           |                                                             |
|         |                                 | Instrument panel                           | √            | √        | √         | √           | √         | 1.Configuration                                             |
|         |                                 | Radio                                      | √            | √        | √         | √           | √         | 1.Configuration                                             |
|         |                                 | CD Player                                  | √            | √        | √         | √           | √         |                                                             |
|         |                                 | Switch unit under steering wheel(COM 2000) | √            | √        | √         | √           |           |                                                             |
|         |                                 | Air bag and seat belt                      | √            | √        | √         |             |           | 1.Marchting                                                 |
|         |                                 | Left side airbag                           | √            | √        | √         |             |           | 1.Marchting                                                 |
|         |                                 | Right side airbag                          | √            | √        | √         |             |           | 1.Marchting                                                 |
|         | Built-in systems interface(BSI) |                                            | √            | √        | √         |             |           | 1. Resetting to zero of the service mileage                 |
|         |                                 | HFX MM48P                                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                |
|         |                                 | HFY MM1AP                                  | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Injection ECU initialisation |
|         |                                 | HFZ MM1AP                                  | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Injection ECU initialisation |
|         |                                 | K6C MM1AP                                  | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Injection ECU initialisation |
|         |                                 | K6D SAGEM S2000                            | √            | √        | √         | √           |           |                                                             |
|         |                                 | KFU MM6LP                                  | √            | √        | √         | √           |           |                                                             |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type                   | Functions    |          |           |             |           |                                                                              |
|---------|---------------|----------------------------|--------------|----------|-----------|-------------|-----------|------------------------------------------------------------------------------|
|         |               |                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                             |
|         | Petrol engine | KFW BOSCH ME7.4.4          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                          |
|         |               | KFW J34P                   | √            | √        | √         | √           | √         | 1.Configuration                                                              |
|         |               | KFW SAGEM S2000            | √            | √        | √         | √           |           |                                                                              |
|         |               | KFX BOSCH MP7.3            | √            | √        | √         | √           | √         | 1.Initialization Adaption                                                    |
|         |               | KFX MM1AP                  | √            | √        | √         | √           |           |                                                                              |
|         |               | N6A BOSCH ME7.4.4          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                          |
|         |               | N6A BOSCH ME7.4.4FLEX FUEL | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                 |
|         |               | N6A BOSCH ME7.4.5          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Programming/Pairing |
|         |               | NFU BOSCH ME7.4.4          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                          |
|         |               | NFU BOSCH ME7.4.5          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Programming/Pairing |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System | ECU type                            | Functions    |          |           |             |           |                                                                                               |
|---------|--------|-------------------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------|
|         |        |                                     | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                              |
| 206 MUX |        | NFU Or N6A Or N6B<br>ME749 BIO FIEX | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the<br>autoadaptives                                        |
|         |        | KFW ME749                           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the<br>autoadaptives<br>3.Writing of the alcohol<br>content |
|         |        | KFW ME749 BIOFLEX                   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the<br>autoadaptives<br>3.Writing of the alcohol<br>content |
|         |        | NFU J35                             | √            | √        | √         | √           | √         | 1.Configuration                                                                               |
|         |        | K6D J34P                            | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the<br>autoadaptives                                        |
|         |        | NFZ BOSCH MP7.2                     | √            | √        | √         | √           | √         |                                                                                               |
|         |        | RFK MM6LP                           | √            | √        | √         | √           | √         | 1.Configuration                                                                               |
|         |        | RFN MM6LP                           | √            | √        | √         | √           |           |                                                                                               |
|         |        | RFN MM48P                           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                  |
|         |        | RFR MM48P                           | √            | √        | √         | √           | √         | 1.Initialization Adaption                                                                     |
|         |        | 8HX/8HZ BOSCH EDC16C3<br>EURO3      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification                                                 |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type                   | Functions    |          |           |             |           |                                                                                                                                         |
|---------|---------------|----------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------------------------------------|
|         |               |                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                        |
|         | Diesel engine | 8HZ BOSCH EDC16C3<br>EURO4 | √            | √        | √         | √           |           | 1.Injection classification                                                                                                              |
|         |               | 9HY BOSCH EDC16C3<br>EURO4 | √            | √        | √         | √           |           | 1.Injection classification                                                                                                              |
|         |               | 9HT BOSCH EDC16C3          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification<br>3.Forced regeneration<br>vehicle stationary<br>4.Forced regeneration<br>vehicle moving |
|         |               | 9HY BOSCH EDC16C3          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification<br>3.Forced regeneration<br>vehicle stationary<br>4.Forced regeneration<br>vehicle moving |
|         |               | 9HZ BOSCH EDC16C3          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification<br>3.Forced regeneration<br>vehicle stationary<br>4.Forced regeneration<br>vehicle moving |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System | ECU type                          | Functions    |          |           |             |           |                                                                                                                                   |
|---------|--------|-----------------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------------------------------|
|         |        |                                   | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                  |
|         |        | 9HX EDC16C3                       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification<br>3.Forced regeneration vehicle stationary<br>4.Forced regeneration vehicle moving |
|         |        | RHY BOSCH EDC15C2                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Configuration of mileage completed by parts<br>3.particle filter                                             |
|         |        | WJY LUCAS DCN2                    | √            | √        | √         | √           | √         | 1.Configuration                                                                                                                   |
|         |        | Diesel fuel additive control unit | √            | √        | √         | √           | √         | 1.Configuration                                                                                                                   |
|         | AT     | AL4 automatic gearbox             | √            | √        | √         | √           |           |                                                                                                                                   |
|         | ABS    | ABS MK70                          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                                                                                     |
|         |        | Anti-lock brakes MK70             | √            | √        | √         | √           | √         | 1.Configuration<br>3.Bleeding                                                                                                     |
|         |        | Anti-lock brakes TEVES            | √            | √        | √         | √           |           |                                                                                                                                   |
|         |        | ESP MK60                          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal                                                                |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                           | ECU type                           | Functions    |          |           |             |           |                                                     |
|---------|----------------------------------|------------------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------|
|         |                                  |                                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                    |
|         | Air bags                         | Air bags                           | √            | √        | √         | √           | √         | 1.Configuration<br>2.lock and unlock                |
|         | A/C                              | Air conditioning                   | √            | √        | √         | √           | √         | 1.Configuration                                     |
|         |                                  | Alarm                              | √            | √        | √         | √           | √         | 1.Configuration                                     |
|         | Visibility/Lighting              | Driving school                     | √            |          |           | √           | √         |                                                     |
|         |                                  | Rain/brightness sensor             | √            | √        | √         |             |           |                                                     |
|         | Driver information/Communication | Display/Telematics/AMF             | √            | √        | √         | √           | √         | 1.Configuration                                     |
|         |                                  | Display/Telematics/RT3             | √            | √        | √         | √           | √         | 1.Configuration                                     |
|         |                                  | Radio                              | √            | √        | √         | √           | √         | 1.Configuration                                     |
|         |                                  | CD player                          | √            | √        | √         | √           | √         |                                                     |
|         |                                  | Instrument panel                   | √            | √        | √         | √           | √         | 1.Configuration                                     |
|         |                                  |                                    |              |          |           |             |           |                                                     |
|         |                                  | Electric pump unit(power steering) | √            | √        | √         | √           |           |                                                     |
|         | Built-in systems interface(BSI)  |                                    | √            | √        | √         |             |           | 1. Resetting to zero of the service mileage         |
|         |                                  | KFW J34P                           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives |
|         |                                  | TU5JP4 ME745                       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives |



## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type           | Functions    |          |           |             |           |                                                                                         |
|---------|---------------|--------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------|
|         |               |                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                        |
| 206 +   | Petrol engine | NFU Or N6A ME749   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |
|         |               | N6A ME749 BIO FLEX | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |
|         |               | KFW ME749          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |
|         |               | KFW ME749 BIO FLEX | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |
|         | Diesel engine | RHY EDC15C2        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Configuration of mileage completed by parts<br>3.particle filter   |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                                | ECU type                        | Functions    |          |           |             |           |                                                                                                 |
|---------|---------------------------------------|---------------------------------|--------------|----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------|
|         |                                       |                                 | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                |
|         |                                       | 8HZ BOSCH EDC16C3<br>EURO4      | √            | √        | √         | √           |           | 1.Injection classification                                                                      |
|         |                                       | 9HY BOSCH EDC16C3<br>EURO4      | √            | √        | √         | √           |           | 1.Injection classification                                                                      |
|         | AT                                    | AL4 automatic gearbox           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption<br>3. Oil wear counter                             |
|         | Active safety                         | ABS MK70                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                                                   |
|         |                                       | ESP MK60                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal<br>4.Initialization Adaption |
|         |                                       | Air-bag                         | √            |          |           | √           |           | 1.Configuration<br>2.lock and unlock                                                            |
|         | A/C                                   | Air conditioning                | √            | √        | √         | √           | √         | 1.Configuration                                                                                 |
|         |                                       | Alarm                           | √            | √        | √         | √           | √         | 1.Configuration                                                                                 |
|         |                                       | Rain/brightness sensor          | √            | √        | √         |             |           |                                                                                                 |
|         | Inform the driver/Audio/Communication | Display/Telematics              | √            | √        | √         | √           | √         | 1.Configuration                                                                                 |
|         |                                       | Steering wheel switching module | √            | √        | √         | √           |           |                                                                                                 |
|         |                                       | Radio                           | √            | √        | √         | √           | √         | 1.Configuration                                                                                 |
|         |                                       | CD player                       | √            | √        | √         | √           | √         |                                                                                                 |
|         |                                       | Instrument panel                | √            | √        | √         | √           | √         | 1.Configuration                                                                                 |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                          | ECU type          | Functions    |          |           |             |           |                                                                              |
|---------|---------------------------------|-------------------|--------------|----------|-----------|-------------|-----------|------------------------------------------------------------------------------|
|         |                                 |                   | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                             |
|         | Built-in systems interface(BSI) |                   | √            | √        | √         |             |           | 1. Resetting to zero of the service mileage                                  |
|         | Petrol engine                   | N6A BOSCH ME7.4.5 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Programming/Pairing |
|         |                                 | N6B BOSCH ME7.4.5 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Programming/Pairing |
|         |                                 | NFU BOSCH ME7.4.5 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Programming/Pairing |
|         |                                 | KFU MM6LPC        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                 |
|         |                                 | 5FW MEV17.4       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                 |
|         |                                 | 5FX MED17.4       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                 |
|         |                                 | 5FY MED17.4       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                 |
|         |                                 | 5FR MED17.4       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                 |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System | ECU type                   | Functions    |          |           |             |           |                                               |
|---------|--------|----------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------|
|         |        |                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                              |
|         |        | 8FS MEV17.4                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption  |
|         |        | 5FS MEV17.4                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption  |
|         |        | 8FR MEV17.4                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption  |
|         |        | 8FP MEV17.4                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption  |
|         |        | MEV17.4 EVO                | √            | √        | √         | √           | √         | 1.Configuration                               |
|         |        | KFV J34P                   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption  |
|         |        | KFT V34.1                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption  |
|         |        | EP3C 8FP MEV17.4.2         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption  |
|         |        | EP3CM 8FP MEV17.4.2        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption  |
|         |        | EP3C 8FR MEV17.4.2         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption  |
|         |        | EP6C 5FS MEV17.4.2         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption  |
|         |        | 8HZ BOSCH EDC16C3<br>EURO4 | √            | √        | √         | √           |           | 1.Injection classification                    |
|         |        | 9HX BOSCH EDC16C3          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification |

## PEUGEOT V42.61 Diagnostics List (Note:For reference only)

| Vehicle | System | ECU type                         | Functions    |          |           |             |           |                                                                                                                                                                                         |
|---------|--------|----------------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |        |                                  | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                        |
|         |        | 9HY BOSCH EDC16C3<br>EURO4 (CAN) | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification                                                                                                                                           |
|         |        | 9HY BOSCH EDC16C3<br>EURO4 (KWP) | √            | √        | √         |             |           | 1.Configuration<br>2.Injection classification                                                                                                                                           |
|         |        | 9HZ BOSCH EDC16C3                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Particulate filter regeneration<br>3.Replacement particle emission filter<br>4.Replacement of the particle emission filter and work on the additive adding circuit |
|         |        | 9HV BOSCH EDC16C3                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Particulate filter regeneration<br>3.Replacement particle emission filter<br>4.Replacement of the particle emission filter and work on the additive adding circuit |
|         |        | 9HY BOSCH EDC16C3                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification                                                                                                                                           |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type           | Functions    |          |           |             |           |                                                                                                                                                                      |
|---------|---------------|--------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |               |                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                     |
| 207CAN  | Diesel engine | 9HT BOSCH EDC16C3  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification                                                                                                                        |
|         |               | 9HP BOSCH EDC17C10 | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3. Programming of the total quantity of additive injected into the particulate emission filter |
|         |               | 8HR BOSCH EDC17C10 | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3. Programming of the total quantity of additive injected into the particulate emission filter |
|         |               | 9HL HDI SID807     | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3. Programming of the total quantity of additive injected into the particulate emission filter |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System | ECU type                             | Functions    |          |           |             |           |                                                                                                                                                                      |
|---------|--------|--------------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |        |                                      | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                     |
|         |        | 9HR HDI SID807                       | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3. Programming of the total quantity of additive injected into the particulate emission filter |
|         |        | 9HP EDC17C10_BR2                     | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3. Programming of the total quantity of additive injected into the particulate emission filter |
|         |        | Multiplexed additive adding pump ECU | √            | √        | √         |             |           |                                                                                                                                                                      |
|         | AT ECU | AL4 automatic gearbox                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                                                                         |
|         |        | colltrolled manual gearbox(BVMP)     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Counters<br>3.Learning<br>4.Stalling                                                                                                            |
|         |        | ABS MK70.1                           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                                                                                                                        |
|         |        |                                      |              |          |           |             |           |                                                                                                                                                                      |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                                    | ECU type                                     | Functions    |          |           |             |           |                                                                    |
|---------|-------------------------------------------|----------------------------------------------|--------------|----------|-----------|-------------|-----------|--------------------------------------------------------------------|
|         |                                           |                                              | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                   |
|         | ABS                                       | ESP MK60-O                                   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal |
|         | Air bag                                   | Airbag ECU                                   | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock                               |
|         | Driving assistance/Comfort                | Parking assistance                           | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                           | Air conditioning                             | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                           | Under inflation detection                    | √            | √        | √         | √           |           |                                                                    |
|         |                                           | Power steering                               | √            | √        | √         | √           |           |                                                                    |
|         | Inform the driver/Audio/Communication     | Muti-function display                        | √            | √        | √         |             |           |                                                                    |
|         |                                           | Radio                                        | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                           | CD player                                    | √            | √        | √         |             | √         |                                                                    |
|         |                                           | Instrument panel                             | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                           | Hands Free Kit                               | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                           | Steering wheel switching module              | √            | √        | √         |             |           |                                                                    |
|         |                                           | Telamatics                                   | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                           | Battery charge status unit                   | √            | √        | √         | √           |           | 1.Configuration                                                    |
|         |                                           | Warning light showing seat belt not fastened | √            |          |           |             |           |                                                                    |
|         | Vehicle protection/Management of accesses | Alarm                                        | √            | √        | √         |             |           |                                                                    |
|         |                                           | BSM                                          | √            | √        | √         | √           | √         |                                                                    |



## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                          | ECU type               | Functions    |          |           |             |           |                                                                                         |
|---------|---------------------------------|------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------|
|         |                                 |                        | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                        |
|         |                                 | BSR                    | √            | √        | √         | √           | √         |                                                                                         |
|         |                                 | TNB                    | √            |          |           |             | √         |                                                                                         |
|         | Visibility/Lighting/Signalling  | Rain/Brightness sensor | √            | √        | √         |             |           |                                                                                         |
|         |                                 | Driving school module  | √            | √        |           |             | √         |                                                                                         |
|         |                                 | Static AFS             | √            | √        | √         |             |           |                                                                                         |
|         | Built-in systems interface(BSI) |                        | √            | √        | √         |             |           | 1. Resetting to zero of the service mileage                                             |
|         | Petrol engine                   | KFW J34P               | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                                     |
|         |                                 | HFX J34P               | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                                     |
|         |                                 | HFV V34.3              | √            | √        | √         | √           |           |                                                                                         |
|         |                                 | KFT V34.3              | √            | √        | √         | √           |           |                                                                                         |
|         |                                 | TU5JP4 ME745           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                                     |
|         |                                 | NFU Or N6A ME749       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type                   | Functions    |          |           |             |           |                                                                                         |
|---------|---------------|----------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------|
|         |               |                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                        |
| 207 VAN |               | N6A ME749 BIO FLEX         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |
|         |               | KFW ME749                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |
|         |               | KFW ME749 BIO FLEX         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |
|         | Diesel engine | WJY DCN2                   | √            | √        | √         | √           |           |                                                                                         |
|         |               | RHY EDC15C2                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Configuration of mileage completed by parts<br>3.particle filter   |
|         |               | 8HZ BOSCH EDC16C3<br>EURO4 | √            | √        | √         | √           |           | 1.Injection classification                                                              |
|         |               | 9HY BOSCH EDC16C3<br>EURO4 | √            | √        | √         | √           |           | 1.Injection classification                                                              |
|         |               |                            |              |          |           |             |           |                                                                                         |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                                | ECU type                        | Functions    |          |           |             |           |                                                                     |
|---------|---------------------------------------|---------------------------------|--------------|----------|-----------|-------------|-----------|---------------------------------------------------------------------|
|         |                                       |                                 | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                    |
|         |                                       | 8HR EDC17C10_BR2                | √            | √        | √         | √           |           |                                                                     |
|         | AT                                    | AL4 automatic gearbox           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption<br>3. Oil wear counter |
|         | A/C                                   | Air conditioning                | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         | Inform the driver/Audio/Communication | Display/Telematics/AMF          | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         |                                       | Display/Telematics/RT3          | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         |                                       | Steering wheel switching module | √            | √        | √         | √           |           |                                                                     |
|         |                                       | Radio                           | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         |                                       | CD player                       | √            | √        | √         | √           | √         |                                                                     |
|         |                                       | Instrument panel                | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         |                                       | Alarm                           | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         | Active and passive safety             | ABS MK70                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                       |
|         |                                       | ESP MK60                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal  |
|         |                                       | Air bags                        | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock                                |
|         |                                       | Rain/brightness sensor          | √            | √        | √         |             |           |                                                                     |
|         | Built-in systems interface(BSI)       |                                 | √            | √        | √         |             |           | 1. Resetting to zero of the service mileage                         |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type           | Functions    |          |           |             |           |                                                                                         |
|---------|---------------|--------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------|
|         |               |                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                        |
|         | Petrol engine | NFU Or N6A ME749   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |
|         |               | N6A ME749 BIO FLEX | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |
|         |               | KFW ME749          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |
|         |               | KFW ME749 BIO FLEX | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |
|         |               | KFW J34P           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                                     |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                     | ECU type                        | Functions    |          |           |             |           |                                                                                       |
|---------|----------------------------|---------------------------------|--------------|----------|-----------|-------------|-----------|---------------------------------------------------------------------------------------|
|         |                            |                                 | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                      |
| 207i    |                            | HFX J34P                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                                   |
|         |                            | N6B Or N6A Or NFU ME745         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                                   |
|         |                            | HFV V34.3                       | √            | √        | √         | √           |           |                                                                                       |
|         |                            | KFT V34.3                       | √            | √        | √         | √           |           |                                                                                       |
|         | Diesel engine              | WJY DCN2                        | √            | √        | √         | √           |           |                                                                                       |
|         |                            | RHY EDC15C2                     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Configuration of mileage completed by parts<br>3.particle filter |
|         |                            | 8HZ BOSCH EDC16C3 EURO4         | √            | √        | √         | √           |           | 1.Injection classification                                                            |
|         |                            | 9HY BOSCH EDC16C3 EURO4         | √            | √        | √         | √           |           | 1.Injection classification                                                            |
|         |                            | 8HR EDC17C10_BR2                | √            | √        | √         | √           |           |                                                                                       |
|         | AT                         | AL4 AT8 automatic gearbox       | √            | √        | √         | √           |           |                                                                                       |
|         | Driving assistance/Comfort | Heating/ventilation             | √            | √        | √         | √           |           |                                                                                       |
|         |                            | Display/Telematics              | √            | √        | √         | √           |           |                                                                                       |
|         |                            | Steering wheel switching module | √            | √        | √         | √           |           |                                                                                       |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                                    | ECU type                             | Functions    |          |           |             |           |                                                                                         |
|---------|-------------------------------------------|--------------------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------|
|         |                                           |                                      | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                        |
|         | Inform the driver/Audio/Communication     | Radio                                | √            | √        | √         | √           |           |                                                                                         |
|         |                                           | CD changer                           | √            | √        | √         | √           |           |                                                                                         |
|         |                                           | Instrument panel                     | √            | √        | √         | √           |           |                                                                                         |
|         |                                           | Stolen vehicle location control unit | √            | √        | √         | √           |           |                                                                                         |
|         | Vehicle protection/Management of accesses | Alarm                                | √            | √        | √         |             |           |                                                                                         |
|         | Active and passive safety                 | ABS MK70                             | √            | √        | √         | √           |           |                                                                                         |
|         |                                           | ESP MK60                             | √            | √        | √         | √           |           |                                                                                         |
|         |                                           | Air bags                             | √            | √        | √         |             |           |                                                                                         |
|         | Visibility/Lighting/Signalling            | Rain/brightness sensor               | √            | √        | √         |             |           |                                                                                         |
|         | Built-in systems interface(BSI)           |                                      | √            | √        | √         |             |           | 1. Resetting to zero of the service mileage                                             |
|         |                                           | NFU Or N6A ME749                     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |
|         |                                           | N6A ME749 BIO FLEX                   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type           | Functions    |          |           |             |           |                                                                                         |
|---------|---------------|--------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------|
|         |               |                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                        |
| HOGGAR  | Petrol engine | KFW ME749          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |
|         |               | KFW ME749 BIO FLEX | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |
|         |               | KFW J34P           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                                     |
|         |               | HFX J34P           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                                     |
|         |               | TU5JP4 ME745       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                                     |
|         |               | HFV V34.3          | √            | √        | √         | √           |           |                                                                                         |
|         |               | KFT V34.3          | √            | √        | √         | √           |           |                                                                                         |
|         |               | WJY DCN2           | √            | √        | √         | √           |           |                                                                                         |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                                    | ECU type                             | Functions    |          |           |             |           |                                                                                       |
|---------|-------------------------------------------|--------------------------------------|--------------|----------|-----------|-------------|-----------|---------------------------------------------------------------------------------------|
|         |                                           |                                      | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                      |
|         | Diesel engine                             | RHY EDC15C2                          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Configuration of mileage completed by parts<br>3.particle filter |
|         |                                           | 8HZ BOSCH EDC16C3 EURO4              | √            | √        | √         | √           |           | 1.Injection classification                                                            |
|         |                                           | 9HY BOSCH EDC16C3 EURO4              | √            | √        | √         | √           |           | 1.Injection classification                                                            |
|         |                                           | 8HR EDC17C10_BR2                     | √            | √        | √         | √           |           |                                                                                       |
|         | AT                                        | AL4 AT8 automatic gearbox            | √            | √        | √         | √           |           |                                                                                       |
|         | Driving assistance/Comfort                | Heating/ventilation                  | √            | √        | √         | √           |           |                                                                                       |
|         | Inform the driver/Audio/Communication     | Display/Telematics                   | √            | √        | √         | √           |           |                                                                                       |
|         |                                           | Steering wheel switching module      | √            | √        | √         | √           |           |                                                                                       |
|         |                                           | Radio                                | √            | √        | √         | √           |           |                                                                                       |
|         |                                           | CD changer                           | √            | √        | √         | √           |           |                                                                                       |
|         |                                           | Instrument panel                     | √            | √        | √         | √           |           |                                                                                       |
|         |                                           | Stolen vehicle location control unit | √            | √        | √         | √           |           |                                                                                       |
|         | Vehicle protection/Management of accesses | Alarm                                | √            | √        | √         |             |           |                                                                                       |
|         |                                           | ABS MK70                             | √            | √        | √         | √           |           |                                                                                       |



## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                          | ECU type               | Functions    |          |           |             |           |                                                                                                                                                                                         |
|---------|---------------------------------|------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |                                 |                        | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                        |
|         | Active and passive safety       | ESP MK60               | √            | √        | √         | √           |           |                                                                                                                                                                                         |
|         |                                 | Air bags               | √            | √        | √         |             |           |                                                                                                                                                                                         |
|         | Visibility/Lighting/Signalling  | Rain/brightness sensor | √            | √        | √         |             |           |                                                                                                                                                                                         |
|         | Built-in systems interface(BSI) |                        | √            | √        | √         |             |           | 1. Resetting to zero of the service mileage                                                                                                                                             |
|         | Petrol engine                   | 5FS MEV17.4            | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                                                                                            |
|         |                                 | 5FV MED17.4            | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                                                                                            |
|         |                                 | 5FW MEV17.4            | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                                                                                            |
|         |                                 | 5FX MED17.4            | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                                                                                            |
|         |                                 | 5FV MED 17.4.2 Euro5   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                                                                                            |
|         |                                 | 9HZ EDC16C3            | √            | √        | √         | √           | √         | 1.Configuration<br>2.Particulate filter regeneration<br>3.Replacement particle emission filter<br>4.Replacement of the particle emission filter and work on the additive adding circuit |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System | ECU type       | Functions    |          |           |             |           |                                                                                                                                                                                                                |
|---------|--------|----------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |        |                | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                                               |
| 3008    |        | 9HL HDI SID807 | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3. Programming of the total quantity of additive injected into the particulate emission filter                                           |
|         |        | 9HR HDI SID807 | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3. Programming of the total quantity of additive injected into the particulate emission filter                                           |
|         |        | RHE DCM3.5     | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3.Replacement particle emission filter<br>4. Programming of the total quantity of additive injected into the particulate emission filter |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                                | ECU type                        | Functions    |          |           |             |           |                                                                                                                                                                                                                |
|---------|---------------------------------------|---------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |                                       |                                 | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                                               |
|         |                                       | RHH DCM3.5                      | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3.Replacement particle emission filter<br>4. Programming of the total quantity of additive injected into the particulate emission filter |
|         | AT ECU                                | CFC300P gearbox                 | √            | √        | √         | √           | √         |                                                                                                                                                                                                                |
|         |                                       | AM6 Euro5 automatic gearbox     | √            | √        | √         | √           | √         | 1.Configuration<br>2. Oil wear counter                                                                                                                                                                         |
|         |                                       | AT6 Euro5 automatic gearbox     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Oil wear counter                                                                                                                                                                          |
|         | Vehicle protection/Management of      | Alarm                           | √            | √        | √         | √           | √         | 1.Configuration                                                                                                                                                                                                |
|         |                                       | Driver's door control panel     | √            | √        | √         | √           | √         |                                                                                                                                                                                                                |
|         | Inform the driver/Audio/Communication | Multifunction display (EMF)     | √            | √        | √         | √           | √         | 1.Configuration                                                                                                                                                                                                |
|         |                                       | Steering wheel switching module | √            | √        | √         | √           | √         |                                                                                                                                                                                                                |
|         |                                       | Radio                           | √            | √        | √         | √           | √         | 1.Configuration                                                                                                                                                                                                |
|         |                                       | Instrument panel                | √            | √        | √         | √           | √         | 1.Configuration                                                                                                                                                                                                |
|         |                                       | CD player                       | √            | √        | √         |             | √         |                                                                                                                                                                                                                |
|         |                                       | Battery charge status unit      | √            | √        | √         | √           |           | 1.Configuration                                                                                                                                                                                                |
|         |                                       | Telematics                      | √            | √        | √         | √           | √         | 1.Configuration                                                                                                                                                                                                |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                         | ECU type                  | Functions    |          |           |             |           |                                                         |
|---------|--------------------------------|---------------------------|--------------|----------|-----------|-------------|-----------|---------------------------------------------------------|
|         |                                |                           | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                        |
|         | Driving assistance/Comfort     | Air conditioning          | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         |                                | Parking assistance        | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         |                                | Under inflation detection | √            | √        | √         | √           |           |                                                         |
|         | Air bag                        | Airbag ECU                | √            | √        | √         | √           |           | 1.Locking<br>2.Unlocking<br>3. Configuration            |
|         |                                | BSM                       | √            | √        | √         | √           | √         |                                                         |
|         |                                | BSR                       | √            | √        | √         | √           | √         |                                                         |
|         |                                | GEP                       | √            | √        | √         | √           | √         |                                                         |
|         |                                | POMPE_MUX_MGI             | √            | √        | √         | √           | √         |                                                         |
|         |                                | POMPE_MUX_TI              | √            | √        | √         | √           | √         |                                                         |
|         |                                | FSE                       | √            | √        | √         | √           | √         |                                                         |
|         |                                | TNB                       | √            |          |           |             | √         |                                                         |
|         | Visibility/Lighting/Signalling | Rain sensor               | √            | √        | √         |             |           |                                                         |
|         |                                | Headlamp height corrector | √            | √        | √         | √           | √         | 1.Configuration<br>2.Calibration                        |
| 306     | Petrol engine                  | HDY BOSCH MA3.1           | √            | √        | √         |             |           |                                                         |
|         |                                | KFX MM1AP                 | √            | √        | √         | √           |           |                                                         |
|         |                                | HDZ BOSCH MA3.1           | √            | √        | √         |             |           |                                                         |
|         |                                | RFS MM1AP                 | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Ignition advance setting |
|         | Air bag                        | Air bag and seat belt     | √            | √        | √         |             |           | 1.Marchting                                             |
|         |                                | KFX BOSCH MP7.3           | √            | √        | √         | √           | √         | 1.Initialization Adaption                               |
|         |                                | NFZ BOSCH MP7.2           | √            | √        | √         | √           | √         |                                                         |
|         |                                | KFX MM1AP                 | √            | √        | √         | √           |           |                                                         |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle           | System        | ECU type              | Functions    |          |           |             |           |                                                                                         |
|-------------------|---------------|-----------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------|
|                   |               |                       | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                        |
| 306REMOD<br>ELAGE | Petrol engine | KFX SAGEM SL96        | √            | √        | √         | √           | √         | 1.Initialization Adaption                                                               |
|                   |               | LFY BOSCH MP7.3       | √            | √        | √         | √           | √         | 1.Initialization Adaption                                                               |
|                   |               | LFY SAGEM SL96        | √            | √        | √         | √           | √         | 1.Initialization Adaption                                                               |
|                   |               | NFT BOSCH M7.4.4      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                            |
|                   |               | KFW SAGEM S2000       | √            | √        | √         | √           | √         | 1.Marchting<br>2.Initialization Adaption                                                |
|                   |               | K6D SAGEM S2000       | √            | √        | √         | √           | √         | 1.Marchting<br>2.Initialization Adaption                                                |
|                   |               | NFV BOSCH M7.4.4      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                            |
|                   |               | RFS MM1AP             | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Ignition advance setting                                 |
|                   | Diesel engine | WJY LUCAS DCN2        | √            | √        | √         | √           | √         | 1.Configuration                                                                         |
|                   |               | WJZ LUCAS DCN2        | √            | √        | √         | √           |           |                                                                                         |
|                   |               | RHY BOSCH EDC15C2     | √            | √        | √         | √           |           |                                                                                         |
|                   | ABS           | ABS BOSCH 5.3         | √            | √        | √         | √           | √         |                                                                                         |
|                   | A/T           | AL4 Gearbox           | √            | √        | √         | √           | √         | 1.Marchting<br>2.Initialization Adaption<br>3.Accelebration pedal<br>4.Oil wear counter |
|                   | Air bag       | Air bag and seat belt | √            | √        | √         |             |           | 1.Marchting                                                                             |
|                   | Left Air bag  | Left side airbag      | √            | √        | √         |             |           | 1.Marchting                                                                             |
|                   | Right Air bag | Right side airbag     | √            | √        | √         |             |           | 1.Marchting                                                                             |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type                               | Functions    |          |           |             |           |                                                                              |
|---------|---------------|----------------------------------------|--------------|----------|-----------|-------------|-----------|------------------------------------------------------------------------------|
|         |               |                                        | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                             |
|         | BSI           |                                        | √            | √        | √         | √           | √         | 1.Marching<br>2.key program                                                  |
|         | Petrol engine | NFU BOSCH ME744                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                          |
|         |               | KFW SAGEM S2000                        | √            | √        | √         | √           | √         | 1.Marching<br>2.Initialization Adaption                                      |
|         |               | K6D SAGEM S2000                        | √            | √        | √         | √           | √         | 1.Marching<br>2.Initialization Adaption                                      |
|         |               | N6A BOSCH ME7.4.4                      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                          |
|         |               | N6A BOSCH ME7.4.5                      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Programming/Pairing |
|         |               | NFU BOSCH ME7.4.5                      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Programming/Pairing |
|         |               | RFN MM48P(Mechanical throttle housing) | √            | √        | √         | √           | √         | 1..Initialization Adaption                                                   |
|         |               | RFN MM4MP2(Motorised butterfly)        | √            | √        | √         | √           | √         |                                                                              |
|         |               |                                        |              |          |           |             |           |                                                                              |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type            | Functions    |          |           |             |           |                                                                                                                      |
|---------|---------------|---------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------|
|         |               |                     | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                     |
|         |               | KFU MM6LP           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                         |
|         |               | RFK MM6LP           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                         |
|         |               | RFN MM6LP           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                         |
|         | Diesel engine | RHZ BOSCH EDC15C2   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service                                                                                         |
|         |               | RHS BOSCH EDC15C2   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service                                                                                         |
|         |               | 9HY BOSCH EDC16C3   | √            | √        | √         | √           |           | 1.Injection classification                                                                                           |
|         |               | RHY SIEMENS SID 801 | √            | √        | √         | √           | √         | 1.Configuration                                                                                                      |
|         |               | RHY BOSCH EDC15C2   | √            | √        | √         | √           |           |                                                                                                                      |
|         |               | 9HZ BOSCH EDC16C3   | √            | √        | √         | √           | √         | 1.Injection classification<br>2.Forced regeneration<br>vehicle stationary<br>3.Forced regeneration<br>vehicle moving |
|         |               | 9HT BOSCH EDC16C3   | √            | √        | √         | √           | √         | 1.Injection classification<br>2.Forced regeneration<br>vehicle stationary<br>3.Forced regeneration<br>vehicle moving |
|         |               | 8HZ BOSCH EDC16C3   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification                                                                        |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System | ECU type                   | Functions    |          |           |             |           |                                                                                                                |
|---------|--------|----------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------|
|         |        |                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                               |
| 307 VAN |        | 9HX BOSCH EDC16C3          | √            | √        | √         | √           | √         | 1.Injection classification<br>2.Forced regeneration vehicle stationary<br>3.Forced regeneration vehicle moving |
|         |        | 9HY BOSCH EDC16C3<br>EUR04 | √            | √        | √         | √           | √         | 1.Injection classification<br>2.Forced regeneration vehicle stationary<br>3.Forced regeneration vehicle moving |
|         |        | RHR SIEMENS SID 803        | √            | √        | √         | √           | √         | 1.Configuration<br>2.After-sales particulate emission filter repair operation                                  |
|         |        | RHL SIEMENS SID 803        | √            | √        | √         | √           | √         | 1.Configuration<br>2.After-sales particulate emission filter repair operation                                  |
|         | ABS    | TEVES MK60 ABS             | √            | √        | √         | √           |           |                                                                                                                |
|         |        | ABS BOSCH 8                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                                                                  |
|         |        | ESP BOSCH 5.7              | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal                                             |



## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System              | ECU type                                   | Functions    |          |           |             |           |                                                                    |
|---------|---------------------|--------------------------------------------|--------------|----------|-----------|-------------|-----------|--------------------------------------------------------------------|
|         |                     |                                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                   |
|         |                     | ABS BOSCH 5.3                              | √            | √        | √         | √           | √         |                                                                    |
|         |                     | ESP BOSCH 8                                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal |
|         | A/T                 | BVA AL4                                    | √            | √        | √         | √           | √         | 1.Marchting<br>2.Oil wear counter                                  |
|         |                     | ZF 4HP20 AT                                | √            | √        | √         | √           |           |                                                                    |
|         | Air bag             | SAC CENTRAL                                | √            | √        | √         | √           |           |                                                                    |
|         |                     | Air bags(SAC CENT SIEMENS)                 | √            | √        | √         |             |           | 1.Configuration                                                    |
|         | Driver information  | Display/Telematics/AMF                     | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                     | Display/Telematics/RT3                     | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                     | parking assistance                         | √            | √        | √         | √           | √         |                                                                    |
|         |                     | Radio                                      | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                     | CD player                                  | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                     | Switch unit under steering wheel(COM 2000) | √            | √        | √         | √           |           |                                                                    |
|         |                     | Instrument panel                           | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         | Visibility/Lighting | Driving school                             | √            |          |           | √           | √         |                                                                    |
|         | switch control      | Driver's door module                       | √            | √        | √         | √           |           |                                                                    |
|         |                     | Passenger door module                      | √            | √        | √         | √           |           |                                                                    |
|         |                     | Diesel fuel additive control unit          | √            | √        | √         | √           | √         | 1.Marchting                                                        |

## PEUGEOT V42.61 Diagnostics List (Note:For reference only)

| Vehicle | System                          | ECU type                           | Functions    |          |           |             |           |                                                                              |
|---------|---------------------------------|------------------------------------|--------------|----------|-----------|-------------|-----------|------------------------------------------------------------------------------|
|         |                                 |                                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                             |
|         |                                 | Electric pump unit(power steering) | √            | √        | √         | √           |           |                                                                              |
|         |                                 | Alarm                              | √            | √        | √         | √           | √         | 1.Configuration                                                              |
|         | A/C                             | Air conditioning                   | √            | √        | √         | √           | √         | 1.Configuration                                                              |
|         | Built-in systems interface(BSI) |                                    | √            | √        | √         | √           |           | 1.keys of programming<br>2. Resetting to zero of the service mileage         |
|         |                                 | N6A BOSCH ME745                    | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Programming/Pairing |
|         |                                 | NFU BOSCH ME745                    | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Programming/Pairing |
|         |                                 | RFN MM6LP                          | √            | √        | √         | √           |           |                                                                              |
|         |                                 | N6B BOSCH_ME745                    | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Programming/Pairing |
|         |                                 | KFU MM6LP                          | √            | √        | √         | √           |           |                                                                              |
|         |                                 | RFK MM6LP                          | √            | √        | √         | √           | √         | 1.Configuration                                                              |
|         |                                 | RFJ MM6LPB                         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Autoadaptive<br>3.Programming / Pairing                 |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type                   | Functions    |          |           |             |           |                                                                                         |
|---------|---------------|----------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------|
|         |               |                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                        |
|         | Petrol engine | KFU MM6LPC                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                            |
|         |               | NFU_Or_N6A_Or_N6B_ME749    | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |
|         |               | NFU_Or_N6A_ME749_FLEX_FUEL | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |
|         |               | MM6KP Bio flex             | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the ethanol content |
|         |               | MM6KP Non Bio Flex         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the ethanol content |
|         |               | RHY BOSCH EDC15C2          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Forced PF regeneration                                             |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System | ECU type                   | Functions    |          |           |             |           |                                                                                                                                                                                         |
|---------|--------|----------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |        |                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                        |
|         |        | RHZ BOSCH EDC15C2          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Forced PF regeneration                                                                                                                                             |
|         |        | 9HV BOSCH EDC16C3          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Particulate filter regeneration<br>3.Replacement particle emission filter<br>4.Replacement of the particle emission filter and work on the additive adding circuit |
|         |        | 9HX BOSCH EDC16C3          | √            | √        | √         | √           |           | 1.Configuration<br>2.Injection classification                                                                                                                                           |
|         |        | 9HY BOSCH EDC16C3<br>EURO3 | √            | √        | √         | √           |           | 1.Configuration<br>2.Injection classification                                                                                                                                           |
|         |        | 9HY BOSCH EDC16C3<br>EURO4 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification                                                                                                                                           |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type            | Functions    |          |           |             |           |                                                                                                                                                                                         |
|---------|---------------|---------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |               |                     | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                        |
| 307 CAN | Diesel engine | 9HZ BOSCH EDC16C3   | √            | √        | √         |             |           | 1.Configuration<br>2.Particulate filter regeneration<br>3.Replacement particle emission filter<br>4.Replacement of the particle emission filter and work on the additive adding circuit |
|         |               | 9HT BOSCH EDC16C3   | √            | √        | √         | √           |           | 1.Configuration<br>2.Injection classification                                                                                                                                           |
|         |               | RHR SIEMENS SID 803 | √            | √        | √         | √           | √         | 1.Configuration<br>2.After-sales particulate emission filter repair operation                                                                                                           |
|         |               | RHL SIEMENS SID 803 | √            | √        | √         | √           | √         | 1.Configuration<br>2.After-sales particulate emission filter repair operation                                                                                                           |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System | ECU type                | Functions    |          |           |             |           |                                                                                                                                                                                                                |
|---------|--------|-------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |        |                         | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                                               |
|         |        | RHL DCM3.4              | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3.Replacement particle emission filter<br>4. Programming of the total quantity of additive injected into the particulate emission filter |
|         |        | RHR DCM3.4              | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3.Replacement particle emission filter<br>4. Programming of the total quantity of additive injected into the particulate emission filter |
|         | AT ECU | AM6L4 automatic gearbox | √            | √        | √         | √           | √         | 1.Configuration<br>2. Oil wear counter                                                                                                                                                                         |
|         |        | AL4 automatic gearbox   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adapation                                                                                                                                                                  |
|         |        | ABS8 BOSCH              | √            | √        | √         | √           | √         | 1.Configuration<br>2. Bleeding                                                                                                                                                                                 |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                                | ECU type                        | Functions    |          |           |             |           |                                                                    |
|---------|---------------------------------------|---------------------------------|--------------|----------|-----------|-------------|-----------|--------------------------------------------------------------------|
|         |                                       |                                 | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                   |
|         | Active and passive safety             | ABS 8.1                         | √            | √        | √         | √           | √         | 1.Configuration<br>2. Bleeding                                     |
|         |                                       | ESP 8.1                         | √            | √        | √         | √           | √         | 1.Configuration<br>2. Bleeding                                     |
|         |                                       | ESP BOSCH 8                     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal |
|         |                                       | Airbag ECU                      | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock                               |
|         | Driving assistance/Comfort            | Parking assistance              | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                       | Air conditioning                | √            | √        | √         | √           | √         |                                                                    |
|         |                                       | Power steering                  | √            | √        | √         | √           |           |                                                                    |
|         |                                       | Under inflation detection       | √            | √        | √         | √           |           |                                                                    |
|         | Inform the driver/Audio/Communication | Muti-function display           | √            | √        | √         | √           |           |                                                                    |
|         |                                       | Radio                           | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                       | CD player                       | √            | √        | √         |             | √         |                                                                    |
|         |                                       | Hands Free Kit                  | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                       | Instrument panel                | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                       | Steering wheel switching module | √            | √        | √         | √           |           |                                                                    |
|         |                                       | Telamatics                      | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         | Vehicle protection/Management of      | Alarm                           | √            | √        | √         |             |           |                                                                    |
|         |                                       | Driver's door module            | √            | √        | √         | √           | √         |                                                                    |
|         |                                       | Passenger door module           | √            | √        | √         | √           | √         |                                                                    |

## PEUGEOT V42.61 Diagnostics List (Note:For reference only)

| Vehicle | System                          | ECU type                           | Functions    |          |           |             |           |                                              |
|---------|---------------------------------|------------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------|
|         |                                 |                                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                             |
|         | accesses                        | Retractable roof                   | √            | √        | √         |             |           |                                              |
|         |                                 | Sun roof                           | √            | √        | √         |             |           |                                              |
|         | Visibility/Lighting/Signalling  | Rain/Brightness sensor             | √            | √        | √         |             |           |                                              |
|         |                                 | Right headlamp beam corrector      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Calibration             |
|         |                                 | Left headlamp beam level corrector | √            | √        | √         | √           | √         | 1.Configuration<br>2.Calibration             |
|         |                                 | Driving school module              | √            | √        |           |             | √         |                                              |
|         |                                 | Steering wheel switching module    | √            | √        | √         | √           |           |                                              |
|         | Built-in systems interface(BSI) |                                    | √            | √        | √         |             |           | 1. Resetting to zero of the service mileage  |
|         |                                 | 5FT MED17.4                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |                                 | 5FW MEV17.4                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |                                 | 5FX MED17.4                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |                                 | 5FV MED17.4                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |                                 | 5FS MEV17.4                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |                                 | 8FR MEV17.4                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |



## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type           | Functions    |          |           |             |           |                                                                                         |
|---------|---------------|--------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------|
|         |               |                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                        |
|         | Petrol engine | 5FY MED17.4        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                            |
|         |               | 8FS MEV17.4        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                            |
|         |               | N6A ME745          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                                     |
|         |               | N6B ME745          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                                     |
|         |               | NFU ME745          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                                     |
|         |               | NFU ME749 Bio Flex | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |
|         |               | MM6KP Bio flex     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the ethanol content |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System | ECU type           | Functions    |          |           |             |           |                                                                                                                                                                                         |
|---------|--------|--------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |        |                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                        |
|         |        | MM6KP Non Bio Flex | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the ethanol content                                                                                                 |
|         |        | RFJ MM6LPB         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Autoadaptive                                                                                                                                                       |
|         |        | 5FU MEVD17.4.2     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                                                                                            |
|         |        | EP6C 5FS MEV17.4.2 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                                                                                            |
|         |        | EP3C 8FP MEV17.4.2 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                                                                                            |
|         |        | EP3C 8FR MEV17.4.2 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                                                                                            |
|         |        | 9HV EDC16C3        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Particulate filter regeneration<br>3.Replacement particle emission filter<br>4.Replacement of the particle emission filter and work on the additive adding circuit |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System | ECU type       | Functions    |          |           |             |           |                                                                                                                                                                                         |
|---------|--------|----------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |        |                | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                        |
|         |        | 9HX EDC16C3    | √            | √        | √         | √           |           | 1.Configuration<br>2.Injection classification                                                                                                                                           |
|         |        | 9HY EDC16C3    | √            | √        | √         | √           |           | 1.Configuration<br>2.Injection classification                                                                                                                                           |
|         |        | 9HZ EDC16C3    | √            | √        | √         | √           |           | 1.Configuration<br>2.Particulate filter regeneration<br>3.Replacement particle emission filter<br>4.Replacement of the particle emission filter and work on the additive adding circuit |
|         |        | 9HL HDI SID807 | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3. Programming of the total quantity of additive injected into the particulate emission filter                    |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System | ECU type           | Functions    |          |           |             |           |                                                                                                                                                                      |
|---------|--------|--------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |        |                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                     |
|         |        | 9HR HDI SID807     | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3. Programming of the total quantity of additive injected into the particulate emission filter |
|         |        | 9HR HDI SID807 BR2 | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3. Programming of the total quantity of additive injected into the particulate emission filter |
|         |        | 9HL HDI SID807 BR2 | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3. Programming of the total quantity of additive injected into the particulate emission filter |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type           | Functions    |          |           |             |           |                                                                                                                                                                      |
|---------|---------------|--------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |               |                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                     |
| 308     | Diesel engine | 9HG HDI SID807 BR2 | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3. Programming of the total quantity of additive injected into the particulate emission filter |
|         |               | 9HP EDC17C10       | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3. Programming of the total quantity of additive injected into the particulate emission filter |
|         |               | 8HR EDC17C10       | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3. Programming of the total quantity of additive injected into the particulate emission filter |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System | ECU type   | Functions    |          |           |             |           |                                                                                                                                                                                                                |
|---------|--------|------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |        |            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                                               |
|         |        | RHE DCM3.5 | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3.Replacement particle emission filter<br>4. Programming of the total quantity of additive injected into the particulate emission filter |
|         |        | RHH DCM3.5 | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3.Replacement particle emission filter<br>4. Programming of the total quantity of additive injected into the particulate emission filter |
|         |        | RHL DCM3.4 | √            | √        | √         | √           | √         | 1.Configuration<br>2.particle emission filter<br>3.DPF                                                                                                                                                         |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System | ECU type         | Functions    |          |           |             |           |                                                                                                                                                                                                                |
|---------|--------|------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |        |                  | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                                               |
|         |        | RHR DCM3.4       | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3.Replacement particle emission filter<br>4. Programming of the total quantity of additive injected into the particulate emission filter |
|         |        | RHF DCM3.4       | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3.Replacement particle emission filter<br>4. Programming of the total quantity of additive injected into the particulate emission filter |
|         |        | 9HP EDC17C10_BR2 | √            | √        | √         | √           | √         | 1.Configuration Injectors<br>2. Particle emission filter forced regeneration<br>3.Replacement particle emission filter                                                                                         |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                                         | ECU type                         | Functions    |          |           |             |           |                                                                                                                        |
|---------|------------------------------------------------|----------------------------------|--------------|----------|-----------|-------------|-----------|------------------------------------------------------------------------------------------------------------------------|
|         |                                                |                                  | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                       |
|         |                                                | 9HJ EDC17C10_BR2                 | √            | √        | √         | √           | √         | 1.Configuration Injectors<br>2. Particle emission filter forced regeneration<br>3.Replacement particle emission filter |
|         | A/T                                            | CFC300P gearbox                  | √            | √        | √         | √           | √         |                                                                                                                        |
|         |                                                | AM6C gearbox                     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Oil wear counter                                                                                  |
|         |                                                | AL4 gearbox                      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                           |
|         |                                                | AM6 Euro5 automatic gearbox      | √            | √        | √         | √           | √         | 1.Configuration<br>2. Oil wear counter                                                                                 |
|         |                                                | AT6 Euro5 automatic gearbox      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Oil wear counter                                                                                  |
|         |                                                | Multiplexed additive adding pump | √            | √        | √         |             |           |                                                                                                                        |
|         | Vehicle protection /<br>Management of accesses | Alarm                            | √            | √        | √         | √           | √         | 1.Configuration                                                                                                        |
|         |                                                | Driver's door module             | √            | √        | √         | √           | √         |                                                                                                                        |
|         | Active and passive safety                      | ABS 8.1                          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                                                                          |
|         |                                                | ESP 8.1                          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                                                                          |
|         |                                                | Air-bag                          | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock                                                                                   |
|         |                                                | Lane departure warning           | √            | √        | √         |             |           |                                                                                                                        |



## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                                | ECU type                                        | Functions    |          |           |             |           |                  |
|---------|---------------------------------------|-------------------------------------------------|--------------|----------|-----------|-------------|-----------|------------------|
|         |                                       |                                                 | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function |
|         | Driving assistance/comfort            | Air conditioning                                | √            | √        | √         | √           | √         | 1.Configuration  |
|         |                                       | Electropump assembly                            | √            | √        | √         |             |           |                  |
|         |                                       | Drivers seat memory unit                        | √            | √        | √         |             |           |                  |
|         |                                       | Parking assistance                              | √            | √        | √         | √           | √         | 1.Configuration  |
|         |                                       | Under inflation detection                       | √            | √        | √         | √           |           |                  |
|         | Inform the driver/Audio/Communication | Multifunction screen                            | √            | √        | √         |             |           |                  |
|         |                                       | Radio                                           | √            | √        | √         | √           | √         | 1.Configuration  |
|         |                                       | Instrument panel                                | √            | √        | √         | √           | √         | 1.Configuration  |
|         |                                       | Hands Free Kit                                  | √            | √        | √         | √           | √         | 1.Configuration  |
|         |                                       | Not Fastened warning light(TNB)                 | √            |          |           |             |           |                  |
|         |                                       | Telematics                                      | √            | √        | √         | √           | √         | 1.Configuration  |
|         |                                       | Steering wheel switching module                 | √            | √        | √         |             |           |                  |
|         |                                       | CD player                                       | √            | √        | √         |             | √         |                  |
|         |                                       | Audio amplifier                                 | √            | √        | √         |             |           |                  |
|         |                                       | Battery charge status unit                      | √            | √        | √         | √           |           | 1.Configuration  |
|         |                                       | Services Module                                 | √            | √        | √         |             |           |                  |
|         |                                       | BSM                                             | √            | √        | √         | √           | √         |                  |
|         |                                       | BSR                                             | √            | √        | √         | √           | √         |                  |
|         | Visibility/Lighting/Signalling        | Rain sensor                                     | √            | √        | √         |             |           |                  |
|         |                                       | Discharge bulb with directional dipped headlamp | √            | √        | √         |             |           |                  |
|         |                                       | Driving school module                           | √            | √        |           |             | √         |                  |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                          | ECU type    | Functions    |          |           |             |           | Special Function                                                                                                                                                                                               |
|---------|---------------------------------|-------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |                                 |             | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation |                                                                                                                                                                                                                |
|         | Built-in systems interface(BSI) |             | √            | √        | √         |             |           | 1. Resetting to zero of the service mileage                                                                                                                                                                    |
|         | Diesel engine                   | RHE DCM3.5  | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3.Replacement particle emission filter<br>4. Programming of the total quantity of additive injected into the particulate emission filter |
|         |                                 | RHH DCM3.5  | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3.Replacement particle emission filter<br>4. Programming of the total quantity of additive injected into the particulate emission filter |
|         |                                 | 5FS MEV17.4 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                                                                                                                   |
|         |                                 | 8FR MEV17.4 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                                                                                                                   |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type                    | Functions    |          |           |             |           |                                              |
|---------|---------------|-----------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------|
|         |               |                             | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                             |
| RCZ     | Petrol engine | 5FT MED17.4                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | 5FW MEV17.4                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | 5FX MED17.4                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | 5FY MED17.4                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | 8FS MEV17.4                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | 5FV MED17.4                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | 5FU MEVD17.4.2              | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | EP3C 8FP MEV17.4.2          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | EP3CM 8FP MEV17.4.2         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | EP3C 8FR MEV17.4.2          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | EP6C 5FS MEV17.4.2          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | AM6 Euro5 automatic gearbox | √            | √        | √         | √           |           |                                              |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                     | ECU type                                      | Functions    |          |           |             |           |                  |
|---------|----------------------------|-----------------------------------------------|--------------|----------|-----------|-------------|-----------|------------------|
|         |                            |                                               | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function |
|         | Gearbox                    | Multiplexed additive adding pump/Pompe mux TI | √            | √        | √         | √           |           |                  |
|         |                            | AT6 Euro5 automatic gearbox                   | √            | √        | √         | √           |           |                  |
|         | Driving assistance/Comfort | Heating/ventilation                           | √            | √        | √         | √           |           |                  |
|         |                            | Electropump assembly                          | √            | √        | √         | √           |           |                  |
|         |                            | Parking assistance                            | √            | √        | √         | √           |           |                  |
|         |                            | Pedestrian impact detection unit              | √            | √        | √         | √           |           |                  |
|         |                            | Under inflation detection                     | √            | √        | √         | √           |           |                  |
|         |                            | Moving panel deflector                        | √            | √        | √         | √           |           |                  |
|         |                            | Drivers seat memory unit                      | √            | √        | √         | √           |           |                  |
|         | Vehicle protection         | Alarm                                         | √            | √        | √         | √           |           |                  |
|         |                            | Driver's door control pad                     | √            | √        | √         | √           |           |                  |
|         | Active and passive safety  | Air-bag                                       | √            | √        | √         | √           |           |                  |
|         |                            | ESP8.1                                        | √            | √        | √         | √           |           |                  |
|         |                            | Battery charge status unit                    | √            | √        | √         | √           |           | 1.Configuration  |
|         |                            | CD player                                     | √            | √        | √         |             |           |                  |
|         |                            | Radio                                         | √            | √        | √         | √           |           |                  |
|         |                            | Portable unit                                 | √            | √        | √         | √           |           |                  |
|         |                            | Instrument panel                              | √            | √        | √         | √           |           |                  |
|         |                            | Multifunction screen(EMF_A)                   | √            | √        | √         | √           |           |                  |

## PEUGEOT V42.61 Diagnostics List (Note:For reference only)

| Vehicle | System                                | ECU type                                           | Functions    |          |           |             |           |                                                     |
|---------|---------------------------------------|----------------------------------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------|
|         |                                       |                                                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                    |
|         | Inform the driver/Audio/Communication | Multifunction screen(EMF_C)                        | √            | √        | √         | √           |           |                                                     |
|         |                                       | Not Fastened warning light(TNB)                    | √            |          |           |             |           |                                                     |
|         |                                       | Control panel dot matrix display                   | √            | √        | √         | √           |           |                                                     |
|         |                                       | Steering wheel switching module                    | √            | √        | √         | √           |           |                                                     |
|         |                                       | telematics/Radio navigation NG4                    | √            | √        | √         | √           |           |                                                     |
|         |                                       | Radio                                              | √            | √        | √         | √           |           |                                                     |
|         |                                       | Audio amplifier                                    | √            | √        | √         |             |           |                                                     |
|         |                                       | BSM                                                | √            | √        | √         | √           | √         |                                                     |
|         |                                       | BSR                                                | √            | √        | √         | √           | √         |                                                     |
|         | Visibility/Lighting/Signalling        | Discharge bulbs vertical and horizontal adjustment | √            | √        | √         | √           |           |                                                     |
|         |                                       | Windscreen wiper                                   | √            | √        | √         | √           |           |                                                     |
|         |                                       | Rain / brightness sensor                           | √            | √        | √         |             |           |                                                     |
|         |                                       | N6A ME7.4.4                                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives |
|         |                                       | N6B ME7.4.4                                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type                           | Functions    |          |           |             |           |                                                         |
|---------|---------------|------------------------------------|--------------|----------|-----------|-------------|-----------|---------------------------------------------------------|
|         |               |                                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                        |
| 405     | Petrol engine | NFU ME7.4.4                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives     |
|         |               | LFY BOSCH MP7.3                    | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption            |
|         |               | L6A SAGEM SL96                     | √            | √        | √         | √           |           |                                                         |
|         |               | 1600RD SL96                        | √            | √        | √         | √           |           |                                                         |
|         |               | LFZ SAGEM S2000                    | √            | √        | √         | √           | √         | 1.Initialization Adaption                               |
|         |               | NFU J35                            | √            | √        | √         | √           | √         | 1.Configuration                                         |
| 406     | Petrol engine | KFX SAGEM SL96                     | √            | √        | √         | √           | √         | 1.Initialization Adaption                               |
|         |               | LFY BOSCH MP7.3                    | √            | √        | √         | √           | √         | 1.Initialization Adaption                               |
|         |               | LFY BOSCH MP5.2                    | √            | √        | √         | √           |           |                                                         |
|         |               | LFX MM1AP                          | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Ignition advance setting |
|         |               | LFY SAGEM SL96                     | √            | √        | √         | √           | √         | 1.Initialization Adaption                               |
|         | Diesel engine | RHZ BOSCH EDC15C2                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service<br>3.DPF                   |
|         | Active safety | ABS BOSCH 5.3                      | √            | √        | √         | √           | √         |                                                         |
|         |               | Electronically managed suspension  | √            | √        | √         | √           |           |                                                         |
|         | A/T           | AL4 autoadaptive automatic gearbox | √            | √        | √         | √           |           |                                                         |
|         | Air bag       | Air bag and seat belt              | √            | √        | √         |             |           | 1.Marchting                                             |
|         | Left Air bag  | Left side airbag                   | √            | √        | √         |             |           | 1.Marchting                                             |

## PEUGEOT V42.61 Diagnostics List (Note:For reference only)

| Vehicle   | System                          | ECU type                           | Functions    |          |           |             |           |                                                                      |
|-----------|---------------------------------|------------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------|
|           |                                 |                                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                     |
|           | Right Air bag                   | Right side airbag                  | √            | √        | √         |             |           | 1.Marchting                                                          |
| 406 COUPE | Air bag                         | Air bag and seat belt              | √            | √        | √         |             |           | 1.Marchting                                                          |
|           | Left Air bag                    | Left side airbag                   | √            | √        | √         |             |           | 1.Marchting                                                          |
|           | Right Air bag                   | Right side airbag                  | √            | √        | √         |             |           | 1.Marchting                                                          |
|           | A/T                             | AL4 autoadaptive automatic Gearbox | √            | √        | √         | √           |           |                                                                      |
|           | ABS                             | BOSCH ABS5.3                       | √            | √        | √         | √           |           |                                                                      |
|           | Built-in systems interface(BSI) |                                    | √            | √        | √         | √           |           | 1.keys of programming<br>2. Resetting to zero of the service mileage |
|           | Petrol engine                   | XFX BOSCH ME 746                   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                         |
|           |                                 | LFY BOSCH MP5.2                    | √            | √        | √         | √           |           |                                                                      |
|           |                                 | LFX MM1AP                          | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Ignition advance setting              |
|           |                                 | LFY SAGEM SL96                     | √            | √        | √         | √           | √         | 1.Initialization Adaption                                            |
|           |                                 | LFY BOSCH MP7.3                    | √            | √        | √         | √           | √         | 1.Initialization Adaption                                            |
|           |                                 | 3FZ MM4MP2                         | √            | √        | √         | √           | √         |                                                                      |
|           |                                 | RFN MM48P                          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                         |
|           |                                 | R6F MM48P                          | √            | √        | √         | √           | √         | 1.Initialization Adaption                                            |
|           |                                 | RFR MM48P                          | √            | √        | √         | √           | √         | 1.Initialization Adaption                                            |
|           |                                 | 6FZ SAGEM S2000                    | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                         |
|           |                                 | RLZ SIEMENS IRIUS81                | √            | √        | √         | √           | √         | 1.Initialization Adaption                                            |

## PEUGEOT V42.61 Diagnostics List (Note:For reference only)

| Vehicle | System             | ECU type                                   | Functions    |          |           |             |           |                                       |
|---------|--------------------|--------------------------------------------|--------------|----------|-----------|-------------|-----------|---------------------------------------|
|         |                    |                                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                      |
| 406R    | Diesel engine      | RHY BOSCH EDC15C2                          | √            | √        | √         | √           |           | 1.DPF                                 |
|         |                    | 4HX BOSCH EDC15C2                          | √            | √        | √         | √           |           |                                       |
|         |                    | RHY SIEMENS SID 801                        | √            | √        | √         | √           | √         | 1.Configuration                       |
|         |                    | RHS BOSCH EDC15C2                          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service          |
|         |                    | RHZ BOSCH EDC15C2                          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service<br>3.DPF |
|         |                    | Diesel fuel additive control unit          | √            | √        | √         | √           | √         | 1.Configuration                       |
|         | ABS                | ESP BOSCH 5.3                              | √            | √        | √         | √           |           |                                       |
|         |                    | ABS BOSCH 5.3                              | √            | √        | √         | √           | √         |                                       |
|         |                    | Alarm                                      | √            | √        | √         | √           | √         | 1.Configuration                       |
|         |                    | Rain/brightness sensor                     | √            | √        | √         |             |           |                                       |
|         | A/C                | Air conditioning                           | √            | √        | √         | √           | √         |                                       |
|         | Driver information | Multi-function display                     | √            | √        | √         | √           | √         | 1.Configuration                       |
|         |                    | Radio                                      | √            | √        | √         | √           | √         | 1.Configuration                       |
|         |                    | CD player                                  | √            | √        | √         | √           | √         |                                       |
|         |                    | On-board navigation system                 | √            | √        | √         | √           |           |                                       |
|         |                    | Switch unit under steering wheel(COM 2000) | √            | √        | √         | √           |           |                                       |
|         |                    | Instrument panel                           | √            | √        | √         | √           | √         | 1.Configuration                       |
|         | A/T                | AL4 autoadaptive automatic gearbox         | √            | √        | √         | √           |           |                                       |



## PEUGEOT V42.61 Diagnostics List (Note:For reference only)

| Vehicle | System                          | ECU type                     | Functions    |          |           |             |           |                                                                      |
|---------|---------------------------------|------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------|
|         |                                 |                              | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                     |
|         | Air bag                         | Air bags(SAC-CENT-AUTOLIV-2) | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock                                 |
|         |                                 | Air bag and seat belt        | √            | √        | √         |             |           | 1.Marchting                                                          |
|         |                                 | Left side airbag             | √            | √        | √         |             |           | 1.Marchting                                                          |
|         |                                 | Right side airbag            | √            | √        | √         |             |           | 1.Marchting                                                          |
|         | Built-in systems interface(BSI) |                              | √            | √        | √         | √           |           | 1.keys of programming<br>2. Resetting to zero of the service mileage |
|         | Petrol engine                   | XFX BOSCH ME 746             | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                         |
|         |                                 | LFY BOSCH MP5.2              | √            | √        | √         | √           |           |                                                                      |
|         |                                 | LFX MM1AP                    | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Ignition advance setting              |
|         |                                 | LFY SAGEM SL96               | √            | √        | √         | √           | √         | 1.Initialization Adaption                                            |
|         |                                 | LFY BOSCH MP7.3              | √            | √        | √         | √           | √         | 1.Initialization Adaption                                            |
|         |                                 | 3FZ MM4MP2                   | √            | √        | √         | √           | √         |                                                                      |
|         |                                 | RFN MM48P                    | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                         |
|         |                                 | R6F MM48P                    | √            | √        | √         | √           | √         | 1.Initialization Adaption                                            |
|         |                                 | RFR MM48P                    | √            | √        | √         | √           | √         | 1.Initialization Adaption                                            |
|         |                                 | 6FZ SAGEM S2000              | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                         |
|         |                                 | RLZ SIEMENS IRIUS81          | √            | √        | √         | √           | √         | 1.Initialization Adaption                                            |
|         |                                 | RHY BOSCH EDC15C2            | √            | √        | √         | √           |           | 1.DPF                                                                |
|         |                                 | 4HX BOSCH EDC15C2            | √            | √        | √         | √           |           |                                                                      |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle       | System             | ECU type                                   | Functions    |          |           |             |           |                                       |
|---------------|--------------------|--------------------------------------------|--------------|----------|-----------|-------------|-----------|---------------------------------------|
|               |                    |                                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                      |
| 406R<br>COUPE | Diesel engine      | RHY SIEMENS SID 801                        | √            | √        | √         | √           | √         | 1.Configuration                       |
|               |                    | RHS BOSCH EDC15C2                          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service<br>3.DPF |
|               |                    | RHZ BOSCH EDC15C2                          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service<br>3.DPF |
|               |                    | Diesel fuel additive control unit          | √            | √        | √         | √           | √         | 1.Configuration                       |
|               | ABS                | ESP BOSCH 5.3                              | √            | √        | √         | √           |           |                                       |
|               |                    | ABS BOSCH 5.3                              | √            | √        | √         | √           | √         |                                       |
|               |                    | Alarm                                      | √            | √        | √         | √           | √         | 1.Configuration                       |
|               |                    | Rain/brightness sensor                     | √            | √        | √         |             |           |                                       |
|               | A/C                | Air conditioning                           | √            | √        | √         | √           | √         |                                       |
|               | Driver information | Multi-function display                     | √            | √        | √         | √           | √         | 1.Configuration                       |
|               |                    | Radio                                      | √            | √        | √         | √           | √         | 1.Configuration                       |
|               |                    | CD player                                  | √            | √        | √         | √           | √         |                                       |
|               |                    | On-board navigation system                 | √            | √        | √         | √           |           |                                       |
|               |                    | Switch unit under steering wheel(COM 2000) | √            | √        | √         | √           |           |                                       |
|               |                    | Instrument panel                           | √            | √        | √         | √           | √         |                                       |
|               | A/T                | AL4 autoadaptive automatic gearbox         | √            | √        | √         | √           |           |                                       |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                          | ECU type                     | Functions    |          |           |             |           |                                                                                                                                                                                                                |
|---------|---------------------------------|------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |                                 |                              | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                                               |
|         | Air bag                         | Air bags(SAC-CENT-AUTOLIV-2) | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock                                                                                                                                                                           |
|         |                                 | Air bag and seat belt        | √            | √        | √         |             |           | 1.Marchting                                                                                                                                                                                                    |
|         |                                 | Left side airbag             | √            | √        | √         |             |           | 1.Marchting                                                                                                                                                                                                    |
|         |                                 | Right side airbag            | √            | √        | √         |             |           | 1.Marchting                                                                                                                                                                                                    |
|         | Built-in systems interface(BSI) |                              | √            | √        | √         |             |           | 1. Resetting to zero of the service mileage                                                                                                                                                                    |
|         |                                 | RHR SIEMENS SID 803          | √            | √        | √         | √           | √         | 1.Configuration<br>2.After-sales particulate emission filter repair operation                                                                                                                                  |
|         |                                 | RHL SIEMENS SID 803          | √            | √        | √         | √           | √         | 1.Configuration<br>2.After-sales particulate emission filter repair operation                                                                                                                                  |
|         |                                 | RHL DCM3.4                   | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3.Replacement particle emission filter<br>4. Programming of the total quantity of additive injected into the particulate emission filter |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System | ECU type   | Functions    |          |           |             |           |                                                                                                                                                                                                                |
|---------|--------|------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |        |            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                                               |
|         |        | RHR DCM3.4 | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3.Replacement particle emission filter<br>4. Programming of the total quantity of additive injected into the particulate emission filter |
|         |        | RHF DCM3.4 | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3.Replacement particle emission filter<br>4. Programming of the total quantity of additive injected into the particulate emission filter |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System | ECU type            | Functions    |          |           |             |           |                                                                                                                                                                                                                |
|---------|--------|---------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |        |                     | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                                               |
|         |        | RHH DCM3.5          | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3.Replacement particle emission filter<br>4. Programming of the total quantity of additive injected into the particulate emission filter |
|         |        | UHZ SIEMENS SID 201 | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3.Replacement particle emission filter<br>4. Programming of the total quantity of additive injected into the particulate emission filter |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type            | Functions    |          |           |             |           |                                                                                                                                                                                                        |
|---------|---------------|---------------------|--------------|----------|-----------|-------------|-----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |               |                     | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                                       |
|         | Diesel engine | 4HP BOSCH EDC16CP39 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification configuration<br>3.Particle Emission filter forced regeneration<br>4.Replacement of the particle emission filter and work on the additive adding circuit |
|         |               | 4HR BOSCH EDC16CP39 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification configuration<br>3.Particle Emission filter forced regeneration<br>4.Replacement of the particle emission filter and work on the additive adding circuit |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System | ECU type                         | Functions    |          |           |             |           |                                                                                                                                                                                                        |
|---------|--------|----------------------------------|--------------|----------|-----------|-------------|-----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |        |                                  | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                                       |
| 407     |        | 4HS BOSCH EDC16CP39              | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification configuration<br>3.Particle Emission filter forced regeneration<br>4.Replacement of the particle emission filter and work on the additive adding circuit |
|         |        | 4HT BOSCH EDC16CP39              | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification configuration<br>3.Particle Emission filter forced regeneration<br>4.Replacement of the particle emission filter and work on the additive adding circuit |
|         |        | 9HT BOSCH EDC16C3                | √            | √        | √         | √           | √         | 1.Injection classification<br>2.Forced regeneration vehicle stationary<br>3.Forced regeneration vehicle moving                                                                                         |
|         |        | 9HY BOSCH EDC16C3<br>EUR03 (CAN) | √            | √        | √         |             |           | 1.Injection classification                                                                                                                                                                             |

## PEUGEOT V42.61 Diagnostics List (Note:For reference only)

| Vehicle | System | ECU type                         | Functions    |          |           |             |           |                                                                                                                      |
|---------|--------|----------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------|
|         |        |                                  | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                     |
|         |        | 9HY BOSCH EDC16C3<br>EUR03 (KWP) | √            | √        | √         | √           | √         | 1.Injection classification<br>2.Forced regeneration<br>vehicle stationary<br>3.Forced regeneration<br>vehicle moving |
|         |        | 9HZ BOSCH EDC16C3                | √            | √        | √         | √           | √         | 1.Injection classification<br>2.Forced regeneration<br>vehicle stationary<br>3.Forced regeneration<br>vehicle moving |
|         |        | EDC17CP11                        | √            | √        | √         | √           | √         | 1.Injection classification<br>2.Forced regeneration<br>vehicle stationary<br>3.Forced regeneration<br>vehicle moving |
|         |        | 3FZ MM6LP                        | √            | √        | √         | √           | √         | 1.Configuration                                                                                                      |
|         |        | RFJ MM6LPB                       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Autoadaptive<br>3.Programming / Pairing                                                         |
|         |        | 3FY MM6LPB                       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Autoadaptive<br>3.Programming / Pairing                                                         |
|         |        | 6FY MM6LPB                       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Autoadaptive<br>3.Programming / Pairing                                                         |



## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type                          | Functions    |          |           |             |           |                                                                                         |
|---------|---------------|-----------------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------|
|         |               |                                   | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                        |
|         | Petrol engine | 6FZ S2000PM2                      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                            |
|         |               | RFN MM6LP                         | √            | √        | √         | √           |           |                                                                                         |
|         |               | MM6KP Bio flex                    | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the ethanol content |
|         |               | MM6KP Non Bio Flex                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the ethanol content |
|         |               | Diesel fuel additive control unit | √            | √        | √         | √           | √         | 1.Configuration                                                                         |
|         | ABS           | ESP8.1                            | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                                           |
|         |               | ESP EBC 440(KWP)                  | √            | √        | √         | √           |           |                                                                                         |
|         | A/T           | AL4 automatic gearbox             | √            | √        | √         | √           | √         | 1.Marching<br>2.Oil wear counter                                                        |
|         |               | 4HP20 automatic gearbox           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                            |
|         |               | AM6 automatic gearbox             | √            | √        | √         | √           | √         | 1.Configuration<br>2. Oil wear counter                                                  |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                                       | ECU type                        | Functions    |          |           |             |           |                                      |
|---------|----------------------------------------------|---------------------------------|--------------|----------|-----------|-------------|-----------|--------------------------------------|
|         |                                              |                                 | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                     |
|         |                                              | AM6 Euro5 automatic gearbox     | √            | √        | √         | √           |           |                                      |
|         | Air bag                                      | Airbag ECU                      | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock |
|         | Inform the driver<br>Audio/Communication     | Muti-function display           | √            | √        | √         | √           |           |                                      |
|         |                                              | Radio                           | √            | √        | √         | √           | √         | 1.Configuration                      |
|         |                                              | CD player                       | √            | √        | √         |             | √         |                                      |
|         |                                              | Instrument panel                | √            | √        | √         | √           | √         |                                      |
|         |                                              | Telematics                      | √            | √        | √         | √           | √         | 1.Configuration                      |
|         |                                              | Hands Free Kit                  | √            | √        | √         | √           | √         | 1.Configuration                      |
|         |                                              |                                 |              |          |           |             |           |                                      |
|         | Vehicle protection<br>Management of accesses | Alarm                           | √            | √        | √         | √           | √         | 1.Configuration                      |
|         |                                              | Driver's door module            | √            | √        | √         | √           | √         |                                      |
|         |                                              | Passenger door module           | √            | √        | √         | √           | √         |                                      |
|         | Visibility<br>Lighting/Signalling            | Control unit windscreen wipers  | √            | √        | √         | √           |           |                                      |
|         |                                              | Rain/Brightness sensor          | √            | √        | √         |             |           |                                      |
|         |                                              | Steering wheel switching module | √            | √        | √         | √           | √         |                                      |
|         |                                              | Parking assistance              | √            | √        | √         | √           | √         | 1.Configuration                      |
|         |                                              | Air conditioning                | √            | √        | √         | √           | √         |                                      |
|         |                                              | Additional heating              | √            | √        | √         | √           | √         |                                      |
|         |                                              | Power steering                  | √            | √        | √         | √           | √         |                                      |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                          | ECU type                                 | Functions    |          |           |             |           |                                                                                         |
|---------|---------------------------------|------------------------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------|
|         |                                 |                                          | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                        |
|         | Driving assistance/Comfort      | Piloted suspension                       | √            | √        | √         | √           | √         | 1.Programming of the heights<br>2.Programming of the type of headlamp                   |
|         |                                 | Battery charge status unit               | √            | √        | √         | √           |           | 1.Configuration                                                                         |
|         |                                 | Stop and Star battery charge status unit | √            | √        | √         | √           |           | 1.Configuration                                                                         |
|         |                                 | Under inflation detection                | √            | √        | √         | √           |           |                                                                                         |
|         | Built-in systems interface(BSI) |                                          | √            | √        | √         |             |           | 1. Resetting to zero of the service mileage                                             |
|         |                                 | NFU ME745                                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                                     |
|         |                                 | NFU ME749 Bio Flex                       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |
|         |                                 | MM6KP Bio flex                           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the ethanol content |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type            | Functions    |          |           |             |           |                                                                                         |
|---------|---------------|---------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------|
|         |               |                     | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                        |
| 408     | Petrol engine | MM6KP Non Bio Flex  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the ethanol content |
|         |               | RFJ MM6LPB          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Autoadaptive                                                       |
|         |               | 5FT MED17.4         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                            |
|         |               | 5FX MED17.4         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                            |
|         |               | 5FY MED17.4         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                            |
|         |               | 5FW MEV17.4         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                            |
|         |               | 8FS MEV17.4         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                            |
|         |               | EP3C 8FP MEV17.4.2  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                            |
|         |               | EP3CM 8FP MEV17.4.2 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                            |
|         |               | EP3C 8FR MEV17.4.2  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                            |
|         |               | EP6C 5FS MEV17.4.2  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                            |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                          | ECU type           | Functions    |          |           |             |           |                                                                                                                                                                      |
|---------|---------------------------------|--------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |                                 |                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                     |
|         | Diesel engine                   | 9HR HDI SID807 BR2 | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3. Programming of the total quantity of additive injected into the particulate emission filter |
|         |                                 | 9HL HDI SID807 BR2 | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3. Programming of the total quantity of additive injected into the particulate emission filter |
|         |                                 | 9HG HDI SID807 BR2 | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3. Programming of the total quantity of additive injected into the particulate emission filter |
|         |                                 | BSM                | √            | √        | √         | √           | √         |                                                                                                                                                                      |
|         |                                 | BSR                | √            | √        | √         | √           | √         |                                                                                                                                                                      |
|         | Built-in systems interface(BSI) |                    | √            | √        | √         |             |           |                                                                                                                                                                      |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                            | ECU type           | Functions    |          |           |             |           |                                                     |
|---------|-----------------------------------|--------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------|
|         |                                   |                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                    |
|         | Petrol engine                     | MM6KP Bio flex     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives |
|         |                                   | MM6KP Non Bio Flex | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives |
|         |                                   | MED17.4.2          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption        |
|         |                                   | MEV17.4.2          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption        |
|         | Diesel engine                     | HDI SID807 BR2     | √            | √        | √         | √           | √         | 1.Configuration                                     |
|         |                                   | DCM34              | √            | √        | √         | √           | √         | 1.Configuration                                     |
|         |                                   | DCM3.5 BR2         | √            | √        | √         | √           | √         | 1.Configuration                                     |
|         |                                   | EDC17CP42          | √            | √        | √         | √           | √         | 1.Configuration                                     |
|         | AT                                | BVA_AM6_AT6_EURO5  | √            | √        | √         | √           | √         | 1.Configuration                                     |
|         |                                   | CFC300P            | √            | √        | √         | √           | √         |                                                     |
|         | ABS                               | ABS 8.1            | √            | √        | √         | √           | √         | 1.Configuration                                     |
|         |                                   | ESP 8.1            | √            | √        | √         | √           | √         | 1.Configuration                                     |
|         |                                   | SRS                | √            | √        | √         | √           | √         | 1.Configuration                                     |
|         |                                   | COMBINE            | √            | √        | √         | √           | √         |                                                     |
|         |                                   | AIRCONDITION       | √            | √        | √         | √           | √         |                                                     |
|         | Power steering electric pump unit | GEP                | √            | √        | √         | √           |           |                                                     |
|         | Under-inflation detection (DSG)   | DSG                | √            | √        | √         | √           |           |                                                     |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                                             | ECU type    | Functions    |          |           |             |           |                  |
|---------|----------------------------------------------------|-------------|--------------|----------|-----------|-------------|-----------|------------------|
|         |                                                    |             | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function |
| 508     | Active damper electronic unit                      | BEBA        | ✓            | ✓        | ✓         | ✓           |           |                  |
|         | Battery charge status unit                         | BECB_GEN2   | ✓            | ✓        | ✓         | ✓           |           |                  |
|         | Electric secondary brake                           | FSE         | ✓            | ✓        | ✓         | ✓           |           |                  |
|         | Discharge bulbs vertical and horizontal adjustment | LADCT       | ✓            | ✓        | ✓         | ✓           |           |                  |
|         | Additional heating                                 | CHAUFF_ADD  | ✓            | ✓        | ✓         | ✓           |           |                  |
|         | Engine relay unit                                  | BSM_2010    | ✓            | ✓        | ✓         | ✓           |           |                  |
|         | Trailer relay unit                                 | BSG_2010_RQ | ✓            | ✓        | ✓         | ✓           |           |                  |
|         | Airbag                                             | RBG_UDS     | ✓            | ✓        | ✓         | ✓           |           |                  |
|         | Parking assistance                                 | AAS_UDS     | ✓            | ✓        | ✓         | ✓           |           |                  |
|         | Anti-theft alarm                                   | ALARME      | ✓            | ✓        | ✓         | ✓           |           |                  |
|         | Instrument panel                                   | COMBINE_UDS | ✓            | ✓        | ✓         | ✓           |           |                  |
|         | Multifunction screen                               | EMF_A_UDS   | ✓            | ✓        | ✓         |             |           |                  |
|         |                                                    | EMF_C_UDS   | ✓            | ✓        | ✓         | ✓           |           |                  |
|         | Data communication ECU RT6                         | RNEG2010    | ✓            | ✓        | ✓         | ✓           |           |                  |
|         | Independent telematic unit (BTA)                   | BTA         | ✓            | ✓        | ✓         | ✓           |           |                  |
|         | Multiplexed control panel                          | FMUX        | ✓            | ✓        | ✓         | ✓           |           |                  |
|         | Matrix screen integral to the instrument panel     | MATT_C_2010 | ✓            | ✓        | ✓         |             |           |                  |
|         |                                                    | MATT_M_2010 | ✓            | ✓        | ✓         |             |           |                  |
|         | RD5 radio                                          | RD5         | ✓            | ✓        | ✓         | ✓           |           |                  |
|         | Hands-free control unit                            | BML         | ✓            | ✓        | ✓         | ✓           |           |                  |
|         | Telematic navigator                                | CRT_UDS     | ✓            |          |           | ✓           |           |                  |
|         | Radio amplifier                                    | AMPLI_AUDIO | ✓            | ✓        | ✓         |             |           |                  |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                                                | ECU type             | Functions    |          |           |             |           |                  |
|---------|-------------------------------------------------------|----------------------|--------------|----------|-----------|-------------|-----------|------------------|
|         |                                                       |                      | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function |
|         | Switch module under the steering wheel (top of colum) | COM2008P             | √            | √        | √         | √           |           |                  |
|         | Seat belts not fastened LED unit (TNB)                | TNB_2010             | √            |          |           |             |           |                  |
|         | Supply protection and management unit                 | BPGA2010             | √            | √        | √         | √           |           |                  |
|         | Steering wheel with integral controls (VSI)           | VCI                  | √            | √        | √         | √           |           |                  |
|         | Rain and brightness sensor (CDPL)                     | PLUIE_LUMINOSITE_UDS | √            | √        | √         | √           |           |                  |
|         | Air conditioning                                      | CLIM_REGULEE_UDS     | √            | √        | √         | √           |           |                  |
|         | Rear air conditioning                                 | CLIM_AR              | √            |          |           | √           |           |                  |
|         | Motorised Boot ECU                                    | COFFRE_MOTORISE      | √            | √        | √         | √           |           |                  |
|         | Driver's seat memorizing unit                         | BDMC                 | √            | √        | √         | √           |           |                  |
|         | Driver's door control pad                             | PDPC                 | √            | √        | √         | √           |           |                  |
|         | Central voltage retention device                      | DMTC                 | √            | √        | √         | √           |           |                  |
|         | Electronic key reader                                 | LCE                  | √            | √        | √         | √           |           |                  |
|         | High Head Vision                                      | VTH_UDS              | √            | √        | √         | √           |           |                  |
|         | Main beams assistant ECU                              | RETRO_INT            | √            | √        | √         | √           |           |                  |
|         | Windscreen wiper (left-hand side)                     | MOTEV_UDS            | √            | √        | √         | √           |           |                  |
|         | Windscreen wiper (right-hand side)                    | MOTED_UDS            | √            | √        | √         | √           |           |                  |
|         | Electric steering lock                                | AVE                  | √            | √        | √         | √           |           |                  |



## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                                    | ECU type                       | Functions    |          |           |             |           |                  |
|---------|-------------------------------------------|--------------------------------|--------------|----------|-----------|-------------|-----------|------------------|
|         |                                           |                                | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function |
| 4007    | Built-in systems interface(BSI)           |                                | √            | √        | √         | √           |           |                  |
|         | Diesel engine                             | 4HK EDC16CP39                  | √            | √        | √         | √           |           | 1.DPF            |
|         |                                           | 4HN EDC16CP39                  | √            | √        | √         | √           |           | 1.DPF            |
|         | Petrol engine                             | AFZ 4B11 MIVEC EURO4           | √            | √        | √         | √           |           |                  |
|         |                                           | SFY 4B12 MIVEC EURO5           | √            | √        | √         | √           |           |                  |
|         |                                           | SFZ 4B12 MIVEC EURO4           | √            | √        | √         | √           |           |                  |
|         | A/T                                       | CVT gearbox                    | √            | √        | √         | √           |           |                  |
|         |                                           | DCT controlled gearbox         | √            | √        | √         | √           |           |                  |
|         | Engine/Automatic Gearbox/Transmission     | 4x4 transmission               | √            | √        | √         | √           |           |                  |
|         |                                           | LEVIER GETRAG                  | √            | √        | √         | √           |           |                  |
|         | Inform the driver/Audio/Communication     | Radio                          | √            | √        | √         | √           |           |                  |
|         |                                           | Navigation                     | √            | √        | √         |             |           |                  |
|         |                                           | Instrument panel               | √            | √        | √         | √           |           |                  |
|         |                                           | Hands Free Kit                 | √            | √        | √         | √           |           |                  |
|         | Vehicle protection/Management of accesses | Coded immobiliser              | √            | √        | √         | √           |           |                  |
|         |                                           | Driver's door control panel    | √            | √        | √         | √           |           |                  |
|         |                                           | Passenger's door control panel | √            | √        | √         | √           |           |                  |
|         |                                           | Rear left door control pad     | √            | √        | √         | √           |           |                  |
|         |                                           | Rear right door control        | √            | √        | √         | √           |           |                  |
|         |                                           | Sun roof                       | √            | √        | √         | √           |           |                  |
|         | Active and passive safety                 | Air bag                        | √            | √        | √         | √           |           |                  |
|         |                                           | ABS or ESP ECU                 | √            | √        | √         | √           |           |                  |
|         |                                           | Flywheel angle sensor          | √            | √        | √         |             |           |                  |
|         | Visibility                                | Static AFS                     | √            | √        | √         | √           |           |                  |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                     | ECU type                               | Functions    |          |           |             |           |                                              |
|---------|----------------------------|----------------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------|
|         |                            |                                        | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                             |
|         | Lighting/Signalling        | Rain and brightness sensor             |              |          |           |             |           |                                              |
|         | Driving assistance/Comfort | Air conditioning                       | √            | √        | √         | √           |           |                                              |
| 607 VAN | BSI                        |                                        | √            | √        | √         | √           | √         | 1.Initialization Adaption                    |
|         | Petrol engine              | 3FZ MM4MP2                             | √            | √        | √         | √           | √         |                                              |
|         |                            | RFN MM48P(Mechanical throttle housing) | √            | √        | √         | √           | √         | 1.Initialization Adaption                    |
|         |                            | RFN MM4MP2(Motorised butterfly)        | √            | √        | √         | √           | √         |                                              |
|         |                            | R6F MM4.8P                             | √            | √        | √         | √           | √         | 1.Initialization Adaption                    |
|         |                            | XFX BOSCH ME7.4.6                      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         | Diesel engine              | RHS BOSCH EDC15C2                      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service<br>3.DPF        |
|         |                            | 4HX BOSCH EDC15C2                      | √            | √        | √         | √           |           |                                              |
|         |                            | RHZ BOSCH EDC15C2                      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service<br>3.DPF        |
|         | Active safety              | ESP BOSCH 5.3                          | √            | √        | √         | √           |           |                                              |
|         |                            | ABS BOSCH 5.3                          | √            | √        | √         | √           | √         |                                              |
|         |                            | Electronically managed suspension      | √            |          |           | √           | √         | 1.Configuration                              |
|         | A/T                        | BVA ZF                                 | √            | √        | √         | √           |           |                                              |
|         |                            | 4HP20 gearbox                          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |

## PEUGEOT V42.61 Diagnostics List (Note:For reference only)

| Vehicle | System                          | ECU type                          | Functions    |          |           |             |           |                                              |
|---------|---------------------------------|-----------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------|
|         |                                 |                                   | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                             |
|         | Air bag                         | Air bag                           | √            | √        | √         |             |           |                                              |
|         | Driver information              | Multi-function display            | √            | √        | √         | √           | √         |                                              |
|         |                                 | Parking assistance                | √            | √        | √         | √           | √         |                                              |
|         |                                 | Instrument panel                  | √            | √        | √         |             | √         | 1.Configuration                              |
|         |                                 | CD player                         | √            | √        | √         | √           | √         |                                              |
|         |                                 | Radio                             | √            | √        | √         | √           | √         | 1.Configuration                              |
|         | switch control                  | Driver's door control panel       | √            | √        | √         | √           |           |                                              |
|         |                                 | Passenger's door control panel    | √            | √        | √         | √           |           |                                              |
|         | Visibility/Lighting             | Headlamp height corrector         | √            | √        | √         | √           | √         |                                              |
|         |                                 | storing of the driving position   | √            | √        | √         | √           |           |                                              |
|         |                                 | Diesel fuel additive control unit | √            | √        | √         | √           | √         | 1.Marchting                                  |
|         | A/C                             | Air conditioning                  | √            | √        | √         | √           | √         | 1.Configuration                              |
|         | Built-in systems interface(BSI) |                                   | √            | √        | √         |             |           | 1. Resetting to zero of the service mileage  |
|         | Petrol engine                   | 3FZ MM6LP                         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |                                 | 3FY MM6LPB                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Autoadaptive            |
|         |                                 | XFV ME747                         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System | ECU type            | Functions    |          |           |             |           |                                                                                                                                                                                                                |
|---------|--------|---------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |        |                     | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                                               |
|         |        | UHZ SIEMENS SID 201 | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3.Replacement particle emission filter<br>4. Programming of the total quantity of additive injected into the particulate emission filter |
|         |        | 4HP BOSCH EDC16CP39 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification configuration<br>3.Particle Emission filter forced regeneration<br>4.Replacement of the particle emission filter                                                 |
|         |        | 4HR BOSCH EDC16CP39 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification configuration<br>3.Particle Emission filter forced regeneration<br>4.Replacement of the particle emission filter                                                 |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type            | Functions    |          |           |             |           |                                                                                                                                                                |
|---------|---------------|---------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |               |                     | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                               |
| 607 CAN | Diesel engine | 4HS BOSCH EDC16CP39 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification configuration<br>3.Particle Emission filter forced regeneration<br>4.Replacement of the particle emission filter |
|         |               | 4HT BOSCH EDC16CP39 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification configuration<br>3.Particle Emission filter forced regeneration<br>4.Replacement of the particle emission filter |
|         |               | RHL SIEMENS SID 803 | √            | √        | √         | √           | √         | 1.Configuration<br>2.After-sales particulate emission filter repair operation                                                                                  |
|         |               | RHR SIEMENS SID 803 | √            | √        | √         | √           | √         | 1.Configuration<br>2.After-sales particulate emission filter repair operation                                                                                  |
|         |               | 4HX BOSCH EDC15C2   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Forced PF regeneration                                                                                                                    |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                     | ECU type                          | Functions    |          |           |             |           |                                                                    |
|---------|----------------------------|-----------------------------------|--------------|----------|-----------|-------------|-----------|--------------------------------------------------------------------|
|         |                            |                                   | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                   |
|         |                            | RHS BOSCH EDC15C2                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Forced PF regeneration                        |
|         | AT ECU                     | AM6 automatic gearbox             | √            | √        | √         | √           | √         | 1.Configuration<br>2. Oil wear counter                             |
|         |                            | 4HP20 automatic gearbox           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                       |
|         |                            | Diesel fuel additive control unit | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         | ABS                        | ESP BOSCH 8                       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal |
|         | Air bag                    | Airbag ECU                        | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock                               |
|         | Driving assistance/Comfort | Parking assistance                | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                            | Drivers seat memory unit          | √            | √        | √         |             |           |                                                                    |
|         |                            | Air conditioning                  | √            | √        | √         | √           | √         |                                                                    |
|         |                            | Under inflation detection         | √            | √        | √         | √           |           |                                                                    |
|         |                            | Piloted suspension                | √            | √        | √         | √           | √         | 1.Programming of the heights                                       |
|         |                            | Power steering                    | √            | √        | √         | √           | √         |                                                                    |
|         | Inform the                 | Radio                             | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                            | CD player                         | √            | √        | √         |             | √         |                                                                    |
|         |                            | Instrument panel                  | √            | √        | √         | √           | √         | 1.Configuration                                                    |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                                    | ECU type                           | Functions    |          |           |             |           |                                                                     |
|---------|-------------------------------------------|------------------------------------|--------------|----------|-----------|-------------|-----------|---------------------------------------------------------------------|
|         |                                           |                                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                    |
|         | Inform the driver/Audio/Communication     | Steering wheel switching module    | √            | √        | √         | √           | √         |                                                                     |
|         |                                           | Hands Free Kit                     | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         |                                           | Telamatics                         | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         | Vehicle protection/Management of accesses | Alarm                              | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         |                                           | Driver's door module               | √            | √        | √         | √           | √         |                                                                     |
|         |                                           | Passenger door module              | √            | √        | √         | √           | √         |                                                                     |
|         | Visibility/Lighting/Signalling            | Rain/Brightness sensor             | √            | √        | √         |             |           |                                                                     |
| 806     | Petrol engine                             | R6F MM4.8P                         | √            | √        | √         | √           | √         | 1.Initialization Adaption                                           |
|         |                                           | RFN MM4.8P                         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                        |
|         | Diesel engine                             | RHW BOSCH EDC15C2                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Filter                                         |
|         |                                           | RHZ BOSCH EDC15C2                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service<br>3.DPF                               |
|         | ABS                                       | BOSCH ABS5.3                       | √            | √        | √         | √           |           |                                                                     |
|         | AT                                        | AL4 autoadaptive automatic gearbox | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption<br>3. Oil wear counter |
|         | Air bag                                   | Air bag and seat belt              | √            | √        | √         |             |           | 1.Marching                                                          |
|         | Additional heating                        |                                    | √            | √        | √         | √           | √         |                                                                     |
|         | BSI                                       |                                    | √            | √        | √         | √           |           |                                                                     |
|         |                                           | RHW BOSCH EDC15C2                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Filter                                         |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System              | ECU type                                   | Functions    |          |           |             |           |                  |
|---------|---------------------|--------------------------------------------|--------------|----------|-----------|-------------|-----------|------------------|
|         |                     |                                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function |
| 807 VAN | Diesel engine       | RHM BOSCH EDC15C2                          | √            | √        | √         | √           |           |                  |
|         |                     | RHT BOSCH EDC15C2                          | √            | √        | √         | √           |           |                  |
|         |                     | 4HW BOSCH EDC15C2                          | √            | √        | √         | √           |           |                  |
|         | ABS                 | ABR BOSCH 5.7                              | √            | √        | √         | √           |           |                  |
|         |                     | ESP BOSCH 5.7                              | √            | √        | √         | √           | √         |                  |
|         | Driver information  | Display/Telematics                         | √            | √        | √         | √           | √         |                  |
|         |                     | Warning light and odometer ECU             | √            | √        | √         | √           |           |                  |
|         |                     | Parking assistance                         | √            | √        | √         | √           |           |                  |
|         |                     | CD player                                  | √            | √        | √         | √           |           |                  |
|         |                     | Instrument panel                           | √            | √        | √         | √           | √         |                  |
|         |                     | Switch unit under steering wheel(COM 2000) | √            | √        | √         | √           |           |                  |
|         |                     | radio/telematic receive control            | √            | √        | √         | √           | √         |                  |
|         | Visibility/Lighting | Switch unit under steering wheel(COM 2000) | √            | √        | √         | √           |           |                  |
|         |                     | Right headlamp beam corrector              | √            | √        | √         | √           |           |                  |
|         |                     | Left headlamp beam level corrector         | √            | √        | √         | √           |           |                  |
|         | switch control      | Driver's door module                       | √            | √        | √         | √           |           |                  |
|         |                     | Sliding side door                          | √            | √        | √         | √           |           |                  |
|         |                     | Passenger's door module                    | √            | √        | √         | √           |           |                  |



## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                          | ECU type                               | Functions    |          |           |             |           |                                                                      |
|---------|---------------------------------|----------------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------|
|         |                                 |                                        | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                     |
|         | A/C                             | WEBASTO additional heating             | √            | √        | √         | √           |           |                                                                      |
|         |                                 | Climate control                        | √            | √        | √         | √           |           |                                                                      |
|         | Air bag                         | Air bag                                | √            | √        | √         | √           |           |                                                                      |
|         |                                 | Diesel fuel additive control unit      | √            | √        | √         | √           |           |                                                                      |
|         |                                 | Alarm                                  | √            | √        | √         | √           | √         |                                                                      |
|         |                                 | Storing of the driving position        | √            | √        | √         | √           |           |                                                                      |
|         | Petrol engine                   | 3FZ MM4MP2                             | √            | √        | √         | √           |           |                                                                      |
|         |                                 | 3FZ MM6LP                              | √            | √        | √         | √           |           |                                                                      |
|         |                                 | R6F MM4.8P                             | √            | √        | √         | √           | √         | 1.Initialization Adaption                                            |
|         |                                 | RFN MM48P(Mechanical throttle housing) | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                         |
|         |                                 | RFN MM4MP2(Motorised butterfly)        | √            | √        | √         | √           |           |                                                                      |
|         |                                 | RFN MM6LP                              | √            | √        | √         | √           |           | 1.Initialization Adaption                                            |
|         |                                 | XFW BOSCH ME746                        | √            | √        | √         | √           |           |                                                                      |
|         | Built-in systems interface(BSI) |                                        | √            | √        | √         | √           |           | 1.keys of programming<br>2. Resetting to zero of the service mileage |
|         | Petrol engine                   | RFJ MM6LPB                             | √            | √        | √         | √           | √         | 1.Configuration<br>2.Autoadaptive                                    |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System | ECU type          | Functions    |          |           |             |           |                                                                                                                                                                                                        |
|---------|--------|-------------------|--------------|----------|-----------|-------------|-----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |        |                   | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                                       |
|         |        | 4HW BOSCH EDC15C2 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Configuration of part mileage                                                                                                                                                     |
|         |        | 4HP EDC16CP39     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification configuration<br>3.Particle Emission filter forced regeneration<br>4.Replacement of the particle emission filter and work on the additive adding circuit |
|         |        | 4HR EDC16CP39     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification configuration<br>3.Particle Emission filter forced regeneration<br>4.Replacement of the particle emission filter and work on the additive adding circuit |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type            | Functions    |          |           |             |           |                                                                                                                                                                                                        |
|---------|---------------|---------------------|--------------|----------|-----------|-------------|-----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |               |                     | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                                       |
|         | Diesel engine | 4HS EDC16CP39       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification configuration<br>3.Particle Emission filter forced regeneration<br>4.Replacement of the particle emission filter and work on the additive adding circuit |
|         |               | 4HT EDC16CP39       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification configuration<br>3.Particle Emission filter forced regeneration<br>4.Replacement of the particle emission filter and work on the additive adding circuit |
|         |               | RHK SIEMENS SID 803 | √            | √        | √         | √           | √         | 1.Configuration<br>2.DPF                                                                                                                                                                               |
|         |               | RHL SIEMENS SID 803 | √            | √        | √         | √           | √         | 1.Configuration<br>2.DPF                                                                                                                                                                               |
|         |               | RHR SIEMENS SID 803 | √            | √        | √         | √           | √         | 1.Configuration<br>2.DPF                                                                                                                                                                               |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System | ECU type          | Functions    |          |           |             |           |                                                                                                                                                                                                                |
|---------|--------|-------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |        |                   | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                                               |
| 807 CAN |        | RHM BOSCH EDC15C2 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Filter<br>3.DPF                                                                                                                                                                           |
|         |        | RHT BOSCH EDC15C2 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Filter<br>3.DPF                                                                                                                                                                           |
|         |        | RHH DCM3.5        | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3.Replacement particle emission filter<br>4. Programming of the total quantity of additive injected into the particulate emission filter |
|         |        | RHD DCM3.5        | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3.Replacement particle emission filter<br>4. Programming of the total quantity of additive injected into the particulate emission filter |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                     | ECU type                          | Functions    |          |           |             |           |                                                                    |
|---------|----------------------------|-----------------------------------|--------------|----------|-----------|-------------|-----------|--------------------------------------------------------------------|
|         |                            |                                   | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                   |
|         |                            | RHW BOSCH EDC15C2                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Filter                                        |
|         |                            | Diesel fuel additive control unit | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         | ABS                        | ESP 8.1                           | √            | √        | √         | √           |           |                                                                    |
|         |                            | ESP BOSCH 8                       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal |
|         | Air bag                    | Airbag ECU                        | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock                               |
|         | A/T                        | BVA AL4                           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                       |
|         |                            | BVA_AM6C                          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Oil wear counter                              |
|         | Driving assistance/Comfort | Additional heating                | √            | √        | √         | √           | √         |                                                                    |
|         |                            | Air conditioning                  | √            | √        | √         | √           | √         |                                                                    |
|         |                            | Driver's door module              | √            | √        | √         | √           | √         |                                                                    |
|         |                            | Drivers seat memory unit          | √            | √        | √         |             |           |                                                                    |
|         |                            | Parking assistance                | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                            | Power steering GEP                | √            | √        | √         | √           | √         |                                                                    |
|         |                            | Under inflation detection         | √            | √        | √         | √           |           |                                                                    |
|         |                            | CD player                         | √            | √        | √         |             | √         |                                                                    |
|         |                            | Hands Free Kit                    | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                            | Instrument panel                  | √            | √        | √         | √           | √         |                                                                    |

## PEUGEOT V42.61 Diagnostics List (Note:For reference only)

| Vehicle | System                                    | ECU type                           | Functions    |          |           |             |           |                                              |
|---------|-------------------------------------------|------------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------|
|         |                                           |                                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                             |
|         | Inform the driver/Audio/Communication     | Multi-function display             | √            | √        | √         |             |           |                                              |
|         |                                           | Radio                              | √            | √        | √         | √           | √         | 1.Configuration                              |
|         |                                           | Telematic receiver control         | √            |          |           |             |           |                                              |
|         |                                           | Telematics                         | √            | √        | √         | √           | √         | 1.Configuration                              |
|         |                                           | Warning lights/odometer unit       | √            | √        | √         |             |           |                                              |
|         | Vehicle protection/Management of accesses | Alarm                              | √            | √        | √         |             |           |                                              |
|         |                                           | Front sunroof                      | √            | √        | √         |             |           |                                              |
|         |                                           | Middle sunroof                     | √            | √        | √         |             |           |                                              |
|         |                                           | Rear sunroof                       | √            | √        | √         |             |           |                                              |
|         |                                           | Passenger door module              | √            | √        | √         | √           | √         |                                              |
|         |                                           | Sliding side doors module          | √            | √        | √         |             |           |                                              |
|         | Visibility/Lighting/Signalling            | Left headlamp beam level corrector | √            | √        | √         | √           | √         |                                              |
|         |                                           | Rain/brightness sensor             | √            | √        | √         |             |           |                                              |
|         |                                           | Right headlamp beam corrector      | √            | √        | √         | √           | √         |                                              |
|         |                                           | Steering wheel switching module    | √            | √        | √         |             |           |                                              |
|         | Built-in systems interface(BSI)           |                                    | √            | √        | √         |             |           | 1. Resetting to zero of the service mileage  |
|         |                                           | 5FS MEV17.4                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |                                           | 5FV MED17.4                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type             | Functions    |          |           |             |           |                                                                                                                                                                      |
|---------|---------------|----------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |               |                      | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                     |
|         | Petrol engine | 5FW MEV17.4          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                                                                         |
|         |               | 5FX MED17.4          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                                                                         |
|         |               | 5FV MED 17.4.2 Euro5 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                                                                         |
|         |               | 9HL HDI SID807       | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3. Programming of the total quantity of additive injected into the particulate emission filter |
|         |               | 9HR HDI SID807       | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3. Programming of the total quantity of additive injected into the particulate emission filter |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type    | Functions    |          |           |             |           |                                                                                                                                                                                                                |
|---------|---------------|-------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |               |             | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                                               |
|         | Diesel engine | 9HZ EDC16C3 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Particulate filter regeneration<br>3.Replacement particle emission filter<br>4.Replacement of the particle emission filter and work on the additive adding circuit                        |
|         |               | RHE DCM3.5  | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3.Replacement particle emission filter<br>4. Programming of the total quantity of additive injected into the particulate emission filter |



## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System  | ECU type                                       | Functions    |          |           |             |           |                                                                                                                                                                                                                |
|---------|---------|------------------------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |         |                                                | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                                               |
| 5008    |         | RHH DCM3.5                                     | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3.Replacement particle emission filter<br>4. Programming of the total quantity of additive injected into the particulate emission filter |
|         | Gearbox | AM6 Euro5 automatic gearbox                    | √            | √        | √         | √           |           |                                                                                                                                                                                                                |
|         |         | CFC300P gearbox                                | √            | √        | √         | √           |           |                                                                                                                                                                                                                |
|         |         | AT6 Euro5 automatic gearbox                    | √            | √        | √         | √           |           |                                                                                                                                                                                                                |
|         |         | Multiplexed additive adding pump/Pompe mux MGI | √            | √        | √         | √           |           |                                                                                                                                                                                                                |
|         |         | Multiplexed additive adding pump/Pompe mux TI  | √            | √        | √         | √           |           |                                                                                                                                                                                                                |
|         |         | Air conditioning ECU                           | √            | √        | √         | √           |           |                                                                                                                                                                                                                |
|         |         | Electric parking brake                         | √            | √        | √         | √           |           |                                                                                                                                                                                                                |
|         |         | Electropump assembly                           | √            | √        | √         | √           |           |                                                                                                                                                                                                                |
|         |         | High Head Vision                               | √            | √        | √         | √           |           |                                                                                                                                                                                                                |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                         | ECU type                                                    | Functions    |          |           |             |           |                                              |
|---------|--------------------------------|-------------------------------------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------|
|         |                                |                                                             | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                             |
|         | Driving assistance/Comfort     | Lane departure warning system                               | √            | √        | √         | √           |           |                                              |
|         |                                | Under inflation detection                                   | √            | √        | √         | √           |           |                                              |
|         |                                | Parking aid                                                 | √            | √        | √         | √           |           |                                              |
|         |                                | Assistance in complying with the inter-vehicle time (ARTIV) | √            | √        | √         | √           |           |                                              |
|         | Visibility/Lighting/Signalling | Headlamp height corrector                                   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Calibration             |
|         |                                | Windscreen wiper                                            | √            | √        | √         | √           |           |                                              |
|         |                                | Rain / brightness sensor                                    | √            | √        | √         |             |           |                                              |
|         | Vehicle protection             | Alarm                                                       | √            | √        | √         | √           |           |                                              |
|         |                                | Driver's door control pad                                   | √            | √        | √         | √           |           |                                              |
|         | Active and passive safety      | Airbag ECU                                                  | √            | √        | √         | √           |           | 1.Locking<br>2.Unlocking<br>3. Configuration |
|         |                                | Active and passive safety                                   | √            | √        | √         | √           |           |                                              |
|         |                                | Network isolation unit                                      | √            | √        | √         | √           |           |                                              |
|         |                                | Anti-slip mode selector                                     | √            | √        | √         | √           |           |                                              |
|         |                                | Battery charge status unit                                  | √            | √        | √         | √           |           | 1.Configuration                              |
|         |                                | Control panel dot matrix display                            | √            | √        | √         | √           |           |                                              |
|         |                                | Multifunction display(EMF_A)                                | √            | √        | √         | √           |           |                                              |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                                | ECU type                         | Functions    |          |           |             |           |                  |
|---------|---------------------------------------|----------------------------------|--------------|----------|-----------|-------------|-----------|------------------|
|         |                                       |                                  | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function |
|         | Inform the driver/Audio/Communication | Multifunction display(EMF_C)     | √            | √        | √         | √           |           |                  |
|         |                                       | Not Fastened warning light(TNB)  | √            |          |           |             |           |                  |
|         |                                       | Services module                  | √            | √        | √         | √           |           |                  |
|         |                                       | Steering wheel switching module  | √            | √        | √         | √           |           |                  |
|         |                                       | Independent telematic            | √            | √        | √         | √           |           |                  |
|         |                                       | Control panel                    | √            | √        | √         | √           |           |                  |
|         |                                       | telematics/RNEG radio navigation | √            | √        | √         | √           |           |                  |
|         |                                       | telematics/Radio navigation NG4  | √            | √        | √         | √           |           |                  |
|         |                                       | Radio                            | √            | √        | √         | √           |           |                  |
|         |                                       | CD player                        | √            | √        | √         |             |           |                  |
|         |                                       | Audio amplifier                  | √            | √        | √         |             |           |                  |
| BIPPER  | Petrol engine                         | KFT V34.2                        | √            | √        | √         | √           |           |                  |
|         |                                       | KFV V34P                         | √            | √        | √         | √           |           |                  |
|         | Diesel engine                         | 8HS EDC16C34                     | √            | √        | √         | √           |           |                  |
|         |                                       | HDI_8DF2                         | √            | √        | √         | √           |           |                  |
|         | AT                                    | BVMP                             | √            | √        | √         | √           |           |                  |
|         |                                       | Controlled manual gearbox MTA    | √            | √        | √         | √           |           |                  |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                          | ECU type           | Functions    |          |           |             |           |                                                                      |
|---------|---------------------------------|--------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------|
|         |                                 |                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                     |
|         | Built-in systems interface(BSI) |                    | √            | √        | √         | √           |           | 1.keys of programming<br>2. Resetting to zero of the service mileage |
|         |                                 | HDY BOSCH MA3.1    | √            | √        | √         |             |           |                                                                      |
|         |                                 | HDZ BOSCH MA3.1    | √            | √        | √         |             |           |                                                                      |
|         |                                 | HFX BOSCH M7.4.4   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                         |
|         |                                 | KFX BOSCH MP7.3    | √            | √        | √         | √           | √         | 1.Initialization Adaption                                            |
|         |                                 | KFX MM1AP          | √            | √        | √         | √           |           |                                                                      |
|         |                                 | KFX SGEAM SL96     | √            | √        | √         | √           | √         | 1.Initialization Adaption                                            |
|         |                                 | LFX MM1AP          | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Ignition advance setting              |
|         |                                 | N6A BOSCH ME7.4.4  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                  |
|         |                                 | KFW SAGEM S2000    | √            | √        | √         | √           | √         | 1.Marching<br>2.Initialization Adaption                              |
|         |                                 | K6D SAGEM S2000    | √            | √        | √         | √           | √         | 1.Marching<br>2.Initialization Adaption                              |
|         |                                 | NFU BOSCH ME7.4.4  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                  |
|         |                                 | RFN MM6LP          | √            | √        | √         | √           |           | 1.Initialization Adaption                                            |
|         |                                 | KFW SAGEM S2000PM1 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                         |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type                 | Functions    |          |           |             |           |                                                                                         |
|---------|---------------|--------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------|
|         |               |                          | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                        |
|         | Petrol engine | N6A BOSCH ME7.4.5        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Programming/Pairing            |
|         |               | N6B BOSCH ME7.4.5        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Programming/Pairing            |
|         |               | NFU BOSCH ME7.4.5        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Programming/Pairing            |
|         |               | NFU Or N6A BOSCH ME749   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |
|         |               | N6A BOSCH ME749 BIO FLEX | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System | ECU type                 | Functions    |          |           |             |           |                                                                                                                                   |
|---------|--------|--------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------------------------------|
|         |        |                          | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                  |
| PARTNER |        | KFW BOSCH ME749          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content                                           |
|         |        | KFW BOSCH ME749 BIO FLEX | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the alcohol content                                           |
|         |        | KFW SAGEM S2000PM2       | √            | √        | √         | √           |           |                                                                                                                                   |
|         |        | HFX MM48P                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                                      |
|         |        | KFW J34P                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives                                                                               |
|         |        | WJY LUCAS DCN2           | √            | √        | √         | √           | √         | 1.Configuration                                                                                                                   |
|         |        | RHY SIEMENS SID 801      | √            | √        | √         | √           | √         | 1.Configuration                                                                                                                   |
|         |        | RHY BOSCH EDC15C2        | √            | √        | √         | √           |           | 1.DPF                                                                                                                             |
|         |        | 9HW BOSCH EDC16C3        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification<br>3.Forced regeneration vehicle stationary<br>4.Forced regeneration vehicle moving |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type          | Functions    |          |           |             |           |                                                                                                                                   |
|---------|---------------|-------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------------------------------|
|         |               |                   | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                  |
|         | Diesel engine | 9HX BOSCH EDC16C3 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification<br>3.Forced regeneration vehicle stationary<br>4.Forced regeneration vehicle moving |
|         |               | 9HT BOSCH EDC16C3 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification<br>3.Forced regeneration vehicle stationary<br>4.Forced regeneration vehicle moving |
|         |               | WJZ LUCAS DCN2    | √            | √        | √         | √           |           |                                                                                                                                   |
|         | ABS           | BOSCH ABS5.3      | √            | √        | √         | √           |           |                                                                                                                                   |
|         |               | ABS BOSCH 8       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                                                                                     |
|         |               | ESP BOSCH 5.7     |              |          |           |             |           |                                                                                                                                   |
|         |               | ESP BOSCH 8       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal                                                                |
|         |               | ABS 8.1           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                                                                                     |
|         |               | ESP 8.1           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                                                                                     |

## PEUGEOT V42.61 Diagnostics List (Note:For reference only)

| Vehicle | System                                | ECU type                   | Functions    |          |           |             |           |                                                     |
|---------|---------------------------------------|----------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------|
|         |                                       |                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                    |
|         | Inform the driver/Audio/Communication | Telematics                 | √            | √        | √         | √           | √         | 1.Configuration                                     |
|         |                                       | Instrument panel           | √            | √        | √         | √           | √         | 1.Configuration                                     |
|         |                                       | CD player                  | √            | √        | √         | √           | √         |                                                     |
|         |                                       | Radio PHILIPS              | √            | √        | √         | √           | √         | 1.Configuration                                     |
|         |                                       | Radio CLARION              | √            | √        | √         | √           | √         | 1.Configuration                                     |
|         | A/C                                   | WEBASTO additional heating | √            | √        | √         | √           |           |                                                     |
|         | Air bag                               | Air bag and seat belt      | √            | √        | √         |             |           | 1.Marchting                                         |
|         |                                       | Air bags(SAC CENT AUTOLIV) | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock                |
|         | Additional heating                    |                            | √            | √        | √         | √           | √         |                                                     |
|         | Built-in systems interface(BSI)       |                            | √            | √        | √         |             |           | 1. Resetting to zero of the service mileage         |
|         | Petrol engine                         | N6A ME7.4.5                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives |
|         |                                       | N6B ME7.4.5                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives |
|         |                                       | NFU ME7.4.5                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives |
|         |                                       | NFR ME745                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives |



## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System | ECU type    | Functions    |          |           |             |           |                                                                                                                                                                                         |
|---------|--------|-------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |        |             | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                        |
|         |        | 5FS MEV17.4 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                                                                                            |
|         |        | 5FK MEV17.4 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                                                                                                                            |
|         |        | 9HT EDC16C3 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification                                                                                                                                           |
|         |        | 9HX EDC16C3 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification                                                                                                                                           |
|         |        | 9HZ EDC16C3 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Particulate filter regeneration<br>3.Replacement particle emission filter<br>4.Replacement of the particle emission filter and work on the additive adding circuit |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle    | System        | ECU type          | Functions    |          |           |             |           |                                                                                                                                                                                         |
|------------|---------------|-------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|            |               |                   | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                        |
| PARTNER B9 | Diesel engine | 9HS BOSCH EDC16C3 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Particulate filter regeneration<br>3.Replacement particle emission filter<br>4.Replacement of the particle emission filter and work on the additive adding circuit |
|            |               | 9HV EDC16C3       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Particulate filter regeneration<br>3.Replacement particle emission filter<br>4.Replacement of the particle emission filter and work on the additive adding circuit |
|            |               | 9HW EDC16C3       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification                                                                                                                                           |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System | ECU type                            | Functions    |          |           |             |           |                                                                                                                                                                      |
|---------|--------|-------------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |        |                                     | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                     |
|         |        | 9HL HDI SID807                      | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3. Programming of the total quantity of additive injected into the particulate emission filter |
|         |        | 9HJ EDC17C10_BR2 - DV6DTEDM - 92 CV | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3. Programming of the total quantity of additive injected into the particulate emission filter |
|         |        | 9HK EDC17C10_BR2 - DV6ETEDM - 75 CV | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3. Programming of the total quantity of additive injected into the particulate emission filter |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                                | ECU type                          | Functions    |          |           |             |           |                                                                                                                                                                      |
|---------|---------------------------------------|-----------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |                                       |                                   | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                     |
|         |                                       | 9HE EDC17C10_BR2 - DV6DBM - 89 CV | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3. Programming of the total quantity of additive injected into the particulate emission filter |
|         | Active and passive safety             | ABS 8.1                           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                                                                                                                        |
|         |                                       | ESP 8.1                           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                                                                                                                        |
|         |                                       | Air bags                          | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock                                                                                                                                 |
|         |                                       | Alarm                             | √            | √        | √         | √           | √         | 1.Configuration                                                                                                                                                      |
|         | Visibility/Lighting/Signalling        | Rain sensor                       | √            | √        | √         |             |           |                                                                                                                                                                      |
|         | Inform the driver/Audio/Communication | Multifunction display (EMF)       | √            | √        | √         | √           | √         | 1.Configuration                                                                                                                                                      |
|         |                                       | Steering wheel switching module   | √            | √        | √         | √           | √         |                                                                                                                                                                      |
|         |                                       | Radio                             | √            | √        | √         | √           | √         | 1.Configuration                                                                                                                                                      |
|         |                                       | Hands Free Kit                    | √            | √        | √         | √           | √         | 1.Configuration                                                                                                                                                      |
|         |                                       | Instrument panel                  | √            | √        | √         | √           | √         | 1.Configuration                                                                                                                                                      |
|         |                                       | CD player                         | √            | √        | √         |             | √         |                                                                                                                                                                      |
|         |                                       | Battery charge status unit        | √            | √        | √         | √           |           | 1.Configuration                                                                                                                                                      |
|         |                                       | Telematics                        | √            | √        | √         | √           | √         | 1.Configuration                                                                                                                                                      |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                          | ECU type                           | Functions    |          |           |             |           |                                                                     |
|---------|---------------------------------|------------------------------------|--------------|----------|-----------|-------------|-----------|---------------------------------------------------------------------|
|         |                                 |                                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                    |
|         | Driving assistance/Comfort      | Parking assistance                 | √            | √        | √         | √           |           | 1.Configuration                                                     |
|         |                                 | Air conditioning                   | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         |                                 | Power steering                     | √            | √        | √         | √           | √         |                                                                     |
|         |                                 | Under inflation detection          | √            | √        | √         | √           |           |                                                                     |
| EXPERT  | Petrol engine                   | R6F MM4.8P                         | √            | √        | √         | √           | √         | 1.Initialization Adaption                                           |
|         |                                 | RFN MM4.8P                         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                        |
|         | Diesel engine                   | WJY LUCAS DCN2                     | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         |                                 | RHW BOSCH EDC15C2                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Filter<br>3.DPF                                |
|         |                                 | RHX BOSCH EDC15C2                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Filter<br>3.DPF                                |
|         |                                 | RHZ BOSCH EDC15C2                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service<br>3.DPF                               |
|         | AT                              | AL4 autoadaptive automatic gearbox | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption<br>3. Oil wear counter |
|         | ABS                             | BOSCH ABS5.3                       | √            | √        | √         | √           |           |                                                                     |
|         | Air bag                         | Air bag and seat belt              | √            | √        | √         |             |           | 1.Marchting                                                         |
|         | Additional heating              |                                    | √            | √        | √         | √           | √         |                                                                     |
|         | Built-in systems interface(BSI) |                                    | √            | √        | √         |             |           | 1. Resetting to zero of the service mileage                         |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type                   | Functions    |          |           |             |           |                                                                                                                                                                                                                |
|---------|---------------|----------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         |               |                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                                                                                                                               |
|         | Petrol engine | RFH MM6KP(EW10A)           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialising the autoadaptives<br>3.Writing of the ethanol content                                                                                                                        |
|         | Diesel engine | 9HU BOSCH EDC16C3-EDC16C34 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification                                                                                                                                                                  |
|         |               | 9HT BOSCH EDC16C3          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Injection classification                                                                                                                                                                  |
|         |               | RHH DCM3.5                 | √            | √        | √         | √           | √         | 1.Configuration<br>2. Particle emission filter forced regeneration<br>3.Replacement particle emission filter<br>4. Programming of the total quantity of additive injected into the particulate emission filter |
|         |               | RHG SIEMENS SID 803        | √            | √        | √         | √           | √         | 1.Configuration<br>2.DPF                                                                                                                                                                                       |
|         |               | RHK SIEMENS SID 803        | √            | √        | √         | √           | √         | 1.Configuration<br>2.DPF                                                                                                                                                                                       |
|         |               | RHL SIEMENS SID 803        | √            | √        | √         | √           | √         | 1.Configuration<br>2.DPF                                                                                                                                                                                       |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle  | System                     | ECU type             | Functions    |          |           |             |           |                                                                                           |
|----------|----------------------------|----------------------|--------------|----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------|
|          |                            |                      | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                          |
| EXPERT 2 |                            | RHR SIEMENS SID 803  | √            | √        | √         | √           | √         | 1.Configuration<br>2.DPF                                                                  |
|          | Active and passive safety  | ABS8_BOSCH           | √            | √        | √         | √           | √         | 1.Configuration<br>2. Bleeding<br>3.Calibration of the steering wheel angle sensor        |
|          |                            | ESP_BOSCH8           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal                        |
|          |                            | ABS8.1               | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                                             |
|          |                            | ESP8.1               | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                                             |
|          |                            | Airbag ECU           | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock                                                      |
|          | Driving assistance/Comfort | Parking assistance   | √            | √        | √         | √           | √         | 1.Configuration                                                                           |
|          |                            | Air conditioning     | √            | √        | √         | √           | √         | 1.Configuration                                                                           |
|          |                            | Power steering       | √            | √        | √         | √           | √         |                                                                                           |
|          |                            | Pneumatic suspension | √            | √        | √         | √           | √         | 1.Configuration<br>2.Programming of the heights<br>3.Depressurisation<br>4.Pressurisation |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle | System                                | ECU type                        | Functions    |          |           |             |           |                                                         |
|---------|---------------------------------------|---------------------------------|--------------|----------|-----------|-------------|-----------|---------------------------------------------------------|
|         |                                       |                                 | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                        |
|         |                                       | Additional heating              | √            | √        | √         | √           | √         |                                                         |
|         | Inform the driver/Audio/Communication | Multi-function display          | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         |                                       | Steering wheel switching module | √            | √        | √         | √           | √         |                                                         |
|         |                                       | Radio                           | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         |                                       | Instrument panel                | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         |                                       | Hands Free Kit                  | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         |                                       | CD player                       | √            | √        | √         |             | √         |                                                         |
|         |                                       | Telematics                      | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         | Visibility/Lighting/Signalling        | Rain/brightness sensor          | √            | √        | √         |             |           |                                                         |
| BOXER   | Petrol engine                         | MM48p 2L essence plombee        | √            | √        | √         | √           |           |                                                         |
|         |                                       | MM48p 2L dual fuel(LPG)         | √            | √        | √         | √           |           |                                                         |
|         |                                       | MM48p 2L Unleaded               | √            | √        | √         | √           |           |                                                         |
|         | Diesel engine                         | 2.0L HDI BOSCH EDC15C7          |              | √        | √         | √           | √         |                                                         |
| BOXER 3 | Built-in systems interface(BSI)       |                                 | √            | √        | √         |             |           |                                                         |
|         | Active and passive safety             | ABS 8.0                         | √            | √        | √         | √           | √         | 1.Bleeding                                              |
|         |                                       | ESP 8.0                         | √            | √        | √         | √           | √         | 1.Bleeding<br>2.Steering wheel angle sensor calibration |
|         |                                       | ASR 8.0                         | √            | √        | √         | √           | √         | 1.Bleeding                                              |
|         |                                       | Power steering                  | √            |          |           | √           |           |                                                         |
|         |                                       | ABS 8.0                         | √            | √        | √         | √           | √         | 1.Bleeding                                              |



## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle         | System                    | ECU type       | Functions    |          |           |             |           |                                                         |
|-----------------|---------------------------|----------------|--------------|----------|-----------|-------------|-----------|---------------------------------------------------------|
|                 |                           |                | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                        |
| BOXER 3 minibus | Active and passive safety | ESP 8.0        | √            | √        | √         | √           | √         | 1.Bleeding<br>2.Steering wheel angle sensor calibration |
|                 |                           | ASR 8.0        | √            | √        | √         | √           | √         | 1.Bleeding                                              |
|                 |                           | Power steering | √            |          |           | √           |           |                                                         |

## PEUGEOT V42.61 Diagnostics List (Note: For reference only)

| Vehicle          | System                                                                                                    | ECU type | Functions    |          |           |             |           |                   |
|------------------|-----------------------------------------------------------------------------------------------------------|----------|--------------|----------|-----------|-------------|-----------|-------------------|
|                  |                                                                                                           |          | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function  |
|                  |                                                                                                           |          |              |          |           |             |           |                   |
| CONNECTOR        | X431                                                                                                      |          |              |          |           |             |           | DIAGUN            |
| SMART OBD        | For all the cars except 307/607 can model cars after 2006 cars.                                           |          | N/A          |          |           |             |           |                   |
| OBD 16C          | For all the cars except 307/607 can model cars after 2006 cars.                                           |          | N/A          |          |           |             |           |                   |
| CANBUS II        | Just test 307/607 can model cars after 2006 cars. And need to add PEUGEOT/CITROEN-16 Converter connector. |          | N/A          |          |           |             |           |                   |
| diagun connector | N/A                                                                                                       |          |              |          |           |             |           | For all the cars. |
| SUPER 16         | For all the cars.                                                                                         |          | N/A          |          |           |             |           |                   |











































































































































































1

2





|

|









































































|

|