

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type                      | System | Functions |           |             |           |                                                             |        |
|---------|---------------------------------|----------------------------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------|--------|
|         |                                 |                                  |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                            | Others |
| Mira    | 00/10(H12/10)-<br>01/06(H13/06) | EF-<br>DET(Mechannism<br>AT)     | EFI    | √         | √         | √           |           | 1.Read ECU No.                                              |        |
| Mira    | 00/10(H12/10)-<br>01/06(H13/06) | EF-<br>DET(Mechannism<br>AT)     | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                            |        |
| Mira    | 00/10(H12/10)-<br>01/06(H13/06) | EF-<br>DET(Mechannism<br>AT)     | DVS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.DVS Bleeding                            |        |
| Mira    | 00/10(H12/10)-<br>01/06(H13/06) | EF-<br>DET(Mechannism<br>AT)     | A/B    | √         | √         |             |           | 1.Read ECU No.                                              |        |
| Mira    | 00/10(H12/10)-<br>01/06(H13/06) | EF-DET(Electrical<br>Control AT) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                              |        |
| Mira    | 00/10(H12/10)-<br>01/06(H13/06) | EF-DET(Electrical<br>Control AT) | A/T    | √         | √         | √           | √         | 1.Read ECU No.<br>2.A/T Learning<br>Value<br>Initialization |        |
| Mira    | 00/10(H12/10)-<br>01/06(H13/06) | EF-DET(Electrical<br>Control AT) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                            |        |
| Mira    | 00/10(H12/10)-<br>01/06(H13/06) | EF-DET(Electrical<br>Control AT) | DVS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.DVS Bleeding                            |        |
| Mira    | 00/10(H12/10)-<br>01/06(H13/06) | EF-DET(Electrical<br>Control AT) | A/B    | √         | √         |             |           | 1.Read ECU No.                                              |        |
| Mira    | 00/10(H12/10)-<br>01/06(H13/06) | EF-SE                            | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                              |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type | System | Functions |           |             |           |                                                               |        |
|---------|---------------------------------|-------------|--------|-----------|-----------|-------------|-----------|---------------------------------------------------------------|--------|
|         |                                 |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                              | Others |
| Mira    | 00/10(H12/10)-<br>01/06(H13/06) | EF-SE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                              |        |
| Mira    | 00/10(H12/10)-<br>01/06(H13/06) | EF-SE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                                |        |
| Mira    | 00/10(H12/10)-<br>01/06(H13/06) | EF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                |        |
| Mira    | 00/10(H12/10)-<br>01/06(H13/06) | EF-VE       | CVT    | √         | √         | √           |           | 1.Read ECU No.                                                |        |
| Mira    | 00/10(H12/10)-<br>01/06(H13/06) | EF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                              |        |
| Mira    | 00/10(H12/10)-<br>01/06(H13/06) | EF-VE       | DVS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.DVS Bleeding                              |        |
| Mira    | 00/10(H12/10)-<br>01/06(H13/06) | EF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                                |        |
| Mira    | 00/10(H12/10)-<br>01/06(H13/06) | EF-VE2      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                |        |
| Mira    | 00/10(H12/10)-<br>01/06(H13/06) | EF-VE2      | CVT    | √         | √         | √           |           | 1.Read ECU No.                                                |        |
| Mira    | 00/10(H12/10)-<br>01/06(H13/06) | EF-VE2      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                              |        |
| Mira    | 00/10(H12/10)-<br>01/06(H13/06) | EF-VE2      | EPS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Torque sensor<br>zero point<br>adjustment |        |
| Mira    | 00/10(H12/10)-<br>01/06(H13/06) | EF-VE2      | A/B    | √         | √         |             |           | 1.Read ECU No.                                                |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type | System | Functions |           |             |           |                                                          |        |
|---------|---------------------------------|-------------|--------|-----------|-----------|-------------|-----------|----------------------------------------------------------|--------|
|         |                                 |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                         | Others |
| Mira    | 01/06(H13/06)-<br>02/12(H14/12) | EF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                           |        |
| Mira    | 01/06(H13/06)-<br>02/12(H14/12) | EF-DET      | A/T    | √         | √         | √           | √         | 1.Read ECU No.<br>2.A/T Learning Value<br>Initialization |        |
| Mira    | 01/06(H13/06)-<br>02/12(H14/12) | EF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                         |        |
| Mira    | 01/06(H13/06)-<br>02/12(H14/12) | EF-DET      | DVS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.DVS Bleeding                         |        |
| Mira    | 01/06(H13/06)-<br>02/12(H14/12) | EF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                           |        |
| Mira    | 01/06(H13/06)-<br>02/12(H14/12) | EF-SE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                           |        |
| Mira    | 01/06(H13/06)-<br>02/12(H14/12) | EF-SE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.                                           |        |
| Mira    | 01/06(H13/06)-<br>02/12(H14/12) | EF-SE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                           |        |
| Mira    | 01/06(H13/06)-<br>02/12(H14/12) | EF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                           |        |
| Mira    | 01/06(H13/06)-<br>02/12(H14/12) | EF-VE       | CVT    | √         | √         | √           |           | 1.Read ECU No.                                           |        |
| Mira    | 01/06(H13/06)-<br>02/12(H14/12) | EF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                         |        |
| Mira    | 01/06(H13/06)-<br>02/12(H14/12) | EF-VE       | DVS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.DVS Bleeding                         |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type | System | Functions |           |             |           |                                                                       |        |
|---------|---------------------------------|-------------|--------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------|--------|
|         |                                 |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                      | Others |
| Mira    | 01/06(H13/06)-<br>02/12(H14/12) | EF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                                        |        |
| Mira    | 01/06(H13/06)-<br>02/12(H14/12) | EF-VE2      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                        |        |
| Mira    | 01/06(H13/06)-<br>02/12(H14/12) | EF-VE2      | CVT    | √         | √         | √           |           | 1.Read ECU No.                                                        |        |
| Mira    | 01/06(H13/06)-<br>02/12(H14/12) | EF-VE2      | ABS    | √         | √         | √           | √         | 1.Read ECU No.                                                        |        |
| Mira    | 01/06(H13/06)-<br>02/12(H14/12) | EF-VE2      | EPS    | √         | √         | √           |           | 1.Torque sensor<br>zero point<br>adjustment(*)<br>2.Mode<br>change(*) |        |
| Mira    | 01/06(H13/06)-<br>02/12(H14/12) | EF-VE2      | A/B    | √         | √         |             |           | 1.Read ECU No.                                                        |        |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                        |        |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-DET      | A/T    | √         | √         | √           | √         | 1.Read ECU No.<br>2.A/T Learning<br>Value<br>Initialization           |        |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                    |        |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-DET      | DVS    | √         | √         | √           |           | 1.Read ECU No.<br>2.DVS Bleeding                                      |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type | System | Functions |           |             |           |                                                              |        |
|---------|---------------------------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------------|--------|
|         |                                 |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                             | Others |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-DET      | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-DET      | KFS    | √         | √         | √           |           | 1.Read ECU No.                                               |        |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-SE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-SE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding           |        |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-SE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-SE       | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-VD       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-VD       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding           |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type | System | Functions |           |             |           |                                                              |        |
|---------|---------------------------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------------|--------|
|         |                                 |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                             | Others |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-VD       | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-VD       | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-VE       | CVT    | √         | √         | √           |           | 1.Read ECU No.                                               |        |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                             |        |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-VE       | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-VN       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-VN       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding           |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type | System | Functions |           |             |           |                                                              |        |
|---------|---------------------------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------------|--------|
|         |                                 |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                             | Others |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-VN       | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Mira    | 02/12(H14/12)-<br>04/12(H16/12) | EF-VN       | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-DET      | A/T    | √         | √         | √           | √         | 1.Read ECU No.<br>2.A/T Learning Value Initialization        |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-DET      | DVS    | √         | √         | √           |           | 1.Read ECU No.<br>2.DVS Bleeding                             |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding           |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-DET      | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type | System | Functions |           |             |           |                                                              |        |
|---------|---------------------------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------------|--------|
|         |                                 |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                             | Others |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-DET      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status       |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-SE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-SE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding           |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-SE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-SE       | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-VD       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-VD       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding           |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-VD       | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type       | System | Functions |           |             |           |                                                              |        |
|---------|---------------------------------|-------------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------------|--------|
|         |                                 |                   |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                             | Others |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-VD             | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-VE(BEYOND CVT) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-VE(BEYOND CVT) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding           |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-VE(BEYOND CVT) | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-VE(BEYOND CVT) | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-VE(CVT)        | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-VE(CVT)        | CVT    | √         | √         | √           |           | 1.Read ECU No.                                               |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-VE(CVT)        | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding           |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-VE(CVT)        | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type | System | Functions |           |             |           |                                                              |        |
|---------|---------------------------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------------|--------|
|         |                                 |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                             | Others |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-VE(CVT)  | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-VN       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-VN       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding           |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-VN       | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Mira    | 04/12(H16/12)-<br>06/12(H18/12) | EF-VN       | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |
| Mira    | 06/12(H18/12)-<br>08/12(H20/12) | KF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Mira    | 06/12(H18/12)-<br>08/12(H20/12) | KF-DET      | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing            |        |
| Mira    | 06/12(H18/12)-<br>08/12(H20/12) | KF-DET      | ACC    | √         | √         |             |           | 1.Read ECU No.                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type | System          | Functions |           |             |           |                                                                      |        |
|---------|---------------------------------|-------------|-----------------|-----------|-----------|-------------|-----------|----------------------------------------------------------------------|--------|
|         |                                 |             |                 | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                     | Others |
| Mira    | 06/12(H18/12)-<br>08/12(H20/12) | KF-DET      | ABS             | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                   |        |
| Mira    | 06/12(H18/12)-<br>08/12(H20/12) | KF-DET      | VSC             | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding<br>4.3rd bleeding |        |
| Mira    | 06/12(H18/12)-<br>08/12(H20/12) | KF-DET      | EPS             | √         | √         | √           |           | 1.Read ECU No.                                                       |        |
| Mira    | 06/12(H18/12)-<br>08/12(H20/12) | KF-DET      | A/B             | √         | √         |             |           | 1.Read ECU No.                                                       |        |
| Mira    | 06/12(H18/12)-<br>08/12(H20/12) | KF-DET      | KFS             | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main<br>Key and Subkey<br>Status         |        |
| Mira    | 06/12(H18/12)-<br>08/12(H20/12) | KF-DET      | ITC             | √         | √         | √           | √         | 1.Read ECU No.                                                       |        |
| Mira    | 06/12(H18/12)-<br>08/12(H20/12) | KF-DET      | Power<br>Source | √         | √         | √           | √         | 1.Read ECU No.                                                       |        |
| Mira    | 06/12(H18/12)-<br>08/12(H20/12) | KF-VE       | EFI             | √         | √         | √           | √         | 1.Read ECU No.                                                       |        |
| Mira    | 06/12(H18/12)-<br>08/12(H20/12) | KF-VE       | CVT             | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU<br>Learning<br>Initializing              |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type | System | Functions |           |             |           |                                                                                                                 |        |
|---------|---------------------------------|-------------|--------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                | Others |
| Mira    | 06/12(H18/12)-<br>08/12(H20/12) | KF-VE       | ERS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU<br>Initialization<br>Learning<br>3.Delete and<br>input Starter<br>Working Times |        |
| Mira    | 06/12(H18/12)-<br>08/12(H20/12) | KF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                                              |        |
| Mira    | 06/12(H18/12)-<br>08/12(H20/12) | KF-VE       | EPS    | √         | √         | √           |           | 1.Read ECU No.                                                                                                  |        |
| Mira    | 06/12(H18/12)-<br>08/12(H20/12) | KF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type | System       | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|---------------------------------|-------------|--------------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |             |              | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Mira    | 06/12(H18/12)-<br>08/12(H20/12) | KF-VE       | KFS          | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Mira    | 06/12(H18/12)-<br>08/12(H20/12) | KF-VE       | ITC          | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira    | 06/12(H18/12)-<br>08/12(H20/12) | KF-VE       | Power Source | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira    | 06/12(H18/12)-<br>08/12(H20/12) | KF-VN       | EFI          | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira    | 06/12(H18/12)-<br>08/12(H20/12) | KF-VN       | EPS          | √         | √         | √           |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira    | 06/12(H18/12)-<br>08/12(H20/12) | KF-VN       | A/B          | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type           | System | Functions |           |             |           |                                                                      |        |
|---------|---------------------------------|-----------------------|--------|-----------|-----------|-------------|-----------|----------------------------------------------------------------------|--------|
|         |                                 |                       |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                     | Others |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-DET(W/O Pre-Crash) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                       |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-DET(W/O Pre-Crash) | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                    |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-DET(W/O Pre-Crash) | ACC    | √         | √         |             |           | 1.Read ECU No.                                                       |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-DET(W/O Pre-Crash) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                   |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-DET(W/O Pre-Crash) | VSC    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding<br>4.3rd bleeding |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-DET(W/O Pre-Crash) | EPS    | √         | √         | √           |           | 1.Read ECU No.                                                       |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-DET(W/O Pre-Crash) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                       |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type           | System       | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|---------------------------------|-----------------------|--------------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                       |              | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-DET(W/O Pre-Crash) | KFS          | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-DET(W/O Pre-Crash) | ITC          | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-DET(W/O Pre-Crash) | Power Source | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-DET(W/ Pre-Crash)  | EFI          | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-DET(W/ Pre-Crash)  | CVT          | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type          | System | Functions |           |             |           |                                                                      |        |
|---------|---------------------------------|----------------------|--------|-----------|-----------|-------------|-----------|----------------------------------------------------------------------|--------|
|         |                                 |                      |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                     | Others |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-DET(W/ Pre-Crash) | ACC    | √         | √         |             |           | 1.Read ECU No.                                                       |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-DET(W/ Pre-Crash) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                   |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-DET(W/ Pre-Crash) | VSC    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding<br>4.3rd bleeding |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-DET(W/ Pre-Crash) | EPS    | √         | √         | √           |           | 1.Read ECU No.                                                       |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-DET(W/ Pre-Crash) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                       |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type          | System       | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|---------------------------------|----------------------|--------------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                      |              | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-DET(W/ Pre-Crash) | KFS          | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-DET(W/ Pre-Crash) | ITC          | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-DET(W/ Pre-Crash) | Power Source | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-VE(W/O Pre-Crash) | EFI          | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-VE(W/O Pre-Crash) | CVT          | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type          | System | Functions |           |             |           |                                                                                                     |        |
|---------|---------------------------------|----------------------|--------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------|--------|
|         |                                 |                      |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                    | Others |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-VE(W/O Pre-Crash) | ERS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU Initialization Learning<br>3.Delete and input Starter Working Times |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-VE(W/O Pre-Crash) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                                  |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-VE(W/O Pre-Crash) | EPS    | √         | √         | √           |           | 1.Read ECU No.                                                                                      |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-VE(W/O Pre-Crash) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                      |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type          | System       | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|---------------------------------|----------------------|--------------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                      |              | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-VE(W/O Pre-Crash) | KFS          | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-VE(W/O Pre-Crash) | ITC          | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-VE(W/O Pre-Crash) | Power Source | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-VE(W/ Pre-Crash)  | EFI          | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-VE(W/ Pre-Crash)  | CVT          | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type         | System | Functions |           |             |           |                                                                                                     |        |
|---------|---------------------------------|---------------------|--------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------|--------|
|         |                                 |                     |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                    | Others |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-VE(W/ Pre-Crash) | ERS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU Initialization Learning<br>3.Delete and input Starter Working Times |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-VE(W/ Pre-Crash) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                                  |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-VE(W/ Pre-Crash) | EPS    | √         | √         | √           |           | 1.Read ECU No.                                                                                      |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04) | KF-VE(W/ Pre-Crash) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                      |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                                              | Engine Type         | System       | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|---------------------------------------------------|---------------------|--------------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                                   |                     |              | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04)                   | KF-VE(W/ Pre-Crash) | KFS          | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04)                   | KF-VE(W/ Pre-Crash) | ITC          | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira    | 08/12(H20/12)-<br>10/04(H22/04)                   | KF-VE(W/ Pre-Crash) | Power Source | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira    | 10/04(H22/04)-<br>11/07(H23/07)-<br>13/02(H25/02) | KF-DET              | EFI          | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                                              | Engine Type | System | Functions |           |             |           |                                                      |        |
|---------|---------------------------------------------------|-------------|--------|-----------|-----------|-------------|-----------|------------------------------------------------------|--------|
|         |                                                   |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                     | Others |
| Mira    | 10/04(H22/04)-<br>11/07(H23/07)-<br>13/02(H25/02) | KF-DET      | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning<br>Initializing |        |
| Mira    | 10/04(H22/04)-<br>11/07(H23/07)-<br>13/02(H25/02) | KF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding   |        |
| Mira    | 10/04(H22/04)-<br>11/07(H23/07)-<br>13/02(H25/02) | KF-DET      | EPS    | √         | √         | √           |           | 1.Read ECU No.                                       |        |
| Mira    | 10/04(H22/04)-<br>11/07(H23/07)-<br>13/02(H25/02) | KF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                       |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                                              | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|---------------------------------------------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                                   |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Mira    | 10/04(H22/04)-<br>11/07(H23/07)-<br>13/02(H25/02) | KF-DET      | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Mira    | 10/04(H22/04)-<br>11/07(H23/07)-<br>13/02(H25/02) | KF-DET      | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira    | 10/04(H22/04)-<br>11/07(H23/07)-<br>13/02(H25/02) | KF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira    | 10/04(H22/04)-<br>11/07(H23/07)-<br>13/02(H25/02) | KF-VE       | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                                              | Engine Type | System | Functions |           |             |           |                                                                                                                 |        |
|---------|---------------------------------------------------|-------------|--------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------------|--------|
|         |                                                   |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                | Others |
| Mira    | 10/04(H22/04)-<br>11/07(H23/07)-<br>13/02(H25/02) | KF-VE       | ERS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU<br>Initialization<br>Learning<br>3.Delete and<br>input Starter<br>Working Times |        |
| Mira    | 10/04(H22/04)-<br>11/07(H23/07)-<br>13/02(H25/02) | KF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                                              |        |
| Mira    | 10/04(H22/04)-<br>11/07(H23/07)-<br>13/02(H25/02) | KF-VE       | EPS    | √         | √         | √           |           | 1.Read ECU No.                                                                                                  |        |
| Mira    | 10/04(H22/04)-<br>11/07(H23/07)-<br>13/02(H25/02) | KF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                                              | Engine Type         | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|---------------------------------------------------|---------------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                                   |                     |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Mira    | 10/04(H22/04)-<br>11/07(H23/07)-<br>13/02(H25/02) | KF-VE               | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Mira    | 10/04(H22/04)-<br>11/07(H23/07)-<br>13/02(H25/02) | KF-VE               | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02)                   | KF(N/A)(Van Series) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02)                   | KF(N/A)(Van Series) | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type               | System | Functions |           |             |           |                                                      |        |
|---------|---------------------------------|---------------------------|--------|-----------|-----------|-------------|-----------|------------------------------------------------------|--------|
|         |                                 |                           |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                     | Others |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Van Series)       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding   |        |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Van Series)       | EPS    | √         | √         | √           |           | 1.Read ECU No.                                       |        |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Van Series)       | A/B    | √         | √         |             |           | 1.Read ECU No.                                       |        |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Van Series)       | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                       |        |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Sedan Series,2WD) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                       |        |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Sedan Series,2WD) | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning<br>Initializing |        |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Sedan Series,2WD) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding   |        |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Sedan Series,2WD) | EPS    | √         | √         | √           |           | 1.Read ECU No.                                       |        |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Sedan Series,2WD) | A/B    | √         | √         |             |           | 1.Read ECU No.                                       |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type                      | System | Functions |           |             |           |                                                                                                                                                                                                                               |        |
|---------|---------------------------------|----------------------------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                                  |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                                              | Others |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Sedan<br>Series,2WD)     | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main<br>Key and Subkey<br>Status<br>3.Antenna<br>connection<br>diagnostic<br>4.Wireless<br>communication<br>test<br>5.Intelligent<br>communication<br>test<br>6.Repeater<br>communication<br>test |        |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Sedan<br>Series,2WD)     | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                                                |        |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Sedan<br>Series,4WD,M/T) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                                                |        |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Sedan<br>Series,4WD,M/T) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                                                                                                                                                            |        |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Sedan<br>Series,4WD,M/T) | EPS    | √         | √         | √           |           | 1.Read ECU No.                                                                                                                                                                                                                |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type                      | System | Functions |           |             |           |                                                                                                                                                                                                                               |        |
|---------|---------------------------------|----------------------------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                                  |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                                              | Others |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Sedan<br>Series,4WD,M/T) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                                                |        |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Sedan<br>Series,4WD,M/T) | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main<br>Key and Subkey<br>Status<br>3.Antenna<br>connection<br>diagnostic<br>4.Wireless<br>communication<br>test<br>5.Intelligent<br>communication<br>test<br>6.Repeater<br>communication<br>test |        |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Sedan<br>Series,4WD,M/T) | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                                                |        |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Sedan<br>Series,4WD,CVT) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                                                |        |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Sedan<br>Series,4WD,CVT) | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU<br>Learning<br>Initializing                                                                                                                                                                       |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type                      | System | Functions |           |             |           |                                                                                                                                                                                                                               |        |
|---------|---------------------------------|----------------------------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                                  |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                                              | Others |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Sedan<br>Series,4WD,CVT) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                                                                                                                                                            |        |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Sedan<br>Series,4WD,CVT) | EPS    | √         | √         | √           |           | 1.Read ECU No.                                                                                                                                                                                                                |        |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Sedan<br>Series,4WD,CVT) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                                                |        |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Sedan<br>Series,4WD,CVT) | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main<br>Key and Subkey<br>Status<br>3.Antenna<br>connection<br>diagnostic<br>4.Wireless<br>communication<br>test<br>5.Intelligent<br>communication<br>test<br>6.Repeater<br>communication<br>test |        |
| Mira    | 11/07(H23/07)-<br>13/02(H25/02) | KF(N/A)(Sedan<br>Series,4WD,CVT) | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                                                |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year           | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|----------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Mira    | 13/02(H25/02)- | KF(N/A)     | EFI    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Mira    | 13/02(H25/02)- | KF(N/A)     | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |
| Mira    | 13/02(H25/02)- | KF(N/A)     | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                                                                                                                              |        |
| Mira    | 13/02(H25/02)- | KF(N/A)     | EPS    | √         | √         | √           |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira    | 13/02(H25/02)- | KF(N/A)     | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira    | 13/02(H25/02)- | KF(N/A)     | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type                      | System | Functions |           |             |           |                                                              |        |
|---------|---------------------------------|----------------------------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------------|--------|
|         |                                 |                                  |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                             | Others |
| Move    | 00/10(H12/10)-<br>01/06(H13/06) | EF-<br>DET(Mechannism<br>AT)     | EFI    | √         | √         | √           |           | 1.Read ECU No.                                               |        |
| Move    | 00/10(H12/10)-<br>01/06(H13/06) | EF-<br>DET(Mechannism<br>AT)     | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                             |        |
| Move    | 00/10(H12/10)-<br>01/06(H13/06) | EF-<br>DET(Mechannism<br>AT)     | DVS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.DVS Bleeding                             |        |
| Move    | 00/10(H12/10)-<br>01/06(H13/06) | EF-<br>DET(Mechannism<br>AT)     | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Move    | 00/10(H12/10)-<br>01/06(H13/06) | EF-DET(Electrical<br>Control AT) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Move    | 00/10(H12/10)-<br>01/06(H13/06) | EF-DET(Electrical<br>Control AT) | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning<br>Value<br>Initialization  |        |
| Move    | 00/10(H12/10)-<br>01/06(H13/06) | EF-DET(Electrical<br>Control AT) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                             |        |
| Move    | 00/10(H12/10)-<br>01/06(H13/06) | EF-DET(Electrical<br>Control AT) | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Move    | 00/10(H12/10)-<br>01/06(H13/06) | EF-DET(Electrical<br>Control AT) | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main<br>Key and Subkey<br>Status |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type                       | System | Functions |           |             |           |                                  |        |
|---------|---------------------------------|-----------------------------------|--------|-----------|-----------|-------------|-----------|----------------------------------|--------|
|         |                                 |                                   |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                 | Others |
| Move    | 00/10(H12/10)-<br>01/06(H13/06) | EF-VE(W/ tyre<br>blow-up device)  | EFI    | √         | √         | √           | √         | 1.Read ECU No.                   |        |
| Move    | 00/10(H12/10)-<br>01/06(H13/06) | EF-VE(W/ tyre<br>blow-up device)  | CVT    | √         | √         | √           |           | 1.Read ECU No.                   |        |
| Move    | 00/10(H12/10)-<br>01/06(H13/06) | EF-VE(W/ tyre<br>blow-up device)  | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding |        |
| Move    | 00/10(H12/10)-<br>01/06(H13/06) | EF-VE(W/ tyre<br>blow-up device)  | DVS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.DVS Bleeding |        |
| Move    | 00/10(H12/10)-<br>01/06(H13/06) | EF-VE(W/ tyre<br>blow-up device)  | A/B    | √         | √         |             |           | 1.Read ECU No.                   |        |
| Move    | 00/10(H12/10)-<br>01/06(H13/06) | EF-VE(W/O tyre<br>blow-up device) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                   |        |
| Move    | 00/10(H12/10)-<br>01/06(H13/06) | EF-VE(W/O tyre<br>blow-up device) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding |        |
| Move    | 00/10(H12/10)-<br>01/06(H13/06) | EF-VE(W/O tyre<br>blow-up device) | A/B    | √         | √         |             |           | 1.Read ECU No.                   |        |
| Move    | 00/10(H12/10)-<br>01/06(H13/06) | JB-DET                            | EFI    | √         | √         | √           |           | 1.Read ECU No.                   |        |
| Move    | 00/10(H12/10)-<br>01/06(H13/06) | JB-DET                            | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding |        |
| Move    | 00/10(H12/10)-<br>01/06(H13/06) | JB-DET                            | DVS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.DVS Bleeding |        |
| Move    | 00/10(H12/10)-<br>01/06(H13/06) | JB-DET                            | A/B    | √         | √         |             |           | 1.Read ECU No.                   |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type                   | System | Functions |           |             |           |                                                        |        |
|---------|---------------------------------|-------------------------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------|--------|
|         |                                 |                               |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                       | Others |
| Move    | 00/10(H12/10)-<br>01/06(H13/06) | JB-DET                        | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Move    | 01/06(H13/06)-<br>01/10(H13/10) | EF-DET                        | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Move    | 01/06(H13/06)-<br>01/10(H13/10) | EF-DET                        | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization  |        |
| Move    | 01/06(H13/06)-<br>01/10(H13/10) | EF-DET                        | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |
| Move    | 01/06(H13/06)-<br>01/10(H13/10) | EF-DET                        | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Move    | 01/06(H13/06)-<br>01/10(H13/10) | EF-DET                        | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Move    | 01/06(H13/06)-<br>01/10(H13/10) | EF-VE(W/ tyre blow-up device) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Move    | 01/06(H13/06)-<br>01/10(H13/10) | EF-VE(W/ tyre blow-up device) | CVT    | √         | √         | √           |           | 1.Read ECU No.                                         |        |
| Move    | 01/06(H13/06)-<br>01/10(H13/10) | EF-VE(W/ tyre blow-up device) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |
| Move    | 01/06(H13/06)-<br>01/10(H13/10) | EF-VE(W/ tyre blow-up device) | DVS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.DVS Bleeding                       |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type                       | System | Functions |           |             |           |                                                              |        |
|---------|---------------------------------|-----------------------------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------------|--------|
|         |                                 |                                   |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                             | Others |
| Move    | 01/06(H13/06)-<br>01/10(H13/10) | EF-VE(W/ tyre<br>blow-up device)  | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Move    | 01/06(H13/06)-<br>01/10(H13/10) | EF-VE(W/O tyre<br>blow-up device) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Move    | 01/06(H13/06)-<br>01/10(H13/10) | EF-VE(W/O tyre<br>blow-up device) | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Move    | 01/06(H13/06)-<br>01/10(H13/10) | JB-DET                            | EFI    | √         | √         | √           |           | 1.Read ECU No.                                               |        |
| Move    | 01/06(H13/06)-<br>01/10(H13/10) | JB-DET                            | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                             |        |
| Move    | 01/06(H13/06)-<br>01/10(H13/10) | JB-DET                            | DVS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.DVS Bleeding                             |        |
| Move    | 01/06(H13/06)-<br>01/10(H13/10) | JB-DET                            | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Move    | 01/06(H13/06)-<br>01/10(H13/10) | JB-DET                            | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main<br>Key and Subkey<br>Status |        |
| Move    | 01/10(H13/10)-<br>02/10(H14/10) | EF-DET                            | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Move    | 01/10(H13/10)-<br>02/10(H14/10) | EF-DET                            | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning<br>Value<br>Initialization  |        |
| Move    | 01/10(H13/10)-<br>02/10(H14/10) | EF-DET                            | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                             |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type                    | System | Functions |           |             |           |                                                        |        |
|---------|---------------------------------|--------------------------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------|--------|
|         |                                 |                                |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                       | Others |
| Move    | 01/10(H13/10)-<br>02/10(H14/10) | EF-DET                         | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Move    | 01/10(H13/10)-<br>02/10(H14/10) | EF-DET                         | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Move    | 01/10(H13/10)-<br>02/10(H14/10) | EF-VE(W/ tyre blow-up device)  | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Move    | 01/10(H13/10)-<br>02/10(H14/10) | EF-VE(W/ tyre blow-up device)  | CVT    | √         | √         | √           |           | 1.Read ECU No.                                         |        |
| Move    | 01/10(H13/10)-<br>02/10(H14/10) | EF-VE(W/ tyre blow-up device)  | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |
| Move    | 01/10(H13/10)-<br>02/10(H14/10) | EF-VE(W/ tyre blow-up device)  | DVS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.DVS Bleeding                       |        |
| Move    | 01/10(H13/10)-<br>02/10(H14/10) | EF-VE(W/ tyre blow-up device)  | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Move    | 01/10(H13/10)-<br>02/10(H14/10) | EF-VE(W/O tyre blow-up device) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Move    | 01/10(H13/10)-<br>02/10(H14/10) | EF-VE(W/O tyre blow-up device) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding     |        |
| Move    | 01/10(H13/10)-<br>02/10(H14/10) | EF-VE(W/O tyre blow-up device) | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Move    | 01/10(H13/10)-<br>02/10(H14/10) | JB-DET                         | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type | System | Functions |           |             |           |                                                              |        |
|---------|---------------------------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------------|--------|
|         |                                 |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                             | Others |
| Move    | 01/10(H13/10)-<br>02/10(H14/10) | JB-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                             |        |
| Move    | 01/10(H13/10)-<br>02/10(H14/10) | JB-DET      | DVS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.DVS Bleeding                             |        |
| Move    | 01/10(H13/10)-<br>02/10(H14/10) | JB-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Move    | 01/10(H13/10)-<br>02/10(H14/10) | JB-DET      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status       |        |
| Move    | 02/10(H14/10)-<br>04/12(H16/12) | EF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Move    | 02/10(H14/10)-<br>04/12(H16/12) | EF-DET      | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization        |        |
| Move    | 02/10(H14/10)-<br>04/12(H16/12) | EF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding           |        |
| Move    | 02/10(H14/10)-<br>04/12(H16/12) | EF-DET      | DVS    | √         | √         | √           |           | 1.Read ECU No.<br>2.DVS Bleeding                             |        |
| Move    | 02/10(H14/10)-<br>04/12(H16/12) | EF-DET      | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type | System | Functions |           |             |           |                                                              |        |
|---------|---------------------------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------------|--------|
|         |                                 |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                             | Others |
| Move    | 02/10(H14/10)-<br>04/12(H16/12) | EF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Move    | 02/10(H14/10)-<br>04/12(H16/12) | EF-DET      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status       |        |
| Move    | 02/10(H14/10)-<br>04/12(H16/12) | EF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Move    | 02/10(H14/10)-<br>04/12(H16/12) | EF-VE       | CVT    | √         | √         | √           |           | 1.Read ECU No.                                               |        |
| Move    | 02/10(H14/10)-<br>04/12(H16/12) | EF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding           |        |
| Move    | 02/10(H14/10)-<br>04/12(H16/12) | EF-VE       | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |
| Move    | 02/10(H14/10)-<br>04/12(H16/12) | EF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Move    | 02/10(H14/10)-<br>04/12(H16/12) | EF-VE       | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status       |        |
| Move    | 02/10(H14/10)-<br>04/12(H16/12) | JB-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type | System | Functions |           |             |           |                                                                       |        |
|---------|---------------------------------|-------------|--------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------|--------|
|         |                                 |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                      | Others |
| Move    | 02/10(H14/10)-<br>04/12(H16/12) | JB-DET      | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value<br>Initialization              |        |
| Move    | 02/10(H14/10)-<br>04/12(H16/12) | JB-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                    |        |
| Move    | 02/10(H14/10)-<br>04/12(H16/12) | JB-DET      | DVS    | √         | √         | √           |           | 1.Read ECU No.<br>2.DVS Bleeding                                      |        |
| Move    | 02/10(H14/10)-<br>04/12(H16/12) | JB-DET      | EPS    | √         | √         | √           |           | 1.Torque sensor<br>zero point<br>adjustment(*)<br>2.Mode<br>change(*) |        |
| Move    | 02/10(H14/10)-<br>04/12(H16/12) | JB-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                                        |        |
| Move    | 02/10(H14/10)-<br>04/12(H16/12) | JB-DET      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main<br>Key and Subkey<br>Status          |        |
| Move    | 02/10(H14/10)-<br>04/12(H16/12) | JB-DET      | ACC    | √         | √         |             |           | 1.Read ECU No.<br>2.Radar Cruise<br>Optical Axis<br>Adjustment        |        |
| Move    | 04/12(16/12)-<br>06/10(H18/10)  | EF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                        |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                           | Engine Type          | System | Functions |           |             |           |                                                                       |        |
|---------|--------------------------------|----------------------|--------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------|--------|
|         |                                |                      |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                      | Others |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | EF-DET               | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value<br>Initialization              |        |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | EF-DET               | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                    |        |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | EF-DET               | DVS    | √         | √         | √           |           | 1.Read ECU No.<br>2.DVS Bleeding                                      |        |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | EF-DET               | EPS    | √         | √         | √           |           | 1.Torque sensor<br>zero point<br>adjustment(*)<br>2.Mode<br>change(*) |        |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | EF-DET               | A/B    | √         | √         |             |           | 1.Read ECU No.                                                        |        |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | EF-DET               | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main<br>Key and Subkey<br>Status          |        |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | EF-VE(BEYOND<br>CVT) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                        |        |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | EF-VE(BEYOND<br>CVT) | AT     | √         | √         | √           |           | 1.Read ECU No.                                                        |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                           | Engine Type          | System | Functions |           |             |           |                                                                       |        |
|---------|--------------------------------|----------------------|--------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------|--------|
|         |                                |                      |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                      | Others |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | EF-VE(BEYOND<br>CVT) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                    |        |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | EF-VE(BEYOND<br>CVT) | EPS    | √         | √         | √           |           | 1.Torque sensor<br>zero point<br>adjustment(*)<br>2.Mode<br>change(*) |        |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | EF-VE(BEYOND<br>CVT) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                        |        |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | EF-VE(BEYOND<br>CVT) | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main<br>Key and Subkey<br>Status          |        |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | EF-VE(CVT)           | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                        |        |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | EF-VE(CVT)           | CVT    | √         | √         | √           |           | 1.Read ECU No.                                                        |        |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | EF-VE(CVT)           | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                    |        |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | EF-VE(CVT)           | EPS    | √         | √         | √           |           | 1.Torque sensor<br>zero point<br>adjustment(*)<br>2.Mode<br>change(*) |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                           | Engine Type | System | Functions |           |             |           |                                                                       |        |
|---------|--------------------------------|-------------|--------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------|--------|
|         |                                |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                      | Others |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | EF-VE(CVT)  | A/B    | √         | √         |             |           | 1.Read ECU No.                                                        |        |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | EF-VE(CVT)  | KFS    | √         | √         | √           |           | 1.Read ECU No.                                                        |        |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | JB-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                        |        |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | JB-DET      | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value<br>Initialization              |        |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | JB-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                                      |        |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | JB-DET      | DVS    | √         | √         | √           |           | 1.Read ECU No.<br>2.DVS Bleeding                                      |        |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | JB-DET      | EPS    | √         | √         | √           |           | 1.Torque sensor<br>zero point<br>adjustment(*)<br>2.Mode<br>change(*) |        |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | JB-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                                        |        |
| Move    | 04/12(16/12)-<br>06/10(H18/10) | JB-DET      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main<br>Key and Subkey<br>Status          |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type | System | Functions |           |             |           |                                                                  |        |
|---------|---------------------------------|-------------|--------|-----------|-----------|-------------|-----------|------------------------------------------------------------------|--------|
|         |                                 |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                 | Others |
| Move    | 04/12(16/12)-<br>06/10(H18/10)  | JB-DET      | ACC    | √         | √         |             |           | 1.Read ECU No.<br>2.Radar Cruise<br>Optical Axis<br>Adjustment   |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                   |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-VE       | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU<br>Learning<br>Initializing          |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding               |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-VE       | EPS    | √         | √         | √           | √         | 1.Torque sensor<br>zero point<br>adjustment(*)<br>2.Read ECU No. |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                                   |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type          | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|---------------------------------|----------------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                      |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-VE                | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-VE                | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-DET(w/ Pre-Crash) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-DET(w/ Pre-Crash) | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type          | System | Functions |           |             |           |                                                                      |        |
|---------|---------------------------------|----------------------|--------|-----------|-----------|-------------|-----------|----------------------------------------------------------------------|--------|
|         |                                 |                      |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                     | Others |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-DET(w/ Pre-Crash) | ACC    | √         | √         |             |           | 1.Read ECU No.<br>2.Radar Cruise<br>Optical Axis<br>Adjustment       |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-DET(w/ Pre-Crash) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                   |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-DET(w/ Pre-Crash) | VSC    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding<br>4.3rd bleeding |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-DET(w/ Pre-Crash) | EPS    | √         | √         | √           | √         | 1.Torque sensor<br>zero point<br>adjustment(*)<br>2.Read ECU No.     |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-DET(w/ Pre-Crash) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                       |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type          | System       | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|---------------------------------|----------------------|--------------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                      |              | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-DET(w/ Pre-Crash) | KFS          | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-DET(w/ Pre-Crash) | ITC          | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-DET(w/ Pre-Crash) | Power Source | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-DET(w/ Pre-Crash) | PSB-D        | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-DET(w/ Pre-Crash) | PSD-P        | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type           | System | Functions |           |             |           |                                                                      |        |
|---------|---------------------------------|-----------------------|--------|-----------|-----------|-------------|-----------|----------------------------------------------------------------------|--------|
|         |                                 |                       |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                     | Others |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-DET(w/ Pre-Crash)  | IMG    | √         | √         | √           |           | 1.Read ECU No.<br>2.Camera Optical Axis Adjustment                   |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-DET(w/o Pre-Crash) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                       |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-DET(w/o Pre-Crash) | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                    |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-DET(w/o Pre-Crash) | ACC    | √         | √         |             |           | 1.Read ECU No.<br>2.Radar Cruise Optical Axis Adjustment             |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-DET(w/o Pre-Crash) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                   |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-DET(w/o Pre-Crash) | VSC    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding<br>4.3rd bleeding |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-DET(w/o Pre-Crash) | EPS    | √         | √         | √           | √         | 1.Torque sensor zero point adjustment(*)<br>2.Read ECU No.           |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type                       | System       | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|---------------------------------|-----------------------------------|--------------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                                   |              | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-DET(w/o Pre-Crash)             | A/B          | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-DET(w/o Pre-Crash)             | KFS          | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-DET(w/o Pre-Crash)             | ITC          | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 06/10(H18/10)-<br>08/12(H20/12) | KF-DET(w/o Pre-Crash)             | Power Source | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/ Smart Key/w/ Pre-Crash) | EFI          | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type                       | System | Functions |           |             |           |                                                                      |        |
|---------|---------------------------------|-----------------------------------|--------|-----------|-----------|-------------|-----------|----------------------------------------------------------------------|--------|
|         |                                 |                                   |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                     | Others |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/ Smart Key/w/ Pre-Crash) | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                    |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/ Smart Key/w/ Pre-Crash) | ACC    | √         | √         |             |           | 1.Read ECU No.<br>2.Radar Cruise Optical Axis Adjustment             |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/ Smart Key/w/ Pre-Crash) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                   |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/ Smart Key/w/ Pre-Crash) | VSC    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding<br>4.3rd bleeding |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/ Smart Key/w/ Pre-Crash) | EPS    | √         | √         | √           | √         | 1.Torque sensor zero point adjustment(*)<br>2.Read ECU No.           |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/ Smart Key/w/ Pre-Crash) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                       |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type                       | System       | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|---------------------------------|-----------------------------------|--------------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                                   |              | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/ Smart Key/w/ Pre-Crash) | KFS          | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/ Smart Key/w/ Pre-Crash) | ITC          | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/ Smart Key/w/ Pre-Crash) | Power Source | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/ Smart Key/w/ Pre-Crash) | PSB-D        | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type                               | System | Functions |           |             |           |                                                                      |        |
|---------|---------------------------------|-------------------------------------------|--------|-----------|-----------|-------------|-----------|----------------------------------------------------------------------|--------|
|         |                                 |                                           |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                     | Others |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/ Smart<br>Key/w/ Pre-<br>Crash)  | PSD-P  | √         | √         | √           | √         | 1.Read ECU No.                                                       |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/ Smart<br>Key/w/ Pre-<br>Crash)  | IMG    | √         | √         | √           |           | 1.Read ECU No.<br>2.Camera Optical<br>Axis Adjustment                |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/ Smart<br>Key/w/o Pre-<br>Crash) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                       |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/ Smart<br>Key/w/o Pre-<br>Crash) | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU<br>Learning<br>Initializing              |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/ Smart<br>Key/w/o Pre-<br>Crash) | ACC    | √         | √         |             |           | 1.Read ECU No.<br>2.Radar Cruise<br>Optical Axis<br>Adjustment       |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/ Smart<br>Key/w/o Pre-<br>Crash) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                   |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/ Smart<br>Key/w/o Pre-<br>Crash) | VSC    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding<br>4.3rd bleeding |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type                        | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|---------------------------------|------------------------------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                                    |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/ Smart Key/w/o Pre-Crash) | EPS    | √         | √         | √           | √         | 1.Torque sensor zero point adjustment(*)<br>2.Read ECU No.                                                                                                                                      |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/ Smart Key/w/o Pre-Crash) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/ Smart Key/w/o Pre-Crash) | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/ Smart Key/w/o Pre-Crash) | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type                        | System       | Functions |           |             |           |                                                                      |        |
|---------|---------------------------------|------------------------------------|--------------|-----------|-----------|-------------|-----------|----------------------------------------------------------------------|--------|
|         |                                 |                                    |              | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                     | Others |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/ Smart Key/w/o Pre-Crash) | Power Source | √         | √         | √           | √         | 1.Read ECU No.                                                       |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/o Smart Key/w/ Pre-Crash) | EFI          | √         | √         | √           | √         | 1.Read ECU No.                                                       |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/o Smart Key/w/ Pre-Crash) | CVT          | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                    |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/o Smart Key/w/ Pre-Crash) | ACC          | √         | √         |             |           | 1.Read ECU No.<br>2.Radar Cruise Optical Axis Adjustment             |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/o Smart Key/w/ Pre-Crash) | ABS          | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                   |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/o Smart Key/w/ Pre-Crash) | VSC          | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding<br>4.3rd bleeding |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/o Smart Key/w/ Pre-Crash) | EPS          | √         | √         | √           | √         | 1.Torque sensor zero point adjustment(*)<br>2.Read ECU No.           |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type                              | System | Functions |           |             |           |                                                                                                                                                                                                                               |        |
|---------|---------------------------------|------------------------------------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                                          |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                                              | Others |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/o<br>Smart Key/w/<br>Pre-Crash) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                                                |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/o<br>Smart Key/w/<br>Pre-Crash) | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main<br>Key and Subkey<br>Status<br>3.Antenna<br>connection<br>diagnostic<br>4.Wireless<br>communication<br>test<br>5.Intelligent<br>communication<br>test<br>6.Repeater<br>communication<br>test |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/o<br>Smart Key/w/<br>Pre-Crash) | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                                                |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/o<br>Smart Key/w/<br>Pre-Crash) | PSB-D  | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                                                |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type                               | System | Functions |           |             |           |                                                                      |        |
|---------|---------------------------------|-------------------------------------------|--------|-----------|-----------|-------------|-----------|----------------------------------------------------------------------|--------|
|         |                                 |                                           |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                     | Others |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/o<br>Smart Key/w/<br>Pre-Crash)  | PSD-P  | √         | √         | √           | √         | 1.Read ECU No.                                                       |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/o<br>Smart Key/w/<br>Pre-Crash)  | IMG    | √         | √         | √           |           | 1.Read ECU No.<br>2.Camera Optical<br>Axis Adjustment                |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/o<br>Smart Key/w/o<br>Pre-Crash) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                       |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/o<br>Smart Key/w/o<br>Pre-Crash) | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU<br>Learning<br>Initializing              |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/o<br>Smart Key/w/o<br>Pre-Crash) | ACC    | √         | √         |             |           | 1.Read ECU No.<br>2.Radar Cruise<br>Optical Axis<br>Adjustment       |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/o<br>Smart Key/w/o<br>Pre-Crash) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                   |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/o<br>Smart Key/w/o<br>Pre-Crash) | VSC    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding<br>4.3rd bleeding |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type                               | System | Functions |           |             |           |                                                                                                                                                                                                                               |        |
|---------|---------------------------------|-------------------------------------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                                           |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                                              | Others |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/o<br>Smart Key/w/o<br>Pre-Crash) | EPS    | √         | √         | √           | √         | 1.Torque sensor<br>zero point<br>adjustment(*)<br>2.Read ECU No.                                                                                                                                                              |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/o<br>Smart Key/w/o<br>Pre-Crash) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                                                |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/o<br>Smart Key/w/o<br>Pre-Crash) | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main<br>Key and Subkey<br>Status<br>3.Antenna<br>connection<br>diagnostic<br>4.Wireless<br>communication<br>test<br>5.Intelligent<br>communication<br>test<br>6.Repeater<br>communication<br>test |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-DET(w/o<br>Smart Key/w/o<br>Pre-Crash) | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                                                |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type         | System | Functions |           |             |           |                                                            |        |
|---------|---------------------------------|---------------------|--------|-----------|-----------|-------------|-----------|------------------------------------------------------------|--------|
|         |                                 |                     |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                           | Others |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-VE(w/ Smart Key) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                             |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-VE(w/ Smart Key) | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing          |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-VE(w/ Smart Key) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding         |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-VE(w/ Smart Key) | EPS    | √         | √         | √           | √         | 1.Torque sensor zero point adjustment(*)<br>2.Read ECU No. |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-VE(w/ Smart Key) | A/B    | √         | √         |             |           | 1.Read ECU No.                                             |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type          | System       | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|---------------------------------|----------------------|--------------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                      |              | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-VE(w/ Smart Key)  | KFS          | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-VE(w/ Smart Key)  | ITC          | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-VE(w/ Smart Key)  | Power Source | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-VE(w/o Smart Key) | EFI          | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-VE(w/o Smart Key) | CVT          | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type          | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|---------------------------------|----------------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                      |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-VE(w/o Smart Key) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                                                                                                                              |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-VE(w/o Smart Key) | EPS    | √         | √         | √           | √         | 1.Torque sensor zero point adjustment(*)<br>2.Read ECU No.                                                                                                                                      |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-VE(w/o Smart Key) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-VE(w/o Smart Key) | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type          | System | Functions |           |             |           |                                                            |        |
|---------|---------------------------------|----------------------|--------|-----------|-----------|-------------|-----------|------------------------------------------------------------|--------|
|         |                                 |                      |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                           | Others |
| Move    | 08/12(H20/12)-<br>09/12(H21/12) | KF-VE(w/o Smart Key) | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                             |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-DET(w/ Smart Key) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                             |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-DET(w/ Smart Key) | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing          |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-DET(w/ Smart Key) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding         |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-DET(w/ Smart Key) | EPS    | √         | √         | √           | √         | 1.Torque sensor zero point adjustment(*)<br>2.Read ECU No. |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-DET(w/ Smart Key) | A/B    | √         | √         |             |           | 1.Read ECU No.                                             |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type          | System       | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|---------------------------------|----------------------|--------------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                      |              | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-DET(w/ Smart Key) | KFS          | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-DET(w/ Smart Key) | ITC          | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-DET(w/ Smart Key) | Power Source | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-VE(w/ Smart Key)  | EFI          | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-VE(w/ Smart Key)  | CVT          | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type           | System | Functions |           |             |           |                                                            |        |
|---------|---------------------------------|-----------------------|--------|-----------|-----------|-------------|-----------|------------------------------------------------------------|--------|
|         |                                 |                       |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                           | Others |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-VE(w/ Smart Key)   | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding         |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-VE(w/ Smart Key)   | EPS    | √         | √         | √           | √         | 1.Torque sensor zero point adjustment(*)<br>2.Read ECU No. |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-VE(w/ Smart Key)   | A/B    | √         | √         |             |           | 1.Read ECU No.                                             |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-VE(w/ Smart Key)   | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status     |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-VE(w/ Smart Key)   | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                             |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-DET(w/o Smart Key) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                             |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-DET(w/o Smart Key) | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing          |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-DET(w/o Smart Key) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding         |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type              | System          | Functions |           |             |           |                                                                                                                                                                                                                               |        |
|---------|---------------------------------|--------------------------|-----------------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                          |                 | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                                              | Others |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-DET(w/o<br>Smart Key) | EPS             | √         | √         | √           | √         | 1.Torque sensor<br>zero point<br>adjustment(*)<br>2.Read ECU No.                                                                                                                                                              |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-DET(w/o<br>Smart Key) | A/B             | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                                                |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-DET(w/o<br>Smart Key) | KFS             | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main<br>Key and Subkey<br>Status<br>3.Antenna<br>connection<br>diagnostic<br>4.Wireless<br>communication<br>test<br>5.Intelligent<br>communication<br>test<br>6.Repeater<br>communication<br>test |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-DET(w/o<br>Smart Key) | ITC             | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                                                |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-DET(w/o<br>Smart Key) | Power<br>Source | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                                                |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type          | System | Functions |           |             |           |                                                            |        |
|---------|---------------------------------|----------------------|--------|-----------|-----------|-------------|-----------|------------------------------------------------------------|--------|
|         |                                 |                      |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                           | Others |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-VE(w/o Smart Key) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                             |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-VE(w/o Smart Key) | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing          |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-VE(w/o Smart Key) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding         |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-VE(w/o Smart Key) | EPS    | √         | √         | √           | √         | 1.Torque sensor zero point adjustment(*)<br>2.Read ECU No. |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-VE(w/o Smart Key) | A/B    | √         | √         |             |           | 1.Read ECU No.                                             |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type          | System       | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|---------------------------------|----------------------|--------------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                      |              | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-VE(w/o Smart Key) | KFS          | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-VE(w/o Smart Key) | ITC          | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 09/12(H21/12)-<br>10/12(H22/12) | KF-VE(w/o Smart Key) | Power Source | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(N/A)(Keyless)     | EFI          | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(N/A)(Keyless)     | CVT          | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type      | System | Functions |           |             |           |                                                                  |        |
|---------|---------------------------------|------------------|--------|-----------|-----------|-------------|-----------|------------------------------------------------------------------|--------|
|         |                                 |                  |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                 | Others |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(N/A)(Keyless) | EPS    | √         | √         | √           | √         | 1.Torque sensor<br>zero point<br>adjustment(*)<br>2.Read ECU No. |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(N/A)(Keyless) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                   |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(N/A)(Keyless) | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                   |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(N/A)(Keyless) | PSB-D  | √         | √         | √           | √         | 1.Read ECU No.                                                   |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(N/A)(Keyless) | PSD-P  | √         | √         | √           | √         | 1.Read ECU No.                                                   |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(N/A)(Keyless) | Meter  | √         | √         | √           |           |                                                                  |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(N/A)(Keyfree) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                   |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(N/A)(Keyfree) | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU<br>Learning<br>Initializing          |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type      | System   | Functions |           |             |           |                                                                                                     |        |
|---------|---------------------------------|------------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------|--------|
|         |                                 |                  |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                    | Others |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(N/A)(Keyfree) | eco IDLE | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU Initialization Learning<br>3.Delete and input Starter Working Times |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(N/A)(Keyfree) | EPS      | √         | √         | √           | √         | 1.Torque sensor zero point adjustment(*)<br>2.Read ECU No.                                          |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(N/A)(Keyfree) | ABS/VSC  | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding<br>3.3rd bleeding                                                  |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(N/A)(Keyfree) | A/B      | √         | √         |             |           | 1.Read ECU No.                                                                                      |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type      | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|---------------------------------|------------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                  |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(N/A)(Keyfree) | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(N/A)(Keyfree) | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(N/A)(Keyfree) | PSB-D  | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(N/A)(Keyfree) | PSD-P  | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(N/A)(Keyfree) | Meter  | √         | √         | √           |           |                                                                                                                                                                                                 |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(N/A)(Keyfree) | DSS    | √         | √         | √           |           | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type | System   | Functions |           |             |           |                                                                                                     |        |
|---------|---------------------------------|-------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------|--------|
|         |                                 |             |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                    | Others |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(T/C)     | EFI      | √         | √         | √           | √         | 1.Read ECU No.                                                                                      |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(T/C)     | CVT      | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                   |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(T/C)     | eco IDLE | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU Initialization Learning<br>3.Delete and input Starter Working Times |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(T/C)     | EPS      | √         | √         | √           | √         | 1.Torque sensor zero point adjustment(*)<br>2.Read ECU No.                                          |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(T/C)     | ABS/VSC  | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding<br>3.3rd bleeding                                                  |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(T/C)     | A/B      | √         | √         |             |           | 1.Read ECU No.                                                                                      |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|---------------------------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(T/C)     | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(T/C)     | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(T/C)     | PSB-D  | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(T/C)     | PSD-P  | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(T/C)     | Meter  | √         | √         | √           |           |                                                                                                                                                                                                 |        |
| Move    | 10/12(H22/12)-<br>11/08(H23/08) | KF(T/C)     | DSS    | √         | √         | √           |           | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type      | System   | Functions |           |             |           |                                                                                                     |        |
|---------|---------------------------------|------------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------|--------|
|         |                                 |                  |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                    | Others |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(N/A)(Keyless) | EFI      | √         | √         | √           | √         | 1.Read ECU No.                                                                                      |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(N/A)(Keyless) | CVT      | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                   |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(N/A)(Keyless) | eco IDLE | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU Initialization Learning<br>3.Delete and input Starter Working Times |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(N/A)(Keyless) | EPS      | √         | √         | √           | √         | 1.Torque sensor zero point adjustment(*)<br>2.Read ECU No.                                          |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(N/A)(Keyless) | ABS/VSC  | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding<br>3.3rd bleeding                                                  |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(N/A)(Keyless) | A/B      | √         | √         |             |           | 1.Read ECU No.                                                                                      |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(N/A)(Keyless) | ITC      | √         | √         | √           | √         | 1.Read ECU No.                                                                                      |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(N/A)(Keyless) | PSB-D    | √         | √         | √           | √         | 1.Read ECU No.                                                                                      |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type      | System   | Functions |           |             |           |                                                                                                                 |        |
|---------|---------------------------------|------------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                  |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                | Others |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(N/A)(Keyless) | PSD-P    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                  |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(N/A)(Keyless) | Meter    | √         | √         | √           |           |                                                                                                                 |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(N/A)(Keyless) | DSS      | √         | √         | √           |           | 1.Read ECU No.                                                                                                  |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(N/A)(Keyfree) | EFI      | √         | √         | √           | √         | 1.Read ECU No.                                                                                                  |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(N/A)(Keyfree) | CVT      | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU<br>Learning<br>Initializing                                                         |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(N/A)(Keyfree) | eco IDLE | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU<br>Initialization<br>Learning<br>3.Delete and<br>input Starter<br>Working Times |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(N/A)(Keyfree) | EPS      | √         | √         | √           | √         | 1.Torque sensor<br>zero point<br>adjustment(*)<br>2.Read ECU No.                                                |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(N/A)(Keyfree) | ABS/VSC  | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding<br>3.3rd bleeding                                                              |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type      | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|---------------------------------|------------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                  |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(N/A)(Keyfree) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(N/A)(Keyfree) | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(N/A)(Keyfree) | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(N/A)(Keyfree) | PSB-D  | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(N/A)(Keyfree) | PSD-P  | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(N/A)(Keyfree) | Meter  | √         | √         | √           |           |                                                                                                                                                                                                 |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type      | System   | Functions |           |             |           |                                                                                                           |        |
|---------|---------------------------------|------------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                  |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                          | Others |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(N/A)(Keyfree) | DSS      | √         | √         | √           |           | 1.Read ECU No.                                                                                            |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(T/C)          | EFI      | √         | √         | √           | √         | 1.Read ECU No.                                                                                            |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(T/C)          | CVT      | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning<br>Initializing                                                      |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(T/C)          | eco IDLE | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU Initialization<br>Learning<br>3.Delete and input Starter<br>Working Times |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(T/C)          | EPS      | √         | √         | √           | √         | 1.Torque sensor zero point<br>adjustment(*)<br>2.Read ECU No.                                             |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(T/C)          | ABS/VSC  | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding<br>3.3rd bleeding                                                        |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(T/C)          | A/B      | √         | √         |             |           | 1.Read ECU No.                                                                                            |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|---------------------------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(T/C)     | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(T/C)     | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(T/C)     | PSB-D  | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(T/C)     | PSD-P  | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(T/C)     | Meter  | √         | √         | √           |           |                                                                                                                                                                                                 |        |
| Move    | 11/08(H23/08)-<br>11/11(H23/11) | KF(T/C)     | DSS    | √         | √         | √           |           | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type      | System   | Functions |           |             |           |                                                                                                     |        |
|---------|---------------------------------|------------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------|--------|
|         |                                 |                  |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                    | Others |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A)(Keyless) | EFI      | √         | √         | √           | √         | 1.Read ECU No.                                                                                      |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A)(Keyless) | CVT      | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                   |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A)(Keyless) | eco IDLE | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU Initialization Learning<br>3.Delete and input Starter Working Times |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A)(Keyless) | EPS      | √         | √         | √           |           | 1.Read ECU No.                                                                                      |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A)(Keyless) | ABS/VSC  | √         | √         | √           | √         | 1.Read ECU No.                                                                                      |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A)(Keyless) | A/B      | √         | √         |             |           | 1.Read ECU No.                                                                                      |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A)(Keyless) | ITC      | √         | √         | √           | √         | 1.Read ECU No.                                                                                      |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A)(Keyless) | Meter    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Instrument panel standard initialization                                        |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type      | System   | Functions |           |             |           |                                                                                                     |        |
|---------|---------------------------------|------------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------|--------|
|         |                                 |                  |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                    | Others |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A)(Keyfree) | EFI      | √         | √         | √           | √         | 1.Read ECU No.                                                                                      |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A)(Keyfree) | CVT      | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                   |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A)(Keyfree) | eco IDLE | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU Initialization Learning<br>3.Delete and input Starter Working Times |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A)(Keyfree) | EPS      | √         | √         | √           |           | 1.Read ECU No.                                                                                      |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A)(Keyfree) | ABS/VSC  | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding                                                                    |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A)(Keyfree) | A/B      | √         | √         |             |           | 1.Read ECU No.                                                                                      |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type      | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|---------------------------------|------------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                  |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A)(Keyfree) | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A)(Keyfree) | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A)(Keyfree) | Meter  | √         | √         | √           | √         | 1.Read ECU No.<br>2.Instrument panel standard initialization                                                                                                                                    |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(T/C)          | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type | System  | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|---------------------------------|-------------|---------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |             |         | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(T/C)     | CVT     | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(T/C)     | EPS     | √         | √         | √           |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(T/C)     | ABS/VSC | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding                                                                                                                                                                |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(T/C)     | A/B     | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(T/C)     | KFS     | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type          | System   | Functions |           |             |           |                                                                                                     |        |
|---------|---------------------------------|----------------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------|--------|
|         |                                 |                      |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                    | Others |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(T/C)              | ITC      | √         | √         | √           | √         | 1.Read ECU No.                                                                                      |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(T/C)              | PSB-D    | √         | √         | √           | √         | 1.Read ECU No.                                                                                      |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(T/C)              | PSB-P    | √         | √         | √           | √         | 1.Read ECU No.                                                                                      |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(T/C)              | Meter    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Instrument panel standard initialization                                        |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(T/C)              | DSS      | √         | √         | √           |           | 1.Read ECU No.                                                                                      |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A,T/C)(Keyless) | EFI      | √         | √         | √           | √         | 1.Read ECU No.                                                                                      |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A,T/C)(Keyless) | CVT      | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                   |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A,T/C)(Keyless) | eco IDLE | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU Initialization Learning<br>3.Delete and input Starter Working Times |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type          | System   | Functions |           |             |           |                                                                                                     |        |
|---------|---------------------------------|----------------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------|--------|
|         |                                 |                      |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                    | Others |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A,T/C)(Keyless) | EPS      | √         | √         | √           |           | 1.Read ECU No.                                                                                      |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A,T/C)(Keyless) | ABS/VSC  | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding                                                                    |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A,T/C)(Keyless) | A/B      | √         | √         |             |           | 1.Read ECU No.                                                                                      |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A,T/C)(Keyless) | ITC      | √         | √         | √           | √         | 1.Read ECU No.                                                                                      |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A,T/C)(Keyless) | Meter    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Instrument panel standard initialization                                        |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A,T/C)(Keyfree) | EFI      | √         | √         | √           | √         | 1.Read ECU No.                                                                                      |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A,T/C)(Keyfree) | CVT      | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                   |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A,T/C)(Keyfree) | eco IDLE | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU Initialization Learning<br>3.Delete and input Starter Working Times |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type              | System  | Functions |           |             |           |                                                                                                                                                                                                                               |        |
|---------|---------------------------------|--------------------------|---------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                          |         | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                                              | Others |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A,T/C)(Keyfr<br>ee) | EPS     | √         | √         | √           |           | 1.Read ECU No.                                                                                                                                                                                                                |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A,T/C)(Keyfr<br>ee) | ABS/VSC | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding                                                                                                                                                                                              |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A,T/C)(Keyfr<br>ee) | A/B     | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                                                |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A,T/C)(Keyfr<br>ee) | KFS     | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main<br>Key and Subkey<br>Status<br>3.Antenna<br>connection<br>diagnostic<br>4.Wireless<br>communication<br>test<br>5.Intelligent<br>communication<br>test<br>6.Repeater<br>communication<br>test |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A,T/C)(Keyfr<br>ee) | ITC     | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                                                |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A,T/C)(Keyfr<br>ee) | PSB-D   | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                                                |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year                            | Engine Type              | System   | Functions |           |             |           |                                                                                                                 |        |
|---------|---------------------------------|--------------------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------------|--------|
|         |                                 |                          |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                | Others |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A,T/C)(Keyfr<br>ee) | PSB-P    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                  |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A,T/C)(Keyfr<br>ee) | Meter    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Instrument<br>panel standard<br>initialization                                              |        |
| Move    | 11/11(H23/11)-<br>12/05(H24/05) | KF(N/A,T/C)(Keyfr<br>ee) | DSS      | √         | √         | √           |           | 1.Read ECU No.                                                                                                  |        |
| Move    | 12/12(H24/12)-                  | KF(N/A,T/C)              | EFI      | √         | √         | √           | √         | 1.Read ECU No.                                                                                                  |        |
| Move    | 12/12(H24/12)-                  | KF(N/A,T/C)              | CVT      | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU<br>Learning<br>Initializing                                                         |        |
| Move    | 12/12(H24/12)-                  | KF(N/A,T/C)              | eco IDLE | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU<br>Initialization<br>Learning<br>3.Delete and<br>input Starter<br>Working Times |        |
| Move    | 12/12(H24/12)-                  | KF(N/A,T/C)              | EPS      | √         | √         | √           |           | 1.Read ECU No.                                                                                                  |        |
| Move    | 12/12(H24/12)-                  | KF(N/A,T/C)              | ABS/VSC  | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding                                                                                |        |
| Move    | 12/12(H24/12)-                  | KF(N/A,T/C)              | A/B      | √         | √         |             |           | 1.Read ECU No.                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year           | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|----------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |                |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
|         |                |             |        | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move    | 12/12(H24/12)- | KF(N/A,T/C) | KFS    |           |           |             |           |                                                                                                                                                                                                 |        |
| Move    | 12/12(H24/12)- | KF(N/A,T/C) | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
|         |                |             |        | √         | √         | √           | √         | 1.Read ECU No.<br>2.Instrument panel standard initialization                                                                                                                                    |        |
| Move    | 12/12(H24/12)- | KF(N/A,T/C) | Meter  |           |           |             |           |                                                                                                                                                                                                 |        |
|         |                |             |        | √         | √         | √           | √         | 1.Read ECU No.<br>2.Laser radar optical axle adjustment                                                                                                                                         |        |
| Move    | 12/12(H24/12)- | KF(N/A,T/C) | PCB    |           |           |             |           |                                                                                                                                                                                                 |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year           | Engine Type | System             | Functions |           |             |           |                                                          |        |
|---------|----------------|-------------|--------------------|-----------|-----------|-------------|-----------|----------------------------------------------------------|--------|
|         |                |             |                    | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                         | Others |
| Move    | 12/12(H24/12)- | KF(N/A,T/C) | Automatic leveling | √         | √         | √           | √         | 1.Read ECU No.                                           |        |
| YRV     | 00/08-00/12    | EJ-VE       | EFI                | √         | √         | √           | √         | 1.Read ECU No.                                           |        |
| YRV     | 00/08-00/12    | EJ-VE       | ABS                | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding       |        |
| YRV     | 00/08-00/12    | EJ-VE       | A/B                | √         | √         |             |           | 1.Read ECU No.                                           |        |
| YRV     | 00/08-00/12    | K3-VE       | EFI                | √         | √         | √           | √         | 1.Read ECU No.                                           |        |
| YRV     | 00/08-00/12    | K3-VE       | AT                 | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value<br>Initialization |        |
| YRV     | 00/08-00/12    | K3-VE       | ABS                | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                         |        |
| YRV     | 00/08-00/12    | K3-VE       | DVS                | √         | √         | √           |           | 1.Read ECU No.<br>2.DVS Bleeding                         |        |
| YRV     | 00/08-00/12    | K3-VE       | A/B                | √         | √         |             |           | 1.Read ECU No.                                           |        |
| YRV     | 00/08-00/12    | K3-VE       | KFS                | √         | √         |             |           |                                                          |        |
| YRV     | 00/08-00/12    | K3-VET      | EFI                | √         | √         | √           | √         | 1.Read ECU No.                                           |        |
| YRV     | 00/08-00/12    | K3-VET      | AT                 | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value<br>Initialization |        |
| YRV     | 00/08-00/12    | K3-VET      | ABS                | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding       |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                          |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|----------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                         | Others |
| YRV     | 00/08-00/12 | K3-VET      | DVS    | √         | √         | √           |           | 1.Read ECU No.<br>2.DVS Bleeding                         |        |
| YRV     | 00/08-00/12 | K3-VET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                           |        |
| YRV     | 00/08-00/12 | K3-VET      | KFS    | √         | √         |             |           |                                                          |        |
| YRV     | 00/12-      | EJ-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                           |        |
| YRV     | 00/12-      | EJ-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding       |        |
| YRV     | 00/12-      | EJ-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                           |        |
| YRV     | 00/12-      | K3-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                           |        |
| YRV     | 00/12-      | K3-VE       | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value<br>Initialization |        |
| YRV     | 00/12-      | K3-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                         |        |
| YRV     | 00/12-      | K3-VE       | DVS    | √         | √         | √           |           | 1.Read ECU No.<br>2.DVS Bleeding                         |        |
| YRV     | 00/12-      | K3-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                           |        |
| YRV     | 00/12-      | K3-VE       | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status   |        |
| YRV     | 00/12-      | K3-VET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                           |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle     | Year        | Engine Type | System | Functions |           |             |           |                                                        |        |
|-------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------|--------|
|             |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                       | Others |
| YRV         | 00/12-      | K3-VET      | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization  |        |
| YRV         | 00/12-      | K3-VET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding     |        |
| YRV         | 00/12-      | K3-VET      | DVS    | √         | √         | √           |           | 1.Read ECU No.<br>2.DVS Bleeding                       |        |
| YRV         | 00/12-      | K3-VET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| YRV         | 00/12-      | K3-VET      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Atrai Wagon | 01/01-02/01 | EF-DET      | EFI    | √         | √         | √           |           | 1.Read ECU No.                                         |        |
| Atrai Wagon | 01/01-02/01 | EF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |
| Atrai Wagon | 01/01-02/01 | EF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle     | Year        | Engine Type | System | Functions |           |             |           |                                                        |        |
|-------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------|--------|
|             |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                       | Others |
| Atrai Wagon | 01/01-02/01 | EF-DET      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Atrai Wagon | 01/01-02/01 | EF-VE       | EFI    | √         | √         | √           |           | 1.Read ECU No.                                         |        |
| Atrai Wagon | 01/01-02/01 | EF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |
| Atrai Wagon | 01/01-02/01 | EF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Atrai Wagon | 01/01-02/01 | EF-VE       | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Atrai Wagon | 02/01-03/05 | EF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Atrai Wagon | 02/01-03/05 | EF-DET      | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle     | Year        | Engine Type | System | Functions |           |             |           |                                                        |        |
|-------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------|--------|
|             |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                       | Others |
| Atrai Wagon | 02/01-03/05 | EF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |
| Atrai Wagon | 02/01-03/05 | EF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Atrai Wagon | 02/01-03/05 | EF-DET      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Atrai Wagon | 02/01-03/05 | EF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Atrai Wagon | 02/01-03/05 | EF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |
| Atrai Wagon | 02/01-03/05 | EF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Atrai Wagon | 02/01-03/05 | EF-VE       | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Atrai Wagon | 03/05-05/04 | EF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle     | Year        | Engine Type | System | Functions |           |             |           |                                                        |        |
|-------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------|--------|
|             |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                       | Others |
| Atrai Wagon | 03/05-05/04 | EF-DET      | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization  |        |
| Atrai Wagon | 03/05-05/04 | EF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding     |        |
| Atrai Wagon | 03/05-05/04 | EF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Atrai Wagon | 03/05-05/04 | EF-DET      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Atrai Wagon | 03/05-05/04 | EF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Atrai Wagon | 03/05-05/04 | EF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding     |        |
| Atrai Wagon | 03/05-05/04 | EF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle     | Year        | Engine Type | System | Functions |           |             |           |                                                        |        |
|-------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------|--------|
|             |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                       | Others |
| Atrai Wagon | 03/05-05/04 | EF-VE       | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Atrai Wagon | 05/05-07/08 | EF-DET(A/T) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Atrai Wagon | 05/05-07/08 | EF-DET(A/T) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding     |        |
| Atrai Wagon | 05/05-07/08 | EF-DET(A/T) | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Atrai Wagon | 05/05-07/08 | EF-DET(M/T) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Atrai Wagon | 05/05-07/08 | EF-DET(M/T) | ABS    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Atrai Wagon | 05/05-07/08 | EF-DET(M/T) | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Atrai Wagon | 07/08-10/08 | KF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle                 | Year        | Engine Type | System | Functions |           |             |           |                                                       |        |
|-------------------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------|--------|
|                         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                      | Others |
| Atrai Wagon             | 07/08-10/08 | KF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.                                        |        |
| Atrai Wagon             | 07/08-10/08 | KF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                        |        |
| Atrai-7/Hijet Grancargo | 00/07-01/06 | K3-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                        |        |
| Atrai-7/Hijet Grancargo | 00/07-01/06 | K3-VE       | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization |        |
| Atrai-7/Hijet Grancargo | 00/07-01/06 | K3-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding    |        |
| Atrai-7/Hijet Grancargo | 00/07-01/06 | K3-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                        |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle                | Year        | Engine Type | System | Functions |           |             |           |                                                    |        |
|------------------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|----------------------------------------------------|--------|
|                        |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                   | Others |
| Atra-7/Hijet Grancargo | 00/07-01/06 | K3-VE       | KFS    | √         | √         |             |           |                                                    |        |
| Atra-7/Hijet Grancargo | 01/06-      | K3-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                     |        |
| Atra-7/Hijet Grancargo | 01/06-      | K3-VE       | AT     | √         | √         | √           |           | 1.Read ECU No.                                     |        |
| Atra-7/Hijet Grancargo | 01/06-      | K3-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding |        |
| Atra-7/Hijet Grancargo | 01/06-      | K3-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                     |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle                 | Year        | Engine Type | System | Functions |           |             |           |                                                        |                                 |
|-------------------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------|---------------------------------|
|                         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                       | Others                          |
| Atrai-7/Hijet Grancargo | 01/06-      | K3-VE       | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |                                 |
| Altis                   | 00/03-01/09 | 5S-FE       | EFI&AT |           |           |             |           |                                                        | Use Toyota software to test it. |
| Altis                   | 00/03-01/09 | 5S-FE       | A/B    | √         | √         |             |           |                                                        |                                 |
| Altis                   | 01/09-06/01 | 2AZ-FE      | EFI&AT |           |           |             |           |                                                        | Use Toyota software to test it. |
| Altis                   | 01/09-06/01 | 2AZ-FE      | A/B    | √         | √         |             |           |                                                        |                                 |
| Altis                   | 06/01-09/01 | 2AZ-FE      |        |           |           |             |           | 1.Read ECU No.                                         | Use Toyota software to test it. |
| Altis                   | 09/01-      | 2AZ-FE      |        |           |           |             |           | 1.Read ECU No.                                         | Use Toyota software to test it. |
| Esse                    | 05/12-10/04 | KF-VE(A/T)  | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |                                 |
| Esse                    | 05/12-10/04 | KF-VE(A/T)  | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding     |                                 |
| Esse                    | 05/12-10/04 | KF-VE(A/T)  | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |                                 |
| Esse                    | 05/12-10/04 | KF-VE(M/T)  | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |                                 |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type                      | System | Functions |           |             |           |                                                    |        |
|---------|-------------|----------------------------------|--------|-----------|-----------|-------------|-----------|----------------------------------------------------|--------|
|         |             |                                  |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                   | Others |
| Esse    | 05/12-10/04 | KF-VE(M/T)                       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding |        |
| Esse    | 05/12-10/04 | KF-VE(M/T)                       | A/B    | √         | √         |             |           | 1.Read ECU No.                                     |        |
| Esse    | 10/04-      | KF-VE                            | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                     |        |
| Esse    | 10/04-      | KF-VE                            | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding |        |
| Esse    | 10/04-      | KF-VE                            | A/B    | √         | √         |             |           | 1.Read ECU No.                                     |        |
| Opti    | 00/10-01/06 | EF-<br>DET(Mechannism<br>AT)     | EFI    | √         | √         | √           |           | 1.Read ECU No.                                     |        |
| Opti    | 00/10-01/06 | EF-<br>DET(Mechannism<br>AT)     | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                   |        |
| Opti    | 00/10-01/06 | EF-<br>DET(Mechannism<br>AT)     | DVS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.DVS Bleeding                   |        |
| Opti    | 00/10-01/06 | EF-<br>DET(Mechannism<br>AT)     | A/B    | √         | √         |             |           | 1.Read ECU No.                                     |        |
| Opti    | 00/10-01/06 | EF-DET(Electrical<br>Control AT) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                     |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type                   | System | Functions |           |             |           |                                                       |        |
|---------|-------------|-------------------------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------|--------|
|         |             |                               |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                      | Others |
| Opti    | 00/10-01/06 | EF-DET(Electrical Control AT) | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization |        |
| Opti    | 00/10-01/06 | EF-DET(Electrical Control AT) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                      |        |
| Opti    | 00/10-01/06 | EF-DET(Electrical Control AT) | DVS    | √         | √         | √           | √         | 1.Read ECU No.                                        |        |
| Opti    | 00/10-01/06 | EF-DET(Electrical Control AT) | A/B    | √         | √         |             |           | 1.Read ECU No.                                        |        |
| Opti    | 00/10-01/06 | EF-SE                         | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                        |        |
| Opti    | 00/10-01/06 | EF-SE                         | ABS    | √         | √         | √           | √         | 1.Read ECU No.                                        |        |
| Opti    | 00/10-01/06 | EF-SE                         | A/B    | √         | √         |             |           | 1.Read ECU No.                                        |        |
| Opti    | 00/10-01/06 | EF-VE                         | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                        |        |
| Opti    | 00/10-01/06 | EF-VE                         | CVT    | √         | √         | √           |           | 1.Read ECU No.                                        |        |
| Opti    | 00/10-01/06 | EF-VE                         | ABS    | √         | √         | √           | √         | 1.Read ECU No.                                        |        |
| Opti    | 00/10-01/06 | EF-VE                         | DVS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.DVS Bleeding                      |        |
| Opti    | 00/10-01/06 | EF-VE                         | A/B    | √         | √         |             |           | 1.Read ECU No.                                        |        |
| Opti    | 01/06-02/08 | EF-DET                        | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                        |        |
| Opti    | 01/06-02/08 | EF-DET                        | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization |        |
| Opti    | 01/06-02/08 | EF-DET                        | A/B    | √         | √         |             |           | 1.Read ECU No.                                        |        |
| Opti    | 01/06-02/08 | EF-SE                         | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                        |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                          |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|----------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                         | Others |
| Opti    | 01/06-02/08 | EF-SE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                         |        |
| Opti    | 01/06-02/08 | EF-SE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                           |        |
| Opti    | 01/06-02/08 | EF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                           |        |
| Opti    | 01/06-02/08 | EF-VE       | CVT    | √         | √         | √           |           | 1.Read ECU No.                                           |        |
| Opti    | 01/06-02/08 | EF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                         |        |
| Opti    | 01/06-02/08 | EF-VE       | DVS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.DVS Bleeding                         |        |
| Opti    | 01/06-02/08 | EF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                           |        |
| Copen   | 02/06-10/08 | JB-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                           |        |
| Copen   | 02/06-10/08 | JB-DET      | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value<br>Initialization |        |
| Copen   | 02/06-10/08 | JB-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding       |        |
| Copen   | 02/06-10/08 | JB-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                           |        |
| Copen   | 02/06-10/08 | JB-DET      | IMB    | √         | √         |             |           | 1.Read ECU No.                                           |        |
| Copen   | 02/06-10/08 | JB-DET      | roof   | √         | √         | √           | √         | 1.Read ECU No.<br>2.Roof ECU<br>Initialization           |        |
| Copen   | 10/08-14/06 | JB-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                           |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System   | Functions |           |             |           |                                                                                               |        |
|---------|-------------|-------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------|--------|
|         |             |             |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                              | Others |
| Copen   | 10/08-14/06 | JB-DET      | AT       | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value<br>Initialization                                      |        |
| Copen   | 10/08-14/06 | JB-DET      | ABS      | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                            |        |
| Copen   | 10/08-14/06 | JB-DET      | A/B      | √         | √         |             |           | 1.Read ECU No.                                                                                |        |
| Copen   | 10/08-14/06 | JB-DET      | IMB      | √         | √         |             |           | 1.Read ECU No.                                                                                |        |
| Copen   | 10/08-14/06 | JB-DET      | roof     | √         | √         | √           | √         | 1.Read ECU No.<br>2.Roof ECU<br>Initialization                                                |        |
| Copen   | 14/06-      | KF(T/C)     | EFI      | √         | √         | √           | √         | 1.Read ECU No.                                                                                |        |
| Copen   | 14/06-      | KF(T/C)     | CVT      | √         | √         | √           | √         | 1.CVT ECU<br>Learning<br>Initializing<br>2.Read ECU No.                                       |        |
| Copen   | 14/06-      | KF(T/C)     | eco IDLE | √         | √         | √           | √         | 1.Eco-Run ECU<br>Initialization<br>Learning<br>2.Delete and<br>input Starter<br>Working Times |        |
| Copen   | 14/06-      | KF(T/C)     | EPS      | √         | √         | √           |           | 1.Read ECU No.                                                                                |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year   | Engine Type | System  | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|--------|-------------|---------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |        |             |         | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Copen   | 14/06- | KF(T/C)     | ABS/VSC | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.<br>2.2nd bleeding<br>3.3rd bleeding                                                                                                                                              |        |
| Copen   | 14/06- | KF(T/C)     | A/B     | ✓         | ✓         |             | ✓         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Copen   | 14/06- | KF(T/C)     | KFS     | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Copen   | 14/06- | KF(T/C)     | Roof    | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.<br>2.Roof ECU Initialization                                                                                                                                                     |        |
| Copen   | 14/06- | KF(T/C)     | ITC     | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                              |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                             | Others |
| Copen   | 14/06-      | KF(T/C)     | Meter  | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.<br>2.Instrument panel standard initialization |        |
| Storia  | 00/05-00/12 | EJ-VE       | EFI    | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.                                               |        |
| Storia  | 00/05-00/12 | EJ-VE       | ABS    | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.<br>2.ABS Bleeding                             |        |
| Storia  | 00/05-00/12 | EJ-VE       | A/B    | ✓         | ✓         |             |           | 1.Read ECU No.                                               |        |
| Storia  | 00/05-00/12 | EJ-VE       | KFS    | ✓         | ✓         |             |           |                                                              |        |
| Storia  | 00/05-00/12 | K3-VE2      | EFI    | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.                                               |        |
| Storia  | 00/05-00/12 | K3-VE2      | AT     | ✓         | ✓         | ✓           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization        |        |
| Storia  | 00/05-00/12 | K3-VE2      | ABS    | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding           |        |
| Storia  | 00/05-00/12 | K3-VE2      | DVS    | ✓         | ✓         | ✓           |           | 1.Read ECU No.<br>2.DVS Bleeding                             |        |
| Storia  | 00/05-00/12 | K3-VE2      | A/B    | ✓         | ✓         |             |           | 1.Read ECU No.                                               |        |
| Storia  | 00/05-00/12 | K3-VE2      | KFS    | ✓         | ✓         |             |           |                                                              |        |
| Storia  | 00/12-02/01 | EJ-VE       | EFI    | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.                                               |        |
| Storia  | 00/12-02/01 | EJ-VE       | ABS    | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding           |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                        |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                       | Others |
| Storia  | 00/12-02/01 | EJ-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
|         |             |             |        | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Storia  | 00/12-02/01 | EJ-VE       | KFS    |           |           |             |           |                                                        |        |
| Storia  | 00/12-02/01 | K3-VE2      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
|         |             |             |        | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization  |        |
| Storia  | 00/12-02/01 | K3-VE2      | AT     |           |           |             |           |                                                        |        |
|         |             |             |        | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding     |        |
| Storia  | 00/12-02/01 | K3-VE2      | ABS    |           |           |             |           |                                                        |        |
|         |             |             |        | √         | √         | √           |           | 1.Read ECU No.<br>2.DVS Bleeding                       |        |
| Storia  | 00/12-02/01 | K3-VE2      | DVS    |           |           |             |           |                                                        |        |
| Storia  | 00/12-02/01 | K3-VE2      | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
|         |             |             |        | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Storia  | 00/12-02/01 | K3-VE2      | KFS    |           |           |             |           |                                                        |        |
| Storia  | 02/01-02/08 | EJ-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
|         |             |             |        | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding     |        |
| Storia  | 02/01-02/08 | EJ-VE       | ABS    |           |           |             |           |                                                        |        |
| Storia  | 02/01-02/08 | EJ-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                        |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                       | Others |
| Storia  | 02/01-02/08 | EJ-VE       | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Storia  | 02/01-02/08 | K3-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Storia  | 02/01-02/08 | K3-VE       | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization  |        |
| Storia  | 02/01-02/08 | K3-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding     |        |
| Storia  | 02/01-02/08 | K3-VE       | DVS    | √         | √         | √           |           | 1.Read ECU No.<br>2.DVS Bleeding                       |        |
| Storia  | 02/01-02/08 | K3-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Storia  | 02/01-02/08 | K3-VE       | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Storia  | 02/01-02/08 | K3-VE2      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Storia  | 02/01-02/08 | K3-VE2      | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                        |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                       | Others |
| Storia  | 02/01-02/08 | K3-VE2      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding     |        |
| Storia  | 02/01-02/08 | K3-VE2      | DVS    | √         | √         | √           |           | 1.Read ECU No.<br>2.DVS Bleeding                       |        |
| Storia  | 02/01-02/08 | K3-VE2      | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Storia  | 02/01-02/08 | K3-VE2      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Storia  | 02/08-      | EJ-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Storia  | 02/08-      | EJ-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |
| Storia  | 02/08-      | EJ-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Storia  | 02/08-      | EJ-VE       | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Storia  | 02/08-      | JC-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Storia  | 02/08-      | JC-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Storia  | 02/08-      | K3-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Storia  | 02/08-      | K3-VE       | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                                      |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|----------------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                     | Others |
| Storia  | 02/08-      | K3-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                                     |        |
| Storia  | 02/08-      | K3-VE       | DVS    | √         | √         | √           |           | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding<br>4.DVS Bleeding |        |
| Storia  | 02/08-      | K3-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                                       |        |
| Storia  | 02/08-      | K3-VE       | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status               |        |
| Storia  | 02/08-      | K3-VE2      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                       |        |
| Storia  | 02/08-      | K3-VE2      | AT     | √         | √         | √           |           | 1.Read ECU No.                                                       |        |
| Storia  | 02/08-      | K3-VE2      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                                     |        |
| Storia  | 02/08-      | K3-VE2      | DVS    | √         | √         | √           |           | 1.Read ECU No.<br>2.DVS Bleeding                                     |        |
| Storia  | 02/08-      | K3-VE2      | A/B    | √         | √         |             |           | 1.Read ECU No.                                                       |        |
| Storia  | 02/08-      | K3-VE2      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status               |        |
| SONIC A | 06/06-09/04 | KF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                       |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                                                |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                               | Others |
| SONIC A | 06/06-09/04 | KF-DET      | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                              |        |
| SONIC A | 06/06-09/04 | KF-DET      | ACC    | √         | √         |             |           | 1.Read ECU No.<br>2.Radar Cruise Optical Axis Adjustment                       |        |
| SONIC A | 06/06-09/04 | KF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                             |        |
| SONIC A | 06/06-09/04 | KF-DET      | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*)<br>3.Read ECU No. |        |
| SONIC A | 06/06-09/04 | KF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                 |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle   | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|-----------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|           |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| SONIC A   | 06/06-09/04 | KF-DET      | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| SONIC A   | 06/06-09/04 | KF-DET      | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| TANTO EXE | 09/12-11/07 | KF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| TANTO EXE | 09/12-11/07 | KF-DET      | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System | Functions |           |             |           |                                                                                         |        |
|---------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------|--------|
|               |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                        | Others |
| TANT<br>O EXE | 09/12-11/07 | KF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                      |        |
| TANT<br>O EXE | 09/12-11/07 | KF-DET      | EPS    | √         | √         | √           |           | 1.Torque sensor<br>zero point<br>adjustment(*)<br>2.Mode<br>change(*)<br>3.Read ECU No. |        |
| TANT<br>O EXE | 09/12-11/07 | KF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                          |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|               |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| TANT<br>O EXE | 09/12-11/07 | KF-DET      | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| TANT<br>O EXE | 09/12-11/07 | KF-DET      | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| TANT<br>O EXE | 09/12-11/07 | KF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| TANT<br>O EXE | 09/12-11/07 | KF-VE       | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System | Functions |           |             |           |                                                                                         |        |
|---------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------|--------|
|               |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                        | Others |
| TANT<br>O EXE | 09/12-11/07 | KF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                      |        |
| TANT<br>O EXE | 09/12-11/07 | KF-VE       | EPS    | √         | √         | √           |           | 1.Torque sensor<br>zero point<br>adjustment(*)<br>2.Mode<br>change(*)<br>3.Read ECU No. |        |
| TANT<br>O EXE | 09/12-11/07 | KF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                          |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|               |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| TANT<br>O EXE | 09/12-11/07 | KF-VE       | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| TANT<br>O EXE | 09/12-11/07 | KF-VE       | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| TANT<br>O EXE | 11/07-11/12 | KF(N/A)     | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| TANT<br>O EXE | 11/07-11/12 | KF(N/A)     | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System | Functions |           |             |           |                                                                                         |        |
|---------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------|--------|
|               |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                        | Others |
| TANT<br>O EXE | 11/07-11/12 | KF(N/A)     | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                      |        |
| TANT<br>O EXE | 11/07-11/12 | KF(N/A)     | EPS    | √         | √         | √           |           | 1.Torque sensor<br>zero point<br>adjustment(*)<br>2.Mode<br>change(*)<br>3.Read ECU No. |        |
| TANT<br>O EXE | 11/07-11/12 | KF(N/A)     | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                          |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|               |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| TANT<br>O EXE | 11/07-11/12 | KF(N/A)     | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| TANT<br>O EXE | 11/07-11/12 | KF(N/A)     | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| TANT<br>O EXE | 11/07-11/12 | KF(T/C)     | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| TANT<br>O EXE | 11/07-11/12 | KF(T/C)     | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System | Functions |           |             |           |                                                                                         |        |
|---------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------|--------|
|               |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                        | Others |
| TANT<br>O EXE | 11/07-11/12 | KF(T/C)     | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                      |        |
| TANT<br>O EXE | 11/07-11/12 | KF(T/C)     | EPS    | √         | √         | √           |           | 1.Torque sensor<br>zero point<br>adjustment(*)<br>2.Mode<br>change(*)<br>3.Read ECU No. |        |
| TANT<br>O EXE | 11/07-11/12 | KF(T/C)     | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                          |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|               |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| TANT<br>O EXE | 11/07-11/12 | KF(T/C)     | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| TANT<br>O EXE | 11/07-11/12 | KF(T/C)     | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| TANT<br>O EXE | 11/12-12/05 | KF(N/A)     | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| TANT<br>O EXE | 11/12-12/05 | KF(N/A)     | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System   | Functions |           |             |           |                                                                                                                 |        |
|---------------|-------------|-------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------------|--------|
|               |             |             |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                | Others |
| TANT<br>O EXE | 11/12-12/05 | KF(N/A)     | eco IDLE | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU<br>Initialization<br>Learning<br>3.Delete and<br>input Starter<br>Working Times |        |
| TANT<br>O EXE | 11/12-12/05 | KF(N/A)     | EPS      | √         | √         | √           |           | 1.Torque sensor<br>zero point<br>adjustment(*)<br>2.Mode<br>change(*)<br>3.Read ECU No.                         |        |
| TANT<br>O EXE | 11/12-12/05 | KF(N/A)     | ABS/VSC  | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding                                                                                |        |
| TANT<br>O EXE | 11/12-12/05 | KF(N/A)     | A/B      | √         | √         |             |           | 1.Read ECU No.                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|               |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| TANT<br>O EXE | 11/12-12/05 | KF(N/A)     | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| TANT<br>O EXE | 11/12-12/05 | KF(N/A)     | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| TANT<br>O EXE | 11/12-12/05 | KF(T/C)     | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| TANT<br>O EXE | 11/12-12/05 | KF(T/C)     | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System | Functions |           |             |           |                                                                                         |        |
|---------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------|--------|
|               |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                        | Others |
| TANT<br>O EXE | 11/12-12/05 | KF(T/C)     | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                      |        |
| TANT<br>O EXE | 11/12-12/05 | KF(T/C)     | EPS    | √         | √         | √           |           | 1.Torque sensor<br>zero point<br>adjustment(*)<br>2.Mode<br>change(*)<br>3.Read ECU No. |        |
| TANT<br>O EXE | 11/12-12/05 | KF(T/C)     | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                          |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|               |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| TANT<br>O EXE | 11/12-12/05 | KF(T/C)     | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| TANT<br>O EXE | 11/12-12/05 | KF(T/C)     | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| TANT<br>O EXE | 12/05-      | KF(N/A,T/C) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| TANT<br>O EXE | 12/05-      | KF(N/A,T/C) | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year   | Engine Type | System   | Functions |           |             |           |                                                                                                     |        |
|---------------|--------|-------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------|--------|
|               |        |             |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                    | Others |
| TANT<br>O EXE | 12/05- | KF(N/A,T/C) | eco IDLE | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU Initialization Learning<br>3.Delete and input Starter Working Times |        |
| TANT<br>O EXE | 12/05- | KF(N/A,T/C) | EPS      | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*)<br>3.Read ECU No.                      |        |
| TANT<br>O EXE | 12/05- | KF(N/A,T/C) | ABS/VSC  | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding                                                                    |        |
| TANT<br>O EXE | 12/05- | KF(N/A,T/C) | A/B      | √         | √         |             |           | 1.Read ECU No.                                                                                      |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|               |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| TANT<br>O EXE | 12/05-      | KF(N/A,T/C) | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| TANT<br>O EXE | 12/05-      | KF(N/A,T/C) | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Tanto         | 03/11-05/06 | EF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Tanto         | 03/11-05/06 | EF-DET      | AT     | √         | √         | √           |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Tanto         | 03/11-05/06 | EF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                                                                                                                                                                |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                              |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                             | Others |
| Tanto   | 03/11-05/06 | EF-DET      | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |
| Tanto   | 03/11-05/06 | EF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Tanto   | 03/11-05/06 | EF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Tanto   | 03/11-05/06 | EF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                             |        |
| Tanto   | 03/11-05/06 | EF-VE       | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |
| Tanto   | 03/11-05/06 | EF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Tanto   | 05/06-07/12 | EF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Tanto   | 05/06-07/12 | EF-DET      | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization        |        |
| Tanto   | 05/06-07/12 | EF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding           |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                              |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                             | Others |
| Tanto   | 05/06-07/12 | EF-DET      | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |
| Tanto   | 05/06-07/12 | EF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Tanto   | 05/06-07/12 | EF-DET      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status       |        |
| Tanto   | 05/06-07/12 | EF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Tanto   | 05/06-07/12 | EF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding           |        |
| Tanto   | 05/06-07/12 | EF-VE       | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |
| Tanto   | 05/06-07/12 | EF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Tanto   | 05/06-07/12 | EF-VE       | KFS    | √         | √         | √           |           | 1.Read ECU No.                                               |        |
| Tanto   | 05/06-07/12 | KF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Tanto   | 05/06-07/12 | KF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding           |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                              |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                             | Others |
| Tanto   | 05/06-07/12 | KF-VE       | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |
| Tanto   | 05/06-07/12 | KF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Tanto   | 05/06-07/12 | KF-VE       | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status       |        |
| Tanto   | 07/12-09/12 | KF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Tanto   | 07/12-09/12 | KF-DET      | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing            |        |
| Tanto   | 07/12-09/12 | KF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                             |        |
| Tanto   | 07/12-09/12 | KF-DET      | EPS    | √         | √         | √           |           | 1.Read ECU No.                                               |        |
| Tanto   | 07/12-09/12 | KF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
|         |             |             |        | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Tanto   | 07/12-09/12 | KF-DET      | KFS    |           |           |             |           |                                                                                                                                                                                                 |        |
| Tanto   | 07/12-09/12 | KF-DET      | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Tanto   | 07/12-09/12 | KF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
|         |             |             |        | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |
| Tanto   | 07/12-09/12 | KF-VE       | CVT    |           |           |             |           |                                                                                                                                                                                                 |        |
|         |             |             |        | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                                                                                                                              |        |
| Tanto   | 07/12-09/12 | KF-VE       | ABS    |           |           |             |           |                                                                                                                                                                                                 |        |
| Tanto   | 07/12-09/12 | KF-VE       | EPS    | √         | √         | √           |           | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Tanto   | 07/12-09/12 | KF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                  |        |
|         |             |             |        | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Tanto   | 07/12-09/12 | KF-VE       | KFS    |           |           |             |           |                                                                                                                                                                                                 |        |
| Tanto   | 07/12-09/12 | KF-VE       | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Tanto   | 09/12-10/10 | KF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
|         |             |             |        | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |
| Tanto   | 09/12-10/10 | KF-DET      | CVT    |           |           |             |           |                                                                                                                                                                                                 |        |
|         |             |             |        | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                                                                                                                              |        |
| Tanto   | 09/12-10/10 | KF-DET      | ABS    |           |           |             |           |                                                                                                                                                                                                 |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Tanto   | 09/12-10/10 | KF-DET      | EPS    | √         | √         | √           |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Tanto   | 09/12-10/10 | KF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                  |        |
|         |             |             |        | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Tanto   | 09/12-10/10 | KF-DET      | KFS    |           |           |             |           |                                                                                                                                                                                                 |        |
| Tanto   | 09/12-10/10 | KF-DET      | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Tanto   | 09/12-10/10 | KF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
|         |             |             |        | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |
| Tanto   | 09/12-10/10 | KF-VE       | CVT    |           |           |             |           |                                                                                                                                                                                                 |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Tanto   | 09/12-10/10 | KF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                                                                                                                              |        |
| Tanto   | 09/12-10/10 | KF-VE       | EPS    | √         | √         | √           |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Tanto   | 09/12-10/10 | KF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Tanto   | 09/12-10/10 | KF-VE       | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Tanto   | 09/12-10/10 | KF-VE       | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Tanto   | 10/10-11/06 | KF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                                                |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                               | Others |
| Tanto   | 10/10-11/06 | KF-DET      | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                              |        |
| Tanto   | 10/10-11/06 | KF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                             |        |
| Tanto   | 10/10-11/06 | KF-DET      | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*)<br>3.Read ECU No. |        |
| Tanto   | 10/10-11/06 | KF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                 |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
|         |             |             |        | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Tanto   | 10/10-11/06 | KF-DET      | KFS    |           |           |             |           |                                                                                                                                                                                                 |        |
| Tanto   | 10/10-11/06 | KF-DET      | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Tanto   | 10/10-11/06 | KF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
|         |             |             |        | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |
| Tanto   | 10/10-11/06 | KF-VE       | CVT    |           |           |             |           |                                                                                                                                                                                                 |        |
|         |             |             |        | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                                                                                                                              |        |
| Tanto   | 10/10-11/06 | KF-VE       | ABS    |           |           |             |           |                                                                                                                                                                                                 |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Tanto   | 10/10-11/06 | KF-VE       | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*)<br>3.Read ECU No.                                                                                                                  |        |
| Tanto   | 10/10-11/06 | KF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Tanto   | 10/10-11/06 | KF-VE       | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Tanto   | 10/10-11/06 | KF-VE       | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Tanto   | 11/06-11/12 | KF(N/A)     | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                                                |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                               | Others |
| Tanto   | 11/06-11/12 | KF(N/A)     | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                              |        |
| Tanto   | 11/06-11/12 | KF(N/A)     | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                             |        |
| Tanto   | 11/06-11/12 | KF(N/A)     | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*)<br>3.Read ECU No. |        |
| Tanto   | 11/06-11/12 | KF(N/A)     | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                 |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Tanto   | 11/06-11/12 | KF(N/A)     | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Tanto   | 11/06-11/12 | KF(N/A)     | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Tanto   | 11/06-11/12 | KF(T/C)     | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Tanto   | 11/06-11/12 | KF(T/C)     | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |
| Tanto   | 11/06-11/12 | KF(T/C)     | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                                                                                                                              |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
|         |             |             |        | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*)<br>3.Read ECU No.                                                                                                                  |        |
| Tanto   | 11/06-11/12 | KF(T/C)     | EPS    |           |           |             |           |                                                                                                                                                                                                 |        |
| Tanto   | 11/06-11/12 | KF(T/C)     | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                  |        |
|         |             |             |        | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Tanto   | 11/06-11/12 | KF(T/C)     | KFS    |           |           |             |           |                                                                                                                                                                                                 |        |
| Tanto   | 11/06-11/12 | KF(T/C)     | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Tanto   | 11/12-12/05 | KF(N/A)     | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System   | Functions |           |             |           |                                                                                                     |        |
|---------|-------------|-------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------|--------|
|         |             |             |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                    | Others |
| Tanto   | 11/12-12/05 | KF(N/A)     | CVT      | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                   |        |
| Tanto   | 11/12-12/05 | KF(N/A)     | eco IDLE | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU Initialization Learning<br>3.Delete and input Starter Working Times |        |
| Tanto   | 11/12-12/05 | KF(N/A)     | EPS      | √         | √         | √           |           | 1.Read ECU No.                                                                                      |        |
| Tanto   | 11/12-12/05 | KF(N/A)     | ABS/VSC  | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding                                                                    |        |
| Tanto   | 11/12-12/05 | KF(N/A)     | A/B      | √         | √         |             |           | 1.Read ECU No.                                                                                      |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
|         |             |             | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Tanto   | 11/12-12/05 | KF(N/A)     | ITC    |           |           |             |           |                                                                                                                                                                                                 |        |
| Tanto   | 11/12-12/05 | KF(N/A)     |        | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Tanto   | 11/12-12/05 | KF(T/C)     | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
|         |             |             | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |
| Tanto   | 11/12-12/05 | KF(T/C)     |        |           |           |             |           |                                                                                                                                                                                                 |        |
|         |             |             | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                                                                                                                              |        |
| Tanto   | 11/12-12/05 | KF(T/C)     | EPS    | √         | √         | √           |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Tanto   | 11/12-12/05 | KF(T/C)     |        |           |           |             |           |                                                                                                                                                                                                 |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Tanto   | 11/12-12/05 | KF(T/C)     | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                  |        |
|         |             |             | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Tanto   | 11/12-12/05 | KF(T/C)     |        |           |           |             |           |                                                                                                                                                                                                 |        |
| Tanto   | 11/12-12/05 | KF(T/C)     | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Tanto   | 12/05-13/09 | KF(N/A,T/C) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
|         |             |             | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |
| Tanto   | 12/05-13/09 | KF(N/A,T/C) |        |           |           |             |           |                                                                                                                                                                                                 |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System   | Functions |           |             |           |                                                                                                     |        |
|---------|-------------|-------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------|--------|
|         |             |             |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                    | Others |
| Tanto   | 12/05-13/09 | KF(N/A,T/C) | eco IDLE | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU Initialization Learning<br>3.Delete and input Starter Working Times |        |
| Tanto   | 12/05-13/09 | KF(N/A,T/C) | EPS      | √         | √         | √           |           | 1.Read ECU No.                                                                                      |        |
| Tanto   | 12/05-13/09 | KF(N/A,T/C) | ABS/VSC  | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding                                                                    |        |
| Tanto   | 12/05-13/09 | KF(N/A,T/C) | A/B      | √         | √         |             |           | 1.Read ECU No.                                                                                      |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
|         |             |             | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Tanto   | 12/05-13/09 | KF(N/A,T/C) | ITC    |           |           |             |           |                                                                                                                                                                                                 |        |
| Tanto   | 12/05-13/09 | KF(N/A,T/C) |        | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Tanto   | 13/09-      | KF(N/A,T/C) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
|         |             |             |        | √         | √         | √           | √         | 1.CVT ECU Learning Initializing<br>2.Read ECU No.                                                                                                                                               |        |
| Tanto   | 13/09-      | KF(N/A,T/C) | CVT    |           |           |             |           |                                                                                                                                                                                                 |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year   | Engine Type | System   | Functions |           |             |           |                                                                                   |        |
|---------|--------|-------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------|--------|
|         |        |             |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                  | Others |
|         |        |             |          | ✓         | ✓         | ✓           | ✓         | 1.Eco-Run ECU Initialization Learning<br>2.Delete and input Starter Working Times |        |
| Tanto   | 13/09- | KF(N/A,T/C) | eco IDLE |           |           |             |           |                                                                                   |        |
| Tanto   | 13/09- | KF(N/A,T/C) | EPS      | ✓         | ✓         | ✓           |           | 1.Read ECU No.                                                                    |        |
|         |        |             |          | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.<br>2.2nd bleeding<br>3.3rd bleeding                                |        |
| Tanto   | 13/09- | KF(N/A,T/C) | ABS/VSC  |           |           |             |           |                                                                                   |        |
| Tanto   | 13/09- | KF(N/A,T/C) | A/B      | ✓         | ✓         |             | ✓         | 1.Read ECU No.                                                                    |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year   | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|--------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |        |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Tanto   | 13/09- | KF(N/A,T/C) | KFS    | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Tanto   | 13/09- | KF(N/A,T/C) | Roof   | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.<br>2.Roof ECU Initialization                                                                                                                                                     |        |
| Tanto   | 13/09- | KF(N/A,T/C) | ITC    | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Tanto   | 13/09- | KF(N/A,T/C) | Meter  | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.<br>2.Instrument panel standard initialization                                                                                                                                    |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System             | Functions |           |             |           |                                                         |        |
|---------|-------------|-------------|--------------------|-----------|-----------|-------------|-----------|---------------------------------------------------------|--------|
|         |             |             |                    | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                        | Others |
| Tanto   | 13/09-      | KF(N/A,T/C) | PCB                | √         | √         | √           | √         | 1.Read ECU No.<br>2.Laser radar optical axle adjustment |        |
| Tanto   | 13/09-      | KF(N/A,T/C) | Automatic leveling | √         | √         | √           | √         | 1.Read ECU No.                                          |        |
| Tanto   | 13/09-      | KF(N/A,T/C) | PSD-RH             | √         | √         | √           | √         | 1.Read ECU No.                                          |        |
| Tanto   | 13/09-      | KF(N/A,T/C) | PSD-RL             | √         | √         | √           | √         | 1.Read ECU No.                                          |        |
| Terios  | 00/05-05/12 | K3-VE       | EFI                | √         | √         | √           | √         | 1.Read ECU No.                                          |        |
| Terios  | 00/05-05/12 | K3-VE       | AT                 | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization   |        |
| Terios  | 00/05-05/12 | K3-VE       | ABS                | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                        |        |
| Terios  | 00/05-05/12 | K3-VE       | EPS                | √         | √         | √           |           | 1.Read ECU No.<br>2.Torque sensor zero point adjustment |        |
| Terios  | 00/05-05/12 | K3-VE       | A/B                | √         | √         |             |           | 1.Read ECU No.                                          |        |
| Terios  | 00/05-05/12 | K3-VET      | EFI                | √         | √         | √           | √         | 1.Read ECU No.                                          |        |
| Terios  | 00/05-05/12 | K3-VET      | AT                 | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization   |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle    | Year        | Engine Type | System | Functions |           |             |           |                                                         |        |
|------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|---------------------------------------------------------|--------|
|            |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                        | Others |
| Terios     | 00/05-05/12 | K3-VET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding      |        |
| Terios     | 00/05-05/12 | K3-VET      | EPS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Torque sensor zero point adjustment |        |
| Terios     | 00/05-05/12 | K3-VET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                          |        |
| Terios Kid | 10/07-      | EF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                          |        |
| Terios Kid | 10/07-      | EF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding      |        |
| Terios Kid | 10/07-      | EF-DET      | EPS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Torque sensor zero point adjustment |        |
| Terios Kid | 10/07-      | EF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                          |        |
| Terios Kid | 10/07-      | EF-DET      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status  |        |
| Terios Kid | 10/07-      | EF-DET      |        |           |           |             |           |                                                         |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle          | Year        | Engine Type | System | Functions |           |             |           |                                                        |        |
|------------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------|--------|
|                  |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                       | Others |
| Terios Kid       | 10/07-      | EF-DET      |        |           |           |             |           |                                                        |        |
| Terios Kid/Lucia | 00/11-01/11 | EF-DEM      | EFI    | √         | √         | √           |           | 1.Read ECU No.                                         |        |
| Terios Kid/Lucia | 00/11-01/11 | EF-DEM      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |
| Terios Kid/Lucia | 00/11-01/11 | EF-DEM      | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Terios Kid/Lucia | 00/11-01/11 | EF-DEM      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Terios Kid/Lucia | 00/11-01/11 | EF-DET      | EFI    | √         | √         | √           |           | 1.Read ECU No.                                         |        |
| Terios Kid/Lucia | 00/11-01/11 | EF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |
| Terios Kid/Lucia | 00/11-01/11 | EF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle          | Year        | Engine Type | System | Functions |           |             |           |                                                         |        |
|------------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|---------------------------------------------------------|--------|
|                  |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                        | Others |
| Terios Kid/Lucia | 00/11-01/11 | EF-DET      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status  |        |
| Terios Kid/Lucia | 01/11-10/07 | EF-DEM      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                          |        |
| Terios Kid/Lucia | 01/11-10/07 | EF-DEM      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                        |        |
| Terios Kid/Lucia | 01/11-10/07 | EF-DEM      | EPS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Torque sensor zero point adjustment |        |
| Terios Kid/Lucia | 01/11-10/07 | EF-DEM      | A/B    | √         | √         |             |           | 1.Read ECU No.                                          |        |
| Terios Kid/Lucia | 01/11-10/07 | EF-DEM      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status  |        |
| Terios Kid/Lucia | 01/11-10/07 | EF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                          |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle          | Year        | Engine Type           | System | Functions |           |             |           |                                                         |        |
|------------------|-------------|-----------------------|--------|-----------|-----------|-------------|-----------|---------------------------------------------------------|--------|
|                  |             |                       |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                        | Others |
| Terios Kid/Lucia | 01/11-10/07 | EF-DET                | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding      |        |
| Terios Kid/Lucia | 01/11-10/07 | EF-DET                | EPS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Torque sensor zero point adjustment |        |
| Terios Kid/Lucia | 01/11-10/07 | EF-DET                | A/B    | √         | √         |             |           | 1.Read ECU No.                                          |        |
| Terios Kid/Lucia | 01/11-10/07 | EF-DET                | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status  |        |
| Naked            | 00/10-01/06 | EF-DET(Mechannism AT) | EFI    | √         | √         | √           |           | 1.Read ECU No.                                          |        |
| Naked            | 00/10-01/06 | EF-DET(Mechannism AT) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                        |        |
| Naked            | 00/10-01/06 | EF-DET(Mechannism AT) | DVS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.DVS Bleeding                        |        |
| Naked            | 00/10-01/06 | EF-DET(Mechannism AT) | A/B    | √         | √         |             |           | 1.Read ECU No.                                          |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type                   | System | Functions |           |             |           |                                                        |        |
|---------|-------------|-------------------------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------|--------|
|         |             |                               |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                       | Others |
| Naked   | 00/10-01/06 | EF-DET(Mechannism AT)         | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Naked   | 00/10-01/06 | EF-DET(Electrical Control AT) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Naked   | 00/10-01/06 | EF-DET(Electrical Control AT) | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization  |        |
| Naked   | 00/10-01/06 | EF-DET(Electrical Control AT) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |
| Naked   | 00/10-01/06 | EF-DET(Electrical Control AT) | DVS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.DVS Bleeding                       |        |
| Naked   | 00/10-01/06 | EF-DET(Electrical Control AT) | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Naked   | 00/10-01/06 | EF-DET(Electrical Control AT) | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Naked   | 00/10-01/06 | EF-VE                         | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Naked   | 00/10-01/06 | EF-VE                         | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |
| Naked   | 00/10-01/06 | EF-VE                         | DVS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.DVS Bleeding                       |        |
| Naked   | 00/10-01/06 | EF-VE                         | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                        |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                       | Others |
| Naked   | 00/10-01/06 | EF-VE       | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Naked   | 01/06-02/12 | EF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Naked   | 01/06-02/12 | EF-DET      | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization  |        |
| Naked   | 01/06-02/12 | EF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |
| Naked   | 01/06-02/12 | EF-DET      | DVS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.DVS Bleeding                       |        |
| Naked   | 01/06-02/12 | EF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Naked   | 01/06-02/12 | EF-DET      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Naked   | 01/06-02/12 | EF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Naked   | 01/06-02/12 | EF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |
| Naked   | 01/06-02/12 | EF-VE       | DVS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.DVS Bleeding                       |        |
| Naked   | 01/06-02/12 | EF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                        |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                       | Others |
| Naked   | 01/06-02/12 | EF-VE       | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Naked   | 02/12-04/04 | EF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Naked   | 02/12-04/04 | EF-DET      | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization  |        |
| Naked   | 02/12-04/04 | EF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |
| Naked   | 02/12-04/04 | EF-DET      | DVS    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Naked   | 02/12-04/04 | EF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Naked   | 02/12-04/04 | EF-DET      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Naked   | 02/12-04/04 | EF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Naked   | 02/12-04/04 | EF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |
| Naked   | 02/12-04/04 | EF-VE       | DVS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.DVS Bleeding                       |        |
| Naked   | 02/12-04/04 | EF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle         | Year        | Engine Type | System | Functions |           |             |           |                                                        |        |
|-----------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------|--------|
|                 |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                       | Others |
| Naked           | 02/12-04/04 | EF-VE       | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Hijet/<br>Atrai | 01/01-01/05 | EF-DET      | EFI    | √         | √         | √           |           | 1.Read ECU No.                                         |        |
| Hijet/<br>Atrai | 01/01-01/05 | EF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |
| Hijet/<br>Atrai | 01/01-01/05 | EF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Hijet/<br>Atrai | 01/01-01/05 | EF-DET      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Hijet/<br>Atrai | 01/01-01/05 | EF-SE       | EFI    | √         | √         | √           |           | 1.Read ECU No.                                         |        |
| Hijet/<br>Atrai | 01/01-01/05 | EF-SE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |
| Hijet/<br>Atrai | 01/01-01/05 | EF-SE       | EPS    | √         | √         | √           |           | 1.Read ECU No.                                         |        |
| Hijet/<br>Atrai | 01/01-01/05 | EF-SE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Hijet/<br>Atrai | 01/01-01/05 | EF-VE       | EFI    | √         | √         | √           |           | 1.Read ECU No.                                         |        |
| Hijet/<br>Atrai | 01/01-01/05 | EF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle         | Year        | Engine Type  | System | Functions |           |             |           |                                                        |        |
|-----------------|-------------|--------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------|--------|
|                 |             |              |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                       | Others |
| Hijet/<br>Atrai | 01/01-01/05 | EF-VE        | EPS    | √         | √         | √           |           | 1.Read ECU No.                                         |        |
| Hijet/<br>Atrai | 01/01-01/05 | EF-VE        | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Hijet/<br>Atrai | 01/01-01/05 | EF-VE        | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Hijet/<br>Atrai | 01/01-01/05 | EF-VN        | EFI    | √         | √         | √           |           | 1.Read ECU No.                                         |        |
| Hijet/<br>Atrai | 01/01-01/05 | EF-VN        | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Hijet/<br>Atrai | 01/05-01/09 | EF-DET       | EFI    | √         | √         | √           |           | 1.Read ECU No.                                         |        |
| Hijet/<br>Atrai | 01/05-01/09 | EF-DET       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |
| Hijet/<br>Atrai | 01/05-01/09 | EF-DET       | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Hijet/<br>Atrai | 01/05-01/09 | EF-DET       | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Hijet/<br>Atrai | 01/05-01/09 | EF-SE(Truck) | EFI    | √         | √         | √           |           | 1.Read ECU No.                                         |        |
| Hijet/<br>Atrai | 01/05-01/09 | EF-SE(Truck) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle     | Year        | Engine Type         | System | Functions |           |             |           |                                  |        |
|-------------|-------------|---------------------|--------|-----------|-----------|-------------|-----------|----------------------------------|--------|
|             |             |                     |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                 | Others |
| Hijet/Atrai | 01/05-01/09 | EF-SE(Truck)        | EPS    | √         | √         | √           |           | 1.Read ECU No.                   |        |
| Hijet/Atrai | 01/05-01/09 | EF-SE(Truck)        | A/B    | √         | √         |             |           | 1.Read ECU No.                   |        |
| Hijet/Atrai | 01/05-01/09 | EF-SE(Cargo, Atrai) | EFI    | √         | √         | √           |           | 1.Read ECU No.                   |        |
| Hijet/Atrai | 01/05-01/09 | EF-SE(Cargo, Atrai) | ABS    | √         | √         | √           | √         | 1.Read ECU No.                   |        |
| Hijet/Atrai | 01/05-01/09 | EF-SE(Cargo, Atrai) | A/B    | √         | √         |             |           | 1.Read ECU No.                   |        |
| Hijet/Atrai | 01/05-01/09 | EF-VE(Truck)        | EFI    | √         | √         | √           |           | 1.Read ECU No.                   |        |
| Hijet/Atrai | 01/05-01/09 | EF-VE(Truck)        | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding |        |
| Hijet/Atrai | 01/05-01/09 | EF-VE(Truck)        | EPS    | √         | √         | √           |           | 1.Read ECU No.                   |        |
| Hijet/Atrai | 01/05-01/09 | EF-VE(Truck)        | A/B    | √         | √         |             |           | 1.Read ECU No.                   |        |
| Hijet/Atrai | 01/05-01/09 | EF-VE(Cargo, Atrai) | EFI    | √         | √         | √           |           | 1.Read ECU No.                   |        |
| Hijet/Atrai | 01/05-01/09 | EF-VE(Cargo, Atrai) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding |        |
| Hijet/Atrai | 01/05-01/09 | EF-VE(Cargo, Atrai) | A/B    | √         | √         |             |           | 1.Read ECU No.                   |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle         | Year        | Engine Type            | System | Functions |           |             |           |                                                              |        |
|-----------------|-------------|------------------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------------|--------|
|                 |             |                        |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                             | Others |
| Hijet/<br>Atrai | 01/05-01/09 | EF-VE(Cargo,<br>Atrai) | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main<br>Key and Subkey<br>Status |        |
| Hijet/<br>Atrai | 01/05-01/09 | EF-VN                  | EFI    | √         | √         | √           |           | 1.Read ECU No.                                               |        |
| Hijet/<br>Atrai | 01/05-01/09 | EF-VN                  | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Hijet/<br>Atrai | 01/09-01/10 | EF-DET                 | EFI    | √         | √         | √           |           | 1.Read ECU No.                                               |        |
| Hijet/<br>Atrai | 01/09-01/10 | EF-DET                 | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                             |        |
| Hijet/<br>Atrai | 01/09-01/10 | EF-DET                 | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Hijet/<br>Atrai | 01/09-01/10 | EF-DET                 | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main<br>Key and Subkey<br>Status |        |
| Hijet/<br>Atrai | 01/09-01/10 | EF-SE(Truck)           | EFI    | √         | √         | √           |           | 1.Read ECU No.                                               |        |
| Hijet/<br>Atrai | 01/09-01/10 | EF-SE(Truck)           | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                             |        |
| Hijet/<br>Atrai | 01/09-01/10 | EF-SE(Truck)           | EPS    | √         | √         | √           |           | 1.Read ECU No.                                               |        |
| Hijet/<br>Atrai | 01/09-01/10 | EF-SE(Truck)           | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle     | Year        | Engine Type         | System | Functions |           |             |           |                                                        |        |
|-------------|-------------|---------------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------|--------|
|             |             |                     |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                       | Others |
| Hijet/Atrai | 01/09-01/10 | EF-SE(Cargo, Atrai) | EFI    | √         | √         | √           |           | 1.Read ECU No.                                         |        |
| Hijet/Atrai | 01/09-01/10 | EF-SE(Cargo, Atrai) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |
| Hijet/Atrai | 01/09-01/10 | EF-SE(Cargo, Atrai) | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Hijet/Atrai | 01/09-01/10 | EF-VE(Truck)        | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Hijet/Atrai | 01/09-01/10 | EF-VE(Truck)        | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |
| Hijet/Atrai | 01/09-01/10 | EF-VE(Truck)        | EPS    | √         | √         | √           |           | 1.Read ECU No.                                         |        |
| Hijet/Atrai | 01/09-01/10 | EF-VE(Truck)        | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Hijet/Atrai | 01/09-01/10 | EF-VE(Cargo, Atrai) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Hijet/Atrai | 01/09-01/10 | EF-VE(Cargo, Atrai) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                       |        |
| Hijet/Atrai | 01/09-01/10 | EF-VE(Cargo, Atrai) | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Hijet/Atrai | 01/09-01/10 | EF-VE(Cargo, Atrai) | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Hijet/Atrai | 01/09-01/10 | EF-VN               | EFI    | √         | √         | √           |           | 1.Read ECU No.                                         |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle         | Year        | Engine Type         | System | Functions |           |             |           |                                                         |        |
|-----------------|-------------|---------------------|--------|-----------|-----------|-------------|-----------|---------------------------------------------------------|--------|
|                 |             |                     |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                        | Others |
| Hijet/<br>Atrai | 01/09-01/10 | EF-VN               | A/B    | √         | √         |             |           | 1.Read ECU No.                                          |        |
| Hijet/<br>Atrai | 01/10-02/01 | EF-DET              | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                          |        |
| Hijet/<br>Atrai | 01/10-02/01 | EF-DET              | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                        |        |
| Hijet/<br>Atrai | 01/10-02/01 | EF-DET              | A/B    | √         | √         |             |           | 1.Read ECU No.                                          |        |
| Hijet/<br>Atrai | 01/10-02/01 | EF-DET              | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status  |        |
| Hijet/<br>Atrai | 01/10-02/01 | EF-SE(Truck)        | EFI    | √         | √         | √           |           | 1.Read ECU No.                                          |        |
| Hijet/<br>Atrai | 01/10-02/01 | EF-SE(Truck)        | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                        |        |
| Hijet/<br>Atrai | 01/10-02/01 | EF-SE(Truck)        | EPS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Torque sensor zero point adjustment |        |
| Hijet/<br>Atrai | 01/10-02/01 | EF-SE(Truck)        | A/B    | √         | √         |             |           | 1.Read ECU No.                                          |        |
| Hijet/<br>Atrai | 01/10-02/01 | EF-SE(Cargo, Atrai) | EFI    | √         | √         | √           |           | 1.Read ECU No.                                          |        |
| Hijet/<br>Atrai | 01/10-02/01 | EF-SE(Cargo, Atrai) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                        |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle         | Year        | Engine Type            | System | Functions |           |             |           |                                                               |        |
|-----------------|-------------|------------------------|--------|-----------|-----------|-------------|-----------|---------------------------------------------------------------|--------|
|                 |             |                        |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                              | Others |
| Hijet/<br>Atrai | 01/10-02/01 | EF-SE(Cargo,<br>Atrai) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 01/10-02/01 | EF-VE(Truck)           | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 01/10-02/01 | EF-VE(Truck)           | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                              |        |
| Hijet/<br>Atrai | 01/10-02/01 | EF-VE(Truck)           | EPS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Torque sensor<br>zero point<br>adjustment |        |
| Hijet/<br>Atrai | 01/10-02/01 | EF-VE(Truck)           | A/B    | √         | √         |             |           | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 01/10-02/01 | EF-VE(Cargo,<br>Atrai) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 01/10-02/01 | EF-VE(Cargo,<br>Atrai) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                              |        |
| Hijet/<br>Atrai | 01/10-02/01 | EF-VE(Cargo,<br>Atrai) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 01/10-02/01 | EF-VE(Cargo,<br>Atrai) | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main<br>Key and Subkey<br>Status  |        |
| Hijet/<br>Atrai | 01/10-02/01 | EF-VN                  | EFI    | √         | √         | √           |           | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 01/10-02/01 | EF-VN                  | A/B    | √         | √         |             |           | 1.Read ECU No.                                                |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle         | Year        | Engine Type         | System | Functions |           |             |           |                                                         |        |
|-----------------|-------------|---------------------|--------|-----------|-----------|-------------|-----------|---------------------------------------------------------|--------|
|                 |             |                     |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                        | Others |
| Hijet/<br>Atrai | 02/01-04/12 | EF-DET              | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                          |        |
| Hijet/<br>Atrai | 02/01-04/12 | EF-DET              | AT     | √         | √         | √           |           | 1.Read ECU No.                                          |        |
| Hijet/<br>Atrai | 02/01-04/12 | EF-DET              | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                        |        |
| Hijet/<br>Atrai | 02/01-04/12 | EF-DET              | A/B    | √         | √         |             |           | 1.Read ECU No.                                          |        |
| Hijet/<br>Atrai | 02/01-04/12 | EF-DET              | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status  |        |
| Hijet/<br>Atrai | 02/01-04/12 | EF-SE(Truck)        | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                          |        |
| Hijet/<br>Atrai | 02/01-04/12 | EF-SE(Truck)        | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                        |        |
| Hijet/<br>Atrai | 02/01-04/12 | EF-SE(Truck)        | EPS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Torque sensor zero point adjustment |        |
| Hijet/<br>Atrai | 02/01-04/12 | EF-SE(Truck)        | A/B    | √         | √         |             |           | 1.Read ECU No.                                          |        |
| Hijet/<br>Atrai | 02/01-04/12 | EF-SE(Cargo, Atrai) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                          |        |
| Hijet/<br>Atrai | 02/01-04/12 | EF-SE(Cargo, Atrai) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                        |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle         | Year        | Engine Type            | System | Functions |           |             |           |                                                               |        |
|-----------------|-------------|------------------------|--------|-----------|-----------|-------------|-----------|---------------------------------------------------------------|--------|
|                 |             |                        |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                              | Others |
| Hijet/<br>Atrai | 02/01-04/12 | EF-SE(Cargo,<br>Atrai) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 02/01-04/12 | EF-VE(Truck)           | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 02/01-04/12 | EF-VE(Truck)           | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                              |        |
| Hijet/<br>Atrai | 02/01-04/12 | EF-VE(Truck)           | EPS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Torque sensor<br>zero point<br>adjustment |        |
| Hijet/<br>Atrai | 02/01-04/12 | EF-VE(Truck)           | A/B    | √         | √         |             |           | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 02/01-04/12 | EF-VE(Cargo,<br>Atrai) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 02/01-04/12 | EF-VE(Cargo,<br>Atrai) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                              |        |
| Hijet/<br>Atrai | 02/01-04/12 | EF-VE(Cargo,<br>Atrai) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 02/01-04/12 | EF-VE(Cargo,<br>Atrai) | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main<br>Key and Subkey<br>Status  |        |
| Hijet/<br>Atrai | 02/01-04/12 | EF-VN                  | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 02/01-04/12 | EF-VN                  | A/B    | √         | √         |             |           | 1.Read ECU No.                                                |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle     | Year        | Engine Type         | System | Functions |           |             |           |                                                         |        |
|-------------|-------------|---------------------|--------|-----------|-----------|-------------|-----------|---------------------------------------------------------|--------|
|             |             |                     |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                        | Others |
| Hijet/Atrai | 04/12-10/08 | EF-DET(A/T)         | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                          |        |
| Hijet/Atrai | 04/12-10/08 | EF-DET(A/T)         | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                        |        |
| Hijet/Atrai | 04/12-10/08 | EF-DET(A/T)         | A/B    | √         | √         |             |           | 1.Read ECU No.                                          |        |
| Hijet/Atrai | 04/12-10/08 | EF-DET(M/T)         | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                          |        |
| Hijet/Atrai | 04/12-10/08 | EF-DET(M/T)         | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                        |        |
| Hijet/Atrai | 04/12-10/08 | EF-DET(M/T)         | A/B    | √         | √         |             |           | 1.Read ECU No.                                          |        |
| Hijet/Atrai | 04/12-10/08 | EF-SE(Truck)        | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                          |        |
| Hijet/Atrai | 04/12-10/08 | EF-SE(Truck)        | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                        |        |
| Hijet/Atrai | 04/12-10/08 | EF-SE(Truck)        | EPS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Torque sensor zero point adjustment |        |
| Hijet/Atrai | 04/12-10/08 | EF-SE(Truck)        | A/B    | √         | √         |             |           | 1.Read ECU No.                                          |        |
| Hijet/Atrai | 04/12-10/08 | EF-SE(Cargo, Atrai) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                          |        |
| Hijet/Atrai | 04/12-10/08 | EF-SE(Cargo, Atrai) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                        |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle     | Year        | Engine Type         | System | Functions |           |             |           |                                                         |        |
|-------------|-------------|---------------------|--------|-----------|-----------|-------------|-----------|---------------------------------------------------------|--------|
|             |             |                     |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                        | Others |
| Hijet/Atrai | 04/12-10/08 | EF-SE(Cargo, Atrai) | A/B    | √         | √         |             |           | 1.Read ECU No.                                          |        |
| Hijet/Atrai | 04/12-10/08 | EF-VE(Truck-->A/T)  | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                          |        |
| Hijet/Atrai | 04/12-10/08 | EF-VE(Truck-->A/T)  | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                        |        |
| Hijet/Atrai | 04/12-10/08 | EF-VE(Truck-->A/T)  | EPS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Torque sensor zero point adjustment |        |
| Hijet/Atrai | 04/12-10/08 | EF-VE(Truck-->A/T)  | A/B    | √         | √         |             |           | 1.Read ECU No.                                          |        |
| Hijet/Atrai | 04/12-10/08 | EF-VE(Truck-->M/T)  | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                          |        |
| Hijet/Atrai | 04/12-10/08 | EF-VE(Truck-->M/T)  | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                        |        |
| Hijet/Atrai | 04/12-10/08 | EF-VE(Truck-->M/T)  | EPS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Torque sensor zero point adjustment |        |
| Hijet/Atrai | 04/12-10/08 | EF-VE(Truck-->M/T)  | A/B    | √         | √         |             |           | 1.Read ECU No.                                          |        |
| Hijet/Atrai | 04/12-10/08 | EF-VE(Cargo-->A/T)  | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                          |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle         | Year        | Engine Type        | System | Functions |           |             |           |                                                              |        |
|-----------------|-------------|--------------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------------|--------|
|                 |             |                    |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                             | Others |
| Hijet/<br>Atrai | 04/12-10/08 | EF-VE(Cargo-->A/T) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding           |        |
| Hijet/<br>Atrai | 04/12-10/08 | EF-VE(Cargo-->A/T) | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Hijet/<br>Atrai | 04/12-10/08 | EF-VE(Cargo-->M/T) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Hijet/<br>Atrai | 04/12-10/08 | EF-VE(Cargo-->M/T) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding           |        |
| Hijet/<br>Atrai | 04/12-10/08 | EF-VE(Cargo-->M/T) | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Hijet/<br>Atrai | 04/12-10/08 | EF-VE(HV)          | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Hijet/<br>Atrai | 04/12-10/08 | EF-VE(HV)          | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value<br>Initialization     |        |
| Hijet/<br>Atrai | 04/12-10/08 | EF-VE(HV)          | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding           |        |
| Hijet/<br>Atrai | 04/12-10/08 | EF-VE(HV)          | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle         | Year        | Engine Type  | System | Functions |           |             |           |                                                               |        |
|-----------------|-------------|--------------|--------|-----------|-----------|-------------|-----------|---------------------------------------------------------------|--------|
|                 |             |              |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                              | Others |
| Hijet/<br>Atrai | 04/12-10/08 | EF-VE(HV)    | A/B    | √         | √         |             |           | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 04/12-10/08 | EF-VN        | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 04/12-10/08 | EF-VN        | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding            |        |
| Hijet/<br>Atrai | 04/12-10/08 | EF-VN        | A/B    | √         | √         |             |           | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 10/08-11/11 | KF-DET       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 10/08-11/11 | KF-DET       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding            |        |
| Hijet/<br>Atrai | 10/08-11/11 | KF-DET       | A/B    | √         | √         |             |           | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 10/08-11/11 | KF-VE(Truck) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 10/08-11/11 | KF-VE(Truck) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                              |        |
| Hijet/<br>Atrai | 10/08-11/11 | KF-VE(Truck) | EPS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Torque sensor<br>zero point<br>adjustment |        |
| Hijet/<br>Atrai | 10/08-11/11 | KF-VE(Truck) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle         | Year        | Engine Type    | System | Functions |           |             |           |                                                               |        |
|-----------------|-------------|----------------|--------|-----------|-----------|-------------|-----------|---------------------------------------------------------------|--------|
|                 |             |                |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                              | Others |
| Hijet/<br>Atrai | 10/08-11/11 | KF-VE(Cargo)   | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 10/08-11/11 | KF-VE(Cargo)   | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding            |        |
| Hijet/<br>Atrai | 10/08-11/11 | KF-VE(Cargo)   | A/B    | √         | √         |             |           | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 11/11-13/04 | KF(N/A)(Truck) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 11/11-13/04 | KF(N/A)(Truck) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                              |        |
| Hijet/<br>Atrai | 11/11-13/04 | KF(N/A)(Truck) | EPS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Torque sensor<br>zero point<br>adjustment |        |
| Hijet/<br>Atrai | 11/11-13/04 | KF(N/A)(Truck) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 11/11-13/04 | KF(N/A)(Cargo) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 11/11-13/04 | KF(N/A)(Cargo) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding            |        |
| Hijet/<br>Atrai | 11/11-13/04 | KF(N/A)(Cargo) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 11/11-13/04 | KF(T/C)        | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle         | Year        | Engine Type    | System | Functions |           |             |           |                                                               |        |
|-----------------|-------------|----------------|--------|-----------|-----------|-------------|-----------|---------------------------------------------------------------|--------|
|                 |             |                |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                              | Others |
| Hijet/<br>Atrai | 11/11-13/04 | KF(T/C)        | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding            |        |
| Hijet/<br>Atrai | 11/11-13/04 | KF(T/C)        | A/B    | √         | √         |             |           | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 13/04-      | KF(N/A)(Truck) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 13/04-      | KF(N/A)(Truck) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                              |        |
| Hijet/<br>Atrai | 13/04-      | KF(N/A)(Truck) | EPS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Torque sensor<br>zero point<br>adjustment |        |
| Hijet/<br>Atrai | 13/04-      | KF(N/A)(Truck) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 13/04-      | KF(N/A)(Cargo) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 13/04-      | KF(N/A)(Cargo) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                              |        |
| Hijet/<br>Atrai | 13/04-      | KF(N/A)(Cargo) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 13/04-      | KF(T/C)        | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                |        |
| Hijet/<br>Atrai | 13/04-      | KF(T/C)        | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                              |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle     | Year        | Engine Type | System | Functions |           |             |           |                                                                       |        |
|-------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------|--------|
|             |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                      | Others |
| Hijet/Atrai | 13/04-      | KF(T/C)     | A/B    | √         | √         |             |           | 1.Read ECU No.                                                        |        |
| BEGO        | 06/01-10/07 | 3SZ-VE      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                        |        |
| BEGO        | 06/01-10/07 | 3SZ-VE      | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value<br>Initialization              |        |
| BEGO        | 06/01-10/07 | 3SZ-VE      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                                      |        |
| BEGO        | 06/01-10/07 | 3SZ-VE      | VSC    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding<br>4.3rd bleeding  |        |
| BEGO        | 06/01-10/07 | 3SZ-VE      | EPS    | √         | √         | √           |           | 1.Torque sensor<br>zero point<br>adjustment(*)<br>2.Mode<br>change(*) |        |
| BEGO        | 06/01-10/07 | 3SZ-VE      | A/B    | √         | √         |             |           | 1.Read ECU No.                                                        |        |
| BEGO        | 06/01-10/07 | 3SZ-VE      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main<br>Key and Subkey<br>Status          |        |
| BEGO        | 10/07-13/02 | 3SZ-VE      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                        |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                                       |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                      | Others |
| BEGO    | 10/07-13/02 | 3SZ-VE      | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value<br>Initialization              |        |
| BEGO    | 10/07-13/02 | 3SZ-VE      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                                      |        |
| BEGO    | 10/07-13/02 | 3SZ-VE      | VSC    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding<br>4.3rd bleeding  |        |
| BEGO    | 10/07-13/02 | 3SZ-VE      | EPS    | √         | √         | √           |           | 1.Torque sensor<br>zero point<br>adjustment(*)<br>2.Mode<br>change(*) |        |
| BEGO    | 10/07-13/02 | 3SZ-VE      | A/B    | √         | √         |             |           | 1.Read ECU No.                                                        |        |
| BEGO    | 10/07-13/02 | 3SZ-VE      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main<br>Key and Subkey<br>Status          |        |
| BEGO    | 13/02-      | 3SZ-VE      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                        |        |
| BEGO    | 13/02-      | 3SZ-VE      | A/T    | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value<br>Initialization              |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                                      |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|----------------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                     | Others |
| BEGO    | 13/02-      | 3SZ-VE      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                                     |        |
| BEGO    | 13/02-      | 3SZ-VE      | VSC    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding<br>4.3rd bleeding |        |
| BEGO    | 13/02-      | 3SZ-VE      | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*)         |        |
| BEGO    | 13/02-      | 3SZ-VE      | A/B    | √         | √         |             |           | 1.Read ECU No.                                                       |        |
| BEGO    | 13/02-      | 3SZ-VE      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status               |        |
| Boon    | 04/05-05/11 | 1KR-FE      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                       |        |
| Boon    | 04/05-05/11 | 1KR-FE      | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization                |        |
| Boon    | 04/05-05/11 | 1KR-FE      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                   |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                              |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                             | Others |
| Boon    | 04/05-05/11 | 1KR-FE      | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |
| Boon    | 04/05-05/11 | 1KR-FE      | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Boon    | 04/05-05/11 | 1KR-FE      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status       |        |
| Boon    | 04/05-05/11 | K3-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Boon    | 04/05-05/11 | K3-VE       | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization        |        |
| Boon    | 04/05-05/11 | K3-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                             |        |
| Boon    | 04/05-05/11 | K3-VE       | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |
| Boon    | 04/05-05/11 | K3-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                              |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                             | Others |
| Boon    | 04/05-05/11 | K3-VE       | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status       |        |
| Boon    | 05/11-10/02 | 1KR-FE      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Boon    | 05/11-10/02 | 1KR-FE      | AT     | √         | √         | √           |           | 1.Read ECU No.                                               |        |
| Boon    | 05/11-10/02 | 1KR-FE      | ABS    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Boon    | 05/11-10/02 | 1KR-FE      | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |
| Boon    | 05/11-10/02 | 1KR-FE      | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Boon    | 05/11-10/02 | 1KR-FE      | KFS    | √         | √         | √           |           | 1.Read ECU No.                                               |        |
| Boon    | 05/11-10/02 | K3-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Boon    | 05/11-10/02 | K3-VE       | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization        |        |
| Boon    | 05/11-10/02 | K3-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Boon    | 05/11-10/02 | K3-VE       | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |
| Boon    | 05/11-10/02 | K3-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                              |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                             | Others |
| Boon    | 05/11-10/02 | K3-VE       | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status       |        |
| Boon    | 05/11-10/02 | KJ-VET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Boon    | 05/11-10/02 | KJ-VET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.A/T Learning Value Initialization        |        |
| Boon    | 05/11-10/02 | KJ-VET      | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |
| Boon    | 05/11-10/02 | KJ-VET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Boon    | 10/02-11/05 | 1KR-FE      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Boon    | 10/02-11/05 | 1KR-FE      | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing            |        |
| Boon    | 10/02-11/05 | 1KR-FE      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding<br>3.3rd bleeding           |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Boon    | 10/02-11/05 | 1KR-FE      | EPS    | √         | √         | √           | √         | 1.Torque sensor zero point adjustment(*)<br>2.Read ECU No.                                                                                                                                      |        |
| Boon    | 10/02-11/05 | 1KR-FE      | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Boon    | 10/02-11/05 | 1KR-FE      | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Boon    | 10/02-11/05 | 1KR-FE      | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Boon    | 10/02-11/05 | 1KR-FE      | Meter  | √         | √         | √           |           |                                                                                                                                                                                                 |        |
| Boon    | 10/02-11/05 | 1NR-FE      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                            |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                           | Others |
| Boon    | 10/02-11/05 | 1NR-FE      | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing          |        |
| Boon    | 10/02-11/05 | 1NR-FE      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding<br>3.3rd bleeding         |        |
| Boon    | 10/02-11/05 | 1NR-FE      | EPS    | √         | √         | √           | √         | 1.Torque sensor zero point adjustment(*)<br>2.Read ECU No. |        |
| Boon    | 10/02-11/05 | 1NR-FE      | A/B    | √         | √         |             |           | 1.Read ECU No.                                             |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Boon    | 10/02-11/05 | 1NR-FE      | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Boon    | 10/02-11/05 | 1NR-FE      | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Boon    | 10/02-11/05 | 1NR-FE      | Meter  | √         | √         | √           |           |                                                                                                                                                                                                 |        |
| Boon    | 11/05-12/06 | 1KR-FE      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Boon    | 11/05-12/06 | 1KR-FE      | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System  | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|-------------|-------------|---------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |             |             |         | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Boon    | 11/05-12/06 | 1KR-FE      | EPS     | √         | √         | √           | √         | 1.Torque sensor zero point adjustment(*)<br>2.Read ECU No.                                                                                                                                      |        |
| Boon    | 11/05-12/06 | 1KR-FE      | ABS/VSC | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding<br>3.3rd bleeding                                                                                                                                              |        |
| Boon    | 11/05-12/06 | 1KR-FE      | A/B     | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Boon    | 11/05-12/06 | 1KR-FE      | KFS     | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Boon    | 11/05-12/06 | 1KR-FE      | ITC     | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Boon    | 11/05-12/06 | 1KR-FE      | Meter   | √         | √         | √           |           |                                                                                                                                                                                                 |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System  | Functions |           |             |           |                                                            |        |
|---------|-------------|-------------|---------|-----------|-----------|-------------|-----------|------------------------------------------------------------|--------|
|         |             |             |         | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                           | Others |
| Boon    | 11/05-12/06 | 1NR-FE      | EFI     | √         | √         | √           | √         | 1.Read ECU No.                                             |        |
| Boon    | 11/05-12/06 | 1NR-FE      | CVT     | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing          |        |
| Boon    | 11/05-12/06 | 1NR-FE      | EPS     | √         | √         | √           | √         | 1.Torque sensor zero point adjustment(*)<br>2.Read ECU No. |        |
| Boon    | 11/05-12/06 | 1NR-FE      | ABS/VSC | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding<br>3.3rd bleeding         |        |
| Boon    | 11/05-12/06 | 1NR-FE      | A/B     | √         | √         |             |           | 1.Read ECU No.                                             |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Boon    | 11/05-12/06 | 1NR-FE      | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Boon    | 11/05-12/06 | 1NR-FE      | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Boon    | 11/05-12/06 | 1NR-FE      | Meter  | √         | √         | √           |           |                                                                                                                                                                                                 |        |
| Boon    | 12/06-14/04 | 1KR-FE      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Boon    | 12/06-14/04 | 1KR-FE      | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System   | Functions |           |             |           |                                                                                                     |        |
|---------|-------------|-------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------|--------|
|         |             |             |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                    | Others |
| Boon    | 12/06-14/04 | 1KR-FE      | eco IDLE | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU Initialization Learning<br>3.Delete and input Starter Working Times |        |
| Boon    | 12/06-14/04 | 1KR-FE      | EPS      | √         | √         | √           | √         | 1.Torque sensor zero point adjustment(*)<br>2.Read ECU No.                                          |        |
| Boon    | 12/06-14/04 | 1KR-FE      | ABS/VSC  | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding                                                                    |        |
| Boon    | 12/06-14/04 | 1KR-FE      | A/B      | √         | √         |             |           | 1.Read ECU No.                                                                                      |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Boon    | 12/06-14/04 | 1KR-FE      | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Boon    | 12/06-14/04 | 1KR-FE      | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Boon    | 12/06-14/04 | 1KR-FE      | Meter  | √         | √         | √           | √         | 1.Read ECU No.<br>2.Instrument panel standard initialization                                                                                                                                    |        |
| Boon    | 14/04-      | 1KR-FE      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year   | Engine Type | System   | Functions |           |             |           |                                                                                   |        |
|---------|--------|-------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------|--------|
|         |        |             |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                  | Others |
| Boon    | 14/04- | 1KR-FE      | CVT      | ✓         | ✓         | ✓           | ✓         | 1.CVT ECU Learning Initializing<br>2.Read ECU No.                                 |        |
| Boon    | 14/04- | 1KR-FE      | eco IDLE | ✓         | ✓         | ✓           | ✓         | 1.Eco-Run ECU Initialization Learning<br>2.Delete and input Starter Working Times |        |
| Boon    | 14/04- | 1KR-FE      | EPS      | ✓         | ✓         | ✓           |           | 1.Read ECU No.                                                                    |        |
| Boon    | 14/04- | 1KR-FE      | ABS/VSC  | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.<br>2.2nd bleeding<br>3.3rd bleeding                                |        |
| Boon    | 14/04- | 1KR-FE      | A/B      | ✓         | ✓         |             | ✓         | 1.Read ECU No.                                                                    |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle      | Year   | Engine Type | System             | Functions |           |             |           |                                                                                                                                                                                                 |        |
|--------------|--------|-------------|--------------------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|              |        |             |                    | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Boon         | 14/04- | 1KR-FE      | KFS                | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Boon         | 14/04- | 1KR-FE      | ITC                | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Boon         | 14/04- | 1KR-FE      | Meter              | ✓         | ✓         | ✓           | ✓         |                                                                                                                                                                                                 |        |
| Boon         | 14/04- | 1KR-FE      | Automatic leveling | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Boon Luminas | 08/12- | 3SZ-VE      | EFI                | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle      | Year   | Engine Type | System | Functions |           |             |           |                                                                      |        |
|--------------|--------|-------------|--------|-----------|-----------|-------------|-----------|----------------------------------------------------------------------|--------|
|              |        |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                     | Others |
| Boon Luminas | 08/12- | 3SZ-VE      | A/T    | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization                |        |
| Boon Luminas | 08/12- | 3SZ-VE      | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                    |        |
| Boon Luminas | 08/12- | 3SZ-VE      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                   |        |
| Boon Luminas | 08/12- | 3SZ-VE      | VSC    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding<br>4.3rd bleeding |        |
| Boon Luminas | 08/12- | 3SZ-VE      | EPS    | √         | √         | √           | √         | 1.Torque sensor zero point adjustment(*)<br>2.Read ECU No.           |        |
| Boon Luminas | 08/12- | 3SZ-VE      | A/B    | √         | √         |             |           | 1.Read ECU No.                                                       |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle      | Year   | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|--------------|--------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|              |        |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Boon Luminas | 08/12- | 3SZ-VE      | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Boon Luminas | 08/12- | 3SZ-VE      | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Max          | 01/10- | EF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Max          | 01/10- | EF-DET      | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization                                                                                                                                           |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year   | Engine Type | System | Functions |           |             |           |                                                        |        |
|---------|--------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------|--------|
|         |        |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                       | Others |
| Max     | 01/10- | EF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding     |        |
| Max     | 01/10- | EF-DET      | DVS    | √         | √         | √           |           | 1.Read ECU No.<br>2.DVS Bleeding                       |        |
| Max     | 01/10- | EF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Max     | 01/10- | EF-DET      | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Max     | 01/10- | EF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Max     | 01/10- | EF-VE       | CVT    | √         | √         | √           |           | 1.Read ECU No.                                         |        |
| Max     | 01/10- | EF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding     |        |
| Max     | 01/10- | EF-VE       | DVS    | √         | √         | √           |           | 1.Read ECU No.<br>2.DVS Bleeding                       |        |
| Max     | 01/10- | EF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Max     | 01/10- | EF-VE       | KFS    | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Max     | 01/10- | JB-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle  | Year        | Engine Type | System   | Functions |           |             |           |                                                                                                     |        |
|----------|-------------|-------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------|--------|
|          |             |             |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                    | Others |
| Max      | 01/10-      | JB-DET      | AT       | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization                                               |        |
| Max      | 01/10-      | JB-DET      | ABS      | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                                                                    |        |
| Max      | 01/10-      | JB-DET      | A/B      | √         | √         |             |           | 1.Read ECU No.                                                                                      |        |
| Max      | 01/10-      | JB-DET      | KFS      | √         | √         | √           |           | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status                                              |        |
| Max      | 01/10-      | JB-DET      | 4wd      | √         | √         | √           |           | 1.Read ECU No.                                                                                      |        |
| Mira e:S | 11/09-13/07 | KF(N/A)     | EFI      | √         | √         | √           | √         | 1.Read ECU No.                                                                                      |        |
| Mira e:S | 11/09-13/07 | KF(N/A)     | CVT      | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                   |        |
| Mira e:S | 11/09-13/07 | KF(N/A)     | eco IDLE | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU Initialization Learning<br>3.Delete and input Starter Working Times |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle  | Year        | Engine Type | System  | Functions |           |             |           |                                                                                                                                                                                                 |        |
|----------|-------------|-------------|---------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|          |             |             |         | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Mira e:S | 11/09-13/07 | KF(N/A)     | EPS     | √         | √         | √           |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira e:S | 11/09-13/07 | KF(N/A)     | ABS/VSC | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding<br>3.3rd bleeding                                                                                                                                              |        |
| Mira e:S | 11/09-13/07 | KF(N/A)     | A/B     | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira e:S | 11/09-13/07 | KF(N/A)     | KFS     | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Mira e:S | 11/09-13/07 | KF(N/A)     | ITC     | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle  | Year        | Engine Type | System   | Functions |           |             |           |                                                                                   |        |
|----------|-------------|-------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------|--------|
|          |             |             |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                  | Others |
| Mira e:S | 11/09-13/07 | KF(N/A)     | Meter    | √         | √         | √           |           |                                                                                   |        |
| Mira e:S | 11/09-13/07 | KF(N/A)     | PCB      | √         | √         | √           | √         | 1.Read ECU No.<br>2.Laser radar optical axle adjustment                           |        |
| e:S      | 13/07-      | KF(N/A)     | EFI      | √         | √         | √           | √         | 1.Read ECU No.                                                                    |        |
| Mira e:S | 13/07-      | KF(N/A)     | CVT      | √         | √         | √           | √         | 1.CVT ECU Learning Initializing<br>2.Read ECU No.                                 |        |
| Mira e:S | 13/07-      | KF(N/A)     | eco IDLE | √         | √         | √           | √         | 1.Eco-Run ECU Initialization Learning<br>2.Delete and input Starter Working Times |        |
| Mira e:S | 13/07-      | KF(N/A)     | EPS      | √         | √         | √           |           | 1.Read ECU No.                                                                    |        |
| Mira e:S | 13/07-      | KF(N/A)     | ABS/VSC  | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding<br>3.3rd bleeding                                |        |
| Mira e:S | 13/07-      | KF(N/A)     | A/B      | √         | √         |             | √         | 1.Read ECU No.                                                                    |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle     | Year   | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|-------------|--------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|             |        |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Mira<br>e:S | 13/07- | KF(N/A)     | KFS    | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Mira<br>e:S | 13/07- | KF(N/A)     | ITC    | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira<br>e:S | 13/07- | KF(N/A)     | Meter  | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.<br>2.Instrument panel standard initialization                                                                                                                                    |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System | Functions |           |             |           |                                                                  |        |
|---------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|------------------------------------------------------------------|--------|
|               |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                 | Others |
| Mira<br>e:S   | 13/07-      | KF(N/A)     | PCB    | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.<br>2.Laser radar<br>optical axle<br>adjustment    |        |
| Mira<br>Cocoa | 09/08-11/06 | KF-VE       | EFI    | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.                                                   |        |
| Mira<br>Cocoa | 09/08-11/06 | KF-VE       | CVT    | ✓         | ✓         | ✓           |           | 1.Read ECU No.<br>2.CVT ECU<br>Learning<br>Initializing          |        |
| Mira<br>Cocoa | 09/08-11/06 | KF-VE       | ABS    | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding               |        |
| Mira<br>Cocoa | 09/08-11/06 | KF-VE       | EPS    | ✓         | ✓         | ✓           | ✓         | 1.Torque sensor<br>zero point<br>adjustment(*)<br>2.Read ECU No. |        |
| Mira<br>Cocoa | 09/08-11/06 | KF-VE       | A/B    | ✓         | ✓         |             |           | 1.Read ECU No.                                                   |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle    | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|            |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Mira Cocoa | 09/08-11/06 | KF-VE       | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Mira Cocoa | 09/08-11/06 | KF-VE       | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira Cocoa | 11/06-12/04 | KF(2WD)     | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira Cocoa | 11/06-12/04 | KF(2WD)     | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                                               |        |
|---------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|               |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                                              | Others |
| Mira<br>Cocoa | 11/06-12/04 | KF(2WD)     | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                                                                                                                                                            |        |
| Mira<br>Cocoa | 11/06-12/04 | KF(2WD)     | EPS    | √         | √         | √           | √         | 1.Torque sensor<br>zero point<br>adjustment(*)<br>2.Read ECU No.                                                                                                                                                              |        |
| Mira<br>Cocoa | 11/06-12/04 | KF(2WD)     | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                                                |        |
| Mira<br>Cocoa | 11/06-12/04 | KF(2WD)     | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main<br>Key and Subkey<br>Status<br>3.Antenna<br>connection<br>diagnostic<br>4.Wireless<br>communication<br>test<br>5.Intelligent<br>communication<br>test<br>6.Repeater<br>communication<br>test |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle    | Year        | Engine Type | System | Functions |           |             |           |                                                            |        |
|------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|------------------------------------------------------------|--------|
|            |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                           | Others |
| Mira Cocoa | 11/06-12/04 | KF(2WD)     | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                             |        |
| Mira Cocoa | 11/06-12/04 | KF(4WD)     | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                             |        |
| Mira Cocoa | 11/06-12/04 | KF(4WD)     | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing          |        |
| Mira Cocoa | 11/06-12/04 | KF(4WD)     | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding         |        |
| Mira Cocoa | 11/06-12/04 | KF(4WD)     | EPS    | √         | √         | √           | √         | 1.Torque sensor zero point adjustment(*)<br>2.Read ECU No. |        |
| Mira Cocoa | 11/06-12/04 | KF(4WD)     | A/B    | √         | √         |             |           | 1.Read ECU No.                                             |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|               |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Mira<br>Cocoa | 11/06-12/04 | KF(4WD)     | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Mira<br>Cocoa | 11/06-12/04 | KF(4WD)     | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira<br>Cocoa | 12/04-14/08 | KF          | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira<br>Cocoa | 12/04-14/08 | KF          | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System   | Functions |           |             |           |                                                                                                     |        |
|---------------|-------------|-------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------|--------|
|               |             |             |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                    | Others |
| Mira<br>Cocoa | 12/04-14/08 | KF          | eco IDLE | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU Initialization Learning<br>3.Delete and input Starter Working Times |        |
| Mira<br>Cocoa | 12/04-14/08 | KF          | EPS      | √         | √         | √           |           | 1.Read ECU No.                                                                                      |        |
| Mira<br>Cocoa | 12/04-14/08 | KF          | ABS/VSC  | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding                                                                    |        |
| Mira<br>Cocoa | 12/04-14/08 | KF          | A/B      | √         | √         |             |           | 1.Read ECU No.                                                                                      |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|               |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Mira<br>Cocoa | 12/04-14/08 | KF          | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Mira<br>Cocoa | 12/04-14/08 | KF          | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Cocoa         | 14/08-      | KF(N/A)     | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira<br>Cocoa | 14/08-      | KF(N/A)     | CVT    | √         | √         | √           | √         | 1.CVT ECU Learning Initializing<br>2.Read ECU No.                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year   | Engine Type | System   | Functions |           |             |           |                                                                                   |        |
|---------------|--------|-------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------|--------|
|               |        |             |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                  | Others |
| Mira<br>Cocoa | 14/08- | KF(N/A)     | eco IDLE | ✓         | ✓         | ✓           | ✓         | 1.Eco-Run ECU Initialization Learning<br>2.Delete and input Starter Working Times |        |
| Mira<br>Cocoa | 14/08- | KF(N/A)     | EPS      | ✓         | ✓         | ✓           |           | 1.Read ECU No.                                                                    |        |
| Mira<br>Cocoa | 14/08- | KF(N/A)     | ABS/VSC  | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.<br>2.2nd bleeding<br>3.3rd bleeding                                |        |
| Mira<br>Cocoa | 14/08- | KF(N/A)     | A/B      | ✓         | ✓         |             | ✓         | 1.Read ECU No.                                                                    |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year   | Engine Type | System             | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------------|--------|-------------|--------------------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|               |        |             |                    | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Mira<br>Cocoa | 14/08- | KF(N/A)     | KFS                | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Mira<br>Cocoa | 14/08- | KF(N/A)     | ITC                | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Mira<br>Cocoa | 14/08- | KF(N/A)     | Meter              | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.<br>2.Instrument panel standard initialization                                                                                                                                    |        |
| Mira<br>Cocoa | 14/08- | KF(N/A)     | Automatic leveling | ✓         | ✓         | ✓           | ✓         | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle   | Year        | Engine Type | System | Functions |           |             |           |                                                    |        |
|-----------|-------------|-------------|--------|-----------|-----------|-------------|-----------|----------------------------------------------------|--------|
|           |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                   | Others |
| Mira Gino | 02/08-04/12 | EF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                     |        |
| Mira Gino | 02/08-04/12 | EF-DET      | AT     | √         | √         | √           |           | 1.Read ECU No.                                     |        |
| Mira Gino | 02/08-04/12 | EF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                   |        |
| Mira Gino | 02/08-04/12 | EF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                     |        |
| Mira Gino | 02/08-04/12 | EF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                     |        |
| Mira Gino | 02/08-04/12 | EF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding |        |
| Mira Gino | 02/08-04/12 | EF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                     |        |
| Mira Gino | 02/08-04/12 | EJ-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                     |        |
| Mira Gino | 02/08-04/12 | EJ-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                   |        |
| Mira Gino | 02/08-04/12 | EJ-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                     |        |
| Mira Gino | 04/12-08/12 | EF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                     |        |
| Mira Gino | 04/12-08/12 | EF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                   |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle    | Year        | Engine Type | System | Functions |           |             |           |                                                              |        |
|------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------------|--------|
|            |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                             | Others |
| Mira Gino  | 04/12-08/12 | EF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Mira(CNG)  | 08/12-      | KF-VN       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Mira(CNG)  | 08/12-      | KF-VN       | EPS    | √         | √         | √           | √         | 1.Torque sensor zero point adjustment(*)<br>2.Read ECU No.   |        |
| Mira(CNG)  | 08/12-      | KF-VN       | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| MOVE Latte | 04/08-08/12 | EF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| MOVE Latte | 04/08-08/12 | EF-DET      | AT     | √         | √         | √           |           | 1.Read ECU No.                                               |        |
| MOVE Latte | 04/08-08/12 | EF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                             |        |
| MOVE Latte | 04/08-08/12 | EF-DET      | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*) |        |
| MOVE Latte | 04/08-08/12 | EF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                               |        |
| MOVE Latte | 04/08-08/12 | EF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle    | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|            |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| MOVE Latte | 04/08-08/12 | EF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                                                                                                                              |        |
| MOVE Latte | 04/08-08/12 | EF-VE       | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*)                                                                                                                                    |        |
| MOVE Latte | 04/08-08/12 | EF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| MOVE Latte | 04/08-08/12 | EF-VE       | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle    | Year        | Engine Type | System | Functions |           |             |           |                                                        |        |
|------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|--------------------------------------------------------|--------|
|            |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                       | Others |
| Move Conte | 08/08-09/12 | KF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Move Conte | 08/08-09/12 | KF-DET      | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing      |        |
| Move Conte | 08/08-09/12 | KF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding     |        |
| Move Conte | 08/08-09/12 | KF-DET      | EPS    | √         | √         | √           |           | 1.Read ECU No.                                         |        |
| Move Conte | 08/08-09/12 | KF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                         |        |
| Move Conte | 08/08-09/12 | KF-DET      | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status |        |
| Move Conte | 08/08-09/12 | KF-DET      | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Move Conte | 08/08-09/12 | KF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                         |        |
| Move Conte | 08/08-09/12 | KF-VE       | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing      |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|               |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move<br>Conte | 08/08-09/12 | KF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                                                                                                                              |        |
| Move<br>Conte | 08/08-09/12 | KF-VE       | EPS    | √         | √         | √           |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move<br>Conte | 08/08-09/12 | KF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move<br>Conte | 08/08-09/12 | KF-VE       | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move<br>Conte | 08/08-09/12 | KF-VE       | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle    | Year        | Engine Type | System | Functions |           |             |           |                                                    |        |
|------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|----------------------------------------------------|--------|
|            |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                   | Others |
| Move Conte | 09/12-11/06 | KF-DET      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                     |        |
| Move Conte | 09/12-11/06 | KF-DET      | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing  |        |
| Move Conte | 09/12-11/06 | KF-DET      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding |        |
| Move Conte | 09/12-11/06 | KF-DET      | EPS    | √         | √         | √           |           | 1.Read ECU No.                                     |        |
| Move Conte | 09/12-11/06 | KF-DET      | A/B    | √         | √         |             |           | 1.Read ECU No.                                     |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|               |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move<br>Conte | 09/12-11/06 | KF-DET      | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move<br>Conte | 09/12-11/06 | KF-DET      | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move<br>Conte | 09/12-11/06 | KF-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move<br>Conte | 09/12-11/06 | KF-VE       | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|               |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move<br>Conte | 09/12-11/06 | KF-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                                                                                                                              |        |
| Move<br>Conte | 09/12-11/06 | KF-VE       | EPS    | √         | √         | √           |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move<br>Conte | 09/12-11/06 | KF-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move<br>Conte | 09/12-11/06 | KF-VE       | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move<br>Conte | 09/12-11/06 | KF-VE       | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle    | Year        | Engine Type             | System   | Functions |           |             |           |                                                                                                     |        |
|------------|-------------|-------------------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------|--------|
|            |             |                         |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                    | Others |
| Move Conte | 11/06-12/04 | KF(N/A)(eco, with IDLE) | EFI      | √         | √         | √           | √         | 1.Read ECU No.                                                                                      |        |
| Move Conte | 11/06-12/04 | KF(N/A)(eco, with IDLE) | CVT      | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                   |        |
| Move Conte | 11/06-12/04 | KF(N/A)(eco, with IDLE) | eco IDLE | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU Initialization Learning<br>3.Delete and input Starter Working Times |        |
| Move Conte | 11/06-12/04 | KF(N/A)(eco, with IDLE) | EPS      | √         | √         | √           |           | 1.Read ECU No.                                                                                      |        |
| Move Conte | 11/06-12/04 | KF(N/A)(eco, with IDLE) | ABS/VSC  | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding<br>3.3rd bleeding                                                  |        |
| Move Conte | 11/06-12/04 | KF(N/A)(eco, with IDLE) | A/B      | √         | √         |             |           | 1.Read ECU No.                                                                                      |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type                | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------------|-------------|----------------------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|               |             |                            |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move<br>Conte | 11/06-12/04 | KF(N/A)(eco, with IDLE)    | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move<br>Conte | 11/06-12/04 | KF(N/A)(eco, with IDLE)    | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move<br>Conte | 11/06-12/04 | KF(N/A)(eco, without IDLE) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move<br>Conte | 11/06-12/04 | KF(N/A)(eco, without IDLE) | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle    | Year        | Engine Type                | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|------------|-------------|----------------------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|            |             |                            |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move Conte | 11/06-12/04 | KF(N/A)(eco, without IDLE) | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                                                                                                                              |        |
| Move Conte | 11/06-12/04 | KF(N/A)(eco, without IDLE) | EPS    | √         | √         | √           |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move Conte | 11/06-12/04 | KF(N/A)(eco, without IDLE) | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move Conte | 11/06-12/04 | KF(N/A)(eco, without IDLE) | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move Conte | 11/06-12/04 | KF(N/A)(eco, without IDLE) | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle    | Year        | Engine Type | System  | Functions |           |             |           |                                                    |        |
|------------|-------------|-------------|---------|-----------|-----------|-------------|-----------|----------------------------------------------------|--------|
|            |             |             |         | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                   | Others |
| Move Conte | 11/06-12/04 | KF(T/C)     | EFI     | √         | √         | √           | √         | 1.Read ECU No.                                     |        |
| Move Conte | 11/06-12/04 | KF(T/C)     | CVT     | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing  |        |
| Move Conte | 11/06-12/04 | KF(T/C)     | EPS     | √         | √         | √           |           | 1.Read ECU No.                                     |        |
| Move Conte | 11/06-12/04 | KF(T/C)     | ABS/VSC | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding<br>3.3rd bleeding |        |
| Move Conte | 11/06-12/04 | KF(T/C)     | A/B     | √         | √         |             |           | 1.Read ECU No.                                     |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle    | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|            |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move Conte | 11/06-12/04 | KF(T/C)     | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move Conte | 11/06-12/04 | KF(T/C)     | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move Conte | 12/04-12/05 | KF(N/A)     | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move Conte | 12/04-12/05 | KF(N/A)     | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System   | Functions |           |             |           |                                                                                                                 |        |
|---------------|-------------|-------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------------|--------|
|               |             |             |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                | Others |
| Move<br>Conte | 12/04-12/05 | KF(N/A)     | eco IDLE | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU<br>Initialization<br>Learning<br>3.Delete and<br>input Starter<br>Working Times |        |
| Move<br>Conte | 12/04-12/05 | KF(N/A)     | EPS      | √         | √         | √           |           | 1.Read ECU No.                                                                                                  |        |
| Conte         | 12/04-12/05 | KF(N/A)     | ABS/VSC  | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding                                                                                |        |
| Move<br>Conte | 12/04-12/05 | KF(N/A)     | A/B      | √         | √         | √           | √         | 1.Read ECU No.                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|               |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move<br>Conte | 12/04-12/05 | KF(N/A)     | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move<br>Conte | 12/04-12/05 | KF(N/A)     | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move<br>Conte | 12/04-12/05 | KF(T/C)     | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move<br>Conte | 12/04-12/05 | KF(T/C)     | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|               |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move<br>Conte | 12/04-12/05 | KF(T/C)     | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                                                                                                                                              |        |
| Move<br>Conte | 12/04-12/05 | KF(T/C)     | EPS    | √         | √         | √           |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move<br>Conte | 12/04-12/05 | KF(T/C)     | A/B    | √         | √         |             |           | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move<br>Conte | 12/04-12/05 | KF(T/C)     | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move<br>Conte | 12/04-12/05 | KF(T/C)     | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System   | Functions |           |             |           |                                                                                                                 |        |
|---------------|-------------|-------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------------|--------|
|               |             |             |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                | Others |
| Move<br>Conte | 12/05-13/06 | KF(N/A,T/C) | EFI      | √         | √         | √           | √         | 1.Read ECU No.                                                                                                  |        |
| Move<br>Conte | 12/05-13/06 | KF(N/A,T/C) | CVT      | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU<br>Learning<br>Initializing                                                         |        |
| Move<br>Conte | 12/05-13/06 | KF(N/A,T/C) | eco IDLE | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU<br>Initialization<br>Learning<br>3.Delete and<br>input Starter<br>Working Times |        |
| Move<br>Conte | 12/05-13/06 | KF(N/A,T/C) | EPS      | √         | √         | √           |           | 1.Read ECU No.                                                                                                  |        |
| Move<br>Conte | 12/05-13/06 | KF(N/A,T/C) | ABS/VSC  | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding                                                                                |        |
| Move<br>Conte | 12/05-13/06 | KF(N/A,T/C) | A/B      | √         | √         |             |           | 1.Read ECU No.                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year        | Engine Type | System | Functions |           |             |           |                                                                                                                                                                                                 |        |
|---------------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|               |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move<br>Conte | 12/05-13/06 | KF(N/A,T/C) | KFS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move<br>Conte | 12/05-13/06 | KF(N/A,T/C) | ITC    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move<br>Conte | 13/06-      | KF(N/A,T/C) | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move<br>Conte | 13/06-      | KF(N/A,T/C) | CVT    | √         | √         | √           |           | 1.Read ECU No.<br>2.CVT ECU Learning Initializing                                                                                                                                               |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle       | Year   | Engine Type | System   | Functions |           |             |           |                                                                                                                 |        |
|---------------|--------|-------------|----------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------------------------------|--------|
|               |        |             |          | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                | Others |
| Move<br>Conte | 13/06- | KF(N/A,T/C) | eco IDLE | √         | √         | √           | √         | 1.Read ECU No.<br>2.Eco-Run ECU<br>Initialization<br>Learning<br>3.Delete and<br>input Starter<br>Working Times |        |
| Move<br>Conte | 13/06- | KF(N/A,T/C) | EPS      | √         | √         | √           |           | 1.Read ECU No.                                                                                                  |        |
| Move<br>Conte | 13/06- | KF(N/A,T/C) | ABS/VSC  | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding                                                                                |        |
| Move<br>Conte | 13/06- | KF(N/A,T/C) | A/B      | √         | √         |             |           | 1.Read ECU No.                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle    | Year        | Engine Type | System             | Functions |           |             |           |                                                                                                                                                                                                 |        |
|------------|-------------|-------------|--------------------|-----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
|            |             |             |                    | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                                                                                                                                                | Others |
| Move Conte | 13/06-      | KF(N/A,T/C) | KFS                | √         | √         | √           | √         | 1.Read ECU No.<br>2.Confirm Main Key and Subkey Status<br>3.Antenna connection diagnostic<br>4.Wireless communication test<br>5.Intelligent communication test<br>6.Repeater communication test |        |
| Move Conte | 13/06-      | KF(N/A,T/C) | ITC                | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| Move Conte | 13/06-      | KF(N/A,T/C) | Meter              | √         | √         | √           | √         | 1.Read ECU No.<br>2.Instrument panel standard initialization                                                                                                                                    |        |
| Move Conte | 13/06-      | KF(N/A,T/C) | Automatic leveling | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |
| COO        | 06/05-10/07 | K3-VE       | EFI                | √         | √         | √           | √         | 1.Read ECU No.                                                                                                                                                                                  |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                                       |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|-----------------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                      | Others |
| COO     | 06/05-10/07 | K3-VE       | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value<br>Initialization              |        |
| COO     | 06/05-10/07 | K3-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                    |        |
| COO     | 06/05-10/07 | K3-VE       | VSC    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding<br>4.3rd bleeding  |        |
| COO     | 06/05-10/07 | K3-VE       | EPS    | √         | √         | √           |           | 1.Torque sensor<br>zero point<br>adjustment(*)<br>2.Mode<br>change(*) |        |
| COO     | 06/05-10/07 | K3-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                                        |        |
| COO     | 06/05-10/07 | 3SZ-VE      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                        |        |
| COO     | 06/05-10/07 | 3SZ-VE      | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value<br>Initialization              |        |
| COO     | 06/05-10/07 | 3SZ-VE      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                    |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle | Year        | Engine Type | System | Functions |           |             |           |                                                                      |        |
|---------|-------------|-------------|--------|-----------|-----------|-------------|-----------|----------------------------------------------------------------------|--------|
|         |             |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                     | Others |
| COO     | 06/05-10/07 | 3SZ-VE      | VSC    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding<br>4.3rd bleeding |        |
| COO     | 06/05-10/07 | 3SZ-VE      | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*)         |        |
| COO     | 06/05-10/07 | 3SZ-VE      | A/B    | √         | √         |             |           | 1.Read ECU No.                                                       |        |
| COO     | 10/07-      | 3SZ-VE      | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                       |        |
| COO     | 10/07-      | 3SZ-VE      | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization                |        |
| COO     | 10/07-      | 3SZ-VE      | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                   |        |
| COO     | 10/07-      | 3SZ-VE      | VSC    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding<br>4.3rd bleeding |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle                               | Year   | Engine Type | System | Functions |           |             |           |                                                                      |        |
|---------------------------------------|--------|-------------|--------|-----------|-----------|-------------|-----------|----------------------------------------------------------------------|--------|
|                                       |        |             |        | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                                     | Others |
| COO                                   | 10/07- | 3SZ-VE      | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*)         |        |
| COO                                   | 10/07- | 3SZ-VE      | A/B    | √         | √         |             |           | 1.Read ECU No.                                                       |        |
| COO                                   | 10/07- | K3-VE       | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                       |        |
| COO                                   | 10/07- | K3-VE       | AT     | √         | √         | √           |           | 1.Read ECU No.<br>2.A/T Learning Value Initialization                |        |
| COO                                   | 10/07- | K3-VE       | ABS    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding                   |        |
| COO                                   | 10/07- | K3-VE       | VSC    | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding<br>3.2nd bleeding<br>4.3rd bleeding |        |
| COO                                   | 10/07- | K3-VE       | EPS    | √         | √         | √           |           | 1.Torque sensor zero point adjustment(*)<br>2.Mode change(*)         |        |
| COO                                   | 10/07- | K3-VE       | A/B    | √         | √         |             |           | 1.Read ECU No.                                                       |        |
| Before M/Y 2000/2001(no KWP Protocol) |        |             | EFI    | √         | √         | √           | √         | 1.Read ECU No.                                                       |        |
| Before M/Y 2000/2001(no KWP Protocol) |        |             | CVT    | √         | √         | √           |           | 1.Read ECU No.                                                       |        |

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle                               | Year   | Engine Type | System  | Functions |           |             |           |                                                              |        |
|---------------------------------------|--------|-------------|---------|-----------|-----------|-------------|-----------|--------------------------------------------------------------|--------|
|                                       |        |             |         | Read Dtc  | Clear Dtc | Data Stream | Actuation | Special Function                                             | Others |
| Before M/Y 2000/2001(no KWP Protocol) |        |             | ABS     | √         | √         | √           | √         | 1.Read ECU No.<br>2.ABS Bleeding                             |        |
| Before M/Y 2000/2001(no KWP Protocol) |        |             | DVS     | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Before M/Y 2000/2001(no KWP Protocol) |        |             | EPS     | √         | √         | √           |           | 1.Read ECU No.                                               |        |
| Before M/Y 2000/2001(no KWP Protocol) |        |             | A/B     | √         | √         |             |           | 1.Read ECU No.                                               |        |
| Truck                                 | 14/08- | KF(N/A)     | EFI     | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Hijet Truck                           | 14/08- | KF(N/A)     | AT      | √         | √         | √           | √         | 1.Read ECU No.<br>2.A/T Learning Value Initialization        |        |
| Hijet Truck                           | 14/08- | KF(N/A)     | EPS     | √         | √         | √           |           | 1.Read ECU No.                                               |        |
| Hijet Truck                           | 14/08- | KF(N/A)     | ABS/VSC | √         | √         | √           | √         | 1.Read ECU No.<br>2.2nd bleeding<br>3.3rd bleeding           |        |
| Hijet Truck                           | 14/08- | KF(N/A)     | A/B     | √         | √         |             | √         | 1.Read ECU No.                                               |        |
| Hijet Truck                           | 14/08- | KF(N/A)     | ITC     | √         | √         | √           | √         | 1.Read ECU No.                                               |        |
| Hijet Truck                           | 14/08- | KF(N/A)     | Meter   | √         | √         | √           | √         | 1.Read ECU No.<br>2.Instrument panel standard initialization |        |

(\*)-Tested-

## Daihatsu **V20.10** Diagnostics List(Note:For reference only)

| Vehicle                                                                                                                               | Year | Engine Type                        | System | Functions |                                    |             |           |                  |        |
|---------------------------------------------------------------------------------------------------------------------------------------|------|------------------------------------|--------|-----------|------------------------------------|-------------|-----------|------------------|--------|
|                                                                                                                                       |      |                                    |        | Read Dtc  | Clear Dtc                          | Data Stream | Actuation | Special Function | Others |
| ( ) : Tested,<br>(?):Manual on website(www.x431.com)<br>Note:The final interpretation of the products belongs to LAUNCH TECH CO.,LTD. |      |                                    |        |           |                                    |             |           |                  |        |
| CONNECTOR                                                                                                                             |      | X431                               |        |           | DIAGUN                             |             |           |                  |        |
| SMART OBD                                                                                                                             |      | N/A                                |        |           | N/A                                |             |           |                  |        |
| OBD 16C                                                                                                                               |      | N/A                                |        |           | N/A                                |             |           |                  |        |
| CANBUS II                                                                                                                             |      | It is available for the 16PIN DLC. |        |           | N/A                                |             |           |                  |        |
| diagun connector                                                                                                                      |      | N/A                                |        |           | It is available for the 16PIN DLC. |             |           |                  |        |
| SUPER 16                                                                                                                              |      | It is available for 16PIN DLC.     |        |           | N/A                                |             |           |                  |        |