

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle       | System             | ECU type                       | Functions    |          |           |             |           |                                                             |
|---------------|--------------------|--------------------------------|--------------|----------|-----------|-------------|-----------|-------------------------------------------------------------|
|               |                    |                                | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                            |
| 106           | Additional heating |                                | √            | √        | √         | √           | √         |                                                             |
| 106REMODELAGE | Petrol engine      | CDY BOSCH MA3.1                | √            | √        | √         |             |           |                                                             |
|               |                    | CDZ BOSCH MA3.1                | √            | √        | √         |             |           |                                                             |
|               |                    | HDY BOSCH MA3.1                | √            | √        | √         |             |           |                                                             |
|               |                    | HDZ BOSCH MA3.1                | √            | √        | √         |             |           |                                                             |
|               |                    | HFX BOSCH M7.4.4               | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                |
|               |                    | KFX BOSCH MP7.3                | √            | √        | √         | √           | √         | 1.Initialization Adaption                                   |
|               |                    | KFX MM1AP                      | √            | √        | √         | √           |           |                                                             |
|               |                    | KFW SAGEM S2000                | √            | √        | √         | √           | √         | 1.Marching<br>2.Initialization Adaption                     |
|               |                    | NFX MM1AP                      | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Injection ECU initialisation |
|               | Additional heating |                                | √            | √        | √         | √           | √         |                                                             |
| 107           | AT                 | controlled manual gearbox(MMT) |              |          |           | √           |           |                                                             |
|               |                    | Power steering                 | √            | √        | √         | √           |           |                                                             |
|               | Petrol engine      | KFU MM6LPC                     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                |
|               |                    | KFV J34P                       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                |
|               |                    | NFU BOSCH ME7.4.5              | √            | √        | √         | √           | √         | 1.Configuration                                             |
|               | Diesel engine      | 8HX SID 806 DV4                | √            | √        | √         | √           | √         | 1.Configuration                                             |
|               |                    | 8HZ SID 806 DV4                | √            | √        | √         | √           | √         | 1.Configuration                                             |
|               |                    |                                |              |          |           |             |           |                                                             |

## PEUGEOT V42.20 Diagnostics List (Note:For reference only)

| Vehicle  | System                                    | ECU type                        | Functions    |          |           |             |           |                                                                    |
|----------|-------------------------------------------|---------------------------------|--------------|----------|-----------|-------------|-----------|--------------------------------------------------------------------|
|          |                                           |                                 | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                   |
| 1007 CAN | Diesel Engine                             | 9HT BOSCH EDC16C3               | √            | √        | √         | √           |           |                                                                    |
|          |                                           | 9HZ BOSCH EDC16C3               | √            | √        | √         | √           |           |                                                                    |
|          | ABS                                       | ABS MK70.1                      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                      |
|          |                                           | ESP MK60-O                      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal |
|          | Airbag ECU                                | Airbag ECU                      | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock                               |
|          | Vehicle protection/Management of accesses | Alarm                           | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|          |                                           | Rain/brightness sensor          | √            | √        | √         |             |           |                                                                    |
|          | Driving assistance/Comfort                | Parking assistance              | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|          |                                           | Air conditioning                | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|          |                                           | Under inflation detection       | √            | √        | √         | √           |           |                                                                    |
|          |                                           | Power steering                  | √            | √        | √         | √           |           | 1.Configuration                                                    |
|          | Inform the driver/Audio/Communication     | Multi-function display          |              |          |           |             |           |                                                                    |
|          |                                           | Steering wheel switching module | √            | √        | √         | √           | √         |                                                                    |
|          |                                           | Radio                           | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|          |                                           | Hands Free Kit                  | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|          |                                           | CD player                       | √            | √        | √         |             | √         |                                                                    |
|          |                                           | Instrument panel                | √            | √        | √         | √           | √         | 1.Configuration                                                    |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle  | System        | ECU type            | Functions    |          |           |             |           |                                                                    |
|----------|---------------|---------------------|--------------|----------|-----------|-------------|-----------|--------------------------------------------------------------------|
|          |               |                     | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                   |
|          |               | Telematics          | √            | √        | √         | √           | √         | 1.Configuration                                                    |
| 1007 VAN | Petrol engine | NFU ME744           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                       |
|          |               | KFV J34P            | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                       |
|          |               | KFV S2000PM2        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                       |
|          |               | KFU MM6LP           | √            | √        | √         | √           |           |                                                                    |
|          |               | N6A BOSCH ME7.4.5   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                       |
|          |               | N6B BOSCH ME7.4.5   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                       |
|          |               | NFU BOSCH ME7.4.5   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                       |
|          | Diesel engine | 8HZ SIEMENS SID 804 | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|          |               | 8HX SIEMENS SID804  | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|          | ABS           | ABS MK70            | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                      |
|          |               | ESP MK60            | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal |

## PEUGEOT V42.20 Diagnostics List (Note:For reference only)

| Vehicle | System                                | ECU type                        | Functions    |          |           |             |           |                                                                   |
|---------|---------------------------------------|---------------------------------|--------------|----------|-----------|-------------|-----------|-------------------------------------------------------------------|
|         |                                       |                                 | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                  |
|         | A/T                                   | Controlled manual gearbox(BVMP) | √            | √        | √         | √           | √         | 1.Configuration<br>2.Counters<br>3.Learning<br>4.Stalling         |
|         | Air bag                               | Airbag ECU                      | √            | √        | √         | √           |           | 1.Configuration                                                   |
|         | Visibility/Lighting/Signalling        | Rain/brightness sensor          | √            | √        | √         |             |           |                                                                   |
|         |                                       | Steering wheel switching module | √            | √        | √         | √           |           |                                                                   |
|         | Driving assistance/Comfort            | Parking assistance              | √            | √        | √         | √           | √         |                                                                   |
|         |                                       | Air conditioning                | √            | √        | √         | √           | √         | 1.Configuration                                                   |
|         |                                       | Power steering                  | √            | √        | √         | √           |           |                                                                   |
|         | Inform the driver/Audio/Communication | Telematics RT3                  | √            | √        | √         | √           | √         | 1.Configuration                                                   |
|         |                                       | Multi-function display EMF      | √            | √        | √         | √           |           |                                                                   |
|         |                                       | CD player                       | √            | √        | √         | √           | √         | 1.Configuration                                                   |
|         |                                       | Instrument panel                | √            | √        | √         | √           | √         | 1.Configuration                                                   |
|         |                                       | Radio                           | √            | √        | √         | √           | √         | 1.Configuration                                                   |
|         |                                       | NFU BOSCH ME744                 | √            | √        | √         | √           | √         | 1.Marching<br>2.Initialization Adaption                           |
|         |                                       | RFR MM48P                       | √            | √        | √         | √           | √         | 1.Initialization Adaption                                         |
|         |                                       | N6A BOSCH ME745                 | √            | √        | √         | √           | √         | 1.Marching<br>2.Initialization Adaption<br>3.Program design/Mtich |
|         |                                       | NFU BOSCH ME745                 | √            | √        | √         | √           | √         | 1.Marching<br>2.Initialization Adaption<br>3.Program design/Mtich |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type                  | Functions    |          |           |             |           |                                                             |
|---------|---------------|---------------------------|--------------|----------|-----------|-------------|-----------|-------------------------------------------------------------|
|         |               |                           | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                            |
|         | Petrol engine | N6A BOSCH ME744 FLEX FUEL | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                |
|         |               | N6A BOSCH ME744           | √            | √        | √         | √           | √         | 1.Marching<br>2.Initialization Adaption                     |
|         |               | RFN MM48P                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                |
|         |               | KFX BOSCH MP7.3           | √            | √        | √         | √           | √         | 1.Initialization Adaption                                   |
|         |               | KFX MM1AP                 | √            | √        | √         | √           |           |                                                             |
|         |               | KFU MM6LP                 | √            | √        | √         | √           |           | 1.Initialization Adaption                                   |
|         |               | HFZ MM1AP                 | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Injection ECU initialisation |
|         |               | HFY MM1AP                 | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Injection ECU initialisation |
|         |               | KFW SAGEM S2000           | √            | √        | √         | √           | √         | 1.Marching<br>2.Initialization Adaption                     |
|         |               | K6D SAGEM S2000           | √            | √        | √         | √           | √         | 1.Marching<br>2.Initialization Adaption                     |
|         |               | K6C MM1AP                 | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Injection ECU initialisation |
|         |               | HFX MM4.8P                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                |
|         |               | RFK MM6LP                 | √            | √        | √         | √           | √         | 1.Configuration                                             |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type                               | Functions    |          |           |             |           |                                                                                         |
|---------|---------------|----------------------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------|
|         |               |                                        | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                        |
| 206     |               | RFN MM6LP                              | √            | √        | √         | √           |           | 1.Initialization Adapation                                                              |
|         |               | 7LZ MM5NP                              | √            | √        | √         |             |           |                                                                                         |
|         |               | KFW BOSCH ME7.4.4                      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adapation                                           |
|         |               | NFZ BOSCH MP7.2                        | √            | √        | √         | √           | √         |                                                                                         |
|         |               | KFW J34P                               | √            | √        | √         | √           | √         | 1.Configuration                                                                         |
|         |               | K6D J34P                               | √            | √        | √         | √           | √         | 1.Configuration                                                                         |
|         |               | NFU J35                                | √            | √        | √         | √           | √         | 1.Configuration                                                                         |
|         | Diesel engine | WJY LUCAS DCN2                         | √            | √        | √         | √           | √         | 1.Configuration                                                                         |
|         |               | WJZ LUCAS DCN2                         | √            | √        | √         | √           |           |                                                                                         |
|         |               | 8HX BOSCH EDC16C3                      | √            | √        | √         | √           |           |                                                                                         |
|         |               | 9HZ BOSCH EDC16C3                      | √            | √        | √         | √           |           |                                                                                         |
|         |               | RHY BOSCH EDC15C2                      | √            | √        | √         | √           |           |                                                                                         |
|         |               | 8HX/8HZ BOSCH EDC16C3 EURO3            | √            | √        | √         | √           | √         | 1.Configuration                                                                         |
|         | ABS           | ABS MK70                               | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                                           |
|         |               | Anti-lock brakes TEVES (ABS BOSCH 5.3) | √            | √        | √         | √           | √         | 1.air bleed                                                                             |
|         | A/T           | AL4 automatic gearbox                  | √            | √        | √         | √           | √         | 1.Marching<br>2.Initialization Adapation<br>3.Accelebration pedal<br>4.Oil wear counter |
|         |               | ZF 4HP20 AT                            | √            | √        | √         | √           |           |                                                                                         |

## PEUGEOT V42.20 Diagnostics List (Note:For reference only)

| Vehicle | System              | ECU type                                   | Functions    |          |           |             |           |                                              |
|---------|---------------------|--------------------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------|
|         |                     |                                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                             |
|         |                     | Diesel fuel additive control unit          | √            | √        | √         | √           | √         | 1.Configuration                              |
|         |                     | Electric pump unit(power steering)         | √            | √        | √         | √           |           |                                              |
|         | IP                  | Instrument panel                           | √            | √        | √         | √           | √         | 1.Marchting                                  |
|         |                     | BSI                                        | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.key program   |
|         | A/C                 | Air conditioning                           | √            | √        | √         | √           | √         | 1.Configuration                              |
|         |                     | Alarm                                      | √            | √        | √         | √           | √         | 1.Configuration                              |
|         | Visibility/Lighting | Driving school                             | √            |          |           | √           | √         |                                              |
|         |                     | Rain/brightness sensor                     | √            | √        | √         |             |           |                                              |
|         | Driver information  | Display/Telematics                         | √            | √        | √         | √           | √         | 1.Marchting                                  |
|         |                     | on-board navigation system                 | √            | √        | √         | √           |           |                                              |
|         |                     | Instrument panel                           | √            | √        | √         | √           | √         | 1.Configuration                              |
|         |                     | Radio                                      | √            | √        | √         | √           | √         | 1.Configuration                              |
|         |                     | CD Player                                  | √            | √        | √         | √           | √         |                                              |
|         |                     | Switch unit under steering wheel(COM 2000) | √            | √        | √         | √           |           |                                              |
|         |                     | Air bag and seat belt                      | √            | √        | √         |             |           | 1.Marchting                                  |
|         |                     | Left side airbag                           | √            | √        | √         |             |           | 1.Marchting                                  |
|         |                     | Right side airbag                          | √            | √        | √         |             |           | 1.Marchting                                  |
|         |                     | HFX MM48P                                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type                   | Functions    |          |           |             |           |                                                             |
|---------|---------------|----------------------------|--------------|----------|-----------|-------------|-----------|-------------------------------------------------------------|
|         |               |                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                            |
|         | Petrol engine | HFY MM1AP                  | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Injection ECU initialisation |
|         |               | HFZ MM1AP                  | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Injection ECU initialisation |
|         |               | K6C MM1AP                  | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Injection ECU initialisation |
|         |               | K6D SAGEM S2000            | √            | √        | √         | √           |           |                                                             |
|         |               | KFU MM6LP                  | √            | √        | √         | √           |           |                                                             |
|         |               | KFW BOSCH ME7.4.4          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                |
|         |               | KFW J34P                   | √            | √        | √         | √           | √         | 1.Configuration                                             |
|         |               | KFW SAGEM S2000            | √            | √        | √         | √           |           |                                                             |
|         |               | KFX BOSCH MP7.3            | √            | √        | √         | √           | √         | 1.Initialization Adaption                                   |
|         |               | KFX MM1AP                  | √            | √        | √         | √           |           |                                                             |
|         |               | N6A BOSCH ME7.4.4          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                |
|         |               | N6A BOSCH ME7.4.4FLEX FUEL | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                |
|         |               | N6A BOSCH ME7.4.5          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                |
|         |               | NFU BOSCH ME7.4.4          | √            | √        | √         | √           |           |                                                             |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type                          | Functions    |          |           |             |           |                                              |
|---------|---------------|-----------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------|
|         |               |                                   | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                             |
| 206 MUX |               | NFU BOSCH ME7.4.5                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | NFU J35                           | √            | √        | √         | √           | √         | 1.Configuration                              |
|         |               | K6D J34P                          | √            | √        | √         | √           | √         | 1.Configuration                              |
|         |               | NFZ BOSCH MP7.2                   | √            | √        | √         | √           | √         |                                              |
|         |               | RFK MM6LP                         | √            | √        | √         | √           | √         | 1.Configuration                              |
|         |               | RFN MM6LP                         | √            | √        | √         | √           |           |                                              |
|         |               | RFN MM48P                         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | RFR MM48P                         | √            | √        | √         | √           | √         | 1.Initialization Adaption                    |
|         | Diesel engine | 8HX/8HZ BOSCH EDC16C3 EURO3       | √            | √        | √         | √           | √         | 1.Configuration                              |
|         |               | 8HZ BOSCH EDC16C3 EURO4           | √            | √        | √         | √           |           |                                              |
|         |               | 9HY BOSCH EDC16C3 EURO4           | √            | √        | √         | √           |           |                                              |
|         |               | 9HT BOSCH EDC16C3                 | √            | √        | √         | √           |           |                                              |
|         |               | 9HY BOSCH EDC16C3                 | √            | √        | √         | √           |           |                                              |
|         |               | 9HZ BOSCH EDC16C3                 | √            | √        | √         | √           |           |                                              |
|         |               | RHY BOSCH EDC15C2                 | √            | √        | √         | √           |           |                                              |
|         |               | WJY LUCAS DCN2                    | √            | √        | √         | √           | √         | 1.Configuration                              |
|         |               | Diesel fuel additive control unit | √            | √        | √         | √           | √         | 1.Configuration                              |
|         | AT            | AL4 automatic gearbox             | √            | √        | √         | √           |           |                                              |

## PEUGEOT V42.20 Diagnostics List (Note:For reference only)

| Vehicle | System                           | ECU type                           | Functions    |          |           |             |           |                                                                    |
|---------|----------------------------------|------------------------------------|--------------|----------|-----------|-------------|-----------|--------------------------------------------------------------------|
|         |                                  |                                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                   |
|         | ABS                              | ABS MK70                           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                      |
|         |                                  | Anti-lock brakes MK70              | √            | √        | √         | √           | √         | 1.Configuration<br>3.Bleeding                                      |
|         |                                  | Anti-lock brakes TEVES             | √            | √        | √         | √           |           |                                                                    |
|         |                                  | ESP MK60                           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal |
|         | Air bags                         | Air bags                           | √            | √        | √         | √           | √         | 1.Configuration<br>2.lock and unlock                               |
|         | A/C                              | Air conditioning                   | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                  | Alarm                              | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         | Visibility/Lighting              | Driving school                     | √            |          |           | √           | √         |                                                                    |
|         |                                  | Rain/brightness sensor             | √            | √        | √         |             |           |                                                                    |
|         | Driver information/Communication | Display/Telematics/AMF             | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                  | Display/Telematics/RT3             | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                  | Radio                              | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                  | CD player                          | √            | √        | √         | √           | √         |                                                                    |
|         |                                  | Instrument panel                   | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                  |                                    |              |          |           |             |           |                                                                    |
|         |                                  | Electric pump unit(power steering) | √            | √        | √         | √           |           |                                                                    |
|         | Petrol engine                    | KFW J34P                           | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                  |                                    |              |          |           |             |           |                                                                    |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System                                | ECU type                        | Functions    |          |           |             |           |                                                                                                 |
|---------|---------------------------------------|---------------------------------|--------------|----------|-----------|-------------|-----------|-------------------------------------------------------------------------------------------------|
|         |                                       |                                 | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                                |
| 206 +   | AT                                    | AL4 automatic gearbox           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption<br>3. Oil wear counter                             |
|         | Active safety                         | ABS MK70                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                                                   |
|         |                                       | ESP MK60                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal<br>4.Initialization Adaption |
|         |                                       | Air-bag                         | √            |          |           | √           |           | 1.Configuration<br>2.lock and unlock                                                            |
|         | A/C                                   | Air conditioning                | √            | √        | √         | √           | √         | 1.Configuration                                                                                 |
|         |                                       | Alarm                           | √            | √        | √         | √           | √         | 1.Configuration                                                                                 |
|         |                                       | Rain/brightness sensor          | √            | √        | √         |             |           |                                                                                                 |
|         | Inform the driver/Audio/Communication | Display/Telematics              | √            | √        | √         | √           | √         | 1.Configuration                                                                                 |
|         |                                       | Steering wheel switching module | √            | √        | √         | √           |           |                                                                                                 |
|         |                                       | Radio                           | √            | √        | √         | √           | √         | 1.Configuration                                                                                 |
|         |                                       | CD player                       | √            | √        | √         | √           | √         |                                                                                                 |
|         |                                       | Instrument panel                | √            | √        | √         | √           | √         | 1.Configuration                                                                                 |
|         |                                       | N6A BOSCH ME7.4.5               | √            | √        | √         | √           | √         | 1.Programming<br>2.Initialization Adaption                                                      |
|         |                                       | N6B BOSCH ME7.4.5               | √            | √        | √         | √           | √         | 1.Programming<br>2.Initialization Adaption                                                      |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type                         | Functions    |          |           |             |           |                                              |
|---------|---------------|----------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------|
|         |               |                                  | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                             |
|         | Petrol engine | NFU BOSCH ME7.4.5                | √            | √        | √         | √           | √         | 1.Programming<br>2.Initialization Adaption   |
|         |               | KFU MM6LPC                       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | 5FW MEV17.4                      | √            | √        | √         | √           |           |                                              |
|         |               | 5FX MED17.4                      | √            | √        | √         | √           |           |                                              |
|         |               | 5FY MED17.4                      | √            | √        | √         | √           |           |                                              |
|         |               | 8FS MEV17.4                      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | MEV17.4 EVO                      | √            | √        | √         | √           | √         | 1.Configuration                              |
|         |               | KFV J34P                         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         | Diesel engine | 8HZ BOSCH EDC16C3<br>EURO4       | √            | √        | √         | √           |           |                                              |
|         |               | 9HX BOSCH EDC16C3                | √            | √        | √         | √           |           |                                              |
|         |               | 9HZ BOSCH EDC16C3                | √            | √        | √         | √           |           |                                              |
|         |               | 9HV BOSCH EDC16C3                | √            | √        | √         | √           | √         | 1.Configuration                              |
|         |               | 9HY BOSCH EDC16C3                | √            | √        | √         | √           |           |                                              |
|         |               | 9HT BOSCH EDC16C3                | √            | √        | √         | √           |           |                                              |
|         |               | 8HZ BOSCH EDC16C3<br>EURO4       | √            | √        | √         |             |           |                                              |
|         |               | 9HY BOSCH EDC16C3<br>EUR04 (CAN) | √            | √        | √         | √           |           |                                              |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System                     | ECU type                             | Functions    |          |           |             |           |                                                                    |
|---------|----------------------------|--------------------------------------|--------------|----------|-----------|-------------|-----------|--------------------------------------------------------------------|
|         |                            |                                      | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                   |
| 207CAN  |                            | Multiplexed additive adding pump ECU | √            | √        | √         |             |           |                                                                    |
|         | AT ECU                     | AL4 automatic gearbox                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adapation                      |
|         |                            | colltrolled manual gearbox(BVMP)     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Counters<br>3.Learning<br>4.Stalling          |
|         | ABS                        | ABS MK70.1                           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                      |
|         |                            | ESP MK60-O                           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal |
|         |                            | Built-in systems interface(BSI)      | √            | √        | √         |             |           |                                                                    |
|         | Air bag                    | Airbag ECU                           | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock                               |
|         | Driving assistance/Comfort | Parking assistance                   | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                            | Air conditioning                     | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                            | Under inflation detection            | √            | √        | √         | √           |           |                                                                    |
|         |                            | Power steering                       | √            | √        | √         | √           |           |                                                                    |
|         |                            | Muti-function display                | √            | √        | √         |             |           |                                                                    |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System                                    | ECU type                                     | Functions    |          |           |             |           |                                                                     |
|---------|-------------------------------------------|----------------------------------------------|--------------|----------|-----------|-------------|-----------|---------------------------------------------------------------------|
|         |                                           |                                              | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                    |
|         | Inform the driver/Audio/Communication     | Radio                                        | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         |                                           | CD player                                    | √            | √        | √         |             | √         |                                                                     |
|         |                                           | Instrument panel                             | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         |                                           | Hands Free Kit                               | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         |                                           | Steering wheel switching module              | √            | √        | √         |             |           |                                                                     |
|         |                                           | Telamatics                                   | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         |                                           | Warning light showing seat belt not fastened | √            |          |           |             |           |                                                                     |
|         | Vehicle protection/Management of accesses | Alarm                                        | √            | √        | √         |             |           |                                                                     |
|         | Visibility/Lighting/Signalling            | Rain/Brightness sensor                       | √            | √        | √         |             |           |                                                                     |
|         |                                           | Driving school module                        | √            | √        |           |             | √         |                                                                     |
|         |                                           | Static AFS                                   | √            | √        | √         |             |           |                                                                     |
|         | Petrol engine                             | KFW J34P                                     | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         |                                           |                                              |              |          |           |             |           |                                                                     |
|         | Diesel engine                             | 8HZ BOSCH EDC16C3 EURO4                      | √            | √        | √         | √           |           |                                                                     |
|         |                                           | 9HY BOSCH EDC16C3 EUR04                      | √            | √        | √         | √           |           |                                                                     |
|         | AT                                        | AL4 automatic gearbox                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption<br>3. Oil wear counter |
|         | A/C                                       | Air conditioning                             | √            | √        | √         | √           | √         | 1.Configuration                                                     |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System                                | ECU type                        | Functions    |          |           |             |           |                                                                    |
|---------|---------------------------------------|---------------------------------|--------------|----------|-----------|-------------|-----------|--------------------------------------------------------------------|
|         |                                       |                                 | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                   |
| 207 VAN | Inform the driver/Audio/Communication | Display/Telematics/AMF          | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                       | Display/Telematics/RT3          | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                       | Steering wheel switching module | √            | √        | √         | √           |           |                                                                    |
|         |                                       | Radio                           | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                       | CD player                       | √            | √        | √         | √           | √         |                                                                    |
|         |                                       | Instrument panel                | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                       | Alarm                           | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         | Active and passive safety             | ABS MK70                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                      |
|         |                                       | ESP MK60                        | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal |
|         |                                       | Air bags                        | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock                               |
|         |                                       | Rain/brightness sensor          | √            | √        | √         |             |           |                                                                    |
|         | Diesel engine                         | 5FX MED17.4                     | √            | √        | √         | √           |           |                                                                    |
|         |                                       | 9HZ EDC16C3                     | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                       | DCM3.5                          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Filter                                        |
|         | AT ECU                                | CFC300P gearbox                 | √            | √        | √         | √           | √         |                                                                    |
|         |                                       | AM6 Euro5 automatic gearbox     | √            | √        | √         | √           | √         | 1.Configuration<br>2. Oil wear counter                             |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System                                | ECU type                        | Functions    |          |           |             |           |                                                         |
|---------|---------------------------------------|---------------------------------|--------------|----------|-----------|-------------|-----------|---------------------------------------------------------|
|         |                                       |                                 | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                        |
| 3008    |                                       | AT6 Euro5 automatic gearbox     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Oil wear counter                   |
|         | Vehicle protection/Management of      | Alarm                           | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         |                                       | Driver's door control panel     | √            | √        | √         | √           | √         |                                                         |
|         | Inform the driver/Audio/Communication | Multifunction display (EMF)     | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         |                                       | Steering wheel switching module | √            | √        | √         | √           | √         |                                                         |
|         |                                       | Radio                           | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         |                                       | Instrument panel                | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         |                                       | CD player                       | √            | √        | √         |             | √         |                                                         |
|         |                                       | Telematics                      | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         | Driving assistance/Comfort            | Air conditioning                | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         |                                       | Parking assistance              | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         |                                       | Under inflation detection       | √            | √        | √         | √           |           |                                                         |
|         | Visibility/Lighting/Signalling        | Rain sensor                     | √            | √        | √         |             |           |                                                         |
|         |                                       | Headlamp height corrector       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Calibration                        |
| 306     | Petrol engine                         | HDY BOSCH MA3.1                 | √            | √        | √         |             |           |                                                         |
|         |                                       | KFX MM1AP                       | √            | √        | √         | √           |           |                                                         |
|         |                                       | HDZ BOSCH MA3.1                 | √            | √        | √         |             |           |                                                         |
|         |                                       | RFS MM1AP                       | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Ignition advance setting |
|         | Air bag                               | Air bag and seat belt           | √            | √        | √         |             |           | 1.Marching                                              |
|         |                                       | KFX BOSCH MP7.3                 | √            | √        | √         | √           | √         | 1.Initialization Adaption                               |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle       | System        | ECU type              | Functions    |          |           |             |           |                                                                                         |
|---------------|---------------|-----------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------------------------|
|               |               |                       | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                        |
| 306REMODELAGE | Petrol engine | NFZ BOSCH MP7.2       | √            | √        | √         | √           | √         |                                                                                         |
|               |               | KFX MM1AP             | √            | √        | √         | √           |           |                                                                                         |
|               |               | KFX SAGEM SL96        | √            | √        | √         | √           | √         | 1.Initialization Adaption                                                               |
|               |               | LFY BOSCH MP7.3       | √            | √        | √         | √           | √         | 1.Initialization Adaption                                                               |
|               |               | LFY SAGEM SL96        | √            | √        | √         | √           | √         | 1.Initialization Adaption                                                               |
|               |               | NFT BOSCH M7.4.4      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                            |
|               |               | KFW SAGEM S2000       | √            | √        | √         | √           | √         | 1.Marchting<br>2.Initialization Adaption                                                |
|               |               | K6D SAGEM S2000       | √            | √        | √         | √           | √         | 1.Marchting<br>2.Initialization Adaption                                                |
|               |               | NFV BOSCH M7.4.4      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                                            |
|               |               | RFS MM1AP             | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Ignition advance setting                                 |
|               | Diesel engine | WJY LUCAS DCN2        | √            | √        | √         | √           | √         | 1.Configuration                                                                         |
|               |               | WJZ LUCAS DCN2        | √            | √        | √         | √           |           |                                                                                         |
|               |               | RHY BOSCH EDC15C2     | √            | √        | √         | √           |           |                                                                                         |
|               | ABS           | ABS BOSCH 5.3         | √            | √        | √         | √           | √         |                                                                                         |
|               | A/T           | AL4 Gearbox           | √            | √        | √         | √           | √         | 1.Marchting<br>2.Initialization Adaption<br>3.Accelebration pedal<br>4.Oil wear counter |
|               | Air bag       | Air bag and seat belt | √            | √        | √         |             |           | 1.Marchting                                                                             |
|               | Left Air bag  | Left side airbag      | √            | √        | √         |             |           | 1.Marchting                                                                             |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type                               | Functions    |          |           |             |           |                                               |
|---------|---------------|----------------------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------|
|         |               |                                        | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                              |
|         | Right Air bag | Right side airbag                      | √            | √        | √         |             |           | 1.Marchting                                   |
|         | Petrol engine | NFU BOSCH ME744                        | √            | √        | √         | √           | √         | 1.Marchting<br>2.Initialization Adapation     |
|         |               | KFW SAGEM S2000                        | √            | √        | √         | √           | √         | 1.Marchting<br>2.Initialization Adapation     |
|         |               | K6D SAGEM S2000                        | √            | √        | √         | √           | √         | 1.Marchting<br>2.Initialization Adapation     |
|         |               | N6A BOSCH ME7.4.4                      | √            | √        | √         | √           | √         | 1.Marchting<br>2.Initialization Adapation     |
|         |               | N6A BOSCH ME7.4.5                      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adapation |
|         |               | NFU BOSCH ME7.4.5                      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adapation |
|         |               | RFN MM48P(Mechanical throttle housing) | √            | √        | √         | √           | √         | 1..Initialization Adapation                   |
|         |               | RFN MM4MP2(Motorised butterfly)        | √            | √        | √         | √           | √         |                                               |
|         |               | KFU MM6LP                              | √            | √        | √         | √           |           | 1.Initialization Adapation                    |
|         |               | RFK MM6LP                              | √            | √        | √         | √           |           | 1.Initialization Adapation                    |
|         |               | RFN MM6LP                              | √            | √        | √         | √           |           | 1.Initialization Adapation                    |
|         |               | RHZ BOSCH EDC15C2                      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service                  |
|         |               | RHS BOSCH EDC15C2                      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service                  |
|         |               | 9HY BOSCH EDC16C3                      | √            | √        | √         | √           |           |                                               |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type                   | Functions    |          |           |             |           |                                                                       |
|---------|---------------|----------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------------------------------|
|         |               |                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                      |
| 307 VAN | Diesel engine | RHY SIEMENS SID 801        | √            | √        | √         | √           | √         | 1.Configuration                                                       |
|         |               | RHY BOSCH EDC15C2          | √            | √        | √         | √           |           |                                                                       |
|         |               | 9HZ BOSCH EDC16C3          | √            | √        | √         | √           |           |                                                                       |
|         |               | 9HT BOSCH EDC16C3          | √            | √        | √         | √           |           |                                                                       |
|         |               | 8HZ BOSCH EDC16C3          | √            | √        | √         | √           | √         | 1.Configuration                                                       |
|         |               | 9HX BOSCH EDC16C3          | √            | √        | √         | √           |           |                                                                       |
|         |               | 9HY BOSCH EDC16C3<br>EUR04 | √            | √        | √         | √           |           |                                                                       |
|         |               | RHR SIEMENS SID 803        | √            | √        | √         | √           | √         | 1.Configuration                                                       |
|         |               | RHL SIEMENS SID 803        | √            | √        | √         | √           | √         | 1.Configuration                                                       |
|         | ABS           | TEVES MK60 ABS             | √            | √        | √         | √           |           |                                                                       |
|         |               | ABS BOSCH 8                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                         |
|         |               | ESP BOSCH 5.7              | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle<br>sensor cal |
|         |               | ABS BOSCH 5.3              | √            | √        | √         | √           | √         |                                                                       |
|         |               | ESP BOSCH 8                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle<br>sensor cal |
|         | A/T           | BVA AL4                    | √            | √        | √         | √           | √         | 1.Marching<br>2.Oil wear counter                                      |
|         |               | ZF 4HP20 AT                | √            | √        | √         | √           |           |                                                                       |

## PEUGEOT V42.20 Diagnostics List (Note:For reference only)

| Vehicle | System              | ECU type                                   | Functions    |          |           |             |           |                                            |
|---------|---------------------|--------------------------------------------|--------------|----------|-----------|-------------|-----------|--------------------------------------------|
|         |                     |                                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                           |
|         | Air bag             | SAC CENTRAL                                | √            | √        | √         | √           |           |                                            |
|         |                     | Air bags(SAC CENT SIEMENS)                 | √            | √        | √         |             |           | 1.Configuration                            |
|         | Driver information  | Display/Telematics/AMF                     | √            | √        | √         | √           | √         | 1.Configuration                            |
|         |                     | Display/Telematics/RT3                     | √            | √        | √         | √           | √         | 1.Configuration                            |
|         |                     | parking assistance                         | √            | √        | √         | √           | √         |                                            |
|         |                     | Radio                                      | √            | √        | √         | √           | √         | 1.Configuration                            |
|         |                     | CD player                                  | √            | √        | √         | √           | √         | 1.Configuration                            |
|         |                     | Switch unit under steering wheel(COM 2000) | √            | √        | √         | √           |           |                                            |
|         |                     | Instrument panel                           | √            | √        | √         | √           | √         | 1.Configuration                            |
|         | Visibility/Lighting | Driving school                             | √            |          |           | √           | √         |                                            |
|         | switch control      | Driver's door module                       | √            | √        | √         | √           |           |                                            |
|         |                     | Passenger door module                      | √            | √        | √         | √           |           |                                            |
|         |                     | Diesel fuel additive control unit          | √            | √        | √         | √           | √         | 1.Marchting                                |
|         |                     | Electric pump unit(power steering)         | √            | √        | √         | √           |           |                                            |
|         |                     | Alarm                                      | √            | √        | √         | √           | √         | 1.Configuration                            |
|         |                     | BSI                                        | √            | √        | √         | √           | √         | 1.Marchting<br>2.key program               |
|         | A/C                 | Air conditioning                           | √            | √        | √         | √           | √         | 1.Configuration                            |
|         |                     | N6A BOSCH ME745                            | √            | √        | √         | √           | √         | 1.Programming<br>2.Initialization Adaption |

## PEUGEOT V42.20 Diagnostics List (Note:For reference only)

| Vehicle | System        | ECU type                     | Functions    |          |           |             |           |                                              |
|---------|---------------|------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------|
|         |               |                              | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                             |
|         | Petrol engine | NFU BOSCH ME745              | √            | √        | √         | √           | √         | 1.Programming<br>2.Initialization Adaption   |
|         |               | RFN MM6LP                    | √            | √        | √         | √           |           |                                              |
|         |               | N6B BOSCH_ME745              | √            | √        | √         | √           | √         | 1.Programming<br>2.Initialization Adaption   |
|         |               | KFU MM6LP                    | √            | √        | √         | √           |           |                                              |
|         |               | RFK MM6LP                    | √            | √        | √         | √           | √         | 1.Configuration                              |
|         |               | RFJ MM6LPB                   | √            | √        | √         |             |           |                                              |
|         |               | KFU MM6LPC                   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | NFU_Or_N6A_Or_N6B_ME749      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | NFU_Or_N6A_ME749_FLEX_FUEL   | √            | √        | √         |             |           |                                              |
|         |               | RFJ MM6KP BIO Flex(EW10A FF) | √            | √        | √         | √           |           |                                              |
|         | Diesel engine | RHY_BOSCH_EDC15C2            | √            | √        | √         | √           |           |                                              |
|         |               | RHZ_BOSCH_EDC15C2            | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service                 |
|         |               | 9HV_BOSCH_EDC16C3            | √            | √        | √         |             | √         | 1.Configuration                              |
|         |               | 9HX_BOSCH_EDC16C3            | √            | √        | √         | √           |           |                                              |
|         |               | 9HY_BOSCH_EDC16C3_EURO       | √            | √        | √         |             |           |                                              |
|         |               | 9HY_BOSCH_EDC16C3_EURO4      | √            | √        | √         |             |           |                                              |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System                    | ECU type                | Functions    |          |           |             |           |                                                                    |
|---------|---------------------------|-------------------------|--------------|----------|-----------|-------------|-----------|--------------------------------------------------------------------|
|         |                           |                         | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                   |
| 307 CAN |                           | 9HZ_BOSCH_EDC16C3       | √            | √        | √         |             |           | 1.Configuration                                                    |
|         |                           | RHR_SIEMENS_SID_803     | √            | √        | √         | √           |           |                                                                    |
|         |                           | RHL_SIEMENS_SID_803     | √            | √        | √         | √           |           |                                                                    |
|         |                           | RHL DCM3.4              | √            | √        | √         | √           | √         | 1.Configuration<br>2.particle emission filter                      |
|         |                           | RHR DCM3.4              | √            | √        | √         | √           | √         | 1.Configuration<br>2.particle emission filter                      |
|         |                           | 9HT BOSCH EDC16C3       | √            | √        | √         | √           |           |                                                                    |
|         | AT ECU                    | AM6L4 automatic gearbox | √            | √        | √         | √           | √         | 1.Configuration<br>2. Oil wear counter                             |
|         |                           | AL4 automatic gearbox   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                       |
|         |                           | BSI                     | √            | √        | √         | √           |           | 1.keys of programming                                              |
|         | Active and passive safety | ABS8 BOSCH              | √            | √        | √         | √           | √         | 1.Configuration<br>2. Bleeding                                     |
|         |                           | ABS 8.1                 | √            | √        | √         | √           | √         | 1.Configuration<br>2. Bleeding                                     |
|         |                           | ESP 8.1                 | √            | √        | √         | √           | √         | 1.Configuration<br>2. Bleeding                                     |
|         |                           | ESP BOSCH 8             | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal |
|         |                           | Airbag ECU              | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock                               |

## PEUGEOT V42.20 Diagnostics List (Note:For reference only)

| Vehicle | System                                    | ECU type                           | Functions    |          |           |             |           |                                  |
|---------|-------------------------------------------|------------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------|
|         |                                           |                                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                 |
|         | Driving assistance/Comfort                | Parking assistance                 | √            | √        | √         | √           | √         | 1.Configuration                  |
|         |                                           | Air conditioning                   | √            | √        | √         | √           | √         |                                  |
|         |                                           | Power steering                     | √            | √        | √         | √           |           |                                  |
|         |                                           | Under inflation detection          | √            | √        | √         | √           |           |                                  |
|         | Inform the driver/Audio/Communication     | Muti-function display              | √            | √        | √         | √           |           |                                  |
|         |                                           | Radio                              | √            | √        | √         | √           | √         | 1.Configuration                  |
|         |                                           | CD player                          | √            | √        | √         |             | √         |                                  |
|         |                                           | Hands Free Kit                     | √            | √        | √         | √           | √         | 1.Configuration                  |
|         |                                           | Instrument panel                   | √            | √        | √         | √           | √         | 1.Configuration                  |
|         |                                           | Steering wheel switching module    | √            | √        | √         | √           |           |                                  |
|         |                                           | Telamatics                         | √            | √        | √         | √           | √         | 1.Configuration                  |
|         | Vehicle protection/Management of accesses | Alarm                              | √            | √        | √         |             |           |                                  |
|         |                                           | Driver's door module               | √            | √        | √         | √           | √         |                                  |
|         |                                           | Passenger door module              | √            | √        | √         | √           | √         |                                  |
|         |                                           | Retractable roof                   | √            | √        | √         |             |           |                                  |
|         |                                           | Sun roof                           | √            | √        | √         |             |           |                                  |
|         | Visibility/Lighting/Signalling            | Rain/Brightness sensor             | √            | √        | √         |             |           |                                  |
|         |                                           | Right headlamp beam corrector      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Calibration |
|         |                                           | Left headlamp beam level corrector | √            | √        | √         | √           | √         | 1.Configuration<br>2.Calibration |
|         |                                           | Driving school module              | √            | √        |           |             | √         |                                  |
|         |                                           | Steering wheel switching module    | √            | √        | √         | √           |           |                                  |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type                     | Functions    |          |           |             |           |                                              |
|---------|---------------|------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------|
|         |               |                              | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                             |
|         |               | BSI                          | √            | √        | √         |             |           |                                              |
|         | Petrol engine | 5FT MED17.4                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | 5FW MEV17.4                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | 5FX MED17.4                  | √            | √        | √         | √           |           |                                              |
|         |               | 5FY MED17.4                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | 8FS MEV17.4                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | N6A ME745                    | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | N6B ME745                    | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | NFU ME745                    | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | NFU ME749 Bio Flex           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |               | RFJ MM6KP Bio Flex(EW10A FF) | √            | √        | √         |             |           |                                              |
|         |               | RFJ MM6LPB                   | √            | √        | √         |             |           |                                              |
|         |               | 9HV EDC16C3                  | √            | √        | √         |             | √         | 1.Configuration                              |
|         |               | 9HX EDC16C3                  | √            | √        | √         | √           |           |                                              |
|         |               | 9HY EDC16C3                  | √            | √        | √         | √           |           |                                              |
|         |               | 9HZ EDC16C3                  | √            | √        | √         | √           |           |                                              |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System                                         | ECU type                         | Functions    |          |           |             |           |                                               |
|---------|------------------------------------------------|----------------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------|
|         |                                                |                                  | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                              |
| 308     | Diesel engine                                  | RHL DCM3.4                       | √            | √        | √         | √           | √         | 1.Configuration<br>2.particle emission filter |
|         |                                                | RHR DCM3.4                       | √            | √        | √         | √           | √         | 1.Configuration<br>2.particle emission filter |
|         |                                                | RHF DCM3.4                       | √            | √        | √         | √           | √         | 1.Configuration<br>2.particle emission filter |
|         | A/T                                            | CFC300P gearbox                  | √            | √        | √         | √           | √         |                                               |
|         |                                                | AM6C gearbox                     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Oil wear counter         |
|         |                                                | AL4 gearbox                      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption  |
|         |                                                | AM6 Euro5 automatic gearbox      | √            | √        | √         | √           | √         | 1.Configuration<br>2. Oil wear counter        |
|         |                                                | AT6 Euro5 automatic gearbox      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Oil wear counter         |
|         |                                                | Multiplexed additive adding pump | √            | √        | √         |             |           |                                               |
|         | Vehicle protection /<br>Management of accesses | Alarm                            | √            | √        | √         | √           | √         | 1.Configuration                               |
|         |                                                | Driver's door module             | √            | √        | √         | √           | √         |                                               |
|         | Active and passive safety                      | ABS 8.1                          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                 |
|         |                                                | ESP 8.1                          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                 |
|         |                                                | Air-bag                          | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock          |

## PEUGEOT V42.20 Diagnostics List (Note:For reference only)

| Vehicle | System                                | ECU type                                        | Functions    |          |           |             |           |                           |
|---------|---------------------------------------|-------------------------------------------------|--------------|----------|-----------|-------------|-----------|---------------------------|
|         |                                       |                                                 | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function          |
|         | Driving assistance/comfort            | Lane departure warning                          | √            | √        | √         |             |           |                           |
|         |                                       | Air conditioning                                | √            | √        | √         | √           | √         | 1.Configuration           |
|         |                                       | Electropump assembly                            | √            | √        | √         |             |           |                           |
|         |                                       | Drivers seat memory unit                        | √            | √        | √         |             |           |                           |
|         |                                       | Parking assistance                              | √            | √        | √         | √           | √         | 1.Configuration           |
|         |                                       | Under inflation detection                       | √            | √        | √         | √           |           |                           |
|         | Inform the driver/Audio/Communication | Multifunction screen                            | √            | √        | √         |             |           |                           |
|         |                                       | Radio                                           | √            | √        | √         | √           | √         | 1.Configuration           |
|         |                                       | Instrument panel                                | √            | √        | √         | √           | √         | 1.Configuration           |
|         |                                       | Hands Free Kit                                  | √            | √        | √         | √           | √         | 1.Configuration           |
|         |                                       | Not Fastened warning light(TNB)                 | √            |          |           |             |           |                           |
|         |                                       | Telematics                                      | √            | √        | √         | √           | √         | 1.Configuration           |
|         |                                       | Steering wheel switching module                 | √            | √        | √         |             |           |                           |
|         |                                       | CD player                                       | √            | √        | √         |             | √         |                           |
|         |                                       | Audio amplifier                                 | √            | √        | √         |             |           |                           |
|         |                                       | Services Module                                 | √            | √        | √         |             |           |                           |
|         | Visibility/Lighting/Signalling        | Rain sensor                                     | √            | √        | √         |             |           |                           |
|         |                                       | Discharge bulb with directional dipped headlamp | √            | √        | √         |             |           |                           |
|         |                                       | Driving school module                           | √            | √        |           |             | √         |                           |
|         |                                       | N6A ME7.4.4                                     | √            | √        | √         | √           | √         | 1.Initialization Adaption |
|         |                                       | N6B ME7.4.4                                     | √            | √        | √         | √           | √         | 1.Initialization Adaption |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type                           | Functions    |          |           |             |           |                                                         |
|---------|---------------|------------------------------------|--------------|----------|-----------|-------------|-----------|---------------------------------------------------------|
|         |               |                                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                        |
| 405     | Petrol engine | NFU ME7.4.4                        | √            | √        | √         | √           | √         | 1.Initialization Adaption                               |
|         |               | LFY BOSCH MP7.3                    | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption            |
|         |               | L6A SAGEM SL96                     | √            | √        | √         | √           |           |                                                         |
|         |               | 1600RD SL96                        | √            | √        | √         | √           |           |                                                         |
|         |               | LFZ SAGEM S2000                    | √            | √        | √         | √           | √         | 1.Initialization Adaption                               |
|         |               | NFU J35                            | √            | √        | √         | √           | √         | 1.Configuration                                         |
| 406     | Petrol engine | KFX SAGEM SL96                     | √            | √        | √         | √           | √         | 1.Initialization Adaption                               |
|         |               | LFY BOSCH MP7.3                    | √            | √        | √         | √           | √         | 1.Initialization Adaption                               |
|         |               | LFY BOSCH MP5.2                    | √            | √        | √         | √           |           |                                                         |
|         |               | LFX MM1AP                          | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Ignition advance setting |
|         |               | LFY SAGEM SL96                     | √            | √        | √         | √           | √         | 1.Initialization Adaption                               |
|         | Diesel engine | RHZ BOSCH EDC15C2                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service                            |
|         | ABS           | ABS BOSCH 5.3                      | √            | √        | √         | √           | √         |                                                         |
|         | A/T           | AL4 autoadaptive automatic gearbox | √            | √        | √         | √           |           |                                                         |
|         | Air bag       | Air bag and seat belt              | √            | √        | √         |             |           | 1.Marchting                                             |
|         | Left Air bag  | Left side airbag                   | √            | √        | √         |             |           | 1.Marchting                                             |
|         | Right Air bag | Right side airbag                  | √            | √        | √         |             |           | 1.Marchting                                             |
|         |               | XFX BOSCH ME 746                   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption            |
|         |               | LFY BOSCH MP5.2                    | √            | √        | √         | √           |           |                                                         |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type                          | Functions    |          |           |             |           |                                                         |
|---------|---------------|-----------------------------------|--------------|----------|-----------|-------------|-----------|---------------------------------------------------------|
|         |               |                                   | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                        |
| 406R    | Petrol engine | LFX MM1AP                         | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Ignition advance setting |
|         |               | LFY SAGEM SL96                    | √            | √        | √         | √           | √         | 1.Initialization Adaption                               |
|         |               | LFY BOSCH MP7.3                   | √            | √        | √         | √           | √         | 1.Initialization Adaption                               |
|         |               | 3FZ MM4MP2                        | √            | √        | √         | √           | √         |                                                         |
|         |               | RFN MM48P                         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption            |
|         |               | R6F MM48P                         | √            | √        | √         | √           | √         | 1.Initialization Adaption                               |
|         |               | RFR MM48P                         | √            | √        | √         | √           | √         | 1.Initialization Adaption                               |
|         |               | 6FZ SAGEM S2000                   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption            |
|         |               | RLZ SIEMENS IRIUS81               | √            | √        | √         | √           | √         | 1.Initialization Adaption                               |
|         | Diesel engine | RHY BOSCH EDC15C2                 | √            | √        | √         | √           |           |                                                         |
|         |               | 4HX BOSCH EDC15C2                 | √            | √        | √         | √           |           |                                                         |
|         |               | RHY SIEMENS SID 801               | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         |               | RHS BOSCH EDC15C2                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service                            |
|         |               | RHZ BOSCH EDC15C2                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service                            |
|         |               | Diesel fuel additive control unit | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         | ABS           | ESP BOSCH 5.3                     | √            | √        | √         | √           |           |                                                         |
|         |               | ABS BOSCH 5.3                     | √            | √        | √         | √           | √         |                                                         |
|         |               | Alarm                             | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         |               | BSI                               | √            | √        | √         | √           |           | 1.keys of programming                                   |

## PEUGEOT V42.20 Diagnostics List (Note:For reference only)

| Vehicle | System             | ECU type                                   | Functions    |          |           |             |           |                                                         |
|---------|--------------------|--------------------------------------------|--------------|----------|-----------|-------------|-----------|---------------------------------------------------------|
|         |                    |                                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                        |
|         |                    | Rain/brightness sensor                     | √            | √        | √         |             |           |                                                         |
|         | A/C                | Air conditioning                           | √            | √        | √         | √           | √         |                                                         |
|         | Driver information | Multi-function display                     | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         |                    | Radio                                      | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         |                    | CD player                                  | √            | √        | √         | √           | √         |                                                         |
|         |                    | On-board navigation system                 | √            | √        | √         | √           |           |                                                         |
|         |                    | Switch unit under steering wheel(COM 2000) | √            | √        | √         | √           |           |                                                         |
|         |                    | Instrument panel                           | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         | A/T                | AL4 autoadaptive automatic gearbox         | √            | √        | √         | √           |           |                                                         |
|         | Air bag            | Air bags(SAC-CENT-AUTOLIV-2)               | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock                    |
|         |                    | Air bag and seat belt                      | √            | √        | √         |             |           | 1.Marchting                                             |
|         |                    | Left side airbag                           | √            | √        | √         |             |           | 1.Marchting                                             |
|         |                    | Right side airbag                          | √            | √        | √         |             |           | 1.Marchting                                             |
|         | Petrol engine      | XFX BOSCH ME 746                           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption            |
|         |                    | LFY BOSCH MP5.2                            | √            | √        | √         | √           |           |                                                         |
|         |                    | LFX MM1AP                                  | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Ignition advance setting |
|         |                    | LFY SAGEM SL96                             | √            | √        | √         | √           | √         | 1.Initialization Adaption                               |
|         |                    | LFY BOSCH MP7.3                            | √            | √        | √         | √           | √         | 1.Initialization Adaption                               |
|         |                    | 3FZ MM4MP2                                 | √            | √        | √         | √           | √         |                                                         |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle    | System        | ECU type                          | Functions    |          |           |             |           |                                              |
|------------|---------------|-----------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------|
|            |               |                                   | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                             |
| 406R COUPE |               | RFN MM48P                         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|            |               | R6F MM48P                         | √            | √        | √         | √           | √         | 1.Initialization Adaption                    |
|            |               | RFR MM48P                         | √            | √        | √         | √           | √         | 1.Initialization Adaption                    |
|            |               | 6FZ SAGEM S2000                   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|            |               | RLZ SIEMENS IRIUS81               | √            | √        | √         | √           | √         | 1.Initialization Adaption                    |
|            | Diesel engine | RHY BOSCH EDC15C2                 | √            | √        | √         | √           |           |                                              |
|            |               | 4HX BOSCH EDC15C2                 | √            | √        | √         | √           |           |                                              |
|            |               | RHY SIEMENS SID 801               | √            | √        | √         | √           | √         | 1.Configuration                              |
|            |               | RHS BOSCH EDC15C2                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service                 |
|            |               | RHZ BOSCH EDC15C2                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service                 |
|            |               | Diesel fuel additive control unit | √            | √        | √         | √           | √         | 1.Configuration                              |
|            | ABS           | ESP BOSCH 5.3                     | √            | √        | √         | √           |           |                                              |
|            |               | ABS BOSCH 5.3                     | √            | √        | √         | √           | √         |                                              |
|            |               | Alarm                             | √            | √        | √         | √           | √         | 1.Configuration                              |
|            |               | BSI                               | √            | √        | √         | √           |           | 1.key program                                |
|            |               | Rain/brightness sensor            | √            | √        | √         |             |           |                                              |
|            | A/C           | Air conditioning                  | √            | √        | √         | √           | √         |                                              |
|            |               | Multi-function display            | √            | √        | √         | √           | √         | 1.Configuration                              |
|            |               | Radio                             | √            | √        | √         | √           | √         | 1.Configuration                              |
|            |               | CD player                         | √            | √        | √         | √           | √         |                                              |

## PEUGEOT V42.20 Diagnostics List (Note:For reference only)

| Vehicle | System             | ECU type                                   | Functions    |          |           |             |           |                                               |
|---------|--------------------|--------------------------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------|
|         |                    |                                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                              |
|         | Driver information | On-board navigation system                 | √            | √        | √         | √           |           |                                               |
|         |                    | Switch unit under steering wheel(COM 2000) | √            | √        | √         | √           |           |                                               |
|         |                    | Instrument panel                           | √            | √        | √         | √           | √         |                                               |
|         | A/T                | AL4 autoadaptive automatic gearbox         | √            | √        | √         | √           |           |                                               |
|         | Air bag            | Air bags(SAC-CENT-AUTOLIV-2)               | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock          |
|         |                    | Air bag and seat belt                      | √            | √        | √         |             |           | 1.Marchting                                   |
|         |                    | Left side airbag                           | √            | √        | √         |             |           | 1.Marchting                                   |
|         |                    | Right side airbag                          | √            | √        | √         |             |           | 1.Marchting                                   |
|         | 406 COUPE          | Air bag                                    | √            | √        | √         |             |           | 1.Marchting                                   |
|         |                    | Left Air bag                               | √            | √        | √         |             |           | 1.Marchting                                   |
|         |                    | Right Air bag                              | √            | √        | √         |             |           | 1.Marchting                                   |
|         |                    | A/T                                        | √            | √        | √         | √           |           |                                               |
|         |                    | ABS                                        | √            | √        | √         | √           |           |                                               |
|         |                    | RHR SIEMENS SID803                         | √            | √        | √         | √           | √         | 1.Configuration                               |
|         |                    | RHL DCM3.4                                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.particle emission filter |
|         |                    | RHR DCM3.4                                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.particle emission filter |
|         |                    | RHF DCM3.4                                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.particle emission filter |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type                          | Functions    |          |           |             |           |                               |
|---------|---------------|-----------------------------------|--------------|----------|-----------|-------------|-----------|-------------------------------|
|         |               |                                   | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function              |
| 407     | Diesel engine | 4HP BOSCH EDC16CP39               | √            | √        | √         | √           | √         | 1.Configuration<br>2.Filter   |
|         |               | 4HR BOSCH EDC16CP39               | √            | √        | √         | √           | √         | 1.Configuration<br>2.Filter   |
|         |               | 4HS BOSCH EDC16CP39               | √            | √        | √         | √           | √         | 1.Configuration<br>2.Filter   |
|         |               | 4HT BOSCH EDC16CP39               | √            | √        | √         | √           | √         | 1.Configuration<br>2.Filter   |
|         |               | 9HT BOSCH EDC16C3                 | √            | √        | √         | √           |           |                               |
|         |               | 9HY BOSCH EDC16C3<br>EUR03        | √            | √        | √         | √           | √         | 1.Configuration               |
|         |               | 9HZ BOSCH EDC16C3                 | √            | √        | √         | √           |           |                               |
|         |               | RHL SIEMENS SID 803               | √            | √        | √         | √           | √         | 1.Configuration               |
|         | Petrol engine | 3FZ MM6LP                         | √            | √        | √         | √           | √         | 1.Configuration               |
|         |               | 3FY MM6LPB                        | √            | √        | √         | √           | √         |                               |
|         |               | 6FY MM6LPB                        | √            | √        | √         | √           |           |                               |
|         |               | 6FZ S2000PM2                      | √            | √        | √         | √           |           |                               |
|         |               | RFN MM6LP                         | √            | √        | √         | √           |           |                               |
|         |               | RFJ MM6KP BIO<br>Flex(EW10A FF)   | √            | √        | √         | √           |           |                               |
|         |               | Diesel fuel additive control unit | √            | √        | √         | √           | √         | 1.Configuration               |
|         | ABS           | ESP8.1                            | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding |
|         |               | ESP EBC 440(KWP)                  | √            | √        | √         | √           |           |                               |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System                                       | ECU type                        | Functions    |          |           |             |           |                                              |
|---------|----------------------------------------------|---------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------|
|         |                                              |                                 | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                             |
|         | A/T                                          | AL4 automatic gearbox           | √            | √        | √         | √           | √         | 1.Marching<br>2.Oil wear counter             |
|         |                                              | 4HP20 automatic gearbox         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |                                              | AM6 automatic gearbox           | √            | √        | √         | √           | √         | 1.Configuration<br>2. Oil wear counter       |
|         |                                              | AM6 Euro5 automatic gearbox     | √            | √        | √         | √           |           |                                              |
|         |                                              | Built-in systems interface(BSI) | √            | √        | √         |             |           |                                              |
|         | Air bag                                      | Airbag ECU                      | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock         |
|         | Inform the driver<br>Audio/Communication     | Muti-function display           | √            | √        | √         | √           |           |                                              |
|         |                                              | Radio                           | √            | √        | √         | √           | √         | 1.Configuration                              |
|         |                                              | CD player                       | √            | √        | √         |             | √         |                                              |
|         |                                              | Instrument panel                | √            | √        | √         | √           | √         |                                              |
|         |                                              | Telematics                      | √            | √        | √         | √           | √         | 1.Configuration                              |
|         |                                              | Hands Free Kit                  | √            | √        | √         | √           | √         | 1.Configuration                              |
|         | Vehicle protection<br>Management of accesses | Alarm                           | √            | √        | √         | √           | √         | 1.Configuration                              |
|         |                                              | Driver's door module            | √            | √        | √         | √           | √         |                                              |
|         |                                              | Passenger door module           | √            | √        | √         | √           | √         |                                              |
|         | Visibility<br>Lighting/Signalling            | Control unit windscreen wipers  | √            | √        | √         | √           |           |                                              |
|         |                                              | Rain/Brightness sensor          | √            | √        | √         |             |           |                                              |

## PEUGEOT V42.20 Diagnostics List (Note:For reference only)

| Vehicle | System                                | ECU type                        | Functions    |          |           |             |           |                  |
|---------|---------------------------------------|---------------------------------|--------------|----------|-----------|-------------|-----------|------------------|
|         |                                       |                                 | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function |
|         | Lighting/Signalling                   | Steering wheel switching module | √            | √        | √         | √           | √         |                  |
|         | Driving assistance/Comfort            | Parking assistance              | √            | √        | √         | √           | √         | 1.Configuration  |
|         |                                       | Air conditioning                | √            | √        | √         | √           | √         |                  |
|         |                                       | Additional heating              | √            | √        | √         | √           | √         |                  |
|         |                                       | Power steering                  | √            | √        | √         | √           | √         |                  |
|         |                                       | Under inflation detection       | √            | √        | √         | √           |           |                  |
| 4007    | Diesel engine                         | 4HK EDC16CP39                   | √            | √        | √         | √           |           |                  |
|         |                                       | 4HN EDC16CP39                   | √            | √        | √         | √           |           |                  |
|         | Petrol engine                         | AFZ 4B11 MIVEC EURO4            | √            | √        | √         | √           |           |                  |
|         |                                       | SFY 4B12 MIVEC EURO5            | √            | √        | √         | √           |           |                  |
|         |                                       | SFZ 4B12 MIVEC EURO4            | √            | √        | √         | √           |           |                  |
|         | A/T                                   | CVT gearbox                     | √            | √        | √         | √           |           |                  |
|         |                                       | DCT controlled gearbox          | √            | √        | √         | √           |           |                  |
|         | Engine/Automatic Gearbox/Transmission | 4x4 transmission                | √            | √        | √         | √           |           |                  |
|         |                                       | LEVIER GETRAG                   | √            | √        | √         | √           |           |                  |
|         |                                       | Built-in systems interface(BSI) | √            | √        | √         | √           |           |                  |
|         | Inform the driver/Audio/Communication | Radio                           | √            | √        | √         | √           |           |                  |
|         |                                       | Navigation                      | √            | √        | √         |             |           |                  |
|         |                                       | Instrument panel                | √            | √        | √         | √           |           |                  |
|         |                                       | Hands Free Kit                  | √            | √        | √         | √           |           |                  |
|         |                                       | Coded immobiliser               | √            | √        | √         | √           |           |                  |
|         |                                       | Driver's door control panel     | √            | √        | √         | √           |           |                  |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System                                    | ECU type                               | Functions    |          |           |             |           |                                              |
|---------|-------------------------------------------|----------------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------|
|         |                                           |                                        | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                             |
|         | Vehicle protection/Management of accesses | Passenger's door control panel         | √            | √        | √         | √           |           |                                              |
|         |                                           | Rear left door control pad             | √            | √        | √         | √           |           |                                              |
|         |                                           | Rear right door control pad            | √            | √        | √         | √           |           |                                              |
|         |                                           | Sun roof                               | √            | √        | √         | √           |           |                                              |
|         | Active and passive safety                 | Air bag                                | √            | √        | √         | √           |           |                                              |
|         |                                           | ABS or ESP ECU                         | √            | √        | √         | √           |           |                                              |
|         |                                           | Flywheel angle sensor                  | √            | √        | √         |             |           |                                              |
|         | Visibility Lighting/Signalling            | Static AFS                             | √            | √        | √         | √           |           |                                              |
|         |                                           | Rain and brightness sensor             |              |          |           |             |           |                                              |
|         | Driving assistance/Comfort                | Air conditioning                       | √            | √        | √         | √           |           |                                              |
|         |                                           |                                        |              |          |           |             |           |                                              |
|         | Petrol engine                             | 3FZ MM4MP2                             | √            | √        | √         | √           | √         |                                              |
|         |                                           | RFN MM48P(Mechanical throttle housing) | √            | √        | √         | √           | √         | 1.Initialization Adaption                    |
|         |                                           | RFN MM4MP2(Motorised butterfly)        | √            | √        | √         | √           | √         |                                              |
|         |                                           | R6F MM4.8P                             | √            | √        | √         | √           | √         | 1.Initialization Adaption                    |
|         |                                           | XFX BOSCH ME7.4.6                      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         | Diesel engine                             | RHS BOSCH EDC15C2                      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service                 |
|         |                                           | 4HX BOSCH EDC15C2                      | √            | √        | √         | √           |           |                                              |
|         |                                           | RHZ BOSCH EDC15C2                      | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service                 |
|         | ARC                                       | ESP BOSCH 5.3                          | √            | √        | √         | √           |           |                                              |
|         |                                           |                                        |              |          |           |             |           |                                              |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System              | ECU type                          | Functions    |          |           |             |           |                                               |
|---------|---------------------|-----------------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------------------------|
|         |                     |                                   | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                              |
| 607 VAN | ABS                 | ABS BOSCH 5.3                     | √            | √        | √         | √           | √         |                                               |
|         | A/T                 | BVA ZF                            | √            | √        | √         | √           |           |                                               |
|         |                     | 4HP20 gearbox                     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adapation |
|         | Air bag             | Air bag                           | √            | √        | √         |             |           |                                               |
|         | Driver information  | Multi-function display            | √            | √        | √         | √           | √         |                                               |
|         |                     | Parking assistance                | √            | √        | √         | √           | √         |                                               |
|         |                     | Instrument panel                  | √            | √        | √         |             | √         | 1.Configuration                               |
|         |                     | CD player                         | √            | √        | √         | √           | √         |                                               |
|         |                     | Radio                             | √            | √        | √         | √           | √         | 1.Configuration                               |
|         | switch control      | Driver's door control panel       | √            | √        | √         | √           |           |                                               |
|         |                     | Passenger's door control panel    | √            | √        | √         | √           |           |                                               |
|         | Visibility/Lighting | Headlamp height corrector         | √            | √        | √         | √           | √         |                                               |
|         |                     | BSI                               | √            | √        | √         | √           | √         | 1.Initialization Adapation                    |
|         |                     | storing of the driving position   | √            | √        | √         | √           |           |                                               |
|         |                     | Diesel fuel additive control unit | √            | √        | √         | √           | √         | 1.Marchting                                   |
|         | A/C                 | Air conditioning                  | √            | √        | √         | √           | √         | 1.Configuration                               |
|         | Petrol engine       | 3FZ MM6LP                         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adapation |
|         |                     | 3FY MM6LPB                        | √            | √        | √         | √           | √         |                                               |
|         |                     | XFV ME747                         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adapation |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System                     | ECU type                          | Functions    |          |           |             |           |                                                                    |
|---------|----------------------------|-----------------------------------|--------------|----------|-----------|-------------|-----------|--------------------------------------------------------------------|
|         |                            |                                   | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                   |
| 607 CAN | Diesel engine              | 4HP BOSCH EDC16CP39               | √            | √        | √         | √           |           |                                                                    |
|         |                            | 4HR BOSCH EDC16CP39               | √            | √        | √         | √           |           |                                                                    |
|         |                            | 4HS BOSCH EDC16CP39               | √            | √        | √         | √           |           |                                                                    |
|         |                            | 4HT BOSCH EDC16CP39               | √            | √        | √         | √           |           |                                                                    |
|         |                            | RHL SIEMENS SID 803               | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                            | RHR SIEMENS SID 803               | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                            | RHS BOSCH EDC15C2                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service                                       |
|         | AT ECU                     | AM6 automatic gearbox             | √            | √        | √         | √           | √         | 1.Configuration<br>2. Oil wear counter                             |
|         |                            | 4HP20 automatic gearbox           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                       |
|         |                            | Diesel fuel additive control unit | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         | ABS                        | ESP BOSCH 8                       | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal |
|         | Air bag                    | Airbag ECU                        | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock                               |
|         |                            | Built-in systems interface(BSI)   | √            | √        | √         |             |           |                                                                    |
|         | Driving assistance/Comfort | Parking assistance                | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                            | Drivers seat memory unit          | √            | √        | √         |             |           |                                                                    |
|         |                            | Air conditioning                  | √            | √        | √         | √           | √         |                                                                    |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System                                    | ECU type                           | Functions    |          |           |             |           |                                                                     |
|---------|-------------------------------------------|------------------------------------|--------------|----------|-----------|-------------|-----------|---------------------------------------------------------------------|
|         |                                           |                                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                    |
|         |                                           | Under inflation detection          | √            | √        | √         | √           |           |                                                                     |
|         |                                           | Power steering                     | √            | √        | √         | √           | √         |                                                                     |
|         | Inform the driver/Audio/Communication     | Radio                              | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         |                                           | CD player                          | √            | √        | √         |             | √         |                                                                     |
|         |                                           | Instrument panel                   | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         |                                           | Steering wheel switching module    | √            | √        | √         | √           | √         |                                                                     |
|         |                                           | Hands Free Kit                     | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         |                                           | Telamatics                         | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         |                                           |                                    |              |          |           |             |           |                                                                     |
|         | Vehicle protection/Management of accesses | Alarm                              | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         |                                           | Driver's door module               | √            | √        | √         | √           | √         |                                                                     |
|         |                                           | Passenger door module              | √            | √        | √         | √           | √         |                                                                     |
|         | Visibility/Lighting/Signalling            | Rain/Brightness sensor             | √            | √        | √         |             |           |                                                                     |
| 806     | Petrol engine                             | R6F MM4.8P                         | √            | √        | √         | √           | √         | 1.Initialization Adaption                                           |
|         |                                           | RFN MM4.8P                         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                        |
|         | Diesel engine                             | RHW BOSCH EDC15C2                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Filter                                         |
|         |                                           | RHZ BOSCH EDC15C2                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service                                        |
|         | ABS                                       | BOSCH ABS5.3                       | √            | √        | √         | √           |           |                                                                     |
|         | AT                                        | AL4 autoadaptive automatic gearbox | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption<br>3. Oil wear counter |
|         | Air bag                                   | Air bag and seat belt              | √            | √        | √         |             |           | 1.Marchting                                                         |
|         |                                           |                                    |              |          |           |             |           |                                                                     |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System              | ECU type                                   | Functions    |          |           |             |           |                             |
|---------|---------------------|--------------------------------------------|--------------|----------|-----------|-------------|-----------|-----------------------------|
|         |                     |                                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function            |
|         | Additional heating  |                                            | √            | √        | √         | √           | √         |                             |
| 807 VAN | Diesel engine       | RHW BOSCH EDC15C2                          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Filter |
|         |                     | RHM BOSCH EDC15C2                          | √            | √        | √         | √           |           |                             |
|         |                     | RHT BOSCH EDC15C2                          | √            | √        | √         | √           |           |                             |
|         |                     | 4HW BOSCH EDC15C2                          | √            | √        | √         | √           |           |                             |
|         | ABS                 | ABR BOSCH 5.7                              | √            | √        | √         | √           |           |                             |
|         |                     | ESP BOSCH 5.7                              | √            | √        | √         | √           | √         |                             |
|         | Driver information  | Display/Telematics                         | √            | √        | √         | √           | √         |                             |
|         |                     | Warning light and odometer ECU             | √            | √        | √         | √           |           |                             |
|         |                     | Parking assistance                         | √            | √        | √         | √           |           |                             |
|         |                     | CD player                                  | √            | √        | √         | √           |           |                             |
|         |                     | Instrument panel                           | √            | √        | √         | √           | √         |                             |
|         |                     | Switch unit under steering wheel(COM 2000) | √            | √        | √         | √           |           |                             |
|         |                     | radio/telematic receive control            | √            | √        | √         | √           | √         |                             |
|         | Visibility/Lighting | Switch unit under steering wheel(COM 2000) | √            | √        | √         | √           |           |                             |
|         |                     | Right headlamp beam corrector              | √            | √        | √         | √           |           |                             |
|         |                     | Left headlamp beam level corrector         | √            | √        | √         | √           |           |                             |
|         |                     | Driver's door module                       | √            | √        | √         | √           |           |                             |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System         | ECU type                               | Functions    |          |           |             |           |                                              |
|---------|----------------|----------------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------|
|         |                |                                        | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                             |
|         | switch control | Sliding side door                      | √            | √        | √         | √           |           |                                              |
|         |                | Passenger's door module                | √            | √        | √         | √           |           |                                              |
|         | A/C            | WEBASTO additional heating             | √            | √        | √         | √           |           |                                              |
|         |                | Climate control                        | √            | √        | √         | √           |           |                                              |
|         | Air bag        | Air bag                                | √            | √        | √         | √           |           |                                              |
|         |                | Diesel fuel additive control unit      | √            | √        | √         | √           |           |                                              |
|         |                | Alarm                                  | √            | √        | √         | √           | √         |                                              |
|         |                | Storing of the driving position        | √            | √        | √         | √           |           |                                              |
|         |                | BSI                                    | √            | √        | √         | √           |           |                                              |
|         | Petrol engine  | 3FZ MM4MP2                             | √            | √        | √         | √           |           |                                              |
|         |                | 3FZ MM6LP                              | √            | √        | √         | √           |           |                                              |
|         |                | R6F MM4.8P                             | √            | √        | √         | √           | √         | 1.Initialization Adaption                    |
|         |                | RFN MM48P(Mechanical throttle housing) | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |                | RFN MM4MP2(Motorised butterfly)        | √            | √        | √         | √           |           |                                              |
|         |                | RFN MM6LP                              | √            | √        | √         | √           |           | 1.Initialization Adaption                    |
|         |                | XFW BOSCH ME746                        | √            | √        | √         | √           |           |                                              |
|         |                | BSI                                    | √            | √        | √         | √           |           | 1.keys of programming                        |
|         | Petrol engine  | RFJ MM6LPB                             | √            | √        | √         |             |           |                                              |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type                          | Functions    |          |           |             |           |                                                    |
|---------|---------------|-----------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------------|
|         |               |                                   | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                   |
|         | Diesel engine | 4HW BOSCH EDC15C2                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Configuration of part mileage |
|         |               | 4HP EDC16CP39                     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Filter                        |
|         |               | 4HR EDC16CP39                     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Filter                        |
|         |               | 4HS EDC16CP39                     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Filter                        |
|         |               | 4HT EDC16CP39                     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Filter                        |
|         |               | RHK SIEMENS SID 803               | √            | √        | √         |             |           |                                                    |
|         |               | RHL SIEMENS SID 803               | √            | √        | √         | √           | √         | 1.Configuration                                    |
|         |               | RHR SIEMENS SID 803               | √            | √        | √         | √           | √         | 1.Configuration                                    |
|         |               | RHM BOSCH EDC15C2                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Filter                        |
|         |               | RHT BOSCH EDC15C2                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Filter                        |
|         |               | RHW BOSCH EDC15C2                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Filter                        |
|         |               | Diesel fuel additive control unit | √            | √        | √         | √           | √         | 1.Configuration                                    |
|         |               | ESP 8.1                           | √            | √        | √         | √           |           |                                                    |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System                                | ECU type                   | Functions    |          |           |             |           |                                                                    |
|---------|---------------------------------------|----------------------------|--------------|----------|-----------|-------------|-----------|--------------------------------------------------------------------|
|         |                                       |                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                   |
| 807 CAN | ABS                                   | ESP BOSCH 8                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal |
|         | Air bag                               | Airbag ECU                 | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock                               |
|         | A/T                                   | BVA AL4                    | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adapation                      |
|         |                                       | BVA_AM6C                   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Oil wear counter                              |
|         | Driving assistance/Comfort            | Additional heating         | √            | √        | √         | √           | √         |                                                                    |
|         |                                       | Air conditioning           | √            | √        | √         | √           | √         |                                                                    |
|         |                                       | Driver's door module       | √            | √        | √         | √           | √         |                                                                    |
|         |                                       | Drivers seat memory unit   | √            | √        | √         |             |           |                                                                    |
|         |                                       | Parking assistance         | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                       | Power steering GEP         | √            | √        | √         | √           | √         |                                                                    |
|         |                                       | Under inflation detection  | √            | √        | √         | √           |           |                                                                    |
|         | Inform the driver/Audio/Communication | CD player                  | √            | √        | √         |             | √         |                                                                    |
|         |                                       | Hands Free Kit             | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                       | Instrument panel           | √            | √        | √         | √           | √         |                                                                    |
|         |                                       | Multi-function display     | √            | √        | √         |             |           |                                                                    |
|         |                                       | Radio                      | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                       | Telematic receiver control | √            |          |           |             |           |                                                                    |
|         |                                       | Telematics                 | √            | √        | √         | √           | √         | 1.Configuration                                                    |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System                                    | ECU type                           | Functions    |          |           |             |           |                                              |
|---------|-------------------------------------------|------------------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------|
|         |                                           |                                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                             |
|         | Vehicle protection/Management of accesses | Warning lights/odometer unit       | √            | √        | √         |             |           |                                              |
|         |                                           | Alarm                              | √            | √        | √         |             |           |                                              |
|         |                                           | Front sunroof                      | √            | √        | √         |             |           |                                              |
|         |                                           | Middle sunroof                     | √            | √        | √         |             |           |                                              |
|         |                                           | Rear sunroof                       | √            | √        | √         |             |           |                                              |
|         |                                           | Passenger door module              | √            | √        | √         | √           | √         |                                              |
|         |                                           | Sliding side doors module          | √            | √        | √         |             |           |                                              |
|         | Visibility/Lighting/Signalling            | Left headlamp beam level corrector | √            | √        | √         | √           | √         |                                              |
|         |                                           | Rain/brightness sensor             | √            | √        | √         |             |           |                                              |
|         |                                           | Right headlamp beam corrector      | √            | √        | √         | √           | √         |                                              |
|         |                                           | Steering wheel switching module    | √            | √        | √         |             |           |                                              |
| 5008    | Visibility/Lighting/Signalling            | Headlamp height corrector          | √            | √        | √         | √           | √         | 1.Configuration<br>2.Calibration             |
|         |                                           | HDY BOSCH MA3.1                    | √            | √        | √         |             |           |                                              |
|         |                                           | HDZ BOSCH MA3.1                    | √            | √        | √         |             |           |                                              |
|         |                                           | HFX BOSCH M7.4.4                   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|         |                                           | KFX BOSCH MP7.3                    | √            | √        | √         | √           | √         | 1.Initialization Adaption                    |
|         |                                           | KFX MM1AP                          | √            | √        | √         | √           |           |                                              |
|         |                                           | KFX SGEAM SL96                     | √            | √        | √         | √           | √         | 1.Initialization Adaption                    |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System        | ECU type            | Functions    |          |           |             |           |                                                         |
|---------|---------------|---------------------|--------------|----------|-----------|-------------|-----------|---------------------------------------------------------|
|         |               |                     | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                        |
| PARTNER | Petrol engine | LFX MM1AP           | √            | √        | √         | √           | √         | 1.Initialization Adaption<br>2.Ignition advance setting |
|         |               | N6A BOSCH ME7.4.4   | √            | √        | √         | √           | √         | 1.Marchting<br>2.Initialization Adaption                |
|         |               | KFW SAGEM S2000     | √            | √        | √         | √           | √         | 1.Marchting<br>2.Initialization Adaption                |
|         |               | K6D SAGEM S2000     | √            | √        | √         | √           | √         | 1.Marchting<br>2.Initialization Adaption                |
|         |               | NFU BOSCH ME7.4.4   | √            | √        | √         | √           | √         | 1.Marchting<br>2.Initialization Adaption                |
|         |               | RFN MM6LP           | √            | √        | √         | √           |           | 1.Initialization Adaption                               |
|         |               | KFW SAGEM S2000PM1  | √            | √        | √         | √           |           |                                                         |
|         |               | N6A BOSCH ME7.4.5   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption            |
|         |               | N6B BOSCH ME7.4.5   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption            |
|         |               | NFU BOSCH ME7.4.5   | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption            |
|         |               | KFW SAGEM S2000PM2  | √            | √        | √         | √           |           |                                                         |
|         |               | HFX MM48P           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption            |
|         |               | KFW J34P            | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         | Diesel engine | WJY LUCAS DCN2      | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         |               | RHY SIEMENS SID 801 | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         |               | RHY BOSCH EDC15C2   | √            | √        | √         | √           |           |                                                         |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System                                | ECU type                   | Functions    |          |           |             |           |                                                                    |
|---------|---------------------------------------|----------------------------|--------------|----------|-----------|-------------|-----------|--------------------------------------------------------------------|
|         |                                       |                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                   |
|         | Diesel Engine                         | 9HX BOSCH EDC16C3          | √            | √        | √         | √           |           |                                                                    |
|         |                                       | 9HW BOSCH EDC16C3          | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                       | WJZ LUCAS DCN2             | √            | √        | √         | √           |           |                                                                    |
|         | ABS                                   | BOSCH ABS5.3               | √            | √        | √         | √           |           |                                                                    |
|         |                                       | ABS BOSCH 8                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                      |
|         |                                       | ESP BOSCH 5.7              |              |          |           |             |           |                                                                    |
|         |                                       | ESP BOSCH 8                | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal |
|         |                                       | ABS 8.1                    | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                      |
|         |                                       | ESP 8.1                    | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                      |
|         | Inform the driver/Audio/Communication | Telematics                 | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                       | Instrument panel           | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                       | CD player                  | √            | √        | √         | √           | √         |                                                                    |
|         |                                       | Radio PHILIPS              | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                       | Radio CLARION              | √            | √        | √         | √           | √         | 1.Configuration                                                    |
|         |                                       | BSI                        | √            | √        | √         | √           |           | 1.keys of programming                                              |
|         | A/C                                   | WEBASTO additional heating | √            | √        | √         | √           |           |                                                                    |
|         |                                       | Air bag and seat belt      | √            | √        | √         |             |           | 1.Marching                                                         |

## PEUGEOT V42.20 Diagnostics List (Note:For reference only)

| Vehicle    | System                         | ECU type                    | Functions    |          |           |             |           |                                              |
|------------|--------------------------------|-----------------------------|--------------|----------|-----------|-------------|-----------|----------------------------------------------|
|            |                                |                             | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                             |
|            | Air bag                        | Air bags(SAC CENT AUTOLIV)  | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock         |
|            | Additional heating             |                             | √            | √        | √         | √           | √         |                                              |
| PARTNER B9 | Petrol engine                  | N6A BOSCH ME7.4.5           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|            |                                | N6B BOSCH ME7.4.5           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|            |                                | NFU BOSCH ME7.4.5           | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption |
|            | Diesel engine                  | 9HV EDC16C3                 | √            | √        | √         | √           | √         | 1.Configuration                              |
|            |                                | 9HW EDC16C3                 | √            | √        | √         | √           | √         | 1.Configuration                              |
|            |                                | 9HT EDC16C3                 | √            | √        | √         | √           | √         | 1.Configuration                              |
|            |                                | 9HX EDC16C3                 | √            | √        | √         | √           | √         | 1.Configuration                              |
|            |                                | 9HZ EDC16C3                 | √            | √        | √         | √           | √         | 1.Configuration                              |
|            | Active and passive safety      | ABS 8.1                     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                |
|            |                                | ESP 8.1                     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                |
|            |                                | Air bags                    | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock         |
|            |                                | Alarm                       | √            | √        | √         | √           | √         | 1.Configuration                              |
|            | Visibility/Lighting/Signalling | Rain sensor                 | √            | √        | √         |             |           |                                              |
|            |                                | Multifunction display (EMF) | √            | √        | √         | √           | √         | 1.Configuration                              |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle | System                                | ECU type                           | Functions    |          |           |             |           |                                                                     |
|---------|---------------------------------------|------------------------------------|--------------|----------|-----------|-------------|-----------|---------------------------------------------------------------------|
|         |                                       |                                    | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                    |
|         | Inform the driver/Audio/Communication | Steering wheel switching module    | √            | √        | √         | √           | √         |                                                                     |
|         |                                       | Radio                              | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         |                                       | Hands Free Kit                     | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         |                                       | Instrument panel                   | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         |                                       | CD player                          | √            | √        | √         |             | √         |                                                                     |
|         |                                       | Telematics                         | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         | Driving assistance/Comfort            | Parking assistance                 | √            | √        | √         | √           |           | 1.Configuration                                                     |
|         |                                       | Air conditioning                   | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         |                                       | Power steering                     | √            | √        | √         | √           | √         |                                                                     |
|         |                                       | Under inflation detection          | √            | √        | √         | √           |           |                                                                     |
| EXPERT  | Petrol engine                         | R6F MM4.8P                         | √            | √        | √         | √           | √         | 1.Initialization Adaption                                           |
|         |                                       | RFN MM4.8P                         | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption                        |
|         | Diesel engine                         | WJY LUCAS DCN2                     | √            | √        | √         | √           | √         | 1.Configuration                                                     |
|         |                                       | RHW BOSCH EDC15C2                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Filter                                         |
|         |                                       | RHX BOSCH EDC15C2                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Filter                                         |
|         |                                       | RHZ BOSCH EDC15C2                  | √            | √        | √         | √           | √         | 1.Configuration<br>2.Service                                        |
|         | AT                                    | AL4 autoadaptive automatic gearbox | √            | √        | √         | √           | √         | 1.Configuration<br>2.Initialization Adaption<br>3. Oil wear counter |
|         | ABS                                   | BOSCH ABS5.3                       | √            | √        | √         | √           |           |                                                                     |

## PEUGEOT V42.20 Diagnostics List (Note:For reference only)

| Vehicle  | System                    | ECU type                   | Functions    |          |           |             |           |                                                                                    |
|----------|---------------------------|----------------------------|--------------|----------|-----------|-------------|-----------|------------------------------------------------------------------------------------|
|          |                           |                            | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                                                   |
|          | Air bag                   | Air bag and seat belt      | √            | √        | √         |             |           | 1.Marching                                                                         |
|          | Additional heating        |                            | √            | √        | √         | √           | √         |                                                                                    |
| EXPERT 2 | Petrol engine             | RFH MM6KP(EW10A)           | √            | √        | √         | √           | √         | 1.Configuration                                                                    |
|          | Diesel engine             | 9HT BOSCH EDC16C3          | √            | √        | √         | √           |           |                                                                                    |
|          |                           | 9HU BOSCH EDC16C3-EDC16C34 | √            | √        | √         | √           | √         | 1.Configuration                                                                    |
|          |                           | RHG SIEMENS SID 803        | √            | √        | √         | √           |           |                                                                                    |
|          |                           | RHL SIEMENS SID 803        | √            | √        | √         | √           | √         | 1.Configuration                                                                    |
|          |                           | RHR SIEMENS SID 803        | √            | √        | √         | √           | √         | 1.Configuration                                                                    |
|          | Active and passive safety | ABS8_BOSCH                 | √            | √        | √         | √           | √         | 1.Configuration<br>2. Bleeding<br>3.Calibration of the steering wheel angle sensor |
|          |                           | ESP_BOSCH8                 | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding<br>3.Steering wheel angle sensor cal                 |
|          |                           | ABS8.1                     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                                      |
|          |                           | ESP8.1                     | √            | √        | √         | √           | √         | 1.Configuration<br>2.Bleeding                                                      |
|          |                           | Airbag ECU                 | √            | √        | √         | √           |           | 1.Configuration<br>2.lock and unlock                                               |
|          |                           | Parking assistance         | √            | √        | √         | √           | √         | 1.Configuration                                                                    |

## PEUGEOT V42.20 Diagnostics List (Note:For reference only)

| Vehicle | System                                | ECU type                        | Functions    |          |           |             |           |                                                         |
|---------|---------------------------------------|---------------------------------|--------------|----------|-----------|-------------|-----------|---------------------------------------------------------|
|         |                                       |                                 | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                        |
|         | Driving assistance/Comfort            | Air conditioning                | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         |                                       | Power steering                  | √            | √        | √         | √           | √         |                                                         |
|         |                                       | Additional heating              | √            | √        | √         | √           | √         |                                                         |
|         | Inform the driver/Audio/Communication | Multi-function display          | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         |                                       | Steering wheel switching module | √            | √        | √         | √           | √         |                                                         |
|         |                                       | Radio                           | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         |                                       | Instrument panel                | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         |                                       | Hands Free Kit                  | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         |                                       | CD player                       | √            | √        | √         |             | √         |                                                         |
|         |                                       | Telematics                      | √            | √        | √         | √           | √         | 1.Configuration                                         |
|         | Visibility/Lighting/Signalling        | Rain/brightness sensor          | √            | √        | √         |             |           |                                                         |
| BOXER   | Petrol engine                         | MM48p 2L essence plombee        | √            | √        | √         | √           |           |                                                         |
|         |                                       | MM48p 2L dual fuel(LPG)         | √            | √        | √         | √           |           |                                                         |
|         |                                       | MM48p 2L Overhead petrol        | √            | √        | √         | √           |           |                                                         |
|         | Diesel engine                         | 2.0L HDI BOSCH EDC15C7          |              | √        | √         | √           |           |                                                         |
| BOXER 3 | Active and passive safety             | ABS 8.0                         | √            | √        | √         | √           | √         | 1.Bleeding                                              |
|         |                                       | ESP 8.0                         | √            | √        | √         | √           | √         | 1.Bleeding<br>2.Steering wheel angle sensor calibration |
|         |                                       | ASR 8.0                         | √            | √        | √         | √           | √         | 1.Bleeding                                              |
|         |                                       | Power steering                  | √            |          |           | √           |           |                                                         |
|         |                                       | ABS 8.0                         | √            | √        | √         | √           | √         | 1.Bleeding                                              |

## PEUGEOT V42.20 Diagnostics List (Note: For reference only)

| Vehicle         | System                    | ECU type       | Functions    |          |           |             |           |                                                         |
|-----------------|---------------------------|----------------|--------------|----------|-----------|-------------|-----------|---------------------------------------------------------|
|                 |                           |                | System Info. | Read Dtc | Clear Dtc | Data stream | Actuation | Special Function                                        |
| BOXER 3 minibus | Active and passive safety | ESP 8.0        | √            | √        | √         | √           | √         | 1.Bleeding<br>2.Steering wheel angle sensor calibration |
|                 |                           | ASR 8.0        | √            | √        | √         | √           | √         | 1.Bleeding                                              |
|                 |                           | Power steering | √            |          |           | √           |           |                                                         |

(\*):Tested;

(?):Manual on website([www.x431.com](http://www.x431.com))

Note: The final interpretation of the products belongs to LAUNCH TECH CO.,LTD.

| CONNECTOR        | X431                                                                                                     | DIAGUN            |
|------------------|----------------------------------------------------------------------------------------------------------|-------------------|
| SMART OBD        | For all the cars except 307/607 can model cars after 2006 cars.                                          | N/A               |
| OBD 16C          | For all the cars except 307/607 can model cars after 2006 cars.                                          | N/A               |
| CANBUS II        | Just test 307/607 can model cars after 2006 cars.And need to add PEUGEOT/CITROEN-16 Converter connector. | N/A               |
| diagun connector | N/A                                                                                                      | For all the cars. |
| SUPER 16         | For all the cars.                                                                                        | N/A               |