

| LAUNCH  |                     | HD_FUSO V16.50 Diagnostics List |      |      |      | (Note:For reference only) |     |                            |
|---------|---------------------|---------------------------------|------|------|------|---------------------------|-----|----------------------------|
| VEHICLE | system              | CONNECTOR                       | INFO | RDTC | CDTC | DS                        | ACT | Spec.Func                  |
| HD_FUSO | Engine              | ①SMART OBD II-16H               | √    | √    | √    | √                         | √   |                            |
|         |                     | ①MITSUBISHI-12+16               | √    | √    | √    | √                         |     |                            |
|         |                     | ①OBD - 6&9 II                   | √    | √    | √    | √                         | √   | 1、喷油嘴编码写入与读取<br>2、VIN写入与读取 |
|         | Battery control     | ①SMART OBD II-16H               | √    | √    | √    | √                         |     |                            |
|         |                     | ①OBD - 6&9 II                   | √    | √    | √    | √                         | √   |                            |
|         | Motor control       | ①SMART OBD II-16H               | √    | √    | √    | √                         |     |                            |
|         |                     | ①OBD - 6&9 II                   | √    | √    | √    | √                         | √   |                            |
|         | Integration Control | ①SMART OBD II-16H               | √    | √    | √    | √                         |     |                            |
|         |                     | ①OBD - 6&9 II                   | √    | √    | √    | √                         |     |                            |
|         | Trainsmission       | ①SMART OBD II-16H               | √    | √    | √    | √                         |     |                            |
|         |                     | ①OBD - 6&9 II                   | √    | √    | √    | √                         |     |                            |
|         | ISS                 | ①SMART OBD II-16H               | √    | √    | √    | √                         |     |                            |
|         |                     | ①OBD - 6&9 II                   | √    | √    | √    | √                         | √   |                            |
|         | SCR                 | ①OBD - 6&9 II                   | √    | √    | √    | √                         |     |                            |
|         | ABS                 | ①SMART OBD II-16H               | √    | √    | √    | √                         |     |                            |
|         |                     | ①OBD - 6&9 II                   | √    | √    | √    | √                         | √   |                            |
|         | Retarder            | ①SMART OBD II-16H               |      | √    | √    | √                         |     |                            |
|         | HILL START          | ①SMART OBD II-16H               | √    | √    | √    | √                         |     |                            |
|         |                     | ①OBD - 6&9 II                   | √    | √    | √    | √                         | √   |                            |
|         | Immobilizer         | ①SMART OBD II-16H               | √    | √    | √    | √                         |     |                            |
|         |                     | ①OBD - 6&9 II                   | √    | √    | √    | √                         |     |                            |
|         | Air Bag             | ①OBD - 6&9 II                   | √    | √    | √    | √                         |     |                            |
|         |                     | ①SMART OBD II-16H               | √    | √    | √    | √                         |     |                            |
|         | Automatic A/C       | ①SMART OBD II-16H               | √    | √    | √    | √                         |     |                            |
|         | SSAM                | ①OBD - 6&9 II                   | √    | √    | √    | √                         | √   |                            |
|         | ICUC                | ①OBD - 6&9 II                   | √    | √    | √    | √                         |     |                            |
|         | HLAL                | ①OBD - 6&9 II                   | √    | √    | √    | √                         |     |                            |
|         | HVAC                | ①OBD - 6&9 II                   | √    | √    | √    | √                         | √   |                            |
|         | SWS                 | ①SMART OBD II-16H               | √    | √    | √    | √                         |     |                            |

(\*) :Tested;  
(?) :Manual on website(www.x431.com)  
Note:All description rights reserved by LAUNCH TECH.CO.,LTD

|           |                          |                          |
|-----------|--------------------------|--------------------------|
| CONNECTOR | Heavy Duty (980390*****) | Heavy Duty (980391*****) |
|           | SMART OBD II - 16H       | SMART OBD II - 16E       |
|           | OBD - 6&9                | SMART OBD II - 16E       |