



FCAR Diagnostic List (Note: for reference only)

Automaker:	Lexus
Version:	V7.9 en

Connector	Area	Mode	System	Function						Remark (other functions)
				System info.	Read DTC	Clear DTC	Data stream	Actuation test	Freeze frame	
		Powertrain	Engine and electronic controlled transmission	-	√	√	√	√	√	Work support
			Engine	-	√	√	√	√	√	Work support
			Electronic controlled transmission	-	√	√	√	√	√	Work support
			Cruise control	-	√	√	√	√	-	-
			Engine (Left side cylinder bank)	-	√	√	√	√	√	-
			Engine (Right side cylinder bank)	-	√	√	√	√	-	-
			HV storage battery	-	√	√	√	√	√	-
			mix control	-	√	√	√	√	√	-
			Continuous M/T	-	√	√	√	√	√	-
			Stop and advance	-	√	√	√	√	√	-
			multi-mode M/T	-	√	√	√	√	√	-
			Radar Cruise	-	√	√	√	-	-	-
			Laser cruise	-	√	√	√	-	-	-
			Motor generator	-	√	√	√	-	-	-
		ABS/VSC/TRC	-	√	√	√	√	√	Work support	
		Suspension height control system	-	√	√	√	√	-	-	
		Air Suspension	-	√	√	√	√	-	-	
		Electric light automatic transmission	-	√	√	√	√	-	-	



FCAR Diagnostic List (Note: for reference only)

Automaker:	Lexus
Version:	V7.9 en

Connector	Area	Mode	System	Function						Remark (other functions)
				System info.	Read DTC	Clear DTC	Data stream	Actuation test	Freeze frame	
		Chassis	Electronic hydraulic power steering system	-	√	√	√	-	√	Work support
			Transmission Control	-	√	√	√	√	√	-
			Electric control suspension system	-	√	√	√	√	-	-
			4 wheel drive	-	√	√	√	√	-	-
			Tire pressure monitor	-	√	√	√	-	-	-
			Variable Gear Ratio Steering	-	√	√	√	-	√	-
			stabilizer	-	√	√	√	-	-	-
			Intelligent Parking Assist	-	√	√	-	-	-	-
			Electronic parking brake	-	√	√	√	√	√	-
			Lane Assist	-	√	√	√	-	-	-
			Front stabilizer	-	√	√	√	√	-	-
		Rear stabilizer	-	√	√	√	√	-	-	
		Adaptive headlight	-	√	√	√	√	-	-	
		Air conditioning	-	√	√	√	√	-	-	
		Back door	-	√	√	√	√	-	-	
		Body	-	√	√	√	√	-	-	
		Body 2	-	√	-	√	√	-	-	
		Body 3	-	√	-	√	√	-	-	
		Body 4	-	√	-	√	√	-	-	
		Body 5	-	-	-	√	√	-	-	
		Remove sonar	-	√	√	√	√	-	-	



FCAR Diagnostic List (Note: for reference only)

Automaker:	Lexus
Version:	V7.9 en

Connector	Area	Mode	System	Function						
				System info.	Read DTC	Clear DTC	Data stream	Actuation test	Freeze frame	Remark (other functions)
	Europe		Dashboard switch	-	-	-	√	-	-	-
			Driver door motor	-	√	√	√	√	-	-
			Driver seat switch	-	-	-	√	√	-	-
			Gateway	-	√	√	-	-	-	-
			METER	-	-	-	√	√	-	-
			Rearview mirror	-	-	-	√	√	-	-
			Left Rearview mirror	-	-	-	√	√	-	-
			Right Rearview mirror	-	-	-	√	√	-	-
			Seating detection	-	√	√	√	-	-	-
			Passenger door motor	-	√	√	√	√	-	-
			Passenger seat	-	-	-	√	√	-	-
			Power-supply control	-	√	√	-	-	-	-
			Rain sensor	-	-	-	√	-	-	-
			Rear seat switch	-	-	-	√	-	-	-
			Left rear door motor	-	√	√	√	√	-	-
			Left rear seat	-	-	-	√	√	-	-
			Right rear door seat	-	√	√	√	√	-	-
			Right rear seat	-	-	-	√	√	-	-
			Sliding top skylight	-	-	-	√	√	-	-
			Airbag	-	√	√	√	-	-	Work support
			Sliding roof	-	√	√	√	-	-	-
		Steering pad switch	-	-	-	√	-	-	-	



FCAR Diagnostic List (Note: for reference only)

Automaker:	Lexus
Version:	V7.9 en

Connector	Area	Mode	System	Function						Remark (other functions)
				System info.	Read DTC	Clear DTC	Data stream	Actuation test	Freeze frame	
		Body	Tilt and telescopic steering wheel	-	√	√	√	√	√	-
			Wiper	-	-	-	√	√	-	-
			Main Body	-	√	√	√	√	-	Work support
			Toyota safety protection system	-	√	√	√	√	-	-
			Entry&start	-	√	√	√	√	-	-
			HVGateway	-	√	√	√	-	-	-
			Night vision	-	√	√	√	√	-	-
			Headlamp automatic levelling	-	√	√	√	√	-	-
			BEAN Gateway	-	√	√	-	-	-	-
			Attachment Gateway	-	√	√	√	-	-	-
			Left fron seat air conditioning	-	√	-	√	√	-	-
			Right front seat air conditioning	-	√	-	√	√	-	-
			CANGateway	-	√	√	-	-	-	-
			ECMGateway	-	√	√	√	-	-	-
			ECB (Electronic control brake system)	-	√	√	√	-	-	-
			WIL (Reduce excessive loss of cervical vertebra flexion harm)	-	√	√	√	-	-	-
		Central console switch	-	-	√	√	-	-	-	
		Rear console switch	-	√	√	√	√	-	-	



FCAR Diagnostic List (Note: for reference only)

Automaker:	Lexus
Version:	V7.9 en

Connector	Area	Mode	System	Function						
				System info.	Read DTC	Clear DTC	Data stream	Actuation test	Freeze frame	Remark (other functions)
			Left rear seatAir conditioning	-	√	-	√	√	-	-
			Right rear seatAir conditioning	-	√	-	√	√	-	-
			Power-supply control	-	√	√	√	√	√	-
			Right side activity head protection system	-	√	√	√	√	-	-
			Left side activity head protection system	-	√	√	√	√	-	-
			Instrument panel	-	√	√	√	√	-	-
			Anti-theft system	-	√	√	√	√	-	1.Key register 2.Key remove 3.Auto register close
			Pre-crash	-	√	√	√	√	-	-
			Steering lock	-	√	√	√	√	-	-
		Powertrain	Engine and electronic controlled transmission	-	√	√	√	√	√	-
			Engine	-	√	√	√	√	√	-
			Electronic controlled transmission	-	√	√	√	√	√	-
			Cruise control	-	√	√	√	√	-	-
			Engine (Left side cylinder bank)	-	√	√	√	√	√	-
			Engine (Right side cylinder bank)	-	√	√	√	√	-	-
		HV storage battery	-	√	√	√	√	√	-	



FCAR Diagnostic List (Note: for reference only)

Automaker:	Lexus
Version:	V7.9 en

Connector	Area	Mode	System	Function						Remark (other functions)
				System info.	Read DTC	Clear DTC	Data stream	Actuation test	Freeze frame	
			mix control	-	√	√	√	√	√	-
			Continuous M/T	-	√	√	√	√	√	-
			Stop and advance	-	√	√	√	√	√	-
			multi-mode M/T	-	√	√	√	√	√	-
			Radar Cruise	-	√	√	√	-	-	-
			Laser cruise	-	√	√	√	-	-	-
			Motor generator	-	√	√	√	-	-	-
		Chassis	ABS/VSC/TRC	-	√	√	√	√	√	-
			Suspension height control system	-	√	√	√	√	-	-
			Air Suspension	-	√	√	√	√	-	-
			Electric light automatic transmission	-	√	√	√	√	-	-
			Electronic hydraulic power steering system	-	√	√	√	-	√	-
			Transmission Control	-	√	√	√	√	√	-
			Electric control suspension system	-	√	√	√	√	-	-
			4 wheel drive	-	√	√	√	√	-	-
			Tire pressure monitor	-	√	√	√	-	-	-
			Variable Gear Ratio Steering	-	√	√	√	-	√	-
			stabilizer	-	√	√	√	-	-	-
			Intelligent Parking Assist	-	√	√	-	-	-	-
			Electronic parking brake	-	√	√	√	√	√	-



FCAR Diagnostic List (Note: for reference only)

Automaker: Lexus
Version: V7.9 en

Connector	Area	Mode	System	Function								
				System info.	Read DTC	Clear DTC	Data stream	Actuation test	Freeze frame	Remark (other functions)		
	Japan		Lane Assist	-	√	√	√	-	-	-		
			Front stabilizer	-	√	√	√	√	-	-		
			Rear stabilizer	-	√	√	√	√	-	-		
					Adaptive headlight	-	√	√	√	√	-	-
					Air conditioning	-	√	√	√	√	-	-
					Back door	-	√	√	√	√	-	-
					Body	-	√	√	√	√	-	-
					Body 2	-	√	-	√	√	-	-
					Body 3	-	√	-	√	√	-	-
					Body 4	-	√	-	√	√	-	-
					Body 5	-	-	-	√	√	-	-
					Remove sonar	-	√	√	√	√	-	-
					Dashboard switch	-	-	-	√	-	-	-
					Driver door motor	-	√	√	√	√	-	-
					Driver seat switch	-	-	-	√	√	-	-
					Gateway	-	√	√	-	-	-	-
					METER	-	-	-	√	√	-	-
					Rearview mirror	-	-	-	√	√	-	-
					Left Rearview mirror	-	-	-	√	√	-	-
					Right Rearview mirror	-	-	-	√	√	-	-
					Seating detection	-	√	√	√	-	-	-
					Passenger door motor	-	√	√	√	√	-	-
					Passenger seat	-	-	-	√	√	-	-



FCAR Diagnostic List (Note: for reference only)

Automaker:	Lexus
Version:	V7.9 en

Connector	Area	Mode	System	Function						Remark (other functions)
				System info.	Read DTC	Clear DTC	Data stream	Actuation test	Freeze frame	
		Body	Power-supply control	-	√	√	-	-	-	-
			Rain sensor	-	-	-	√	-	-	-
			Rear seat switch	-	-	-	√	-	-	-
			Left rear door motor	-	√	√	√	√	-	-
			Left rear seat	-	-	-	√	√	-	-
			Right rear door seat	-	√	√	√	√	-	-
			Right rear seat	-	-	-	√	√	-	-
			Sliding top skylight	-	-	-	√	√	-	-
			Airbag	-	√	√	√	-	-	-
			Sliding roof	-	√	√	√	-	-	-
			Steering pad switch	-	-	-	√	-	-	-
			Tilt and telescopic steering wheel	-	√	√	√	√	√	-
			Wiper	-	-	-	√	√	-	-
			Main Body	-	√	√	√	√	-	-
			Toyota safety protection system	-	√	√	√	√	-	-
			Entry&start	-	√	√	√	√	-	-
			HVGateway	-	√	√	√	-	-	-
			Night vision	-	√	√	√	√	-	-
			Headlamp automatic levelling	-	√	√	√	√	-	-
			BEAN Gateway	-	√	√	-	-	-	-
		Attachment Gateway	-	√	√	√	-	-	-	



FCAR Diagnostic List (Note: for reference only)

Automaker:	Lexus
Version:	V7.9 en

Connector	Area	Mode	System	Function						
				System info.	Read DTC	Clear DTC	Data stream	Actuation test	Freeze frame	Remark (other functions)
OBDII Connectot			Left fron seat air conditioning	-	√	-	√	√	-	-
			Right front seat air conditioning	-	√	-	√	√	-	-
			CANGateway	-	√	√	-	-	-	-
			ECMGateway	-	√	√	√	-	-	-
			ECB (Electronic control brake system)	-	√	√	√	-	-	-
			WIL (Reduce excessive loss of cervical vertebra flexion harm)	-	√	√	√	-	-	-
			Central console switch	-	-	√	√	-	-	-
			Rear console switch	-	√	√	√	√	-	-
			Left rear seatAir conditioning	-	√	-	√	√	-	-
			Right rear seatAir conditioning	-	√	-	√	√	-	-
			Power-supply control	-	√	√	√	√	√	-
			Right side activity head protection system	-	√	√	√	√	-	-
			Left side activity head protection system	-	√	√	√	√	-	-
			Instrument panel	-	√	√	√	√	-	-
			Anti-theft system	-	√	√	√	√	-	-
			Pre-crash	-	√	√	√	√	-	-
Steering lock	-	√	√	√	√	-	-			



FCAR Diagnostic List (Note: for reference only)

Automaker: Lexus
Version: V7.9 en

Connector	Area	Mode	System	Function						Remark (other functions)
				System info.	Read DTC	Clear DTC	Data stream	Actuation test	Freeze frame	
		Powertrain	Engine and electronic controlled transmission	-	√	√	√	√	√	Work support
			Engine	-	√	√	√	√	√	Work support
			Electronic controlled transmission	-	√	√	√	√	√	Work support
			Cruise control	-	√	√	√	√	-	-
			Engine (Left side cylinder bank)	-	√	√	√	√	√	-
			Engine (Right side cylinder bank)	-	√	√	√	√	-	-
			HV storage battery	-	√	√	√	√	√	-
			mix control	-	√	√	√	√	√	-
			Continuous M/T	-	√	√	√	√	√	-
			Stop and advance	-	√	√	√	√	√	-
			multi-mode M/T	-	√	√	√	√	√	-
			Radar Cruise	-	√	√	√	-	-	-
			Laser cruise	-	√	√	√	-	-	-
			Motor generator	-	√	√	√	-	-	-
		ABS/VSC/TRC	-	√	√	√	√	√	Work support	
		Suspension height control system	-	√	√	√	√	-	-	
		Air Suspension	-	√	√	√	√	-	-	
		Electric light automatic transmission	-	√	√	√	√	-	-	



FCAR Diagnostic List (Note: for reference only)

Automaker:	Lexus
Version:	V7.9 en

Connector	Area	Mode	System	Function						Remark (other functions)
				System info.	Read DTC	Clear DTC	Data stream	Actuation test	Freeze frame	
		Chassis	Electronic hydraulic power steering system	-	√	√	√	-	√	Work support
			Transmission Control	-	√	√	√	√	√	-
			Electric control suspension system	-	√	√	√	√	-	-
			4 wheel drive	-	√	√	√	√	-	-
			Tire pressure monitor	-	√	√	√	-	-	-
			Variable Gear Ratio Steering	-	√	√	√	-	√	-
			stabilizer	-	√	√	√	-	-	-
			Intelligent Parking Assist	-	√	√	-	-	-	-
			Electronic parking brake	-	√	√	√	√	√	-
			Lane Assist	-	√	√	√	-	-	-
			Front stabilizer	-	√	√	√	√	-	-
		Rear stabilizer	-	√	√	√	√	-	-	
		Adaptive headlight	-	√	√	√	√	-	-	
		Air conditioning	-	√	√	√	√	-	-	
		Back door	-	√	√	√	√	-	-	
		Body	-	√	√	√	√	-	-	
		Body 2	-	√	-	√	√	-	-	
		Body 3	-	√	-	√	√	-	-	
		Body 4	-	√	-	√	√	-	-	
		Body 5	-	-	-	√	√	-	-	
		Remove sonar	-	√	√	√	√	-	-	



FCAR Diagnostic List (Note: for reference only)

Automaker:	Lexus
Version:	V7.9 en

Connector	Area	Mode	System	Function						Remark (other functions)
				System info.	Read DTC	Clear DTC	Data stream	Actuation test	Freeze frame	
	North America		Dashboard switch	-	-	-	√	-	-	-
			Driver door motor	-	√	√	√	√	-	-
			Driver seat switch	-	-	-	√	√	-	-
			Gateway	-	√	√	-	-	-	-
			METER	-	-	-	√	√	-	-
			Rearview mirror	-	-	-	√	√	-	-
			Left Rearview mirror	-	-	-	√	√	-	-
			Right Rearview mirror	-	-	-	√	√	-	-
			Seating detection	-	√	√	√	-	-	-
			Passenger door motor	-	√	√	√	√	-	-
			Passenger seat	-	-	-	√	√	-	-
			Power-supply control	-	√	√	-	-	-	-
			Rain sensor	-	-	-	√	-	-	-
			Rear seat switch	-	-	-	√	-	-	-
			Left rear door motor	-	√	√	√	√	-	-
			Left rear seat	-	-	-	√	√	-	-
			Right rear door seat	-	√	√	√	√	-	-
			Right rear seat	-	-	-	√	√	-	-
			Sliding top skylight	-	-	-	√	√	-	-
			Airbag	-	√	√	√	-	-	Work support
			Sliding roof	-	√	√	√	-	-	-
		Steering pad switch	-	-	-	√	-	-	-	



FCAR Diagnostic List (Note: for reference only)

Automaker:	Lexus
Version:	V7.9 en

Connector	Area	Mode	System	Function						Remark (other functions)
				System info.	Read DTC	Clear DTC	Data stream	Actuation test	Freeze frame	
		Body	Tilt and telescopic steering wheel	-	√	√	√	√	√	-
			Wiper	-	-	-	√	√	-	-
			Main Body	-	√	√	√	√	-	Work support
			Toyota safety protection system	-	√	√	√	√	-	-
			Entry&start	-	√	√	√	√	-	-
			HVGateway	-	√	√	√	-	-	-
			Night vision	-	√	√	√	√	-	-
			Headlamp automatic levelling	-	√	√	√	√	-	-
			BEAN Gateway	-	√	√	-	-	-	-
			Attachment Gateway	-	√	√	√	-	-	-
			Left fron seat air conditioning	-	√	-	√	√	-	-
			Right front seat air conditioning	-	√	-	√	√	-	-
			CANGateway	-	√	√	-	-	-	-
			ECMGateway	-	√	√	√	-	-	-
			ECB (Electronic control brake system)	-	√	√	√	-	-	-
			WIL (Reduce excessive loss of cervical vertebra flexion harm)	-	√	√	√	-	-	-
			Central console switch	-	-	√	√	-	-	-
			Rear console switch	-	√	√	√	√	-	-



FCAR Diagnostic List (Note: for reference only)

Automaker:	Lexus
Version:	V7.9 en

Connector	Area	Mode	System	Function						Remark (other functions)
				System info.	Read DTC	Clear DTC	Data stream	Actuation test	Freeze frame	
			Left rear seatAir conditioning	-	√	-	√	√	-	-
			Right rear seatAir conditioning	-	√	-	√	√	-	-
			Power-supply control	-	√	√	√	√	√	-
			Right side activity head protection system	-	√	√	√	√	-	-
			Left side activity head protection system	-	√	√	√	√	-	-
			Instrument panel	-	√	√	√	√	-	-
			Anti-theft system	-	√	√	√	√	-	-
			Pre-crash	-	√	√	√	√	-	-
			Steering lock	-	√	√	√	√	-	-
		Powertrain	Engine and electronic controlled transmission	-	√	√	√	√	√	Work support
			Engine	-	√	√	√	√	√	Work support
			Electronic controlled transmission	-	√	√	√	√	√	Work support
			Cruise control	-	√	√	√	√	-	-
			Engine (Left side cylinder bank)	-	√	√	√	√	√	-
			Engine (Right side cylinder bank)	-	√	√	√	√	-	-
			HV storage battery	-	√	√	√	√	√	-
			mix control	-	√	√	√	√	√	-
			Continuous M/T	-	√	√	√	√	√	-



FCAR Diagnostic List (Note: for reference only)

Automaker:	Lexus
Version:	V7.9 en

Connector	Area	Mode	System	Function						Remark (other functions)	
				System info.	Read DTC	Clear DTC	Data stream	Actuation test	Freeze frame		
			Stop and advance	-	√	√	√	√	√	-	
			multi-mode M/T	-	√	√	√	√	√	-	
			Radar Cruise	-	√	√	√	-	-	-	
			Laser cruise	-	√	√	√	-	-	-	
			Motor generator	-	√	√	√	-	-	-	
		Chassis	ABS/VSC/TRC	-	√	√	√	√	√	√	Work support
			Suspension height control system	-	√	√	√	√	-	-	-
			Air Suspension	-	√	√	√	√	-	-	-
			Electric light automatic transmission	-	√	√	√	√	-	-	-
			Electronic hydraulic power steering system	-	√	√	√	-	√	Work support	
			Transmission Control	-	√	√	√	√	√	-	
			Electric control suspension system	-	√	√	√	√	-	-	
			4 wheel drive	-	√	√	√	√	-	-	
			Tire pressure monitor	-	√	√	√	-	-	-	
			Variable Gear Ratio Steering	-	√	√	√	-	√	-	
			stabilizer	-	√	√	√	-	-	-	
			Intelligent Parking Assist	-	√	√	-	-	-	-	
			Electronic parking brake	-	√	√	√	√	√	-	
Lane Assist	-	√	√	√	-	-	-				
Front stabilizer	-	√	√	√	√	-	-				



FCAR Diagnostic List (Note: for reference only)

Automaker:	Lexus
Version:	V7.9 en

Connector	Area	Mode	System	Function						Remark (other functions)
				System info.	Read DTC	Clear DTC	Data stream	Actuation test	Freeze frame	
	Others		Rear stabilizer	-	√	√	√	√	-	-
		Adaptive headlight	-	√	√	√	√	√	-	-
		Air conditioning	-	√	√	√	√	√	-	-
		Back door	-	√	√	√	√	√	-	-
		Body	-	√	√	√	√	√	-	-
		Body 2	-	√	-	√	√	√	-	-
		Body 3	-	√	-	√	√	√	-	-
		Body 4	-	√	-	√	√	√	-	-
		Body 5	-	-	-	√	√	√	-	-
		Remove sonar	-	√	√	√	√	√	-	-
		Dashboard switch	-	-	-	√	-	-	-	-
		Driver door motor	-	√	√	√	√	√	-	-
		Driver seat switch	-	-	-	√	√	√	-	-
		Gateway	-	√	√	-	-	-	-	-
		METER	-	-	-	√	√	√	-	-
		Rearview mirror	-	-	-	√	√	√	-	-
		Left Rearview mirror	-	-	-	√	√	√	-	-
		Right Rearview mirror	-	-	-	√	√	√	-	-
		Seating detection	-	√	√	√	-	-	-	-
		Passenger door motor	-	√	√	√	√	√	-	-
		Passenger seat	-	-	-	√	√	√	-	-
	Power-supply control	-	√	√	-	-	-	-	-	
	Rain sensor	-	-	-	√	-	-	-	-	



FCAR Diagnostic List (Note: for reference only)

Automaker:	Lexus
Version:	V7.9 en

Connector	Area	Mode	System	Function						
				System info.	Read DTC	Clear DTC	Data stream	Actuation test	Freeze frame	Remark (other functions)
		Body	Rear seat switch	-	-	-	√	-	-	-
			Left rear door motor	-	√	√	√	√	-	-
			Left rear seat	-	-	-	√	√	-	-
			Right rear door seat	-	√	√	√	√	-	-
			Right rear seat	-	-	-	√	√	-	-
			Sliding top skylight	-	-	-	√	√	-	-
			Airbag	-	√	√	√	-	-	Work support
			Sliding roof	-	√	√	√	-	-	-
			Steering pad switch	-	-	-	√	-	-	-
			Tilt and telescopic steering wheel	-	√	√	√	√	√	-
			Wiper	-	-	-	√	√	-	-
			Main Body	-	√	√	√	√	-	Work support
			Toyota safety protection system	-	√	√	√	√	-	-
			Entry&start	-	√	√	√	√	-	-
			HVGateway	-	√	√	√	-	-	-
			Night vision	-	√	√	√	√	-	-
			Headlamp automatic levelling	-	√	√	√	√	-	-
			BEAN Gateway	-	√	√	-	-	-	-
			Attachment Gateway	-	√	√	√	-	-	-
			Left fron seat air conditioning	-	√	-	√	√	-	-



FCAR Diagnostic List (Note: for reference only)

Automaker:	Lexus
Version:	V7.9 en

Connector	Area	Mode	System	Function						Remark (other functions)
				System info.	Read DTC	Clear DTC	Data stream	Actuation test	Freeze frame	
			Right front seat air conditioning	-	√	-	√	√	-	-
			CANGateway	-	√	√	-	-	-	-
			ECMGateway	-	√	√	√	-	-	-
			ECB (Electronic control brake system)	-	√	√	√	-	-	-
			WIL (Reduce excessive loss of cervical vertebra flexion harm)	-	√	√	√	-	-	-
			Central console switch	-	-	√	√	-	-	-
			Rear console switch	-	√	√	√	√	-	-
			Left rear seatAir conditioning	-	√	-	√	√	-	-
			Right rear seatAir conditioning	-	√	-	√	√	-	-
			Power-supply control	-	√	√	√	√	√	-
			Right side activity head protection system	-	√	√	√	√	-	-
			Left side activity head protection system	-	√	√	√	√	-	-
			Instrument panel	-	√	√	√	√	-	-
			Anti-theft system	-	√	√	√	√	-	1.Key register 2.Key remove 3.Auto register close
			Pre-crash	-	√	√	√	√	-	-
			Steering lock	-	√	√	√	√	-	-



FCAR Diagnostic List (Note: for reference only)

Automaker:	Lexus
Version:	V7.9 en

Connector	Area	Mode	System	Function						Remark (other functions)
				System info.	Read DTC	Clear DTC	Data stream	Actuation test	Freeze frame	
Engine ECU Matching			-	-	-	-	-	-	-	Engine ECU Matching
17PIN/22PIN Connector			Engine system 2	-	√	√	√	-	-	-
			Automatic Transmission	-	√	√	-	-	-	-
			Explosion-proof braking system	-	√	√	-	-	-	-
			Cruise control system	-	√	√	-	-	-	-
			Additional auxiliary occupant protection system	-	√	√	-	-	-	-
Anti-theft System			Smart card CANBUS	-	-	-	-	-	-	Increase Smart card, Delete Smart card, Reset Smart card
			Old Smart card	-	-	-	-	-	-	Delete Smart card
			Crown smart card	-	-	-	-	-	-	matching
			Electronic anti-theft system	-	√	√	-	-	-	increase key, Lost all keys

Remarks : √ means the system has the function - means not