EXAMPLE how to programm transponder - BMW E60 with CAS2.
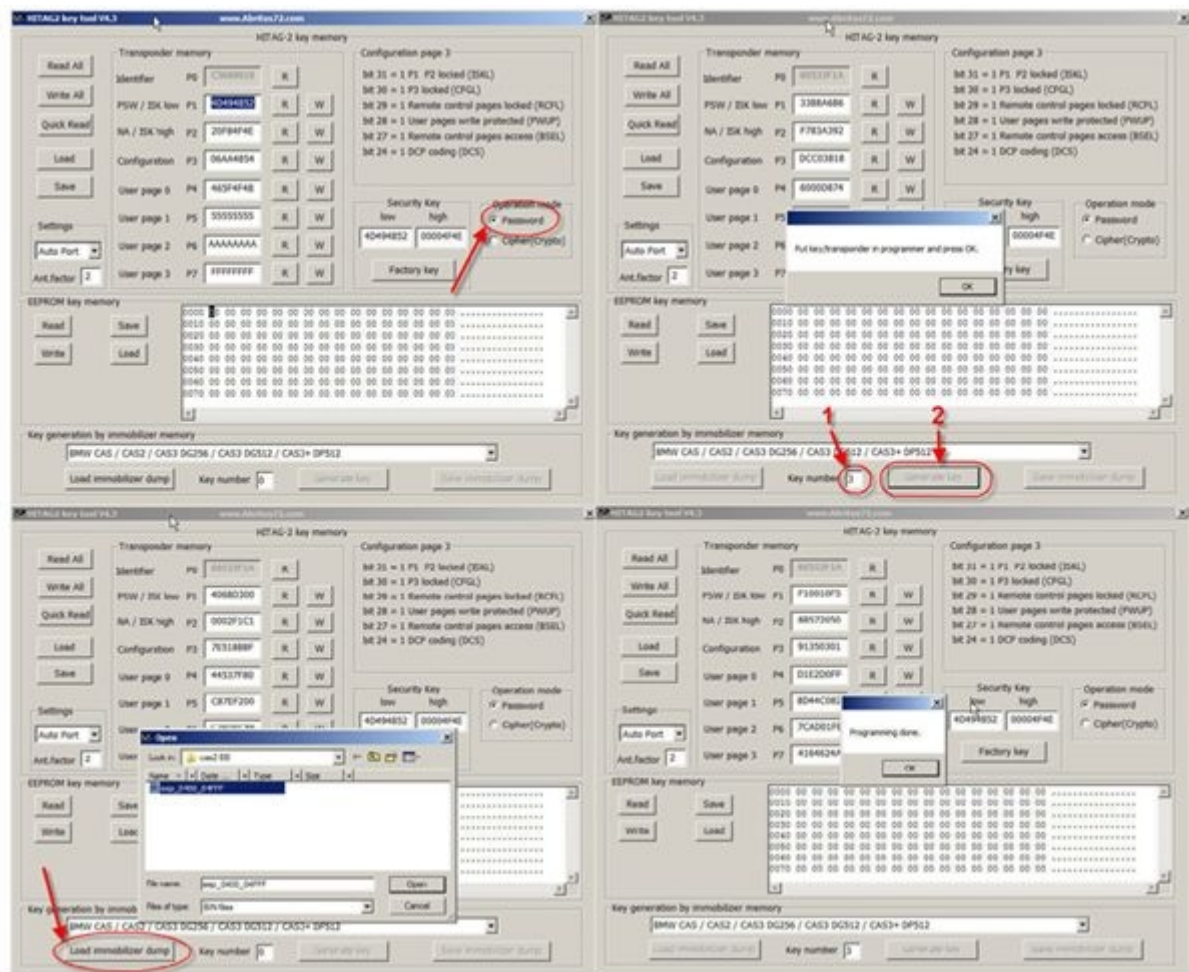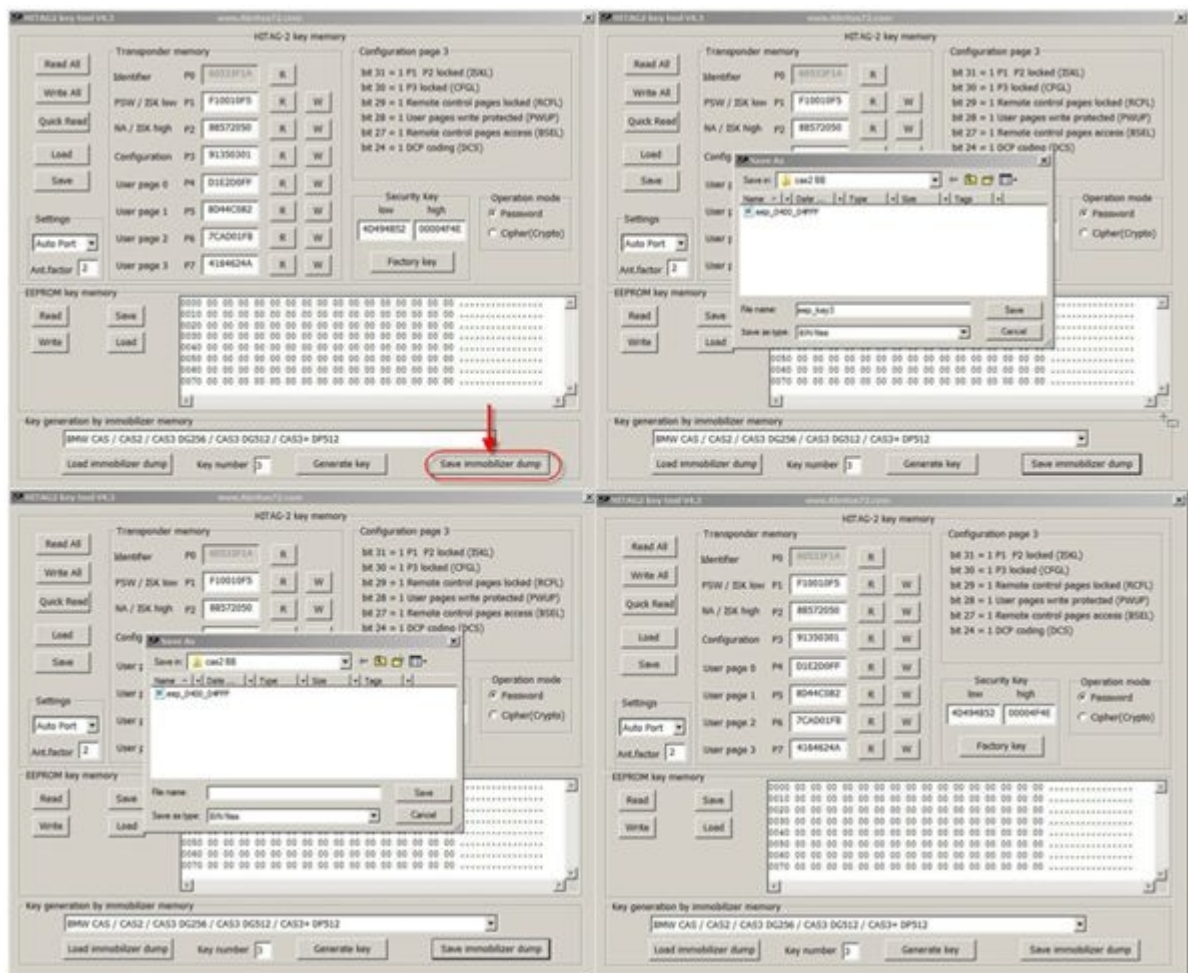

First you must Read eeprom dump from CAS2 (you can use any programmer)

1. If you use Transponder you must switch Operation mode in **PASSWORD**. If you use key you must switch Operation mode in **Crypto**.

2. Push button - **Load immobilized dump** and choose readed eeprom from CAS2.

3. Next step is to write what number of key you want to programm in CAS2 (in this example is Key number 3) after push button **Generate key** and Hitag2 programmer programm Transponder (or Key).

4. After finishing programming you see message : **Programming done**

5. After successcull programming of transponder or key you must push button - **Save immobilizer dump**

6. Write new name of modify by software dump.

7. Save this new dump and programm in CAS2

Now you can start car with this transponder.